

Thinking of you

 **Electrolux**

user manual
microwave oven
EMS3067X
MWO+Grill+Convection



Welcome to the world of Electrolux

Congratulations and thank you for choosing a first class product from Electrolux. Our appliances are designed to be easy to use and complimentary to your lifestyle. Please take a few minutes to study this manual so that you can take advantage of the benefits of your new appliance. To avoid the risks that are always present when you use an electrical appliance, it is important that the microwave oven is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards. We promise that the oven will provide a superior user experience delivering ease-of-mind.

Contents

Before using your microwave oven	2
Important safety information	2
Installation	6
Operation	7
Care and cleaning	13
Troubleshooting	14
Technical data	14
Guarantee and service	14

The following symbols are used in this user manual:



warning

Important information concerning your personal safety and information on how to avoid damaging the appliance.



tips and information

General information and tips



environmental tip

Environmental information



environmental tip

Information on disposal for users

- Most of the packing materials are recyclable. Please dispose of these materials through your local recycling depot or by placing them in the appropriate collection containers.
- If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal.



IMPORTANT SAFETY INFORMATION

Before using your microwave oven

In order to get the best from your new Electrolux microwave oven, the following instructions have been prepared. Please make sure you read them carefully. It is important that this user manual is retained with the appliance for future reference. Should the appliance be sold or transferred to another owner, or if you move house and leave the appliance, always ensure that the manual is supplied with the appliance or that the new owner can be acquainted with the functioning of the appliance and the relevant warnings. Please ensure you have read the whole user manual before using the appliance and that you follow the recommendations given.

Read carefully and keep for future reference

- The built-in safety interlock switches prevent the microwave oven from operating when the door is open. Do not tamper with them, or attempt to operate the oven with the door open as open door operation can result in exposure to microwave energy.
- It is particularly important that the oven door closes properly and that there is no damage to the: (1) door, (2) hinges and latches, or (3) door seals and sealing surface.
- Do not remove the outer case, door or control panel at any time. Doing so may cause exposure to extremely high voltage.
- Install or locate this microwave oven only in accordance with the installation instructions found in the 'Installation' section.
- Do not store the microwave oven outdoors.
- Accessible surfaces of the microwave oven may get HOT while it is operating.
- Do not allow food spills or cleaner residue to accumulate on door sealing surfaces. See the 'Cleaning and care' section for cleaning instructions.
- Failure to maintain the microwave oven in a clean condition could lead to deterioration of the surface adversely affecting the life of the appliance and possibly result in a hazardous situation.
- This microwave oven is specifically designed for domestic heating, cooking and defrosting food, and must be used as described in this manual. It is not designed for industrial, laboratory or commercial use and doing so will void the warranty.
- Do not use corrosive chemicals in this microwave oven.
- Do not operate the microwave oven empty. If food or water is not present to absorb the microwave energy, the magnetron tube can be damaged.
- DO NOT use this microwave oven near water, a swimming pool or other wet environment.
- Do not attempt to dry clothing or newspapers in the microwave oven. These items can ignite.
- Do not use the microwave oven cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.

- Keep the power cord away from hot surfaces and DO NOT let the power cord hang over the edge of tables or counters.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not force the turntable to rotate by hand. This may cause malfunctioning.
- DO NOT use metal utensils during microwave operation as this will cause arcing. Continuous arcing will damage the unit. Should arcing occur, stop the program and remove the utensil.
- Only use utensils that are suitable for use in the microwave oven as indicated in the utensils guide table on page 5 in this manual.
- Care should be taken not to obstruct any air vents located on the top, rear, side and bottom of the oven.
- During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the unit.
- This appliance is not intended for use by persons (including children) with reduced physical or sensory capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they don't play with the appliance.



warning


1. If the door, hinges/latches or door seals are damaged, the microwave oven must not be operated until it has been repaired by an authorized service person.
2. It is hazardous for anyone except authorised service personnel to carry out any service or repair to this combination microwave oven, especially if it involves the removal of a cover which gives protection against exposure to microwave energy.
3. If smoke is observed, unplug the oven and keep the door closed in order to stifle any flames. NEVER USE WATER.
4. Liquids and foods must not be heated in sealed containers since they are liable to explode.
5. Only allow children to use the microwave oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
6. Accessible parts may become hot during use. To avoid burns young children should be kept away.
7. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.

 **warning**

DO NOT disassemble this appliance, as touching some of the internal components can cause serious personal injury or death.

 **warning**

Improper use of the earthing can result in electric shock. Do not plug into an outlet until microwave oven is properly installed and earthed.

 **tips and information**

If the oven fails to operate:

- 1 Check to ensure that the appliance is plugged in securely. If it is not, remove the plug from the outlet, wait 10 seconds, and plug it in again securely.
- 2 Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating correctly, test the outlet with another appliance.
- 3 Check to ensure that the control panel is programmed correctly and the timer is set.
- 4 Check to ensure that the door is securely closed engaging the door safety lock system. Otherwise, the microwave energy will not flow into the oven.

IF NONE OF THE ABOVE RECTIFIES THE SITUATION, CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE MICROWAVE OVEN YOURSELF.

Power cord and plug

A short power cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.

If a long cord set or extension cord is used:

- 1 The marked electrical rating of the cord set or extension cord should be equal to or greater than the electrical rating of the oven.
- 2 The extension cord must be an earthing-type 3-wire cord.
- 3 The extension cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

This microwave oven must be earthed. In the event of an electrical short circuit, earthing reduces the risk of electric shock by providing an escape wire for the electric current. This oven is equipped with a power cord having an earthing wire with an earthing plug. The plug must be plugged into an outlet that is properly installed and earthed. Consult a qualified electrician or serviceman if the earthing instructions are not completely understood or if doubt exists as to whether the oven is properly earthed.

Food safety

- Do not heat food in a can in the microwave oven as it can explode. Always remove the food to a suitable container.
- Deep fat frying should not be heated in the microwave oven, because the fat temperature cannot be controlled, hazardous situations can result.
- Popcorn may be prepared in the microwave oven, but only in special packages or utensils designed specifically for this purpose. This cooking operation should never be unattended.
- Pierce foods with non-porous skins or membranes such as apples, potatoes, chicken liver and egg yolk to prevent steam build-up and bursting.

 **warning**

Microwave heating of beverages can result in delayed eruptive boiling; therefore care must be taken when handling the container.

 **warning**


When heating liquids, e.g. soups, sauces and beverages in your microwave oven, overheating the liquid beyond boiling point can occur without evidence of bubbling. This could result in a sudden boil over of the hot liquid. To prevent this possibility the following steps should be taken:

- 1 Avoid using straight-sided containers with narrow necks.
- 2 Do not overheat.
- 3 Stir the liquid before placing the container in the oven and again halfway through the heating time.
- 4 After heating, allow to stand in the oven for a short time, stirring again before carefully removing the container.

 **warning**

Some products such as whole eggs and sealed containers – for example, closed glass jars – may explode and should not be heated in this oven. Occasionally, poached eggs may explode during cooking. Always pierce the yolk, then cover and allow the standing time of one minute before removing cover.

The contents of feeding bottles and baby jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.

 **tips and information**

It is quite normal for steam to be emitted around the door, or for misting to occur on the door, or even for water droplets to appear below the door during the cooking cycle. This is merely condensation from the heat of the food and does not affect the safety of your oven. The door is not intended to seal the oven cavity completely.

Safety instructions when cooking with grill, convection and combination modes

- 1 The glass oven door window may break if water is spilled on it during grill or convection cooking.
- 2 Be sure to use an oven glove when loading and unloading the oven. Containers get very hot in the oven, so be careful not to burn yourself. The turntable and grilling rack also get very hot so be sure to use an oven glove when handling them.
- 3 Do not touch the inner or outer microwave oven door window with metal components when loading or unloading the microwave oven. The inside of the door and microwave oven get very hot so take care when attending food in the microwave oven.
- 4 Do not put the turntable or containers in cold water or try to cool them quickly after use, it could cause it to crack.
- 5 Do not place items on top of the cabinet. The top of the cabinet gets very hot, so anything placed on it may be damaged by the heat.
- 6 Preheat your microwave oven only when using convection cooking, never when using microwave or combination modes (microwave/grill or microwave/convection).

 **warning**

When the appliance is used in combination mode, children should only use the microwave oven under adult supervision due to the temperature generated.

Suitability of utensils for microwave cooking

- Utensils should be checked to ensure they are suitable for use in microwave ovens. Place a utensil in the oven along with a glass half full of water. Heat on maximum microwave power (900W) for one minute. If the utensil feels hot, you should not use it. If it is just slightly warm, you can use it for reheating but not for cooking. If the utensil is at room temperature, it is suitable for microwave cooking.
- Always be sure containers are filled with food to absorb energy and thus avoid the possibility of overheating or ignition.

- Avoid using plastic utensils with foods that have high fat or sugar content since these foods reach high temperatures and could melt some plastics.
- Do not leave oven unattended, when heating or cooking food in plastic, paper or other combustible containers.
- Metal utensils and utensils with metallic trim should not be used in the microwave oven, unless specifically recommended for microwave use.
- Containers with restricted openings, such as bottles, should not be used for microwave cooking.
- Use caution when removing a lid or cover from a dish to avoid steam burns.

Foil containers

Shallow foil containers may safely be used to reheat foods in your microwave oven providing the following rules are observed:

- 1 Foil containers should not be more than 3cm (1¼") deep.
- 2 Foil lids must not be used.
- 3 The foil containers must be at least two-thirds full of food. Empty containers must never be used.
- 4 Foil containers should be used singly in the microwave oven and should not be allowed to touch the sides.
- 5 Foil containers should never be re-used in the microwave oven.
- 6 If the oven has been in use for 15 minutes or more, allow it to cool before using it again.
- 7 The container and turntable may become hot during use; take great care when removing them from the oven. It is advisable to use an oven cloth or glove when doing so.
- 8 Remember when using an aluminum foil container that the reheating or cooking times may be longer than you are used to; always ensure that the food is piping hot before serving.

Oven utensils guide

A variety of utensils and materials may be used for cooking in your microwave oven. For your safety and to prevent damaging utensils and your oven, choose appropriate utensils and materials for each cooking method.


The list below is a general guide.

Utensils	Description	Mode of operation		
		Microwave	Grill	Convection
Aluminum foil	Shielding only. Small smooth pieces can be used to cover thin parts of meat or poultry to prevent overcooking. Arcing can occur if foil is too close to oven walls. The foil should be at least 1 inch (2.5cm) away from oven walls. Begin thawing poultry, breast side down and turn over halfway through defrosting time. Delicate areas such as wing tips can be shielded with small pieces of smooth foil.	Yes	Yes	Yes
Browning dish non metallic	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.	Yes	Yes	Yes
Ceramic without metal decoration	Use microwave-safe containers only. Follow manufacturer's instructions. Do not use cracked or chipped dishes. Although microwave energy will not heat most ceramic items, they can become hot as heat transfers from the food to the container. The use of oven gloves to remove dishes is recommended.	Yes	Yes	Yes
Glass ware without metal decoration	Make sure the glass is heat resistant and does not have cracks or chips. Use only to heat food until just warm. Although microwave energy will not heat most glass items, they can become hot as heat transfers from the food to the container. The use of oven gloves to remove dishes is recommended.	Yes	Yes	Yes

Glass ware with metal decoration		No	No	No
Leaded crystal glass		No	No	No
Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.	Yes	No	No
Paper towels	Use to cover food for reheating and absorbing fat. Do not leave oven unattended while cooking.	Yes	No	No
Waxed paper	Use as a cover to prevent splattering and retain moisture.	Yes	No	No
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.	Yes	No	No
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.	Yes	No	No
Metal baking pan	May cause arcing.	No	Yes	Yes
Wood		No	No	No
Grill rack		No	Yes	Yes
Turntable		Yes	Yes	Yes
Turntable support		Yes	Yes	Yes

INSTALLATION

- Remove all packing material and any promotion material from the microwave oven.
- Examine the oven for any damage such as dents or a broken door. Do not install if the oven is damaged. Call the service center.
- Remove the protective film on the oven cabinet surface. Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.
- Do not leave the packing material so that small children can play with it. This can be hazardous.
- Select a flat, level surface that provides enough open space for the intake and outlet vents and that is strong enough to bear the weight of the oven. A minimum clearance of 3.0 inches (7.5cm) is required between the oven and any adjacent walls. Leave a minimum clearance of 12 inches (30cm) above the oven. Blocking the intake or outlet vents can damage the oven. If air vents are blocked during operation, the oven may overheat, and this may lead to malfunctioning. Hot air escapes from the vents, so be sure not to obstruct it or let curtains come between the oven and the rear wall.

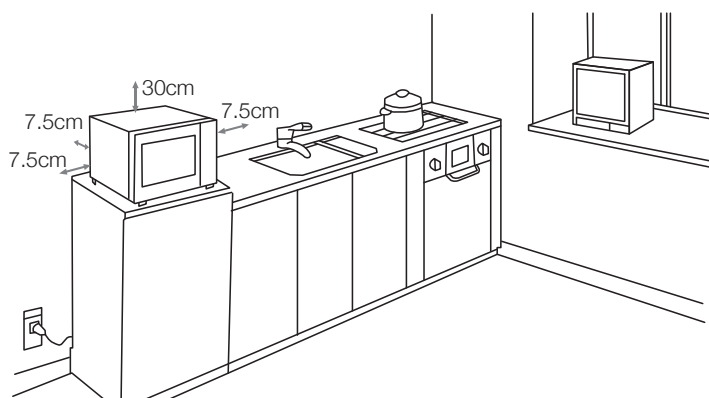

NOTE: It is recommended to have greater than 7.5cm clearance on at least one of the sides to improve product performance and operation.

- The oven should be placed in a stable position to avoid the possibility of causing vibration or noise.
- Do not remove the legs from the bottom of the oven.
- This oven should only be installed freestanding; not built-in or in a cabinet.
- Keep the oven away from heat and water. Exposure to heat and water can lower the efficiency and lead to malfunctioning.

- Place the oven as far away from radios and TV as possible. Operation of the oven may cause interference to your radio or TV reception.
 - When there is interference, it may be reduced or eliminated by taking the following measures:
 - + Clean door and sealing surface of the microwave oven.
 - + Reorient the receiving antenna of the radio and/or television.
 - + Move the microwave oven away from the receiver.
 - + Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.
- Be sure the voltage and frequency where you connect the microwave oven is the same as specified on the rating plate on the microwave oven. If the microwave oven is connected to the socket via an extension cord, make sure the cord is earthed.

**warning**

If installed near or over a heat source, the microwave oven could be damaged.


**warning**

This microwave oven must not be used on a non-earth protected power supply. Contact an electrician if you are uncertain regarding electrical connection of the oven or provision of earth protection of the supply.

**warning**

If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.


OPERATION

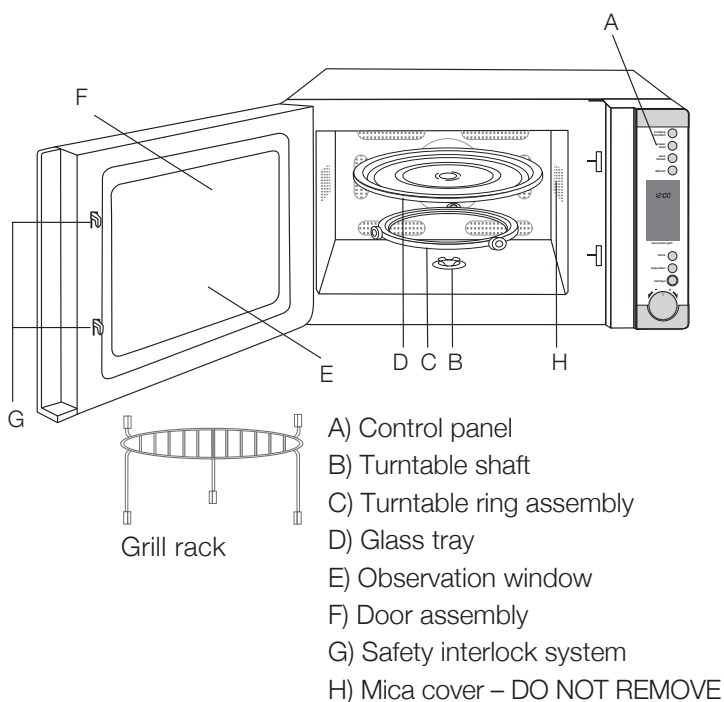

Turntable installation

- 1 Place the turntable ring assembly on the cavity bottom.
- 2 Place the glass tray on top of the turntable support.

Control panel

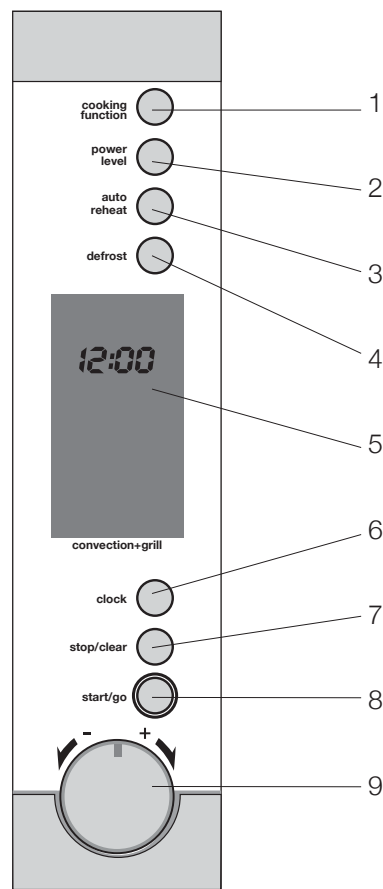

1. cooking function

select microwave power, grill, convection or combination cooking modes

2. power level

select desired microwave power level

3. auto reheat

select desired reheat mode

4. defrost

select defrost by weight or time

5. display window

view cooking time, power level, cooking mode, and time of day

6. clock

set the time of day and delayed start

7. stop/clear

stop or pause your microwave oven program, or exit the cooking program setting

8. start/go


start your microwave oven

9. control knob

select cooking mode and time

i tips and information

- Do not place the glass tray upside down.
- Both glass tray and turntable ring assembly must always be used during cooking.
- Always place food and food containers on the glass tray when cooking.
- If the glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

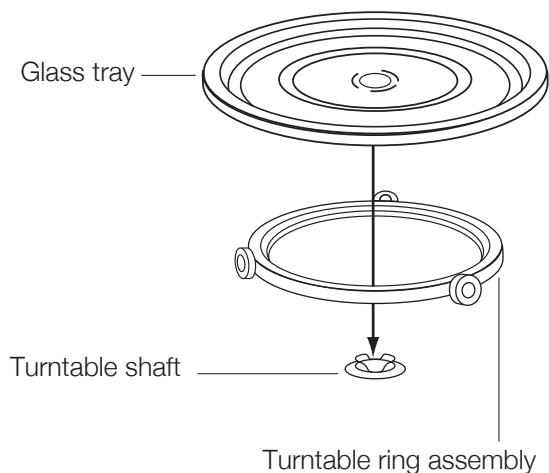

Display window



The display window will show cooking function, convection cooking temperature and auto cook mode.

Setting the clock

When the power cord is connected, the display will show "0:00" and the buzzer will sound. To set the clock, follow these steps.

1 Press the "clock" button to select 12 hour or 24 hour time.

2 Turn the control knob  to adjust the hours.

3 Press the "clock" button to confirm hours. The minutes indicator will flash.


4 Turn the control knob  to adjust the minutes.

5 Press the "clock" button to confirm minutes and complete the clock setting.

Microwave cooking

1 Open the door, place the food on the turntable. Close the door.

2 Press the "power level" button several times to select the microwave power level you want.

3 Turn the control knob  to adjust the cooking time.



4 Press the "start/go" button to start cooking.

i tips and information

Microwave power setting guide

Press "power level" button	Microwave power	Watt	Suggested use
1 time	100%	900	Boiling or reheating liquids. Cooking vegetables. Preheating a browning dish
2 times	80%	720	Reheating of casseroles, stews and precooked foods. Roasting joints of meat and poultry
3 times	50%	450	Faster defrosting for casseroles. Baking of cakes and sponge puddings
4 times	30%	270	Simmering. Heating custards and cheesecakes
5 times	10%	90	Keeping foods warm

Grill cooking

- 1 Open the door, place the grill rack on the turntable and the food on the grill rack. Put a non-metal plate underneath the grill rack to catch any food spillage or juices to minimize cleaning. Close the door.
- 2 Press the "cooking function" button once. The display will flash "140 ".
- 3 Turn the control knob  to select the grill function "G-1".
- 4 Press the "start/go" button to confirm. "G-1" is displayed.
- 5 Turn the control knob  to adjust the cooking time.
- 6 Press the "start/go" button to start cooking.



i tips and information

In order to get a better result from the grill function, turn the food over half-way through the grilling time. The appliance will sound a buzzer twice to indicate that it is half way into the grilling time. Open the door and turn the food over. Close the door and press the "start/go" button. If you do not open the door to turn the food over, the microwave oven will continue grilling the food.

Convection cooking

This oven has a convection oven function which lets you cook as in a traditional oven. Microwave power is not used. We recommend that you preheat the oven to the appropriate temperature before placing the food in the oven. When the oven reaches the appropriate temperature, it will maintain this temperature for 5 minutes. If the oven door is not opened during this time the microwave oven will switch itself off.

To preheat the microwave oven:

- 1 Press the "cooking function" button once. The display will show "140 ".
- 2 Turn the control knob  to select the convection function.
- 3 Select the convection oven temperature by continuing to turn the control knob . You can select temperature 140 – 230 degrees Celsius.
- 4 Press the "start/go" button to confirm the temperature.
- 5 Press the "start/go" button again to start preheating. When the appropriate temperature has been reached, the buzzer will sound twice to remind you to put the food into the oven. The appropriate temperature will flash.

- 6 Put the food in the oven and close the door.

- 7 Turn the control knob  to adjust the cooking time.
- 8 Press the "start/go" button to start cooking.

i tips and information

If you do not want to use the preheating function, instead of pressing the "start/go" button in item 4 above,


turn the control knob  to adjust the cooking time.

i tips and information

The fan will continue operating for a few minutes at the end of the convection cooking program to cool down the appliance.

Combination cooking


With this oven you can combine microwave power, grill and convection. There are four combinations pre-set. To use the combination cooking, follow these steps.

- 1 Open the door, place the food on the turntable. Close the door.
- 2 Press the "cooking function" button once. The display will show "140 ".
- 3 Turn the control knob  to select combination "C-1", "C-2", "C-3" or "C-4".

i tips and information

Select one of the below combinations



Display	Microwave	Grill	Convection
C-1	✓		✓ (165 degrees Celsius)
C-2	✓	✓	
C-3		✓	✓ (170 degrees Celsius)
C-4	✓	✓	✓ (170 degrees Celsius)

- 4 Press the "start/go" button to confirm combination.
- 5 Turn the control knob  to adjust the cooking time.
- 6 Press the "start/go" button to start cooking.

Multi-stage cooking

Up to three stages of cooking can be set on this appliance. If one of the stages is defrosting, this stage should be set as the first stage. The buzzer will sound after each stage and the next stage will begin automatically.




Example: if you want to cook with 100% microwave power for 10 minutes and then 80% microwave power for 5 minutes, follow these steps.

- 1 Open the door, place the food on the turntable.
Close the door.
- 2 Press the "power level" button once to select 100% microwave power.
- 3 Turn the control knob  to adjust the cooking time to 10 minutes.
- 4 Press the "power level" button twice to select 80% microwave power.
- 5 Turn the control knob  to adjust the cooking time to 5 minutes.
- 6 Press the "start/go" button to start cooking.


Delayed start

Up to three cooking stages can be programmed for a delayed start.


Example: to cook food with 80% microwave power for 15 minutes with delayed start, follow these steps.

- 1 Open the door, place the food on the turntable.
Close the door.
- 2 Press the "power level" button twice to select 80% microwave power. "P80" is displayed.
- 3 Turn the control knob  to adjust the cooking time to 15 minutes.
- 4 Press the "clock" button. The hour figure will flash.
- 5 Turn the control knob  to adjust the hours.
- 6 Press the "clock" button. The minute figures will flash.
- 7 Turn the control knob  to adjust the minutes.
- 8 Press the "start/go" button to finish the setting.
The display will show ":". When the set time arrives, the buzzer will sound twice and the cooking will start automatically.

Defrost by weight

- 1 Open the door, place the food on the turntable.
Close the door.
- 2 Press the "defrost" button once. "d-1" is displayed.
- 3 Turn the control knob  to adjust the weight in grams.
- 4 Press the "start/go" button to start defrosting.

Defrost by time



- 1 Open the door, place the food on the turntable.
Close the door.
- 2 Press the "defrost" button twice. "d-2" is displayed.
- 3 Turn the control knob  to adjust the defrost time.
- 4 Press the "start/go" button to start defrosting.

i tips and information

- It is better to underestimate defrosting time if you are unsure. Food will continue to defrost during the standing time.
- Separate food as soon as possible.
- Turn large items, e.g. joints, halfway through the defrosting time.
- Remove any thawed food as soon as possible.
- Remove or open any packaging before defrosting.
- Place food in a larger container than what it was frozen in, this will allow for easy stirring.
- Begin thawing poultry, breast side down and turn over halfway through defrosting time. Delicate areas such as wing tips can be shielded with small pieces of smooth foil.
- Standing time is very important, particularly for large, dense foods which cannot be stirred to ensure that the centre is completely defrosted before cooking.

Auto cook

This microwave oven has a number of pre-set auto cook recipes that will help you to select the right preparation mode for the food you would like to prepare.

- 1 Open the door, place the food on the turntable.
Close the door.
- 2 Turn the control knob  to select the auto cook recipe.
- 3 Press the "start/go" button to confirm the auto cook recipe.
- 4 Turn the control knob  to adjust the weight of the food.
- 5 Press the "start/go" button to confirm the weight.

i tips and information

In the table below you will find all pre-set auto cook recipes.

Menu	Weight(g)	Display	Function & Power
FISH	150	150	Microwave 80% power
	250	250	
	350	350	
	450	450	
	650	650	
SOUP	200ml	200	Microwave 100% power
	400ml	400	
	600ml	600	
MEAT	150	150	Microwave 100% power
	300	300	
	450	450	
	600	600	
BREAD	50	50	G-1 Grill
	100	100	
	150	150	
PIZZA	200	200	C-4 Microwave (100%), grill & convection (200°C)
	300	300	
	400	400	
CAKE	475	475	Convection 180°C
PASTA	50(with water 450g)	50	Microwave 80% power
	100(with water 800g)	100	
	150(with water 1200g)	150	

CHICKEN	500	500	C-4 Microwave (100%), grill & convection (200°C)
	750	750	
	1000	1000	
	1200	1200	
VEGETABLE	150	150	Microwave 100% power
	350	350	
	500	500	
POTATO	230	1	Microwave 100% power
	460	2	
	690	3	

i tips and information


The cake recipe uses 160 degrees Celsius convection including preheating. When the oven has preheated and reached 160 degrees Celsius, the buzzer will sound to remind you to open the door to put the cake in the oven. Then press the "start/go" to start baking.

Auto reheat

This function helps you to easily heat up food with microwave power. The time and power level are pre-set. The table below shows the different auto reheat modes.

- 1 Open the door, place the food on the turntable. Close the door.
- 2 Press the "auto reheat" button to select "h-1", "h-2", "h-3" or "h-4".

Menu	Weight(g)	Display
H1 Auto Reheat	150	150
	250	250
	350	350
	450	450
	600	600
H2 Dinner Plate	250	250
	350	350
	450	450
H3 Beverage/coffee	1(approximately 240g)	1
	2(approximately 480g)	2
	3(approximately 720g)	3
H4 (Muffin/roll)	1(approximately 70g)	1
	2(approximately 140g)	2
	3(approximately 210g)	3

- 3 Turn the control knob  to select weight.
- 4 Press the "start/go" button to start reheating.

Quick start

Press the "start/go" button to cook with 100% microwave power level for 30 seconds. Each time you press the "start/go" button the time will increase 30 seconds.

Inquiring function

During cooking, press the "power level" button to display the current power level. When pressing the "clock" button, the current time will be displayed.

When delayed start has been entered, press the "clock" button to display the time when the cooking will start.

Child lock


Press the "stop/clear" button for 3 seconds. A long "beep" will sound and the 'lock' indicator will light up indicating that the microwave oven controls has been locked.

To unlock, press the "stop/clear" button for 3 seconds. A long "beep" will sound and the 'lock' indicator light will go off indicating that the microwave oven controls have been unlocked.

To stop the oven

There are two way to stop the oven whilst it is in use.

- 1 Press the "stop/clear" button
You can restart the oven by pressing the "start/go" button. Pressing the "stop/clear" button again will reset the current program.
- 2 Open the door
You may restart the oven by closing the door and pressing the "start/go" button. Pressing the "stop/clear" button will cancel the current program.

 tips and information

- Preferably use round or oval casseroles with a lid when cooking in your microwave oven.
- Cover the food when cooking. Use a glass lid, a plate or grease proof paper.
- Pastry, bread and the like can be defrosted directly in a bread basket or on a paper towel.
- If frozen food is heated in its packaging, the packaging should be opened. Packaging containing metal or metal decoration must not be used unless specifically recommended for use in the microwave oven. Remove metal clips and wire ties.
- Put large, thick pieces close to the edge of the casserole and try to cut the food into even sized pieces. Always place the food in the centre of the microwave oven.
- The food will be evenly cooked if you stir or turn it a few times during cooking.
- Always set a shorter cooking time than indicated in your recipe to avoid over cooking.
- Use little or no water for vegetables.
- Use less salt and spices than for 'normal' cooking.
- Allow a few minutes standing time after the oven has switched off to ensure complete and even cooking results.
- Always ensure food is sufficiently cooked throughout before serving.
- Use pot holders or gloves when taking dishes and food out from the oven as they will be hot.

tips and information

Softening Honey

If you have a jar of honey which has crystallized, remove lid and place the jar in the microwave oven, microwave on medium power for 2 minutes.

Melting Chocolate

Break 100g of chocolate into squares, place in a bowl and heat on high power for 1-2 minutes and stir well.

Softening or Melting Butter

Melting takes a few seconds on high power. Softening is best done on low power.

Freshen or Warm Bread

Use medium power for a few seconds.

Peeling Garlic easily

Heat 3 or 4 cloves of garlic on high power for 15 seconds. Squeeze at one end until the clove pops out.

Fruit Juice

Citrus fruits will yield more juice if they are heated on high power for 15 seconds before squeezing.

CARE AND CLEANING

The appliance must always be kept clean. Deposits that are allowed to remain on the oven walls, door seal and door surface will absorb microwave energy, reduce the efficiency of the microwave oven, and possibly damage the microwave interior. DO NOT attempt to tamper with or make any adjustments or repairs to any part of the microwave oven. Repairs should only be done by a qualified service technician.

Cleaning the accessories

Clean accessories with mild detergent after removing them from the cavity. The turntable support should be carefully handled.

Cleaning the interior

Always keep the inside of the oven clean. Wipe up spills and food spatters immediately. Use mild, liquid detergent, warm water and a soft, clean cloth to remove deposits.

Cleaning the grill element

The element may be stained with spattered fat or oil while the oven is in use. Wait until the cavity cools down and wipe off the spattered oil before next using the appliance. Stains on the grill may cause unpleasant odors and smoke.

Cleaning the exterior

Open the microwave oven door when cleaning the control panel. This will prevent the appliance from being turned on accidentally. You should clean the outside surfaces of the microwave oven with mild liquid detergent and warm water, followed by a wiping with clean water to remove any excess detergent. Dry with a soft cloth. Spray-on window cleaners or all purpose spray-on kitchen cleaners can also be used. To prevent damage to the working parts, do not allow water to seep into ventilation openings. NEVER USE ABRASIVE CLEANERS, SCOURING PADS OR HARSH CHEMICALS ON THE OUTSIDE SURFACES OF YOUR APPLIANCE.



DO NOT use harsh abrasive cleaners or sharp metal scrapers to clean the microwave oven door glass since they can scratch the surface, which may result in shattering of the glass.



 
Never use abrasive cleaners, commercial oven cleaners or steel wool pads on any part of the oven.



To loosen difficult deposits, boil a cup of water in the oven for 2 or 3 minutes.



Never use a knife or any utensil to remove deposits from the oven surfaces.



To remove odors from the oven interior, boil a cup of water plus 2 tablespoons of lemon juice for 5 minutes.



The turntable motor is sealed. Nevertheless, be careful to avoid water penetrating under the turntable spindle when the bottom of the oven is being cleaned.



Be sure the oven is disconnected from the electricity supply before cleaning.



Do not use a steam cleaner to clean this appliance.

TROUBLESHOOTING

Normal	
Microwave oven interfering TV reception	Radio and TV reception may be interfered when oven is operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan. It is normal
Dim oven light	In low power microwave cooking, oven light may become dim. It is normal
Steam accumulating on door, hot air out of vents	In cooking, steam may come out of food, Most will get out from vents. But some may accumulate on cool place like oven door. It is normal
Oven started accidentally with no food in	It is forbidden to run the unit without any food inside. It is very dangerous

WARRANTY AND SERVICE

Before Calling a Service Technician please check carefully the operating instructions, service booklet and the warranty terms and conditions.

Trouble	Possible cause	Remedy
Oven can not be started	(1) Power cord not plugged in tightly	Unplug. Then plug again after 10 seconds
	(2) Fuse blowing or circuit breaker trips	Replace fuse or circuit breaker (repaired by professional personnel of our company)
	(3) Trouble with outlet	Test outlet with other electrical appliance
Oven does not heat	(4) Door not closed well	Close door well
Glass turntable makes noise when oven operates	(5) Dirty roller rest and oven bottom	Refer to "Care and cleaning" to clean dirty parts

TECHNICAL DATA

Model	EMS3067X
Rated Voltage	Refer to rating label on the oven
Rated Input Power (Microwave)	1450W
Rated Output Power (Microwave)	900W
Rated Input Power (Grill)	1100W
Rated Input Power (Convection)	2350W
Turntable Diameter	ø315mm
External Dimensions (LxWxH)	520x510x335mm
Net Weight	Approx. 19.9kg

Electrolux Warranty

FOR SALES IN AUSTRALIA AND NEW ZEALAND
APPLIANCE: ELECTROLUX MICROWAVE OVEN

This document sets out the terms and conditions of product warranties for Electrolux branded appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should you require service for your Electrolux appliance.

General Terms and Conditions

1. In this warranty
 - (a) 'Electrolux' means Electrolux Home Products Pty Ltd ABN 51 004 762 341 in respect of Appliances purchased in Australia and Electrolux (NZ) Limited in respect of Appliances purchased in New Zealand;
 - (b) 'Appliance' means any Electrolux product purchased by you accompanied by this document;
 - (c) 'Warranty Period' means
 - (i) where you use the Appliance for personal, domestic or household purposes in Australia the period of "24" months and in New Zealand the period of "24" months;
 - (ii) where you use the Appliance for commercial purposes, in Australia the period of "3" months and in New Zealand the period of "3" months, (if the period stated is 0 months you are not covered by this product warranty) following the date of original purchase of the Appliance;
 - (d) 'you' means the purchaser of the Appliance not having purchased the appliance for re-sale, and 'your' has a corresponding meaning.
2. This warranty only applies to Appliances purchased and used in Australia or New Zealand and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia or New Zealand.
3. Electrolux warrants that, when dispatched from an Electrolux warehouse, the Appliance is free from defects in materials and workmanship for the Warranty Period.
4. During the Warranty Period Electrolux or its Authorised Service Centre will, at no extra charge if your appliance is readily accessible without special equipment, and subject to these terms and conditions, repair or replace any parts which it considers to be defective. You agree that any replaced Appliances or parts become the property of Electrolux. This warranty does not apply to light globes, batteries, filters or similar perishable parts.
5. Parts and Appliances not supplied by Electrolux are not covered by this warranty.
6. Where you are within an Electrolux service area, this warranty covers the cost of transport of the Appliance to and from Authorised Service Centres of Electrolux and travelling costs for representatives of the Authorised Service Centre to and from your home or business. If you are outside an Electrolux service area, you will bear these costs. For information about whether you are within an Electrolux service area, please phone 13 13 49 in Australia, or 0800 10 66 10 in New Zealand.
7. Proof of purchase is required before you can make a claim under this warranty.
8. You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. Electrolux is not liable in the following situations (which are not exhaustive):
 - (a) The Appliance is damaged by:
 - (i) accident
 - (ii) misuse or abuse, including failure to properly maintain or service
 - (iii) normal wear and tear
 - (iv) power surges, electrical storm damage or incorrect power supply
 - (v) incomplete or improper installation
 - (vi) incorrect, improper or inappropriate operation
 - (vii) insect or vermin infestation.

- (b) The Appliance is modified without authority from Electrolux in writing.
 - (c) The Appliance's serial number or warranty seal has been removed or defaced.
 - (d) The Appliance was serviced or repaired by anyone other than Electrolux or its Authorised Service Centres.
9. This warranty, the contract to which it relates and the relationship between you and Electrolux are governed by the law applicable in the Australian State where the Appliance was purchased or the law applicable in New Zealand if the Appliance was purchased in New Zealand. Where the Appliance was purchased in New Zealand for business purposes the Consumer Guarantee Act does not apply.

Limitation of Liability

10. To the extent permitted by law:
- (a) Electrolux excludes all warranties other than as contained in this document;
 - (b) Electrolux shall not be liable for any loss or damage whether direct or indirect or consequential arising from your purchase, use or non-use of the Appliance.
11. Provisions of the Trade Practices Act and State consumer legislation in Australia, and the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act in New Zealand, imply warranties or conditions, or impose obligations, upon Electrolux which cannot be excluded, restricted or modified. To the extent permitted by law, the liability of Electrolux (if any) arising out of or in relation to the Appliance or any services supplied by Electrolux shall be limited (where it is fair and reasonable to do so):
- (a) in the case of Appliances, at its option, to the replacement or repair of the Appliances or the supply of equivalent products or the payment of the cost of replacing the Appliances or having the Appliances repaired or of acquiring equivalent Appliances. Upon being replaced, parts and Appliances become the property of Electrolux; or
 - (b) in the case of services, at its option, to the supply of the services again or the payment of the cost of having the services re-supplied;
- and in the case of Appliances or services supplied in New Zealand, loss or damage whether direct or indirect or consequential that is reasonably foreseeable.

Privacy

You acknowledge that in the event that you make a warranty claim it will be necessary for Electrolux and its Authorised Service Centres to exchange information in relation to you to enable Electrolux to meet its obligations under this warranty.

Important Notice

Before Calling a Service Technician please check carefully the operating instructions, service booklet and the warranty terms and conditions.

<p>FOR SERVICE or to find the address of your nearest state service centre in Australia PLEASE CALL 13 13 49 For the cost of a local call (Australia only)</p>	<p>SERVICE AUSTRALIA</p> <p> ELECTROLUX HOME PRODUCTS</p>	<p>FOR SPARE PARTS or to find the address of your nearest state spare parts centre in Australia PLEASE CALL 13 13 50 For the cost of a local call (Australia only)</p>
<p>FOR SERVICE or to find the address of your nearest authorised service centre in New Zealand FREE CALL 0800 10 66 10 (New Zealand only)</p>	<p>SERVICE NEW ZEALAND</p> <p> ELECTROLUX HOME PRODUCTS</p>	<p>FOR SPARE PARTS or to find the address of your nearest spare parts centre in New Zealand FREE CALL 0800 10 66 10</p>



The Thoughtful Design Innovator.

Do you remember the last time you opened a gift that made you say "Oh! How did you know? That's exactly what I wanted!" That's the kind of feeling that the designers at Electrolux seek to evoke in everyone who chooses or uses one of our products. We devote time, knowledge, and a great deal of thought to anticipating and creating the kind of appliances that our customers really need and want.

This kind of thoughtful care means innovating with insight. Not design for design's sake, but design for the user's sake. For us, thoughtful design means making appliances easier to use and tasks more enjoyable to perform, freeing our customers to experience that ultimate 21st century luxury, ease of mind. Our aim is to make this ease of mind more available to more people in more parts of their everyday lives, all over the world. So when we say we're thinking of you, you know we mean just that.

Electrolux. Thinking of you.

Share more of our thinking at www.electrolux.com