


# JVC



## DVD VIDEO RECORDER & VIDEO CASSETTE RECORDER

# DR-MV4SUJ

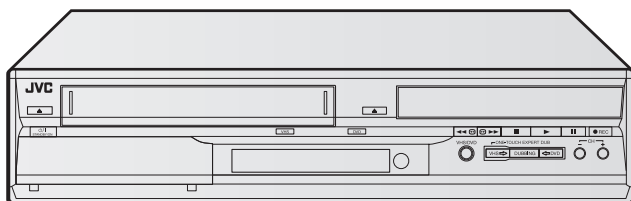

## INSTRUCTIONS

### For Customer Use:

Enter below the Model No. and Serial No. which are located on the rear of cabinet. Retain this information for future reference.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

**Dear Customer,**

Thank you for purchasing the JVC DVD video recorder & video cassette recorder. Before use, please read the safety information and precautions to ensure safe use of your new unit.

**Cautions**

**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK,  
DO NOT REMOVE COVER (OR BACK).  
NO USER-SERVICEABLE PARTS INSIDE.  
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**CAUTION:**

A UNIT IS A CLASS 1 LASER PRODUCT. HOWEVER THIS UNIT USES A VISIBLE LASER BEAM WHICH COULD CAUSE HAZARDOUS RADIATION EXPOSURE IF DIRECTED. BE SURE TO OPERATE THE UNIT CORRECTLY AS INSTRUCTED.

WHEN THIS UNIT IS PLUGGED INTO THE WALL OUTLET, DO NOT PLACE YOUR EYES CLOSE TO THE OPENING OF THE DISC TRAY AND OTHER OPENINGS TO LOOK INTO THE INSIDE OF THIS UNIT.

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

CLASS 1 LASER PRODUCT

REPRODUCTION OF LABELS

WARNING LABEL INSIDE OF THE UNIT

<b>CAUTION</b>	CLASS 3B VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO THE BEAM.
<b>ADVARSEL</b>	KLASSE 3B SYNLIG OG USYNLIG LASERSTRÅLING VED ÅBNING. UNDGÅ UDSÆTTELSE FOR STRÅLING.
<b>ADVARSEL</b>	KLASSE 3B SYNLIG OG USYNLIG LASERSTRÅLING NÅR DEKSEL ÅPENS. UNNGÅ EKSPONERING FOR STRÅLEN.
<b>VARNING</b>	KLASS 3B SYNLIG OCH OSYNLIG LASERSTRÅLNING NÅR DENNA DEL ÄR ÖPPNAD. STRÅLEN ÄR FARLIG.
<b>VARO!</b>	KURSSI 3B NÄKYVÄ JA NÄKYMÄTÖN AVATTAESSA OLET ALTTIINA LASERSÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN.

**WARNING:**

**TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.**

**CAUTION:**

This unit should be used with AC 120V~, 60Hz only.

To prevent electric shocks and fire hazards, DO NOT use any other power source.

**CAUTION:**

TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

**ATTENTION:**

POUR ÉVITER LES CHOCs ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND.

 
**Note to CATV system installer:**

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

**CAUTION:**

Changes or modifications not approved by JVC could void user's authority to operate the equipment.

Use the conversion plug (provided) depending on the type of your AC WALL outlet.



# IMPORTANT PRODUCT SAFETY INSTRUCTIONS

Electrical energy can perform many useful functions. But improper use can result in potential electrical shock or fire hazards. This product has been engineered and manufactured to assure your personal safety. In order not to defeat the built-in safeguards, observe the following basic rules for its installation, use and servicing.

## ATTENTION:

Follow and obey all warnings and instructions marked on your product and its operating instructions. For your safety, please read all the safety and operating instructions before you operate this product and keep this booklet for future reference.

## INSTALLATION

### 1. Grounding or Polarization

(A) Your product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature.

If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

(B) Your product may be equipped with a 3-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.

### 2. Power Sources

Operate your product only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. If your product is intended to operate from battery power, or other sources, refer to the operating instructions.

### 3. Overloading

Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

### 4. Power Cord Protection

Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

### 5. Ventilation

Slots and openings in the cabinet are provided for ventilation. To ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered.

- Do not block the openings by placing the product on a bed, sofa, rug or other similar surface.
- Do not place the product in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

### 6. Wall or Ceiling Mounting

The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

## ANTENNA INSTALLATION INSTRUCTIONS

### 1. Outdoor Antenna Grounding

If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding connectors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.


### 2. Lightning

For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

### 3. Power Lines

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE, ANSI/NFPA 70

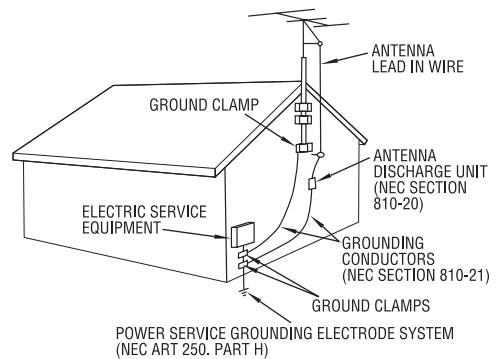

NEC – NATIONAL ELECTRICAL CODE

## USE

### 1. Accessories

To avoid personal injury:

- Do not place this product on an unstable cart, stand, tripod, bracket, or table. It may fall, causing serious injury to a child or adult, and serious damage to the product.
- Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with the product.
- Use a mounting accessory recommended by the manufacturer and follow the manufacturer's instructions for any mounting of the product.
- Do not try to roll a cart with small casters across thresholds or deep-pile carpets.

### 2. Product and Cart Combination

A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.

### 3. Water and Moisture

Do not use this product near water—for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement, or near a swimming pool and the like.

### 4. Object and Liquid Entry

Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

### 5. Attachments

Do not use attachments not recommended by the manufacturer of this product as they may cause hazards.

### 6. Cleaning

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

### 7. Heat

The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

PORTABLE CART WARNING  
(Symbol provided by RETAC)



## SERVICING

### 1. Servicing

If your product is not operating correctly or exhibits a marked change in performance and you are unable to restore normal operation by following the detailed procedure in its operating instructions, do not attempt to service it yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

### 2. Damage Requiring Service

Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power supply cord or plug is damaged.
- If liquid has been spilled, or objects have fallen into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- If the product has been dropped or damaged in any way.
- When the product exhibits a distinct change in performance—this indicates a need for service.


### 3. Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or which have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

### 4. Safety Check

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in safe operating condition.

## HOW TO USE THIS INSTRUCTION MANUAL

- All major sections and subsections are listed in the Table Of Contents on page 6. Use this when searching for information on a specific procedure or feature.
- The Index on pages 12 – 14 illustrates the controls and connections on the front and rear panel, the front display panel and the remote control.
- The list of terms on page 82 lists frequently-used terms, and the number of the page on which they are used or explained in the manual.
- The  mark signals a reference to another page for instructions or related information.
- Operation buttons necessary for the various procedures are clearly indicated through the use of illustrations at the beginning of each major section.

## BEFORE YOU INSTALL YOUR NEW UNIT . . .

. . . please read the sections/literature listed below.

- “Cautions” on page 2
- “IMPORTANT PRODUCT SAFETY INSTRUCTIONS” on pages 3 – 5

**Declaration of Conformity**

Model Number: DR-MV4SU  
 Trade Name: JVC  
 Responsible Party: JVC Americas Corp.  
 Address: 1700 Valley Road Wayne, N.J. 07470  
 Telephone Number: 973-317-5000

This device complies with Part 15 of FCC Rules.  
 Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



- Manufactured under licence from Dolby Laboratories. "Dolby" and double-D symbol are trademarks of Dolby Laboratories.
- "DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.
- This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing users only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

When the equipment is installed in a cabinet or a shelf, make sure that it has sufficient space on all sides to allow for ventilation (10 cm or more on both sides, on top and at the rear).

When discarding batteries, environmental problems must be considered and the local rules or laws governing the disposal of these batteries must be followed strictly.

**Failure to heed the following precautions may result in damage to the unit, remote control or disc/cassette.**

1. **DO NOT place the unit** —
  - in an environment prone to extreme temperatures or humidity.
  - in direct sunlight.
  - in a dusty environment.
  - in an environment where strong magnetic fields are generated.
  - on a surface that is unstable or subject to vibration.
2. **DO NOT block the unit's ventilation openings or holes.**  
 (If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)
3. **DO NOT place heavy objects on the unit or remote control.**
4. **DO NOT place anything which might spill on top of the unit or remote control.**  
 (If water or liquid is allowed to enter this equipment, fire or electric shock may be caused.)
5. **DO NOT expose the apparatus to dripping or splashing.**
6. **DO NOT use this equipment in a bathroom or places with water.** Also **DO NOT** place any containers filled with water or liquids (such as cosmetics or medicines, flower vases, potted plants, cups, etc.) on top of this unit.
7. **DO NOT place any naked flame sources, such as lighted candles, on the apparatus.**
8. **AVOID violent shocks to the unit during transport.**

**MOISTURE CONDENSATION**

Moisture in the air will condense on the unit when you move it from a cold place to a warm place, or under extremely humid conditions—just as water droplets form on the surface of a glass filled with cold liquid. In conditions where condensation may occur, disconnect the unit's power plug from the wall and keep it disconnected for a few hours to let the moisture dry, then turn on the unit.

**ATTENTION:**

**To mobile phone users:**

Using a mobile phone in the vicinity of the unit may cause picture vibration on the TV screen or change the screen to a gray back display.

**On placing the unit:**

Some TVs or other appliances generate strong magnetic fields. Do not place such appliances on top of the unit as it may cause picture disturbance.

# *Enjoying your life with* **DVD**

## *Beautiful images*




Enjoy the vivid picture quality of  
DVD recording/playback.



**OH!!  
Great!!**

## *Easy dubbing*

With the simple operation, you  
can dub from DVD to tape or  
tape to DVD.

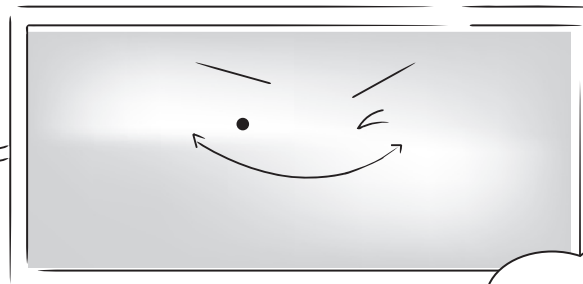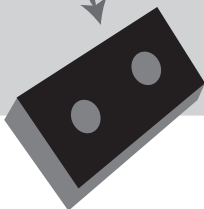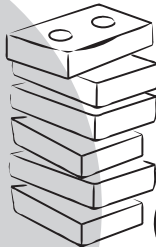


**Bea**



# recorder

Choose the disc type for recording from DVD-RAM, DVD-RW and DVD-R.

## 3 types of DVD discs

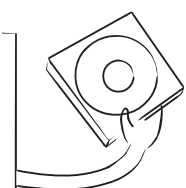


utiful!



## Comfortable playback

Navigation function helps you to find the disc and program you want to watch.

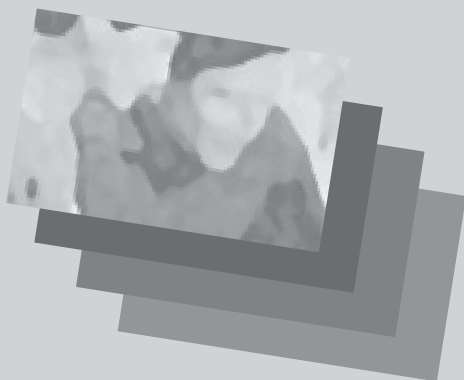

# CONTENTS

## Read me first!

Safety first .....	2
Disc information .....	8
Index .....	12

## Are you ready?

<b>Get over it!</b>	
- connection - .....	16
Initial settings .....	19

## Let's enjoy...

<b>Basic playback .....</b>	<b>26</b>
<b>Basic recording .....</b>	<b>28</b>
Timer recording .....	31
Editing .....	36
Advanced playback .....	43
Advanced recording .....	57
Navigation (DVD deck only) .....	60

## Arrange your style

Remote control .....	68
System connections .....	69
Subsidiary settings .....	70




## Need help?

Troubleshooting .....	76
List of terms .....	82

# About Discs

## Recordable/Playable Discs

You can use discs with the following logos for recording and playback.

	<p><b>DVD-RAM</b>                  12 cm: 4.7 GB/9.4 GB                  8 cm: 1.4 GB/2.8 GB                  (VR mode)                  Ver. 2.0                  Ver. 2.1                  Ver. 2.1/3x speed                  Ver. 2.2/5x speed</p>
	<p><b>DVD-RW</b>                  12 cm: 4.7 GB                  8 cm: 1.4 GB                  (Video mode/VR mode)                  Ver. 1.1                  Ver. 1.1/2x speed                  Ver. 1.2/4x speed</p>
	<p><b>DVD-R</b>                  12 cm: 4.7 GB                  8 cm: 1.4 GB                  (Video mode)                  General Ver. 2.0                  General Ver. 2.0/4x/8x/16x speed</p>

- The above table is based on the information as of February 2004.
- Recording and playback may not be performed depending on the characteristics and condition of the disc used, leading to unsatisfactory results. Using discs manufactured by JVC is recommended since they have been tested to be compatible with this unit.

### DVD-RAM Discs

It is only possible to use discs which conform with DVD-RAM standard Version 2.0 or 2.1.

- It is impossible to record on DVD-RAM discs which do not conform to this standard. If you use a disc formatted under a different standard version, format it on this unit before use.
- It may not be possible to record, play back, edit or dub a DVD-RAM disc even if it conforms to the standard if it was recorded or edited on the devices from other manufacturers or on a PC, or if it has far too many titles, or if there is very little available capacity remaining on the disc.
- DVD-RAM discs recorded on this unit cannot be played back on an incompatible DVD player.
- It is possible to record copy-once programs of digital broadcasts only onto 4.7/9.4 GB DVD-RAM discs (2.8 GB DVD-RAM discs are not compatible).

### DVD-R/RW Discs

It is only possible to use DVD-R discs which conform with DVD-R standard Version 2.0.

When a DVD-R/RW disc (Video mode) is finalized (pg. 75), it can be played back on a standard DVD player as a DVD VIDEO disc.

When a DVD-RW disc (VR mode) is finalized (pg. 75), it can be played back on a standard DVD player compatible with the VR mode of DVD-RW discs.

### Before finalizing —


— it is possible to record on unrecorded areas of the disc, edit the disc title and program titles, and delete programs.

- It is impossible to record or edit DVD-R/RW discs recorded on other devices even if they have not been finalized.
- It is impossible to overwrite recorded areas of DVD-R discs.
- Available recording capacity does not increase even if a recorded program is deleted from a DVD-R disc.

### After finalizing —

After a DVD-R/RW disc (Video mode) has been finalized, it is possible to play back the recorded programs (video and/or audio) on a standard DVD video player as a DVD VIDEO disc.

- Edited titles are displayed as the “DVD menu” in video mode.
- It is impossible to record, edit or delete the data either in video mode or in VR mode.
- Either in video mode or in VR mode, although the disc can be played back on DVD players from other manufacturers, sometimes it may not be possible to play back depending on the disc and recording conditions.
- It is impossible to record on CD-R/RW or DVD-R discs used for authoring.
- It is impossible to record onto DVD-R/RW (Video mode) discs broadcasts that allow you to copy once. The copy-once programs can only be recorded onto DVD-RW discs formatted in VR mode.

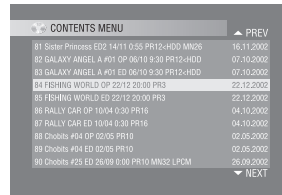









### NOTE:

The following may result if you play back a DVD-R disc recorded on another unit.

- The disc does not play.
- A mosaic pattern (block noise) appears on the screen.
- Video or audio may be dropped out.
- The unit stops during playback.

## Discs For Playback Only

You can use discs with the following logos for playback only.

 DVD VIDEO (example of region code indications) 	<p><b>Video CD/Super Video CD</b></p>  
 <b>Audio CD</b> CD-DA files	 <b>CD-R</b> CD-DA/JPEG/MP3 files
 <b>CD-RW*</b> CD-DA/JPEG/MP3 files	 <b>CD-ROM*</b> JPEG/MP3 files

- Playback may not be performed depending on the characteristics and condition of the disc used.
- DTS Audio CDs can also be played back (An optional DTS decoder is required).
- MP3 and JPEG discs can be played back on this unit only when they have been recorded in the ISO9660 or Joliet format and finalized.
- JPEG files that can be played back on this unit must conform to JFIF/Baseline process, and the maximum resolution of a JPEG file is 2,812 x 2,112 pixels.
- CD-R/RW discs recorded in music CD format need to be finalized to play back on this unit.
- Operation and audio quality of this unit are not guaranteed for discs that do not conform to the Compact Disc specification (CD-DA). Before you play back a CD, check for the CD logo and read the notes on the package to confirm that it conforms to the Compact Disc specification.
- Depending on the intentions of the author of the software, recording conditions of DVD discs and Video CD discs may be restricted. Since this unit plays back discs according to the intentions of the author of the software as indicated on the disc, some functions may not operate as commanded.
- When switching from the first layer to the second layer of double-layered DVD VIDEO discs, the image and sound may be momentarily distorted. This is not a malfunction.



- DVD-AUDIO discs compatible with DVD video players can be played.
- Super Audio CDs (SACD) compatible with conventional CD players can be played.
- It is possible to play back finalized +R/+RW (Video mode only) discs. "DVD" lights on the front display panel when a +R/+RW disc is loaded.  
However, the use of +R double layer disc on this unit may not be recommended.

## Unplayable Discs

The following types of discs cannot be played using this unit. Do not attempt to play back any kind of disc that is damaged (cracked, warped, or repaired with adhesive tape) or discs in unusual shapes (heart-shaped, octagonal, or other forms). If such discs are accidentally played back, it may cause noise that can lead to speaker damage.

- CD-ROM discs (including PHOTO-CD and CD-G)
- Discs recorded in Packet Write (UDF) format
- 1.3-GB double density CDs (DDCD)
- High density CDs (HDCCD)

### The following discs also cannot be played back.

- Discs of a region number other than "1"
- DVD-RAM (2.6 GB/5.2 GB)
- DVD-RAM (TYPE1)

### Caution for DualDisc playback

The Non-DVD side of a "DualDisc" does not comply with the "Compact Disc Digital Audio" standard. Therefore, the use of Non-DVD side of a DualDisc on this product may not be recommended.

## Region Number

The world is divided into 6 regions for DVD VIDEO discs. DVD VIDEO discs are assigned a region number to indicate which region they may be played back in. A disc cannot be played back on this unit unless the region number of the disc matches that of the unit. The region number for this unit is "1". Only discs whose region number includes "1" or "ALL" can be played back such as shown below.

Examples of DVD VIDEO labels which can be played back using this unit.



### Marks of discs in this instruction manual

	Allows operation with a DVD-RAM disc.		Allows operation with a Video CD/Super Video CD (SVCD) disc.
	Allows operation with a DVD-R disc.		Allows operation with an Audio CD disc.
	Allows operation with a DVD-RW disc.		Allows operation with a disc including MP3 files.
	Allows operation with a DVD VIDEO disc.		Allows operation with a disc including JPEG files.

## Recording Medium And Format

### DVD-RAM

- Recording and erasing can be performed as many times as possible on a disc.
- Editing can be performed after recording, such as deleting unwanted parts.
- While recording, it is possible not only to start playback of a program currently being recorded, but also to watch another program previously recorded.

### DVD-RW (VR mode)

- Recording and erasing can be performed as many times as possible on a disc.
- Editing can be performed after recording, such as deleting unwanted parts.

### DVD-RW (Video mode)

- Can be played back on other DVD players after finalizing.
- New recording can be performed by erasing all the data on a disc once played back.

### DVD-R

- Can be played back on other DVD players after finalizing.
- Suitable when keeping a recorded disc for a long time.

## File Structure Of Discs

### DVD VIDEO


Typically, DVD VIDEO discs are made up of larger units called "titles". Each title has a number (title number) that can be used to select desired titles. Titles are further divided into units called "chapters". Each chapter has a number (chapter number) that can also be used to select desired chapters. Note that some discs are not divided into titles and chapters.

### When you record a program on a DVD-RAM/RW (VR mode) disc

A single recording session results in a single title (a single chapter). However, chapter marks are automatically inserted when recording is paused, or audio changes from monaural to stereo due to commercial breaks, etc. It is also possible to insert chapter marks at desired locations during playback. (pg. 45)

### When you record a program on a DVD-R/RW (Video mode) disc

A single recording session results in a single title (a single chapter). However, chapter marks are automatically inserted when recording is paused, or audio changes due to commercial breaks, etc. It is also possible to insert chapter marks at desired locations during either recording or playback. Once the disc has been finalized, these chapter marks are deleted and new chapter marks are assigned automatically approximately every 5 minutes.

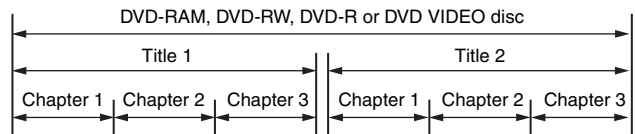


- In Video mode, even before finalizing, it is impossible to perform editing operations other than changing the disc name and/or title names and deleting programs and/or titles.
- After finalizing, it is impossible to perform editing operations.

**Audio CD/Video CD**

 Typically, Audio CD discs are divided into separate tracks each containing one song. Each track is assigned a number. For example, the third track is Track 3. The same is true for Video CD discs.


However, some discs are not divided into tracks.



**JPEG/MP3 Disc (CD-R/RW/ROM)**


MP3/JPEG files put in directories nested in several levels on a disc will be organized as if they were put in single level directories (groups) by the MP3/JPEG Navigation of this unit. (pg. 66)

**File structure of a disc before starting the MP3/JPEG Navigation**

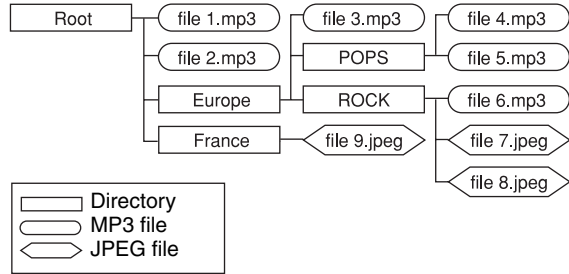

**File structure of the disc after starting the MP3/JPEG Navigation**

Files are automatically grouped as follows and displayed on the MP3/JPEG Navigation screen. Data is displayed in the alphabetical order of file name. Files are grouped based on roots.

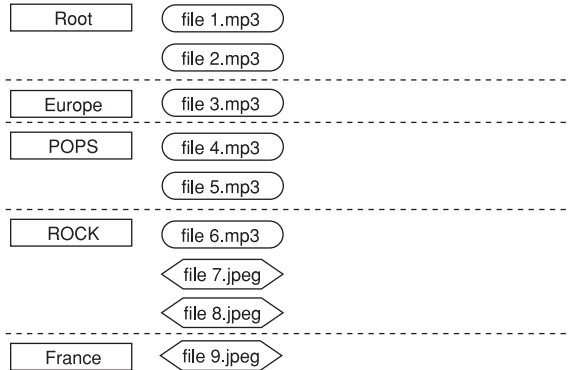

- This unit can recognize up to 9 hierarchies including directories and files. Also, it can recognize up to 250 files in each group, and up to 99 groups on a disc.

**NOTES:**

- **Video CD discs that support Playback Control (PBC)**  
The contents of a disc are recorded into several hierarchies, and played back according to the instructions on the screen while navigating through the hierarchies. It is also possible to playback recorded tracks consecutively without activating the PBC function even when playing a PBC-compatible disc. (pg. 46)
- **Regarding the contents recorded on discs**  
Some files may not be played back depending on the file types and other factors.

**DVD VIDEO Marks**

Sometimes marks are printed on a DVD disc and/or on its packaging to indicate information regarding the contents and functions of the disc. Check the marks indicating the contents and functions of the disc. Note, however, that in some cases a disc may not include a mark even for a function it supports.

**Marks related to video**

	Number of subtitles		Number of angles
	Recorded under the standard 4:3 aspect ratio		Screen includes black bands at the top and the bottom of image which has a standard 4:3 aspect ratio (letter box)
	Video playback is in Wide video mode (16:9) on wide televisions, but in letter box on televisions with standard 4:3 aspect ratio.		
	Video playback is in Wide video mode (16:9) on wide televisions, but pan and scan is used on televisions with standard 4:3 aspect ratio (either the left or right side of the image is cut-out).		


**Marks related to audio**

	Number of audio tracks
	Dolby Digital mark It has been developed by Dolby Laboratories as a digital surround system.
	DTS (Digital Theater Systems) You can enjoy DTS audio if you connect an amplifier with a built-in DTS decoder to the [DIGITAL AUDIO OUT] connector of the unit.

## Placing A Disc

### 1 Opening the disc tray

Press ▲ (OPEN/CLOSE) to open the disc tray.

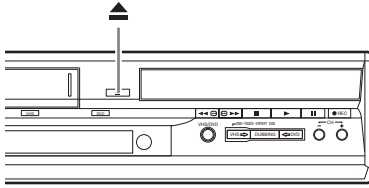


- Pressing the button again closes the disc tray.
- Use the button to open and close the disc tray.
- Do not block the disc tray with your hand while it is opening or closing as this may result in hardware failure.
- Do not place unplayable discs or any object other than a disc on the disc tray.
- Do not press down strongly on the disc tray or place any heavy objects on it.

### 2 Place the disc.

Place the disc on the disc tray with the label side facing up.


- Since disc size changes depending on the disc to be played back, be sure to correctly align the disc with the grooves for its size. If the disc is not in its groove, it may be scratched or otherwise damaged.
- To insert an 8 cm disc, place it according to the inner groove.

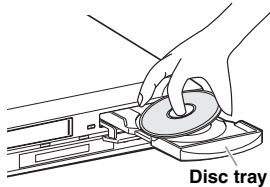

## Tray Lock (DVD Deck Only)

You can lock the disc tray to prohibit the unwanted disc ejection by children.

- Turn off the unit.

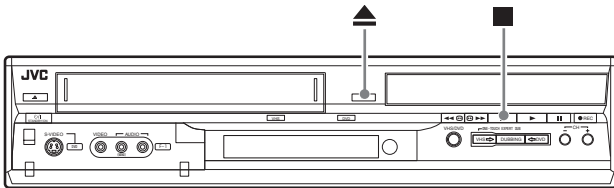

### To lock tray

While the unit is turned off, press and hold ■, then press ▲ (OPEN/CLOSE) on the unit. "LOCK" appears on the front display panel and the disc tray is locked.


### To unlock tray

While the unit is turned off, press and hold ■, then press ▲ (OPEN/CLOSE) on the unit. "UNLOCK" appears on the front display panel.

## Care And Handling Of Discs

### How to handle discs

When handling a disc, do not touch the surface of the disc. Since discs are made of plastic, they are easily damaged. If a disc gets dirty, dusty, scratched or warped, the images and sound will not be picked up correctly, and such a disc may cause the unit to malfunction.

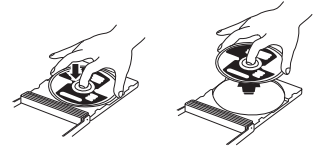

### Label side

Do not damage the label side, stick paper to or use any adhesives on its surface.

### Recording side

Make sure that discs are not scratched and dirty on the recording side before use. Scratches and dirt on the recording side of a disc may hinder proper playback and recording.

### Storage

Make sure that discs are kept in their cases. If discs are piled on top of one another without their protective cases, they can be damaged. Do not put discs in a location where they may be exposed to direct sunlight, or in a place where the humidity or temperature is high. Avoid leaving discs in your car!

### Maintenance of discs

If there are fingerprints or other dirt adhering to a disc, wipe with a soft dry cloth, moving from the centre outwards.

If a disc is difficult to clean, wipe with a cloth moistened with water. Never use record cleaners, petrol, alcohol or any anti-static agents.




### CAUTION:

Sometimes during playback, noise may appear or images may be garbled. This is sometimes due to the disc. (It may not be up to industry standards.)


These symptoms are caused by the discs, not by the malfunction of the unit.

## Front View

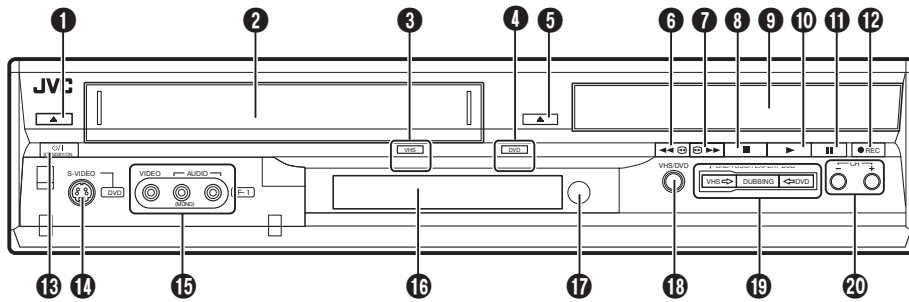


- 1 Eject Button (▲ (EJECT)) ☞ pg. 27
- 2 Cassette Loading Slot
- 3 VHS Lamp (VHS) ☞ pg. 27
- 4 DVD Lamp (DVD) ☞ pg. 26
- 5 Open/Close Button (▲ (OPEN/CLOSE)) ☞ pg. 11
- 6 Reverse Search Button (◀◀) (DVD deck) ☞ pg. 43, 50
- 7 Rewind Button (◀◀) (VHS deck) ☞ pg. 55
- 8 Forward Search Button (▶▶) (DVD deck) ☞ pg. 43, 50
- 9 Fast Forward Button (▶▶) (VHS deck) ☞ pg. 55
- 10 Stop Button (■) ☞ pg. 26, 27
- 11 Disc Tray
- 12 Play Button (▶) ☞ pg. 26, 27
- 13 Pause Button (||) ☞ pg. 26, 55
- 14 Record Button (●) ☞ pg. 28, 30
- 15 Standby/On Button (STANDBY/ON ⏻/⏻) ☞ pg. 40
- 16 S-video Input Connector (S-VIDEO) (DVD deck only) ☞ pg. 40
- 17 Video/Audio Input Connectors (VIDEO/AUDIO ((MONO) L/R)) ☞ pg. 40
- 18 Front Display Panel ☞ pg. 13
- 19 Infrared Beam Receiving Window
- 20 VHS/DVD Select Button\* (VHS/DVD) ☞ pg. 26, 27  
\* This button will not function during navigation mode or set up mode.
- 21 Dubbing Button (DUBBING) ☞ pg. 37 – 39
- 22 Dubbing Direction Buttons (VHS→/←DVD) ☞ pg. 36 – 39
- 23 Channel Buttons (CH +/-) ☞ pg. 28, 30

To access covered connectors, push and open the connector cover.

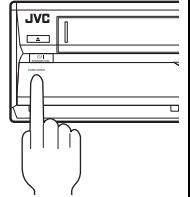


## Rear View

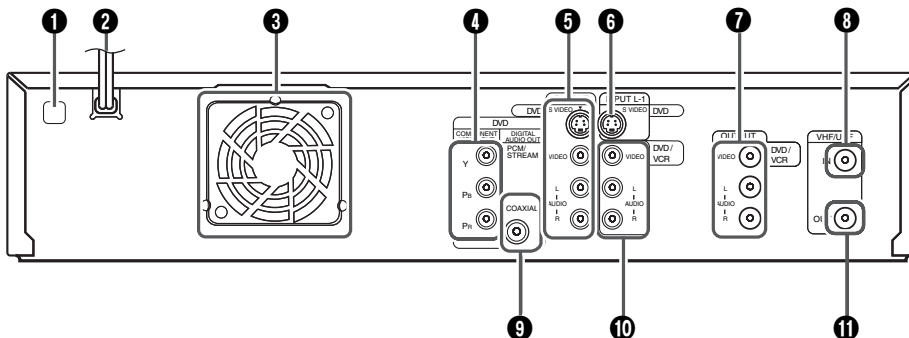


- 1 Region Number Label ☞ pg. 9
- 2 AC Power Cord ☞ pg. 16
- 3 Cooling Fan
  - This prevents the temperature from rising inside the unit. Do not remove it.
  - Install the unit so as not to block the area around the fan.
  - The cooling fan on the rear of the unit may be activated even if the unit is turned off in the following cases;
    - In the Automatic Satellite Program Recording standby mode (☞ pg. 35)
    - when "AUTO CLOCK" is set to "ON" (☞ pg. 21)
    - (Set "AUTO CLOCK" to "OFF" if you mind the noise of the fan.)
- 4 Component Video Output Connectors (COMPONENT VIDEO OUT (Y/Pb/Pr)) ☞ pg. 16
  - This component video output enables you to watch the images on the VHS deck in Progressive scan mode, refer to "VHS Progressive Scan" (☞ pg. 56).
- 5 S-video/Video/Audio Output Connectors (S VIDEO/VIDEO/AUDIO OUTPUT) (DVD deck only) ☞ pg. 16
- 6 S-video Input Connector (S VIDEO INPUT (L-1)) (DVD deck only) ☞ pg. 41
- 7 Video/Audio Output Connectors (VIDEO/AUDIO OUTPUT) ☞ pg. 41
- 8 Antenna Input Connector (VHF/UHF IN) ☞ pg. 16
- 9 Digital Audio Output Connectors (DIGITAL AUDIO OUT (COAXIAL)) (DVD deck only) ☞ pg. 42, 69
- 10 Video/Audio Input Connectors (VIDEO/AUDIO INPUT (L-1)) ☞ pg. 41
- 11 Antenna Output Connector (VHF/UHF OUT) ☞ pg. 16

## Front Display Panel

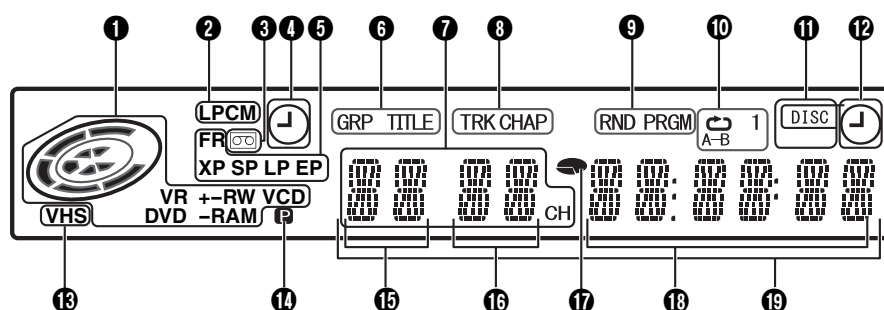

- 1 Disc Type Indicator**  
When a disc is loaded, the type of the disc is indicated.
- Disc Status Indicator**  
When a disc is running, the disc marks rotate.  
During High-Speed Search: Rotate faster than normal playback.  
During Slow Motion: Rotate slower than normal playback.  
While recording/dubbing: Inner red ring lights. During Timer Recording, inner red ring slowly blinks.  
While playing back: Outside ring lights.  
While paused: Disc marks blink when either recording or playing back.  
While stopped: Disc marks all light.  
While resume stopped: Disc marks all blink.  
While the disc tray opened: Disc marks all light out.  
No disc on the disc tray: Disc marks all light out.
- VR Mode Indicator (VR)** pg. 9, 74  
Lights when a DVD-RW disc is formatted in VR mode.
- 2 Linear PCM Indicator (LPCM)**  
Lights when "XP MODE REC AUDIO" is set to "LINEAR PCM" ( pg. 71) for recording with DVD-RAM, DVD-R and DVD-RW discs, and when Linear PCM audio is played.
- 3 Cassette Loaded Mark ()**  
Indicates the present of a cassette in the VHS deck.  
Lights when a cassette is loaded into the VHS deck. Blinks when the end of the tape has been reached during timer recording, or when the unit is in timer recording standby mode with a cassette without record safety tab inserted.
- 4 VHS Timer Indicator ()**  
Lights when the VHS deck is in the timer recording standby mode or when timer recording is in progress.  
Blinks rapidly when **TIMER** is pressed under the following conditions:  
  - Clock is not set.
  - Timer programing has not been set.
  - Cassette is not loaded.
  - Timer recording standby mode with a cassette without safety tab inserted.
  - Tape end is reached during time recording.
- 5 Recording Mode Indicator (XP/SP/LP/EP/FR)** pg. 29  
Blinks when recording mode is being set.  
While "FR" lights up, the left 3 digits of the Multi Display (**16** **17**) indicate setting values ranging from "60" to "480". After the value has been set, only "FR" lights.
- 6 Group/Title Indicator (GRP/TITLE)**  
"GRP" or "TITLE" lights depending on a disc loaded while the left 2 digits of the Multi Display (**15**) indicate the numbers explained below.  
"GRP": Total number of groups or group number being played back are displayed on the Multi Display.  
"TITLE": Total number of titles or title number being played back are displayed on the Multi Display.
- 7 Channel/Recording Mode Indicator**  
Indicates the channel received. Or the recording mode (SP, EP) of the VHS deck. ( pg. 30)
- 8 Track/Chapter Indicator (TRK/CHAP)**  
"TRK" or "CHAP" lights depending on a disc loaded while the 3rd and 4th digits from the left of the Multi Display (**16**) indicate the numbers explained below.  
"TRK": Total number of tracks or track number being played back are displayed on the Multi Display.  
"CHAP": Chapter number being played back are displayed on the Multi Display.
- 9 Random/Program Playback Mode Indicator (RND/PRGM)** pg. 54  
"RND": Lights when Random Playback mode is set.  
"PRGM": Lights when Program Playback mode is set.
- 10 Repeat Mode Indicator (/1/A-B)** pg. 52  
Select Repeat Playback mode on the on-screen bar.  
"": Whole disc is played back repeatedly.  
"1": A single title/chapter/track is played back repeatedly.  
"A-B": The selected part (A-B) is played back repeatedly.  
No display: Repeat Playback mode is off.
- 11 DISC Indicator** pg. 32  
Lights when a disc set up for On-Disc Timer Programming is loaded.
- 12 DVD Timer Indicator ()**  
Lights when the DVD deck is in the timer recording standby mode or when timer recording is in progress.  
Blinks when rapidly when **TIMER** is pressed under the following conditions:  
  - Clock is not set.
  - Timer programing has not been set.
  - Disc is not loaded.
  - Timer recording standby mode with a non recordable disc.
- 13 VHS Indicator** pg. 27  
Lights when VHS mode has been selected, during recording or when tapes recorded in VHS format are played back.
- 14 Video Output Indicator ()** pg. 72  
No display: Indicates that interlace mode is engaged.  
: Indicates that progressive mode is engaged.  
**(Example)** lights when video output mode is in progressive mode.
- 15 Group/Title Number Display (DVD deck)  
Index Number Display (VHS deck)** pg. 55
- 16 Track/Chapter Number Display**
- 17 Remaining Time/Elapsed Time Indicator** pg. 45, 57  
Lights when remaining time of DVD-RAM, DVD-R and DVD-RW discs is displayed, and lights out when elapsed time is displayed. The right 6 digits of the Multi Display (**18**) indicate elapsed or remaining time of each track.  
No display: Indicates elapsed time of the disc.  
Displayed: Indicates remaining time of the disc.
- 18 Remaining Time/Elapsed Time Display** pg. 45, 57  
Audio Mode Display (VHS deck only) pg. 56  
The left 3 digits of Multi Display (**16**) indicate the audio mode.
- 19 Multi Display**  
Displays clock, received channel, elapsed time, and remaining time. Also displays status of the unit (NO DISC/OPEN/CLOSE/READING).

## Remote Control

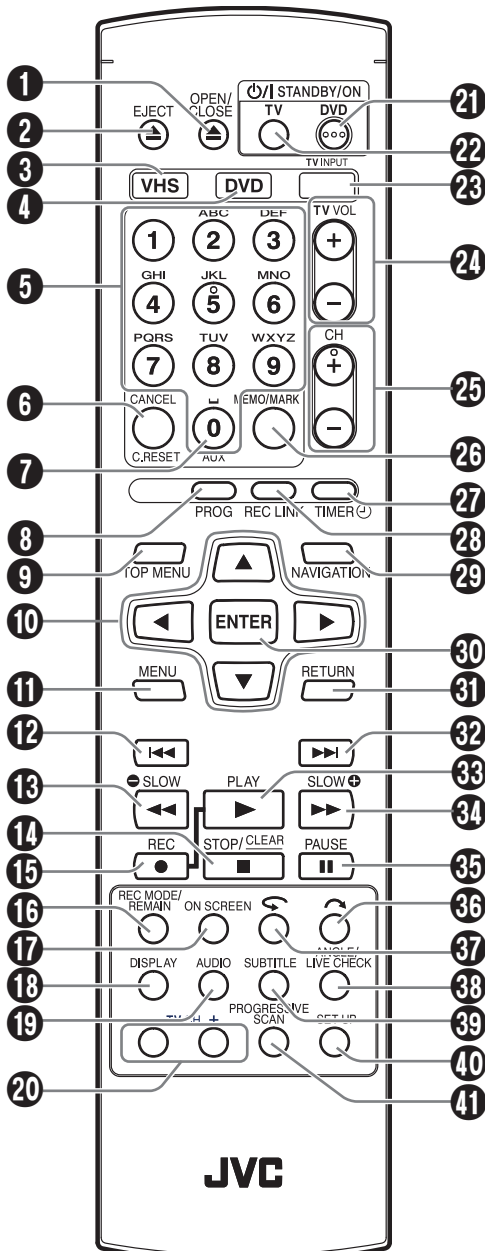

- 1 Open/Close Button (▲ (OPEN/CLOSE)) ☞ pg. 11, 26
- 2 Eject Button (▲ (EJECT)) ☞ pg. 27
- 3 VHS Button\* ☞ pg. 27  
\* This button will not function during navigation mode or set up mode.
- 4 DVD Button\* ☞ pg. 26  
\* This button will not function during navigation mode or set up mode.
- 5 Number Buttons ☞ pg. 22, 28, 30, 62
- 6 Cancel Button (CANCEL) ☞ pg. 54  
Counter Reset Button (C.RESET) ☞ pg. 59
- 7 Auxiliary Button (AUX)
- 8 Programming Button (PROG) ☞ pg. 31, 32, 34
- 9 Top Menu Button (TOP MENU) ☞ pg. 43
- 10 ▲▼◀▶ Buttons ☞ pg. 20
- 11 Menu Button (MENU) ☞ pg. 43
- 12 Reverse Skip Button (◀◀) ☞ pg. 43, 45, 50  
Previous Button ☞ pg. 46

- 13 Reverse Search Button (◀◀) (DVD deck) ☞ pg. 43, 50  
Rewind Button (◀◀) (VHS deck) ☞ pg. 55  
Reverse Slow Button (SLOW -) ☞ pg. 44
- 14 Stop Button (■) ☞ pg. 26, 27  
Clear Button (CLEAR) ☞ pg. 54
- 15 Record Button (●) ☞ pg. 28, 30
- 16 Recording Mode Button (REC MODE) ☞ pg. 28, 30  
Remain Button (REMAIN) ☞ pg. 45, 57
- 17 On-Screen Button (ON SCREEN) ☞ pg. 15, 51
- 18 Display Button (DISPLAY) ☞ pg. 45, 57
- 19 Audio Button (AUDIO) ☞ pg. 46
- 20 TV Channel Buttons ☞ pg. 59, 68
- 21 DVD Standby/On Button (DVD STANDBY/ON ⏻/⏻)
- 22 TV Standby/On Button (TV STANDBY/ON ⏻/⏻) ☞ pg. 68
- 23 TV Input Button (TV INPUT) ☞ pg. 57, 59
- 24 TV Volume Buttons (TV VOL +/-) ☞ pg. 68
- 25 DVD Channel Buttons (CH +/-) ☞ pg. 28, 30  
Page Buttons ☞ pg. 61, 64, 65
- 26 Memo Button (MEMO) ☞ pg. 61, 64  
Mark Button (MARK) ☞ pg. 45
- 27 Timer Button (TIMER ⌚) ☞ pg. 31, 32
- 28 Automatic Satellite Program Recording Button (REC LINK) ☞ pg. 35
- 29 Navigation Button (NAVIGATION) ☞ pg. 60
- 30 Enter Button (ENTER) ☞ pg. 20
- 31 Return Button (RETURN) ☞ pg. 46, 53
- 32 Forward Skip Button (▶▶) ☞ pg. 43, 45, 50  
Next Button ☞ pg. 46
- 33 Play Button (▶) ☞ pg. 26, 27
- 34 Forward Search Button (▶▶) (DVD deck) ☞ pg. 43, 50  
Fast Forward Button (▶▶) (VHS deck) ☞ pg. 55  
Forward Slow Button (SLOW +) ☞ pg. 44
- 35 Pause Button (⏸) ☞ pg. 26, 55
- 36 Skip Search Button (↶) ☞ pg. 44, 50
- 37 One Touch Replay Button (↶) ☞ pg. 50
- 38 Angle Button (ANGLE) (DVD deck only) ☞ pg. 45  
Live Check Button (LIVE CHECK) ☞ pg. 50
- 39 Subtitle Button (SUBTITLE) ☞ pg. 45
- 40 Set Up Button (SET UP) ☞ pg. 20
- 41 Progressive Scan Button (PROGRESSIVE SCAN) ☞ pg. 56, 72

**How To Use**

Before use, insert two AA size batteries into the remote control with the polarity (⊕ and ⊖) matched correctly as indicated on the battery compartment or on the lid.

The remote control can operate most of your unit's functions, as well as basic functions of TV sets of JVC and other brands. (☞ pg. 68)

- Point the remote control toward the receiving window.
- The maximum operating distance of the remote control is about 8 m.


**NOTE:**

If the remote control doesn't work properly, remove its batteries, wait a short time, replace the batteries and then try again.

## On-Screen Display (DVD deck only)


When "SUPERIMPOSE" is set to "AUTO" and **ON SCREEN** on the remote control is pressed, various operational indicators appear on the TV screen. To clear the operational indicators, press **ON SCREEN** twice.

### When playing back a recorded title

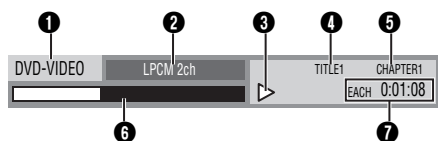

- 1 Disc type
- 2 Audio mode
- 3 Current status (playback)
- 4 Playback title number
- 5 Playback chapter number
- 6 Current playback point
- 7 Elapsed playing time


### When recording

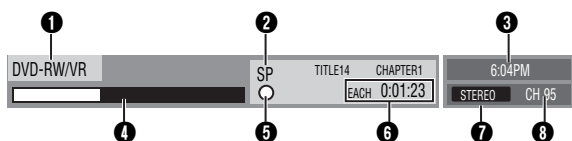

- 1 Disc type
- 2 Recording mode
- 3 Current time
- 4 Recording point
- 5 Current status (recording)
- 6 Elapsed recording time
- 7 Audio mode
- 8 Recording channel number


### When pressing REC MODE

(Appears for eight seconds.)

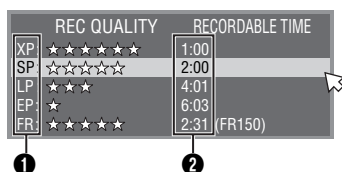


- 1 Recording mode
- 2 Remaining disc time for each recording speed

### During Instant Timer Recording (ITR)

 

- 1 Record remaining time

## When using Live Memory playback

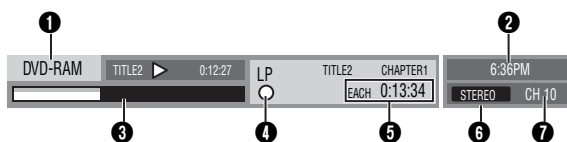

- 1 Disc type
- 2 Current time
- 3 Bar meter for recording/playback
- 4 Recording mode
- 5 Current playback time/Elapsed recording time
- 6 Audio mode
- 7 Recording channel number

**NOTE:**

The on-screen display for VHS deck does not appear.

# Connections


It's essential that your unit be properly connected.

THESE STEPS MUST BE COMPLETED BEFORE ANY VIDEO OPERATION CAN BE PERFORMED.

Connect the unit to a TV depending on the TV and cables you use.

- (➡ pg. 16, "Composite Connection (Without Cable Box Or DBS Receiver)")
- (➡ pg. 17, "Composite Connection (With Cable Box Or DBS Receiver)")
- (➡ pg. 18, "Component Video Connection")

## Composite Connection (Without Cable Box Or DBS Receiver)

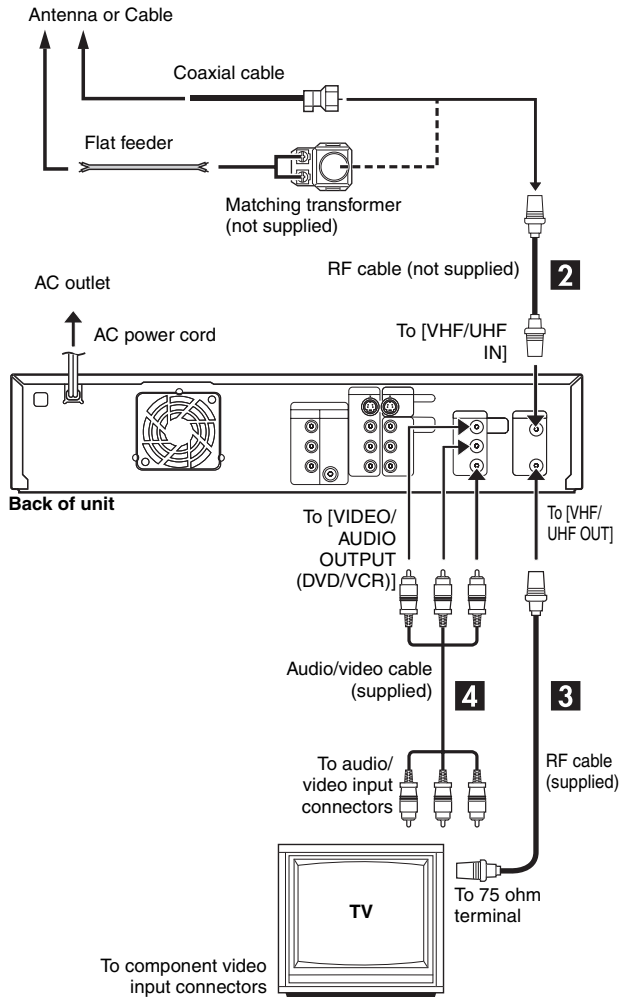

- 1** Disconnect the antenna from the TV.
- 2** Connect the antenna to the [VHF/UHF IN] connector on the rear panel of the unit.
- 3** Connect the supplied RF cable between the [VHF/UHF OUT] connector on the rear panel of the unit and the TV's antenna terminal.
- 4** Connect the supplied audio/video cable between the [VIDEO/AUDIO OUTPUT (DVD/VCR)] connectors on the unit and the TV's audio/video input connectors.
- 5** Plug the end of the AC power cord into an AC outlet. This unit performs Plug & Play Set automatically. (➡ pg. 19)


- The clock and tuner channels will automatically be set when the antenna is connected and when the AC power cord is first connected to an AC outlet. (If "AUTO" and the channel indicator are displayed on the front display panel before the unit is powered on, the clock and tuner channels are being set automatically. Wait for the time to be displayed on the front display panel before turning on the unit.)
- "LOADING" blinks on the front display panel when the AC plug of the AC power cord is connected into an AC outlet and it takes approximately 50 seconds for the unit to be turned on. This is not a malfunction.

**NOTE:**

You cannot view images received by this unit on channel 3 or 4.



## Composite Connection (With Cable Box Or DBS Receiver)

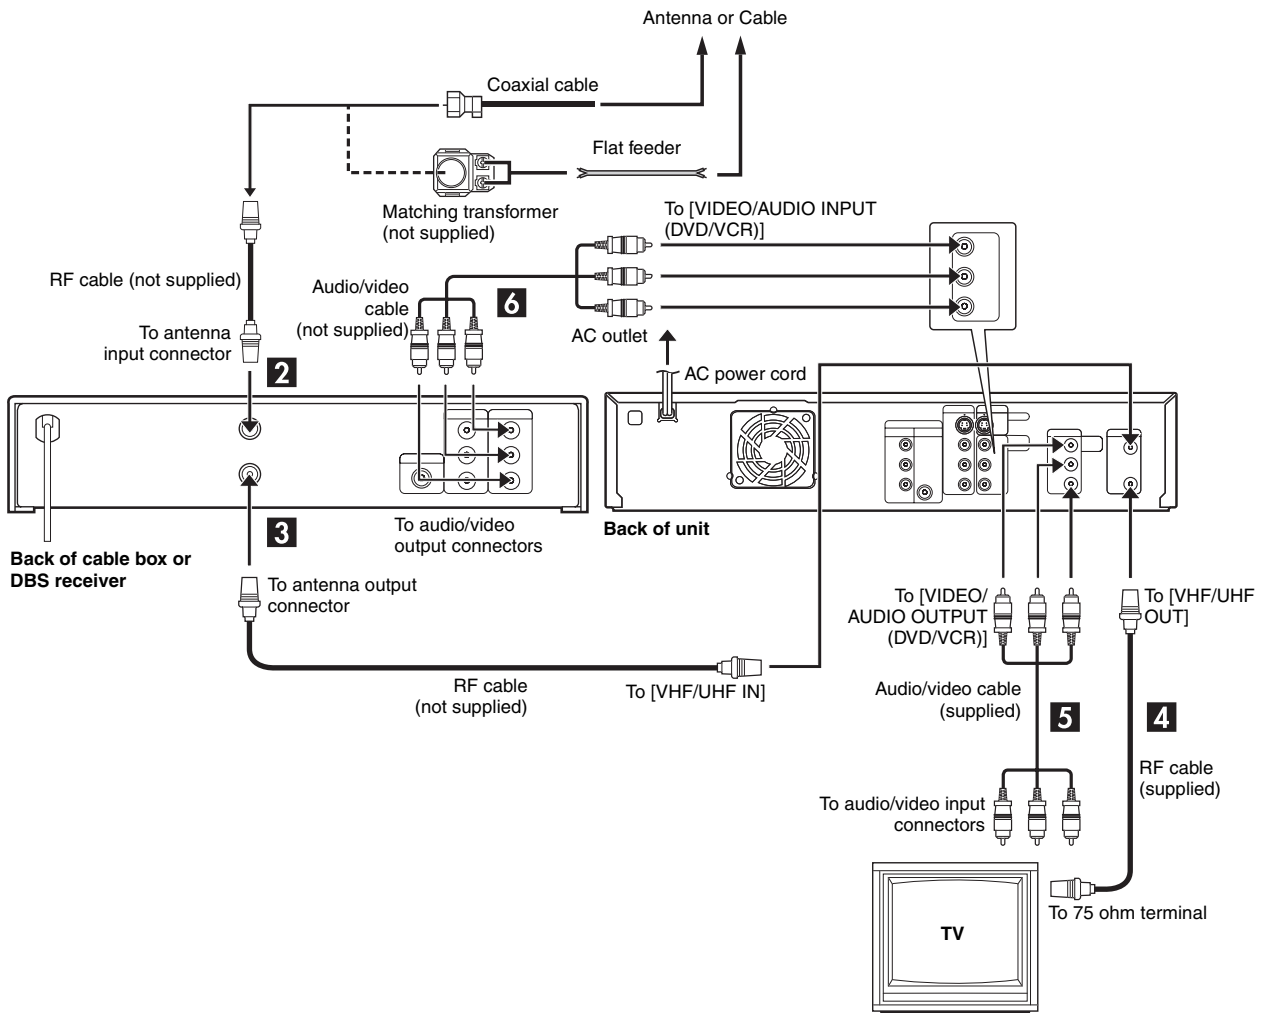

**1** Disconnect the antenna from the TV.

**2** Connect the antenna to the antenna input connector on the cable box or DBS receiver.

**3** Connect the RF cable between the unit's [VHF/UHF IN] connector to the antenna output connector on the cable box or DBS receiver.

**4** Connect the supplied RF cable between the [VHF/UHF OUT] connector on the rear panel of the unit and the TV's antenna terminal.

**5** Connect the supplied audio/video cable between the [VIDEO/AUDIO OUTPUT (DVD/VCR)] connectors on the unit and the TV's audio/video input connectors.

### NOTE:

If your TV is compatible with S-VIDEO signals, connect the unit's [S VIDEO OUTPUT] connector to the TV's S-VIDEO input connector.


- You can obtain high-quality S-VHS pictures.
- If your TV is not stereo-capable, use the unit's [AUDIO OUTPUT] connectors to connect to an audio amplifier for Hi-Fi stereo sound reproduction.

**6** Connect the audio/video cable between the [VIDEO/AUDIO INPUT (DVD/VCR)] connectors on the unit and the audio/video output connectors on the cable box or DBS receiver.

**7** Plug the end of the AC power cord into an AC outlet. This unit performs Plug & Play Set automatically. (☞ pg. 19)

- The clock and tuner channels will automatically be set when the antenna is connected and when the AC power cord is first connected to an AC outlet. (If "AUTO" and the channel indicator are displayed on the front display panel before the unit is powered on, the clock and tuner channels are being set automatically. Wait for the time to be displayed on the front display panel before turning on the unit.)
- "LOADING" blinks on the front display panel when the AC plug of the AC power cord is connected into an AC outlet and it takes approximately 50 seconds for the unit to be turned on. This is not a malfunction.

## Component Video Connection

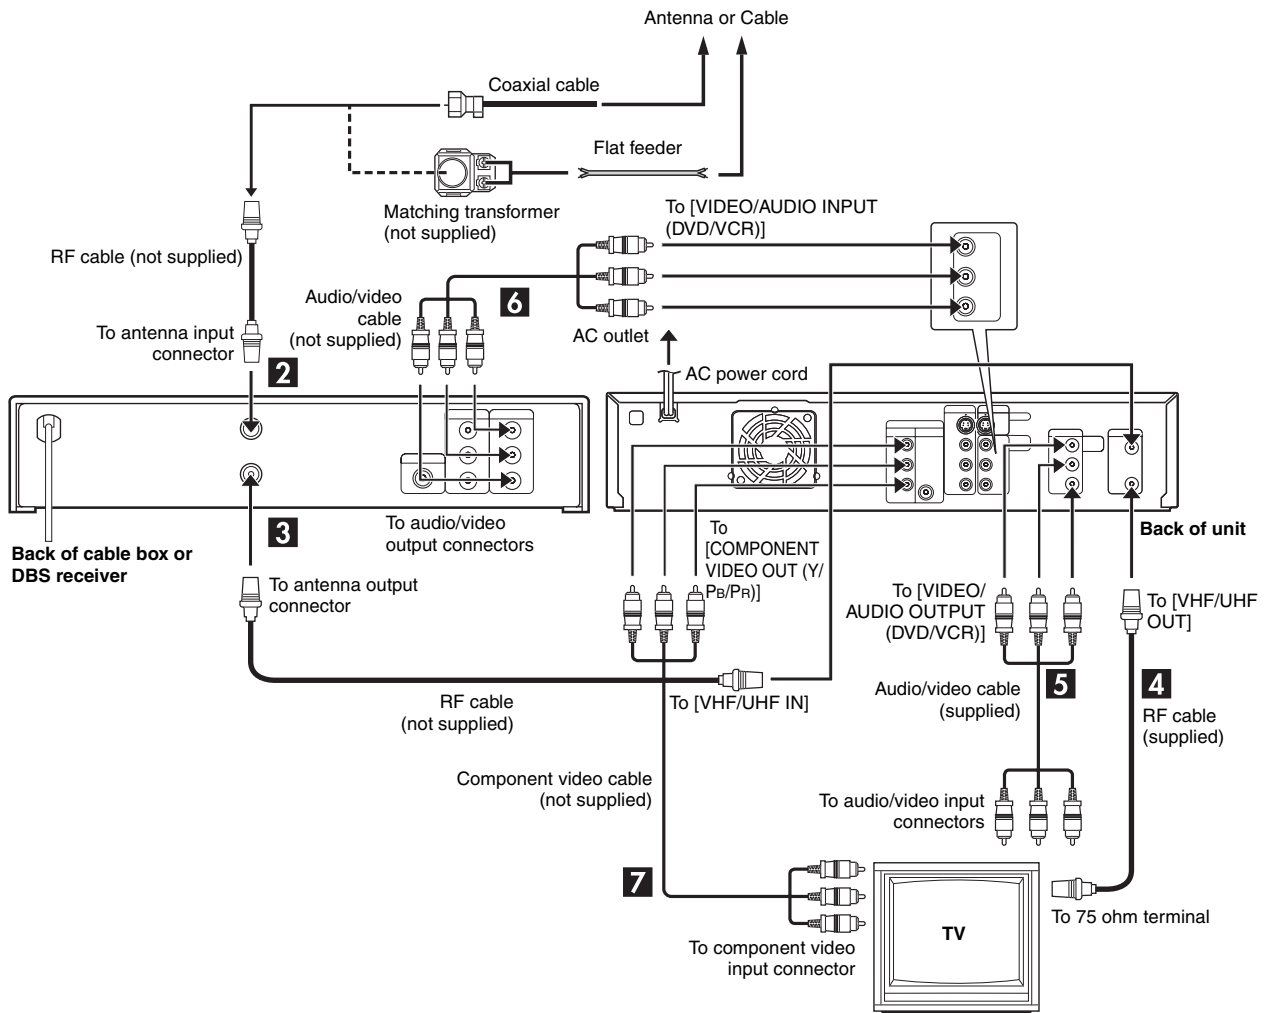

**1** Disconnect the antenna from the TV.

**2** Connect the antenna to the antenna input connector on the cable box or DBS receiver.

**3** Connect the RF cable between the unit's [VHF/UHF IN] connector to the antenna output connector on the cable box or DBS receiver.

**4** Connect the supplied RF cable between the [VHF/UHF OUT] connector on the rear panel of the unit and the TV's antenna terminal.

**5** Connect the supplied audio/video cable between the [VIDEO/AUDIO OUTPUT (DVD/VCR)] connectors on the unit and the TV's audio/video input connectors.

**6** Connect the audio/video cable between the [VIDEO/AUDIO INPUT (DVD/VCR)] connectors on the unit and the audio/video output connectors on the cable box or DBS receiver.

**7** Connect the unit's [COMPONENT VIDEO OUT (Y/Pb/Pr)] connectors to the TV's component video input connectors.

- You can obtain high-quality component video pictures.
- If your TV is not stereo-capable, use the unit's [AUDIO OUTPUT] connectors to connect to an audio amplifier for Hi-Fi stereo sound reproduction.
- By using the component video connection, you can view the images in the progressive mode. For switching to the progressive mode, refer to "Scan Mode Set" (☞ pg. 72).

**8** Plug the end of the AC power cord into an AC outlet. This unit performs Plug & Play Set automatically. (☞ pg. 19)

- The clock and tuner channels will automatically be set when the antenna is connected and when the AC power cord is first connected to an AC outlet. (If "AUTO" and the channel indicator are displayed on the front display panel before the unit is powered on, the clock and tuner channels are being set automatically. Wait for the time to be displayed on the front display panel before turning on the unit.)
- "LOADING" blinks on the front display panel when the AC plug of the AC power cord is connected into an AC outlet and it takes approximately 50 seconds for the unit to be turned on. This is not a malfunction.

**NOTE:**

When watching the images on the VHS deck with this connection, set to the progressive scan mode. (☞ pg. 56, "VHS Progressive Scan")

## Plug & Play Set


### Auto Clock Set/Auto Tuner Set

This unit sets the clock and tuner channels automatically when AC power cord is first connected to an AC outlet. The antenna cable must be connected for the Plug & Play setting.

The time and date can be set automatically by the clock setting data transmitted from one of the regular TV broadcast channels. We call this TV channel the "host channel" and it is a PBS channel in your area.

#### ATTENTION:

- If you use a cable box, Plug&Play will not function; set the clock and tuner channels separately. (☞ pg. 21 – 22)
- Depending on areas or reception conditions, the unit may not receive the Auto clock setting data from the PBS channel. If this function is taking a considerable amount of time, it may be necessary to perform the Semiauto or Manual Clock Set procedure.

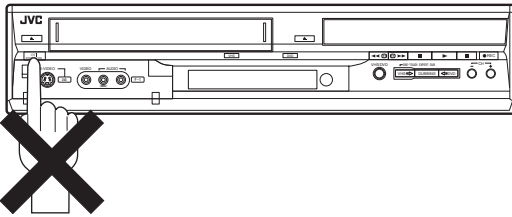

#### INFORMATION

- If "AUTO CLOCK" is set to "ON" (☞ pg. 21), the clock will be adjusted automatically by the host channel every hour (except 11:00 PM, midnight, 1:00 AM and 2:00 AM) using the incoming PBS channel clock setting data. (This automatic clock adjustment can only be performed when the unit is turned off. The clock will be adjusted just on these hours — on the time displayed on the front display panel, not on the actual real time.) The default setting of "AUTO CLOCK" is "ON". (☞ pg. 21)
- If the memory backup fails, because a power outage occurs or because the AC power cord is unplugged, Plug & Play will be performed when power is restored to the unit.

#### What to do if Plug & Play setting failed

- If an incorrect time is displayed on the front display panel, you may be receiving the clock setting data of a PBS channel from an adjacent time zone, or an incorrect PBS channel from a cable TV system. In this case, perform "Semiauto Clock Set" (☞ pg. 21) or "Manual Clock Set" (☞ pg. 21).
- If "--:--" appears on the front display panel, your antenna cable may not be connected to the unit or there may not be a Host PBS signal available in your area. Ensure that the antenna cable is connected correctly. Then turn on and off the unit; the Plug & Play setting will be automatically reactivated. If Plug & Play setting is not performed though the antenna cable is connected correctly, perform "Manual Clock Set" (☞ pg. 21) and "Auto Channel Set" (☞ pg. 22) or "Manual Channel Set" (☞ pg. 22).

1 Connect the antenna cable to the unit. (☞ pg. 16 – 18) Then connect the AC power cord to an AC outlet. Do not turn on the unit. The clock and tuner channels will be set automatically.

- "LOADING" blinks on the front display panel when the AC plug of the AC power cord is connected into an AC outlet and it takes approximately 50 seconds for the unit to be turned on. This is not a malfunction.

#### NOTES:

- Auto Clock Set is performed first. "AUTO" blinks on the front display panel during Auto Clock Set.
- Auto Channel Set is performed next. Auto Channel Set scans all the channels that are receivable by your unit. During Auto Channel Set, the channel numbers are displayed as they are scanned and set.
- When Plug & Play setting has been completed successfully, the correct clock time is displayed. If you perform Plug & Play setting successfully, there is no need to perform "Clock Set" (☞ pg. 21) and "Tuner Set" (☞ pg. 22). If, however, you want to add or delete channels, refer to "Manual Channel Set" (☞ pg. 22).

 
#### During Auto Clock Set

"AUTO" blinks.



#### During Auto Channel Set

The channel numbers are displayed and "AUTO" blinks as they are scanned and set.



#### Plug&Play Completed


The current time is displayed.

- If an incorrect clock time or "--:--" appears on the front display panel, see "What to do if Plug & Play setting failed" (☞ pg. 19).



## Language


- Turn on the unit.
- Turn on the TV and select the AV mode.

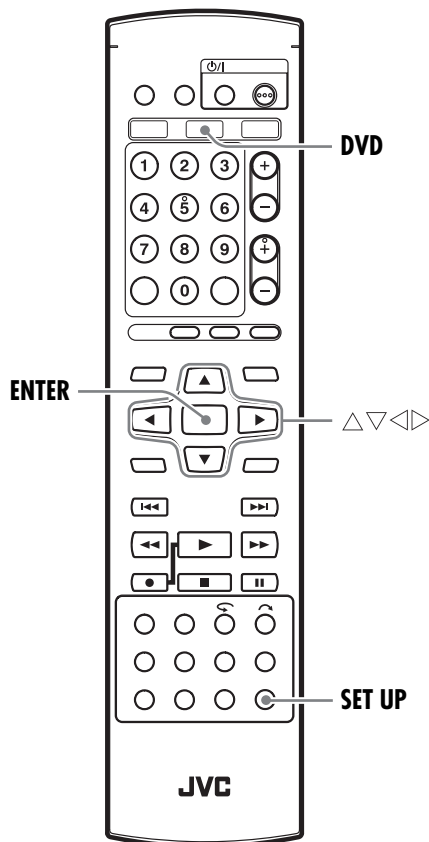

## On-screen Language Set

This unit offers you the choice to view on-screen messages in 3 different languages.

- 1 Press **SET UP** to access the Main Menu screen.
- 2 Press  $\triangleleft \triangleright$  to select "FUNCTION SET UP", then press  $\nabla$ .
- 3 Press  $\triangleleft \triangleright$  to select "DISPLAY SET", then press  $\nabla$ .
- 4 Press  $\triangle \nabla$  to select "ON SCREEN LANGUAGE", then press **ENTER**.
- 5 Press  $\triangle \nabla$  to select your desired language, then press **ENTER**.
- 6 Press **SET UP** to complete the setting.

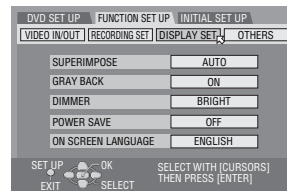


## Menu/Audio/Subtitle Language Set (DVD deck only)

Some DVD discs contain the DVD menu display, audio and subtitles in multiple languages. With these discs, you can set the default language as you like.

- The procedure shows how to set "MENU LANGUAGE" as an example.

- 1 Press **DVD** so that the DVD lamp lights up on the unit.
- 2 Press **SET UP** to access the Main Menu screen.
- 3 Press  $\triangleleft \triangleright$  to select "DVD SET UP", then press  $\nabla$ .
- 4 Press  $\triangleleft \triangleright$  to select "LANGUAGE SET", then press  $\nabla$ .
- 5 Press  $\triangle \nabla$  to select "MENU LANGUAGE", then press **ENTER**.
- 6 Press  $\triangle \nabla$  to select your desired language, then press **ENTER**.

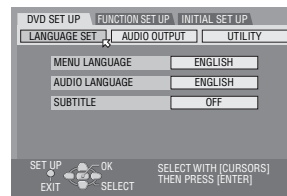

- See "Language Code List" (pg. 81).

- 7 Press **SET UP** to complete the setting.


### NOTE:

When the selected language is not available on the disc, the disc's default menu language is played back.

## Clock Set

Perform clock setting only if the clock has not been set correctly by the Plug&Play setting.

- Turn on the unit.
- Turn on the TV and select the AV mode.

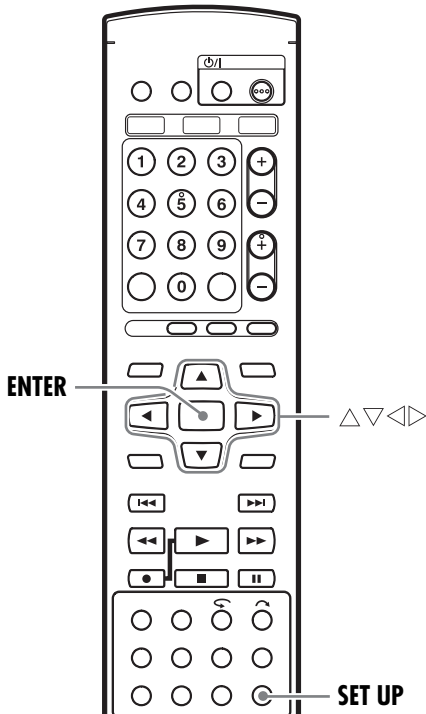

### Semiauto Clock Set

You can change the host channel/D.S.T. (Daylight Saving Time)/time zone setting manually.

#### NOTE:

The time set previously will be erased when "AUTO CLOCK", "HOST CH", "D.S.T." or "TIME ZONE" setting is changed.

- 1 Press **SET UP** to access the Main Menu screen.
- 2 Press ◀▶ to select "INITIAL SET UP", then press ▽.
- 3 Press ◀▶ to select "CLOCK SET", then press ▽.

- 4 Press Δ▽ to select "AUTO CLOCK", then press **ENTER**. Press Δ▽ to select "ON", then press **ENTER**.

- 5 Press Δ▽ to select "HOST CH", then press **ENTER**. Press Δ▽ to select "AUTO" or the desired PBS channel number, then press **ENTER**.

#### NOTE:


Some PBS channels do not transmit clock setting data.

- 6 Press Δ▽ to select "D.S.T.", then press **ENTER**. Press Δ▽ to select the desired setting, then press **ENTER**.

**AUTO:** Select if you want to adjust your unit's clock automatically by the incoming signal from the host channel. Be sure to select the correct time zone manually in step 7.

**ON:** Adjustment will be made by the built-in clock itself.

**OFF:** Select when Daylight Saving Time does not apply to you.

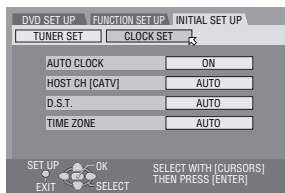

- 7 Press Δ▽ to select "TIME ZONE", then press **ENTER**. Press Δ▽ to select "AUTO" or the desired time zone, then press **ENTER**.
  - Each time you press Δ▽, the time zone changes as follows:  
 ↔AUTO↔ATLANTIC↔EASTERN↔CENTRAL↔MOUNTAIN↔PACIFIC↔ALASKA↔HAWAII↔  
 (back to the beginning)

#### NOTE:

If an incorrect time is displayed by the Plug & Play function, you may be receiving the clock setting data of a PBS channel from an adjacent time zone or from an incorrect PBS channel from a cable TV system. If you selected "AUTO" for the host channel in step 5, be sure to select the correct time zone manually.

- 8 Press **SET UP** to complete the setting.

#### IMPORTANT:

Turn off the unit after performing Semiauto Clock. "AUTO" will appear on the front display panel while the clock is being set. The current clock time will appear automatically when the clock setting is complete.

### Auto Daylight Saving Time

This function enables automatic adjustment of the unit's clock at the start and end of Daylight Saving Time.

With Auto DST activated, —

— on the first Sunday of April at 2:00 AM, the clock is adjusted to 3:00 AM.

— on the last Sunday of October at 2:00 AM, the clock is adjusted to 1:00 AM.

#### NOTE:

Timer recording may not function correctly at the time Daylight Saving Time is adjusted.

### Manual Clock Set

- 1 Press **SET UP** to access the Main Menu screen.
- 2 Press ◀▶ to select "INITIAL SET UP", then press ▽.
- 3 Press ◀▶ to select "CLOCK SET", then press ▽.
- 4 Press Δ▽ to select "AUTO CLOCK", then press **ENTER**. Press Δ▽ to select "OFF", then press **ENTER**.

- 5 Press Δ▽ to select "TIME", then press **ENTER**. Press Δ▽ until the desired time appears, then press **ENTER**.

- 6 Press ◀▶ to select "OK", then press **ENTER** for confirmation.

- 7 Set the date and year in the same way as in step 5.


- Holding Δ▽ changes the time in 30-minutes interval, or changes the date in 15-days interval.

- 8 Press Δ▽ to select "D.S.T.", then press **ENTER**. Press Δ▽ to select the desired setting, then press **ENTER**.

**ON:** Adjustment will be made by the built-in clock itself.


**OFF:** Select when Daylight Saving Time does not apply to you.

- 9 Press **SET UP** to complete the setting.

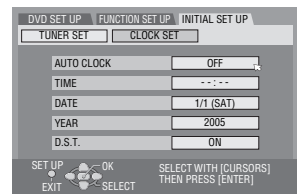

## Tuner Set

- Turn on the unit.
- Turn on the TV and select the AV mode.

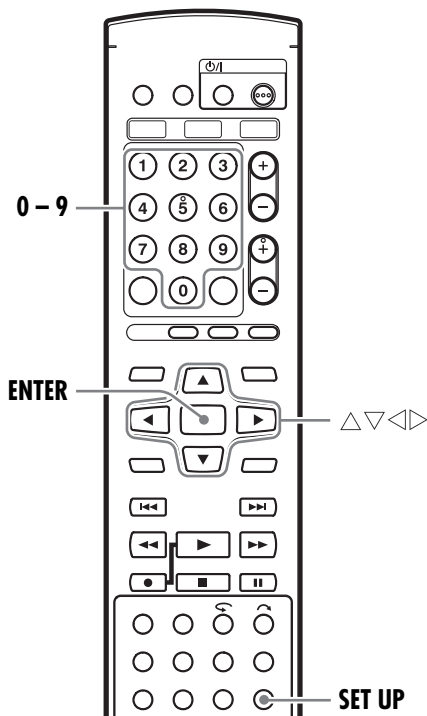

### INFORMATION

The unit selects the correct band (TV or CATV) automatically during Auto Channel Set. The selected band will be displayed on the right side of "BAND" on the Tuner Set screen.

## Auto Channel Set


Perform Auto Channel Set only if channels have not been set correctly by the Plug&Play setting.

- 1 Press **SET UP** to access the Main Menu screen.
- 2 Press  $\triangleleft \triangleright$  to select "INITIAL SET UP", then press  $\nabla$ .
- 3 Press  $\triangleleft \triangleright$  to select "TUNER SET", then press  $\nabla$ .

- 4 Press  $\triangle \nabla \triangleleft \triangleright$  to select "AUTO CH SET", then press **ENTER**. You can automatically set the receivable channels in your area in the order of their frequencies.

- When Auto Channel Set is complete, "SCAN COMPLETED" appears on the TV screen.
- If the scan was unsuccessful, "SCAN COMPLETED-NO SIGNAL-" appears on screen. Check the connections and start again.

- 5 Press **SET UP** to complete the setting.

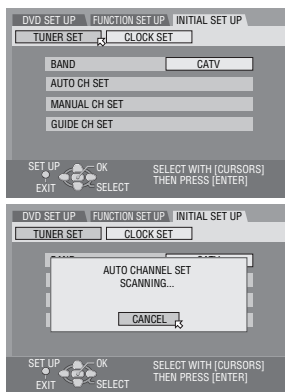

## Manual Channel Set

You can add the channels you want or delete the channels you do not want manually.


- 1 Press **SET UP** to access the Main Menu screen.
- 2 Press  $\triangleleft \triangleright$  to select "INITIAL SET UP", then press  $\nabla$ .
- 3 Press  $\triangleleft \triangleright$  to select "TUNER SET", then press  $\nabla$ .
- 4 Press  $\triangle \nabla \triangleleft \triangleright$  to select "MANUAL CH SET", then press **ENTER**.
- 5 Add or skip the desired channels.

### To add channels

- 1 Press  $\triangle \nabla$  to select "CH", then press **ENTER**.
- 2 Press the **number buttons** to enter a channel number you want to add, then press **ENTER**.
- 3 Press  $\triangle \nabla$  to select "ADD/SKIP", then press **ENTER**.
- 4 Press  $\triangle \nabla$  to select "ADD", then press **ENTER**.
- 5 Repeat **2** - **4** to add other channels.

### To skip channels


- 1 Press  $\triangle \nabla$  to select "CH", then press **ENTER**.
- 2 Press  $\triangle \nabla$  to select a channel number you want to skip, then press **ENTER**.
- 3 Press  $\triangle \nabla$  to select "ADD/SKIP", then press **ENTER**.
- 4 Press  $\triangle \nabla$  to select "SKIP", then press **ENTER**.
- 5 Repeat **2** - **4** to skip other channels.
- 6 Press **SET UP** to complete the setting.

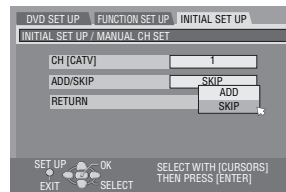


## Monitor Set

You can select the monitor type depending on the TV used when you play back DVD VIDEO discs recorded for wide-screen TVs.

- Turn on the unit.
- Turn on the TV and select the AV mode.

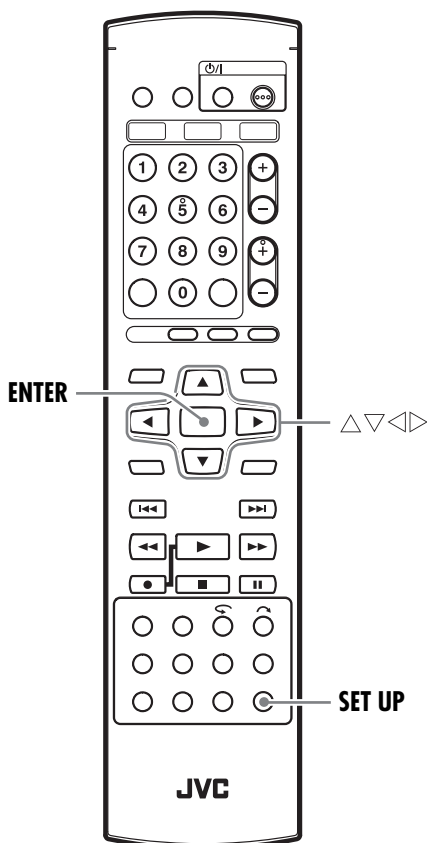

- 1 Press **SET UP** to access the Main Menu screen.
- You cannot set the monitor type during recording or playback.
- 2 Press  $\triangleleft \triangleright$  to select "FUNCTION SET UP", then press  $\nabla$ .
- 3 Press  $\triangleleft \triangleright$  to select "VIDEO IN/OUT", then press  $\nabla$ .
- 4 Press  $\triangle \nabla$  to select "MONITOR TYPE", then press **ENTER**.
- 5 Press  $\triangle \nabla$  to select the desired option, then press **ENTER**.
- 6 Press **SET UP** to complete the setting.

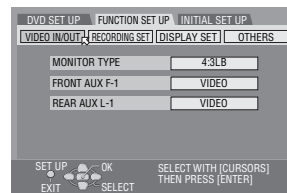

\* The **boldface** settings below indicate the settings at your purchase.

### ■ MONITOR TYPE — **4:3LB** / 4:3PS / 16:9 AUTO / 16:9 FIX

**4:3LB** (Letter Box conversion): Select this when the aspect ratio of your TV is 4:3 (conventional TV). While viewing a wide screen picture, the black bars appear on the top and the bottom of the screen.

**4:3PS** (Pan&Scan): Select this when the aspect ratio of your TV is 4:3 (conventional TV). While viewing a wide screen picture, the black bars do not appear; however, the left and right edges of the pictures will not be shown on the screen.

**16:9 AUTO** (Wide television conversion): Select this when the aspect ratio of your TV is 16:9 (wide TV).

**16:9 FIX** (Wide television conversion): Select this when the aspect ratio of your TV is fixed to 16:9 (wide TV). The unit automatically adjusts the screen width of the output signal correctly when playing back a picture whose aspect ratio is 4:3.

### Pan&Scan/Letter Box

In general, DVD VIDEO disc are produced for a wide-screen TV with 16:9 aspect ratio.

Material with this ratio will not fit to a TV with 4:3 aspect ratio.

There are two styles to display the image, "Pan&Scan" (PS) and "Letter Box" (LB).

#### Pan&Scan

The right and left side of the image are cut off. The image fills the screen.

- The picture will be shown in the "4:3LB" mode depending on the disc even if the "4:3PS" mode is selected.




#### Letter Box

Black bands appear at the top and bottom of the image. The image itself appears in 16:9 aspect ratio.




# Playback

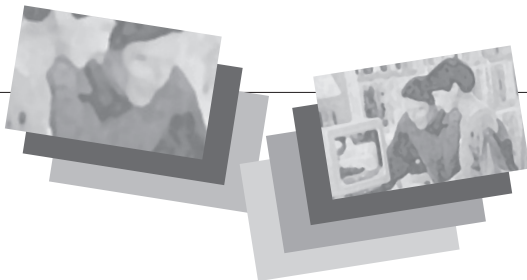

DVD .....	26
Playback of the program being recorded (Live Memory playback) .....	47
How to search and manage the DVD titles (Navigation) .....	60
VHS .....	27

# Recording

DVD .....	28
About recording mode.....	29
VHS .....	30
About recording mode.....	30

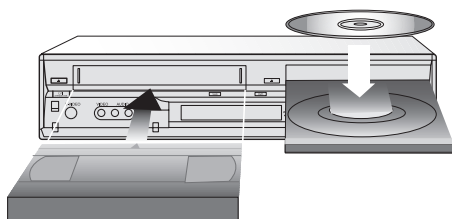


**W** *hat do you*




# Timer recording


Setting timer manually ..... 31  
How to record a satellite program ..... 35

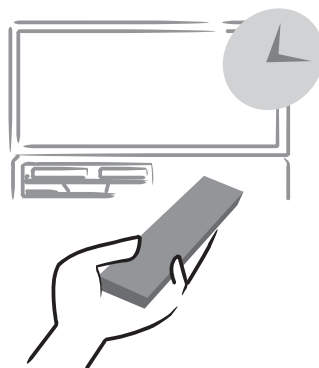

# Dubbing

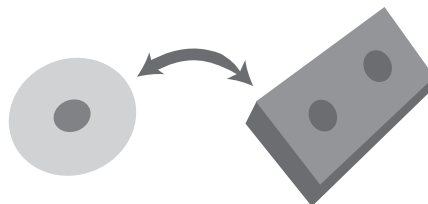

From VHS to DVD ..... 36  
From DVD to VHS ..... 38


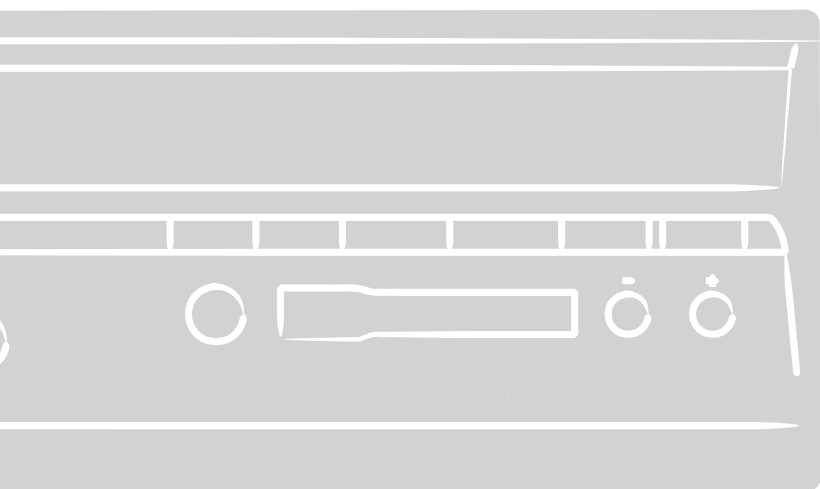


*want to do?*

## Basic Playback (DVD)



- Turn on the unit.
- Turn on the TV and select the AV mode.

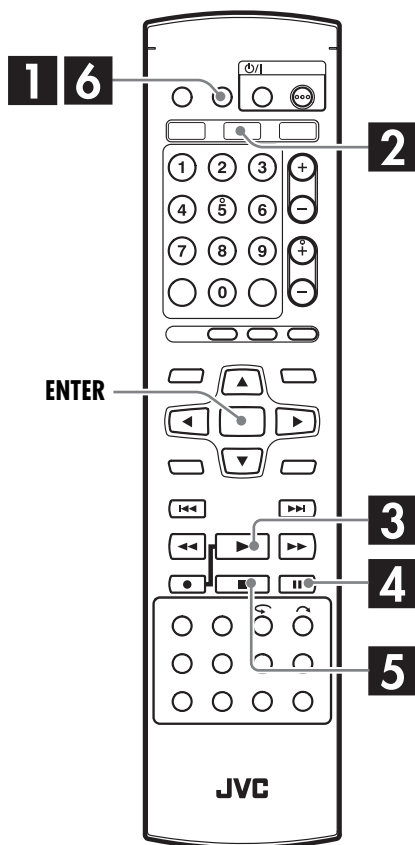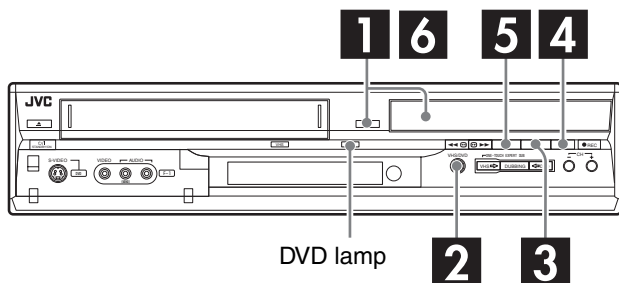

### ATTENTION:

- It takes approximately 30 seconds to read a disc depending on the type and condition of the disc since this unit is multi-disc compatible (DVD-RAM, DVD-RW, DVD-R). It may even take several minutes when a disc is dirty, scratched or warped.
- It may take a few seconds to start playback. This is not a malfunction.
- Forward/reverse high-speed search and other operations cannot be performed while playback is stopped.

To play back an MP3/JPEG disc, see “Playback With MP3/JPEG Navigation” (➤ pg. 66).

### 1 Load a disc.

- For details, refer to “Placing A Disc” (➤ pg. 11).
- Playback begins automatically if an auto-playback DVD disc is loaded.

### 2 Press VHS/DVD on the unit repeatedly or DVD on the remote control so that the DVD lamp lights up on the unit.

### 3 Press ► to start playback.

- If you load a DVD disc whose region code does not match the unit, “REGION CODE ERROR” appears on the TV screen. For details, refer to “Region Number” (➤ pg. 9).
- With Video CD discs with PBC control or some DVD discs, the menu display may appear on the TV screen after starting playback. In this case, select an item which you want to play back from the menu. Otherwise, the playback cannot go forward. Refer to “Playback Control (PBC) Function” (➤ pg. 46) or “Locating A Desired Scene Using The DVD Menu” (➤ pg. 43).
- The Library Database DVD Navi also enables you to search and select the desired titles. (➤ pg. 61)

### 4 Press II to pause playback.

- To resume normal playback, press ►.

### 5 Press ■ to stop playback.

- When a recordable disc is played, playback stops and a program received with the unit’s tuner resumes on the TV screen.
- When a playback-only disc is played, playback stops and the TV screen becomes all blue when you press ■. Pressing ■ again resumes a program received with the unit’s tuner.
- If ▲ (OPEN/CLOSE) is pressed during playback, playback stops, then the disc tray opens.



### 6 To eject the disc, press ▲ (OPEN/CLOSE).

#### NOTE:

When the Library Database DVD Navi screen appears, choose a thumbnail image of the desired title on the TV screen, then press ENTER. (➤ pg. 61)

## Basic Playback (VHS)

- Turn on the unit.
- Turn on the TV and select the AV mode.

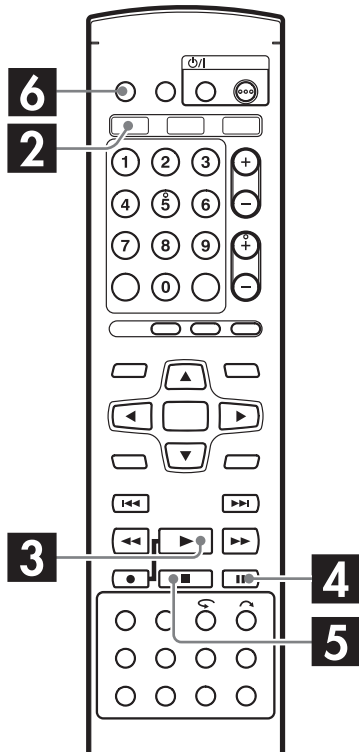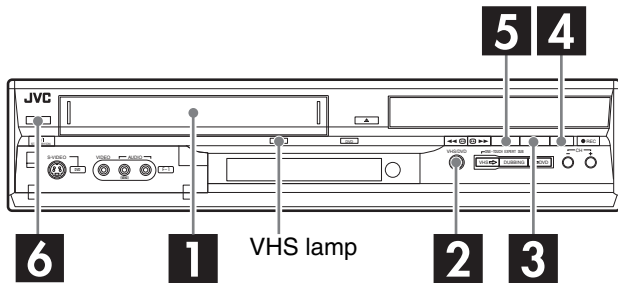

### Clean the video heads using a dry cleaning cassette when:

- Rough, poor picture appears while a tape is played back.
- The picture is unclear or no picture appears.

#### NOTE:

The heads get dirty in the following cases:

- in an environment prone to extreme temperature or humidity
- in a dusty environment
- flaw, dirt or mold on video tapes
- continuous usage for a long time

### 1 Load a cassette.

- Make sure the window side is up, the rear label side is facing you and the arrow on the front of the cassette is pointed toward the unit.
- Do not apply too much pressure when inserting.
- If the record safety tab has been removed, playback begins automatically.
- The unit's power comes on automatically and the counter is reset to 0:00:00.

### 2 Press VHS/DVD on the unit repeatedly or VHS on the remote control so that the VHS lamp lights up on the unit.

### 3 Press ► to start playback.

### 4 Press II to pause playback.

- To resume normal playback, press ►.

### 5 Press ■ to stop playback.

### 6 To eject the cassette, press ▲ (EJECT).

### Usable cassettes

#### Full-Size VHS

T-30 (ST-30\*\*) / T-60 (ST-60\*\*) / T-90 / T-120 (ST-120\*\*) / T-160 (ST-160\*\*) / ST-210\*\*

#### Compact VHS\*

TC-20 (ST-C20\*\*)

TC-30 (ST-C30\*\*)

TC-40 (ST-C40\*\*)

\* Compact VHS

camcorder recordings

can be played on this

unit. Simply place the

recorded cassette into a VHS Cassette Adapter and it can be used just like any full-sized VHS cassette.


\*\* This unit can record on regular VHS and Super VHS cassettes.

However, it will record regular VHS signals only.

• S-VHS recording is not possible with this unit.

• This unit is equipped with SQPB (S-VHS QUASI PLAYBACK) that lets you watch tapes recorded in the S-VHS format with regular VHS resolution.

• SQPB does not deliver Super VHS resolution.

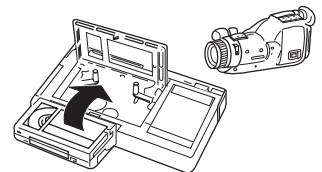



## Basic Recording (DVD)

DVD RAM DVD R DVD RW

- Turn on the unit.
- Turn on the TV and select the AV mode.

### ATTENTION:

It is not possible to record programs on a DVD-R disc which has already been finalized.

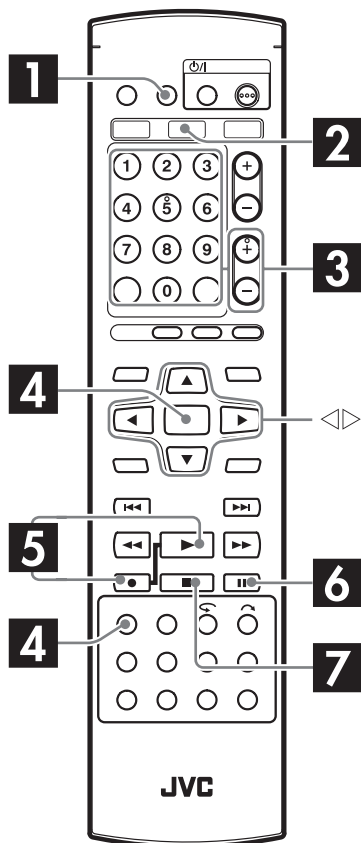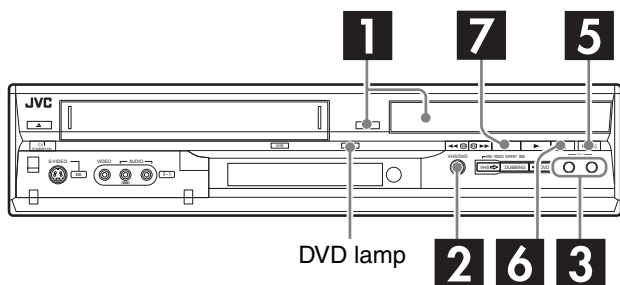

### 1 Load a recordable disc.

- For details, refer to “Placing A Disc” (pg. 11).

### 2 Press VHS/DVD on the unit repeatedly or DVD on the remote control so that the DVD lamp lights up on the unit.

### 3 Press CH +/- or the number buttons to select the channel you wish to record.

- If you record the programs received by cable box or DBS receiver ...

- 1) Select “L-1” by pressing CH +/-.
- 2) Set the cable box or DBS receiver to the appropriate channel.

### 4 Press REC MODE repeatedly to select the recording mode, then press ENTER.

- Each time you press REC MODE, the recording mode changes as follows:

XP → SP → LP → EP → FR60–FR360\* → FR420, FR480 → (Back to the beginning)

\* The value is selectable from 1 to 6 hours in 5-minutes interval by pressing <|> repeatedly after selecting “FR60–FR360”. To change the value in 30-minutes interval, press and hold <|>.

- For details on the recording mode, see “Recording Mode” (pg. 29).

### 5 Press ● on the unit to start recording. Or while holding ●, press ► on the remote control.

### 6 Press II to pause recording.

- To resume recording, press ►.

### 7 Press ■ to stop recording.

- It takes about 10 seconds to end the writing session when you stop recording.

**NOTES:**

- It is recommended to format a DVD-RAM disc before use if you use the disc on this unit for the first time.
- When using a brand-new DVD-RW disc, format the disc either in VR mode or in Video mode. (☞ pg. 74)
- Recordings made on DVD-R/RW disc must be finalized to play back on other DVD players. Perform “Finalize A Disc (DVD Deck Only)” (☞ pg. 75).
- You can record up to 99 programs and 999 play lists on each disc.
- Some programs can only be recorded one time.
- When recording is started, an index of the first part of recording is automatically recorded. (☞ pg. 60) To record satellite programs, refer to page 35. To delete the index, refer to page 62.
- Recording sometimes may stop or cannot be performed even if there is enough available capacity remaining on the disc.

**Recording Mode**

MPEG2 format is used as recording format. As a guide for picture quality, the “bps” unit is used to represent how much data can be recorded per second. The larger this value is, the better the picture quality becomes but more capacity is required for the recording. Select XP or SP for programs where quick movement occurs, such as sports programs, and LP or EP for talk shows, etc. with relatively less movement.

The recording modes for a 4.7 GB disc are set as follows:

Recording mode	Recording amount (approx.)	Maximum recording time (approx.)
XP	9.4 Mbps	1 hour
SP	5 Mbps	2 hours
LP	2.5 Mbps	4 hours
EP	1.6 Mbps	6 hours
FR60–FR360* (☞ pg. 58)	The amount varies depending on the selected time.	1 – 6 hours
FR420*		7 hours
FR480*		8 hours



\* For details on FR mode, refer to “Free Rate Function” (☞ pg. 58)

**Recording Resume Function**

If there is a power outage during recording, Instant Timer Recording (ITR) (☞ pg. 57) or timer recording (☞ pg. 31), the recording will resume automatically when power is restored to the unit unless the unit’s memory backup has expired.


## Basic Recording (VHS)

- Turn on the unit.
- Turn on the TV and select the AV mode.

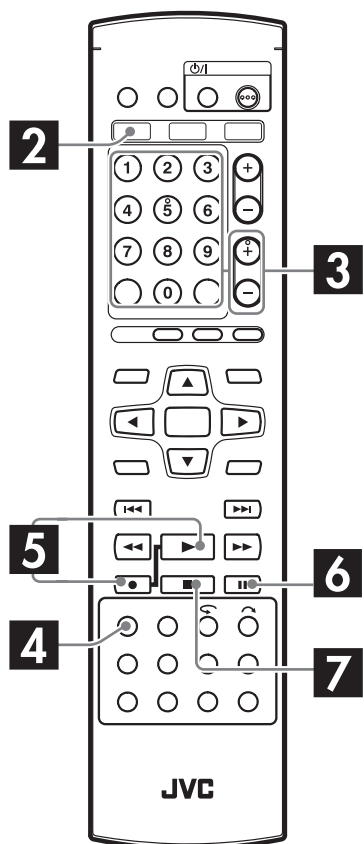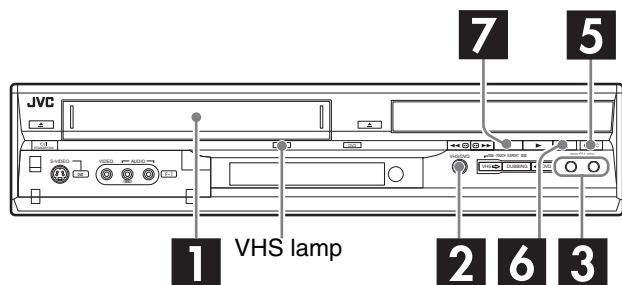

### Accidental erasure prevention

To prevent accidental recording on a recorded cassette, remove its safety tab. To record on it later, cover the hole with adhesive tape.

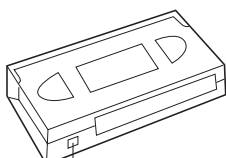

Record safety tab

### 1 Load a cassette with the record safety tab intact.

- The unit's power comes on automatically and the counter is reset to 0:00:00.

### 2 Press VHS/DVD on the unit repeatedly or VHS on the remote control so that the VHS lamp lights up on the unit.

### 3 Press CH +/- or the number buttons to select the channel you wish to record.

- If you record the programs received by cable box or DBS receiver ...
  - 1) Select "L-1" by pressing CH +/-.
  - 2) Set the cable box or DBS receiver to the appropriate channel.

### 4 Press REC MODE repeatedly to set the recording mode.

### 5 Press ● on the unit to start recording. Or while holding ●, press ► on the remote control.

### 6 Press II to pause recording.

- You can select channel during the Record Pause mode.
- To resume recording, press ►.

### 7 Press ■ to stop recording.

### Recording Resume Function

If there is a power outage during recording, Instant Timer Recording (ITR) (⇨ pg. 59) or timer recording (⇨ pg. 31), the recording will resume automatically when power is restored to the unit unless the unit's memory backup has expired.

### Recording Mode


Recording mode	Maximum recording time (approx.)	Use
SP	2 hours	Select when the picture quality is important.
EP	6 hours	Select when the time is important. You can record 3 times longer than SP mode.

# Manual Timer Programming



You can program each deck to timer-record as many as 8 programs up to 30 days ahead.

- Make sure that the unit's built-in clock is set properly.
- Turn on the unit.
- Turn on the TV and select the AV mode.

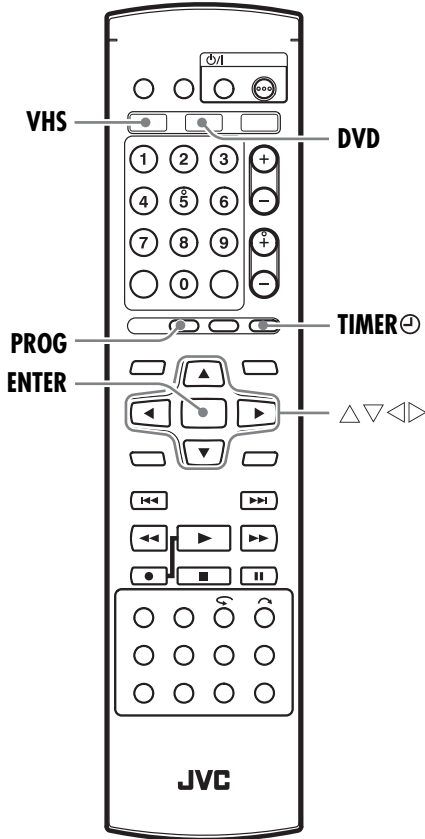

## Cable Box and DBS Receiver Users (DVD Deck Only)

To timer-record a satellite broadcast using Manual Timer Programming:

- 1 Perform "Manual Timer Programming".
- 2 Set the cable box or DBS receiver to the appropriate channel before the selected program begins.
- 3 Select "L-1" in step 8.
- 4 Leave the cable box or DBS receiver's power on.

### NOTES:

- When two successive programs are recorded on a DVD-RW disc with Manual Timer Programming function, the beginning of the second one may be left off the recording.
- If the copy limited program is received during timer-recording, the unit enters Record Pause mode. Recording starts again if it is switched to a recordable broadcast during the time you programmed.
- In case of a power failure after programming, the unit's memory backup keeps your selections for approximately 5 seconds.
- Programs that start after midnight must have the next day's date.
- To record the programs received by cable box or DBS receiver, record on the DVD discs. For details, refer to "Cable Box and DBS Receiver Users (DVD Deck Only)" above.

**1** Press **DVD** or **VHS** to select the deck on which you want to perform timer programming.

**2 For DVD deck**


Load a recordable disc.

**For VHS deck**

Load a cassette with safety tab intact.

**3** Press **PROG** to access the Program Check screen.

- When "PROGRAM FULL DELETE UNWANTED TIMER PROGRAM" appears on the TV screen, you need to cancel some of the reserved programs. (☞ pg. 34)

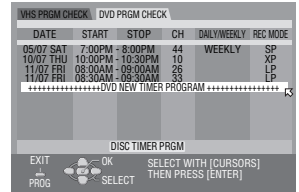


**4 For DVD deck**

Press  $\Delta \nabla \triangleleft \triangleright$  to select "DVD PRGM CHECK" and press  $\Delta \nabla$  to select "DVD NEW TIMER PROGRAM", then press **ENTER**.

**For VHS deck**

Press  $\Delta \nabla \triangleleft \triangleright$  to select "VHS PRGM CHECK" and press  $\Delta \nabla$  to select "VHS NEW TIMER PROGRAM", then press **ENTER**.

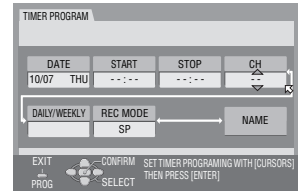

**5** Press  $\Delta \nabla$  to set the desired date.

- The current date appears on the TV screen. The date you enter appears in its place.

**6** Press  $\triangleleft \triangleright$  to select "START", then press  $\Delta \nabla$  to set the desired start time.

- Each press of  $\Delta \nabla$  advances/goes back the start time in 1-min. increments.
- To advance/go back the start time in 30-min. increments, press and hold  $\Delta \nabla$ .

**7** Press  $\triangleleft \triangleright$  to select "STOP", then press  $\Delta \nabla$  to set the desired stop time.

- Each press of  $\Delta \nabla$  advances/goes back the stop time in 1-min. increments.
- To advance/go back the stop time in 30-min. increments, press and hold  $\Delta \nabla$ .

**8** Press  $\triangleleft \triangleright$  to select "CH", then press  $\Delta \nabla$  to select the desired channel.

**9** Press  $\triangleleft \triangleright$  to select the desired recording option as required. Press  $\Delta \nabla$  to select the desired setting, then press **ENTER**.

- "STOP" (To advance/go back the stop time by 30 minutes, press and hold  $\Delta \nabla$ ).
- "DAILY/WEEKLY" (☞ below "Weekly/Daily Recording")
- "REC MODE" (☞ pg. 29, 30, "Recording Mode")
- "NAME" (☞ pg. 62, "Modify Title Name") (DVD deck only)

**10** Press **ENTER** to access the Program Confirmation screen.

**11** Press **ENTER** to complete timer programming.

- To program another timer, repeat steps 3 – 11.
- If "PROGRAM OVERLAPPED" appears on the TV screen, see page 34.

**12** Press **TIMER**  $\odot$  to engage the unit's timer mode. The DVD timer lamp lights up on the unit and the unit is automatically turned off.

- To disengage the timer mode, press **TIMER**  $\odot$  again.

## Weekly/Daily Recording

You can record programs with one of the following weekly/daily timer settings.

**WEEKLY:** Select to record a weekly program.

**MON-FRI:** Select to record a daily program from Monday through Friday.

**MON-SAT:** Select to record a daily program from Monday through Saturday.

**SUN-SAT:** Select to record a daily program from Sunday through Saturday.

# On-Disc Timer Programming (DVD Deck Only)




On-Disc Timer Programming is a function used with discs that are especially intended for a specific program. The disc is then programmed for a program you always watch every day or every week. Since older programs are automatically overwritten, a single DVD-RAM/RW (VR mode) disc can be used without worrying about how much recording capacity remains. (☞ pg. 33) You can program each disc to timer-record as many as 8 programs.

- Make sure that the unit's built-in clock is set properly.
- Turn on the unit.
- Turn on the TV and select the AV mode.

### ATTENTION:

- On-Disc Timer Programming is possible only with the disc for On-Disc Timer Programming.
- If data is recorded on a disc for On-Disc Timer Programming using a unit from another manufacturer, On-Disc Timer Programming may no longer function properly.

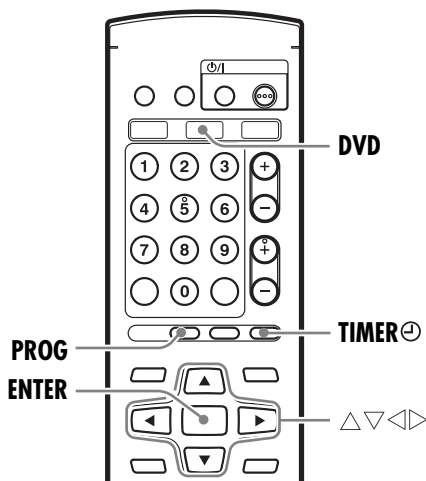

## To Make The Disc For On-Disc Timer Programming

- 1 Load a recordable disc.
- 2 Press **DVD** so that the DVD lamp lights up on the unit.
- 3 Press **PROG** to access the Program Check screen.
- 4 **When On-Disc Timer Programming is made for the first time on the disc**  
Press  $\triangle\nabla$  to select "DISC TIMER PRGM", then press **ENTER**.
  - When some programs are recorded on the disc, a caution message appears. In such a case, backup the programs as required, then format the disc before making On-Disc Timer Programming. (☞ pg. 74)

### When On-Disc Timer Programming has already been made on the disc

Press  $\triangle\nabla$  to select "DISC NEW TIMER PROGRAM", then press **ENTER**.

- 5 Press  $\triangle\nabla$  to set the desired date.
  - The current date appears on the TV screen. The date you enter appears in its place.
- 6 Press  $\triangleleft\rangle$  to select "START", then press  $\triangle\nabla$  to set the desired start time.
  - Each press of  $\triangle\nabla$  advances/goes back the start time in 1-min. increments.
  - To advance/go back the start time in 30-min. increments, press and hold  $\triangle\nabla$ .

7 Press  $\triangleleft\rangle$  to select "STOP", then press  $\triangle\nabla$  to set the desired stop time.

- Each press of  $\triangle\nabla$  advances/goes back the stop time in 1-min. increments.
- To advance/go back the stop time in 30-min. increments, press and hold  $\triangle\nabla$ .

8 Press  $\triangleleft\rangle$  to select "CH", then press  $\triangle\nabla$  to select the desired channel.

9 Set "DAILY/WEEKLY" option.

- Refer to step 9 in "Manual Timer Programming" (☞ pg. 31).
- It is necessary to set "DAILY/WEEKLY" option for On-Disc Timer Programming. (☞ pg. 31, "Weekly/Daily Recording")

10 Set the other recording options as required.

- You can select XP, SP, LP, EP or FR480 mode for "REC MODE". However, you cannot select FR (JUST), FR60-FR360 and FR420.
- Refer to step 9 in "Manual Timer Programming" (☞ pg. 31).
- It is not possible to use the Free Rate function. (☞ pg. 58)

11 Press **ENTER** to access the Program Confirmation screen.

12 Press **ENTER** to complete timer programming.

- To program another timer, repeat steps 3 – 12.

### Cable Box and DBS Receiver Users

To timer-record a satellite broadcast using the On-Disc Timer Programming function:

- 1 Perform "On-Disc Timer Programming (DVD Deck Only)".
- 2 Set the cable box or DBS receiver to the appropriate channel before the selected program begins.
- 3 Select "L-1" in step 8.
- 4 Leave the cable box or DBS receiver's power on.

## To Timer-record The Program With The Programed Disc

1 Load a programed disc.

2 Press **TIMER**  $\ominus$ . The unit turns off and "DISC  $\downarrow$ " appears on the front display panel. The DVD timer lamp also lights up on the unit and the unit is automatically turned off.

- To disengage the timer mode, press **TIMER**  $\ominus$  again.

### NOTES:


- On-Disc Timer Programming is not possible on a DVD-RW disc formatted in video mode. (☞ pg. 74)
- The information of a program recorded with On-Disc Timer Programming is not stored in the library. (☞ pg. 65)
- The play list is not created for the programs recorded with On-Disc Timer Programming. (☞ pg. 63)
- Basic Recording (☞ pg. 28), and Manual Timer Programming (☞ pg. 31) are not possible on the On-Disc Timer programed disc.
- The beginning of a program may not be recorded. Also, if the 1st program's recording stop time and the 2nd program's recording start time is the same, the ending of the 1st program may not be recorded.
- If there is a power cut while recording, the recordings before the power cut are not guaranteed.



## How Discs Are Overwritten


**(Example 1)**

To record a 1-hour serial drama every Friday in SP mode

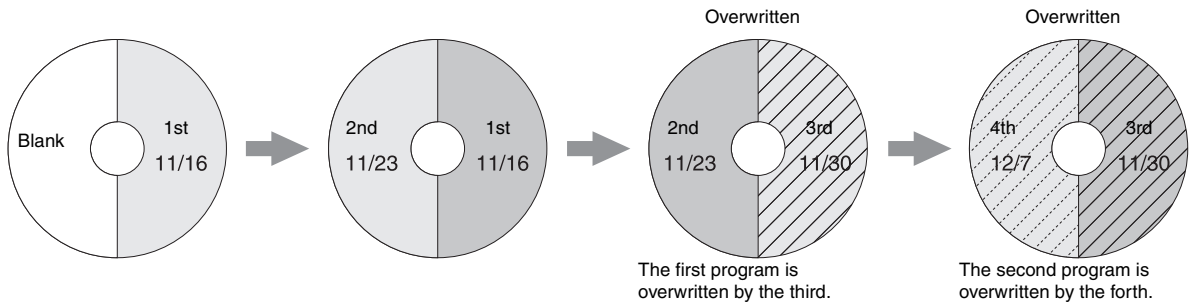


**(Example 2)**

To record a 15-minute serial drama every morning in XP mode

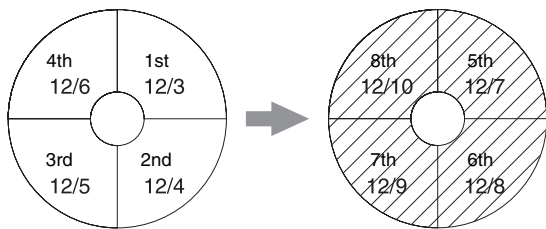


**(Example 3)**

To record a 90-minute serial drama every Sunday in SP mode

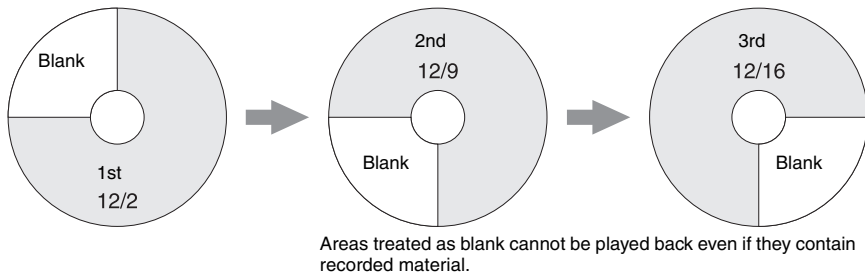


**NOTE:**


On-Disc Timer Programming may not always work as these examples.

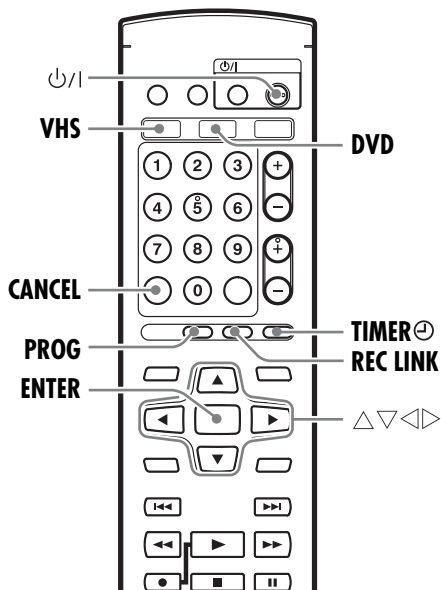

## Check, Cancel And Change Programs

### 1 When the DVD timer indicator lights on the front display panel

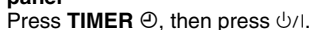Press **TIMER** , then press  $\psi/I$ .

When “**DISC** ” lights on the front display panel and the DVD timer indicator also lights up on the front display panel.

Press  $\psi/I$ .

When “**R-LK**” lights on the front display panel

Press **REC LINK**, then press  $\psi/I$ .

**2** Press **PROG** to access the Program Check screen, then press  $\triangle \nabla \triangleleft \triangleright$  to select “VHS PRGM CHECK” or “DVD PRGM CHECK”.

- To return to the previous screen after you check the program, press **PROG** again.

#### To cancel the program

Press  $\triangle \nabla$  to select a program to be cancelled, then press **CANCEL**.

**3** Press  $\triangle \nabla$  to select the program, then press **ENTER**. The program screen appears.

**4** Change the settings of the desired recording options as required.

- Refer to steps 5 – 10 in “Manual Timer Programming” (pg. 31).

**5** Press **PROG** to complete timer correction. The normal screen resumes.

**6** For Manual or On-Disc Timer Programming (DVD deck only) Press **TIMER** .

#### For Automatic Satellite Program Recording

Press **REC LINK** for 2 seconds or more.

- The DVD timer indicator also lights up on the front display panel and the VHS deck is automatically selected. When the VHS deck is in timer standby mode, the unit is automatically turned off.

#### NOTE:

When you check, cancel and change a On-Disc Timer Programming, be sure to insert the On-Disc Timer programmed disc.

#### Program’s information on the front display panel

You can check the details of the programs even when the power is turned off. (it is necessary that the Power Save mode (pg. 71) is disengaged or the unit is not in timer standby mode.) However, it is not possible to cancel or change the program’s setting.

**1** Press **PROG**.

- “NEW PROG” or “P-1” (if 8 programs have already been set) appears.

**2** Press  $\triangle \nabla$  until the desired program number (“P-1” to “P-8”) appears, then press **ENTER**.

**3** Press  $\triangleright$ .

- Each time you press  $\triangleright$ , the indication changes as follows (the settings in parentheses are examples):  
Date (“DATE 03.08SU”) → Start time (“ON 11:00AM”) → Stop time (“OFF 11:30AM”) → Channel (“CH 1”) → Weekly/Daily (“MO-FR DAILY”) → Program number (“P-1”) and recording mode (“SP”) → (Back to the beginning)

**4** Press **PROG** to complete checking.

- The normal display resumes.

## When Programs Overlap Each Other

If “PROGRAM OVERLAPPED” appears, you have another program overlapping the program you have just made.

Confirm with the arrow on “OK”, then press **PROG**. The Program Check screen appears and conflicting programs will be highlighted in pink.

**Example: Program 3 (you have just made) and program 4 overlap each other.**

**1** Confirm the overlapping programs. Overlapping programs appear on the TV screen.

DATE	START	STOP	CH	DAILY/WEEKLY	REC MODE
05/07 SAT	7:00PM - 8:00PM	44	WEEKLY	SP	
10/07 THU	10:00PM - 10:30PM	10	XP		
11/07 FRI	08:00AM - 08:00AM	26	LP		
11/07 FRI	08:30AM - 09:30AM	33	LP		
*****DVD NEW TIMER PROGRAM*****					

#### NOTE:

If you do not mind this overlap, press **PROG** to finish the timer program setting. The program whose start time is earlier will be recorded and the other one will not be recorded correctly.

**2** Press  $\triangle \nabla$  to select the desired program to be cancelled or changed.

- If program on the DVD deck and program on VHS deck overlap each other, ★ mark appears on the left of the date of each item. Press  $\triangle \nabla \triangleleft \triangleright$  to select “VHS PRGM CHECK” or “DVD PRGM CHECK”, then select the program to be cancelled or changed.

#### To cancel the program

Press **CANCEL**.

- “THE TIMER PROGRAMING SETTING WAS CANCELLED” appears on the TV screen for about 5 seconds, then the normal screen resumes.

#### To change the program setting

Press **ENTER**, then go to step 3.

**3** Change the program setting.

- Refer to steps 5 – 10 in “Manual Timer Programming” (pg. 31).

**4** Press **PROG** to check if the conflict has been settled. The Program Check screen appears.

**5** Engage the unit’s timer mode.

- Refer to step 6 in “Check, Cancel And Change Programs” (pg. 34).

#### NOTE:

When any overlaps remain after deletion and modification of programs, the Program Check screen remains showing the conflicting programs. In such a case, repeat the procedure above until the conflict is solved.


# Automatic Satellite Program Recording (DVD Deck Only)

This function allows you to automatically record a satellite program which is timer-programmed on your external DBS receiver. Connect a DBS receiver to the unit's [S VIDEO/VIDEO/AUDIO INPUT L-1] connectors and program the timer on the DBS receiver. The unit starts or stops recording by the signals input from the DBS receiver. After recording, the unit's power shuts off automatically.

- You can also connect the cable box if it has a timer.

### ATTENTION:

- Be sure not to turn on the DBS receiver before the program is executed; otherwise, the unit will start recording when the DBS receiver's power is turned on.
- If you have connected another appliance other than a DBS receiver to the [S VIDEO/VIDEO/AUDIO INPUT L-1] connectors, be sure not to engage the Automatic Satellite Program Recording mode; otherwise, the unit will start recording when the connected appliance's power is turned on.
- Automatic Satellite Program Recording and timer-recording cannot be done at the same time.

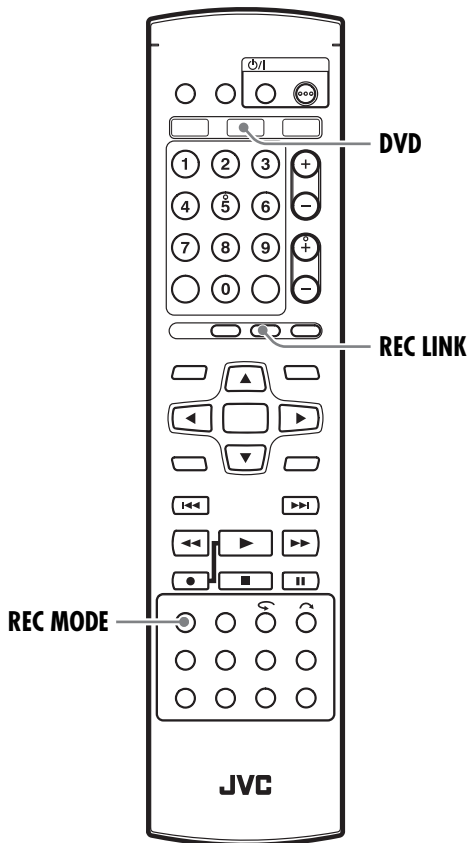

- Make sure the DBS receiver is connected to the unit's [S VIDEO/VIDEO/AUDIO INPUT L-1] connectors.
- Program the timer on the DBS receiver.


- 1 Load a recordable disc.
- 2 Press **DVD** so that the DVD lamp lights up on the unit.
- 3 Press **REC MODE** repeatedly to set the recording mode.
- 4 Set "REAR AUX L-1" to "VIDEO" for the VIDEO input connector, or "S-VIDEO" for the S-VIDEO input connector, depending on the connector being used. (☞ pg. 71)
- 5 Press and hold **REC LINK** for about 2 seconds to engage the Automatic Satellite Program Recording mode. "R-LK" appears on the front display panel.

### NOTES:

- To disengage the Automatic Satellite Program Recording mode, press **REC LINK**.
- If the unit's power is off, it is not possible to engage the Automatic Satellite Program Recording mode.
- In step 5, if "R-LK" blinks quickly on the front display panel even though your DBS receiver's power is off, Automatic Satellite Program Recording will not work properly with that DBS receiver\*. If this is the case, perform "Manual Timer Programming" (☞ pg. 31) to timer-record a satellite program.  
\* Some DBS receivers output signals even if the power is off. Automatic Satellite Program Recording is not possible with those DBS receivers.
- "R-LK" blinks on the front display panel while Automatic Satellite Program Recording is in progress.
- For timer programming of the DBS receiver, refer to the instruction manual of the DBS receiver.
- Automatic Satellite Program Recording is not possible if your DBS receiver does not have a timer.
- Pressing the unit's  $\phi/1$  button while Automatic Satellite Program Recording is in progress turns off the unit's power and disengages the Automatic Satellite Program Recording mode.
- If there are more than one satellite programs you wish to record with Automatic Satellite Program Recording, it is not possible to set different recording modes for each program.
- Depending on the type of DBS receiver, the unit may not record a slight portion of the beginning of the program or may record slightly longer than the actual length of the program.
- If you engage the Automatic Satellite Program Recording mode when the DBS receiver's power is on, the unit will not start Automatic Satellite Program Recording even though "R-LK" blinks on the front display panel. When the DBS receiver shuts off once and is turned back on again, the unit starts recording.
- You can also record a program from your cable system in the same way if the system has a timer.

## One-Touch Expert Dubbing (From VHS To DVD)

- Turn on the unit.
- Turn on the TV and select the AV mode.
- Make sure that both the DVD deck and the VHS deck are in the stop mode.

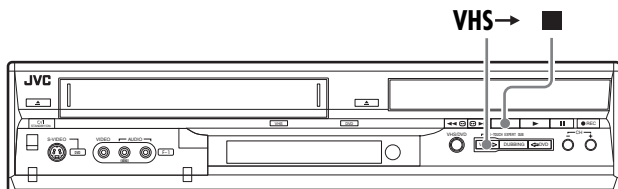

### Auto Recording Mode Optimizer

The unit calculates the total recording time of the VHS tape and automatically selects the optimum DVD recording mode.

### Auto Title Creation Dubbing

Each index code (VISS signal) on the VHS tape is detected and created as a title on the DVD disc. When a tape contains multiple VISS signals, separate titles are created for each VISS signal (for each program).

### Auto Blank-Cut Dubbing

Recording to the DVD pauses during blank sections on the VHS tape and restarts when a signal is detected.

### 1 For DVD deck

Load a recordable disc.

- Load an empty disc. If a disc with recorded data is loaded, the time calculation will not include the recorded section, and so dubbing may not be possible for an entire tape.

### For VHS deck

Load a cassette you want to dub.

**2** Press and hold **VHS→** for more than 2 seconds to start dubbing.

- The unit fast-forwards and rewinds the tape to calculate the recording time, then starts dubbing after setting automatically the recording mode that enables recording to fill exactly one disc. It takes a few minutes to calculate the recording time.
- After dubbing is completed, the VHS deck rewinds the tape automatically and the unit shuts off.
- To cancel dubbing, press **VHS→** again so that "→" lights off.
- To stop dubbing, press **■**.

### Stop and pause mode on the DVD deck

When recording, the unit automatically searches for the blank section of the disc no matter where the disc was stopped or paused.

In contrast to VHS tapes, recorded sections on discs cannot be overwritten.

### NOTES:



- When you turn on the unit next time, press **VHS→** so that "→" lights off before performing any operations. If it is not done, recording on the DVD deck is not possible.
- It is not possible to dub a tape with a copy protection signal.
- If there is no remaining recording time left on a DVD disc, the tape automatically stops at that position.
- It is not possible to perform other operations like Live Memory Playback. Check the recorded program on the disc after dubbing.
- It is not possible to perform dubbing on the On-Disc Timer programmed disc. Either cancel the disc programming, or use an unprogrammed disc.
- If the index code (VISS signal) is found on a tape during One-Touch Expert Dubbing, a single title is created. While creating a title, the dubbing stops. Dubbing starts again once the title is created. When a tape contains multiple VISS signals, separate titles are created for each VISS signal.
- During still picture on the VHS deck, the images may jitter, but this is not a malfunction.

# Manual Dubbing (From VHS To DVD)

## Dubbing A Part Of A Cassette

You can dub the selected scenes on a tape to the DVD disc, starting and stopping wherever you wish.

- Turn on the unit.
- Turn on the TV and select the AV mode.
- Make sure that both the DVD deck and the VHS deck are in the stop mode.

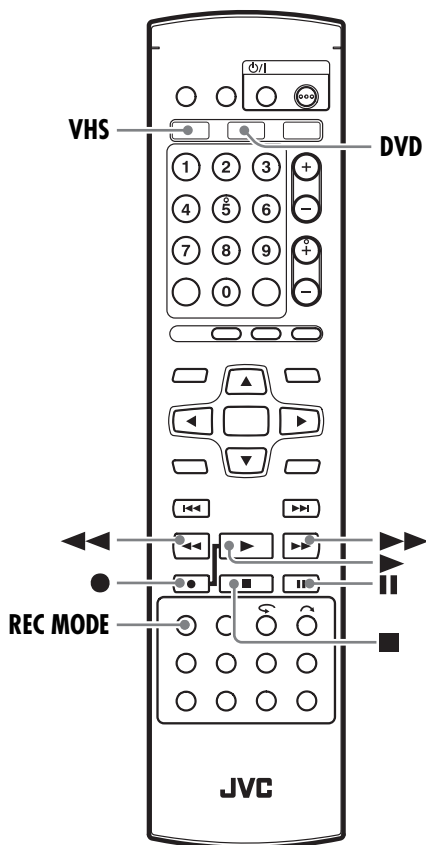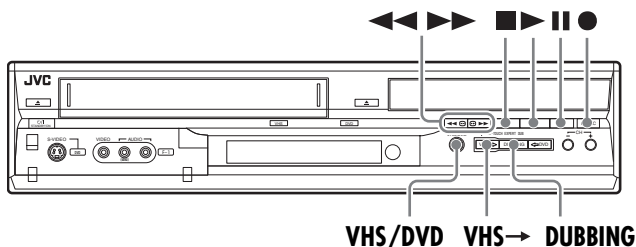

**1 For DVD deck**  
Load a recordable disc.

**For VHS deck**  
Load a cassette you want to dub.

**2** Press **VHS→** to select the dubbing direction.  
• “→” lights up on the unit.

**3** Set “VHS→DVD DUBBING” to “1 PROG”. (pg. 73)

**4** Prepare the VHS deck for dubbing.

**1** Press **VHS/DVD** on the unit repeatedly or **VHS** on the remote control so that the VHS lamp lights up on the unit.

**2** Locate the point from where you want to start dubbing, then pause playback.

• During still picture on the VHS deck, the images may jitter, but this is not a malfunction.

**5** Prepare the DVD deck for dubbing.

**1** Press **VHS/DVD** on the unit repeatedly or **DVD** on the remote control so that the DVD lamp lights up on the unit.

**2** Press **REC MODE** repeatedly to set the recording mode.

**3** Press and hold ●, then press ■ so that the DVD deck enters the Record Pause mode.

**6** Press and hold **DUBBING** for more than 2 seconds to start dubbing.

**7** Press ■ to stop recording on the DVD deck. Then press **VHS**, and press ■ to stop playback on the VHS deck.

• After dubbing is completed, press **VHS→** so that “→” lights off. If it is not done, recording on the DVD deck is not possible.

### NOTES:



- It is not possible to dub a tape with a copy protection signal.
- If there is no remaining recording time left on a DVD disc, the tape automatically stops at that position.
- During Manual Dubbing, if either the VHS deck or DVD deck is stopped, the other deck is not stopped automatically.
- It is not possible to perform other operations like Live Memory Playback. Check the recorded program on the disc after dubbing.

## Disc Dubbing (From DVD To VHS)

### Dubbing An Entire Disc

You can easily use this unit for dubbing without connecting any other equipment.

- Turn on the unit.
- Turn on the TV and select the AV mode.
- Make sure that both the DVD deck and the VHS deck are in the stop mode.
- Set "SUPERIMPOSE" to "OFF". (☞ pg. 71)

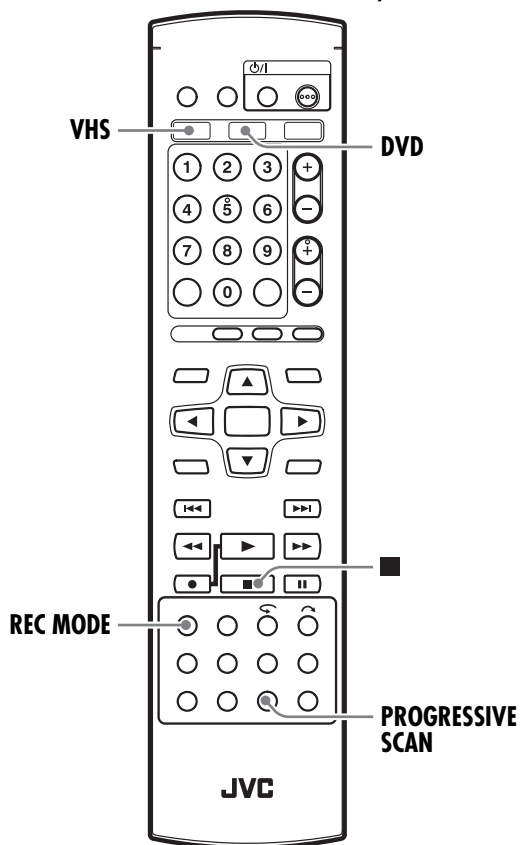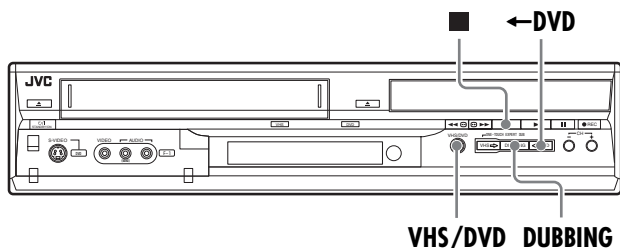

#### 1 For DVD deck

Load a disc you want to dub.

#### For VHS deck

Load a cassette with the record safety tab intact.

**2** Press **VHS/DVD** on the unit repeatedly or **VHS** on the remote control so that the VHS lamp lights up on the unit.

**3** Press **REC MODE** repeatedly to set the recording mode.

**4** Press **←DVD** to select the dubbing direction.

• "←" lights up on the unit.

**5** Press and hold **DUBBING** for more than 2 seconds to start the dubbing.

• If the tape has not been rewound, the VHS deck rewinds the tape automatically. When the VHS deck has finished rewinding, dubbing begins automatically.

• After dubbing is completed, the VHS deck rewinds the tape automatically and the unit shuts off.

• To stop dubbing, press ■.

#### NOTES:

• When you turn on the unit next time, press **←DVD** so that "←" lights off before performing any operations. If it is not done, recording on the VHS deck is not possible.

• It is not possible to start dubbing if the unit retains a memory of the resume points. Press ■ twice to clear the resume points.

• There may be a discrepancy of several seconds between where you intend dubbing to start, and where it actually starts.

• The superimposed indication during the operation or dubbing is not recorded.

• When the end of the tape is reached during dubbing, the tape is ejected and both deck stops.

• When the progressive mode is set, "←" does not light up on the unit. Press **PROGRESSIVE SCAN** so that video output indicator (P) lights off on the front display panel.

• It may be impossible to dub a DVD-R or DVD-RW (Video mode) disc recorded on the devices from other manufacturers or on a PC. In such case, perform "Manual Dubbing (From DVD To VHS)" (☞ pg. 39).

• It is not possible to perform other operations like Live Memory Playback. Check the recorded program on the disc after dubbing.



• If "→" lights up on the unit and you play back a DVD VIDEO disc, the images dubbed to the VHS deck may not be output to the TV properly.

# Manual Dubbing (From DVD To VHS)

## Dubbing A Part Of A Disc

You can dub the selected scenes on a DVD disc to a tape, starting and stopping wherever you wish.

- Turn on the unit.
- Turn on the TV and select the AV mode.
- Make sure that both the DVD deck and the VHS deck are in the stop mode.
- Set "SUPERIMPOSE" to "OFF". (pg. 71)

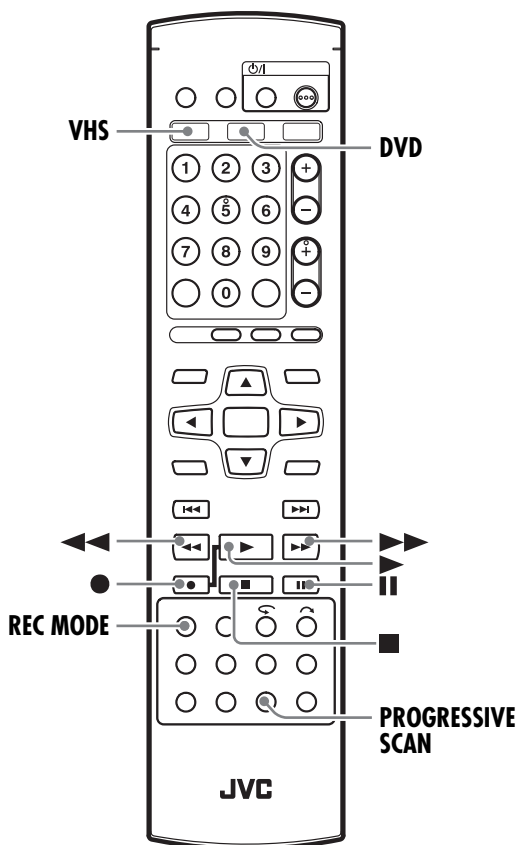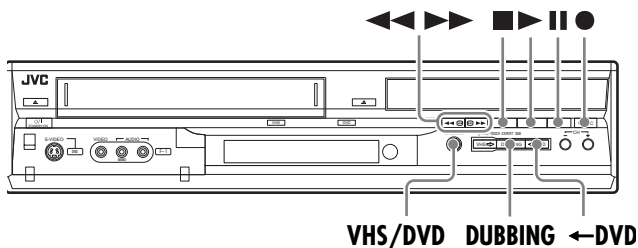

### 1 For DVD deck

Load a disc you want to dub.

### For VHS deck

Load a cassette with the record safety tab intact.

### 2 Press ←DVD to select the dubbing direction.

- "←" lights up on the unit.

### 3 Prepare the DVD deck for dubbing.

1 Press **VHS/DVD** on the unit repeatedly or **DVD** on the remote control so that the DVD lamp lights up on the unit.

2 Locate the point from where you want to start dubbing, then pause playback.

### 4 Prepare the VHS deck for dubbing.

1 Press **VHS/DVD** on the unit repeatedly or **VHS** on the remote control so that the VHS lamp lights up on the unit.

2 Press **REC MODE** repeatedly to set the recording mode.

3 Press and hold **II**, then press **●** so that the VHS deck enters the Record Pause mode.

### 5 Press and hold **DUBBING** for more than 2 seconds to start the dubbing.

### 6 Press **■** to stop recording on the VHS deck. Then press **DVD**, and press **■** to stop playback on the DVD deck.

- After dubbing is completed, press ←DVD so that "←" lights off. If it is not done, recording on the VHS deck is not possible.


### NOTES:

- It is not possible to start dubbing if the unit retains a memory of the resume points. Press **■** twice to clear the resume points.
- There may be a discrepancy of several seconds between where you intend dubbing to start, and where it actually starts.
- The superimposed indication during the operation or dubbing is not recorded.
- When the end of the tape is reached during dubbing, the tape is ejected and both deck stops.
- When the progressive mode is set, "←" does not light up on the unit. Press **PROGRESSIVE SCAN** so that video output indicator (P) lights off on the front display panel.
- It is not possible to perform other operations like Live Memory Playback. Check the recorded program on the disc after dubbing.


## Edit From A Camcorder

You can use a camcorder as the source player and your unit as the recording deck.

### 1 If the camcorder has no S-VIDEO output connector:

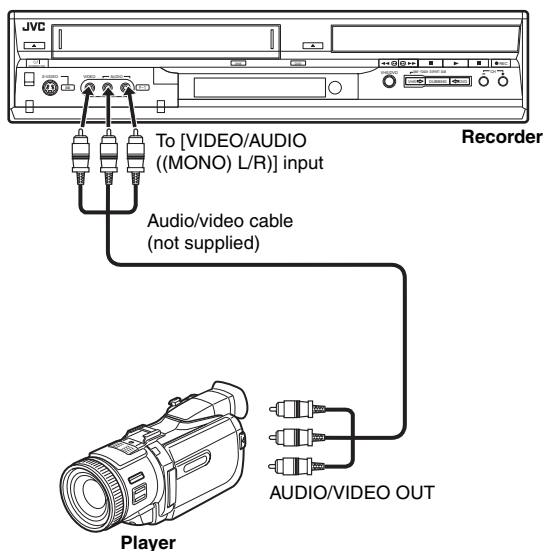

### 2 If the camcorder has an S-VIDEO output connector (DVD deck only):

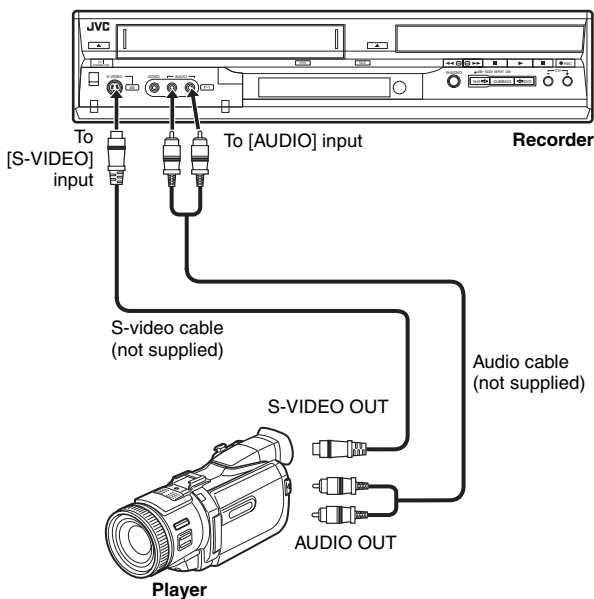

### 1 Make connections.

1 If the camcorder has no S-VIDEO output connector:  
— connect the camcorder's AUDIO/VIDEO OUT connectors to the unit's [VIDEO/AUDIO ((MONO) L/R)] input connectors on the front panel.

• When using a monaural camcorder, connect its AUDIO OUT connector to the [AUDIO-L] input connector on your unit.

2 If the camcorder has an S-VIDEO output connector:  
— connect the camcorder's AUDIO OUT and S-VIDEO OUT connectors to the unit's [AUDIO] and [S-VIDEO] input connectors on the front panel.

2 Press **VHS/DVD** on the unit repeatedly to select the recording deck.

3 Press **CH +/-** to select "F-1".

• Set "FRONT AUX F-1" to "VIDEO" for the VIDEO input connector, or "S-VIDEO" for the S-VIDEO input connector, depending on the connector being used. (pg. 71)

4 Press **REC MODE** repeatedly to set the recording mode.

5 Start playback on the camcorder slightly before the actual point from where you wish to start dubbing.

6 Press **●** on the unit to start recording. Or while holding **●**, press **▶** on the remote control. The dubbing starts.

7 Press **■** on the unit, then stop playback on the camcorder.

#### NOTES:

- All necessary cables can be obtained from your dealer.
- Refer to the camcorder's instruction manual for operating procedure.
- The quality of dubbed picture becomes poorer than that of the original.




# Edit From Another Recorder

You can use your unit as the source player or as the recording deck.


**NOTE:**

When using another recorder as the recording deck, refer to its instruction manual.

**1 When recording on DVD deck**

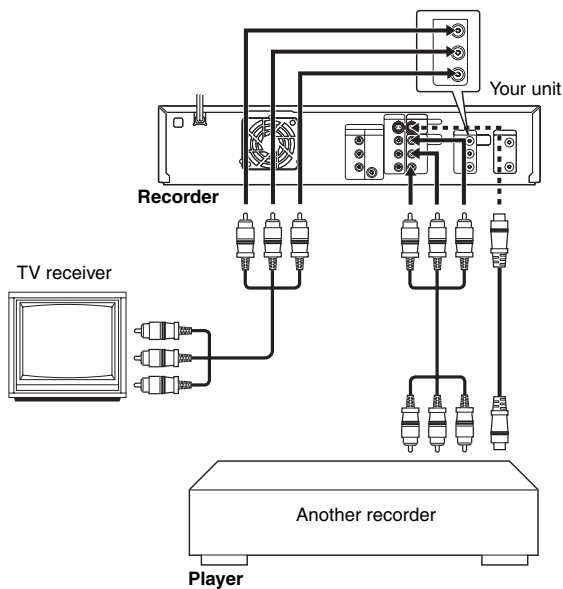

**2 When recording on VHS deck**

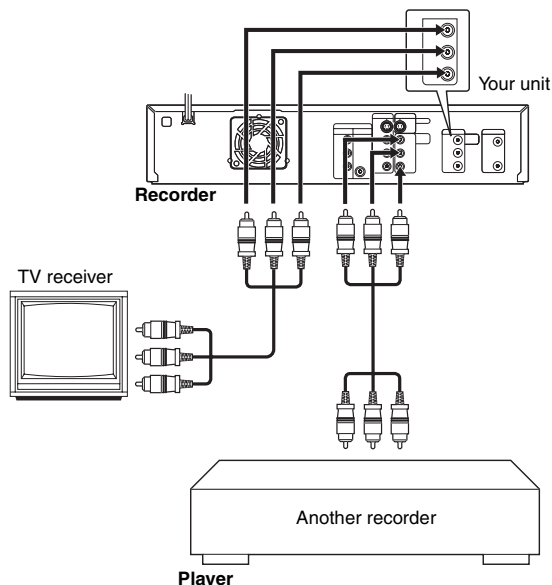

**1 Make connections.**

**1 When recording on DVD deck**

1. If another recorder has no S-VIDEO connector, connect the unit's [AUDIO/VIDEO INPUT] connectors to the audio/video output connectors on another recorder.
  2. If another recorder has S-VIDEO connector, connect the [AUDIO INPUT] and [S-VIDEO INPUT] connectors to the audio and S-video output connectors on another recorder.
- If connecting a unit with an S-VIDEO connector, it is recommended to use an optional S-Video cable to minimize picture degradation while editing.

**2 When recording on VHS deck**

1. Connect the unit's [AUDIO/VIDEO INPUT] connectors to the audio/video output connectors on another recorder.

**2** Press **VHS/DVD** on the unit repeatedly to select the recording deck.

**3** Press **CH +/-** to select "L-1" when using this unit as the recording deck.

**For DVD deck**

- Set "REAR AUX L-1" to "VIDEO" for the VIDEO input connector, or "S-VIDEO" for the S-VIDEO input connector, depending on the connector being used. (pg. 71)

**4** Press **REC MODE** repeatedly to set the recording mode.

**5** Engage the Play mode of the source player.

**6** Engage the Record mode of the recording deck.

**7** Stop recording on the recording deck, then stop playback on the source player.

**NOTES:**

- All necessary cables can be obtained from your dealer.
- When you use this unit as the source player for editing, be sure to set "SUPERIMPOSE" to "OFF" before starting. (pg. 71)
- It is also possible to use the audio/video input connectors on the front panel. In that case, select "F-1" in step 3.


## Digital Audio Dubbing

You can dub selected audio from a DVD or Audio CD disc to a digital audio device.

However, it is not possible to dub copy-protected discs.

- Turn on the TV and select the AV mode.

### Example: Dubbing to an MD

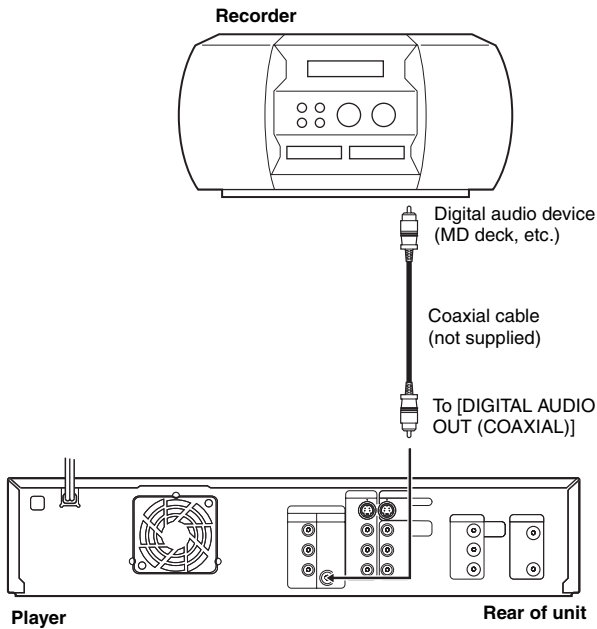


- 1 Connect the unit and a digital audio device using an optional coaxial cable.
- 2 Place a disc on the unit and load an MD or CD on the connected digital audio device.
- 3 Select the audio to be dubbed.
- 4 Start playback slightly before the actual point from where you wish to start dubbing.
- 5 Press **II** to pause playback.
- 6 Select the input mode on the connected digital audio device.
- 7 Press **▶** to start playback on the unit.
- 8 Start recording on the digital audio device.
- 9 Stop recording on the digital audio device. Then press **■** to stop playback on the unit.

### NOTE:

There may be a discrepancy of several seconds between where you intend editing to start, and where it actually starts.

# Advanced Playback (DVD)

- Turn on the unit.
- Turn on the TV and select the AV mode.
- Press **DVD** so that the DVD lamp lights up on the unit.

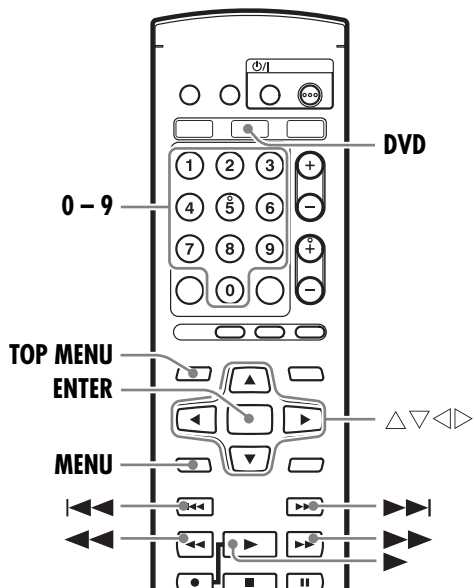

## Locating A Desired Scene Using The DVD Menu

### DVD VIDEO

DVD VIDEO discs may have top menu and disc menu.

#### Top menu

DVD discs generally have their own menus which show the disc contents. These menus contain various items such as titles of a movie, names of songs, or artist information. You can locate a desired scene by using the top menu displayed on the TV screen. Press **TOP MENU** to access the top menu.

#### Disc menu


Disc menus include playback data (angle menu, subtitle menu, etc.) specific to each title.

Press **MENU** to access the disc menu.

**1** Press **TOP MENU** or **MENU** to access the DVD menu.

**2** Press  $\Delta \nabla \triangleleft \triangleright$  to select a desired title, then press **ENTER**. Playback starts.

- It may be possible to select the desired item using the **number buttons** depending on the menu display.

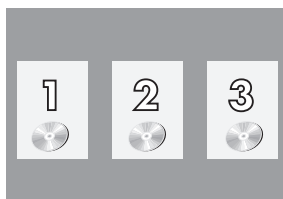

Example:

#### NOTE:

When "O" appears on the TV screen in step 1, the disc does not have a top menu or disc menu.


## Locating The Start Point Of The Item Or Skip The Item



Press  $\triangleleft \triangleleft$  or  $\triangleright \triangleright$  during playback.

- Pressing  $\triangleright \triangleright$  locates the start point of the item or skips the item in the forward direction, then resumes playback.
- Pressing  $\triangleleft \triangleleft$  locates the start point of the item or skips the item in the reverse direction, then resumes playback.


### When a DVD-RAM/RW/R disc is played

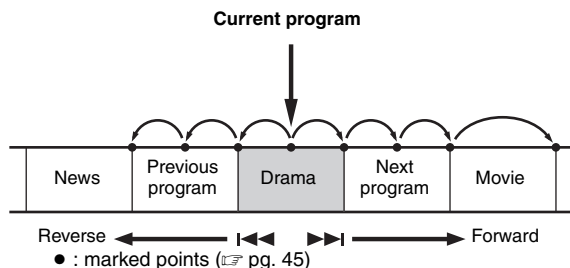

#### Example:

To locate the beginning of the next item, press  $\triangleright \triangleright$  once. To locate the beginning of the current item, press  $\triangleleft \triangleleft$  once. To locate the beginning of the previous item, press  $\triangleleft \triangleleft$  three times.

### When a DVD VIDEO, Audio CD or Video CD disc is played

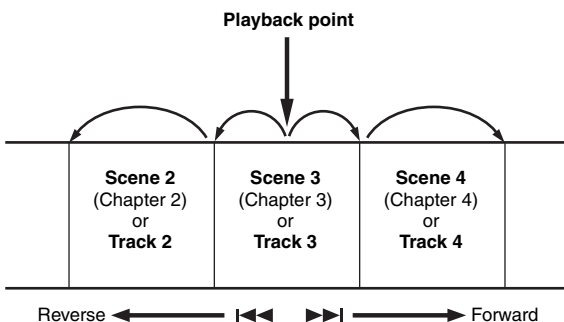

#### Example:

To locate the beginning of the next item, press  $\triangleright \triangleright$  once. To locate the beginning of the current item, press  $\triangleleft \triangleleft$  once.

## High-Speed Search




During playback, press  $\triangleright \triangleright$  for forward high-speed search, or  $\triangleleft \triangleleft$  for reverse high-speed search.

- Each press of the button increases the search speed for each direction.
- To resume normal playback, press  $\triangleright$ .

### For Audio CD

You can perform 4 levels of speed search with  $\triangleright \triangleright$  and  $\triangleleft \triangleleft$ . (Audio is active also during high-speed search.) You cannot perform slow motion for each direction.

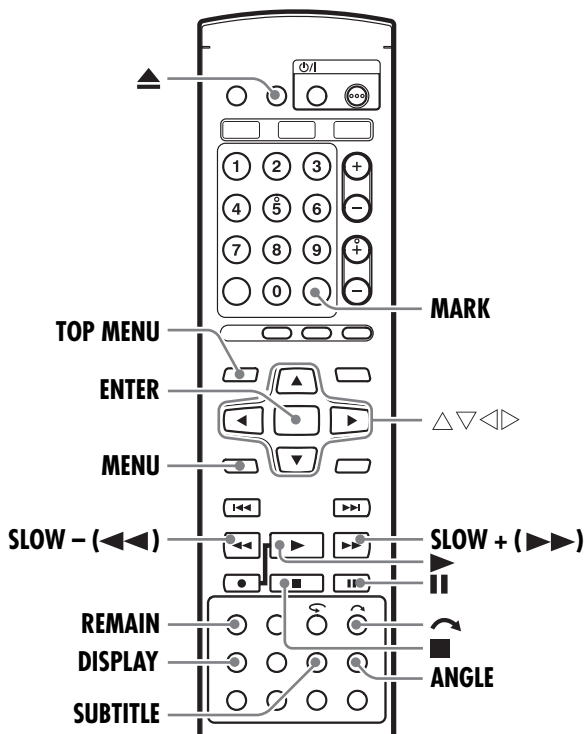

## Still Picture/Frame-By-Frame Playback



- 1 Press **II** to pause during playback.
- 2 Press **SLOW -** (◀◀) or **SLOW +** (▶▶) to activate frame-by-frame playback.
  - Each press of **SLOW -** (◀◀) or **SLOW +** (▶▶) advances/reverses the still picture frame by frame.
  - Frame-by-frame playback for reverse direction cannot be performed with Video CD discs.
  - To resume normal playback, press ▶.

## Slow Motion



- 1 Press **II** to pause during playback.
- 2 Press **SLOW -** (◀◀) or **SLOW +** (▶▶) for 2 or more seconds.
  - Each press of **SLOW -** (◀◀) or **SLOW +** (▶▶) increases the slow motion speed for each direction (from 1/16 to 1/2 times the normal speed).
  - Slow motion for reverse direction cannot be performed with Video CD discs.

## Skip Search



- During playback, press **↶**.
- Each press initiates an approximately 30-second period of fast-motion playback. Normal playback resumes automatically.

## Resume Function



It is possible to memorize the position where you stop playback and resume playback from that position.

- Be sure to set "RESUME" to "ON" or "DISC RESUME". (☞ pg. 72)
- 1 Press **■** during playback to memorize a resume point.
    - The unit enters Resume Stop mode and memorizes the position where you have stopped playback as a resume point. (The inside of the disc status indicator on the front display panel blinks while memorizing.)
    - The unit retains a memory of the resume points of the last 30 discs played back, even though they have been ejected if "RESUME" is set to "DISC RESUME". (☞ pg. 72)
    - To clear the resume points: (The inside of the disc status indicator stops blinking and lights.)
      - When "RESUME" is set to "ON":**
        - Press **D/I** to turn off the unit.
        - Press **▲** (OPEN/CLOSE) to take out the disc.
        - Press **■** in stop mode.
        - Press **TOP MENU** to display the top menu, then start playback by selecting an item, etc.
        - Press **MENU** to display the disc menu, then start playback by selecting an item, etc.
      - When "RESUME" is set to "DISC RESUME":**
        - Set "RESUME" to "OFF". (☞ pg. 72)
        - Press **■** in stop mode.
        - Press **TOP MENU** to display the top menu, then start playback by selecting an item, etc.
        - Press **MENU** to display the disc menu, then start playback by selecting an item, etc.
  - 2 Press **▶** in stop mode to resume playback. The unit starts playback from the resume point.

### NOTES:

- "DISC RESUME" setting works on DVD VIDEO, VCD and already finalized DVD-R/DVD-RW (video mode) discs. For other types of discs, the function under "ON" setting will be applied even if "RESUME" is set to "DISC RESUME". (☞ pg. 72)
- If you stop the playback of a disc for which a resume point has already been memorized, the memory will be updated with the new resume point.
- After the unit has memorized the resume points for 30 discs, remembering a new resume point will cause the unit to delete the oldest memorized point. Stopping playback of a disc for which a resume point is already stored may change the order in which the points are stored. This may potentially change the order in which points are deleted.
- When the unit memorizes a resume point for a disc, it also remembers audio language, subtitle and angle settings.
- This function may not work for some Video CDs.
- When "RESUME" is changed to "ON" or "OFF" (☞ pg. 72), resume points of the discs memorized with "RESUME" set to "DISC RESUME" will be cleared.
- Resume points are memorized for each side of a double-sided disc.

## Marking Positions To Play Back Again Later




It is possible to mark positions (up to 999 points) where you want to play back once again later, and start playback from a marked position. Marking onto DVD-RAM/RW (VR mode only) discs when recording is helpful to locate a start point when you play back the discs later.

### To mark positions:

During playback, press **MARK** at positions you want to mark.


- “MARK” appears on the TV screen. You can easily locate the marked positions using ◀◀ or ▶▶ when you play back the disc.

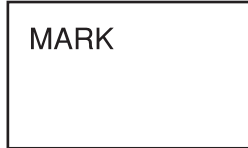

### To delete the marked positions:

While paused, press ◀◀ or ▶▶ to locate a marked position you want to delete, then press **MARK**.

- Crossed “MARK” appears on the TV screen, and the marked position is deleted.

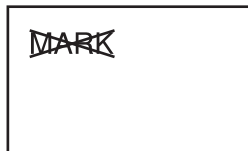

### NOTES:

- When a monaural program changes to a stereo program while recording, a mark signal is automatically recorded.
- Titles will be divided into “chapters” at the marked points according to the disc types as follows:  
 DVD-R/RW (Video mode): After finalizing, titles are divided into “chapters” at the marked points that are marked automatically approximately every 5 minutes during recording before finalizing. (☞ pg. 75)  
 DVD-RW (VR mode): After finalizing, titles are divided into “chapters” at the marked points that are marked at the desired locations during playback before finalizing. (☞ pg. 75)  
 DVD-RAM: Titles are divided into “chapters” at the marked points that are marked at the desired locations during playback.  
 DVD VIDEO and finalized disc: Creating of marked points are not permitted.

## Checking The Time Information



You can check time information of a disc on the front display panel and the TV screen.

Each press of **DISPLAY** changes the display as follows:

### ■ DVD-RAM/DVD-R/DVD-RW

#### During recording

Clock time (front display panel only) → Current title elapsed time → Disc remaining time\* → (back to the beginning)

- \* only discs before finalizing
- Clock time is displayed only when a recordable disc is recorded.

#### During playback

Each title elapsed time → Current title elapsed time → Disc remaining time\* → (back to the beginning)

- \* only discs before finalizing

#### In stop mode or during playback

- It is possible to check disc remaining time according to recording modes also by pressing **REMAIN**.
- In FR mode, it is possible to set recording time in detail. While the recording mode and the disc remaining time are displayed by pressing **REMAIN**, press △▽ to select “FR”, then press ◀▶ to select the desired recording time. (☞ pg. 58)
- It is not possible to switch the recording mode during playback or while recording.

### ■ Video CD/Audio CD

#### During playback

Current track elapsed time → Current track remaining time → Total elapsed time → Total remaining time → (back to the beginning)

#### In stop mode

0:00 → Playback time of track 1 → 0:00 → Total length of a disc → (back to the beginning)


#### NOTE:

When a PBC-compatible Video CD disc is loaded, deactivate the PBC function. (☞ pg. 46)

## Angle Selection



You can enjoy a variety of scene angles if a DVD VIDEO disc contains “multi-angle” parts, where the same scene was shot from different angles.

If the disc contains “multi-angle” parts, “” appears on the TV screen at the beginning of the “multi-angle” part.

 
#### 1 Press **ANGLE** during playback.

The angle selection display appears on the TV screen.



**When 3 scene angles are contained.**


#### 2 Press **ANGLE** or ◀▶ to select your desired angle.

- Each time you press **ANGLE** or ◀▶, the angle changes.
- When “” appears on the TV screen, the current scene is not recorded from multiple angles. In addition, some discs prohibit angle selection.
- To clear the angle selection display, press **ENTER**. In addition, the angle selection display disappears automatically if no operation is done for 10 seconds.

## Subtitle Selection

 


Some DVD VIDEO discs contain more than one subtitle language, from among which you can choose the desired subtitle language.

“” appears on the TV screen at the beginning of the part where more than one subtitle language are recorded.

#### 1 Press **SUBTITLE** during

playback. The subtitle selection display appears on the TV screen.




**When 3 subtitle languages are contained.**

- Each time you press **SUBTITLE**, the subtitle display is switched on and off.

#### 2 Press ◀▶ to select your desired language.

- To clear the subtitle selection display, press **ENTER**.
 
#### NOTES:

- When “” appears on the TV screen, no subtitle language is recorded.
- When the subtitle language won't be changed with the procedure above, change the subtitle on a disc menu displayed by pressing **MENU**.

## Audio Language/Sound Selection



Some DVD VIDEO discs contain the multiple audio language or sound. You can select the desired audio language or sound. For some Video CD discs, you can switch the audio channel to choose Karaoke either with or without the vocal.

**1** Press **AUDIO** during playback. The Audio Language/Sound selection display appears.

**2** Press **AUDIO** or  $\triangleleft \triangleright$  to select your desired audio language/sound.

- Each time you press **AUDIO** or  $\triangleleft \triangleright$ , the audio language/sound changes.
- To clear the Audio Language/Sound selection display, press **ENTER**.

### NOTES:

- When "S" appears on the TV screen, no audio language is recorded.
- When the audio language won't be changed with the procedure above, change the audio on a disc menu displayed by pressing **MENU**.
- Pressing **AUDIO** to select the audio language/sound is only possible during playback. It is not possible to select by pressing **AUDIO** in stop mode. However, you can select the desired audio language/sound from the setup menu while in stop mode.



When 3 audio languages are contained.

## Audio Channel Selection



When playing discs on which you recorded stereo programs, you can choose the desired audio channel.

- When "SUPERIMPOSE" is set to "AUTO", you can confirm on the TV screen the audio channel you have chosen. (pg. 71)
- Each time you press **AUDIO**, the audio channel changes.



TRACK	USE
On-Screen Display	
	For stereo discs
	For audio of left channel
	For audio of right channel

### NOTE:

It is not possible for DVD-R/DVD-RW (Video mode) disc playback to switch the audio channel.

## Playback Control (PBC) Function



Some Video CD discs support the PBC function. PBC is an abbreviation of "Play Back Control". A Video CD disc recorded with PBC has its own menus, such as a list of the songs on the disc. You can locate a specific scene by using the menu.

**1** Press  $\blacktriangleright$  in stop mode. The PBC menu appears.

**2** Press the **number buttons** to enter the number of the desired scene. The unit starts playback of the selected item.

- "PBC" appears on the front display panel.
- When "NEXT" or "PREVIOUS" appears on the TV screen: Pressing **NEXT** ( $\blacktriangleright$ ) advances to the next page. Pressing **PREVIOUS** ( $\blacktriangleleft$ ) returns to the previous page.
- You can return to the menu by pressing **RETURN**.
- The method of the operation is different depending on the disc.

### NOTES:


- If you want to playback a PBC-compatible Video CD disc without activating the PBC function, start playback in stop mode by using the **number buttons**, instead of the  $\blacktriangleright$  button, to choose the track, then press **ENTER**.
- To activate the PBC function when a PBC-compatible Video CD disc is being played back without the PBC function, press **TOP MENU**, or press  $\blacksquare$  then press  $\blacktriangleright$ .

# Live Memory Playback (DVD Deck Only)


## DVD RAM

- Turn on the unit.
- Turn on the TV and select the AV mode.
- Press **DVD** so that the DVD lamp lights up on the unit.

This unit records pictures onto the DVD-RAM discs, instead of video tapes, then plays back the pictures recorded on the discs. This makes it possible to achieve high-speed writing and read-out that has not been possible with conventional VCRs, enabling recording and playback simultaneously.

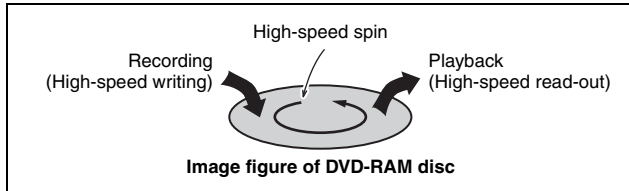


It is called "Live Memory Playback" to start playback of the program being recorded, with a time-lag between a recording point and a playback point, as shown in the figure below.

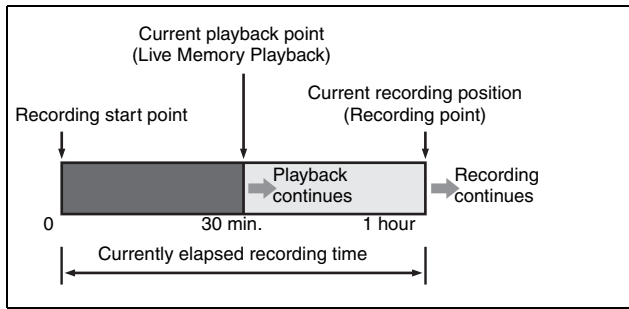

Not only can this unit play back a program previously recorded while recording or timer recording another program, but the unit also allows you to play back from the beginning of a program while continuing to record the same program.

## Recording/playback Status Display

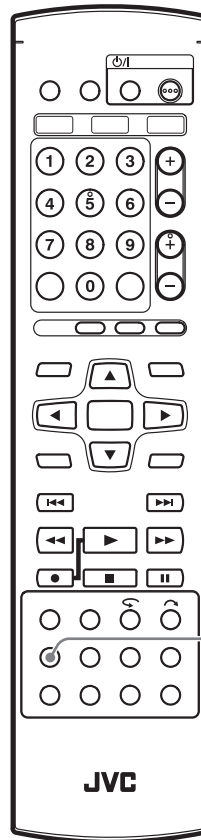

**DISPLAY**  
Live Memory Playback status can be checked by pressing **DISPLAY** to display the bar meter on the superimpose display.

Press **DISPLAY**. The current status is superimposed on the TV screen.



Bar meter display



Superimpose display

## Overview Of Live Memory Playback

You can play back a program you are recording from the beginning while continuing to record or timer record onto a DVD-RAM disc. This is called "Live Memory Playback".

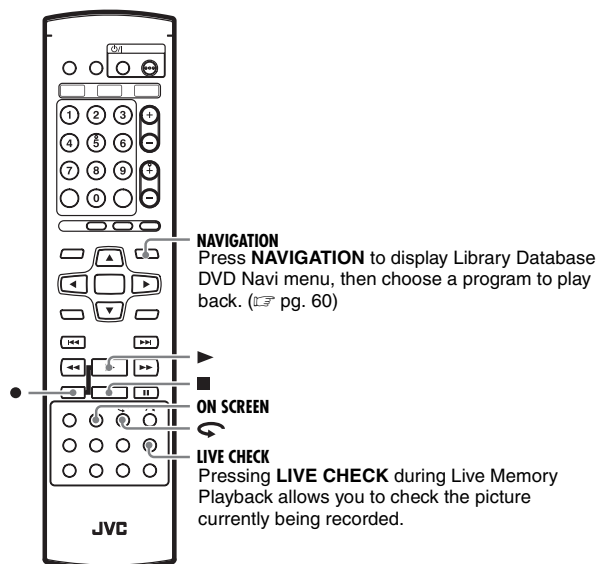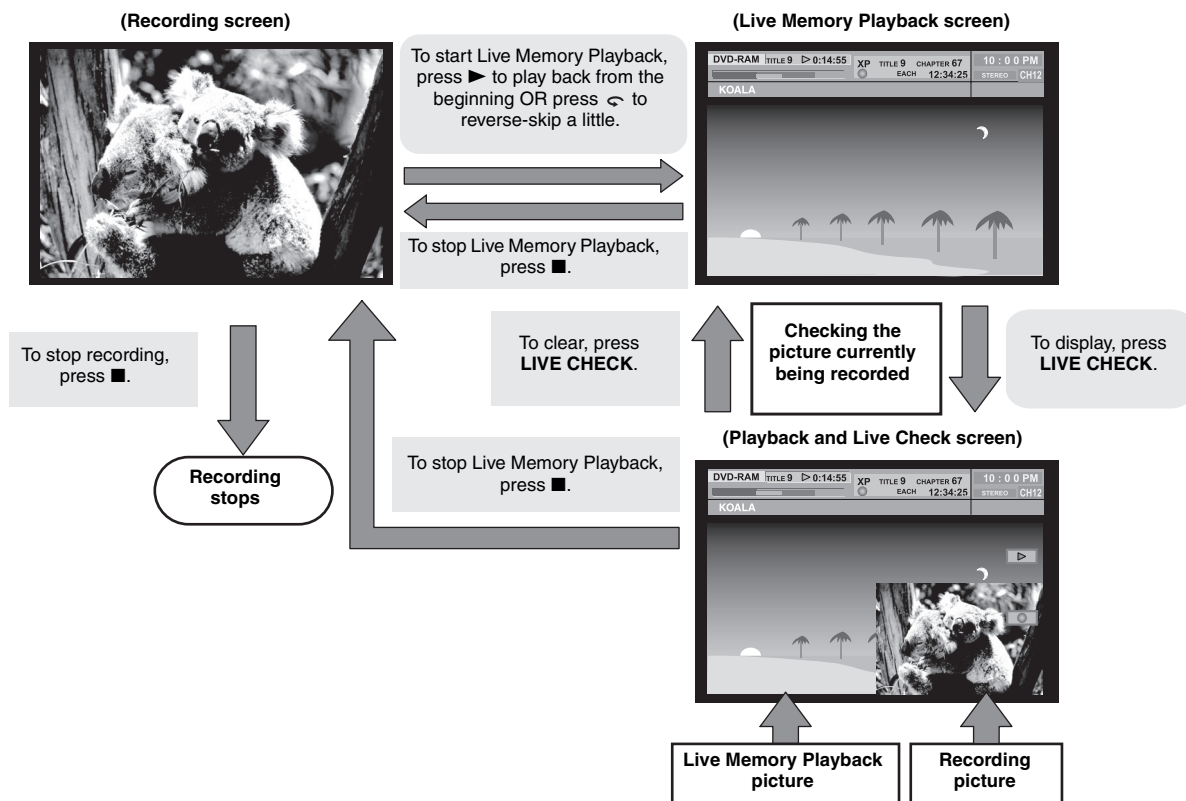

### NOTES:

- Live Memory Playback could be performed approximately 30 seconds after recording has started.
- Although high-speed search up to approximately 30 seconds before the current recording point is possible during Live Memory Playback, once the current recording point is reached, the unit resumes normal playback and maintains a delay of approximately 30 seconds so that recording and playback can continue.
- When using Live Memory Playback during timer recording, playback continues even after the end of the recording.
- When using Live Memory Playback during timer recording, playback is automatically stopped just before recording starts, and then recording starts when the time arrives for the next timer-program.
- It is impossible to perform ITR even if you press ● during Live Memory Playback. (pg. 47)  
Press ■ to display the program being recorded, then perform ITR settings.
- Playback may be paused for a moment during Live Memory Playback, which does not interfere with recording.
- When **LIVE CHECK** is pressed to display the picture currently being recorded, the picture size may not be correct.




## Display During Live Memory Playback

During recording, you can watch at your will what was previously recorded or is currently being recorded. It is possible to perform freely normal playback operations (forward/reverse high-speed search and variable-speed search) within the range of the red or blue bar on the TV screen.


When Live Memory Playback reaches the point of 30 seconds before the current recording point by forward high-speed search or other operations, the unit returns to normal playback.

The superimpose display appears by pressing **ON SCREEN**. (pg. 15)

The Live Check picture is displayed on the bottom right corner by pressing **LIVE CHECK**.

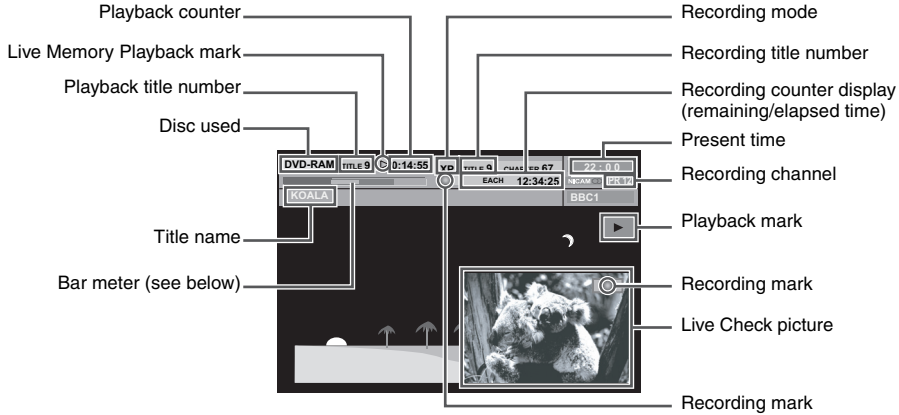


This unit displays the current recording/playback status by the bar meter.  
(Example of bar meter display)

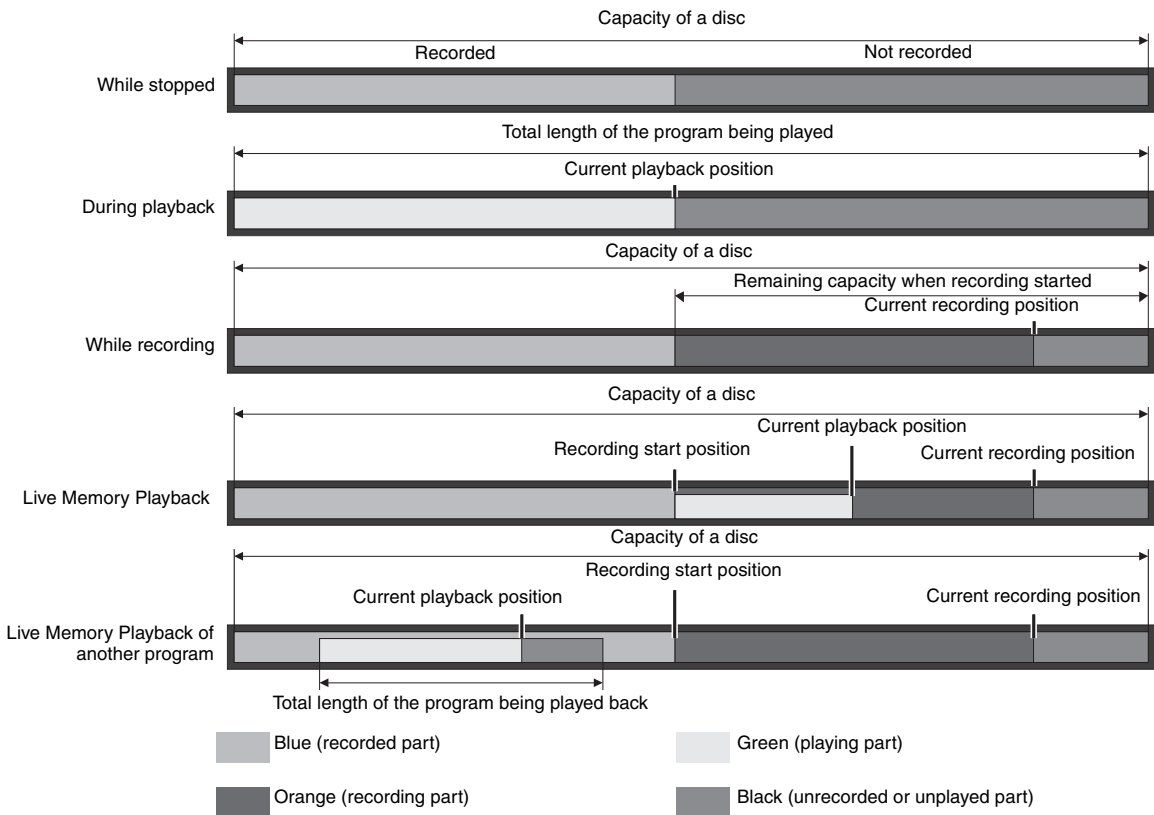

## Buttons To Be Used During Live Memory Playback

- Turn on the unit.
- Turn on the TV and select the AV mode.
- Press **DVD** so that the DVD lamp lights up on the unit.

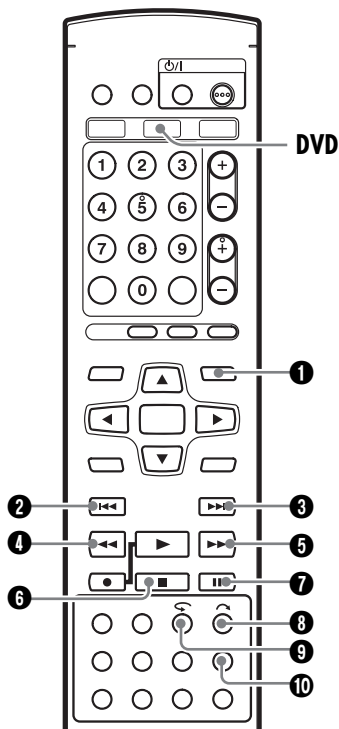

### 1 NAVIGATION

Displays Library Database DVD Navi menu. You can choose a title to play back.

### 2 ◀◀

- Pressing once skips back to the beginning of the chapter being played back.
- Pressing down for 2 or more seconds during playback reverses playback at 5 times the normal speed while pressed. Releasing the button resumes normal playback.

#### Available only when paused

- Pressing down for 2 or more seconds reverses playback at 1/16 times the normal speed.

### 3 ▶▶

- Pressing once skips forward to the beginning of the next chapter being played back.
- Pressing down for 2 or more seconds during playback advances playback at 5 times the normal speed while pressed. Releasing the button resumes normal playback.

#### Available only when paused

- Pressing down for 2 or more seconds advances playback at 1/16 times the normal speed.

### 4 ◀◀

- Each press of the button during playback advances the playback speed in 5 steps in the reverse direction.

#### Available only when paused

- Each press of the button reverses the still picture frame by frame.
- Pressing down for 2 or more seconds reverses playback at 1/16 times the normal speed. Then, each press of the button reverses slow-motion at 1/16 times, 1/4 times and 1/2 times the normal playback.

### 5 ▶▶

- Each press of the button during playback advances the playback speed in 4 steps in the forward direction.

#### Available only when paused

- Each press of the button advances the still picture frame by frame.
- Pressing down for 2 or more seconds advances playback at 1/16 times the normal speed. Then, each press of the button advances slow-motion at 1/16 times, 1/4 times and 1/2 times the normal playback.

### 6 ■

- Pressing once during Live Memory Playback or Live Memory Recording returns to the screen on air.
- Pressing twice during recording stops recording and returns to the screen on air.

### 7 II

Pressing once pauses playback (still picture playback). Pressing repeatedly advances the still picture frame by frame.

### 8 ↶

Pressing once skips forward for approximately 30 seconds and resumes playback.

Pressing repeatedly skips forward continuously as many times as pressed.

It is useful when skipping over unwanted sections.

### 9 ↷

Pressing once skips back for approximately 30 seconds and resumes playback.

Pressing repeatedly skips back for approximately 7 seconds continuously as many times as pressed.

It is useful when watching sports programs, etc.

### 10 LIVE CHECK

Pressing once displays the picture currently being recorded and the one being played back simultaneously.

Pressing successively clears the Live Check window and displays only the picture currently being played back.

You can check, for example, if the program you are recording has already finished.

## To Play Back From The Beginning Of The Program While Recording

You can play back a program you are recording from the beginning while continuing to record or timer record onto a DVD-RAM disc. Press **▶**. Live Memory Playback starts from the beginning of the program being recorded.

- Pressing **◀◀** or **▶▶** allows you to locate the desired scenes.

## To Move Back The Playback Position Slightly While Recording (One Touch Replay Function)

You can move back the playback position while continuing to record or timer record onto a DVD-RAM disc.

Press **↶**.

- Each press skips back for approximately 7 seconds and resumes playback.
- Pressing while paused skips back for approximately 7 seconds and resumes pause.

## To Watch A Program Previously Recorded While Recording

You can play back a program you recorded previously while recording.

**1** Press **▶** during recording. Live Memory Playback starts.

**2** Press **◀◀** or **▶▶** to locate the beginning of the desired program.

#### NOTE:


To stop playback, press **■**. The program being recorded is displayed.

# Using The On-screen Bar



The on-screen bar allows you to control various playback functions. Some of the functions operated on Navigation Menu can be controlled on the On-screen bar.

Be sure to clear Library Database DVD Navi screen by pressing **NAVIGATION**.

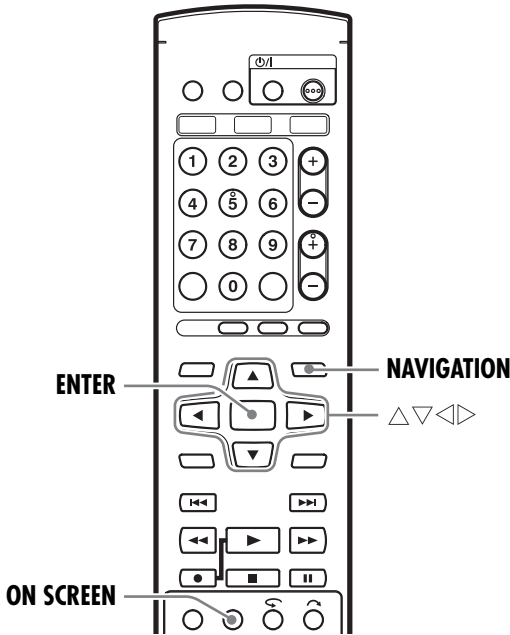


## How To Access The On-screen Bar


1 Press **ON SCREEN** twice whenever a disc is loaded.

### Contents of the on-screen bar during playback

#### DVD VIDEO

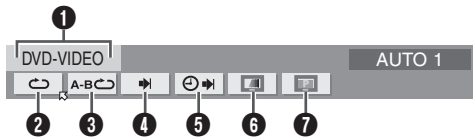

#### Video CD

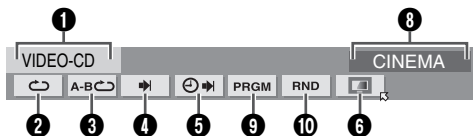

### JPEG disc



- 1 Disc type.
- 2 Select this for Repeat Playback. (pg. 52)
- 3 Select this for A-B Repeat Playback. (pg. 52)
- 4 Select this for search function. (pg. 52)
- 5 Select this for time search function. (pg. 53)
- 6 Select this for Picture Control function. (pg. 53)
- 7 Select this to switch picture source type. (pg. 53)
- 8 Current status area for the selected item.
- 9 Select this for Program Playback. (pg. 54)
- 10 Select this for Random Playback. (pg. 54)
- 11 Select this to control the switching interval of the slide show. (pg. 54)

**NOTE:**

Although examples of the on-screen bar are provided here only for 3 types of discs, the on-screen bar will be displayed for whichever disc indicated in the left column.

## Basic Operation On The On-screen Bar

Example: When selecting Picture Control function of DVD

### During playback or while stopped


1 Press **ON SCREEN** twice to access the on-screen bar. The item currently selected is highlighted and pointed by .



2 Press to select "", then press **ENTER**. The pop-up window appears under the selected item.



3 Press to select the desired option, then press **ENTER**.

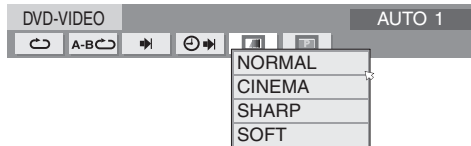


### To clear the on-screen bar

Press **ON SCREEN**.

**NOTE:**

See the corresponding pages for details on each menu item.

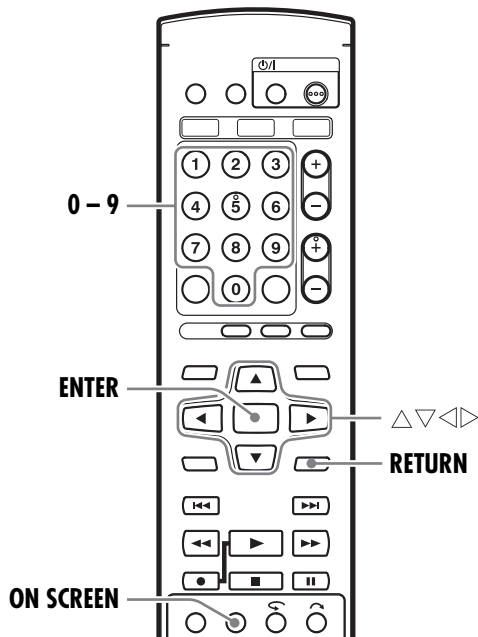

## Repeat Playback



You can repeat playback as you like according to the type of disc.

- 1 Press **ON SCREEN** twice to access the on-screen bar.
- 2 Press  $\triangleleft \triangleright$  to select “ $\curvearrowright$ ”, then press **ENTER**. The pop-up window appears under the selected item.



- 3 Press  $\triangle \nabla$  repeatedly to select the desired Repeat mode, then press **ENTER**.

### DVD-RAM/RW/R

OFF: Repeat playback is not performed.

ALL REPEAT: The whole disc is played back repeatedly.

TITLE REPEAT: The current title is played back repeatedly.

### DVD VIDEO

OFF: Repeat playback is not performed.

TITLE REPEAT: The current title is played back repeatedly.

CHAPTER REPEAT: The current chapter is played back repeatedly.

### Audio CD/Video CD/JPEG/MP3

OFF: Repeat playback is not performed.

ALL REPEAT: The whole disc is played back repeatedly.

TRACK REPEAT\*: The current track is played back repeatedly.

\* “TRACK REPEAT” cannot be selected for JPEG discs.

### To clear the on-screen bar

Press **ON SCREEN**.

### To cancel Repeat Playback

Repeat the above procedure from step 1, select “OFF” in step 3, then press **ENTER**.

### NOTES:

- Repeat Playback is not possible for a Video CD with PBC function.
- Repeat Playback may not work properly depending on the type of the disc being used.

## A-B Repeat Playback



You can repeat the desired part.

### During playback

- 1 Press **ON SCREEN** twice to access the on-screen bar.
- 2 Press  $\triangleleft \triangleright$  to select “A-B  $\curvearrowright$ ”.
- 3 Press **ENTER** at the beginning of the desired part you want to repeat (point A). The elapsed playing time of the point A appears.



- 4 Press **ENTER** at the end of the desired part you want to repeat (point B). The elapsed playing time of the point B appears.
  - The selected part of the disc (between point A and B) is played repeatedly.



### To clear the on-screen bar

Press **ON SCREEN**.

### To cancel A-B Repeat Playback

Press  $\triangleleft \triangleright$  to select “A-B  $\curvearrowright$ ”, then press **ENTER**.

### NOTES:

- A-B Repeat Playback may not work properly depending on the type of disc being used.
- The subtitles recorded around the A-B point may not appear.
- When the end of the item is reached before the end point is set, the on-screen bar disappears from the TV screen. In such a case, repeat the procedure from step 1.
- The point B must be set at least 3 seconds after the point A.
- When playing back a DVD, A-B Repeat Playback is possible only within the same title.
- “A-B  $\curvearrowright$ ” cannot be selected during Program and Random Playback.
- “A-B  $\curvearrowright$ ” cannot be selected while stopped.

## Locating The Beginning Of A Desired Selection



You can locate the beginning of a title, chapter, group or track.

### During playback or while stopped

- 1 Press **ON SCREEN** twice to access the on-screen bar.
- 2 Press  $\triangleleft \triangleright$  to select “ $\blacktriangleright$ ”, then press **ENTER**.
- 3 Press  $\triangle \nabla$  to select the desired item, then press **ENTER**.
  - Skip this step for Video CD and Audio CD.

### For DVD-RAM/RW/R, DVD VIDEO

 
“TITLE SEARCH” or “CHAPTER SEARCH” is selectable. (“TITLE SEARCH” is selectable only while stopped.)

### For JPEG/MP3

“GROUP SEARCH” or “TRACK SEARCH” is selectable.

### For Video CD, Audio CD

“TRACK” is selectable.



**4** Press the **number buttons** to enter the desired item number, then press **ENTER**.

- Playback starts from the selected section.

Examples:

- 1 To select track 5, press the **number button** “5”.
- 2 To select track 15, press the **number button** “1” and “5”.
- 3 To select track 25, press the **number button** “2”, then “5”.

**If you have specified a wrong selection**

Press **RETURN** on the remote control unit and repeat the above procedures from step 2.

**To clear the on-screen bar**

Press **ON SCREEN**.

**NOTES:**

- When “0” is displayed on the TV screen in step 4, the chapter you have selected is not contained in the disc, or chapter search does not work on the disc.
- Before you press **ENTER**, playback may start automatically when you enter the section’s number depending on the disc.
- This function is not possible for a Video CD with PBC function.

## Time Search



You can play back a disc from the desired point by specifying the elapsed playing time from the beginning of a program (DVD-RAM, DVD-R, DVD-RW and DVD VIDEO) or a disc (Video CD and Audio CD).

**1** Press **ON SCREEN** twice to access the on-screen bar.

**2** Press < > to select “⌚▶”, then press **ENTER**. The pop-up window appears under the selected item.



**3** Press the **number buttons** to enter the time, then press **ENTER**. Playback starts from the specified time.

Example:

To play back from a point 12 (minutes): 50 (seconds) elapsed.



**If you have specified a wrong selection,**

Press **RETURN** on the remote control unit and repeat the above procedures from step 2.

**To clear the on-screen bar**

Press **ON SCREEN**.

**NOTES:**

- When “0” is displayed on the TV screen in step 3, you have selected a point that exceeds the recording time of the disc.
- Some DVD VIDEO discs do not contain time information, and it is not possible to use the Time Search function. In such cases, “0” is displayed on the TV screen as well.
- This function is not possible for a Video CD with PBC function.

## Adjusting The Picture Quality



You can obtain optimal picture quality by selecting an appropriate picture mode.

**1** Press **ON SCREEN** twice to access the on-screen bar.

**2** Press < > to select “🖥️”, then press **ENTER**. The pop-up window appears under the selected item.



**3** Press < > to select the desired option, then press **ENTER**.

**NORMAL:** Normally select this option.

**CINEMA:** Suitable for a movie disc, etc.

**SHARP:** Clearer, sharper-edged picture when viewing images with lots of flat, same-colored surfaces such as cartoons.

**SOFT:** Select this option when too much noise appears.

**To clear the on-screen bar**

Press **ON SCREEN**.

## Setting The Progressive Mode



You can obtain optimal picture quality by selecting whether the content on the disc is processed by field (video source) or by frame (film source).

**1** Set the unit to the progressive scan mode. (pg. 72)

**2** Press **ON SCREEN** twice to access the on-screen bar.

**3** Press < > to select “📺”, then press **ENTER**. The pop-up window appears under the selected item.



**4** Press < > to select the desired option, then press **ENTER**.

**AUTO 1:** Used to play a disc containing both video and film source materials. This system recognizes the source type (video or film) of the current disc according to the disc information. Normally select this option.


**AUTO 2:** Almost the same as the “AUTO 1”, but the processing of the scenes with movement is different. Select “AUTO 1” or “AUTO 2” to your preference.

**FILM:** Suitable for playing back a progressive scanned film source disc.

**VIDEO:** Suitable for playing back a video source disc. The outlines on the played back pictures will be soft.

**To clear the on-screen bar**

Press **ON SCREEN**.

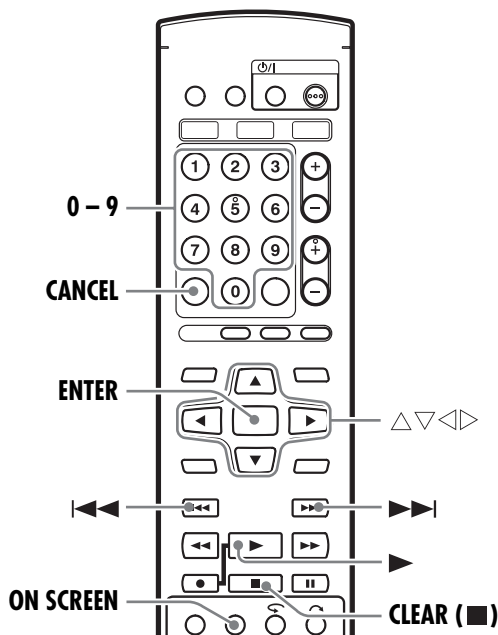

## Program Playback



You can program up to 30 tracks (Video CD or Audio CD) to play back in the desired order.

### While stopped

- 1 Press **ON SCREEN** twice to access the on-screen bar.
- 2 Press  $\triangleleft \triangleright$  to select "PRGM", then press **ENTER**. The program table appears under on-screen bar.




- 3 Press the **number buttons** to enter the track numbers in the desired order.

Examples:

- 1 To select track 5, press the **number button "5"** and **ENTER**.

- 2 To select track 15, press the **number button "1"** and **"5"**.

- 3 To select track 25, press the **number button "2"** and **"5"**.

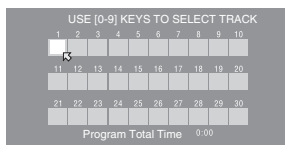

### If you have specified a wrong selection

Press **CANCEL**. The last selection is erased.

Or press **CLEAR** (■). The whole selection is erased.

- 4 Press **▶**. Playback starts in the programmed order.
  - When all of the programmed tracks have been played back, Program Playback stops, but the programmed information remains.
  - To add tracks to the end of the program, perform steps 1 through 3.
  - During Program Playback, pressing **▶▶** skips to the next selection of the program. Pressing **◀◀** returns to the beginning of the current selection.

### To clear the on-screen bar and the contents of the program

Press **ON SCREEN**.

### To cancel Program Playback

Press  $\triangleleft \triangleright$  to select "PRGM", then press **ENTER**.

### NOTE:

Program Playback is not possible depending on the type of disc.

## Random Playback



You can play back all the tracks on the disc in random order.

### While stopped

- 1 Press **ON SCREEN** twice to access the on-screen bar.
- 2 Press  $\triangleleft \triangleright$  to select "RND", then press **ENTER**. Playback starts in random order.



### To clear the on-screen bar

Press **ON SCREEN**.

### To cancel Random Playback

Perform steps 1 and 2.

### NOTE:

The same track will not be played back more than once during Random Playback.

## Select The Switching Interval Of The Slide Show



You can control the switching interval of the slide show.

- 1 Press **ON SCREEN** twice to access the on-screen bar.
- 2 Press  $\triangleleft \triangleright$  to select "JPEG", then press **ENTER**. The pop-up window appears under the selected item.



- 3 Press  $\triangle \nabla$  to select the desired option, then press **ENTER**.
  - Each time you press  $\triangle \nabla$ , the interval changes as follows:  
5 SEC.  $\leftrightarrow$  10 SEC.  $\leftrightarrow$  15 SEC.  $\leftrightarrow$  20 SEC.  $\leftrightarrow$  25 SEC.  $\leftrightarrow$  30 SEC.

### To clear the on-screen bar


Press **ON SCREEN**.

### NOTE:

JPEG files are played back as a slide show. It may take more time to display an image with larger file size.

# Advanced Playback (VHS)

- Turn on the unit.
- Turn on the TV and select the AV mode.
- Press **VHS** so that the VHS lamp lights up on the unit.

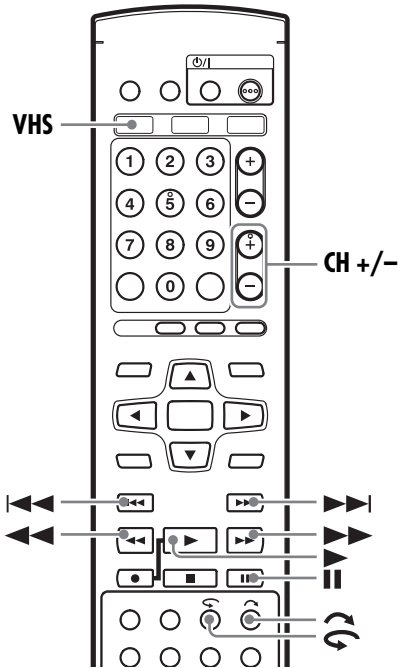

### ATTENTION:

- In the search, still, slow-motion or frame-by-frame playback mode,
- the picture will be distorted.
  - the noise bars will appear.
  - there may be a loss of color.
  - you cannot hear the sound.

## Still Picture/Frame-By-Frame Playback

- 1 Press **II** to pause during playback.
  - If there is vertical jitter, press **CH +/-** to correct the picture.
- 2 Press **II** repeatedly to activate frame-by-frame playback.
  - To resume normal playback, press **▶**.

## Slow Motion

- 1 Press **II** to pause during playback.
- 2 Press and hold **II** for 2 seconds, then release. Press **II** and release again to return to still picture.
  - The speed changes for each direction by pressing **◀◀** and **▶▶** repeatedly.
  - To resume normal playback, press **▶**.

### NOTE:

During slow motion playback, some noise may appear on the TV screen. Press **CH +** or **-** to eliminate the noises.

## High-Speed Search

During playback, press **▶▶** for forward high-speed search, or **◀◀** for reverse high-speed search.

- Each press of the button increases the search speed for each direction.

When pressing **▶▶**:

(SP): +5x ↔ +7x

(EP): +11x ↔ +21x

When pressing **◀◀**:

Once **◀◀** is pressed, reverse search starts in -1x normal playback speed.

After this process, each press of **◀◀** changes the search speed between -5x and -7x in SP mode, -11x and -21x in EP mode.

(SP): -1x → -5x ↔ -7x

(EP): -1x → -11x ↔ -21x

- To resume normal playback, press **▶**.

## Quick Rewind A Little

During playback, press **↶**. The unit rewinds the picture a little (about 7 seconds) and resumes playback.

- If the button is pressed repeatedly, the unit rewinds the pictures continuously and resumes playback.

## Skip Search

During playback, press **↷** 1 to 6 times to skip over unwanted sections.

- Each press initiates an approximately 30-second period of fast-motion playback. Normal playback resumes automatically.
- To resume normal playback, press **▶**.

 
## Index Search

Your unit automatically marks index codes at the beginning of each recording. This function gives you quick access to any one of the 9 index codes in either direction.

### NOTE:

Before starting, make sure the unit is in the Stop mode.

Press **◀◀** or **▶▶** to activate Index Search. "-1" or "+1" is displayed on the front display panel and search begins in the corresponding direction.




- To access index codes 2 through 9, press **◀◀** or **▶▶** repeatedly until the correct index number is displayed.

### Example:

To locate the beginning of B from the current position, press **◀◀** twice.

To locate the beginning of D from the current position, press **▶▶** once.

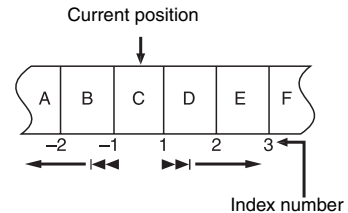

- When the specified index code is located, playback begins automatically.

## Next Function Memory

The Next Function Memory "tells" the unit what to do after rewinding. Before continuing, make sure the unit is in the Stop mode.

### For Automatic Start Of Playback

Press ◀◀, then press ▶ within 2 seconds.

- Outside ring of disc marks blinks on the front display panel.

### For Automatic Cassette Ejection

Press ◀◀, then press ▲ (EJECT) within 2 seconds.

- "⏏" blinks on the front display panel.

## Repeat Playback

Your unit can automatically play back the whole tape 100 times repeatedly.

**1** Press ▶ to start playback.

**2** Press and hold ▶ for over 5 seconds, then release.

 
- "⏮" lights up on the front display panel.
- After playing back a tape 100 times, the unit stops automatically.

**3** Press ■ at any time to stop Repeat Playback.

- Pressing ▶, ◀◀, ▶▶ or || also stops Repeat Playback.

## Manual Tracking

Your unit is equipped with automatic tracking control. During playback, you can override this and adjust the tracking manually by pressing the CH buttons.



**1** During playback, press CH + or – on the unit simultaneously to activate manual tracking.

**2** Press CH + or – to adjust the tracking manually.

- To return to automatic tracking, press CH + or – simultaneously or eject and insert the tape again.

### NOTE:

When a new tape is inserted, the unit enters the automatic tracking mode automatically.

## Soundtrack Selection

Your unit is capable of recording three soundtracks (L, R and NORM) and will play back the one you select.

### During Playback

Pressing AUDIO changes the soundtrack as follows:



TRACK	USE
Front Display Panel	
LR	Hi-Fi sound is played back
L	Sound on the left Hi-Fi channel is played back
R	Sound on the right Hi-Fi channel is played back
NORM	Sound on the normal track is played back
MIX	Both sounds on the Hi-Fi track and normal track are mixed and played back

### NOTE:

"LR" should normally be selected. In this mode, Hi-Fi stereo tapes are played back in stereo, and the normal audio track is played back automatically for tapes with only normal audio.

## VHS Progressive Scan

You can watch the images on VHS deck in the Progressive scan mode via component video.

### ATTENTION:

- Your TV needs to be compatible with Progressive and to have Component video input connectors.
- Make sure that there is no disc in the unit.

**1** Set the Progressive-compatible TV to the component input mode.

**2** Press DVD so that the DVD lamp lights up on the unit.

**3** Press PROGRESSIVE SCAN for 3 or more seconds.

- The video output indicator P lights up on the front display panel.

**4** Press VHS so that the VHS lamp lights up on the unit, then press PROGRESSIVE SCAN.

- "→" lights up on the unit.

### NOTES:



- Be sure to engage the DVD deck in stop mode.
- During still picture in VHS Progressive Scan mode, the images may jitter, but this is not a malfunction.



## Advanced Recording (DVD)

DVD RAM DVD R DVD RW

- Turn on the unit.
- Turn on the TV and select the AV mode.
- Press **DVD** so that the DVD lamp lights up on the unit.

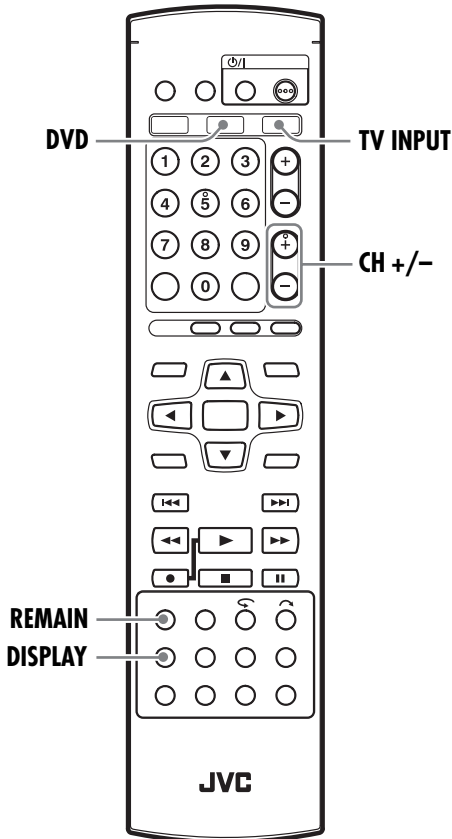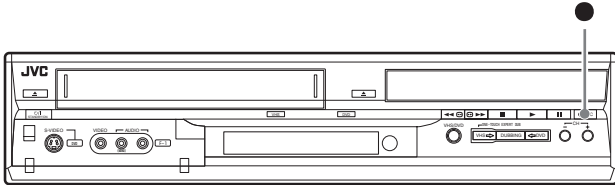

## Instant Timer Recording (ITR)

This easy method lets you record for from 30 minutes to 6 hours (selectable in 30-minute intervals), and shuts the unit off after recording is finished.

- 1 Press **●** on the unit to start recording.
- 2 Press **●** again to engage the ITR mode.
  - On the front display panel, "0:30" appears.
- 3 If you want to record for more than 30 minutes, press **●** to extend the time. Each press extends recording time by 30 minutes.

### NOTE:

You can only perform ITR using the **●** button on the unit.

## Watch Another Program While Recording On The Unit

While recording is going on, you can watch another program on the TV by using the TV's tuner.

### NOTE:

It is required that the remote control is set to be able to operate the TV in advance. (☞ pg. 68)

- 1 During recording, press **TV INPUT** to switch the TV's input mode so that the program selected on the TV appears.
- 2 Slide the **TV/DVD** switch to **TV**.
- 3 Press **CH +/-** repeatedly to select the desired channel.

## Elapsed Recording Time And Disc Remaining Time Indication

During recording, press **DISPLAY** repeatedly until the desired indication appears on the front display panel.

- Each time you press **DISPLAY**, the time indication changes as follows:  
Elapsed recording time → Disc remaining time → Clock → (Back to the beginning)
- You can also check the disc remaining time by pressing **REMAIN** while the unit is stopped or recording is in progress. The list of disc remaining times for all recording modes appears on the TV screen.

## Second Audio Recording

This unit's built-in MTS decoder enables reception of Multichannel TV Sound broadcast. To record a SAP program received, set "2ND AUDIO RECORD" to "ON". (☞ pg. 71)

### NOTE:

When the channel is changed on the unit;

- The "MONO" indicator appears on the screen for about 5 seconds if the program is a monaural broadcast.
- The "STEREO" indicator appears on the screen for about 5 seconds if the program is a stereo broadcast.
- Both "STEREO" and "SAP" indicators appear when a stereo program is accompanied by SAP sound.
- Both "MONO" and "SAP" indicators appear when the main audio on the monaural broadcast is accompanied by SAP sound.

## Free Rate Function

To record the entire program, the unit automatically sets the appropriate recording mode depending on the combination of the total time of the program to be recorded and either the remaining disc space or the specified recording time (from 60 minutes to 480 minutes).

### ■ To record the entire program within the actual remaining disc space

Select "FR (JUST)" in a recording mode selection procedure.


- Note that this function is available only for timer programming recording (➡ pg. 31).

### ■ To record the entire program by specifying the desired recording time


Select "FR60–FR360", "FR420" or "FR480" in a recording mode selection procedure. (➡ pg. 28, 31)

### ■ To record a 25-min. long daily program five times just on the same DVD disc for example

Perform "Manual Timer Programming" (➡ pg. 31) procedure. Be sure to set the recording mode to "FR125" and set Weekly/Daily Rec Function to "MON–FRI" in step 9 to fit the total recording time to the whole disc space.

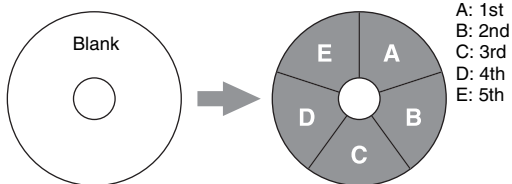

When the same program is recorded in SP mode instead of in "FR125", the 5th program cannot be recorded.


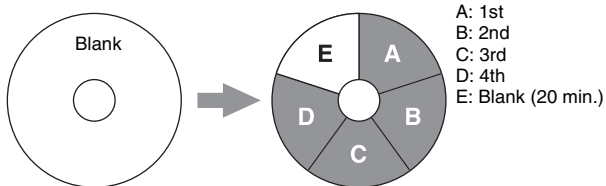


### NOTES:

- You can program this unit to timer-record, regardless of the disc remaining time. When the disc remaining time is not enough, recording may stop in the middle of a program. To avoid this, make sure of the disc remaining time before setting timer programming. **(Example)** If you programmed to timer-record for 60 minutes in SP mode on a 120-minute disc, the disc remaining time would be 30 minutes in XP mode, 60 minutes in SP mode, 120 minutes in LP mode, 180 minutes in EP mode, and 240 minutes in FR480 mode. Timer-recording will not complete beyond these remaining times.
- The maximum recording time of "FR (JUST)" mode is the same as the recording time of FR480 mode. When timer programming a long program in "FR (JUST)" mode on a disc whose remaining time is short, it is recommended to check the disc remaining time in FR480 mode to see if the remaining time is enough for the program.
- Even if more than one program are timer programmed in "FR (JUST)" mode, only the first one is recorded.
- In order to ensure that the recording fits on the disc, this feature may leave a slight non-recorded section at the end of the disc.
- There may be some noise and sound disturbance at the point on the disc where the unit switches the mode.

## Advanced Recording (VHS)

- Turn on the unit.
- Turn on the TV and select the AV mode.
- Press **VHS** so that the VHS lamp lights up on the unit.

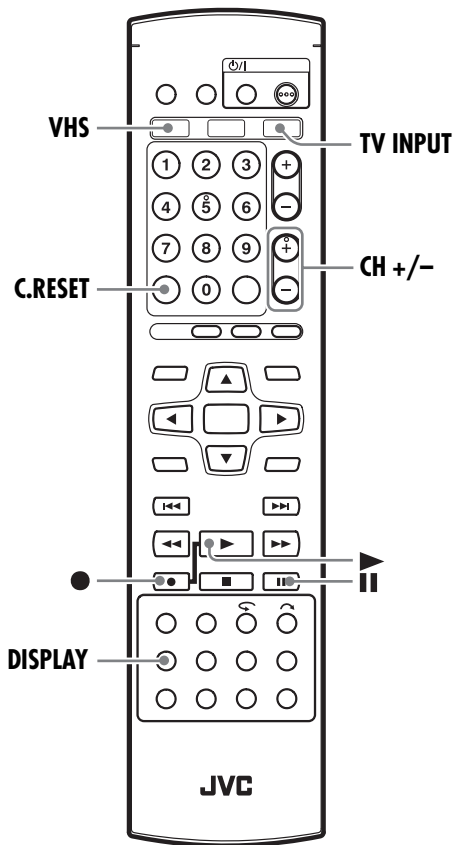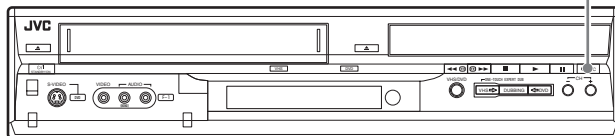

## Watch Another Program While Recording On The Unit

While recording is going on, you can watch another program on the TV by using the TV's tuner.

### NOTE:

If you have a JVC TV, following operations are possible with this remote control. For other manufacturer's TVs, use the TV's remote control.

**1** During recording, press **TV INPUT** to switch the TV's input mode so that the program selected on the TV appears.

**2** Press **TV CH +/-** repeatedly to select the desired channel.

## Instant Timer Recording (ITR)

This easy method lets you record for from 30 minutes to 6 hours (selectable in 30-minutes interval), and shuts the unit off after recording is finished.

**1** Press ● on the unit to start recording.

**2** Press ● again to engage the ITR mode.

- On the front display panel, "0:30" appears.

**3** If you want to record for more than 30 minutes, press ● to extend the time. Each press extends recording time by 30 minutes.

### NOTES:

- You can only perform ITR using the ● button on the unit.
- When the end of the tape is reached during timer recording or Instant Timer Recording, the cassette is automatically ejected and the unit is shut off.
- During Instant Timer Recording, any other timer programmed recording won't start even if their start time has come. In such a case, the timer programmed recording starts (if the end time of the timer programmed recording is set after the end of Instant Timer Recording) after the Instant Timer Recording finishes.

## Elapsed Recording Time Indication

**1** Press **DISPLAY** until a counter reading appears on the front display panel.

**2** Press **C.RESET** to reset the counter before starting recording or playback.

- The counter is reset to "0:00:00" and shows the exact elapsed time as the tape runs. You can check the exact time of a recording or playback.

## Tape Remaining Time

**1** Press **DISPLAY** until the time remaining on the tape appears.

- By pressing the **DISPLAY** button, you can change display to show the clock time, counter reading or tape remaining time.

### NOTE:

Depending on the type of tape being used, the tape remaining time reading may not appear right away, or is not correct.

"--:--" may sometimes appear, or the display may blink on occasion.

## Second Audio Recording

This unit's built-in MTS decoder enables reception of Multichannel TV Sound broadcast. To record a SAP program received, set "2ND AUDIO RECORD" to "ON". (ⓘ pg. 71)

### NOTE:

When the channel is changed on the unit;

- The "ST" appears on the front display panel for about 5 seconds if the program is a stereo broadcast.
- The "SAP" appears on the front display panel for about 5 seconds if the program is a SAP broadcast.
- Both appear when a stereo program is accompanied by SAP sound.

## Active Video Calibration

The Video Calibration checks the condition of the tape in use during playback and recording, and compensates to provide the highest-possible playback and recording pictures. You can set "VIDEO CALIBRATION" to "ON" or "OFF" to your preference.

(ⓘ pg. 73)

### Playback

The unit assesses the quality of the tape once you initiate playback.

- The unit adjusts the playback picture quality based on the quality of the tape in use.
- The Video Calibration is active during automatic tracking.

### Recording

The unit assesses the quality of the tape once you initiate recording.

- The unit spends approximately 7 seconds assessing the condition of the tape, then begins recording.

### ATTENTION:

Since the Video Calibration works before recording actually starts, there is a delay of approximately 7 seconds after ● and ► on the remote control are pressed, or ● on the unit is pressed. To make sure you record the desired scene or program in its entirety, first perform the following steps:

**1** Press and hold **II** and press ● to engage the Record Pause mode.

- The unit then automatically checks the condition of the tape and, after approximately 7 seconds, re-enters Record Pause mode.

**2** Press ► to start recording.

If you want to bypass the Video Calibration and begin recording immediately, set "VIDEO CALIBRATION" to "OFF". (ⓘ pg. 73)


# Library Database DVD Navi



The Library Database DVD Navi enables you to search and select the desired titles recorded on a DVD-RAM/R/RW disc very easily. You can record up to 99 titles on a disc.

Each time a title is recorded on the disc, the information of the title is registered for the Library Database DVD Navi automatically. So, you can confirm the information of the titles recorded on the disc with the Library Database DVD Navi screen. And, you can also select one of the titles recorded using the Library Database DVD Navi.

The following screen appears as the Library Database DVD Navi screen when you press **NAVIGATION**. You can move the arrow to select the desired position on the screen by pressing  $\Delta$   $\nabla$   $\triangleleft$   $\triangleright$  on the remote control.

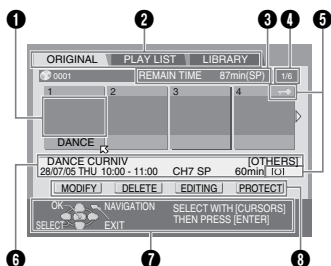

- 1 Index  
(Small still picture of each title)
- 2 Names of functions  
ORIGINAL ( pg. 61)  
PLAY LIST ( pg. 63)  
LIBRARY ( pg. 65)
- 3 Remaining time  
(Based on the recording mode currently selected)
- 4 Current/Total number of title(s)  
(For example, there are 6 recorded titles and the title indicated by the arrow is the 3rd one.)
- 5 Icons  
(Indicate the recording condition for each title.)
- 6 Recording information for the title indicated by the arrow
- 7 Guidance for operations
- 8 Operational commands

## The Icons and their meanings

	This title is write-protected.
	This title has stereo sounds.
	This title was recorded with timer recording.

Using Library Database DVD Navi system, you can easily modify registered information, edit the title or play list, as well as search for the beginning of each title.

### About registration of information

The following information is automatically registered for each title when ordinary recording or timer recording is performed, then stored in an area specified on the unit.

- index\* (reduced still pictures to show program titles)
- program title\*
- category\*
- date and time
- channel
- recording mode
- length of recording time

The items marked with an asterisk (\*) can be easily modified and registered again after recording by using Library Database DVD Navi system.

### About editing of titles

Library Database DVD Navi system has the following functions for editing of titles.

- "Modify Play List Information" ( pg. 63)
- "Delete Title" ( pg. 62)

### The limitations of registration


You can register information up to 99 titles.

When the amount of information is at the limits of registration, you cannot record new title any more. In this case, you need to delete old titles to register new one. ( pg. 62)


### NOTE:

Once a DVD-R/RW (Video mode) disc has been finalized, the displays for original and play list do not appear. Only display for library appears.

### The display for original recording

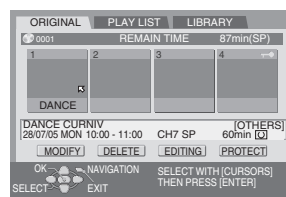


### The display for play list

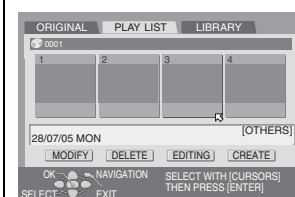


## Scan For Beginning Of Title

- Turn on the TV and select the AV mode.

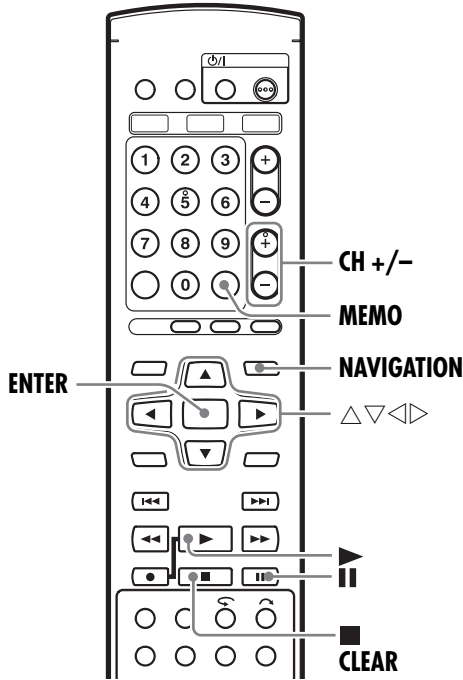

You can scan the beginning of the title easily with the Library Database DVD Navi.


- 1 Load a recorded disc.
- 2 Press **NAVIGATION**. The Library Database DVD Navi screen appears.
- 3 Press  $\Delta \nabla \triangleleft \triangleright$  to select "ORIGINAL", then press **ENTER**.
- 4 Press  $\triangleleft \triangleright$  to select the index (small still pictures) of the desired title.
  - You can press **CH +** or **-** to show other pages.
  - When you want the plural titles to be played back continuously, press **MEMO** after selecting the desired title. The numbers of the playback order appear on the index. You can select up to 30 titles.
  - When you want to correct the order, move the arrow to the desired index and press **MEMO**. The number disappears and the unit renumbers the other titles automatically.
  - When you want to cancel the order, press **CLEAR** (■).
- 5 Press **ENTER** or **▶** to start playback.
- 6 Press **||** to pause playback.
  - To resume normal playback, press **▶**.
- 7 Press **■** to stop playback.

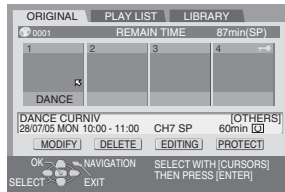

## Modify Original Information




- Turn on the TV and select the AV mode.

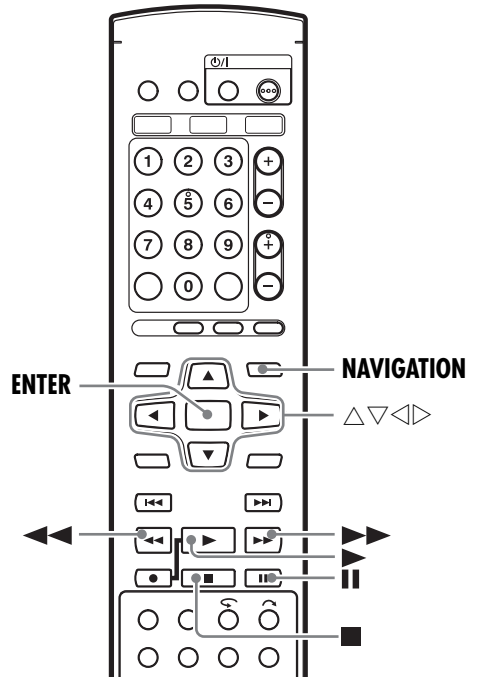

## Modify Index

- 1 Press **NAVIGATION**. The Library Database DVD Navi screen appears.
- 2 Press  $\Delta \nabla \triangleleft \triangleright$  to select "ORIGINAL", then press **ENTER**.
- 3 Press  $\Delta \nabla \triangleleft \triangleright$  to select one title you want to modify, then press  $\nabla$ .
- 4 Press  $\Delta \nabla \triangleleft \triangleright$  to select "MODIFY", then press **ENTER**.
- 5 Press  $\triangleleft \triangleright$  to select "MODIFY INDEX".
- 6 Search for the picture from the title by pressing the appropriate buttons ( $\triangleleft$ ,  $\triangleright$ ,  $\blacktriangleright$ , or **||**). The pictures of the title appear on the left window.
- 7 Confirm the arrow is on "REPLACE", then press **ENTER** to register new index. New index appears on the right window.
  - When you press **ENTER** with the arrow on "RETURN" you can return to the previous screen.
- 8 Press **NAVIGATION** to return to the normal screen.
  - Press **■** to cancel pause mode after pressing **NAVIGATION**.

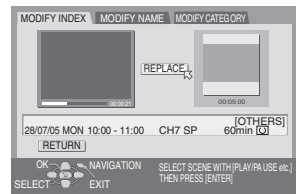

## Modify Title Name

**1** Perform steps 1 to 3 of “Modify Index” (pg. 61) before continuing.

**2** Press  $\Delta \nabla \triangleleft \triangleright$  to select “MODIFY”, then press **ENTER**.


**3** Press  $\triangleleft \triangleright$  to select “MODIFY NAME”.

**4** Press  $\Delta \nabla \triangleleft \triangleright$  to select the desired letter or command, then press **ENTER**. Repeat this process to complete the name.

- To correct a letter, press  $\Delta \nabla \triangleleft \triangleright$  to select “DELETE” or “DELETE ALL”, then press **ENTER**.

- You can enter the letters up to 64.

- You can also enter the new name with the **number buttons**. For example, when you press **2** repeatedly, “A”, “B”, “C”, “a”, “b”, “c”, “2”, and then “A” appear by turns. You can use the following buttons.

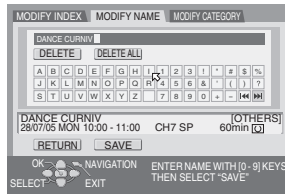

**Number buttons:** for entering letters, numbers and blank space

$\triangleleft \triangleright$  **buttons:** for moving the entering or inserting point

**CLEAR (■) button:** for correcting a letter

$\blacktriangleleft \blacktriangleright \blacktriangleright \blacktriangleleft$  **buttons:** for changing character tables

**5** Press  $\Delta \nabla \triangleleft \triangleright$  to select “SAVE”, then press **ENTER**.

**6** Press  $\Delta \nabla \triangleleft \triangleright$  to select “RETURN”, then press **ENTER**. The Library Database DVD Navi screen appears again.

**7** Press **NAVIGATION** to return to the normal screen.

## Modify Category

**1** Perform steps 1 to 3 of “Modify Index” (pg. 61) before continuing.


**2** Press  $\Delta \nabla \triangleleft \triangleright$  to select “MODIFY”, then press **ENTER**.

**3** Press  $\triangleleft \triangleright$  to select “MODIFY CATEGORY”.

**4** Press  $\Delta \nabla \triangleleft \triangleright$  to select the desired category, then press **ENTER**.

**5** Press **ENTER**. The Library Database DVD Navi screen appears again.

**6** Press **NAVIGATION** to return to the normal screen.

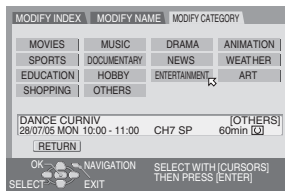

## Protect Title

You can protect titles to prevent accidental erasure of the important titles.

**1** Perform steps 1 to 2 of “Modify Index” (pg. 61) before continuing.

**2** Press  $\Delta \nabla \triangleleft \triangleright$  to select a title you want to protect, then press  $\nabla$ .

**3** Press  $\triangleleft \triangleright$  to select “PROTECT”, then press **ENTER**. “” appears.

- To cancel the protection, repeat 2 – 3 again.

**4** Press **NAVIGATION** to return to the normal screen.

### NOTE:

All the titles on a disc will be deleted once the disc is formatted even if they are protected titles. (pg. 62)

## Delete Title

You cannot record any more with Library Database DVD Navi once the registered titles on the disc reach 99 titles. Deleting unnecessary titles after dubbing or other operations can increase remaining time and available recording capacity. (For DVD-R discs, although it is possible to delete recorded titles, available recording capacity does not increase.) The deleted title is never resumed. Play lists and program information in the unit's library are also deleted.

**1** Perform steps 1 to 2 of “Modify Index” (pg. 61) before continuing.

**2** Press  $\Delta \nabla \triangleleft \triangleright$  to select one title you want to delete, then press  $\nabla$ .

**3** Press  $\Delta \nabla \triangleleft \triangleright$  to select “DELETE”, then press **ENTER**. The message appears for your confirmation.

**4** Press  $\triangleleft \triangleright$  to select “YES”, then press **ENTER**.

- When you cancel the deletion, select “NO”, then press **ENTER**.

**5** Press **NAVIGATION** to return to the normal screen.

## Delete Unwanted Part Of The Title

You can delete unwanted part of the title.

**1** Perform steps 1 to 2 of “Modify Index” (pg. 61) before continuing.

**2** Press  $\triangleleft \triangleright$  to select one title whose unwanted part you want to delete, then press  $\nabla$ .

**3** Press  $\triangleleft \triangleright$  to select “EDITING”, then press **ENTER**.

**4** Press  $\blacktriangleright$  to start playback. The playback pictures appear in the window on the screen. The elapsed playing time starts counting with the arrow on “IN”.

**5** Find the point where you want the deletion to begin, then press **ENTER** with the arrow on “IN”. The edit-in time is fixed and the elapsed playing time starts counting again.

**6** Find the point where you want the deletion to end, then press **ENTER** with the arrow on “OUT”. The edit-out time is fixed.

- Press  $\blacktriangleleft$ ,  $\blacktriangleright$ ,  $\blacktriangleright \blacktriangleright$ ,  $\blacktriangleleft \blacktriangleleft$ ,  $\blacktriangleright \blacktriangleright \blacktriangleright$  or  $\parallel$  to find the edit-in and edit-out points.

**7** Press  $\Delta \nabla \triangleleft \triangleright$  to select “PREVIEW”, then press **ENTER** to preview the edited title.

**8** Press  $\Delta \nabla \triangleleft \triangleright$  to select “EXECUTE”, then press **ENTER**.

- If you do not want to delete the scene, select “CLEAR” and press **ENTER**.

**9** Press  $\triangleleft \triangleright$  to select “YES”, then press **ENTER**. The selected scene is deleted.

- To cancel the deletion, press  $\triangleleft \triangleright$  to select “NO”, then press **ENTER**.

### To modify the points


**1** Press  $\triangleleft \triangleright$  to select “CLEAR”, then press **ENTER**.

**2** Repeat steps 4 – 9 as necessary.

**10** Press **NAVIGATION** to return to the normal screen.

### NOTES:


- There may be a discrepancy of several seconds between the scene you intend to edit, and the scene which is actually edited.
- Available recording capacity may not match the deleted part after deletion.

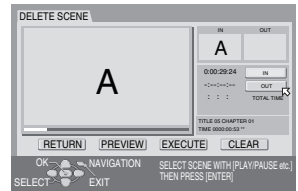

# Modify Play List Information



- Turn on the TV and select the AV mode.

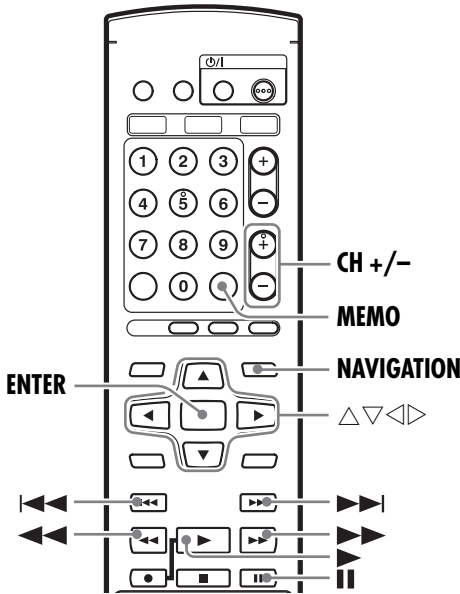

## Play List

It is a collection of the scenes. A play list can be freely edited and played back without ever changing any original recording data. Using the random access of a DVD disc (which allows video data to be instantly read no matter where it is on the disc), a play list includes information such as the timer counter for the playback start point and end point, indexes for checking the contents of recorded data, category information, and more. Playback according to a play list you have created allows you to enjoy various combinations of video images from a single title.

## Create Play List


- 1 Load a DVD-RAM or DVD-RW (VR mode) disc that was recorded with this unit.
- 2 Press **NAVIGATION**. The Library Database DVD Navi screen appears.
- 3 Press  $\Delta \nabla \triangleleft \triangleright$  to select "PLAY LIST", then press  $\nabla$  or **ENTER**.
- 4 Press  $\Delta \nabla \triangleleft \triangleright$  to select "CREATE", then press **ENTER**.
- 5 Press  $\blacktriangleright$  to start playback. The playback pictures appear in the window on the screen. The elapsed playing time starts counting with the arrow on "IN".

- To locate the beginning of other titles, press  $\blacktriangleleft \blacktriangleright \blacktriangleright \blacktriangleright$ .

6 Find the point where you want the created play list to begin, then press **ENTER** with the arrow on "IN". The edit-in time is fixed and the elapsed playing time starts counting again.

7 Find the point where you want the created play list to end, then press **ENTER** with the arrow on "OUT". The edit-out time is fixed.

- Press  $\blacktriangleleft \blacktriangleright \blacktriangleright \blacktriangleright$ ,  $\blacktriangleleft \blacktriangleright \blacktriangleright \blacktriangleright$  or  $\parallel$  to find the edit-in and edit-out points.
- The edit-out point must come after the edit-in point.

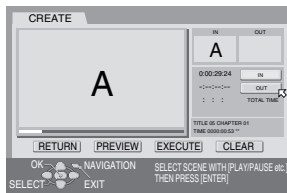

8 Press  $\triangleleft \triangleright$  to select "PREVIEW", then press **ENTER** to preview the play list.

9 Press  $\triangleleft \triangleright$  to select "EXECUTE", then press **ENTER**. The play list is created.

### To modify the points

- 1 Press  $\triangleleft \triangleright$  to select "CLEAR", then press **ENTER**.
- 2 Repeat steps 5 – 9 as necessary.

10 Press **NAVIGATION** to return to the normal screen.

### NOTES:

- There may be a discrepancy of several seconds between the scene you intend to edit, and the scene which is actually edited.
- The title, index and category of the play list can be modified in the same way as "ORIGINAL". (See pg. 61)
- You can modify the play list that has just been created here by adding, moving, or deleting unwanted parts to create a digest edition, etc.

## Add Scenes To A Play List

1 Perform steps 1 to 3 of "Create Play List" (See pg. 63) before continuing.

2 Press  $\triangleleft \triangleright$  to select the play list to which you wish to add a scene, then press  $\nabla$ .

3 Press  $\triangleleft \triangleright$  to select "EDITING", then press **ENTER**.

4 Press  $\triangleleft \triangleright$  to select "ADD SCENE".

5 Press  $\blacktriangleright$  to start playback. The playback pictures appear in the window on the screen. The elapsed playing time starts counting with the arrow on "IN".

- To locate the beginning of other titles, press  $\blacktriangleleft \blacktriangleright \blacktriangleright \blacktriangleright$ .

6 Find the point where you want the added scene to begin, then press **ENTER** with the arrow on "IN". The edit-in time is fixed and the elapsed playing time starts counting again.

7 Find the point where you want the added scene to end, then press **ENTER** with the arrow on "OUT". The edit-out time is fixed.

- Press  $\blacktriangleleft \blacktriangleright \blacktriangleright \blacktriangleright$ ,  $\blacktriangleleft \blacktriangleright \blacktriangleright \blacktriangleright$  or  $\parallel$  to find the edit-in and edit-out points.

8 Press  $\triangleleft \triangleright$  to select "PREVIEW", then press **ENTER** to preview approximately 5 seconds before and after the edited scene.

9 Press  $\triangleleft \triangleright$  to select "EXECUTE", then press **ENTER**. The selected scene is added.

### To modify the points

- 1 Press  $\triangleleft \triangleright$  to select "CLEAR", then press **ENTER**.
- 2 Repeat steps 5 – 9 as necessary.

10 Press **NAVIGATION** to return to the normal screen.

### NOTE:

There may be a discrepancy of several seconds between the scene you intend to edit, and the scene which is actually edited.

## Move Scenes

1 Perform steps 1 to 3 of "Create Play List" (See pg. 63) before continuing.



2 Press  $\triangleleft \triangleright$  to select a play list into which you wish to move a scene, then press  $\nabla$ .

3 Press  $\triangleleft \triangleright$  to select "EDITING", then press **ENTER**.

4 Press  $\triangleleft \triangleright$  to select "MOVE SCENE".

5 Press  $\blacktriangleright$  to start playback. The playback pictures appear in the window on the screen. The elapsed playing time starts counting with the arrow on "IN".

- To locate the beginning of other titles, press  $\blacktriangleleft \blacktriangleright \blacktriangleright \blacktriangleright$ .

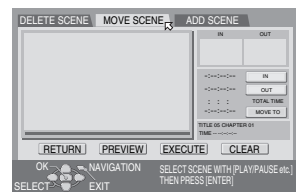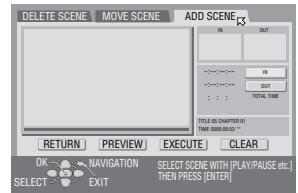

**6** Find the point where you want the moved scene to begin, then press **ENTER** with the arrow on “IN”. The edit-in time is fixed and the elapsed playing time starts counting again.

**7** Find the point where you want the moved scene to end, then press **ENTER** with the arrow on “OUT”. The edit-out time is fixed.

**8** Press **▶** to start playback.

**9** Find the point where you want the moved scene to be moved, then press **ENTER** with the arrow on “MOVE TO”.

• Press **◀◀**, **▶▶**, **◀▶**, **▶◀** or **||** to find the edit-in, edit-out and move-to points.

**10** Press **◀▶** to select “PREVIEW”, then press **ENTER** to preview the part approximately 5 seconds before and after the point to which the scene has been moved.

**11** Press **◀▶** to select “EXECUTE”, then press **ENTER**. The selected scene is moved.

#### To modify the points

**1** Press **◀▶** to select “CLEAR”, then press **ENTER**.

**2** Repeat steps **5 – 11** as necessary.

**12** Press **NAVIGATION** to return to the normal screen.

#### NOTE:

There may be a discrepancy of several seconds between the scene you intend to edit, and the scene which is actually edited.

## Delete Unwanted Part From Play List

**1** Perform steps **1 to 3** of “Create Play List” (pg. 63) before continuing.

**2** Press **◀▶** to select a play list from which you wish to delete unwanted parts, then press **▽**.

**3** Press **◀▶** to select “EDITING”, then press **ENTER**.

**4** Press **◀▶** to select “DELETE SCENE”, then press **ENTER**.

**5** Press **▶** to start playback. The playback pictures appear in the window on the screen. The elapsed playing time starts counting with the arrow on “IN”.

• To locate the beginning of other titles, press **◀◀▶▶**.

**6** Find the point where you want the deletion to begin, then press **ENTER** with the arrow on “IN”. The edit-in time is fixed and the elapsed playing time starts counting again.

**7** Find the point where you want the deletion to end, then press **ENTER** with the arrow on “OUT”. The edit-out time is fixed.

• Press **◀◀**, **▶▶**, **◀▶**, **▶◀** or **||** to find the edit-in and edit-out points.

**8** Press **◀▶** to select “PREVIEW”, then press **ENTER** to preview the scene approximately 5 seconds before and after the deleted part.

**9** Press **◀▶** to select “EXECUTE”, then press **ENTER**. The selected scene is deleted.

#### To modify the points


**1** Press **◀▶** to select “CLEAR”, then press **ENTER**.

**2** Repeat steps **5 – 9**.

**10** Press **NAVIGATION** to return to the normal screen.

#### NOTE:

There may be a discrepancy of several seconds between the scene you intend to edit, and the scene which is actually edited.

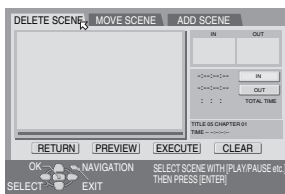

## Play Back Play List

**1** Perform steps **1 to 3** of “Create Play List” (pg. 63) before continuing.

**2** Press **◀▶** to select the index (small still pictures) of the desired play list.

• You can press **CH + or -** to show other pages.

• When you want the plural play lists to be played back continuously, press **MEMO** after selecting the desired play lists.

The numbers of the playback order appear on the index. You can select up to 30 play lists.

• When you want to correct the order, move the arrow on the desired index and press **MEMO**. The number disappears and the unit renumbers the other play lists automatically.


• When you want to cancel the order, press **CLEAR (■)**.

**3** Press **ENTER** or **▶** to start playback.

**4** Press **||** to pause playback.

• To resume normal playback, press **▶**.

**5** Press **■** to stop playback.

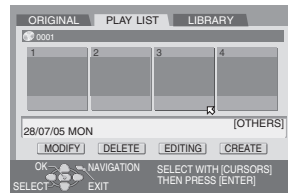

## Delete Play List

**1** Perform steps **1 to 3** of “Create Play List” (pg. 63) before continuing.

**2** Press **◀▶** to select one play list you want to delete, then press **▽**.

**3** Press **◀▶** to select “DELETE”, then press **ENTER**.

**4** Press **◀▶** to select “YES”, then press **ENTER**.

• When you cancel the deletion, select “NO”, then press **ENTER**.

**5** Press **NAVIGATION** to return to the normal screen.

#### NOTE:

Even if a play list is deleted, the titles recorded on a DVD disc and the library information are not affected at all.

## Modify Index

**1** Perform steps **1 to 3** of “Create Play List” (pg. 63) before continuing.

**2** Perform steps **3 to 8** of “Modify Index” (pg. 61).

## Modify Play List Name

**1** Perform steps **1 to 3** of “Create Play List” (pg. 63) before continuing.

**2** Press **△▽◀▶** to select one title you want to modify, then press **▽**.

**3** Perform steps **2 to 7** of “Modify Title Name” (pg. 62).

## Modify Category

**1** Perform steps **1 to 3** of “Create Play List” (pg. 63) before continuing.

**2** Press **△▽◀▶** to select one play list you want to modify, then press **▽**.

**3** Perform steps **2 to 6** of “Modify Category” (pg. 62).




# Modify Library Information



Title information can be registered in the unit's memory for up to 1,300 titles. It is helpful when finding out on which disc the desired program is recorded.

- Turn on the TV and select the AV mode.

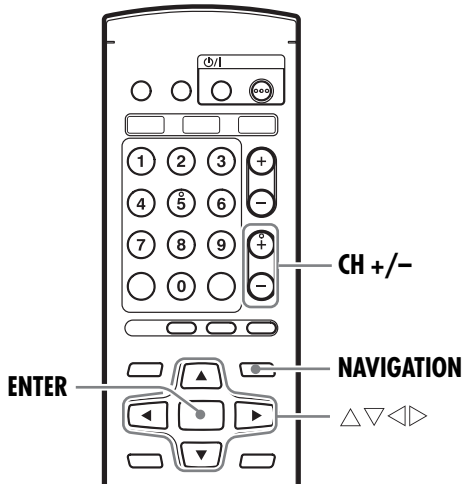

## Scan For Title From Library

- 1 Press **NAVIGATION**. The Library Database DVD Navi screen appears.
- 2 Press  $\Delta \nabla \triangleleft \triangleright$  to select "LIBRARY", then press **ENTER**.

- 3 Press  $\triangleleft \triangleright$  to select the appropriate sort button to sort the information, then press **ENTER**.  
 "DISC No.": Sort by disc number  
 "CATEGORY": Sort by category  
 "DATE": Sort by date  
 "NAME": Sort by name



- The sorting order can be switched between ascending order and descending order by pressing the sort buttons.

- 4 Press  $\triangleleft \triangleright$  to select the desired title, then press **ENTER**.

- You can press **CH +** or **-** to show other pages.
- Playback begins automatically after the selected title is located.

### When the disc that contains the selected title is not loaded

A screen prompting you to load the designated disc appears. Place the disc whose number is displayed on the screen after pressing **ENTER** to close the prompt screen. Then perform steps 1 to 4.

### NOTE:

If a disc registered in the library is recorded or modified on DVD units from other manufacturers, it may become impossible to operate properly.

## Register Disc

- 1 Load a disc you want to register.
- 2 Press **NAVIGATION**. The Library Database DVD Navi screen appears.
- 3 Press  $\Delta \nabla \triangleleft \triangleright$  to select "LIBRARY", then press **ENTER**.
- 4 Press  $\triangleleft \triangleright$  to select "REGISTER", then press **ENTER**.
- 5 Press  $\triangleleft \triangleright$  to select "REGISTER", then press **ENTER** to confirm the registration.
- 6 Press **NAVIGATION** to return to the normal screen.

### NOTES:

- It is not possible to register discs used for On-Disc Timer Programming. (pg. 32)
- It is not possible to register discs formatted on devices other than JVC's DVD recorders.
- It is not possible to register discs recorded on devices other than JVC's DVD recorders.
- It is not possible to register discs when "SAVE AS LIBRARY" is set to "OFF". (pg. 71)

## Delete Information

- 1 Press **NAVIGATION**. The Library Database DVD Navi screen appears.
- 2 Press  $\Delta \nabla \triangleleft \triangleright$  to select "LIBRARY", then press **ENTER**.
- 3 Press  $\Delta \nabla \triangleleft \triangleright$  to select the appropriate sort button to sort the information, then press **ENTER**.
- 4 Press  $\triangleleft \triangleright$  to select a title you want to delete, then press  $\nabla$ .
- 5 Press  $\Delta \nabla \triangleleft \triangleright$  to select "DELETE", then press **ENTER**.
- 6 Press  $\triangleleft \triangleright$  to select "DELETE", then press **ENTER** to confirm the deletion.
- 7 Press **NAVIGATION** to return to the normal screen.

## Playback With MP3/JPEG Navigation


MP3

JPEG

This unit can play back discs that MP3 sound files and JPEG image files taken with digital still cameras or other devices are recorded.

The MP3/JPEG Navigation enables you to search and select the desired files recorded on CD-R/RW or CD-ROM discs very easily.

The following screen appears as the MP3/JPEG Navigation screen when you press **NAVIGATION**. You can move the arrow to select the desired position on the screen by pressing  $\triangle \nabla \triangleleft \triangleright$  on the remote control.

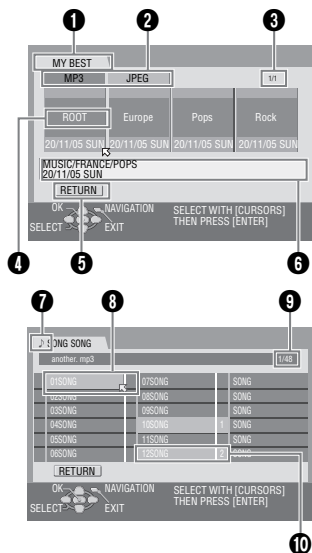

- 1 Name of the inserted disc.
- 2 Sort buttons ("MP3" / "JPEG")
- 3 Selected group number/total number of groups on the disc
- 4 Group name
- 5 Return button ("RETURN")
- 6 Group name/Created date
- 7 File type indicator  
♪: MP3  
📷: JPEG
- 8 Selected file
- 9 Selected file number/total number of files in the group that contains the selected file
- 10 Title number/file name

## Locating The Desired Group And Tracks

- 1 Load a disc.
- 2 Press **NAVIGATION**. The MP3/JPEG Navigation screen appears.
- 3 **For MP3 Playback**  
Press  $\triangleleft \triangleright$  to select "MP3". Only groups which contain MP3 files appear.
- 4 **For JPEG Playback**  
Press  $\triangleleft \triangleright$  to select "JPEG". Only groups which contain JPEG files appear.
- 4 Press  $\triangleleft \triangleright$  to select the desired group, then press **ENTER**.
  - For MP3 Playback**
    - The tracks in the selected group appear.
  - For JPEG Playback**
    - The images in the selected group appear.
- 5 Press  $\triangle \nabla \triangleleft \triangleright$  to select the desired item, then press **ENTER**. The unit starts playback from the selected item.
  - The unit stops when all items in the selected group are played back.

### NOTES:

- If you press  $\blacktriangleright$  instead of **ENTER** in step 4, the unit starts playback from the first file of the group.
- JPEG files are played back as a slide show at the set intervals. (☞ pg. 54)
- If a file name includes any 2-byte character, the unit may not show the file name correctly.
- Press  $\triangle \nabla$  to select "RETURN", then press **ENTER** to return to the screen that shows the group(s).
- The order of the groups and items shown in steps 4 and 5 may differ from the order shown on your PC.

## Program Playback

- 1 Perform steps 1 to 4 of "Locating The Desired Group And Tracks" above before continuing.
- 2 Press  $\triangle \nabla \triangleleft \triangleright$  to select the desired item, then press **MEMO** in the desired order.
  - The order number appears on the left of the track name.
  - Repeat this step as necessary.
  - To cancel the track, press  $\triangle \nabla \triangleleft \triangleright$  to select the track, then press **CANCEL**.
  - Pressing **CLEAR** (■) clears all the order numbers.
- 3 Press  $\blacktriangleright$  to start playback.
  - To quit the Program Playback, press ■.
  - Repeat playback can be performed if it is set as such on the on-screen bar. (☞ pg. 51)

### NOTES:

- It is not possible to select tracks and images simultaneously.
- It is not possible to select tracks or images in other groups.

### On completion of the playback of all the items

- 1 Perform steps 1 to 4 of "Locating The Desired Group And Tracks" above.
- 2 Press **CLEAR** (■).
  - The order numbers are reset and cleared.
- 3 Press **NAVIGATION** to complete the procedure.

## Arrange your style

<b>Remote control setting .....</b>	<b>68</b>
How to change the code or how to operate your TV set with this remote control.	
<b>For better sound .....</b>	<b>69</b>
Using Dolby Digital or DTS equipment	
<b>It can be more useful by changing your settings!</b>	
<b>For DVD operations.....</b>	<b>70</b>
<b>For VHS operations .....</b>	<b>73</b>
<b>Format.....</b>	<b>74</b>
Before you start recording on a new disc	
<b>Finalize .....</b>	<b>75</b>
To play back a disc on other DVD players	



## Need help?

<b>Tips for your trouble .....</b>	<b>76</b>
<b>Specifications .....</b>	<b>80</b>
<b>Appendix – Language code list – .....</b>	<b>81</b>
<b>What do you want to know? – Terms – .....</b>	<b>82</b>
<b>WARRANTY (Only in U.S.A.) .....</b>	<b>83</b>

## Remote Control Functions

### Remote Control 1/2/3/4 Code Switching

The remote control is capable of controlling four JVC video units independently. Each of the units can respond to one of four codes (1, 2, 3 or 4). The remote control is preset to send 3 code signals because your unit is initially set to respond to 3 code signals. You can easily modify your unit to respond to 1, 2 or 4 code signals.

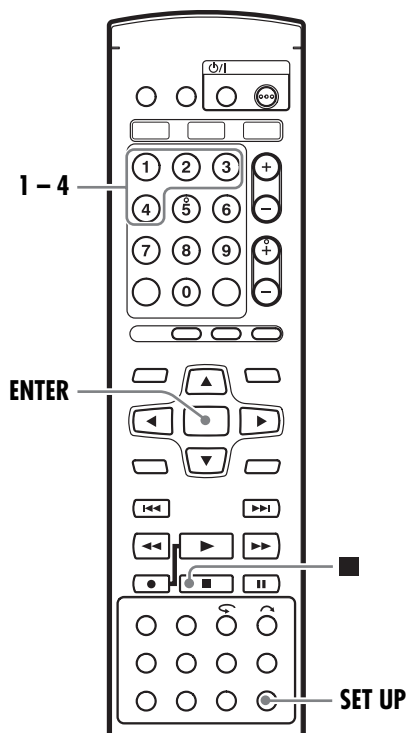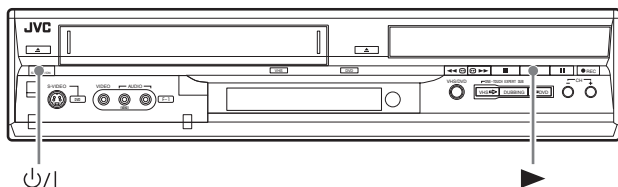

- Keep pressing **SET UP** down during step 1.

**1** Press the **number button** "1" for 1, "2" for 2, "3" for 3 or "4" for 4 to change the remote control code, then press **ENTER**.


**2** Press  $\phi/I$  on the unit to turn off the unit.

**3** Press  $\blacktriangleright$  on the unit for over 5 seconds while the unit is turned off. The code currently set appears on the front display panel.

**4** Press  $\blacksquare$  on the remote control to change the unit's code. The code currently set on the remote control blinks on the front display panel for approximately 5 seconds, and is applied to the unit.

#### NOTE:

When "POWER SAVE" is set to "ON" (pg. 71), it is not possible to change the remote code.

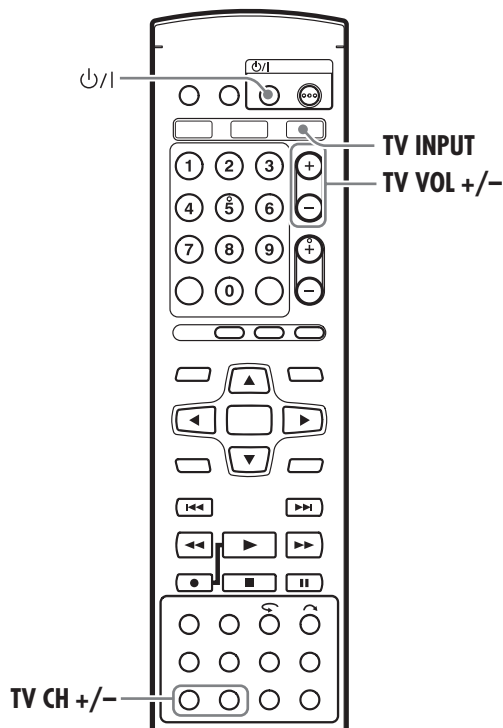

### Controlling your TV (only for JVC TVs)

The remote control can operate your JVC TV. Turning power on/off, changing input mode, selecting channel and volume setting are possible. Other manufacturer's TVs cannot be operated by this remote control.

## Connecting To A Dolby Digital Decoder Or An Amplifier With Built-in DTS

These instructions enable you to connect your unit to a Dolby Digital Decoder or an amplifier with built-in DTS.


1 Connect the unit and a Dolby Digital Decoder or an amplifier with built-in DTS using an optional coaxial cable.

### NOTES:

- For Dolby Digital sound, set "DIGITAL AUDIO OUT" to "DOLBY DIGITAL/PCM". (pg. 70)
- For DTS sound, set "DIGITAL AUDIO OUT" to "STREAM/PCM". (pg. 70)


### CAUTIONS:

- This unit has a dynamic range of more than 110 dB with regards to its Hi-Fi audio capability. It is recommended that you check the maximum level if you are going to listen to the Hi-Fi audio signals through a stereo amplifier. A sudden surge in the input level to the speakers may damage them.
- Some speakers and televisions are specially shielded to prevent television interference. If both are of the non-shielded type, do not place the speakers adjacent to the TV set as this can adversely affect the playback picture.

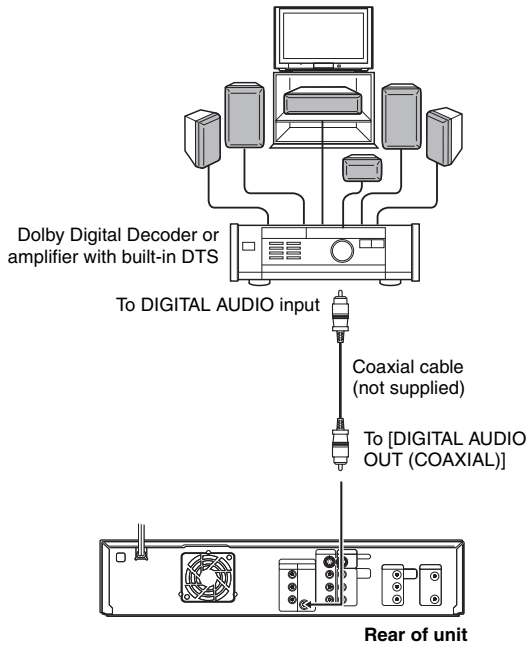

## Mode Set (DVD Deck)

- Turn on the unit.
- Turn on the TV and select the AV mode.

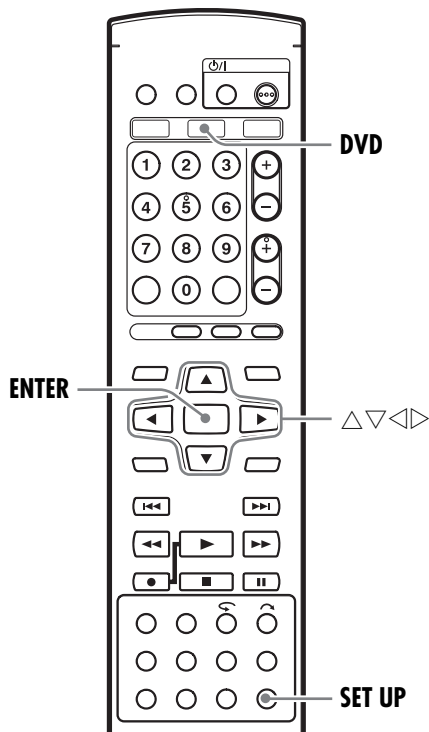


Various modes of this unit are categorized into menus nested in 2 levels shown in the following table. To change the settings of these modes, find the desired mode in the menu (for details on each menu, see pages 70 through 72), then follow the procedure below.

<b>DVD SET UP</b>	LANGUAGE SET (☞ pg. 20) AUDIO OUTPUT (☞ pg. 70) UTILITY (☞ pg. 74, 75)
<b>FUNCTION SET UP</b>	VIDEO IN/OUT (☞ pg. 23, 71) RECORDING SET (☞ pg. 71) DISPLAY SET (☞ pg. 71) OTHERS (☞ pg. 72)
<b>INITIAL SET UP</b>	TUNER SET (☞ pg. 22) CLOCK SET (☞ pg. 21)

- The procedure below shows how to set the desired option of the "2ND AUDIO RECORD" mode as an example.

- 1 Press **DVD** so that the DVD lamp lights up on the unit.
- 2 Press **SET UP** to access the Main Menu screen.
- 3 Press  $\triangleleft \triangleright$  to select "FUNCTION SET UP", then press  $\nabla$ .
- 4 Press  $\triangleleft \triangleright$  to select "RECORDING SET", then press  $\nabla$ .
- 5 Press  $\triangle \nabla$  to select "2ND AUDIO RECORD", then press **ENTER**.
- 6 Press  $\triangle \nabla$  to select the desired option, then press **ENTER**.
- 7 Press **SET UP** to complete the setting.

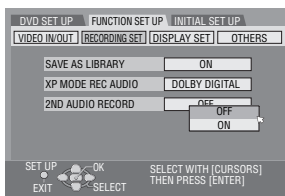

\* The **boldface** settings below indicate the settings at your purchase.

### AUDIO OUTPUT

#### ■ DIGITAL AUDIO OUT — DOLBY DIGITAL/PCM / **STREAM/PCM** / PCM ONLY

Set to the appropriate mode according to the type of the device connected to [DIGITAL AUDIO OUTPUT] connector.  
**DOLBY DIGITAL/PCM:** Select this when you connect the digital input connector of a Dolby Digital Decoder or an amplifier with a built-in Dolby Digital Decoder.

**STREAM/PCM:** Select this when you connect the digital input connector of an amplifier with a built-in DTS, Dolby Digital, or MPEG multichannel decoder.

**PCM ONLY:** Select this when you connect the linear PCM digital input of other audio equipment (amplifier, MD or DAT deck, etc.).

#### **NOTE:**

If you watch or play back a title which contains multiple audio languages, select "PCM ONLY" in advance and choose main or sub audio with **AUDIO**.

#### ■ ANALOG AUDIO OUT — **STEREO** / DOLBY SURROUND

Select the appropriate setting to accommodate the unit to the connected A/V equipment. This function takes effect when a DVD VIDEO disc is played back.

**STEREO:** Select this when listening to conventional two-channel stereo audio with the unit's [AUDIO OUTPUT] connectors connected to a stereo amplifier/receiver or TV set, or in case you want to record the audio from a DVD VIDEO disc to a Mini Disc, etc.

**DOLBY SURROUND:** Select this when listening to multichannel surround audio with the unit's [AUDIO OUTPUT] connectors connected to an amplifier/receiver with a built-in surround decoder or a surround decoder.

#### ■ **D. RANGE CONTROL** — **NORMAL** / WIDE RANGE / TV MODE

The dynamic range (the difference between the loudest sound and the quietest one) can be compressed during playback of a program encoded in Dolby Digital format.

This function takes effect when a DVD VIDEO disc recorded in Dolby Digital format is played back at low or middle volume.

**NORMAL:** Normally select this setting to activate this function.

**WIDE RANGE:** Select this to deactivate this function when you enjoy wide dynamic range program.

**TV MODE:** Select this when you hear the sound through the TV's speaker(s).

#### **NOTES:**

- This function has no effect on programs other than that recorded in Dolby Digital format.
- The effect of "NORMAL" and "WIDE RANGE" may not be different depending on discs.

#### ■ **OUTPUT LEVEL** — **STANDARD** / LOW

You can lower the output level of analog audio to accommodate the unit to the connected A/V equipment.

**STANDARD:** Normally select this setting.

**LOW:** The output level of analog audio is lowered.

## VIDEO IN/OUT

### ■ MONITOR TYPE — 4:3LB / 4:3PS / 16:9 AUTO / 16:9 FIX

You can select the monitor type depending on the TV used when you play back DVD VIDEO discs recorded for wide-screen TVs. For details, refer to "Monitor Set" (ⓘ pg. 23).

### ■ FRONT AUX F-1 — VIDEO / S-VIDEO

Select the appropriate mode depending on the connector (F-1) being used on the front panel. (ⓘ pg. 40)

**VIDEO:** To use the [VIDEO] input connector on the front panel.

**S-VIDEO:** To use the [S-VIDEO] input connector on the front panel.

### ■ REAR AUX L-1 — VIDEO / S-VIDEO

Select the appropriate mode depending on the connector (L-1) being used on the rear panel. (ⓘ pg. 41)

**VIDEO:** To use the [VIDEO INPUT] connector on the rear panel.

**S-VIDEO:** To use the [S-VIDEO INPUT] connector on the rear panel.

## RECORDING SET

### ■ SAVE AS LIBRARY — OFF / ON

When this function is set to "ON", the recording information is automatically stored in the library. For details, refer to "Modify Library Information" (ⓘ pg. 65).

### ■ XP MODE REC AUDIO — DOLBY DIGITAL / LINEAR PCM

You can select the audio format when you record a title in XP mode. When this function is set to "LINEAR PCM", you can obtain a high-quality audio sound.

**DOLBY DIGITAL:** To record in Dolby Digital format.

**LINEAR PCM:** To record in Linear PCM format.

### ■ 2ND AUDIO RECORD — OFF / ON

**When this function is set to "ON";**

If a SAP program is received, the SAP audio is recorded on L/R tracks. The main audio is not recorded.

If a non-SAP program is received, the main audio is recorded on L/R tracks.

**When this function is set to "OFF",** the SAP audio cannot be recorded.

#### NOTE:

When the channel is changed on the unit;

#### For DVD deck

- The "MONO" indicator appears on the screen for about 5 seconds if the program is a monaural broadcast.
- The "STEREO" indicator appears on the screen for about 5 seconds if the program is a stereo broadcast.
- Both "STEREO" and "SAP" indicators appear when a stereo program is accompanied by SAP sound.
- Both "MONO" and "SAP" indicators appear when the main audio on the monaural broadcast is accompanied by SAP sound.

#### For VHS deck

- The "ST" appears on the front display panel for about 5 seconds if the program is a stereo broadcast.
- The "SAP" appears on the front display panel for about 5 seconds if the program is a SAP broadcast.
- Both appear when a stereo program is accompanied by SAP sound.

## DISPLAY SET

### ■ SUPERIMPOSE — OFF / AUTO

When this function is set to "AUTO", various operational indicators appear on the TV screen. Messages appear in the selected language. (ⓘ pg. 20)

**OFF:** To turn off superimposed indications.

**AUTO:** To superimpose operational indications for approximately five seconds just after the corresponding operation.

#### NOTES:

- Even when "SUPERIMPOSE" is set to "OFF", you can display the various operational indicators by pressing **ON SCREEN**. To clear the operational indicators, press **ON SCREEN** again.
- When you use this unit as the source player for editing, be sure to set "SUPERIMPOSE" to "OFF" before starting. (ⓘ pg. 71)
- When you select "AUTO", during playback, the operation mode indicators may be disturbed depending on the type of disc being used.

### ■ GRAY BACK — OFF / ON

When this function is set to "ON", the TV screen becomes all gray when receiving a channel not in use.

#### NOTE:

When you want to receive an unstable channel with poor signals, set this function to "OFF".

### ■ DIMMER — BRIGHT / DIMMED1 / DIMMED2 / OFF

You can change the brightness of the front display panel.

**BRIGHT:** To turn on the light on the front display panel.

**DIMMED1/DIMMED2:** To change the brightness level.

**OFF:** To turn off the light on the front display panel.

### ■ POWER SAVE — OFF / ON

When this function is set to "ON", you can reduce the power consumption while the unit is turned off.

- During Power Save mode —
  - the front display panel will be turned off.
- Power Save does not work when —
  - the unit is in the Timer mode.
  - the unit's power is turned off after timer-recording or Instant Timer Recording.
  - the Automatic Satellite Program Recording mode is engaged. (ⓘ pg. 35)
- It takes some time for the unit to complete initialization after you turn on the unit power, with "WAKE UP" blinking on the front display panel.

### ■ ON SCREEN LANGUAGE — ENGLISH / FRANCAIS / ESPAÑOL

This unit offers you the choice to view on-screen messages in 3 different languages.

For details, refer to "On-screen Language Set" (ⓘ pg. 20).

## OTHERS

## ■ RESUME — OFF / ON / DISC RESUME

When this function is set to "ON" or "DISC RESUME", you can use the resume function. (☞ pg. 44)

OFF: You cannot use the resume function.

ON: You can start playback from the resume point of the placed disc.

DISC RESUME: The unit retains a memory of the resume points of the last 30 discs played back, even though they have been ejected.

## NOTE:

"DISC RESUME" setting works on DVD VIDEO, VCD and already finalized DVD-R/DVD-RW (video mode) discs. For other types of discs, the function under "ON" setting will be applied even if "RESUME" is set to "DISC RESUME".

## ■ AUTO POWER OFF — OFF / 3H

When this function is set to "3H", the unit is turned off automatically if no operation is done within 3 hours.

## Scan Mode Set

If you connect the unit and TV with Component Video Connection (☞ pg. 18), you can select the scan mode from two modes:

Interlaced scan mode which is used in the conventional TV system, and Progressive scan mode which enables reproduction of higher-quality images.

## ■ Interlaced scan

In the conventional video system, a picture is shown on the display monitor in two halves. The Interlaced scan system places lines of the second half of the picture in-between lines of the first half of the picture.


## ■ Progressive scan

Progressive scan displays all the horizontal lines of a picture at one time, as a single frame. This system can convert the interlaced video from DVD into progressive format for connection to a progressive display. It dramatically increases the vertical resolution.

## ATTENTION:

- Your TV needs to be compatible with Progressive.
- Make sure that there is no disc in the unit.

- Turn on the unit.
- Turn on the TV and select the AV mode.

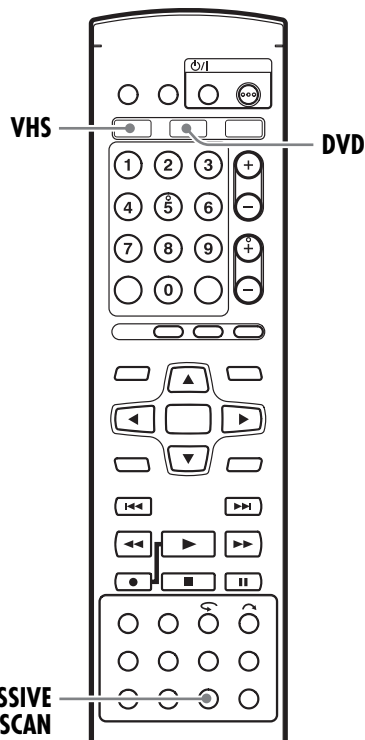

**1** Press **DVD** so that the DVD lamp lights up on the unit.

**2** Press **PROGRESSIVE SCAN** for 3 or more seconds.

- Video output indicator (P) lights on the front display panel if Progressive scan mode has been established. (☞ pg. 13)
- Each press of **PROGRESSIVE SCAN** for 3 or more seconds switches the scan mode.

## NOTES:

- Interlaced scan mode is the setting at your purchase.
- Interlaced scan mode might be suitable depending on video material.
- Scan mode cannot be set while menu screen is displayed.
- When the Progressive scan mode is engaged, no video signal is output from [S VIDEO OUTPUT] connector and [VIDEO/AUDIO OUTPUT] connectors.

## Watch the images on VHS deck in the Progressive scan mode via component video

**1** Set the Progressive-compatible TV to the component input mode.

**2** Press **DVD** so that the DVD lamp lights up on the unit.

**3** Press **PROGRESSIVE SCAN** for 3 or more seconds.

- The video output indicator lights up on the front display panel.

**4** Press **VHS** so that the VHS lamp lights up on the unit, then press **PROGRESSIVE SCAN**.

- "→" lights up on the unit.


## NOTES:

- Be sure to engage the DVD deck in stop mode.
- During still picture in VHS Progressive Scan mode, the images may jitter, but this is not a malfunction.



# Mode Set (VHS Deck)

- Turn on the unit.
- Turn on the TV and select the AV mode.

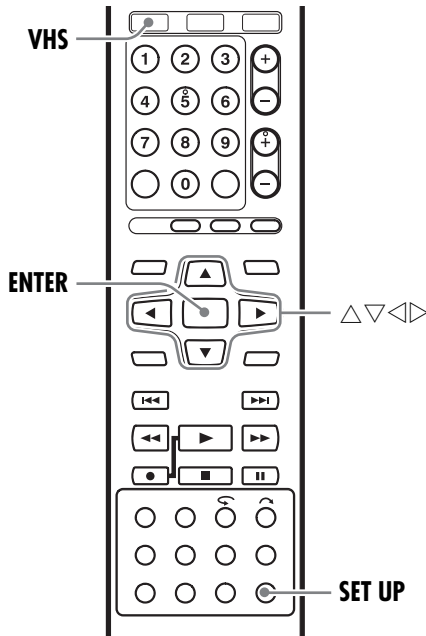


Various modes of this unit are categorized into menus nested in 2 levels shown in the following table. To change the settings of these modes, find the desired mode in the menu (for details on each menu, see page 73), then follow the procedure below.

<b>VHS SET UP</b>	( <a href="#">pg. 73</a> )
<b>FUNCTION SET UP*</b>	VIDEO IN/OUT ( <a href="#">pg. 23, 71</a> ) RECORDING SET ( <a href="#">pg. 71</a> ) DISPLAY SET ( <a href="#">pg. 71</a> ) OTHERS ( <a href="#">pg. 72</a> )
<b>INITIAL SET UP*</b>	TUNER SET ( <a href="#">pg. 22</a> ) CLOCK SET ( <a href="#">pg. 21</a> )

- The procedure below shows how to set the desired option of the "VIDEO CALIBRATION" mode as an example.

- 1 Press **VHS** so that the VHS lamp lights up on the unit.
- 2 Press **SET UP** to access the Main Menu screen.
- 3 Press  $\triangleleft \triangleright$  to select "VHS SET UP", then press  $\nabla$ .
- 4 Press  $\triangle \nabla$  to select "VIDEO CALIBRATION", then press **ENTER**.
- 5 Press  $\triangle \nabla$  to select the desired option, then press **ENTER**.
- 6 Press **SET UP** to complete the setting.

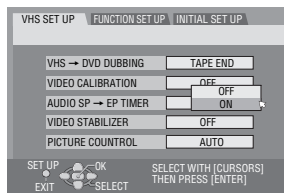

\* The **boldface** settings below indicate the settings at your purchase.

## ■ VHS -> DVD DUBBING — 1 PROG / TAPE END

Set to the appropriate mode when you perform the dubbing from VHS tape to DVD disc. For details, refer to page 36 -37.

**1 PROG:** Dubbing stops when the unit decodes the index code (VISS signal).

**TAPE END:** Dubbing stops when the end of the tape reached.

## ■ VIDEO CALIBRATION — ON / OFF

You can set the Video Calibration to "ON" or "OFF".

### NOTES:

- When watching a tape recorded with "VIDEO CALIBRATION" set to "ON", it is recommended that you leave "VIDEO CALIBRATION" on during playback as well.
- When watching a rental tape or one recorded on another video recorder, or when using this unit as the player for editing, set "VIDEO CALIBRATION" to your preference.
- The Video Calibration works for both SP and EP modes only after a tape has been inserted and the Record mode is first initiated. It does not work during recording.
- The Video Calibration does not work while Automatic Satellite Program Recording is in progress. ([pg. 35](#)) In the case of timer recordings, the Video Calibration works before recording is initiated.
- Once the cassette is ejected, the Video Calibration data is cancelled. The next time the cassette is used for recording, Video Calibration is re-performed.

## ■ AUTO SP -> EP TIMER — ON / OFF

When this function is set to "ON", the unit automatically switches to EP mode to allow complete recording if there is not enough tape to record the entire program while timer-recording in SP mode.

### For Example:

Recording a program of 140 minutes in length onto a 120-minute tape.

Approximately 110 minutes	Approximately 30 minutes
SP mode	EP mode
Total 140 minutes	

Make sure you set this function to "ON", before the timer-recording starts.

### NOTES:

- If you have programed the unit to timer-record 2 or more programs, the second program and those thereafter may not fit on the tape if you set "AUTO SP -> EP TIMER" to "ON". In this case, make sure the mode is not engaged, then set the tape speed manually during timer programming.
- In order to ensure that the recording fits on the tape, this feature may leave a slight non-recorded section at the end of the tape.
- There may be some noise and sound disturbance at the point on the tape where the unit switches from SP to EP mode.
- The "AUTO SP -> EP TIMER" feature is not available during ITR (Instant Timer Recording), and the feature will not work properly on the following tapes: T(ST)-30, T(ST)-60, T(ST)-90, and T(ST)-120.

## ■ VIDEO STABILIZER — ON / OFF

When this function is set to "ON", you can automatically correct vertical vibration in the picture when playing back unstable recordings made on another recorder.

### NOTES:

- When you finish viewing a tape, be sure to set this function to "OFF".
- Regardless of the setting, this function has no effect during recording and during special effects playback.
- To watch recordings with close-caption, set this function to "OFF".

## ■ PICTURE CONTROL — AUTO (NORM) / EDIT / SOFT / SHARP

This feature helps you to adjust the playback picture quality according to your preference. Normally select "AUTO (NORM)".

**AUTO (NORM):** Picture quality is adjusted automatically.

**EDIT:** Minimizes picture degradation during editing (recording and playback).

**SOFT:** Reduces image coarseness when viewing overplayed tapes containing a lot of noise.

**SHARP:** Clearer, sharper-edged picture when viewing images with lots of flat, same-colored surfaces such as cartoons.

### NOTES:

- When you select "EDIT", "SOFT" or "SHARP", the selected mode will not change until you select another mode.
- When you select "EDIT" to dub tapes, be sure to select "AUTO (NORM)" after you finish dubbing the tapes.
- When "VIDEO CALIBRATION" is "OFF", "PICTURE CONTROL" switches automatically from "AUTO" to "NORM".

## Format A Disc (DVD Deck Only)


DVD  
RAMDVD  
RW

Some DVD-RAM/RW discs are unformatted. Format the disc when you use an unformatted disc or you want to delete all recordings and data on the disc.

### ATTENTION:


- When a disc is formatted, all recordings and data are erased. It is impossible to restore them.
- Never turn off the unit or disconnect the AC power cord while "NOW FORMATTING..." is displayed on the TV screen.

- Turn on the unit.
- Turn on the TV and select the AV mode.
- Load a DVD-RAM/RW disc to format.

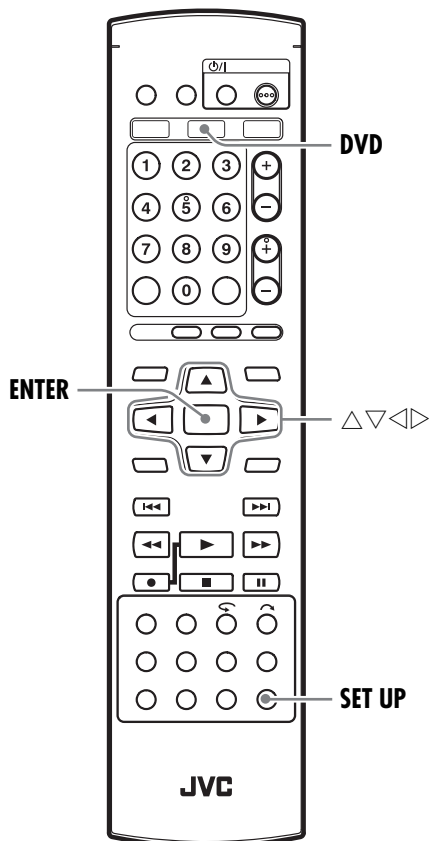

## Format A DVD-RAM Disc

- 1 Press **DVD** so that the DVD lamp lights up on the unit.
- 2 Press **SET UP** to access the Main Menu screen.
- 3 Press  $\triangleleft \triangleright$  to select "DVD SET UP", then press  $\nabla$ .
- 4 Press  $\triangleleft \triangleright$  to select "UTILITY", then press  $\nabla$ .
- 5 Press  $\triangle \nabla \triangleleft \triangleright$  to select "FORMAT", then press **ENTER**. Press  $\triangleleft \triangleright$  to select "OK", then press **ENTER**.
- 6 Press  $\triangleleft \triangleright$  to select "OK", then press **ENTER**.

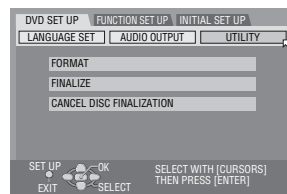

## Format A DVD-RW Disc

- 1 Perform steps 1 to 4 of "Format A DVD-RAM Disc" as above before continuing.
- 2 Press  $\triangle \nabla \triangleleft \triangleright$  to select "FORMAT", then press **ENTER**. Press  $\triangleleft \triangleright$  to choose "VR MODE" or "VIDEO MODE", then press **ENTER** when "DISC WILL BE FORMATTED" appears on the TV screen. "VR MODE": To be chosen when you want to record, erase, or edit data on the disc repeatedly. "VIDEO MODE": To be chosen when you want to erase all the data on the disc once played back to record new data, or play back the disc on other DVD players.
- 3 Press  $\triangleleft \triangleright$  to select "OK", then press **ENTER**.

### NOTES:

- It is impossible to format Version 1.0 DVD-RW discs in Video mode.
- It is impossible to format DVD-R discs.
- All the titles on a disc will be deleted once the disc is formatted even if they are protected titles. (pg. 62)


## Finalize A Disc (DVD Deck Only)

DVD  
RDVD  
RW

Finalizing DVD-R/RW discs recorded on this unit makes it possible for the discs to be played back on other DVD players. DVD-RW discs are finalized in the mode that the discs were formatted, enabling playback on compatible DVD players.

Title names input in the Library Database DVD Navi are registered as title names in the DVD menu. (☞ pg. 62)

- Turn on the unit.
- Turn on the TV and select the AV mode.
- Load a DVD-R/RW disc to finalize.

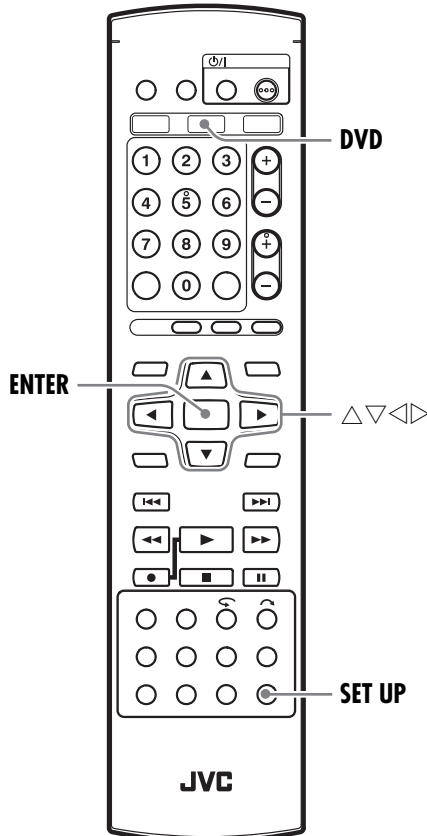

### Before finalizing

- It is possible to record on a blank space.
- It is possible to enter title names. (☞ pg. 62)
- It is possible to delete titles. (☞ pg. 62)
- It is impossible to overwrite recorded areas of DVD-R discs.
- Available recording capacity does not increase even if a recorded title is deleted from a DVD-R disc.
- It is impossible to record or edit DVD-R/RW discs recorded on other devices even if they have not been finalized.

### After finalizing (For DVD-R/RW (Video mode) discs)

- Video and audio that have been recorded by then are recorded in conformity to the DVD Video standard, enabling you to play back the discs as DVD VIDEO discs.
- Although DVD-R/RW discs finalized on this unit become playable on DVD players compatible with DVD-R/RW discs, some discs still may not play, for which JVC cannot take responsibility.
- Marked points marked before finalizing will be deleted, and titles will be divided automatically into "chapters" approximately every 5 minutes. (☞ pg. 45)
- Depending on the DVD players and DVD-R/RW discs used, and on the conditions of recording, it may not be possible to play back the discs. In this case, play back the discs on this unit.
- Additional recordings become impossible.

## Finalize A DVD-R/RW Disc

**1** Perform steps **1** to **4** of "Format A DVD-RAM Disc" (☞ pg. 74) before continuing.

**2** Press  $\Delta \nabla \triangleleft \triangleright$  to select "FINALIZE", then press **ENTER**.

• For DVD-R/RW (Video mode) discs, the background selection screen will appear. Press  $\Delta \nabla \triangleleft \triangleright$  to select the desired background from a selection of 18 backgrounds.

**3** Press  $\triangleleft \triangleright$  to select "OK", then press **ENTER**.

**4** Press  $\triangleleft \triangleright$  to select "OK", then press **ENTER**.

**5** Press **SET UP** to return to the normal screen.

• Menu screen is cleared.

• Once a DVD-R/RW (Video mode) disc has been finalized, the displays for original and play list do not appear. Only display for library appears.

• Once a DVD-RW (VR mode) disc has been finalized, it can be played on DVD players compatible with VR mode.

## Cancel The Finalization Of A DVD-RW Disc

**1** Load a DVD-RW disc to cancel the disc finalization, and perform steps **1** to **4** of "Format A DVD-RAM Disc" (☞ pg. 74) before continuing.

**2** Press  $\Delta \nabla \triangleleft \triangleright$  to select "CANCEL FINALIZATION", then press **ENTER**.

**3** Press  $\triangleleft \triangleright$  to select "EXECUTE", then press **ENTER**.

**4** Press **SET UP** to return to the normal screen.

• When the disc finalization is canceled, the mode in which the disc was formatted is restored, making the disc recordable. (☞ pg. 9, 74)

Before requesting service for a problem, use this chart and see if you can solve the trouble yourself. Small problems are often easily solved, and this can save you the trouble of sending your unit off for repair.

## Initializing (DVD Deck Only)

### Malfunction occurs on the unit.

→ Press  $\odot/|$  to turn off the unit, press and hold  $\odot/|$ , then press  $\blacksquare$  for two seconds or more.

## General

### No power is supplied to the unit.

- The AC power plug is disconnected from the AC outlet.
- Connect the AC power plug to the AC outlet securely. (☞ pg. 16 –18)

### The disc tray cannot be opened.

- Open the disc tray by following the steps below.
  1. Press  $\blacksquare$  and  $\odot/|$  on the unit simultaneously.
  2. Press and hold  $\blacktriangle$  (OPEN/CLOSE) on the unit for approximately 30 seconds until the tray is opened.
  3. Remove the disc, then press  $\blacktriangle$  (OPEN/CLOSE). The unit shuts off.

### The remote control does not work properly.

- Remove the batteries, wait for 5 minutes or more, then load the batteries again.
- The setting of the remote control code is inappropriate.
- Set the same remote control code (1, 2, 3, or 4) on both the unit and the remote control. (☞ pg. 68)
- The batteries are discharged.
- Replace the dead batteries with new ones.

### Dubbing from the external equipment is not possible.

- The source (another video recorder, camcorder) has not been properly connected.
- Confirm that the source is properly connected.
- All necessary power switches have not been turned on.
- Confirm that all units' power switches are turned on.
- The setting of the input channel position is inappropriate.
- Select the input channel position ("F-1" or "L-1") that corresponds to the input terminal connected to the external equipment. (☞ pg. 41)

### The on-screen display superimposed on the program played back/received on this unit is recorded when you dub the program to an external recording equipment.

→ Set "SUPERIMPOSE" to "OFF". (☞ pg. 71)

### The unit does not operate.

- There are cases when the operation is prohibited on the disc.
- Lightning or static electricity may cause malfunction of the unit.
- Press  $\odot/|$  to turn the power off, then press the button again to turn the power on.

### The remote control of a JVC TV will not operate the unit.

- The setting of the remote control code is inappropriate.
- To operate the unit using a JVC TV remote control, set the remote control code of the unit to "1" (Default: "3"). (☞ pg. 68)

## Playback (DVD Deck)

### The DVD deck cannot be operated.

- The DVD deck is not selected.
- Press **VHS/DVD** on the unit repeatedly or **DVD** on the remote control so that the DVD lamp lights up on the unit.

### Images do not appear on the TV screen.

- The TV receiver's channel selector is not set to the AV mode.
- Set the TV to its AV mode.
- When interlace scanned program is played back, progressive scan mode is selected.
- Press and hold **PROGRESSIVE SCAN** until **P** disappears from the front display panel. (☞ pg. 72)

### Playback does not start or stop immediately after playback is started by pressing $\blacktriangle$ on the front display panel, "NO DISC" appears.

- The disc is loaded upside down.
- Place the disc on the disc tray with the playback surface facing down. (☞ pg. 11)
- A disc not being compatible with the unit is loaded.
- Load a playable disc on the unit. (☞ pg. 8)
- A dirty disc is loaded.
- Clean the disc. (☞ pg. 11)
- Defective disc is loaded.
- Replace the warped or scratched disc with a normal one.

### Images are blurred or distorted when you start High-Speed Search.

- Images are blurred or distorted at the point where the playback speed changes and this is not a malfunction of the unit.

### Playback does not start.

- Playback does not start for approximately 30 seconds after recording is stopped and this is not a malfunction of the unit.

## Playback (VHS Deck)

### The VHS deck cannot be operated.

- The VHS deck is not selected.
- Press **VHS/DVD** on the unit repeatedly or **VHS** on the remote control so that the VHS lamp lights up on the unit.

### The tape will not rewind or fast-forward.

- The tape is already fully rewound or fast-forwarded.
- Check the cassette.

### The playback picture does not appear while the tape is running.

- The TV receiver's channel selector is not set to the AV mode.
- Set the TV to its AV mode.

### Noise appears during visual search.

- This is normal.

### Noise appears during normal playback.

- The automatic tracking mode is engaged.
- Try manual tracking. (☞ pg. 56)

### The playback picture is blurred or interrupted while TV broadcasts are clear.

- The video heads may be dirty.
- Use a dry cleaning cassette, or consult your JVC dealer.

### Breaks are noticeable in Hi-Fi soundtrack.

- The automatic tracking mode is engaged.
- Try manual tracking. (☞ pg. 56)

## Recording (DVD Deck)

### The desired program cannot be recorded.

- The channel position does not correspond to that in the receiving area.
- Set the correct channel position for the receiving broadcast. (☞ pg. 22)

### Recording cannot be made.

- No disc or a disc not being compatible with the unit is loaded.
- Load a recordable disc on the unit. (☞ pg. 8)
- The disc loaded is not formatted.
- Format the disc. (☞ pg. 74)
- A finalized DVD-R disc is loaded.
- Recording cannot be made on finalized discs. Load a recordable disc on the unit.
- The disc is full or does not have enough space for the title to be recorded.
- Clear unnecessary titles on the disc or load a blank disc. (☞ pg. 62)

## Recording (VHS Deck)

### During recording, the tape does not run. The VHS recording lamp lights up on the unit.

- The unit is in the Record Pause mode.
- Press **▶** to resume recording.

### Recording cannot be done.

- There is no cassette loaded, or the cassette loaded has had its record safety tab removed.
- Insert a cassette, or using adhesive tape, cover the hole where the tab was removed.

### TV broadcasts cannot be recorded.

- "L-1" or "F-1" has been selected as the input mode.
- Set to the desired channel.

### Camcorder recording is not possible.

 

- The camcorder has not been properly connected.
- Confirm that the camcorder is properly connected.
- The input mode is not correct.
- Set the input mode to "F-1".

### The tape is automatically rewound, then the unit is shut off.

- The end of the tape was reached during recording.
- The program may not have been recorded in its entirety. Next time make sure you have enough time on the tape to record the entire program.

## Timer Recording (DVD Deck)

### "NO DISC" appears on the front display panel.

- No disc is loaded.
- Press **TIMER**  so that the DVD timer lamp lights off. Load a recordable disc, then press **TIMER**  again.

### Timer programing cannot be made.

- Date and time is not correct.
- Set date and time correctly. (☞ pg. 21)
- Timer recording is in progress.
- Timer programing can't be performed while a timer recording is in progress. Wait until it finishes.

### Timer programing recording does not start.

- Date and time is not correct.
- Set date and time correctly. (☞ pg. 21)

**Automatic Satellite Program Recording does not start.**

- The DBS receiver is not connected properly to this unit.
- Connect the DBS receiver to the [S VIDEO/VIDEO/AUDIO INPUT L1] connectors properly. (☞ pg. 35)

**On the front display panel, “- -: -” appears.**

- Power failure occurred.
- Set date and time correctly. (☞ pg. 21)

**“PROGRAM FULL” appears on the TV screen during timer programming.**

- 8 programs have already been timer programmed.
- Clear unnecessary programs on the unit, then try timer programming again. (☞ pg. 34)

**The disc space does not increase when recorded titles are cleared.**

- The PC's data recorded on a DVD-RAM drive cannot be cleared on this unit.
- Format the disc. (When the disc is soiled, wipe the disc with a soft dry cloth before formatting.) (☞ pg. 11, 74)

**Timer Recording (VHS Deck)****“NO TAPE” appears on the front display panel.**

- No tape is loaded.
- Press **TIMER**  $\odot$  so that the VHS timer lamp lights off. Load a cassette with the record safety tab intact, then press **TIMER**  $\odot$  again.

**Timer programming cannot be made.**

- Date and time is not correct.
- Set date and time correctly. (☞ pg. 21)
- The timer is not engaged.
- Press **TIMER**  $\odot$  and confirm that the VHS timer indicator lights up on the front panel display.
- Timer recording is in progress.
- Timer programming can't be performed while a timer recording is in progress. Wait until it finishes.

**Timer programming recording does not start.**

- Date and time is not correct.
- Set date and time correctly. (☞ pg. 21)
- The timer is not engaged.
- Press **TIMER**  $\odot$  and confirm that the VHS timer indicator lights up on the front panel display.

**The VHS timer indicator on the front display panel won't stop blinking.**

- The timer is engaged but there's no cassette loaded.
- Load a cassette with the record safety tab intact.
- The loaded cassette has had its record safety tab removed.
- Remove the cassette and cover the hole with adhesive tape, or insert a cassette with the record safety tab intact.

**The tape is automatically ejected, then the unit is shut off.**

- The end of the tape was reached during timer recording.
- The program may not have been recorded in its entirety. Next time make sure you have enough time on the tape to record the entire program.
- The end of the tape was reached during Instant Timer Recording.
- The program may not have been recorded in its entirety. Next time make sure you have enough time on the tape to record the entire program.

**Other Problems****The image of the TV broadcast appears distorted on the TV screen.****For composite connection**

- Press **PROGRESSIVE SCAN** for 3 or more seconds so that the Video output indicator (**P**) lights off on the front display panel.

**For component video connection**

- Press **PROGRESSIVE SCAN** for 3 or more seconds so that the Video output indicator (**P**) lights up on the front display panel.

**Whistling or howling is heard from the TV during camcorder recording.**

- The camcorder's microphone is too close to the TV.
- Position the camcorder so its microphone is away from the TV.
- The TV's volume is too high.
- Turn the TV's volume down.

**When scanning channels, some of them are skipped over.**

- Those channels have been designated to be skipped.
- If you need the skipped channels, restore them. (☞ pg. 22)

**The channel cannot be changed.**

- Recording or Live Memory recording\* is in progress.
- Press **II** to pause the recording, change channels, then press **▶** to resume recording.
- \* DVD deck only

**Channel settings that were made manually seem to have changed or disappeared.**

- After the manual settings were made, Auto Channel Set was performed.
- Perform “Manual Clock Set” (☞ pg. 21).

**Even though Auto or Semiauto Clock Set has been performed, the clock is incorrect.**

- The clock setting data received from the host channel is incorrect.
- Select a different host channel during “Semiauto Clock Set” (☞ pg. 21), or perform “Manual Clock Set” (☞ pg. 21).

**Malfunction occurs and the unit cannot be power off.**

- Reset the unit by disconnecting the AC power plug from the AC outlet and connect again.

## On-screen Message

### DISC NOT REGISTERED IN THE LIBRARY REGISTER DISC?

- A disc that is not registered in the library has been inserted. Register the disc as necessary. (▶ pg. 65)

### INSERT DISC XXXX

- Appears when a title that has been selected in the library is not contained in the loaded disc.

### CAN NOT RECORD OR MAKE PLAY LIST DELETE UNWANTED TITLES

- Recording and/or editing cannot be performed.
- The number of titles exceeds 99.
- The number of play lists exceeds 999.

### SET CLOCK BEFORE TIMER PROGRAMING

- To set the timer program, the clock must be set in advance. (▶ pg. 21)

### PROGRAM FULL DELETE UNWANTED TIMER PROGRAMS

- You can program each deck to timer-record as many as 8 programs. To program more, you need to cancel a timer program already set. (▶ pg. 34)

### DISC NOT LOADED

- Operation has been attempted when a disc is not loaded, or loaded upside down. (▶ pg. 11)

### DISC NOT RECORDABLE INSERT RECORDABLE DISC

- When a playback-only disc or a finalized disc is loaded, ● has been pressed. (▶ pg. 8)

### REGION CODE ERROR CHECK DISC

- A disc loaded cannot be played back on this unit since the region number of the disc does not match that of the unit. (▶ pg. 9)

### UNREADABLE DISC CHECK DISC

- When an incompatible disc is loaded, ► has been pressed. (▶ pg. 9)

### COULD NOT FORMAT THE DISC CHECK THE DISC

- Formatting is not complete since the disc may be dirty or damaged. Take out the disc, clean it and retry. (▶ pg. 11, 74)

### CAN NOT FINALIZE THIS DISC

- Finalizing is not complete since the disc may be dirty or damaged. Take out the disc, clean it and retry. (▶ pg. 11, 75)

### CAN NOT CANCEL FINALIZATION OF THIS DISC

- Canceling disc finalization is not complete since the disc may be dirty or damaged. Take out the disc, clean it and retry. (▶ pg. 11, 75)

### PRESS [STOP] AGAIN TO STOP RECORDING

- During Live Memory playback, ■ has been pressed. (▶ pg. 50)

### TIMER RECORDING COMPLETED

- Timer recording has finished during Live Memory playback.

### PLAYBACK WILL STOP THEN TIMER RECORDING WILL START

- Timer recording finished during Live Memory playback, then the next timer recording is about to begin while playback continues.

### COPY PROHIBITED CAN NOT RECORD

- An attempt has been made to record copy-protected contents.
- An attempt has been made to record copy-once contents on a disc that is not CPRM compatible, such as DVD-R.

### COPY PROHIBITED CAN NOT PLAY

- The unit has detected invalid contents at the start or in the middle of playback.

**GENERAL****Power requirement**

AC 110 V – 220 V~, 50 Hz/60 Hz

**Power consumption**

Power on: 39 W

Power off: 3.5 W

**Temperature**

Operating: 5°C to 35°C (41°F to 95°F)

Storage: –20°C to 60°C (–4°F to 140°F)

**Operating position**

Horizontal only

**Dimensions (WxHxD)**

435 mm x 96 mm x 344 mm (17-3/16" x 3-4/5" x 13-9/16")

**Weight**

5.4 kg (11.9 lbs)

**Input/Output**

Video input: 1.0 Vp-p, 75 Ω (pin jack)

Audio input:

–8 dB, 50 kΩ (pin jack)

Corresponding to mono (left)

Audio output: –8 dB, 1 kΩ (pin jack)

RCA connectors:

IN x 3, OUT x 2

**Input/Output (DVD Deck Only)**

S-video input:

Y: 1.0 Vp-p, 75 Ω

C: 0.286 Vp-p, 75 Ω

S-video output:

Y: 1.0 Vp-p, 75 Ω

C: 0.3 Vp-p, 75 Ω

i.Link: 4-pin for DV input

Component video output:

Y: 1.0 Vp-p, 75 Ω

Cb/Cr, Pb/Pr: 0.7 Vp-p, 75 Ω

Corresponding to copy protection

Digital audio output: Coaxial

Corresponding to Dolby Digital and DTS Digital Surround

Bit stream

Selectable in digital audio output setting menu

**VIDEO/AUDIO (DVD Deck)****Recording time**

Maximum 8 hours (with 4.7 GB disc)

(XP): Approx. 1 hour

(SP): Approx. 2 hours

(LP): Approx. 4 hours

(EP): Approx. 6 hours

(FR): Approx. 1 hour – 8 hours

**Audio recording system**

Dolby Digital (2 ch)

Linear PCM (XP mode only)

**Video recording compression system**

MPEG2 (CBR/VBR)

**VIDEO/AUDIO (VHS Deck)****Signal system**

NTSC color signal and EIA monochrome signal, 525 lines/60 fields

**Recording system**

DA4 (Double Azimuth) head helical scan system

**Format**

VHS NTSC standard

**Maximum recording time**

(SP): 210 min. with T-210 video cassette

(EP): 630 min. with T-210 video cassette

**Signal-to-noise ratio**

45 dB

**Horizontal resolution**

230 lines

**Frequency range**

(Normal audio): 70 Hz to 10,000 Hz

(Hi-Fi audio): 20 Hz to 20,000 Hz

Specifications shown are for SP mode unless otherwise specified.

**TUNER/TIMER****Tuning system**

Frequency synthesized tuner

**Channel coverage**

VHF: Channels 2 – 13

UHF: Channels 14 – 69

CATV: 113 Channels

**Memory backup time**

Approx. 5 seconds

**ACCESSORIES****Provided accessories**

RF cable x 1,

Audio/Video cable,

Infrared remote control unit,

“AA” battery x 2,

Conversion plug

E. &amp; O.E. Design and specifications subject to change without notice.

**ATTENTION:**

This unit contains microcomputers. External electronic noise or interference could cause malfunctioning. In such cases, switch the unit off and unplug the AC power cord. Then plug it in again and turn the unit on. Take out the disc. After checking the disc, operate the unit as usual.



## Language Code List

AA	Afar	IK	Inupiak	RN	Kirundi
AB	Abkhazian	IN	Indonesian	RO	Rumanian
AF	Afrikaans	IS	Icelandic	RU	Russian
AM	Ameharic	IW	Hebrew	RW	Kinyarwanda
AR	Arabic	JI	Yiddish	SA	Sanskrit
AS	Assamese	JW	Javanese	SD	Sindhi
AY	Aymara	KA	Georgian	SG	Sangho
AZ	Azerbaijani	KK	Kazakh	SH	Serbo-Croatian
BA	Bashkir	KL	Greenlandic	SI	Singhalese
BE	Byelorussian	KM	Cambodian	SK	Slovak
BG	Bulgarian	KN	Kannada	SL	Slovenian
BH	Bihari	KO	Korean (KOR)	SM	Samoan
BI	Bislama	KS	Kashmiri	SN	Shona
BN	Bengali, Bangla	KU	Kurdish	SO	Somali
BO	Tibetan	KY	Kirghiz	SQ	Albanian
BR	Breton	LA	Latin	SR	Serbian
CA	Catalan	LN	Lingala	SS	Siswati
CO	Corsican	LO	Laothian	ST	Sesotho
CS	Czech	LT	Lithuanian	SU	Sundanese
CY	Welsh	LV	Latvian, Lettish	SW	Swahili
DZ	Bhutani	MG	Malagasy	TA	Tamil
EL	Greek	MI	Maori	TE	Telugu
EO	Esperanto	MK	Macedonian	TG	Tajik
ET	Estonian	ML	Malayalam	TH	Thai
EU	Basque	MN	Mongolian	TI	Tigrinya
FA	Persian	MO	Moldavian	TK	Turkmen
FJ	Fiji	MR	Marathi	TL	Tagalog
FO	Faroese	MS	Malay (MAY)	TN	Setswana
FY	Frisian	MT	Maltese	TO	Tonga
GA	Irish	MY	Burmese	TR	Turkish
GD	Scots Gaelic	NA	Nauru	TS	Tsonga
GL	Galician	NE	Nepali	TT	Tatar
GN	Guarani	OC	Occitan	TW	Twi
GU	Gujarati	OM	(Afan) Oromo	UK	Ukrainian
HA	Hausa	OR	Oriya	UR	Urdu
HI	Hindi	PA	Panjabi	UZ	Uzbek
HR	Croatian	PL	Polish	VI	Vietnamese
HU	Hungarian	PS	Pashto, Pushto	VO	Volapuk
HY	Armenian	PT	Portuguese	WO	Wolof
IA	Interlingua	QU	Quechua	XH	Xhosa
IE	Interlingue	RM	Rhaeto-Romance	YO	Yoruba
				ZU	Zulu

<b>A</b>	
A-B Repeat Playback .....	52
Accidental erasure prevention .....	30
Active Video Calibration .....	59
Adjusting The Picture Quality .....	53
Angle Selection .....	45
Audio Channel Selection .....	46
Audio Language/Sound Selection .....	46
Auto Channel Set .....	22
Auto Daylight Saving Time .....	21
Automatic Satellite Program Recording .....	35
<b>C</b>	
Check, Cancel And Change Program .....	34
Copy-once program .....	79
CPRM .....	79
<b>D</b>	
Delete Title .....	62
Disc menu .....	43
Disc Remaining Time .....	57
Disc Resume .....	72
Discs For Playback Only .....	8
DVD menu .....	43
<b>E</b>	
Elapsed Recording Time Indication .....	57, 59
<b>F</b>	
File Structure Of Discs .....	9
Free Rate Function .....	58
<b>H</b>	
High-Speed Search .....	43, 55
<b>I</b>	
Index Search .....	55
Instant Timer Recording (ITR) .....	57, 59
Interlaced scan .....	72
<b>L</b>	
Language Code List .....	81
Letter Box .....	23
Live Memory .....	47
<b>M</b>	
Manual Channel Set .....	22
Manual Clock Set .....	21
Manual Tracking .....	56
Marking Positions To Play Back Again Later .....	45
Menu/Audio/Subtitle Language Set .....	20
<b>N</b>	
Next Function Memory .....	56
<b>O</b>	
On-Disc Timer Programing .....	32
One Touch Replay .....	50
One-Touch Expert Dubbing .....	36
On-screen Bar .....	51
On-screen Language Set .....	20

<b>P</b>	
Pan&Scan .....	23
Play List .....	63
Playback Control (PBC) .....	46
Program Playback .....	54, 66
Progressive scan .....	72
<b>Q</b>	
Quick Rewind A Little .....	55
<b>R</b>	
Random Playback .....	54
Recordable/Playable Discs .....	8
Recording Medium And Format .....	9
Recording Mode .....	29, 30
Recording Resume Function .....	29, 30
Region Number .....	9
Register Disc .....	65
Repeat Playback .....	52, 56
Resume Function .....	44
<b>S</b>	
Second Audio Recording .....	57, 59
Select The Switching Interval Of The Slide Show .....	54
Semiauto Clock Set .....	21
Setting The Progressive Mode .....	53
Skip Search .....	44, 55
Slow Motion .....	44, 55
Soundtrack Selection .....	56
Still Picture/Frame-By-Frame Playback .....	44, 55
Subtitle Selection .....	45
<b>T</b>	
Tape Remaining Time .....	59
Time Search .....	53
Top menu .....	43
<b>U</b>	
Unplayable Discs .....	9
Usable cassettes .....	27
<b>V</b>	
VHS Progressive Scan .....	56
Video mode .....	9, 74
VR mode .....	9, 74
<b>W</b>	
When Programs Overlap Each Other .....	34



**EN**

**DR-MV4SUJ**

**JVC**