
Universal flat-panel mount

PCM-MS2

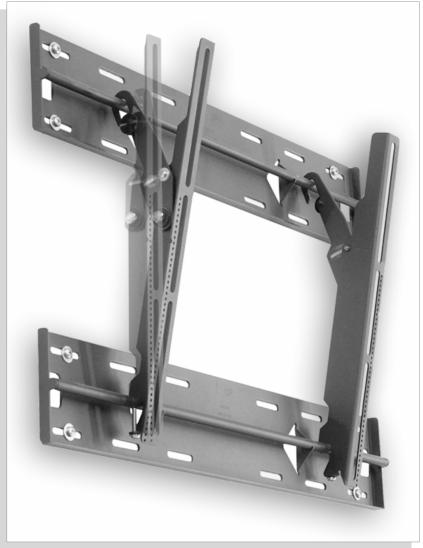





3130 E. Miraloma Ave. Anaheim, CA 92806 Phone: 800 368-9700 Fax: 800 832-4888

www.mounts.com

Contents

- Assembly drawing
- Fine tune tilt adjustments
- Flat panel list
- Parts list
- Checking thread depth
- Finding the center of the flat panel
- Positioning the mounting brackets
- Securing the mounting brackets
- Finding the wood stud behind the wall structure
- Marking the bottom plate mounting points

- Securing the bottom wall plate
- Securing the top plate
- Securing the flat panel to the wall mount
- Lateral shift adjustment

WARNING!

The wall structure should be capable of supporting a max weight of 160 Lbs., the weight of the flat panel. More than 160 Lbs the wall must be reinforced. Proper installation procedure by qualified personnel as outlined in the installations instructions must be adhered to. Failure to do so could result in serious personal injury.

WARNING Safety precaution measures must be practiced at all times during the installation of this product. Use proper safety gear and tools for the installation procedure to prevent personal injury.

The entire installation instructions should be fully read and understood, including all of the safety symbols and safety precautions, before beginning installation. The installation instructions should be read, understood and followed to prevent personal injury or property damage. Keep these installation instructions in an easily accessible location for future reference.



Indicates that the power plug is to be disconnected from the power outlet.



Contact Premier Mounts for any questions



Safety precautions must be taken at all times.



Warning and caution in general



A secured structure wooden stud wall must always support the weight or load of the flat panel. Always confirm the center of the wood stud before beginning the installation.



Do not install in locations where there is vibration, movement or danger of impact. Failure to do so could result in flat panel cracking or falling from the wall causing damage and injury.



Do not install near heater, fireplace, direct sunlight or air conditioning or any other source of direct heat energy. Failure to do so may result in damage to the flat panel and could cause a risk of fire.


At least two qualified people should always perform the installation work. Injury and damage can result from dropping or mishandling the flat panel.



Mounting structure recommended wood studs, solid-flat concrete. Use a minimum diameter of $5/16^{\circ} \times 2^{1/4}$ lg concrete wedge anchors (commercially available). or a minimum diameter of 5/16" x 3" lg wood screws.

Assembly drawing

Dimensions are in Inches and (mm)

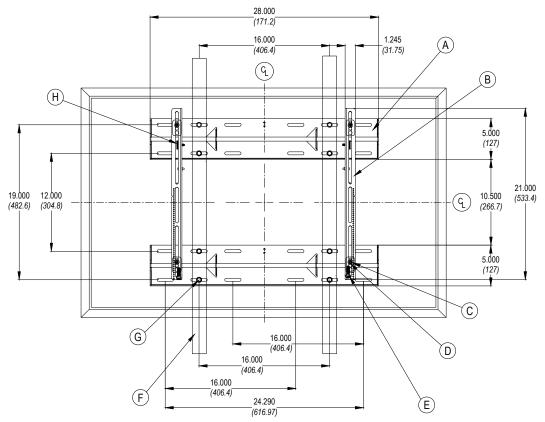


Description

- A. Wall plates
- B. Mounting brackets
- C. Griplate[™]
- D. Mounting hardware
- E. M6 x 30 (mm) Phillip screws
- F. Wood stud
- G. 5/16" x 3" Lag screws and flat washers
- H. Safety knobs

Fine tune tilt adjustments

- 1. M5 Phillips screws for fine
 - tension
- 2. M8 Hex nut coarse tension

NOTE: The 8 (mm) hex nut is for your coarse tension adjustment and the 5 (mm) screws are for your fine tension adjustment.

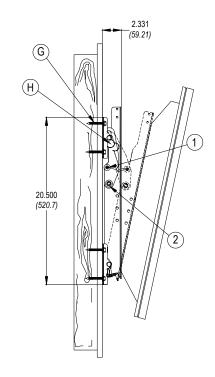

Flat panel list


Acer	Eizo	ldex
PDP7859: M6 x 20	5420T: M8 x 30	PDM4260: M4 x 16
Akai	Electrograph	Ikegami
CTA42AR7A, PDP4247, PDP4290, PDP4294, PDP5090, HPT500AN: M8 x 25 – ½" nylon spacers - sleeves	DTS42W: M8 x 30 – ¼" nylon spacers (large) DTS4230: M8 x 30 – ½" nylon spacers - sleeves DTS42DD, DTS42GBDD, DTS42GB: M6 x 20	PTM4202: M5 x 20
Akira	Faroudja	Integra
EPM420, SV4201: M5 x 16	FPP42HD10, FPP50HD10: M4 X 16	PLA50V1: M4 X 16
Albatron	Fujitsu	
PWV46AC: M6 x 20		JAC
Barco	4211, 4212, 4221, 4222, 4208, 4209, 4213, 4214, 4229, 4241 4242, 4233: M5 x 16 5001, 5002, 5003, 5004, P50XHA10, P50XCA11UH, P50XHA30WS: M8 x 25 – flat washers PDS6101, PDS6001, PDS6002: M8 x 30 – ½" Nylon spacers - sleeves	GDV4200PZW, 4210, GDV4210PZWGA, 4211, GMP420UG, GMV42UG, JVP042WV74, PD42WV74, PD42WX84: M5 x 16 GDV500PZU, GDV501U, 502U: M8 X 30 – ½" nylon spacers – sleeves
Cineversum 50: M8 x 20		
BenQ	Gateway	LG Electronics
PDP7843E: M6 x 20 – ¼" nylon spacers (small) PDP46W1: M6 X 12	GTWP42M102: M8 x 20, M8 x 35 – ¼" nylon spacers (large) GATEWAY 42: M8 x 30 – ¼" nylon spacers GATEWAY 46: M6 x 20 GATEWAY 50: M8 x 30 – ¼" nylon spacers	Flatron MU40PA10B, MU40PA15B: M5 x 20- ¼ " nylon spacers Flatron MN42PZ10, MN42PZ11, MU42PZ10, MU42PZ11B, MU42PZ15B: M5 x 20 MU50PZ41, MU50PZ90: M5 x 20 Flatron MU60PZ10, MU60PZ11B, MU60PZ12B, MU60PZ90V: M8 x 25
Cornea		
MP4200, MP4204: M5 x 16		
Dream Vision	Helios	Luce
Revolution One, Revolution Five: M4 x 16	4200: M8 x 20	PDTV4220A: M5 x 25 – ½" nylon spacers
Dukane	Hitachi	
P37: M6 x 12 P42: M6 x 12	32HDT20,CMP307XJ,CMP307XU,32HDT20	Marantz
P50: M8 x 20	CMP401HDU, CMP402HDE, CMP402HDU, CMP4120HDU,CMP4121,CMP4121HDU,CMP4201U,	PD4280D, PD4282D, PD4290D, PD4292D, PD4293: M4 x 20
Dwin	CMP4202U, 42HDW10,42HDT20, 42HDT50, 42HDT55 M6 x 12 CMP5000WXU, CMP5003WXU, 50HDT50, 50HDT55: M8 X 20	PD4298HD: M6 X 20 PD501OD, PD5020, PD5040: Max
HD50: M8 x 30 – 1/2" nylon spacers - sleeves		
EIKI		
PLD42XU: M5 x 20 - ¼" nylon spacers (small)		4600, 4600T: M6 x 20 5000: M8 x 30- ½" nylon spacers - sleeves

NOTE: If your flat panel display is not listed, go to (page 8) to determine the thread pitch for your flat panel.


Mitsubishi	Princeton Graphics	Tatung
PD5010HD, PD5030: M4 x 16	AR3.4FTW,AR4.6PDP: M6 x 20	P46T: M6 x 20
Monivision	Rainbow	Toshiba
PWV46AC, PD46W00: M6 x 20	Spectrum 3750: M6 x 20	42HP82: M4 X 16 PD42W, PD42W1: M8 X 30 – ½ " nylon spacers
NEC	RCA	(large) - sleeves 50HP81: M8 X 30 – ½" nylon spacers (large) - sleeves
4200W, 4210W, M4A,MP2, PX42M3A, 42PD1W, PD2 M5A,M5G, 42MP1, 42PD1, PX42VM1A, PX42VP1A, PX42VP2A, 42MP3, 42PD3, PX42VP3A, 42MP4, 42VP4A, 42MX2: M4 X 16, 5000W, PX50M5A, 50PD1, PX50VP1A, PX50MX1A, 50MP1, 50MP2, 50PD2,	PR42300, PHD42600, PHD50300, PHD50400: M4 X 16 PHD50500: M8 X 20	50HP82: M4 X 16 Tredex
	Revox	TXP4600: M6 x 20
50VP2, 50MP3, 50XM3: M4 X 16	E1042: M6 x 20	V-Inc
Norcent	E1050: M8 x 20 Runco	Vizio P1, Vizio P4: M6 x 12
46WGA850: M6 x 12		Vidikron
Orion	PL42C, CW42: M4 X 16 PL42CXPL50CX: M8 X 30, ½" Nylon spacers – sleeves	VPW420: M8 X 30, 1/2" Nylon spacers (large) - sleeves
	E1050, PL50C, PL50HDX, CW50MC: M8 X 20	VIEWSONIC
PM4202: M5 x 16	Sampo	VPW420: M8 x 30 – ½" nylon spacers - sleeves VPW425: M8 x 30 – ¼" nylon spacers (large)
	PME42S6: M8 x 30 – ¼" nylon spacers (large) PME42F61: M8 x 20, M8 x 35 – ¼" nylon spacers (large)	VPW450HD: M8 x 30 – ¼" nylon spacers (large) VPW500: M8 X 20 VPW505: M8 x 30 – ¼" nylon spacers (large)
TC42P1, PT42PD3P, PT42PD1P, TC42P1F, PT37P1, TH42PWD3, TH37PWD4UZ, PT37P04, TH37PW5EX, TH37PA20UP, TH42PD4UY, TH42PWD4EX, PT42P1, 42PD2, TH42PWD3U, TH42PHD5U, PT42PD3P, PT42PD4, PT42PHD4P, TH42PWD5UY, TH42PW5UZ, TH42PWD6UY, TH42PA20UP, TH42PL20E, TH42PAX20, TH50PHD3U, PT50PD3P, PT50PHD4P, TH50PHD3E, TH50PHW3, TH50PD4, TH50PHD5UY,	PME50X6: M8 x 30 – ¼" nylon spacers (large) Samsung	Yamaha
	PPM42S2, PPM42S3, SPL4225K, SPN4235, SPN4239:	PDM1: M8 x 30 – ½" nylon spacers - sleeves
	SPK4215M, PK42P2S: M8 x 25 – ½" nylon spacers PPM50H2, HPL5025K: M8 x 30 – ½" Nylon spacers -	Zenith
TH50PHD6UY, TH50PL20E, TH50TX20UP: M8 X 30 – ½" Nylon spacers – sleeves TH42PX20U, TH50PX20U: M8 X 70 – 1-1/2" Nylon	sleeves PPM50H3, HPN5039: M8 x 25 – ½" nylon spacers	DPDP40W, P40V22,DPDP40V, P40V24: M5 x 20 – ¼" nylon spacers (small)
spacers	Sanyo	P42W22, P42W22B, P42W24P, P42W34P: P40V24: M5 x 20 – ¼" nylon spacers (small) P50W26, P50W28, P50W38: M5 x 16
Philips	PDP421A: M5 x 20 - ¼" nylon spacer (small) PDP42H1NA: M5 x 20 - ¼" nylon spacer (small)	
42FD9934, 42FD9952, 42FD9954, 42PH9555, 42FD9935: M5 x 25 ½" Nylon spacers	Sharp	NOTE: If your flat panel display is not listed, go to (page 8) to determine the thread pitch for your flat panel.
BDS4611: M6 x 20 50FD9934/17S: M4 X 16	PZ42H2U, PZ43HV2U, PD50U, PZ50HV2U: M8 X 20	thread pitch for your hat panel.
Pioneer	SONY	
PDPV401, V402, PDP4330HD, PDP433HDE, PDP433CMX, PDP433PU, PDP4300, PDP4340HD, PR0800HD, PR0800HDI, PR0910HD, PDP4310, PDP501X, V502MX, V502X, PDP503MX, V505, PDP505HD, PR01000HD, PDP503CMX, PDP5030HD, PDP503HDE, PDP5031HD, PDP5040HD, PR01000HDI,PR01110HD: M8 X 20	PFM42B1,PFM42B2: M6 x 20 - 5/16" flat washers PFM-42V1,PFM-42V2: M6 x 20"- 5/16" flat washers PFM50C1: M5 x 20 - 5/16" flat washers KE-42XBR900: M5 x 20 - 5/16" flat washers KE50XBR900: M5 x 20 - 5/16" flat washers KE42XS910: M5 x 20 - 5/16" flat washers KDE61XBR950: M5 x 20 - 5/16" flat washers	
Planar		
42N: M4 x 16 50P: M8 x 20	SVA	1
	HD4208TIII: M6 x 20 - ¼" nylon spacers	

NOTE: This wall mount is shipped with all proper installation hardware and components. Make sure that none of these parts are missing before beginning installation. If there are parts missing stop the installation and contact Premier Mounts.

Actual screw size

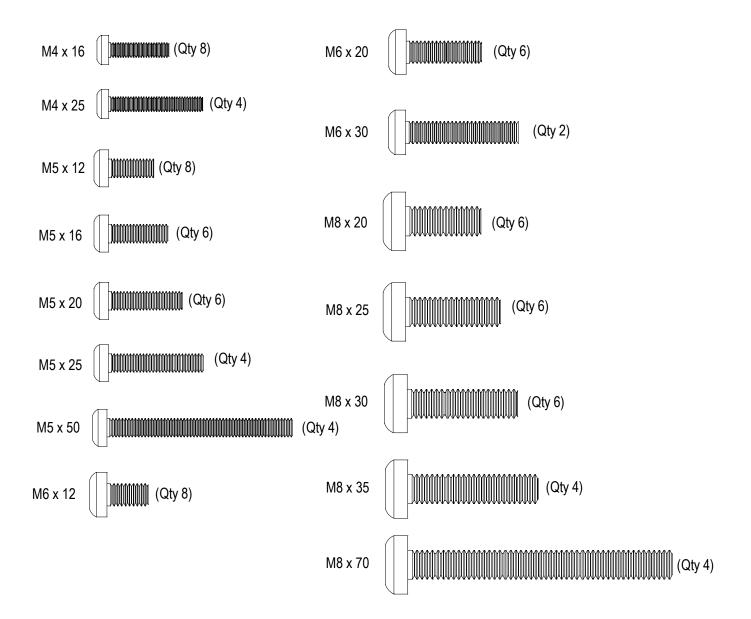


Parts list (con't)

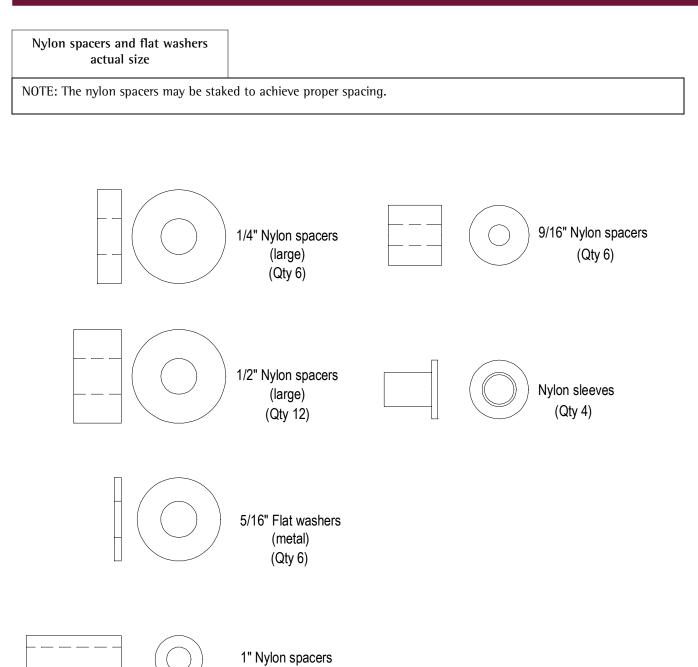

(Qty 6)


1/4" Nylon spacers (small) (Qty 6)

Checking the thread depth on your flat panel

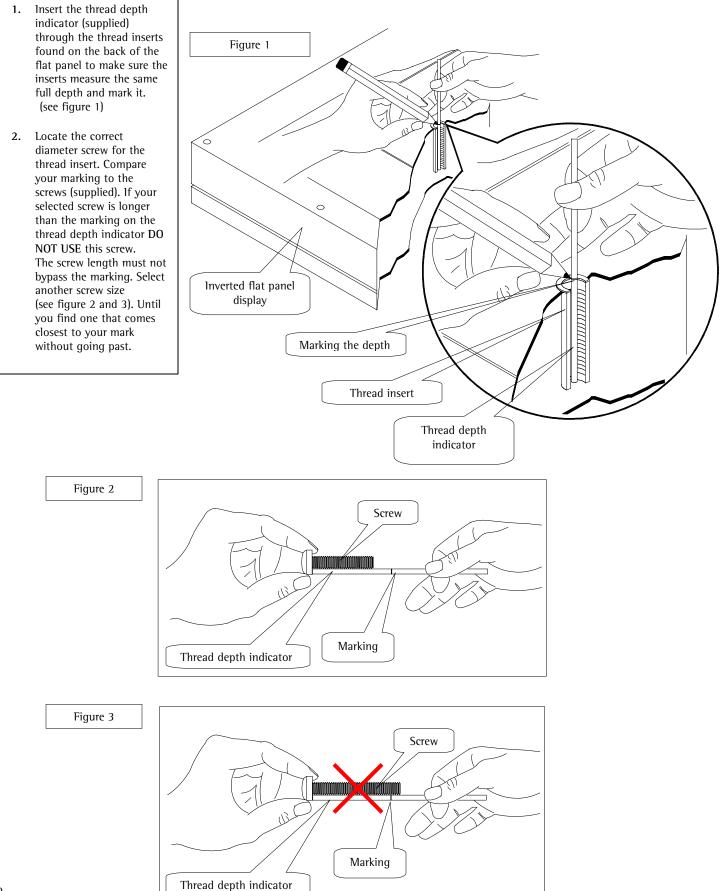

Parts list (con't)

All of these parts are used to install the mounting bracket. Make sure that none of these parts are missing before beginning installation. If there are parts missing stop the installation and contact Premier Mounts.

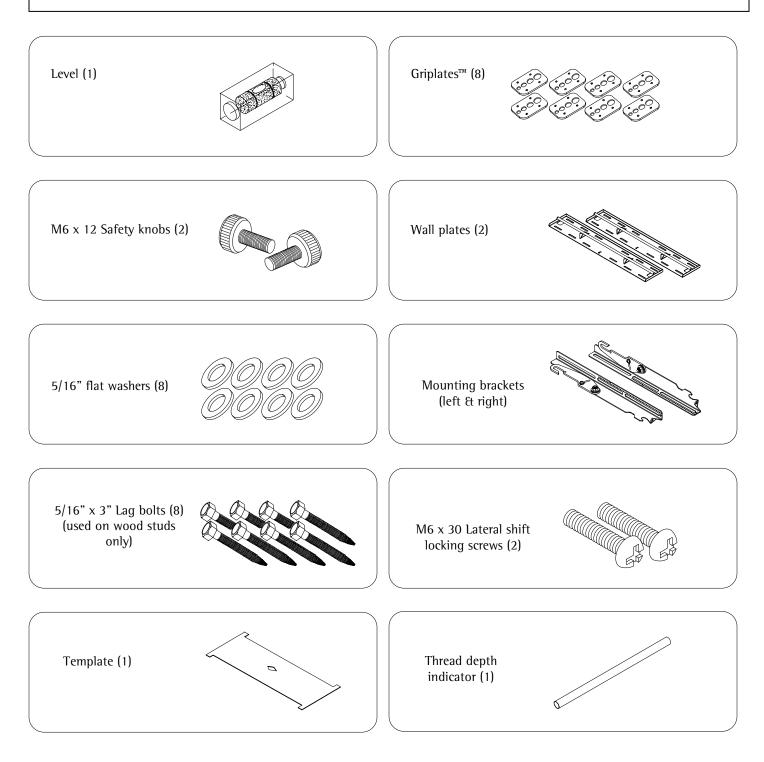


Finding center of the flat panel display

WARNING : Proper installation procedure by qualified personnel as outlined in the installation instructions must be adhered to. Failure to do so could result in serious personal injury and possible damage to the flat panel.

WARNING!

INVERT THE FLAT PANEL PLACE IT ON A SOFT, FLAT SUFRACE TO PREVENT DAMAGE TO THE FLAT PANEL. USE A BLANKET, FOAM, ETC. FAILURE TO DO SO WILL RESULT IN DAMAGING THE FLAT PANEL. DO NOT LAY THE FLAT PANEL ON THE FLOOR WITHOUT ANY PROTECTION TO THE GLASS. THE FLAT PANEL IS HEAVY AND FRAGILE. AT LEAST (2) QUALIFIED PERSONNEL ARE STRONGLY RECOMMENDED FOR INSTALLATION OF THIS PRODUCT. FAILURE TO DO SO COULD RESULT IN SERIOUS INJURY AND POSSIBLE DAMAGE TO THE FLAT PANEL.

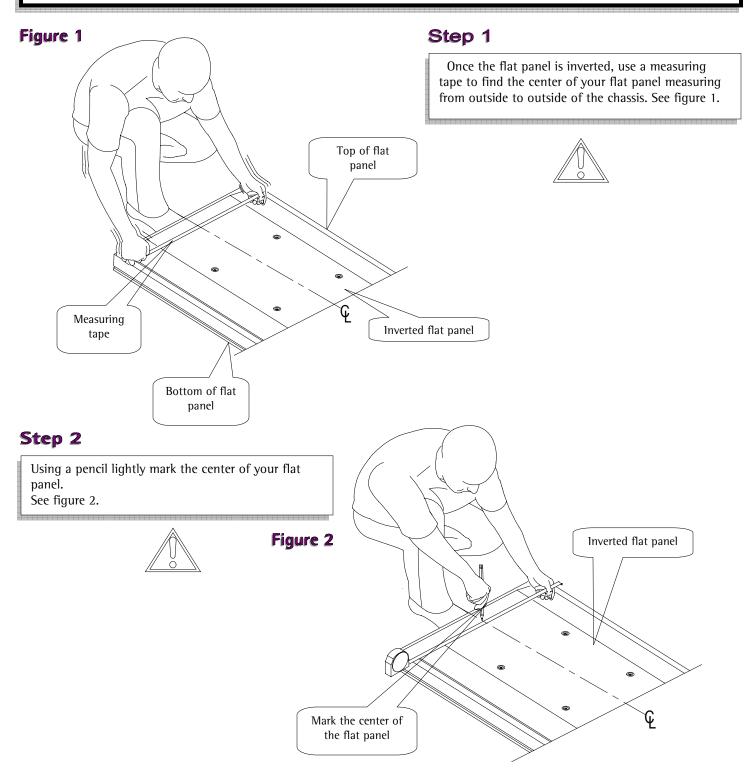

Positioning the mounting brackets

Þ

Figure 3



Nylon spacers if

Applicable

(see chart) on page 4 and 5

Inverted flat panel

<u>CAUTION: Check the chart on page 4 and 5 to see if</u> your flat panel needs nylon spacers. The nylon spacers provided, must be used. Failure to do so will result in damaging the flat panel.

Install the nylon spacers to the mounting points on the flat panel see figure 3.

NOTE: See chart (if the nylon spacers apply to your flat panel).





Step 4

Center mark


Lay the left and right mounting brackets (stamped arrows facing out). See figure 4.



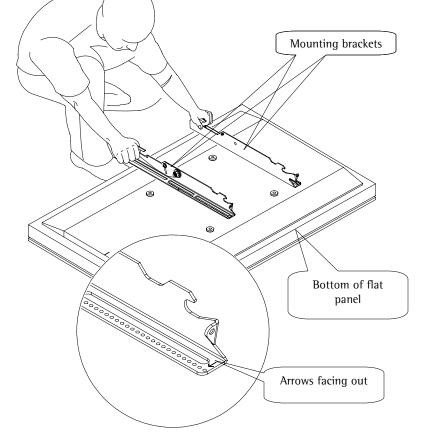


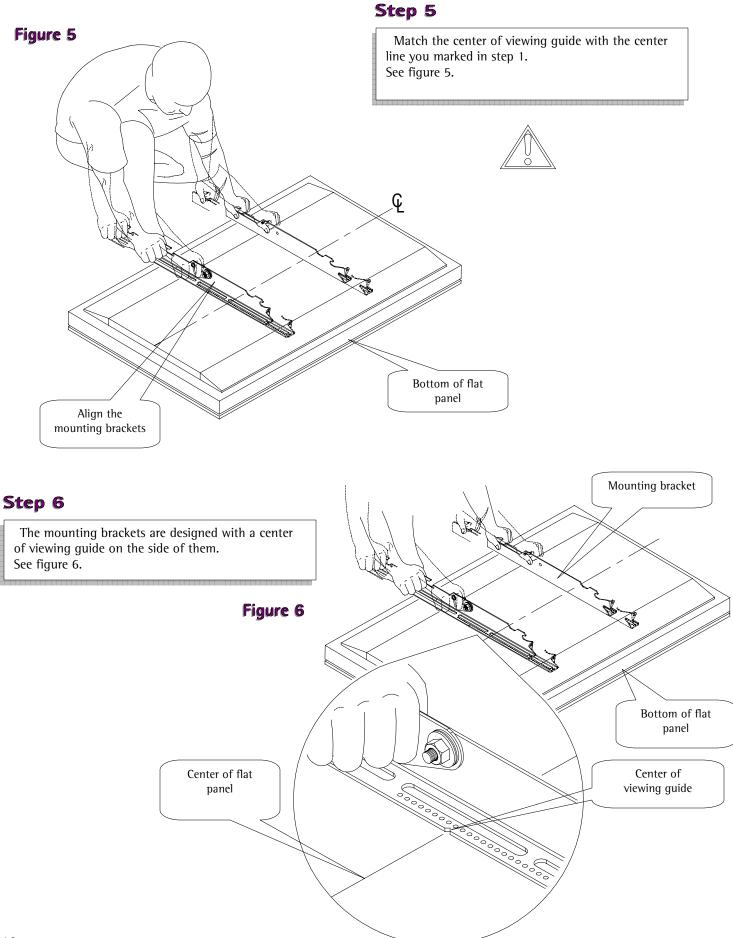


Securing the mounting brackets

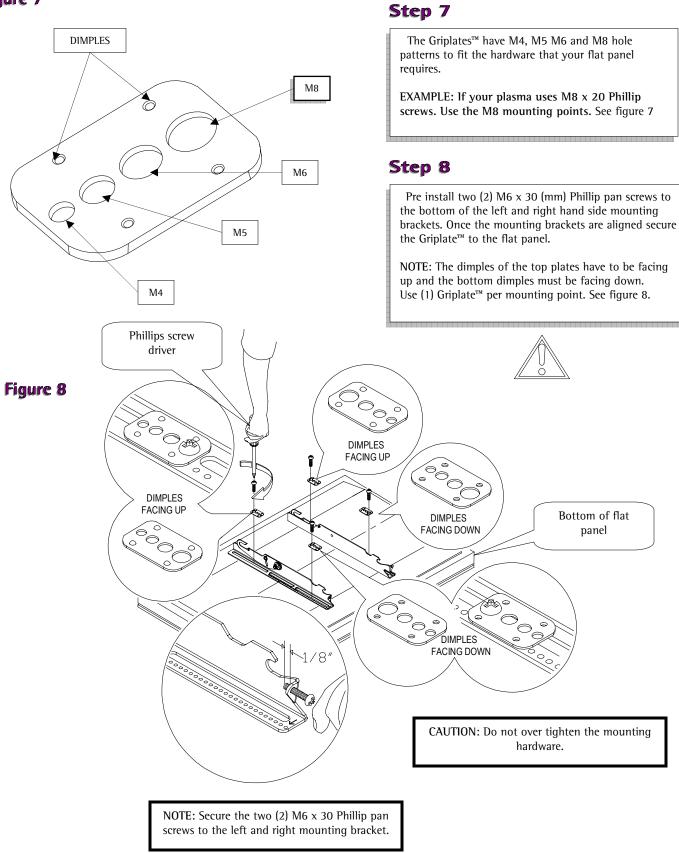


Finding the wood studs behind the wall structure

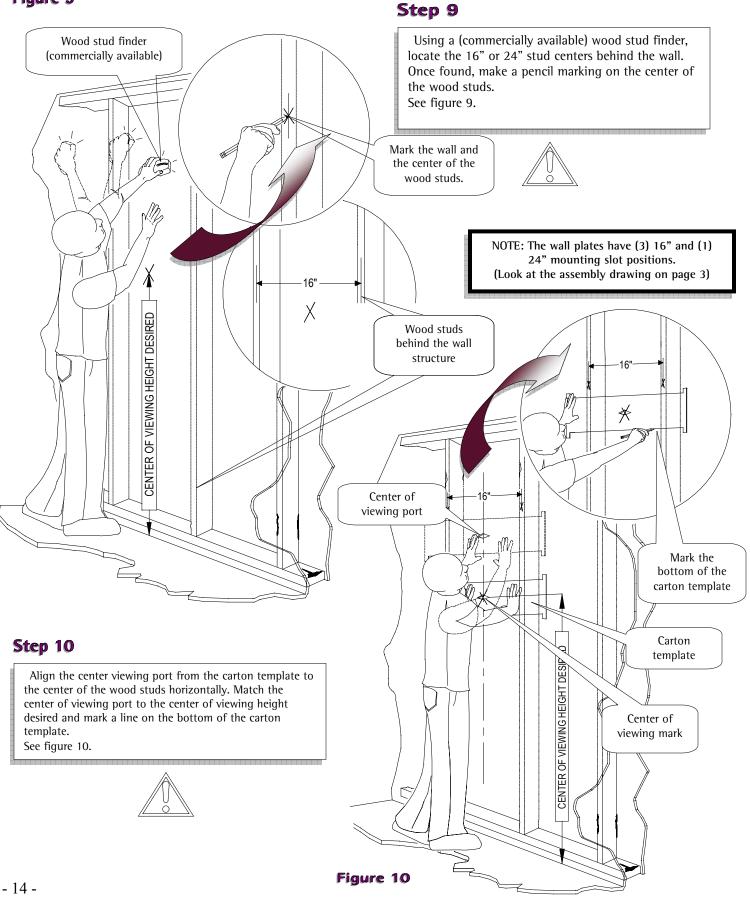

Marking the bottom plate mounting points

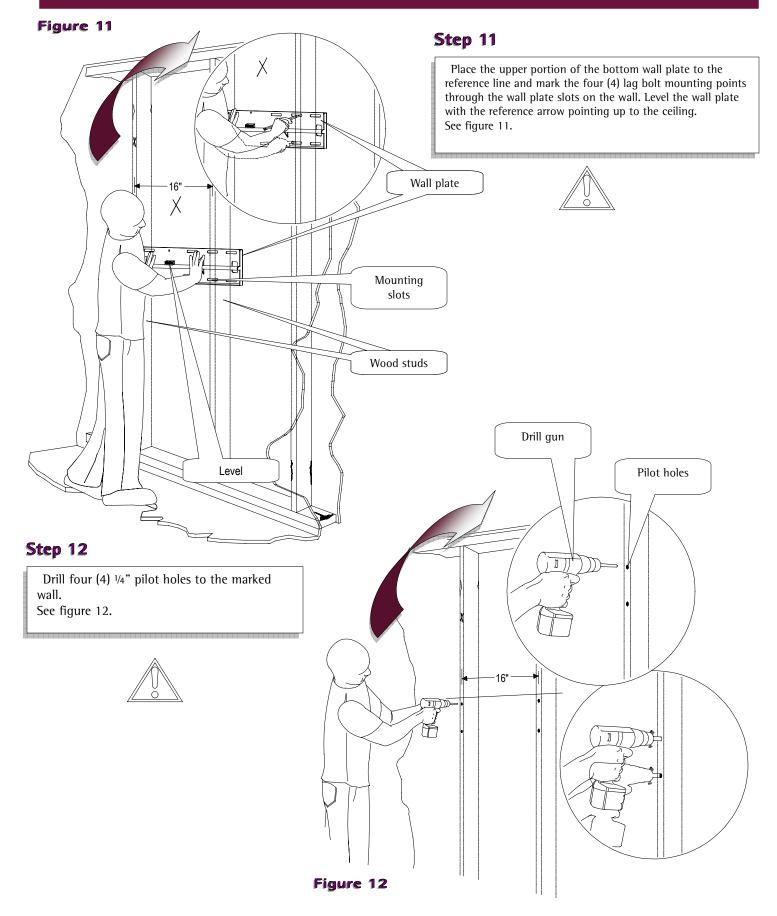


Securing the bottom wall plate

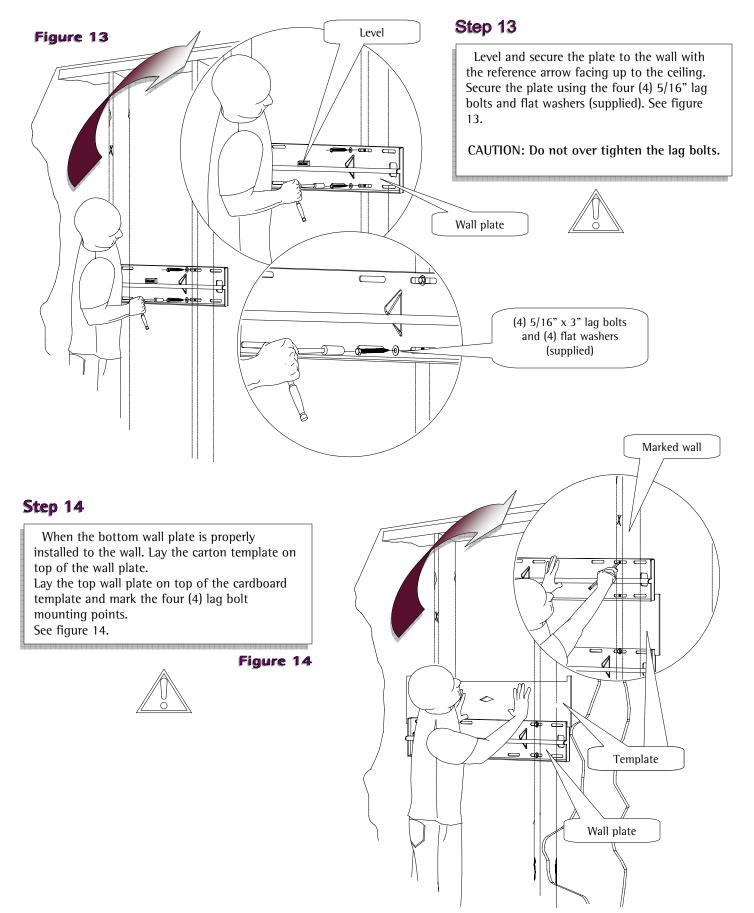

Securing the top plate

Step 15

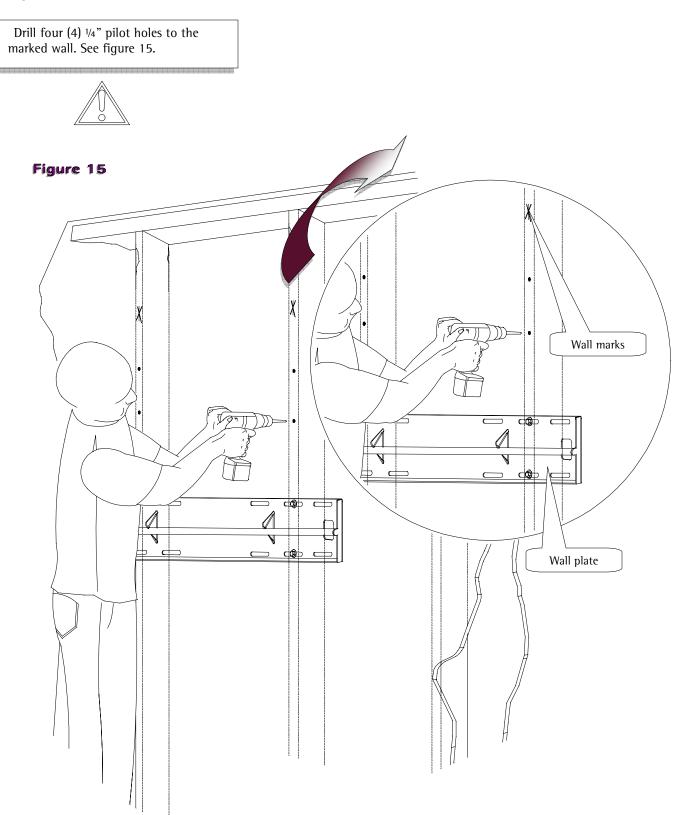


Step 16

Level and secure the plate to the wall with the reference arrow facing up to the ceiling. Secure the plate using the four (4) 5/16" lag bolts and flat washers (supplied). See figure 16

CAUTION: Do not over tighten the lag bolts.

NOTE: CHECK THE MOUNT FOR PROPER TIGHTNESS AND SECURITY.

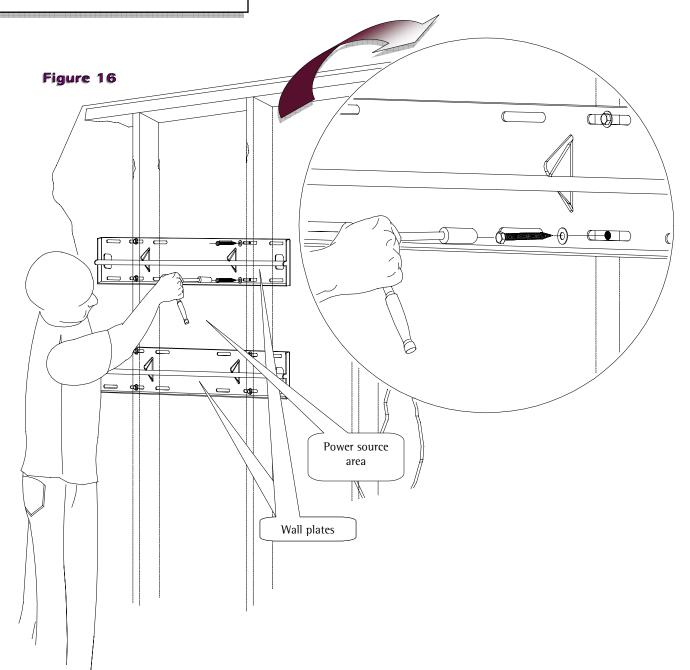


Securing the flat panel to the wall mount

WARNING: AT LEAST (2) QUALIFIED PERSONNEL ARE STRONGLY RECOMMENDED FOR INSTALLATION OF THIS PRODUCT. FAILURE TO DO SO COULD RESULT IN SERIOUS INJURY AND POSSIBLE DAMAGE TO THE FLAT PANEL.

Step 17


Raise the flat panel with the LEFT and RIGHT mounting brackets secured to the flat panel and insert the top and bottom hooks from each bracket to the rods from the wall plates. See figure 17.



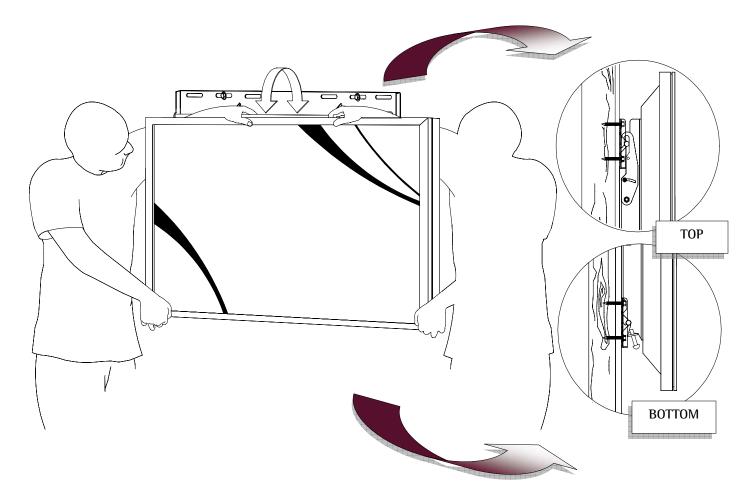

Step 18

Make any lateral shift adjustment and lock it by tightening the two (2) M6 x 30 (mm) Phillips screws found on the bottom of the mounting brackets. CAUTION: Do not over tighten the M6 screws to the rods. See figure 18

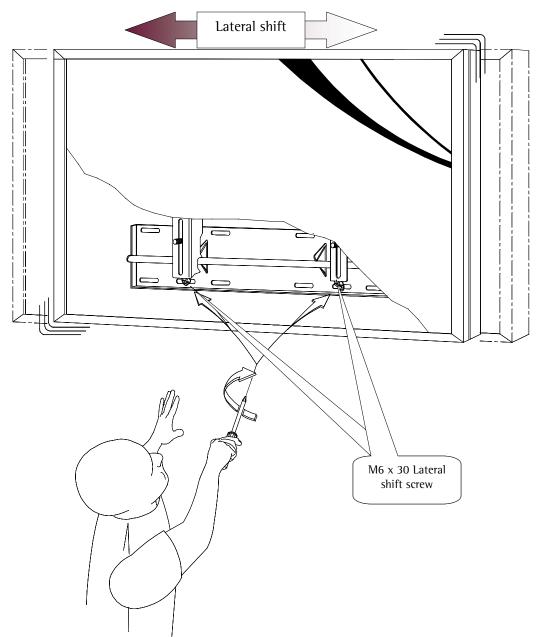


Lateral shift adjustment

Step 19

Tilt the flat panel and secure the two (2) M6 x 12 (mm) safety knobs to each of the mounting brackets. See figure 19.



Figure 19

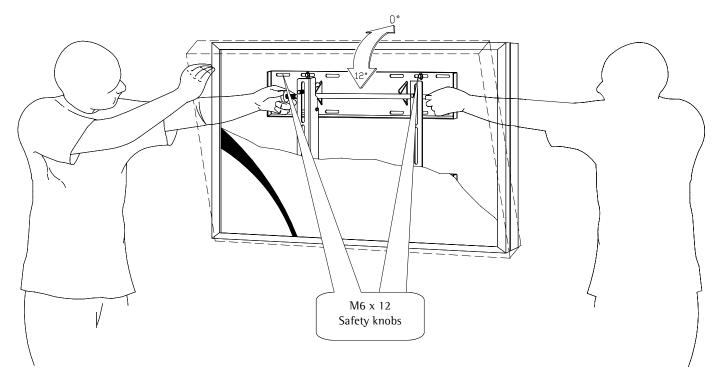

NOTE: To remove the display from the wall simply extend the display to its maximum tilt range, remove the two 6 (mm) safety knurl knobs push the flat panel back to it's flat position loosen or remove the two (2) M6 x 30 lateral shift screws and lift the unit of the wall.



NORTH AMERICA

3130 East Miraloma Avenue Anaheim, CA 92806 USA USA and Canada – Phone: 800-368-9700 Fax: 800-832-4888 EUROPE

Swallow House, Shilton Industrial Estate, Shilton, Coventry, England CV79JY Phone: +44 (0) 2476 614700 Fax: +44 (0) 2476 614710

ASIA

Yabara 1916-15, Misato-machi, Gunma-gun Gunma-ken 370-3107, Japan Phone: 81.27.371.6998 Fax: 81.27.371.6308

Other Locations - Phone: 001.714.632.7100; Fax: 001.714.632.1044

©Premier Mounts 2004