



user manual  
manual de instrucciones

Iron Aid

EDI 96150

**We were thinking of you**  
when we made this product

**Welcome to the world of Electrolux**

Thank you for choosing a first class product from Electrolux, which hopefully will provide you with lots of pleasure in the future. The Electrolux ambition is to offer a wide variety of quality products that make your life more comfortable. You will find some examples on the cover in this manual. Please take a few minutes to study this manual so that you can take advantage of the benefits of your new machine. We promise that it will provide a superior User Experience delivering Ease-of-Mind. Good luck!

# Contents

GB

Safety	5	Installation safety instructions	39
Disposal	7	Removing transport safety equipment	40
Environmental tips	8	Special accessories	41
Appliance description	9	Guarantee/Customer Service	42
Control panel	10	Service	43
Prior to using for the first time	12		
Sorting and preparing laundry	12		
Starting up for the first time	13		
Iron Aid™ - Steam-System	14		
Overview of Iron Aid™ programmes	16		
Starting an Iron Aid™ programme	21		
Drying	23		
Overview of drying programmes	23		
Starting a drying programme	27		
Cleaning and maintenance	28		
What to do if...	36		
Technical data	38		
Consumption values	38		

The following symbols are used in this user manual:



Important information concerning your personal safety and information on how to avoid damaging the appliance.



General information and tips



Environmental information

**Important: Only operate the Iron Aid programmes with distilled water!  
Mains water causes damage to the appliance.**



## Safety

### Before first starting up

- Note the **"Installation and connection instructions"**
- **Important!** The appliance must be moved in vertical position for transport.
- Before first starting up, check the machine for any damage incurred during transport. Never connect up a damaged machine. If parts are damaged, contact your supplier.

### Intended use

- The appliance is intended for drying and iron aid treatment of standard laundry in domestic applications.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not dry unwashed items with drying programmes.
- Conversions or modifications to the appliance are not permitted.
- When using dry-cleaning sets: Only use those products which are declared as suitable for the appliance by the manufacturer.
- Items such as foam rubber (latex foam) shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam

rubber pads should not be dried in the appliance.

- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- Do not place heavily worn laundry items in the appliance. Risk of fire!
- Do not place laundry items with loose fillings (e.g. cushions) in the appliance. Risk of fire!
- Parts with rigid components (e.g. door mats) may cover the air holes. Risk of fire! Do not place such items in the appliance.
- Do not overfill the appliance. Risk of fire! Observe max. loading volume of 6 kg.
- Ensure that explosive objects (e.g. cigarette lighters, spray cans, etc.) do not enter the appliance with the laundry. Risk of fire and/or explosion!
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the appliance.
- Clean micro filter and fine filter after every drying or Iron Aid programme:
- Never operate the appliance without fluff filters or with damaged or blocked fluff filters. Risk of fire!

- Only fill the water reservoir with distilled water. Do not use tap water or any additives! The condensed water from this appliance's condensed water container can also be used, if it is filtered first (e. g. with a coffee filter).
- Clean the heat exchanger regularly.
- With stacked washer and Iron Aid appliance: Do not place objects on the appliance. These may fall off during operation.
- The covering bonnet of the bulb for the drum light must be screwed down tightly.

### **Child safety**

- Keep packaging away from children. There is a risk of suffocation!
- Children often do not recognise the hazards associated with electrical appliances. Children should be supervised to ensure that they do not play with the appliance.
- Make sure that children and small animals cannot climb into the appliance's drum. Could endanger life! Keep the appliance door shut whenever it is not being used.

### **General safety**

- Only specialists may undertake repairs on the appliance.
- Never start up the appliance if the mains cable is damaged or if the operating screen, operating plate or base area are damaged so that the inside of the machine is open and accessible.
- Should the appliance power supply cable need to be replaced, this must be carried out by our Service Centre.
- Switch off the appliance before all cleaning, care or maintenance work. Also disconnect the mains plug from the socket or – with permanent connections – switch off the LS switch in

the fuse box and/or fully unscrew the screwed-in fuse.

- Disconnect the machine from the power supply during long pauses in operations.
- When removing from the socket, never pull the mains plug by the cable, instead take a hold of the plug.
- Manifold plugs, couplings and extension cables must not be used. Risk of fire from overheating!
- The height adjustable screw feet must never be removed.
- Do not spray down the appliance with jets of water. Risk of electric shock!
- Do not lean on the open door. The appliance may tip over.
- If you interrupt the drying or Iron Aid programme laundry or drum may be hot. Risk of burns! Take care when removing the laundry.
- Take care when interrupting the Iron Aid programme: Do not open the door of the appliance during the evaporation phase: Hot steam can cause burns. The evaporation phase is indicated by the animation of the steam symbol in the display.
- Never stop the appliance before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- The final part of a drying cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.
-  Caution - hot surface: Do not touch the surface while the appliance is running.

## Disposal



### Packaging material

The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.g. >PE<, >PS<, etc. Please dispose of the packaging materials in the appropriate container at the community waste disposal facilities.



### Old appliance

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



**Warning!** Remove mains plug from socket when you have no further use for the machine. Cut off mains cable and dispose of together with plug.  
**Destroy loading door lock.** Children cannot then lock themselves in the machine and put their lives at risk.

## Environmental tips


GB

- During the drying process, laundry becomes fluffy and soft. Fabric softeners are not therefore needed when washing.
- Condensed water can be used for iron aid programmes after being filtered.
- Your appliance will function most economically if you:
  - spin the laundry well before drying.  
Example: Consumption data – depending on spinning speed – for 6kg of laundry, dried using the  COTTON  CUPBOARD (ALGODÓN SECO ARMARIO) programme.


Revolutions per minute	Pre-draining		Drying cycle Energy in kWh
	Residual dampness in litres	as a %	
800	4.2	70	4.0
1000	3,6	60	3,7
1200	3.2	53	3.3
1400	3.0	50	3.1
1800	2.5	42	2.6

- always keep the ventilation slots on the base of the appliance unobstructed;
- use the loading volumes specified in the programme overview;
- ensure you have good ventilation in the installation room;
- clean the micro-fine filter and fine strainer after each drying or Iron Aid cycle;


# Appliance description

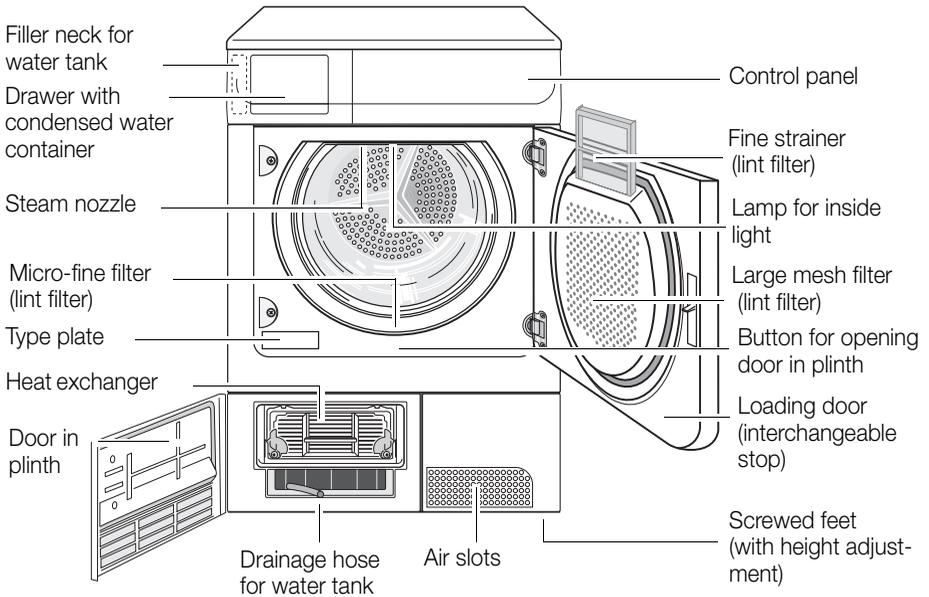

# Control panel

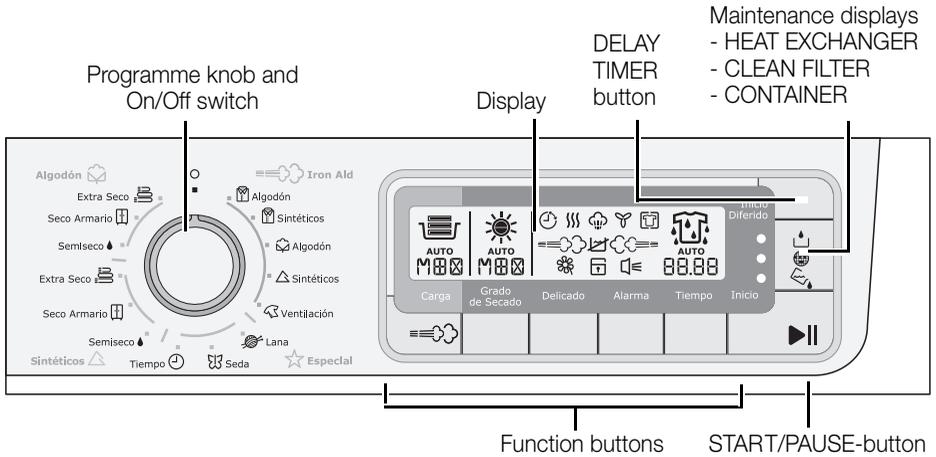

## What is shown in the display

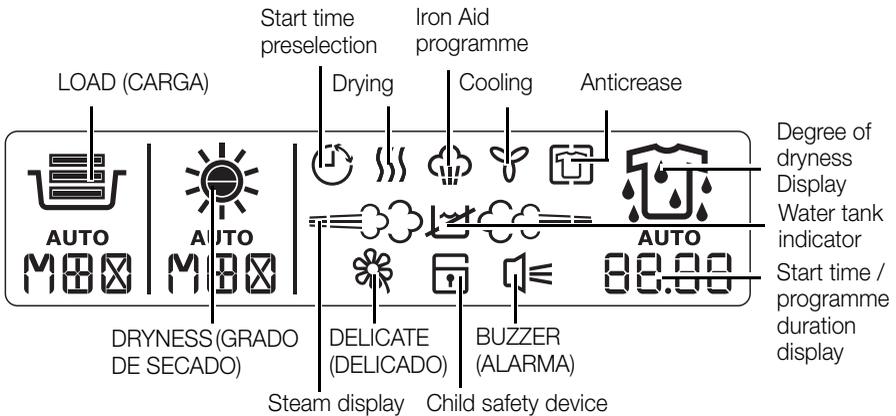

## Function overview: Iron Aid™ Steam System

This appliance can be used both as a dryer and to condition clothes (Iron Aid) to treat garments using steam.

When it is operating as a dryer, there are 9 available programmes.

When it is operating as a steam appliance, there are 4 available programmes for smoothing and removing odours from wet and dry laundry and the  REFRESH (VENTILACIÓN) programme for smoothing and removing

odours from dry outerwear. Garments are softened and smoothed and require a lot less ironing. If laundry is wet, a drying programme is automatically activated before the Iron Aid programme starts.

**Exception:** The  REFRESH (VENTILACIÓN) programme must only be used for dry laundry.

	Programmes	Laundry type	Iron Aid washed garments	Smooths worn clothing	Odour removal worn clothing
 DRYING	Cotton  EXTRA (Algodón EXTRA SECO)	wet			
	Cotton  CUPBOARD (Algodón SECO ARMARIO)	wet			
	Cotton  HAND IRON (Algodón SEMISECO)	wet			
	Synthetics  EXTRA (Sintéticos EXTRA SECO)	wet			
	Synthetics  CUPBOARD (Sintéticos SECO ARMARIO)	wet			
	Synthetics  HAND IRON (Sintéticos SEMISECO)	wet			
	 WOOL (LANA)	wet			
	 SILK (SEDA)	wet			
	 TIME (TIEMPO)	wet			
 IRON AID	 COTTON (ALGODÓN)	wet/dry	X	X	X
	 SYNTHETICS (SINTÉTICOS)	wet/dry	X	X	X
	 COTTON (ALGODÓN)	wet/dry	X	X	X
	 SYNTHETICS (SINTÉTICOS)	wet/dry	X	X	X
	 REFRESH (VENTILACIÓN)	dry		X	X

GB

## Prior to using for the first time

In order to remove any residues which may have been produced during production, wipe the dryer drum with a damp cloth or carry out a brief drying cycle (☉ TIME (TIEMPO) programme of 30 min.) with damp cloths in the machine.

1. Turn the programme knob to ☉ TIME (TIEMPO).
2. Press the TIME (TIEMPO) button repeatedly until **0.30** appears in the display.
3. Press the START/PAUSE (INICIO/PAUSA) button.

## Sorting and preparing laundry

### Sorting laundry – general

- Sorting by fabric type:
  - Cotton/linen for programmes in the ☼ COTTON (ALGODÓN) programme group.
  - Mixed fibres and synthetics for programmes in the △ SYNTHETICS (SINTÉTICOS) programme group.
- Sorting by care label. The care labels mean:

			
Drying in the tumble dryer possible in principle	Dry at normal temperature	Dry at reduced temperature (press SPECIAL CARE (DELICADO) button!)	Drying in the tumble dryer <b>not</b> possible



### **Important: Do not place in the appliance any wet laundry which is not specified on the care label as being suitable for tumble-drying.**

This appliance can be used for all wet laundry items which are labelled as suitable for tumble-drying.

- Do not dry new, coloured textiles together with light-coloured laundry items. Textile colours may bleed.
- Do not dry cotton jersey and knitwear with the ☼ EXTRA (EXTRA

SECO) programme. Items may shrink!

- Wool and wool-like textiles can be dried using the 🌀 WOOL (LANA) programme. Before the drying cycle spin the woollen textiles as well as possible (max. 1200 rpm). Only dry woollen textiles together which are similar or the same with respect to material, colour and weight. Please dry heavy laundry items made of wool separately.

## Special notes about Iron Aid



- The following textiles cannot be treated using an Iron Aid programme:  
woollen knitwear, leather, textiles with large metal, wooden or plastic parts, textiles with rusting metal parts, oilskins or wax cotton garments.



- To smooth or freshen laundry with an Iron Aid programme, sort laundry by size, weight, material and colour. Only smooth textiles together that are similar in terms of size, weight, material and colour.



- Do not dry new, coloured textiles together with light-coloured laundry

## Starting up for the first time

### Switching machine on / switching light on

Turn the programme knob to any programme. The machine has been switched on. When the loading door is opened, the drum is illuminated.

### Opening loading door / loading laundry

1. Open loading door:  
Push against the loading door (push point )

items. Colours may fade (check colour fastness of fabric when damp in an inconspicuous area).



- Do not use dry cleaning sets such as dryel in combination with Iron Aid programmes.

### Preparing laundry - general

- To avoid laundry becoming tangled: close zips, button up duvet covers and tie loose ties or ribbons (e.g. of aprons).
- Empty pockets. Remove metal items (paper clips, safety pins, etc).
- Turn items with double-layered fabrics inside out (e.g. with cotton-lined anoraks, the cotton layer should be outermost). These fabrics will then dry better.

### Special notes about Iron Aid

- Before treating garments with an Iron Aid programme, remove stains by washing or using localised stain re-

2. Load your laundry (do not force it in/ overload the machine).



### Caution! Be careful not to trap laundry in between the loading door and rubber seal.

3. Close loading door securely. Lock must audibly lock.

## Iron Aid™ - Steam-System

GB



### Fill water tank

You must fill up the water tank before using an Iron Aid programme for the first time. Use the distilled water provided if there is not yet any condensed water from previous drying programmes (see chapter on 'Cleaning and Maintenance, Emptying condensed water container'). If, after an Iron Aid programme is selected, the  water tank indicator on the display lights up, you will need to fill up the water tank with distilled water. Otherwise, you will not be able to start any Iron Aid programme.




**Important Only fill the water tank with distilled or fully desalinated water. Do not use tap water or additives! You can also use the condensed water from the condensed water container, as long as you filter it first (use the canister supplied with the filter fitted: see figure opposite).**

1. Pull drawer containing condensed water container out a little (1), then pull out the water tank's filler neck (2).

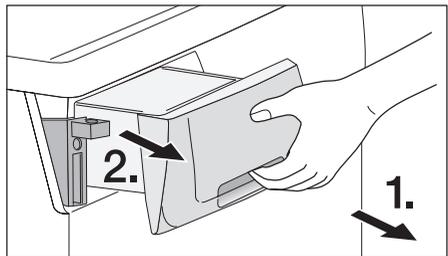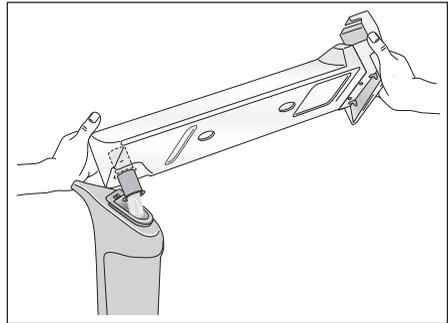

2. Fill with distilled water from the canister provided, up to the MAX mark inside the container.
3. Push filler neck and drawer with condensed water container back in.

**When dry, all textiles not specifically prohibited in the chapter 'Sorting and preparing laundry' may be treated with the Iron Aid Steam System. Wet textiles may only be treated if they are labelled as suitable for dry programmes.**

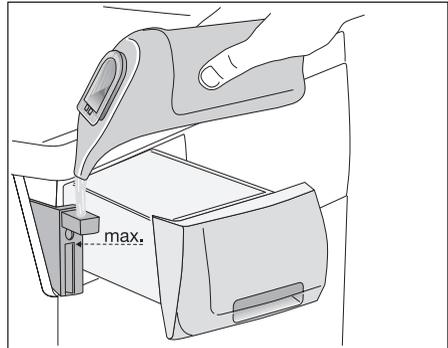

# Overview of Iron Aid™ programmes

GB

Programmes	Max. load * (Weight when dry)	Additional functions		Application/properties	
		LOAD (CARGA)	BUZZER (ALARMA)		
 COTTON (ALGODÓN)	1,0kg	•	•	For 1- 5 cotton shirts. Min. 80% natural fibres (cotton, linen etc).	wet, dry
 SYNTHETICS (SINTÉTICOS)	1.0kg	•	•	For 1- 5 synthetic shirts. Max. 20% natural fibres (cotton, linen etc).	wet, dry
 COTTON (ALGODÓN)	3,0kg	•	•	For smoothing cotton garments. Min. 80% natural fibres (cotton, linen etc).	wet, dry
 SYNTHETICS (SINTÉTICOS)	1.5kg	•	•	For smoothing easy-care garments. Max. 20% natural fibres (cotton, linen etc).	wet, dry
 REFRESH (VENTILACIÓN)		•	•	For one suit or up to two suit jackets or pairs of trousers or similar garments. Also suitable for removing odours. For dry garments only	dry



**All information on applications is for guidance only. Smoothing results may vary depending on the selected programme and especially the fittings and material properties of the textile. The results can be improved if necessary by using different programmes and steam volumes. For example, some textiles containing more than 20% synthetics but with the right fittings may behave more like cotton textiles in an Iron Aid programme. You may therefore get better smoothing results by selecting a cotton Iron Aid programme.**



**Given the wide range of different textile grades and properties that can be manufactured today using different mechanical and chemical processes, we recommend running the first few Iron Aid programmes at low steam levels and with a small number of garments that are as similar as possible. Later, you can carefully start to vary the conditions of Iron Aid programmes to learn from experience how to get the best results from the volume of laundry loaded, the quality of the textiles and the most suitable steam levels and Iron Aid programmes.**

Please also note the accompanying 'Textile Guide'.

Programme	LOAD (CARGA)	Loading volume	DURATION dry* [min.]	DURATION wet* [min.]
 COTTON (ALGODÓN)	MIN	1 - 2 items	19 +/-3	+40 +/- 10
	MED	3 - 4 items		
	MAX	5 items		
 SYNTHETICS (SINTÉTICOS)	MIN	1 - 2 items	21 +/-3	+30 +/- 10
	MED	3 - 4 items		
	MAX	5 items		
 COTTON (ALGODÓN)	MIN	0.5 - 1 kg	20 +/-3	+40 +/- 10
	MED	1 - 2 kg		
	MAX	2 - 3 kg		
 SYNTHETICS (SINTÉTICOS)	MIN	0,2 - 0,5 kg	21 +/-3	+30 +/- 10
	MED	0.5 - 1 kg		
	MAX	1 - 1.5 kg		
 REFRESH (VENTILACIÓN)	MIN	1 pair of trousers	19 +/-3	
	MED	1 jacket		
	MAX	1 suit		



**All information provided on selecting the steam level and corresponding load are suggestions only. In some cases, using a higher steam level or smaller load may give better results.**


**The  REFRESH (VENTILACIÓN) programme is a gentle Iron Aid programme for non-washable textiles. Any distortion to the shape of a garment which might occur in few cases, can be remedied by ironing.**

\* exact programme times appear in the display once the machine has performed wet/dry recognition (approx. 2 min.)

GB

## Selecting the programme

Use the programme selector to set the programme you require. The estimated programme duration without drying cycle (in minutes) appears in the display.

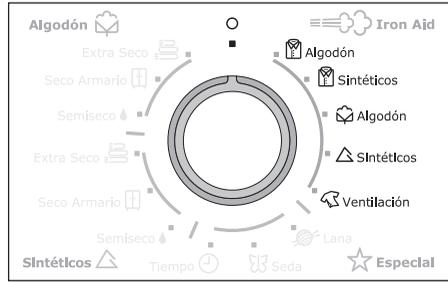

Select steam level (LOAD - CARGA)

**To achieve the best results, different steam levels are required for different volumes of laundry. The LOAD (CARGA) button is used to set the required steam level: MIN, MED or MAX.**

All Iron Aid programmes, apart from the REFRESH (VENTILACIÓN) programme, automatically recognise the remaining dampness in clothes. When laundry is wet, a drying cycle is activated first if required.

The programme chart shows the steam levels appropriate for the selected load, under LOAD (CARGA).

1. Press the LOAD (CARGA) button repeatedly until the desired steam level (MIN, MED or MAX) is shown in the display.

If the LOAD (CARGA) button is not pressed after an Iron Aid programme is selected, the medium steam level (MED) is selected automatically. If you select the REFRESH (VENTILACIÓN) programme, MIN is selected automatically.





**Important: If in doubt, always select a lower steam level first until you have more experience with load volumes, fabric types and the corresponding optimum steam level. If too high a steam level is selected, garments may lose their shape. If too low a steam level is selected, creases may remain.**

### Selecting additional functions


The additional functions available for the Iron Aid programmes are BUZZER (ALARMA), TIME DELAY (INICIO DIFERIDO) and the CHILD SAFETY DEVICE.



### BUZZER (ALARMA)

The appliance is supplied with the BUZZER (ALARMA) function activated. When the drying cycle has finished, an intermittent acoustic signal will sound. Each time a button is pressed or a programme is changed using the programme knob, an audible signal is also set to sound.

The button is used to switch the function on or off. When the function is active, the  BUZZER (ALARMA) symbol appears in the display.

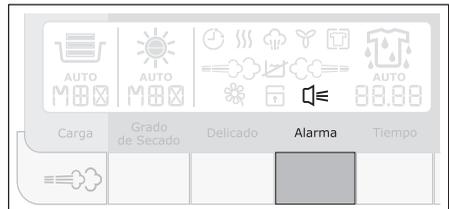

## Delay timer



**With the DELAY (INICIO DIFERIDO) button, you can delay the start of a programme by between 30 minutes (30') and a maximum of 20 hours (20h).**

1. Select the programme and additional functions.
2. Press the DELAY (INICIO DIFERIDO) button as many times as necessary until the required start delay appears on the display, e.g. 12h if the programme is to be started in 12 hours.



**If the display is showing 20h and you press the button again, the time delay will be cancelled. The display will show 0' and then the duration of the selected programme.**

3. To activate the delay timer, press the START/PAUSE (INICIO/PAUSA) button. The amount of time remaining until the programme is set to start is continuously displayed (e.g. 15h, 14h, 13h, ... 30' etc).

## Child safety device

The child lock can be set to prevent a programme being accidentally started or a programme in operation being accidentally changed.

The child safety device locks all buttons and the programme knob.

The child safety device can be activated or deactivated by holding down the BUZZER (ALARMA) and TIME (TIEMPO) buttons simultaneously for 5 seconds.

- Before programme is started: Appliance cannot be used
- After programme is started: Programme in operation cannot be changed

The  symbol appears in the display to indicate that the child safety device is activated.

The child safety device is not deactivated once the programme comes to an end.

If you want to set a new programme, you must first deactivate the child safety device.

## Starting an Iron Aid™ programme

Press the START/PAUSE (INICIO/PAUSA) button. The programme is started. First, the drying phase indicator appears in the display.

The display will also show the programme duration for the selected Iron Aid programme, not including the additional drying phase.

With wet laundry, after a few minutes the appliance will show the correct programme duration for the Iron Aid programme including the preceding drying programme.

As soon as the right level of dryness is reached, the Iron Aid programme will start automatically. The steam indicator shows the progress of the Iron Aid programme in the display. The individual steam phases are shown by

☁☁☁ animated clouds of steam.



**Important: During the steam phases that form part of the Iron Aid programme and also the anti-crease phase (represented by animated clouds of steam in the display), the loading door cannot be opened. Risk of burns!**

If the  water tank indicator lights up when you select an Iron Aid programme, the programme cannot be started. You will need to fill the water tank first (see section on 'Cleaning and maintenance, filling water tank'.)



It is normal for the appliance to make noises during an Iron Aid or drying programme if garments with hard parts, such as metal buttons, are put in the drum.

### Changing a programme

To change a programme which has been selected by mistake once the programme has started, first turn the programme selector to O OFF and then reset the programme.



**The programme can no longer be changed directly once the programme has started. If you nevertheless attempt to change the programme with the programme knob or an additional function button (except the BUZZER (ALARMA) button), the START/PAUSE (INICIO/PAUSA) button and ERR will flash in the display. The drying programme is not however affected by this.**

Putting in extra items or taking items out before end of programme

1. Open door.
2. Load or remove laundry items.
3. Close door securely.
4. Press the START/PAUSE (INICIO/PAUSA) button to continue the drying cycle.

GB

## Iron Aid programme complete / removing laundry

After the Iron Aid phase has ended, **000** is illuminated and the message  ANTICREASE appears in the display. If the  BUZZER (ALARMA) has been activated, an audible signal sounds at regular intervals.



**The Iron Aid programme is automatically followed by an anti-crease phase, including brief steam phases, which lasts around 90 minutes.**

The drum rotates during the anti-crease phase. This keeps the laundry loose and free of creases. It can be removed at any point during the anti-crease phase, except during steam phases (look for steam animation in the display!). Laundry should be removed as quickly as possible.

1. Open the loading door to remove the laundry.
2. Before removing the laundry, remove fluff from the micro-fine filter. It is best to use a damp hand for this purpose. (See “Cleaning and maintenance” section.)
3. Remove laundry one garment at a time.



**To retain the effects of the Iron Aid treatment, clothes must be removed one garment at a time during the anti-crease phase and hung immediately on a clothes hanger to dry (for at least 5-15 mins, depending on fabric and selected steam level). Do up the buttons and tug the garment into shape, paying particular attention to cuffs and seams.**

4. Turn the programme knob to O OFF.
 

**Important!** After each drying cycle

  - Clean the micro-fine filter and fine filter
  - Drain the condensed water container (See section “Cleaning and maintenance”).
5. Close door.

## Drying

## Overview of drying programmes

Programmes		Max. load (Weight when dry)	Additional- functions			Application/properties	Care sym- bols
			BUZZER (ALARMA)	DELICATE (DELICADO)	DRYNESS (GRADO DE S.)		
COTTON (ALGODÓN)	 EXTRA (EXTRASECO)	6kg	•	•	•	Thorough drying of thick or multi-layered fabrics, e.g. terry towelling items, bathrobes.	 
	 CUPBOARD SECO ARMARIO)	6kg	•	•	•	Thorough drying of fabrics of even thicknesses, e.g. terry towelling items, knitwear, towels.	 
	 DAMP (SEMISECO)	6kg	•	•	•	For normal thickness cotton or linen laundry, e.g. bedding, table linen	 
△ SYNTHETICS (SITÉTICOS)	 EXTRA EXTRA SECO)	3kg	•	•	•	Thorough drying of thick or multi-layered fabrics, e.g. pullovers, bedding, table linen.	  <sup>1)</sup> 
	 CUPBOARD (SECO ARMARIO)	3kg	•	•	•	For thin fabrics which are not ironed, e.g. easy care shirts, table linen, baby clothes, socks, lingerie with bones or wires.	  <sup>1)</sup> 
	 DAMP (SEMISECO)	3kg	•	•	•	For thin textiles which are still to be ironed, e.g. knitted items, shirts.	  <sup>1)</sup> 
	 TIME (TIEMPO)	1kg	•	•	<b>AUTO</b>	For further drying of individual items of laundry or for small volumes of less than 1kg. You can select a programme duration from 10 mins to 3 hrs in 10-minute steps.	  <sup>1)</sup> 
☆ SPECIAL (ESPECIAL)	 SILK (SEDA)	1kg	•	<b>AUTO</b>	•	Special programme for drying silk using warm air and gentle movement.	
	 WOOL (LANA)	1kg	•	<b>AUTO</b>	•	Special programme, for drying woollen fabrics with minimum physical stress. "Sorting and preparing washing".) Recommendation: Remove fabrics immediately after drying, as no anti-crease programme follows.	

1) Press the DELICATE button.





**Caution: Make sure that by selecting the DRYNESS (GRADO DE SEC.) function, you do not over-dry your wool or silk.**

### DELICATE (DELICADO)

For especially gentle drying of sensitive fabrics with the  care label and for temperature-sensitive textiles (e.g. acrylic, viscose). Programme is executed with reduced heat.

DELICATE (DELICADO) is only suitable for use with loads of up to 3kg.


1. Press the DELICATE (DELICADO) button. The DELICATE symbol appears in the display.



### BUZZER (ALARMA)

The appliance is supplied with the BUZZER (ALARMA) function activated. When the drying cycle has finished, an intermittent acoustic signal will sound. Each time a button is pressed or a programme is changed using the programme knob, an audible signal is also set to sound.

The button is used to switch the function on or off. When the function is active, the  BUZZER (ALARMA) symbol appears in the display..

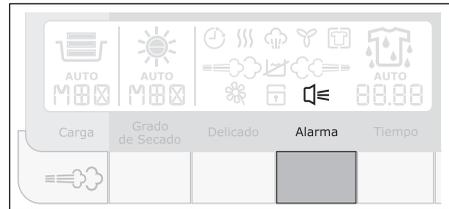

## TIME (TIEMPO) ⌚

To select the programme duration after setting the ⌚ TIME (TIEMPO) programme. You can select a programme duration from 10 mins to 3 hrs in 10-minute steps.

1. Turn the programme knob to the ⌚ TIME (TIEMPO) programme. The display will show **0.10** (corresponding to the  COOLING programme).
2. Press the TIME button repeatedly until the desired programme duration is shown in the display, e.g. **00.20** for a programme of 20 minutes.

If the programme duration is not selected, the duration is automatically set to 10 mins.

To set the timer delay and the child safety device, please refer to the chapter on 'Iron Aid, setting the timer delay' / 'Setting the child safety device'.



## Starting a drying programme

Press the START/PAUSE (INICIO/PAUSA) button. The programme is started. The programme progress display shows drying progress. The symbols for ☉ DRYING and ☼ COOLING appear in the display one after the other. The number of droplets in the dryness indicator gradually goes down as the drying process progresses.

## Changing a programme

To change a programme which has been selected by mistake once the programme has started, first turn the programme selector to O OFF and then reset the programme.



**The programme can no longer be changed directly once the programme has started. If you nevertheless attempt to change the programme with the programme knob or an additional function button (except the BUZZER (ALARMA) button), the START/PAUSE (INICIO/PAUSA) button and ERR will flash in the display. The drying programme is not however affected by this.**

Putting in extra items or taking items out before end of programme

1. Open loading door



**Warning! Laundry and drum can become hot. Risk of burns!**

2. Load or remove laundry items.

3. Close loading securely. Lock must audibly lock.
4. Press the START/PAUSE (INICIO/PAUSA) button to continue the drying cycle.

## Drying cycle complete / removing laundry

Once the drying programme has finished, ☐ ANTI-CREASE lights up in the display. If the 🔔 BUZZER is activated, an audible signal sounds at regular intervals.



**The drying cycle is automatically followed by a anti-crease phase which lasts around 30 minutes.**

The drum rotates at intervals during this phase. This keeps the laundry loose and free of creases. It can be removed at any time during the anti-crease phase. (The laundry should be taken out towards the end of the anti-crease phase at the latest to prevent creases from forming.)

1. Open door.
2. Before removing the laundry, remove fluff from the micro-fine filter. It is best to use a damp hand for this purpose. (See “Cleaning and maintenance” section.)
3. Remove laundry.
4. Turn the programme knob to O OFF.

**Important!** After each drying cycle

- Clean the micro-fine filter and fine filter
  - Drain the condensed water container (See section “Cleaning and maintenance”).
5. Close door.

## Cleaning and maintenance

GB


### Cleaning lint filters

To ensure that the appliance works perfectly, the lint filters in the door and in front of the drum must be cleaned after every Iron Aid or drying cycle.




**Important Never operate the dryer without the lint filter or with a damaged or blocked lint filter.**

1. Open the door.
2. Use a damp hand to clean the lint filter, which is built into the lower part of the loading aperture.

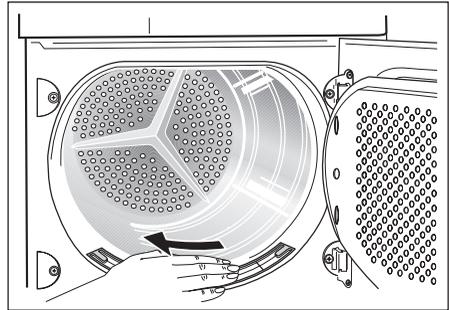

3. Remove the lint filter from the door by pulling the grip upwards.
4. Remove fluff from lint filter, preferably using a damp hand for this purpose.
5. Replace the filter.

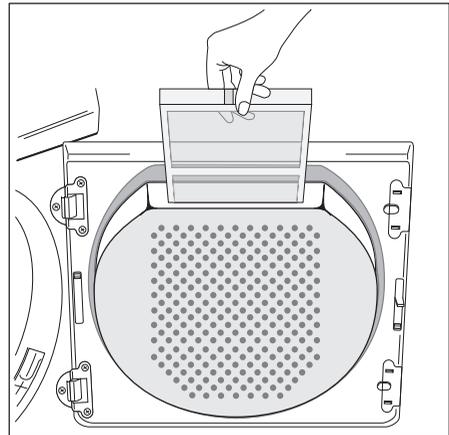

## Cleaning the filter area



**The filter area does not have to be cleaned after every drying cycle, but should be checked regularly and cleaned of fluff, if necessary.**

You will need to undertake the following (to clean the filter area):

1. Remove lint filter (see chapter on 'Cleaning lint filters').
2. Remove fluff from the entire filter area. It is best to use a vacuum cleaner for this purpose.
3. Replace the filter.

Clean the door seal.

Wipe the door seal using a damp cloth immediately after the Iron Aid or drying cycle.

GB

## Emptying the condensed water container


Empty condensed water container after every drying cycle.

If the condensate tank is full, an active programme will break off automatically and the CONTAINER display will light up. In order to continue the programme, the condensed water container must first be emptied.



**Warning! The condensate is not suitable for drinking or for preparing foodstuffs.**


1. Pull drawer containing condensed water container all the way out (1) and pull up the condensed water container's drainage pipe as far as it will go (2).

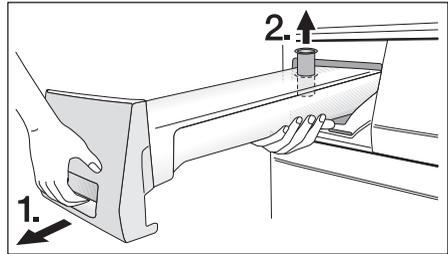

2. Pour out the condensate into a basin or similar container.
3. Push drainage pipe in and refit condensed water container.

If the programme has been interrupted as a result of the condensed water container being full:

Press the START/PAUSE (INICIO/PAUSA) button to continue the drying cycle.

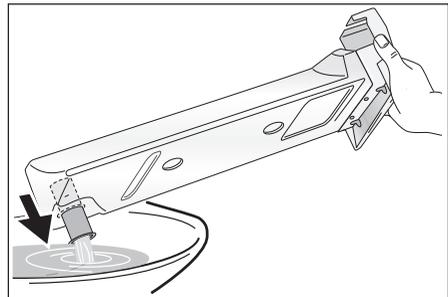


**The condensed water container has a volume of approx. 4 litres. This is sufficient for around 6kg of laundry which has previously been spun at 1000 revolutions/minute.**

- The condensed water be used as distilled water, e.g. for steam irons. However, first filter the condensed water to remove any residues and small pieces of fluff.

Using the attached canister to filter:

Pour the water out of the container straight through the filter at the top of the canister.

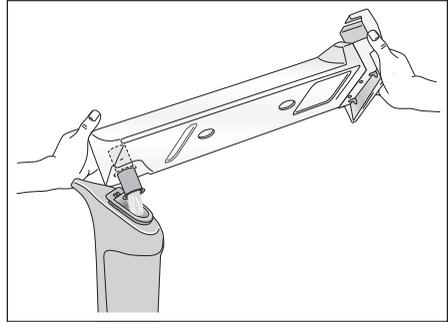


## Fill water tank

You must fill up the water tank before using an Iron Aid programme for the first time. Use the distilled water provided if there is not yet any condensed water from previous drying programmes (see chapter on 'Cleaning and Maintenance, Emptying condensed water container'). If, after an Iron Aid programme is selected, the  water tank indicator on the display lights up, you will need to fill up the water tank with distilled water. Otherwise, you will not be able to start an Iron Aid programme.



**Important Only fill the water tank with distilled or fully desalinated water. Do not use tap water or additives! You can also use the condensed water from the appliance's container, as long as you filter it first.**

- Pull drawer containing condensed water container out a little (1), then pull out the water tank's filler neck (2).

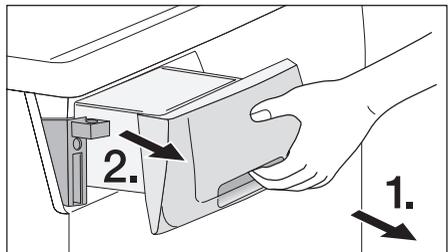

2. Fill with distilled water from the canister provided, up to the MAX mark inside the container.
3. Push filler neck and drawer with condensed water container back in.




**The water tank has a volume of approx. 1.3 litres. This is sufficient for around 4 – 10 Iron Aid programmes with garment steaming, depending on the selected volume of steam, programme and the corresponding steam phases during the crease guard phase.**

You can easily check the level of water in the tank at any time by looking at the fill indicator in the viewing window. The maximum fill level is indicated by the MAX mark.

An overflow guard prevents the container from being overfilled.


The water tank indicator on the display lights up as soon as the fill volume in the tank falls below 500 ml when you start a programme (this corresponds to the maximum volume of water required for the Iron Aid programme that uses the most steam, including the crease guard phase). This prevents an Iron Aid programme from being interrupted because of an empty water tank.

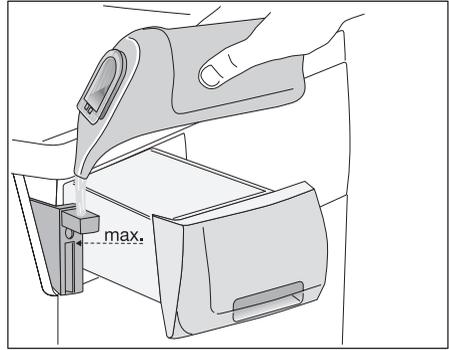

## Emptying the water tank for long periods of disuse

If Iron Aid programmes are not run for more than three weeks, the tank should be emptied and refilled with fresh distilled water if required.

1. Open door in plinth in front of heat exchanger (see chapter on 'Cleaning the heat exchanger') and place a collecting container in front of the appliance.
2. Pull out the drainage hose underneath the heat exchanger (1).
3. Remove the plug from the end of the hose (2) and allow the water to drain into the collecting container.
4. Then seal the hose again and push it back into its original position.
5. Close door in plinth.

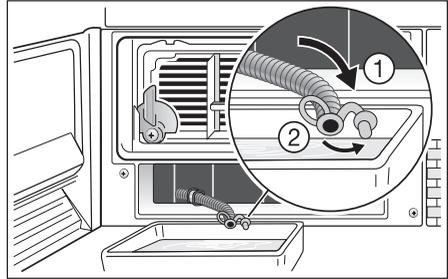

## Cleaning heat exchanger


GB

If the HEAT EXCHANGER display is illuminated, the heat exchanger needs to be cleaned.




**Caution! Operating when the heat exchanger is clogged with lint can damage the appliance. This also increases energy consumption.**


1. Open loading door
2. Open base door. To do this, press the release button located beneath the loading aperture and open the base door to the left.
3. Remove lint from the inside of the door and the heat exchange chamber. Wipe the door seal with a damp cloth.

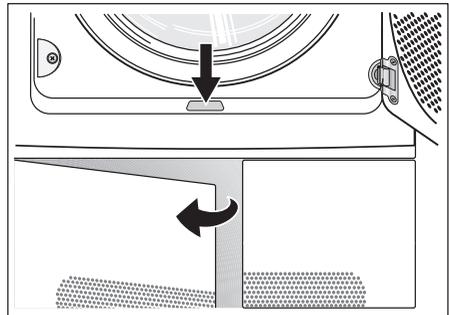

4. Turn both lock washers inwards.

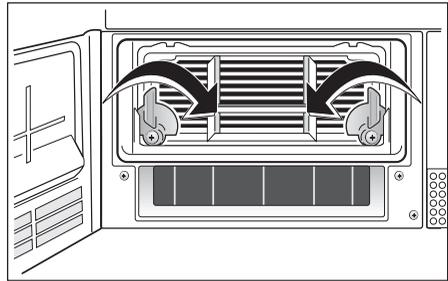

5. Use the handle to pull the heat exchanger out of the base and carry it horizontally to prevent any remaining water from spilling.
6. To empty the heat exchanger, hold vertically over a washing-up bowl.

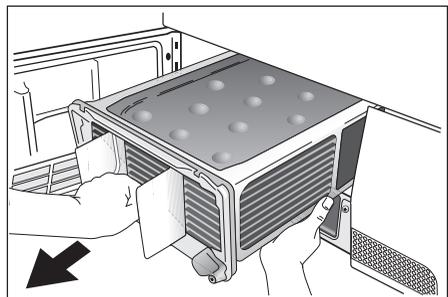



**Caution! Do not use sharp objects to clean the heat exchanger. You could damage it and cause leaks.**

7. Clean heat exchanger.  
It is best to use a brush or to rinse thoroughly with a shower head.
8. Replace heat exchanger and lock into place (turn both lock washers outwards until they snap into place).
9. Close base door.



**The appliance will not operate if the HEAT EXCHANGER indicator is still lit.**



**Caution! Never operate the appliance without the heat exchanger.**

## Cleaning the drum



**Important Do not use scourers or steel wool to clean the drum.**



**Lime in the water or laundry care products may form a barely visible lining on the inside of the drum. The degree to which the laundry has been dried is then no longer detected reliably. The laundry is damper than expected when removed from the appliance.**

Use a standard domestic cleaner (e.g. vinegar-based cleaner) to wipe down the inside of the drum and drum ribs.

## Clean control panel and housing



**Important** Do not use furniture cleaners or aggressive cleaning agents to clean the appliance.

Use a damp cloth to wipe down the control panel and housing.

## Changing the light bulb for interior lighting

**Important:** The bulb for the interior lighting must be changed by our Customer Care Department.

## What to do if...

GB

### Remedying small malfunctions

If, during operation, the error code (**E** plus number or letter) appears on the multi-display: Switch the appliance off and on again. Reset programme. Press the START/PAUSE (INICIO/PAUSA) button.

If the error appears again, please contact the Customer Care Department, stating the error code.

Problem	Possible cause	Remedy
Washing machine does not work.	Mains plug is not plugged in or fuse is not working correctly. Door is open. Press the START/PAUSE (INICIO/PAUSA) button.	Plug in at mains socket. Check fuse in fuse box (domestic installation). Close door. Press the START/PAUSE (INICIO/PAUSA) button.
Drum light is not working.	Programme selector in O OFF position. Defective light bulb.	Turn the programme selector to any programme. Replace light bulb (see next section).
Iron Aid programme does not start.	Water tank is empty.	Fill water tank.
After an Iron Aid programme, garments are not sufficiently smooth.	Wrong programme selected (e.g.  SYNTHETICS - SINTÉTICOS instead of  COTTON - ALGODÓN). Too low a LOAD (CARGA) steam level set. Too many garments in machine, or garments that are too different. Clothes are not removed until the anti-crease phase is finished. Garments not hung on clothes hangers and/or not tugged into shape. Multi-layered garments tend to lose their shape.	Note the composition of the fabric. Set a higher LOAD (CARGA) steam level. Load the machine with fewer garments, or only similar ones. Remove clothes quickly one at a time from the machine as soon as possible after the start of the anti-crease phase. Hang garments on clothes hangers, do up buttons and tug garments into shape. Reshape multi-layered garments by ironing after they come out of the machine.
After an Iron Aid programme, there are no creases left in the garments.	The Iron Aid programme has the effect of smoothing garments.	Iron creases in again after the Iron Aid programme.

Problem	Possible cause	Remedy
Drying results unsatisfactory.	<p>Wrong programme selected.</p> <p>Lint filter blocked.</p> <p>Heat exchanger blocked with fluff.</p> <p>Incorrect amount of washing.</p> <p>Ventilation slots in base area covered up.</p> <p>Residue on inside surface of drum or drum paddles.</p>	<p>Select a different programme the next time you dry (see section "Overview of programmes").</p> <p>Clean lint filter.</p> <p>Clean heat exchanger.</p> <p>Observe recommended loads.</p> <p>Uncover ventilation slots in base area.</p> <p>Clean inside surface of drum and drum paddles.</p> <p>Adjust using the DRYNESS (GRADO DE SEC.) additional function (see chapter on 'Drying, selecting additional functions').</p>
When you press a button <b>Err</b> appears in the multi-display.	Laundry guard. Additional functions cannot be selected after a programme has started.	Turn the programme knob to O OFF. Reset programme.
Drying cycle ends shortly after programme starts. ANTICREASE display illuminated.	Too little laundry has been loaded for the selected programme, or laundry that is too dry.	Select time programme or higher drying level (e.g.  EXTRA - EXTRA SECO instead of  CUPBOARD - SECO ARMARIO).
Programme inactive, CONTAINER display illuminated.	Condensed water container is full.	Empty condensed water container, then start programme with the START/PAUSE (INICIO/PAUSA) button.
PROGRAMME TIME display changes erratically or stays unchanged for a long time.	Programme time is corrected automatically depending on type and volume of laundry and level of dampness.	Automatic process, there is no fault with the appliance.
Drying cycle lasts an unusually long time. Note: After up to 5 hours the drying cycle ends automatically (see 'End of drying cycle').	<p>Fluff filter blocked.</p> <p>Heat exchanger blocked with fluff.</p> <p>DELICATE (DELICADO) button pressed and load volume too big.</p> <p>Load volume too big.</p> <p>Laundry insufficiently pre-drained.</p>	<p>Clean fluff filter.</p> <p>Clean heat exchanger.</p> <p>DELICATE (DELICADO) is only suitable for use with loads of up to 3kg!</p> <p>Reduce load volume.</p> <p>Laundry must be adequately pre-drained.</p>
Discoloration	Colour fastness of textiles.	Check colour fastness of textiles. Only treat textiles together if they are a similar colour.

## Technical data

GB



### This appliance conforms with the following EU Directives:

- 73/23/EEC dated 19.02.1973 Low Voltage Directive

- 89/336/EEC dated 03.05.1989 EMC Directive inclusive of Amending Directive 92/31/EEC
- 93/68/EEC dated 22.07.1993 CE Marking Directive

Height x width x depth	85 x 60 x 60 cm
Depth with loading door open	109 cm
Height can be adjusted by	1.5 cm
Weight when empty	approx. 46kg
Load (depends on programme) <sup>1)</sup>	max. 6kg
Energy consumption in accordance with IEC 1121 (6kg of cotton, pre-drained at 1000 rpm, programme  COTTON  CUPBOARD - ALGODÓN SECO ARMARIO)	3,7 kWh
Area of use	Domestic
permissible ambient temperature	+ 5°C to + 35°C

1) Different load weights may be needed in some countries due to different measuring methods.

## Consumption values

The consumption values have been established under standard conditions.

They may deviate when the machine is operated in domestic circumstances.

Programme	Load in kg	Energy consumption in kWh
COTTON  CUPBOARD (ALGODÓN SECO ARMARIO) <sup>1)</sup>	6	3,7
COTTON  HAND IRON (ALGODÓN SEMISECO) <sup>1) *)</sup>	6	3,0
SYNTHETICS  CUPBOARD (SINTÉTICOS SECO ARMARIO) <sup>2)</sup>	3	1,4

1) pre-drained at 1000 rpm

2) pre-drained at 1200 rpm

\*) corresponds to COTTON HAND IRON (ALGODÓN SECO PLANCHA) programme



## Installation safety instructions


- **Important!** The appliance must be moved in vertical position for transport.
- Before first starting up, all parts of the transport safety equipment must be removed. The machine may otherwise be damaged.
- The appliance must not be built-in.
- Before starting up for the first time, ensure that the nominal voltage and type of current specified on the appliance's rating plate match the nominal voltage and type of current at the installation site. The electrical fuse required can also be found on the rating plate.
- Always connect the machine to an earthed socket in accordance with current wiring regulation. The manufacturer declines any responsibility for damage or injury through failure to comply with the above safety precaution.
- With permanent connections: A permanent connection may only be established by an authorised specialist electrician.
- Do not install appliance in rooms at risk of frost.
- Do not install the appliance behind
  - a door that locks
  - a sliding door
  - a door with a hinge that lies opposite the hinge of the appliance.
- The door of the appliance must not be able to be blocked by house doors or other appliance doors.
- Do not install on a carpet with a high pile. Air circulation at the ventilation holes will be hindered.
- Ensure that the appliance is not standing on the mains cable.
- Install the machine horizontally.

## Removing transport safety equipment




**Caution! Before first starting up, all parts of the transport safety equipment must be removed.**

1. Open loading door
2. Pull off adhesive strips from inside machine on top of drum.

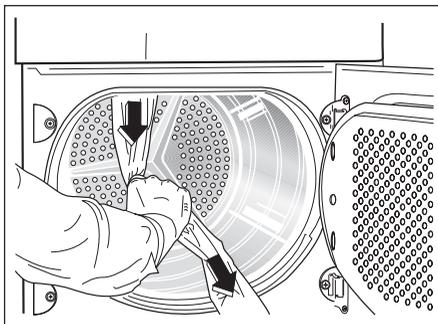

3. Remove foil hose and polystyrene padding from the machine.

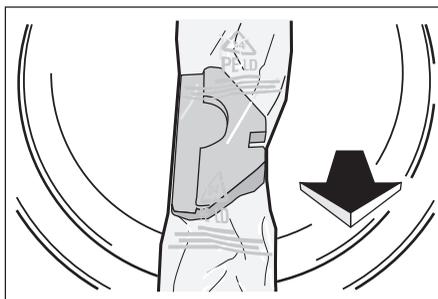

## Levelling the appliance

The four feet of the appliance are pre-adjusted.

Large degrees of unevenness can be compensated for by individually adjusting the height adjustable screw feet.

To do this lift the appliance and turn the adjustable feet in or out.

**Important** Do not use pieces of wood, cardboard or such like to level out unevenness in the floor, but adjust the height adjustable screw feet instead.

## Special accessories

The following special accessories are available from your Electrolux Service Force Centre or your specialist dealer:

### **Intermediate installation kits for stacked washer and iron aid appliance:**

These intermediate installation kits can be used to arrange the iron aid appliance and an automatic Electrolux washing machine (60cm wide, front loading) as a space-saving washer/iron aid stack. The automatic washing machine is at the bottom and the iron aid appliance is at the top.

Two versions can be supplied:

- without stacker plate
- with extractable stacker plate

Read the manual supplied with the installation kit carefully.

## Door reversal instructions

To make it easier to load or unload the laundry the door can be reversed.

Reversing the door is not possible if after this operation the appliance result installed behind a door with hinge on the opposite side to that of the appliance.



**Warning! The door may only be reversed by qualified personnel. If necessary, please contact your local Service Force Centre.**

## Guarantee/Customer Service

GB

### European Guarantee

This appliance is guaranteed by Electrolux in each of the countries listed at the back of this user manual, for the period specified in the appliance guarantee or otherwise by law. If you move from one of these countries to another of the countries listed below the appliance guarantee will move with you subject to the following qualifications:-

- The appliance guarantee starts from the date you first purchased the appliance which will be evidenced by production of a valid purchase document issued by the seller of the appliance.
- The appliance guarantee is for the same period and to the same extent for labour and parts as exists in your new country of residence for this particular model or range of appliances.
- The appliance guarantee is personal to the original purchaser of the appliance and cannot be transferred to another user.
- The appliance is installed and used in accordance with instructions issued by Electrolux and is only used within the home, i.e. is not used for commercial purposes.
- The appliance is installed in accordance with all relevant regulations in force within your new country of residence.

The provisions of this European Guarantee do not affect any of the rights granted to you by law.

### Weitere Kundendienststellen im Ausland

In diesen Ländern gelten die Garantiebedingungen der örtlichen Partner. Diese können dort eingesehen werden.

### Further after-sales service agencies overseas

In these countries our AEG-Electrolux agents' own guarantee conditions are applicable. Please obtain further details direct.

### Autres agences étrangères assurant le service après-vente

Dans ces pays, les conditions de garantie des concessionnaires de la région sont valables. Vous pouvez les consulter sur place.

### Otros puntos de Postventa en el extranjero

En estos países rigen las condiciones de nuestros representantes locales. las cuales pueden ser consultadas allí mismo.

### Ulteriori uffici del servizio tecnico assistenza clienti all'estero

In questi paesi sono valide le condizioni di garanzia dei partner locali. Queste condizioni possono essere esaminate sul luogo.

### Serviços de assistência técnica no estrangeiro

Nestes países são válidas as condições de garantia dos concessionários locais, podendo aí ser consultadas.

### További vevőszolgálati irodák külföldön

Ezekben az országokban a mi AEG-Electrolux vevőszolgálatunknál saját jótállási feltételek alkalmazhatók. A további adatokat kérjük közvetlenül szerezze be.

### Servisne službe

Na garancijskem listu boste našli seznam pooblaščenih servisnih služb AEG-Electrolux.


# Service

In the event of technical faults, please first check whether you can remedy the problem yourself with the help of the operating instructions (section “What to do if...”).

If you were not able to remedy the problem yourself, please contact the Customer Care Department or one of our service partners.

In order to be able to assist you quickly, we require the following information:

- Model description
- Product number (PNC)
- Serial number (S No.)  
(for numbers see rating plate)
- Type of fault
- Any error messages displayed by the appliance

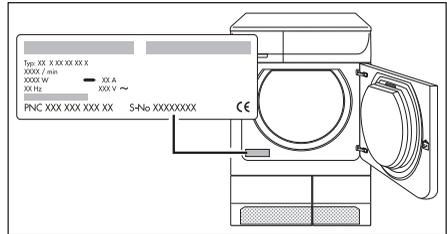

So that you have the necessary reference numbers from your appliance at hand, we recommend that you write them in here:

Model description: .....

PNC: .....

S No: .....

[www.electrolux.com](http://www.electrolux.com)

[www.electrolux.es](http://www.electrolux.es)