

Thank you for purchasing this high-quality Insignia infrared shutter control for your Nikon DSLR camera. Your shutter control triggers your camera's shutter when using slow shutter speeds. Because you do not touch your camera when using your shutter control, you experience less camera vibration and get sharper pictures. Your shutter control is especially useful for taking self-portraits.

PACKAGE CONTENTS


- Remote Wireless Shutter Control with battery
- Lanyard
- *Quick Setup Guide*



Scan for compatibility chart

Before using your new product,
please read these instructions to prevent any damage.

FEATURES

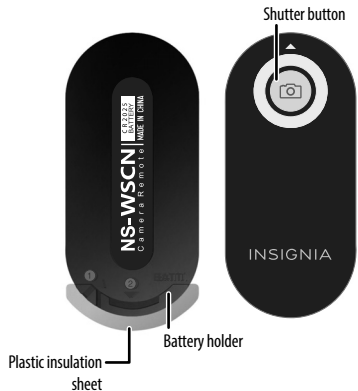

USING YOUR REMOTE CONTROL

- 1 Pull the plastic insulation sheet out of your shutter control before using it the first time.
- 2 Set your camera to IR mode. For instructions, see the documentation that came with your camera.
- 3 Attach your camera to a tripod, or place it on a steady surface like a shelf or table.

- 4 Point your shutter control directly at your camera's IR receiver, then press the shutter button on the front of your shutter control. When your camera receives the IR signal, it automatically focuses and takes a picture.

TROUBLESHOOTING

If your camera does not focus and take pictures:

- Make sure that your shutter control is within 32.8 ft (10 m) of the camera's IR receiver.
- Make sure that your camera is in IR mode. See your camera's user manual to activate the IR mode.
- Make sure that your camera has an autofocus feature. See your camera's user manual to activate auto focus (if available).
- Make sure that the battery for the shutter remote control is not expired. Replace with a CR2025 battery if necessary.
- Make sure the line of site between the transmitter and the infrared receiver is not blocked by the lens or other obstacles.

REPLACING THE BATTERY

- 1 Push the release tab (1) in the direction of the arrow.
- 2 Pull the battery tray (2) out of the battery compartment.
- 3 Remove the old battery, then insert a new CR2025 battery face up into the tray.
- 4 Push the battery tray into the battery compartment until the tray locks in place.

SPECIFICATIONS

Model:	NS-WSCN
Operating voltage:	3V (Battery: CR2025)
Operating temperature:	14° ~ 122°F (-10° ~ 50°C)
Standby current:	1.2μA
Transmitting angle:	30°
Wavelength:	940 nm
Maximum operating distance:	32.8 ft. (10 m)
Carrier frequency:	38.1 KHZ
Dimensions (L×W×H):	2.6 × 1.2 × 0.3" (6.7 × 3.1 × 0.7 cm)
Weight:	0.4 oz (12 g)

SAFETY INFORMATION

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

ICES Statement

CAN ICES-3 (B)/NMB-3 (B)

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call 877-467-4289 (U.S.) or 01-800-926-3000 (Mexico)

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Registered in some countries.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2014 Best Buy. All rights reserved.

Made in China