



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for EMERSON EWW601. You'll find the answers to all your questions on the EMERSON EWW601 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual EMERSON EWW601 User guide EMERSON EWW601 Operating instructions EMERSON EWW601 Instructions for use EMERSON EWW601 Instruction manual EMERSON EWW601



Emerson
OWNER'S MANUAL
If you need additional operating assistance after reading this owner's manual or for other replacement accessories, please call TOLL FREE: 1-800-256-2487.

VIDEO CASSETTE RECORDER EWW601B

EMERSON AND THE G-CLEF LOGO ARE REGISTERED TRADEMARKS OF EMERSON RADIO CORP., IRVING, NEW JERSEY, U.S.A.



As an ENERGY STAR® Partner, our company has determined that this product meets the ENERGY STAR® guidelines for energy efficiency. Emerson® is a U.S. registered mark.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The caution marking is located on the rear of the cabinet.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

IMPORTANT SAFEGUARDS

FIGURE A
EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE



NEC - NATIONAL ELECTRICAL CODE
S888A

1. **Read Instructions:** All the safety and operating instructions should be read before the appliance is operated.
2. **Retain Instructions:** The safety and operating instructions should be retained for future reference.
3. **Read Warnings:** All warnings on the appliance and in the operating instructions should be adhered to.
4. **Follow Instructions:** All operating and use instructions should be followed.
5. **Cleaning:** Unplug this video product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
EXCEPTION: A product that is meant for unattended service and that is some specific system, such as the possibility of the top of an authorization code for a CATV converter, is not intended to be unplugged by the user for cleaning or any other purpose, may exclude the reference to unplugging the appliance in the cleaning description otherwise required in item 5.
6. **Attachments:** Do not use attachments not recommended by the video product manufacturer as they may cause hazards.
7. **Water and Moisture:** Do not use this video product near water, for example, near a bath tub, wash basin, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.
8. **Accessories:** Do not place the video product on an unstable cart, stand, tripod, bracket, or table. The video product may fall, causing serious injury to a child or adult and serious damage to the appliance. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the video product. Any mounting of the appliance should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer. An appliance and cart combination should be moved with care. Clutch brakes, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
9. **Ventilation:** Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the video product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the video product on a bed, sofa, rug, or other similar surface. This video product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
10. **Power Source:** This video product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, contact your electrical dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
11. **Grounding or Polarization:** This video product is equipped with a three-pronged alternating current plug that will fit into one of two types of outlets. The plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet by reversing the plug, the plug should still fall to fit. Contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
12. **Power Cord Protection:** Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them; paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
13. **Outdoor Antenna Grounding:** An outside antenna or cable system so connected to the video product, has the antenna or cable system so grounded as to protect the user from electric shock. Grounding of the lead-in wire to an antenna discharge unit, installation of grounding conductors, location of antenna discharge unit, installation of grounding electrodes, and requirements for the grounding electrode (Fig. A).
14. **Lightning:** For added protection for this video product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video product due to lightning and power line surges.
15. **Power Lines:** An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
16. **Overheating:** Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
17. **Object and Liquid Entry:** Never such objects of any kind into the video product through any openings as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill liquid of any kind on the video product.
18. **Servicing:** Do not attempt to service this video product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
19. **Damage Requiring Service:** Unplug this video product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a. When the power supply cord or plug is damaged.
 - b. If liquid has been spilled, or objects have fallen into the video product.
 - c. If the video product has been exposed to rain or water.
 - d. If the video product does not operate normally following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the video product to its normal operation.
 - e. If the video product has been dropped or damaged in any way.
 - f. When the video product exhibits a distinct change in performance this indicates a need for service.
20. **Replacement Parts:** When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unapproved substitutions may result in fire, electric shock, or other hazards.
21. **Safety Check:** Upon completion of any service or repairs to this video product, ask the service technician to perform safety checks to determine that the video product is in proper operating condition.
22. **Heat:** This video product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

INSTRUCTIONS EN ESPAÑOL | **MANUAL DE INSTRUCCIONES** | **MAINTENANCE** | **SPECIAL FEATURES** | **REPAIRING** | **SETUP** | **FUNCTION** | **BACK** | **PREPARATION FOR USE** | **DESCRIPTION OF CONTROLS** | **IMPORTANT SAFEGUARDS**



[Your user manual](#)
[EMERSON EWW601](#)

Manual abstract:

Do not place the VCR directly on top of the TV. · Shield it from direct sunlight and keep it away from sources of intense heat. Avoid dusty or humid places. Avoid places with insufficient ventilation for proper heat dissipation. Do not block the ventilation holes on the sides of the VCR. Avoid locations subject to strong vibration or strong magnetic fields. DESCRIPTION OF CONTROLS Front Panel 1 2 3 4 5 PLAY 6 REW REC OTR STOP/EJECT F.FWD PAUSE STILL VIDEO L AUDIO R POWER VCR/TV POWER VCR/TV TAPE IN TIMER REC TAPE SPEED CHANNEL MENU 16 15 14 13 12 11 10 9 8 7 AVOID THE HAZARDS OF ELECTRICAL SHOCK AND FIRE · Do not handle the power cord with wet hands. · Do not pull on the power cord when disconnecting it from AC wall outlet. Grasp it by the plug.

· If, by accident, water is spilled on your VCR, unplug the power cord immediately and take the unit to our Authorized Service Center for servicing. · Do not put your fingers or objects into the VCR cassette holder. 1. Cassette Compartment 2. STOP/EJECT button 3.

REW button 4. PLAY button 5. F.FWD button 6. PAUSE/STILL button 7.

MENU button 8. REC/OTR button Display Window POWER VCR/TV 9. CHANNEL buttons 10. TAPE SPEED button 11. Display Window 12. Remote Sensor 13. VCR/TV button 14. POWER button 15. AUDIO Input jacks 16. VIDEO Input jack TAPE IN TIMER REC PRECAUTIONS DESCRIPTION OF CONTROLS 17 18 19 20 21 17.

POWER indicator 18. VCR/TV indicator 19. TAPE IN indicator Rear Panel MOISTURE CONDENSATION WARNING Moisture condensation may occur inside the unit when it is moved from a cold place to a warm place, or after heating a cold room or under conditions of high humidity. Do not use the VCR at least for 2 hours until its inside is dry. 20. TIMER indicator 21. REC indicator 22 23 24 25 ANT IN IN R VIDEO OUT CH4 FCC WARNING This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made. AUDIO L OUT IN CH3 OUT IMPORTANT COPYRIGHT INFORMATION Unauthorized recording or use of broadcast television programming, video tape, film or other copyrighted material may violate applicable copyright laws.

We assume no responsibility for the unauthorized duplication, use, or other acts which infringe upon the rights of copyright owners. 22. AC Power Cord 23.

AUDIO OUT jacks 24. AUDIO IN jacks 25.

ANT. IN jack Remote Control 26 27 28 29 26. VIDEO OUT jack 27. VIDEO IN jack 28. CH3/CH4 selector switch 29.

ANT. OUT jack A NOTE ABOUT RECYCLING This product's packaging materials are recyclable and can be reused. Please dispose of any materials in accordance with your local recycling regulations. Batteries should never be thrown away or incinerated but disposed of in accordance with your local regulations concerning chemical wastes. 1 2 3 4 5 6 7 8 POWER VCR/TV EJECT 1 4 7 MENU 2 5 8 0 3 6 9 +100 SEARCH MODE EXIT COUNTER RESET MEMORY CHANNEL 17 16 15 14 13 12 11 10 DISPLAY SLOW Note to the Cable TV System Installer: This reminder is provided to call the Cable TV system installer's attention to Article 820-40 of the National Electrical Code, which provides guidelines for proper grounding in particular, specifying that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as possible. PLAY REW F.FWD RECORD STOP PAUSE/STILL 9 1. POWER button 2. NUMBER buttons 3. MENU button 4.

DISPLAY button 5. SLOW button 6. REW button 7. STOP button 8. RECORD button 9. PAUSE/STILL button 10. F.FWD button 11. PLAY button 12. COUNTER/MEMORY button 13.

EXIT/RESET button 14. SEARCH MODE button 15. CHANNEL buttons 16. VCR/TV button 17. EJECT button CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.



[Your user manual](#)
[EMERSON EWV601](#)