


VR337/VR508

# USER'S GUIDE

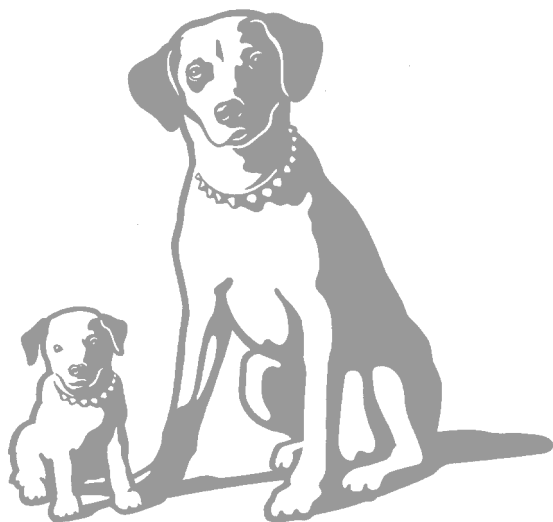

VIDEO CASSETTE

RECORDER

RECORDER

## Important Information

### WARNING

To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.

### WARNING

RISK OF ELECTRIC SHOCK  
DO NOT OPEN

**TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**




This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

## Cautions

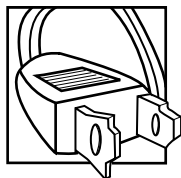

**Caution:** To prevent electric shock, match wide blade of plug to wide slot, fully insert.

**Attention:** Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

Do not defeat the safety feature of the plug. The wide blade fits into the wall socket only one way. If you need an extension cord, make sure it matches the plug of the product.

For U.S.A. — Operate VCR only on 120 volts, 60Hz AC power (normal house power).

FCC Regulations state that unauthorized changes or modifications to this equipment may void the user's authority to operate it.

## Note To Cable TV Installer

This reminder is provided to call your attention to Article 820-40 of the National Electrical Code (Section 54 of the Canadian Electrical Code, Part 1) which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

## Product Registration

Please fill out the product registration card and return it immediately. Returning this card allows us to contact you if needed.

Keep your sales receipt to obtain warranty parts and service and for proof of purchase. Attach it here and record the serial and model numbers in case you need them. The numbers are located on the back of the product.

Model No. **VR337/VR508** \_\_\_\_\_

Serial No. \_\_\_\_\_

Purchase Date: \_\_\_\_\_

Dealer / Address / Phone: \_\_\_\_\_

\_\_\_\_\_  
\_\_\_\_\_

# Table of Contents

## Important Information

Warnings _____	i
Cautions _____	i
Note to Cable TV Installer _____	i
Product Registration _____	i

## Hooking Up the VCR

Choosing a Hookup _____	2
Antenna or Cable System Without a Cable Box _____	3
Cable System With Cable Box to Unscramble All Channels _____	4
Cable System With Cable Box to Unscramble Only Pay Channels _____	5
Connecting Two VCRs for Copying Tapes _____	6

## Setting Up the VCR

Startup	
Check Accessories With VCR _____	7
Insert Batteries in Remote _____	7
Turn on TV and VCR _____	7
Place Channels in VCR's Memory _____	8
Add or Remove Channels from VCR's Memory _____	8
Select the Language/Seleccione el Idioma/Sélectionner la Langue _____	9
Use TV•VCR Button _____	9
Set the ALERT SOUND Feature _____	9
Set the Time and Date _____	10
Set the Automatic Daylight- Saving Time _____	10

## Using the Remote Control

VCR Function Buttons _____	11
----------------------------	----

## Playing a Tape

Playback _____	12
Using the Playback Features	
Auto Play Feature _____	13
Picture Search _____	13
Slow Motion _____	13

DISPLAY Button _____	14
Time Counter _____	14
Index Search _____	15
Zero Search _____	15
Commercial Scan (SEARCH Button) _____	15
Pause for Stop-Action _____	16
Frame Advance (F.ADV Button) _____	16
Automatic Tracking _____	16
Manual Tracking _____	16

## Recording a Program

Recordings _____	17
Recording Speeds _____	17
Normal Recording _____	17
Watch a TV Channel While VCR is Recording a Different Channel _____	17
Express Recording _____	18
Recording While You're Away	
Setting a Timer Recording _____	19
Stopping a Timer Recording _____	19
Timer Recording From the VCR's Line Input _____	20
Checking or Clearing Timer Recordings _____	20
Using the Recording Features	
Recording Pause _____	20
Pro-Tect Plus™ Feature _____	20
Using Two VCRs for Copying and Editing Tapes _____	21
Copying and Editing Tapes Using Compatible Remote _____	21

## References

Location of Controls	
Front Panel _____	22
Back Panel _____	23
Display Panel _____	23
Specifications _____	24
Cleaning the VCR _____	24
Limited Warranty _____	25
Trouble Checks _____	26-27
Index _____	28-29

## **Choosing a Hookup**

The hookups on pages 3 through 5 are divided into two hookup types: Basic (A) and Advanced (B).

The basic hookup shows the backs of TVs that have only an antenna/cable connection. It is the easier of the two and additional accessories may not be needed.

The advanced hookup shows the VCR hooked up to a TV with audio and video jacks using a signal splitter. This connection may improve the picture quality as well as convenience of operation.

### **Answer the questions to choose the hookup for your VCR.**

#### **1. How does your TV receive signals?**

Choose one answer from below.

- A. Outside antenna – Turn to page 3.
- B. Rabbit ears (set-top) and/or bow tie antenna – Turn to page 3.
- C. Cable System – Go to question 2.

#### **2. What type of Cable-TV system\* do you have?**

Choose one answer from below.

- A. Cable without a box – Turn to page 3.
- B. Cable box to unscramble all the channels – Turn to page 4.
- C. Cable box to unscramble only pay channels, such as HBO, Showtime, Cinemax, etc. – Turn to page 5.

\*You may need to contact your local cable company for assistance.

### **Optional Hookups**

#### **How to hook up two VCRs for copying tapes.**


- A. Select a hookup by answering questions 1 and 2 above.
- B. Then, modify the connections as shown on page 6.

## Antenna or Cable System Without a Cable Box

### A. Basic hookup.

Use this hookup for a simple connection which requires fewer accessories.

1. Set the 3CH.4 switch on back of VCR to either channel 3 or 4.  
Tune the TV to this channel and use the TV•VCR button to watch the VCR.
2. Connect as shown.
3. Plug in power cords of VCR and TV.
4. **Continue to page 7.**

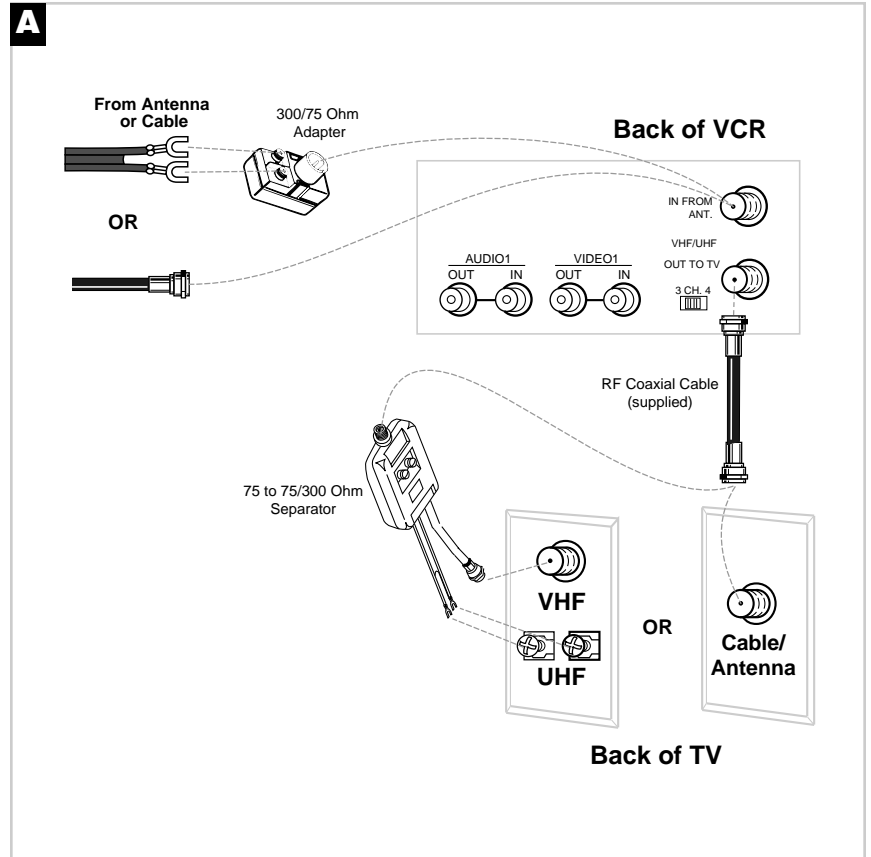


### B. Advanced hookup.

Use this hookup for slightly improved picture quality and more convenient operation — use of the TV•VCR button is not required.

1. Connect as shown.  
This connection requires additional accessories not provided. A Y-adapter may be required to hear sound from both channels if your TV is not stereo.
2. Plug in power cords of VCR and TV.
3. **Continue to page 7.**

Tune the TV to its video input to watch the VCR.

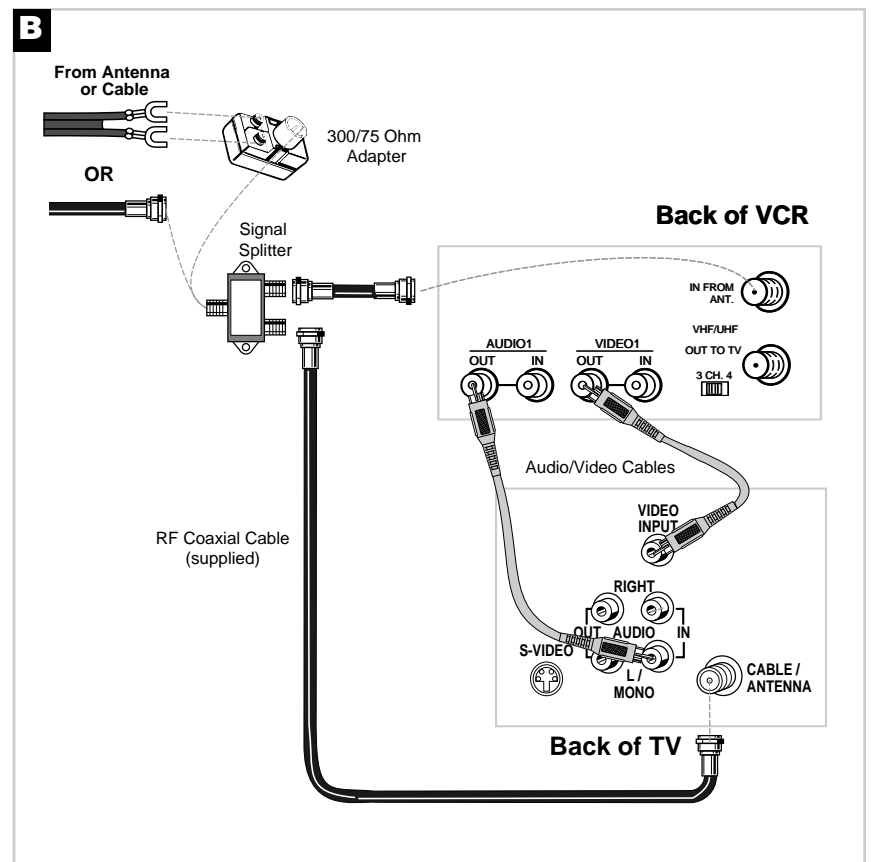


# Cable System With Cable Box to Unscramble All Channels

## A. Basic hookup.

Use this hookup for a simple connection which requires fewer accessories.

1. Set the **3CH.4** switch on back of VCR to either channel 3 or 4.  
Tune the TV to this channel and use the TV•VCR button to watch the VCR.
2. **Connect as shown.**  
This connection may require additional accessories not provided.
3. **Plug in power cords of VCR, TV, and cable box.**
4. **Continue to page 7.**

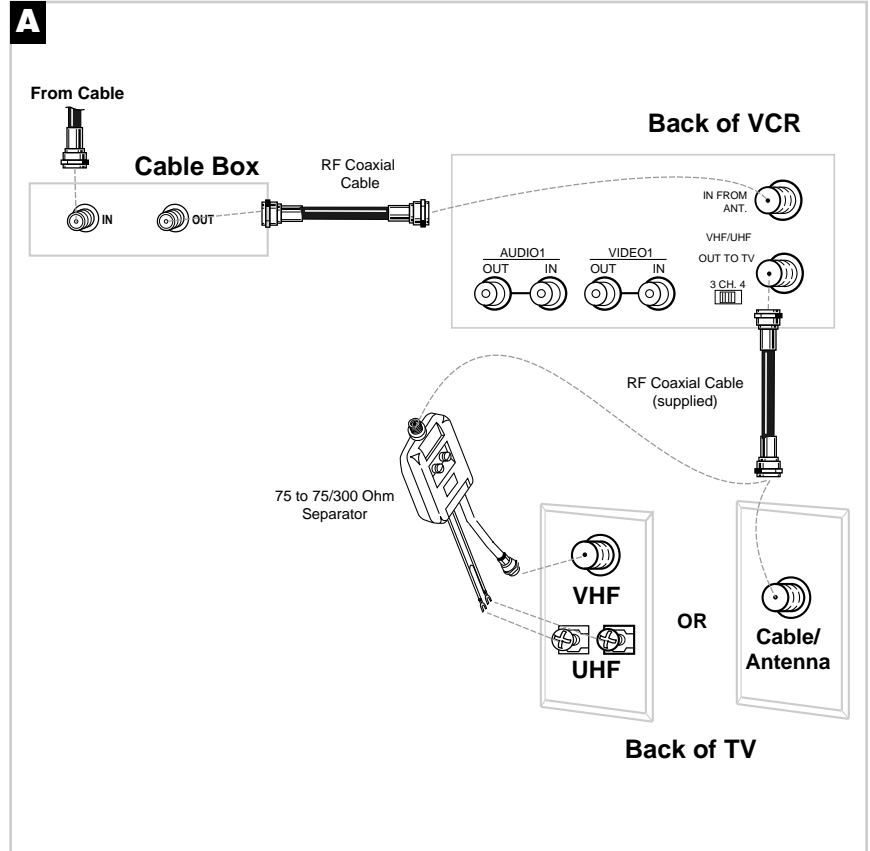


## B. Advanced hookup.

Use this hookup for slightly improved picture quality and more convenient operation — use of the TV•VCR button is not required.

1. **Connect as shown.**  
This connection requires additional accessories not provided. A Y-adapter may be required to hear sound from both channels if your TV is not stereo.
2. **Plug in power cords of VCR, TV, and cable box.**
3. **Continue to page 7.**

Tune the TV to its video input to watch the VCR.

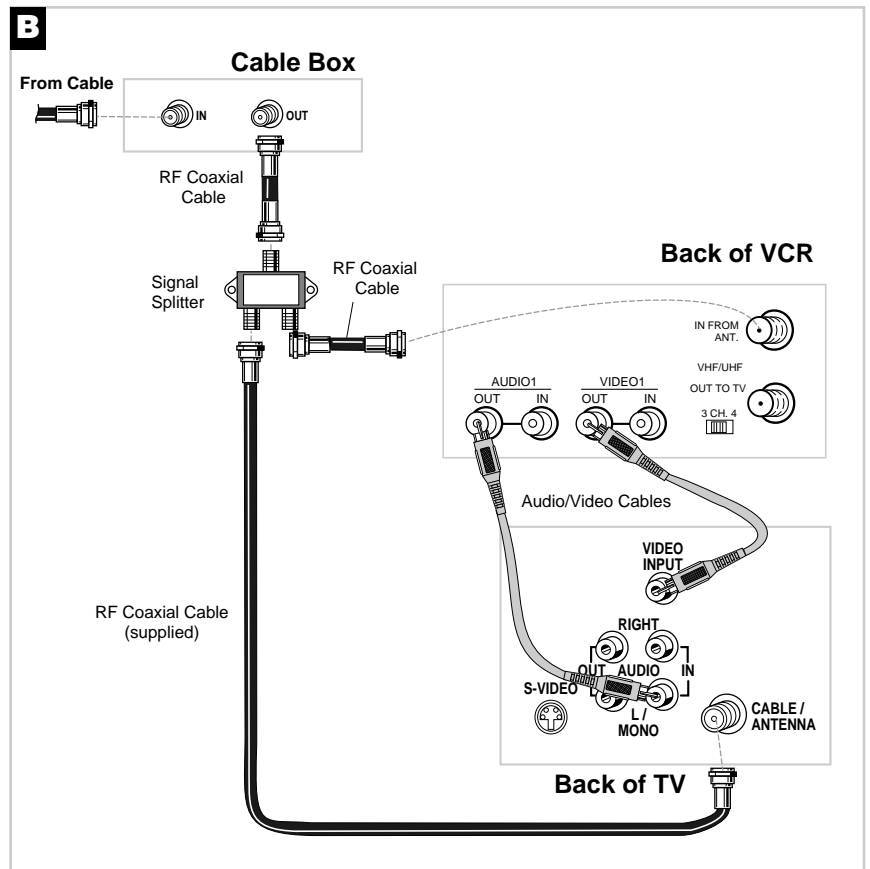


# Cable System With Cable Box to Unscramble Only Pay Channels

(such as HBO, Showtime, Pay-Per-View, etc.)

## A. Basic hookup.

Use this hookup for a simple connection which requires fewer accessories.


1. Set the 3CH.4 switch on back of VCR to either channel 3 or 4.  
Tune the TV to this channel and use the TV•VCR button to watch the VCR.
2. Connect as shown.  
This connection may require additional accessories not provided.
3. Plug in power cords of VCR, TV, and cable box.
4. **Continue to page 7.**

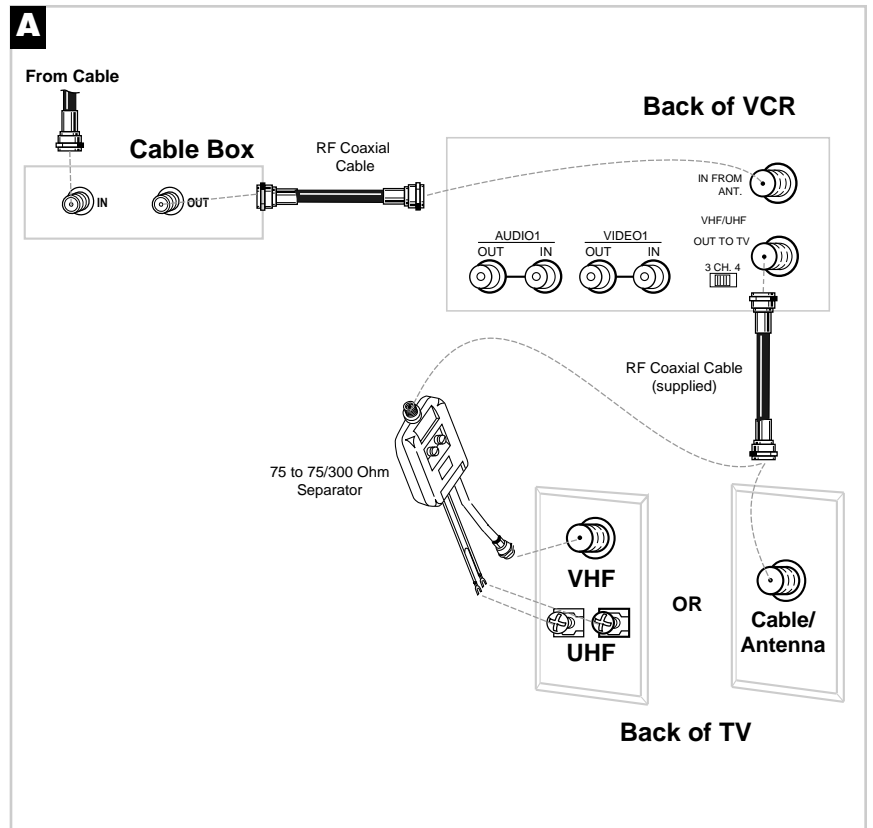

## B. Advanced hookup.

Use this hookup for slightly improved picture quality and more convenient operation — use of the TV•VCR button is not required.

1. Connect as shown.  
This connection requires additional accessories not provided. A Y-adaptor may be required to hear sound from both channels if your TV is not stereo.
  2. Plug in power cords of VCR, TV, and cable box.
  3. **Continue to page 7.**
- Tune the TV to its video input to watch the VCR. View all pay channels through the VCR.

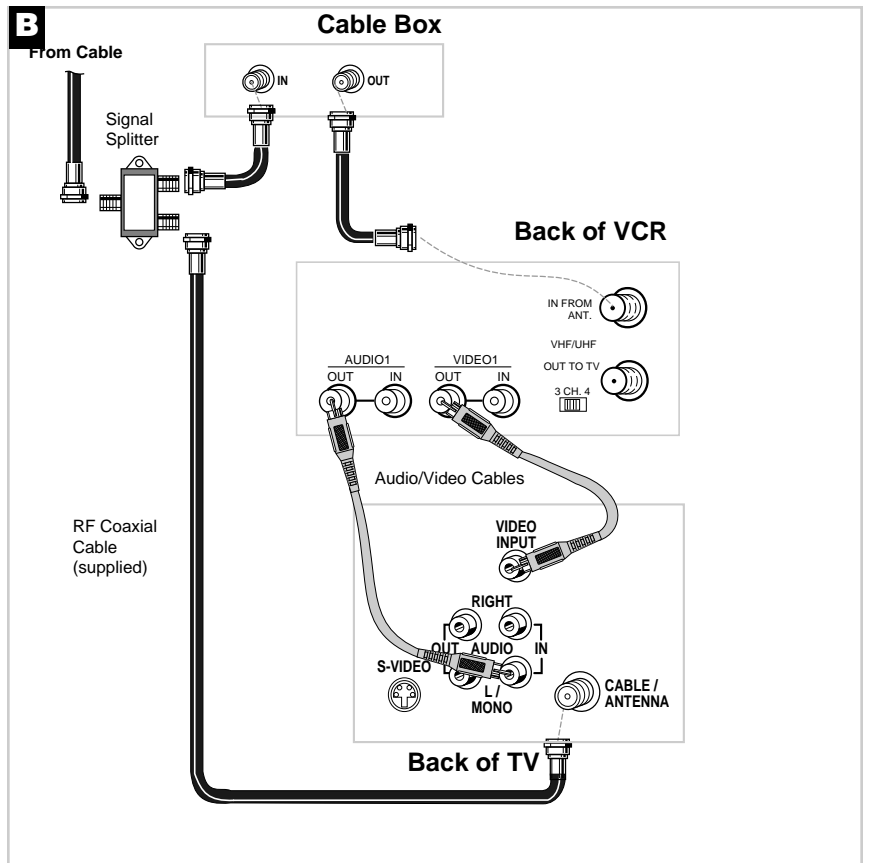


# Connecting Two VCRs for Copying Tapes

## Option A hookup.

Use this hookup for a simple connection which requires fewer accessories.

1. Select a hookup from pages 2 through 5 and then modify with this connection.
2. Set the 3CH.4 switch on the playback VCR to either channel 3 or 4.  
Tune the recording VCR to this channel to receive the signal from the playback VCR.
3. Connect as shown.  
This connection may require additional accessories not provided.
4. Plug in power cords of VCRs and TV.
5. **Continue to page 7.**

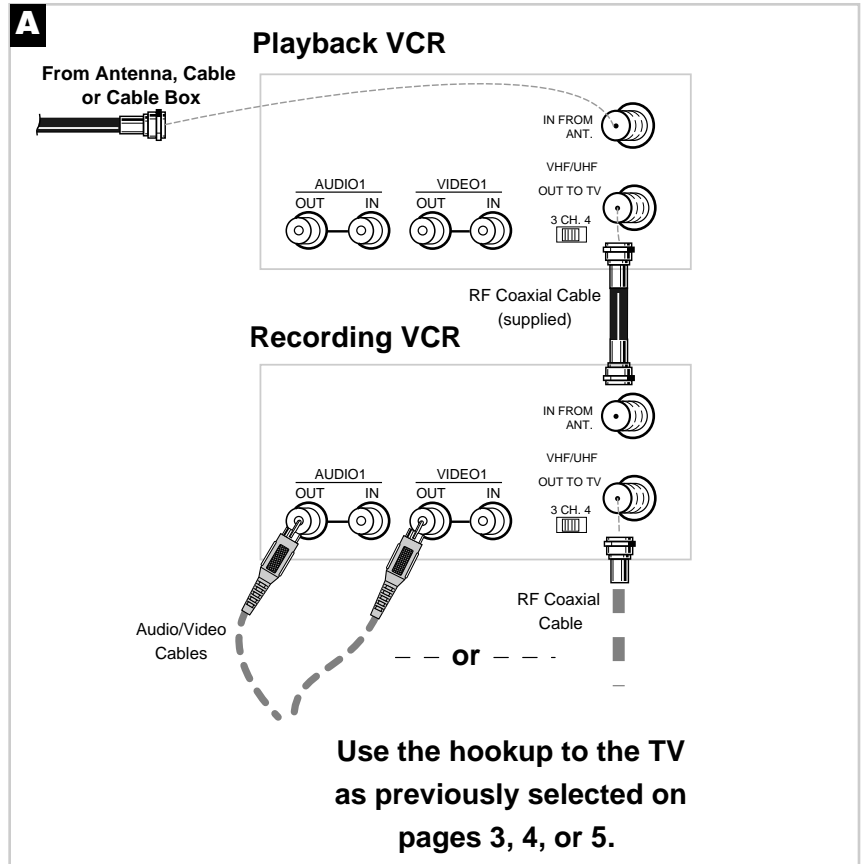


## Option B hookup.

Use this hookup for slightly improved copy quality and more convenient operation — use of the TV•VCR button is not required.

1. Select a hookup from pages 2 through 5 and then modify with this connection.
2. Connect as shown.  
This connection requires additional accessories not provided. A Y-adaptor may be required to hear sound from both channels if your other VCR is not stereo.
3. Plug in power cords of VCRs and TV.
4. **Continue to page 7.**

Select the line (audio/video) input on the recording VCR to receive the signal from the playback VCR.

 Caution: The unauthorized recording of television programs and other materials may infringe the rights of others.

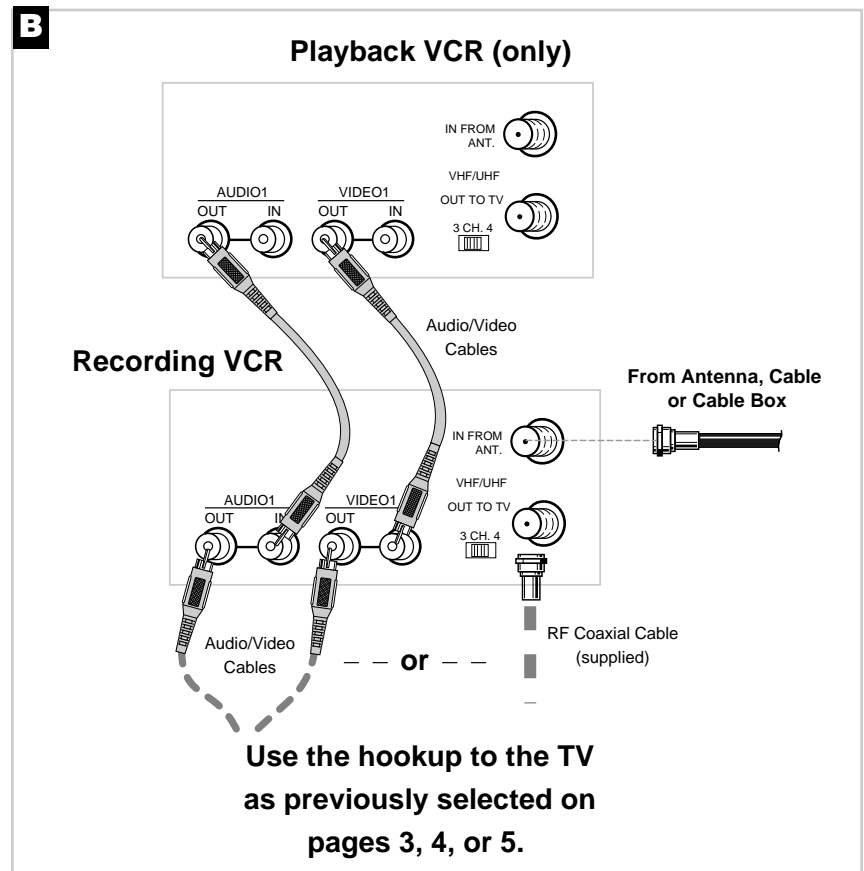





# Startup

## 1. Check accessories with VCR.

Contact your dealer if any items are missing.

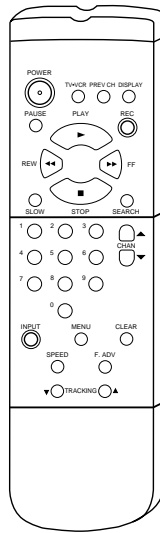

Remote  
(Stock No. 221347)


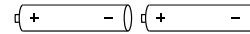


2 "AA" Batteries



RF Coaxial Cable  
(Stock No. 221383)

## 2. Insert batteries in remote.

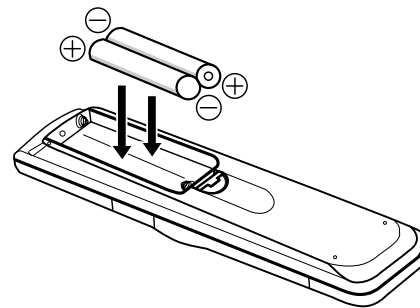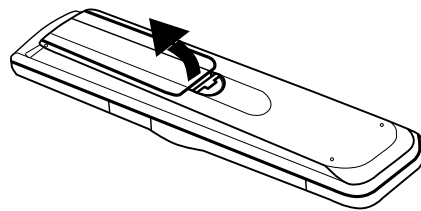

## 3. Turn on the TV.

If you used one of the basic hookups, tune the TV to the channel selected with the 3CH.4 switch on back of VCR.

If you used one of the advanced hookups, tune the TV to the TV's video input. (See TV owner's manual for details.)

## 4. Turn on the VCR.

Press POWER on the remote.

The POWER and VCR indicators light in the VCR's display panel. The TIMER indicator flashes until the time is set.

## Startup

### 5. Place channels in the VCR's memory.

The first time you turn on the VCR or after a power interruption, the VCR displays a message on the TV screen prompting you to perform the AUTO CHANNEL SEARCH. If the message does not appear, go to step A below. If the message appears, follow the directions on the screen.

Wait until the channel numbers stop changing. This takes about one to two minutes. The TV tunes to the lowest channel found. Pressing CHANNEL up or down selects only the active channels.

If you ever need to manually set up channels because you change cable or antenna signals:

- A. Press MENU to display the VCR MAIN MENU on the TV screen. If this menu does not appear:
  - Make sure the TV is tuned to same channel as the 3CH.4 switch on the VCR or the TV's video input (refer to TV's manual).
  - If you use a basic hookup, check the VCR indicator in display panel — it should be on. Press TV•VCR to turn it on.
  - Check the connections.
- B. Press 3 to display the CHANNELS menu.
- C. Press 1 to begin AUTO CHANNEL SEARCH.  
The VCR automatically selects the CABLE (cable TV) or ANTENNA signal


 

#### To change the SIGNAL TYPE:

- A. Follow steps A-B above.
- B. Press 3 to switch the SIGNAL TYPE between CABLE and ANTENNA.

### 6. Add or remove channels from the VCR's memory.

You may want to add or remove channels if some of the channels are not active, have weak signals, or you do not want to watch them.

- A. Press MENU on the remote to display the VCR MAIN MENU.
- B. Press 3 to display the CHANNELS menu.
- C. Press 2 to display the ADD/REMOVE CHANNEL display.
- D. Follow the directions on the screen.
- E. Add or remove more channels using the CHANNEL up and down buttons.

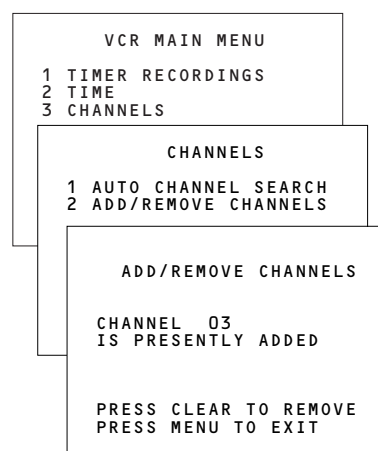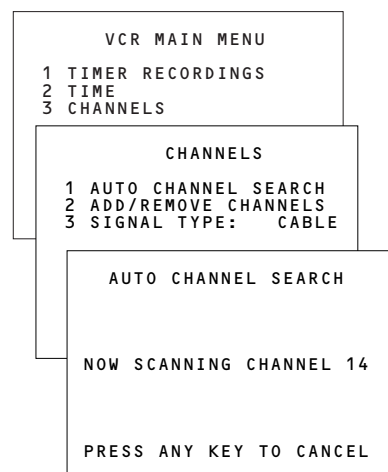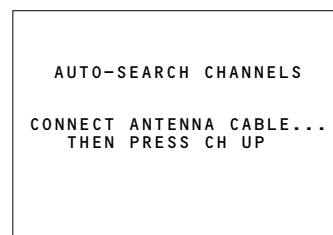


## Startup

### 7. Select the language/Seleccione el idioma/ Sélectionner la langue.

The VCR displays the on-screen menus in the English, Spanish or French language. The word "Language" cycles through the different languages when the VCR Main Menu is displayed on the TV screen.

- A. Press MENU on remote to display the VCR MAIN MENU.
- B. Press 5 to display the LANGUAGE or IDIOMA or LANGUE menu. (English: LANGUAGE; Spanish: IDIOMA; French: LANGUE).
  - Press 1 to have the menus displayed in English (Ingles).
  - Press 2 to have the menus displayed in Spanish (Español).
  - Press 3 to have the menus displayed in French (Français).

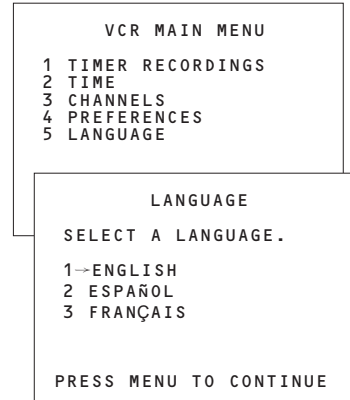

### 8. Use TV•VCR button.

**Skip this step if you used one of the advanced hookups.**

 
When using one of the basic hookups, the TV•VCR button lets you switch between the picture coming from the VCR or television channels. Also, this button lets you record a program on the VCR while watching another channel on the TV. *Details are on page 17.*

- A. Press TV•VCR to see the picture from the VCR.  
The VCR indicator lights in the display panel.
- B. Press CHANNEL up or down to change channels on the VCR.  
The channel number changes on the TV screen.
- C. Press TV•VCR to see the TV channels.  
The VCR indicator does not light in the display panel.  
Change channels using the TV's remote.
- D. Return the TV to the VCR viewing channel — CH3 or CH4.
- E. Press TV•VCR to switch back to the picture from the VCR.

### 9. Set the ALERT SOUND feature.

Select this feature if you want a warning to sound each time an invalid entry or invalid operation is made. This feature is set to OFF. Please note the warning sound is heard only when the VCR is on.

- A. Press MENU on the remote to display VCR MAIN MENU.
- B. Press 4 to display the PREFERENCES menu.
- C. Press 3 to select ALERT SOUND: ON or OFF.
  - Select ON if you want to hear a warning.
  - Select OFF if you *do not* want to hear a warning.

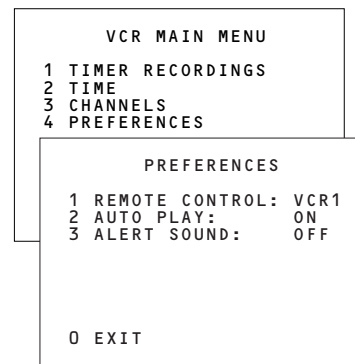


## Startup

### 10. Set the time and date.

The TIMER indicator on the VCR front panel flashes until the time is set.

 - A. Press MENU on remote to display the VCR MAIN MENU.
- B. Press 2 to display the TIME menu.
- C. Press 1 to display SET TIME AND DATE.
- D. Enter the time and date with the number buttons on the remote.
  - Press 0 before single-digit numbers.  
Example: press 0, then 5, then 0, then 7 for a time of 5:07. Press 1 for AM or 2 for PM.
  - Press CLEAR on the remote to change incorrect entries.
- E. Press MENU to start the clock.
- F. Press 0 twice to exit.  
The time and date appear on the screen when you press DISPLAY.

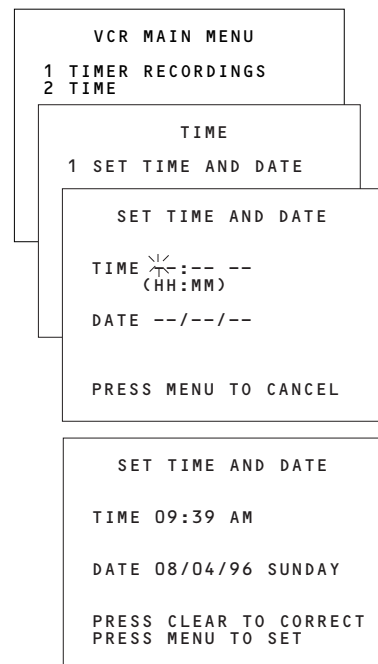

### 11. Set the Automatic Daylight-Saving Time

Select this feature if you want the VCR's clock automatically to advance one hour in April and reverse one hour in October.

 
- A. Press MENU on the remote to display the VCR MAIN MENU.
- B. Press 2 to display the TIME menu.
- C. Press 2 to select AUTO DST: ON or OFF.
  - Select ON if you want the VCR's clock to automatically adjust for Daylight Saving Time.
  - Select OFF if you *do not* want the VCR's clock to automatically adjust for Daylight Saving Time.

**In the Spring**, daylight-saving time begins on the first Sunday in April. Clocks are set forward one hour.


Because the clock automatically changes from 2:00 AM to 3:00 AM, keep in mind that any part of a scheduled Timer Recording that falls between these two times is not performed.

**In the autumn**, daylight-saving time begins on the last Sunday in October. Clocks are set back one hour.

The VCR clock automatically changes from 2:00 AM to 1:00 AM. Therefore, it can affect your recording length.

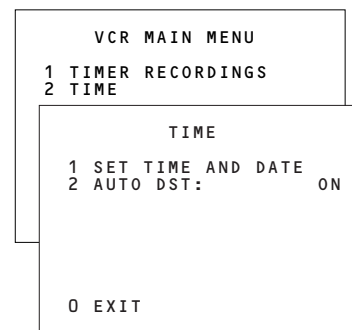

## VCR Function Buttons

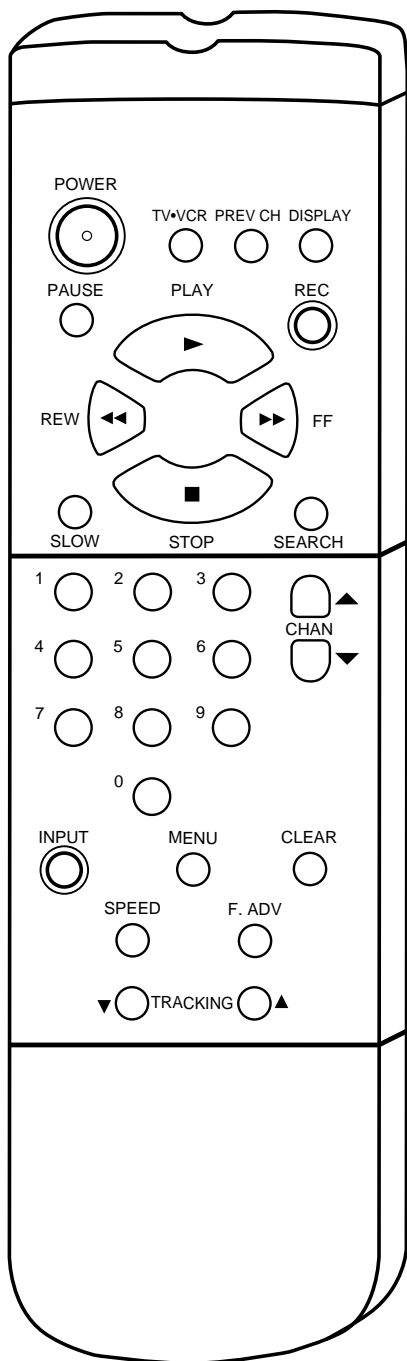

### CHAN (CHANNEL) Up or Down

Selects the next higher or lower channel in the VCR's channel memory.

### CLEAR

Resets the time counter to 0:00:00.

Lets you change entries when setting the time or VCR for a timer recording.

### DISPLAY

Shows the VCR operating displays on the TV screen.

Displays the time counter when a tape is inserted.

### FF (Fast Forward)

Fast forwards the tape when the VCR is stopped.

Searches the picture in forward motion during playback.

### F. ADV (Frame Advance)

Lets you view one frame with each press of the button when the tape is in pause mode.

### INPUT

Turns the line input on or off.

Line input refers to the signal coming from the component connected to the audio/video jacks on the back of the VCR.

### MENU

Displays the VCR MAIN MENU on the TV screen.

Removes a menu from the screen.

### Numbers (0 through 9)

Selects a channel up to 99—press two numbers.

Selects a cable channel over 99—press and hold 1 until 1-- appears on the screen. Then, press the other two numbers.

### PAUSE

Pauses action for viewing during playback.

Pauses recording to prevent recording of unwanted scenes.

### PLAY

Plays a tape.

### POWER

Turns the VCR on and off.

### PREV CH (Previous Channel)

Switches between two channels.

Select one channel, then select another. Press PREV CH to switch between the two channels.

### REC

Starts the VCR recording. *See page 17.*

Used for Express recording. *See page 18.*

### REW (Rewind)

Rewinds the tape when the VCR is stopped.

Searches the picture in reverse motion during playback.

### SEARCH

Displays the INDEX and ZERO search menus on TV.

Advances the tape 60 seconds during playback.

### SLOW

Plays a tape in slow-motion.

### SPEED (Tape Speed)

Selects a recording speed (SP, SLP).

### STOP

Stops the VCR's normal functions such as record, playback, rewind, fast forward, and pause.

### TRACKING Up or Down

Reduces the streaks that may appear on the picture during play or pause.

*For model VR508, reduces picture "jitter" during pause.*


### TV+VCR

Switches the picture signal so that it either comes from the VCR or the TV channel. *See page 9.*

# Playback

## To play a tape

1. Turn on the TV and tune it to channel 3, 4, or the TV's video input to see the picture from the VCR.
2. Insert a tape in the VCR.  
The VCR automatically turns on. The POWER and VCR indicators light. The tape automatically begins playback if the safety tab on the cassette has been removed and the AUTO PLAY feature is turned on.

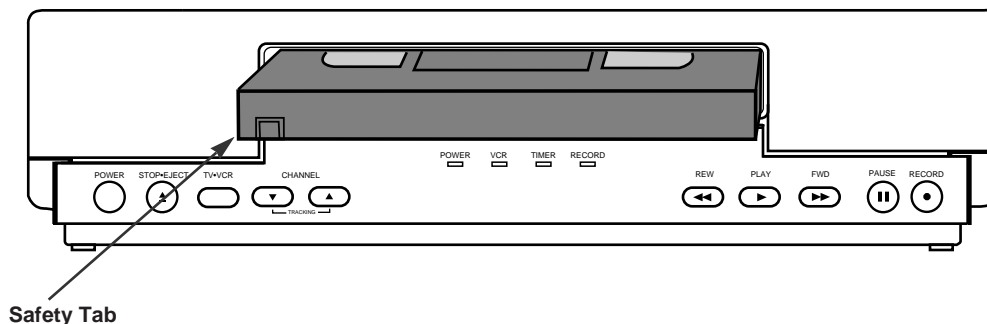

3. Press PLAY on the remote or the VCR, if necessary.
4. Press TRACKING up or down on the remote or the VCR to remove any streaks from the picture if necessary. *Details are on page 16.*
5. Press STOP•EJECT on the VCR or STOP on the remote.
6. Press REW on the VCR or the remote.

### End of Tape

The VCR automatically rewinds the tape if it reaches the end of the tape during playback.

### Power Off

If you press POWER while a tape is rewinding, the VCR turns off automatically when it is completely rewound. REWIND→POWER OFF is displayed on the TV screen.

 
7. Press STOP•EJECT on the VCR to eject the tape once it is completely rewound.

## Using the Playback Features

### AUTO PLAY Feature

This feature allows the VCR to automatically start playing when you insert a tape with the safety tab removed.

1. Press MENU on the remote to display the VCR MAIN MENU.
2. Press 4 to display the PREFERENCES menu.
3. Press 2 to select AUTO PLAY: ON or OFF.
  - Select ON if you want to have a tape with its safety tab removed to start playing automatically.
  - Select OFF if you *do not* want a tape with its safety tab removed to start playing automatically.

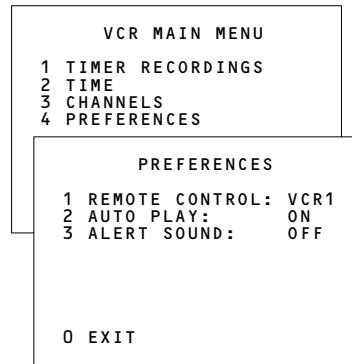

### Picture Search

You can search for a specific tape location during playback by fast forwarding or rewinding the tape. Sound is turned off during picture search. The time counter is removed from the TV screen during picture search. *For model VR337*, picture search works best for tapes recorded in the SLP speed. *For model VR508*, picture search works best for tapes recorded in the SP or SLP speed.

#### Fast Forward Search

1. Press FF to search forward at a faster-than-normal speed.
2. Press FF or PLAY to return to playback.

#### Rewind Search

1. Press REW to search backward at a faster-than-normal speed.
2. Press REW or PLAY to return to playback.

### Slow Motion

You can view a tape in slow motion during play or play pause. Sound is turned off during slow-motion playback. *For model VR337*, slow motion works best for tapes recorded in the SLP speed. *For model VR508*, slow motion works best for tapes recorded in the SP or SLP speed.

1. Press SLOW to begin slow-motion playback.
2. Use TRACKING up or down to remove any streaks from the picture.
3. Press PLAY to return to playback.

The VCR automatically switches from slow-motion playback to stop after a few minutes.

 
## Using the Playback Features

### DISPLAY Button

The DISPLAY button shows the status of the VCR channel number, time counter, date, time and tape speed on the TV screen. The time and date must be set before they can be displayed.

1. Press DISPLAY.  
If you do not press DISPLAY again, this display times out.
2. Press DISPLAY again to display only the time counter on the TV screen.
3. Press DISPLAY again to return to TV viewing.

Turning off the VCR automatically returns the displays to normal.

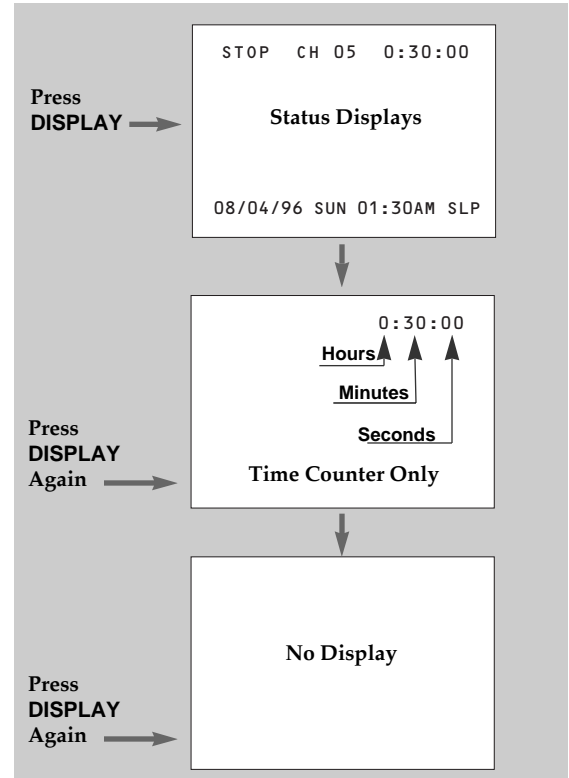


### Time Counter

The time counter shows the actual time it takes to record a program or play back a segment of a prerecorded tape. It helps locate the beginning or end of programs you taped. The time counter resets to 0:00:00 when the tape is ejected from the VCR.

For example, if you record a 30-minute program at the beginning of the tape and you want to go to the end of that program to begin another recording, you would:

1. Insert the prerecorded tape.
2. Press DISPLAY twice to display only the time counter on the TV screen.
3. Press FF to fast forward the tape until 0:30:00 appears in the time counter and press STOP.  
The time counter is removed from the TV screen during fast forward.  
The time counter does not advance when it detects no signal (blank tape).
4. Press CLEAR to reset the time counter to 0:00:00.
5. Press DISPLAY to remove the time counter from the screen.

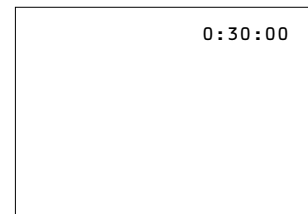





## Using the Playback Features

### Pause for Stop Action

This feature stops the tape in action and lets you examine the details of the scene. *For model VR337*, stop action works best for tapes recorded in the SLP speed. *For model VR508*, stop action works best for tapes recorded in the SP or SLP speed.

1. Press PAUSE during playback to stop the action.
2. *For model VR337*, if horizontal lines or noise bars appear in the picture, press SLOW on the remote and then press TRACKING up or down to move the lines out of the picture.

*For model VR508*, press TRACKING up or down on the remote to reduce any jittering of the picture.

3. Press PAUSE or PLAY to return to playback.  
The VCR automatically switches from stop-action playback to stop after a few minutes.

### Frame Advance (F. ADV Button)

Frame advance lets you view one stop-action frame after another. *For model VR337*, frame advance works best for tapes recorded in the SLP speed. *For model VR508*, frame advance works best for tapes recorded in the SP or SLP speed.

1. Press PAUSE during playback to stop the action.
2. Press F. ADV each time you want to view a frame of the scene.
3. Press PAUSE or PLAY to resume normal playback.


### Automatic Tracking

The VCR has automatic tracking which adjusts the picture when you are playing back a tape recorded on another VCR. Automatic tracking is turned on when a tape is inserted or the VCR's power is turned on.

### Manual Tracking

Occasionally, you may need to manually adjust tracking on a tape recorded on a different VCR or camcorder. Tracking is used when playing a tape, and it has no effect during recording.

- When streaks or snow appear in the picture, press TRACKING up or down on the remote or the VCR for the best possible picture.
- *For model VR508*, during pause, press TRACKING up or down on the remote to reduce any jittering of the picture.

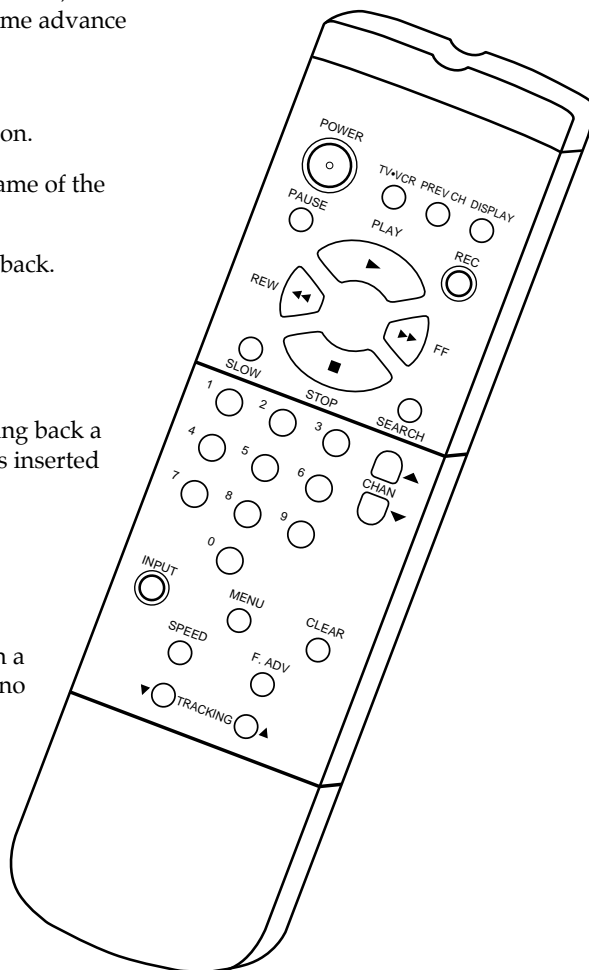

## Recordings

Your VCR provides different recording options. These options are explained in this section of the manual.

### Recording Speeds

Press **SPEED** on the remote to select a recording speed (SP or SLP). The speed you select appears on the TV screen. Tapes recorded in LP can be played in this VCR.

**SP (Standard Play)** gives the best quality recording. That is why most prerecorded, rental tapes are recorded in SP. Fewer programs can be recorded on the tape. Special effects such as pause, frame advance, slow motion, and picture search work well in this speed.

**SLP (Super Long Play)** gives three times the recording time of tapes recorded in SP. Special effects such as pause, frame advance, slow motion, and picture search work well in this speed.

Cassette	Recording Time	
	SP	SLP
T-120	2Hrs	6Hrs
T-160	2Hrs 40Min	8Hrs

## Normal Recording

### To Make a Recording

Turn on the TV and tune it to the VCR viewing channel, either 3, 4, or the TV's video input channel.

1. Insert a tape with its safety tab in place.
2. If you are using one of the basic hookups, make sure the VCR indicator lights in the VCR's display panel. If not, press **TV•VCR** to turn it on.
3. Use **SPEED** on the remote to select a recording speed.  
The tape speed indicator appears on the TV screen.
4. Select the channel to be recorded.  
The channel number appears on the TV screen.
5. Press **RECORD** on the VCR or **REC** on the remote to begin recording.  
The **RECORD** indicator lights in the VCR's display panel while the VCR is recording.


### Watch a TV Channel While VCR is Recording a Different Channel

For some cable box hookups, this recording feature may not apply. Contact your local cable company for assistance.

1. Follow steps 1 through 5 above.
2. If you are using one of the basic hookups, press **TV•VCR** to switch to the TV channel.  
The VCR indicator turns off in the display panel.
3. Select the channel you want to watch with the TV's channel buttons.
4. Press **STOP•EJECT** on the VCR or **STOP** on the remote when the recording is finished.

## Express Recording

Express recording lets you record up to four hours without using the timer program feature. The VCR turns off automatically at the end of the recording.

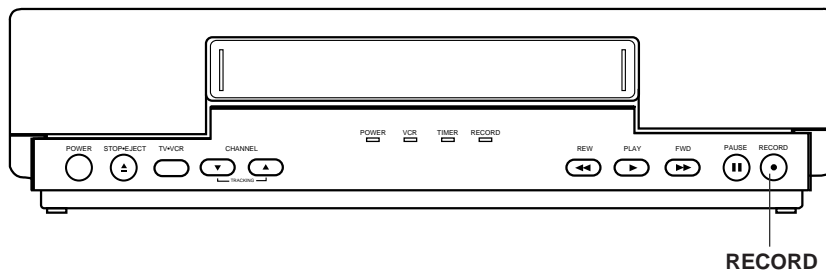

1. Turn on the VCR.
  2. Insert a tape with its safety tab in place.
  3. Select the channel you want to record.
  4. Use SPEED on the remote to select a recording speed.
  5. Press REC on the remote or RECORD on the VCR to activate recording.
  6. Press RECORD or REC repeatedly until the amount of recording time for the program is displayed on the TV screen.
- Each press of RECORD or REC increases the time — 30 minutes up to 4 hours.

	Press <b>RECORD</b>	Recording Time
<p>REC CH 06 RECORD LENGTH 0:00</p>  <p>PRESS REC TO SET LENGTH</p>	0:30	(30 Min)
	1:00	(1 Hr)
	1:30	(1 Hr, 30 Min)
	2:00	(2 Hrs)
	3:00	(3 Hrs)
	4:00	(4 Hrs)
Normal Record		

The RECORD and TIMER indicators light in the VCR's display panel.

During recording, press RECORD on the VCR or REC on the remote to display the time remaining on the TV screen. Press RECORD or REC again to increase the recording time.

## Stopping an Express Recording in Progress

You can stop a recording by:

- Pressing and holding the STOP button on the remote or STOP•EJECT on the VCR for approximately three seconds.
- Pressing the RECORD button until 0:00 is displayed for the recording.

 
## Recording While You're Away (Timer Recording)

The timer program feature lets you program the VCR to record up to eight different programs within a one year period. Before setting the timer, make sure that:

- The clock is set correctly.
- A tape with a safety tab has been inserted with enough tape to record the programs.

### Setting a Timer Recording

1. Press MENU on the remote to display the VCR MAIN MENU.
2. Press 1 to display the TIMER RECORDINGS menu.
3. Press 1 to display the CREATE A NEW PROGRAM menu.
4. Press 1, 2, 3, or 4 to select type of program.
  - 1 ONE TIME — single program recorded once.
  - 2 DAILY — program recorded at same time every day.
  - 3 WEEKDAYS — program recorded at same time Monday through Friday.
  - 4 WEEKLY — program recorded at same time once a week.
5. Press number buttons on the remote to enter the channel number (or INPUT on the remote to select line input), start time including AM or PM, end time, start date, and recording speed of the recording. Follow the on-screen prompts. Press CLEAR on the remote to correct an entry.
6. Press MENU to enter your program. If you have entered two programs whose times overlap, PROGRAMS OVERLAP appears on the screen.
7. Repeat steps 3–6 for additional programs and follow the directions on the screen.
8. If you are using a cable box, leave it turned on and tuned to the channel you want to record. Otherwise, **turn off the VCR** before recording begins.

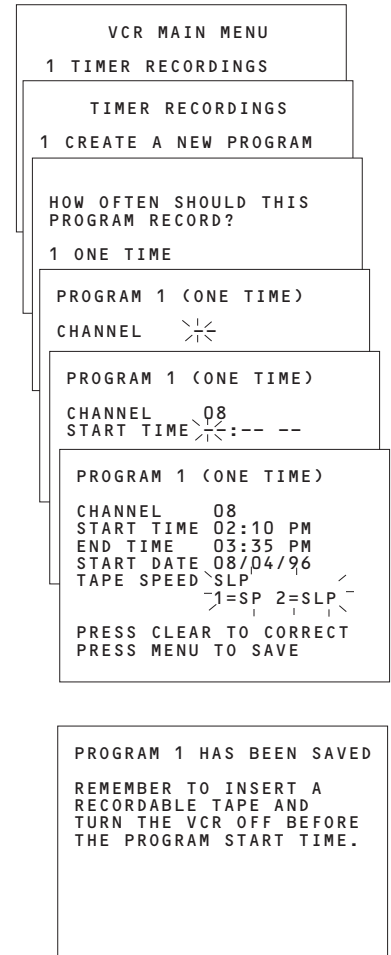

### Stopping a Timer Recording


You can stop a recording by pressing and holding the STOP button on the remote or STOP•EJECT on the VCR for approximately three seconds.

# Recording While You're Away (Timer Recording)

## Timer Recording From the VCR's Line Input


The line input refers to the signal coming from the AUDIO1 and VIDEO1 IN jacks of the VCR. Recording from the line input is convenient if you have a satellite receiver or similar component attached to these jacks.

To timer record from the component connected to the VCR's line input, press INPUT or "0,0" on the remote to enter VIDEO in the channel number position.

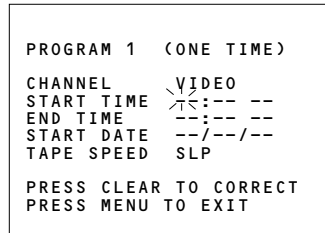

## Checking or Clearing Timer Recordings

 1. Press MENU on the remote to display the VCR MAIN MENU.
2. Press 1 to display the TIMER RECORDINGS menu.
3. Press 2 to display the program's menu.
4. Press MENU for next program or CLEAR to erase the program.

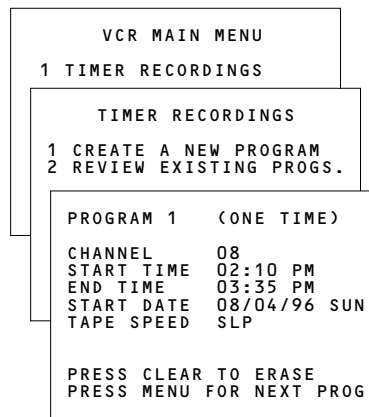

# Using the Recording Features

## Recording Pause

To prevent recording short passages of unwanted material, use PAUSE during recording to stop and start recording. The VCR automatically switches from pause to stop after a few minutes.

## Pro-Tect Plus™ (Child Lock) Feature

This feature is useful to tamper proof your timer recordings from unwanted changes and/or protect the VCR from misoperation by other users in the household. It also prohibits all operations of the VCR once the feature is turned on.

### To Lock the VCR

Press and hold POWER on the remote for approximately six seconds to turn on the Pro-Tect Plus™ feature.

The TIMER and RECORD indicators on the front panel flash to let you know the feature is activated. After the feature is turned on, momentarily pressing POWER also causes the indicators to flash.

### To Unlock the VCR

Press and hold POWER on the remote for approximately six seconds to unlock the VCR. The VCR turns on.

## Using Two VCRs for Copying and Editing Tapes

### Operating Instructions (Refer to hookup on page 6.)

Use one VCR as the playback VCR and the other as the recording VCR.

**Caution:** The unauthorized recording of television programs and other materials may infringe the rights of others.

1. Turn on the TV and VCRs.
2. Tune the TV to the VCR viewing channel, either 3, 4, or the TV's video input.
3. If you connected your VCR using Option A (page 6), tune the recording VCR to channel 3 or 4 – the one selected on the back of the playback VCR.  
If you connected your VCR using Option B (page 6), press INPUT (or channel 00) on the recording VCR's remote to select the line input.
4. Insert the tape you want to copy into the playback VCR. Insert a blank tape with its safety tab in place into the recording VCR.
5. Press PLAY, then PAUSE on the playback VCR when you reach the point on the tape or program where you want to begin copying. If the tape was not recorded on the playback VCR, streaks may appear and you may need to adjust tracking.
6. Press RECORD on the VCR or REC on the remote, then PAUSE on the recording VCR.
7. Press PAUSE on both VCRs at the same time to begin copying the tape.\*
8. Edit out segments that you do not want to copy by pressing PAUSE on the recording VCR to stop copying the tape. Then, locate the next segment you want to copy on the playback VCR by using FWD, REW, and PLAY. Press PAUSE on the playback VCR. Press PAUSE at the same time on both VCRs to resume copying.
9. Press STOP•EJECT on both VCRs when you are finished.

 
\*You may turn off the TV after the recording has started as it does not have to be on to copy a tape.

### Copying and Editing Tapes Using Compatible Remote

If you have a compatible RCA, ProScan or GE remote with VCR1 and VCR2 buttons, you can program this VCR to respond to either VCR1 or VCR2. This lets you control both VCRs with one remote for easier copying and editing.


Set the REMOTE CONTROL feature of this VCR to VCR1 or VCR2 position. Then, the compatible remote controls the VCR with either the VCR1 or VCR2 button — depending on the position you select in the menu.

1. Press MENU to display the VCR MAIN MENU.
2. Press 4 to display PREFERENCES.
3. Press 1 to activate the REMOTE CONTROL: VCR1 or VCR2 feature.
4. Press VCR1 or VCR2 on your compatible VCR's remote to change the setting and program this VCR to respond to VCR1 or VCR2 — depending on the position you selected in step 3.

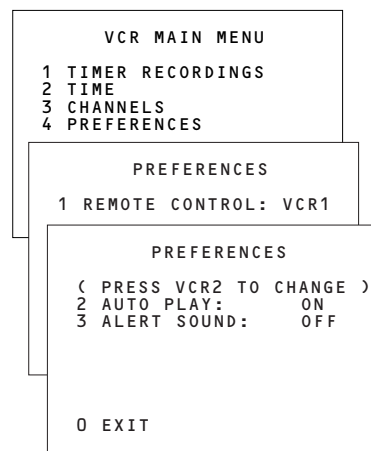

# Location of Controls

## Front Panel

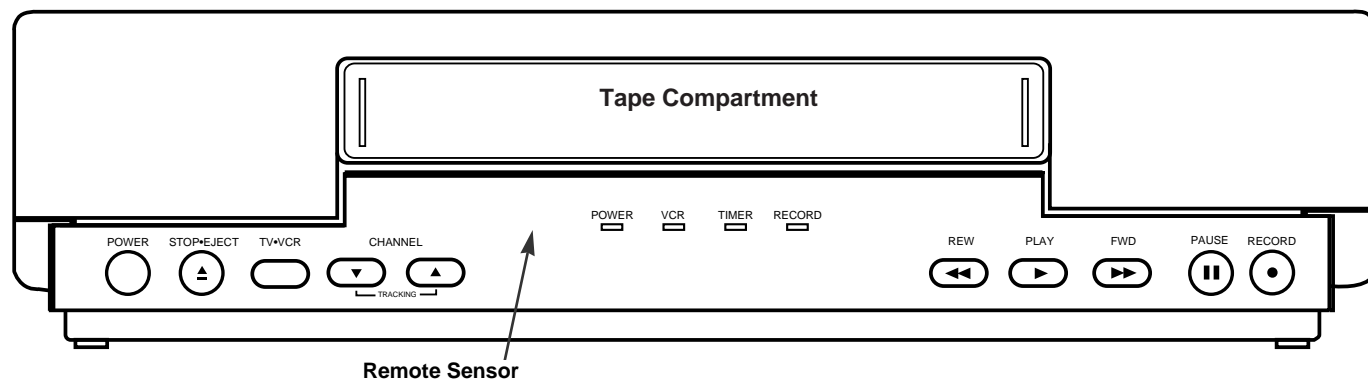

### CHANNEL or TRACKING up or down

Selects next higher or lower channel in the VCR's channel memory.

Adjusts tracking during playback.

### FWD (Fast Forward)

Fast forwards the tape when the VCR is stopped.

Searches the picture forward during playback.

### PAUSE

Pauses the tape for stop-action viewing during playback.

Pauses the tape during recording to prevent recording unwanted material.

### PLAY

Plays a tape.

### POWER

Turns the VCR on or off.

### RECORD

Start the VCR recording.

Used for express recording.

### Remote Sensor

Receives signals from the remote control. Aim the remote at this sensor with no objects between them.

### REW

Rewinds the tape when the VCR is stopped.

Searches the picture in reverse during playback.

### STOP•EJECT

Stops the normal functions such as record, playback, rewind, fast-forward, or pause.

Press when the VCR is stopped to eject the cassette.

### TV•VCR


Switches the picture signal so that it either comes from the VCR or the TV channel.

See page 9.



# Location of Controls

## Back Panel

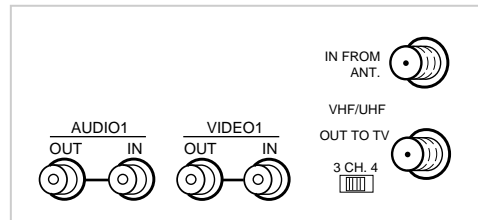

### 3CH.4 Switch

Selects the channel to which you tune the TV to see the VCR picture if you connect the VCR using one of the basic hookups.

### IN FROM ANT. (Antenna) Connector

Receives a signal from an antenna or cable system when attached.

### OUT TO TV Connector

Passes signal to TV using the cable supplied.


### VIDEO1 IN and AUDIO1 IN Jacks

Receive signals from another component like a VCR or camcorder when it is connected to these jacks. Use INPUT (or channel 00) on the remote to select.

### VIDEO1 OUT and AUDIO1 OUT Jacks

Send signals from VCR to another component like a VCR or camcorder when it is connected to these jacks.

## Display Panel

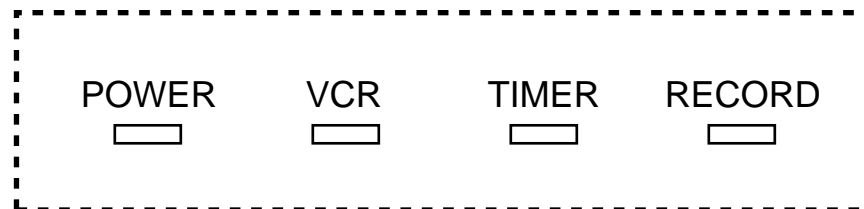

### POWER Indicator

Lights when the VCR is turned on.

### RECORD Indicator

Lights when the VCR is recording.

### TIMER Indicator

Shows VCR is set for timer recording when VCR is turned off.

Flashes when the clock is not set.

Flashes when a timer recording is set and there is no cassette in the VCR.

### VCR Indicator

Lights when using the TV•VCR button.

When using one of the basic hookups:

- The picture is coming from the VCR when the VCR indicator is on.
- The picture is coming from the television channels when the VCR indicator is off.

## Specifications

<b>Format:</b>	VHS
<b>Record/Playback System:</b>	Video: 2-Head (VR337) Video: 4-Head (VR508) Audio: Mono record/playback system
<b>Video Signal System:</b>	EIA standard: NTSC color
<b>Antenna:</b>	75-ohm external VHF/UHF combined antenna terminal
<b>Tuner:</b>	USA: 181 channels capability* (125 cable channels) Canada: 178 channels capability* (122 cable channels)
<b>Type:</b>	AutoProgramming frequency synthesis
<b>Power Requirement:</b>	120V AC, 60 Hz
<b>Power Consumption:</b>	18 watts
<b>Dimensions:</b>	3.5 inches high (89 mm) 15 inches wide (380 mm) 11.2 inches deep (285 mm)
<b>Weight:</b>	8.4 pounds (3.8 kg)
<b>Storage Temperature Range:</b>	- 22°F to +149°F
<b>Operating Temperature Range:</b>	+41°F to +104°F

\*Check your cable company's compatibility requirements.

## Cleaning the VCR

Use a soft cloth or dusting attachment of your vacuum cleaner to dust your VCR. Remove dust from the ventilation holes on the top, back, sides, and bottom of the cabinet.

Plastic surfaces are easily scratched and can be marred by alcohol and various solvents. Avoid excessive use of oil-based furniture polishes since the materials used in the cabinet will accumulate more dust. We recommend using a non-abrasive, anti-static cleaner and polisher.

## Limited Warranty

### What your warranty covers:

- Any defect in material or workmanship.

### For how long after your purchase:

- Ninety days for labor charges.
- One year for parts.

The warranty period for rental units begins with the first rental.

### What we will do:

- Pay any Authorized RCA VCR Servicenter the labor charges to repair your VCR.
- Pay any Authorized RCA VCR Servicenter for the new or, at our option, refurbished replacement parts required to repair your VCR.

### How you get service:

- Take your VCR to any Authorized RCA VCR Servicenter. To identify your nearest Authorized RCA VCR Servicenter, ask your dealer, look in the Yellow Pages, or call 1-800-336-1900.
- Show the service technician your evidence of purchase date.
- Pick up your VCR when repairs are completed.

### What your warranty does not cover:

- Customer instruction. (Your Owner's Manual clearly describes how to install, adjust, and operate your VCR. Any additional information should be obtained from your Dealer.)
- Installation and related adjustments.
- Signal reception problems not caused by your VCR.
- Damage from misuse or neglect.
- Cleaning of video/audio heads.
- Remote control batteries.
- A VCR that has been modified or incorporated into other products or is used for institutional or other commercial purposes.
- A VCR purchased or serviced outside the USA.
- Acts of God, such as but not limited to lightning damage.

### Product Registration:

- Please complete and mail the Product Registration Card packed with your VCR. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

### How state law relates to this warranty:

- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

### If you purchased your VCR outside the United States:

- This warranty does not apply. Contact your dealer for warranty information.

## Trouble Checks

Sometimes problems can be easily solved by checking a few basic things. Check below before you call for help or take your VCR to an Authorized RCA VCR Servicer.

Trouble	Here's what to try:
No power	<ul style="list-style-type: none"> <li>• Plug VCR into an operating outlet.</li> <li>• Check connections.</li> </ul>
VCR does not respond to remote	<ul style="list-style-type: none"> <li>• Remove batteries and hold down one or more buttons for several seconds to drain the microprocessor inside the remote and reset it. Re-install the batteries and try remote again.</li> <li>• Aim remote at VCR with no objects between them.</li> <li>• Change batteries.</li> <li>• Check setting of REMOTE CONTROL: VCR1 (VCR2) feature. <i>See page 22.</i></li> <li>• Check the Pro-Tect Plus™ feature.</li> </ul>
Poor or no picture for normal TV viewing	<ul style="list-style-type: none"> <li>• Press TV•VCR to turn VCR indicator off.</li> <li>• Switch TV to an active channel.</li> <li>• Check antenna connections.</li> </ul>
Snowy or no picture during playback	<ul style="list-style-type: none"> <li>• Press TV•VCR to turn VCR indicator on.</li> <li>• Check TV channel selected (3 or 4) to make sure it matches the channel selected with 3CH.4 switch on back of VCR.</li> <li>• Check TV's fine tuning.</li> <li>• Check video cable connections between VCR and TV monitor.</li> <li>• Set TV monitor to video input channel.</li> <li>• Try another tape.</li> <li>• Some snow / streaks are normal during search, stop action, frame advance, and slow-motion playback.</li> </ul>
Streaks in picture during normal playback	<ul style="list-style-type: none"> <li>• Press the TRACKING button on the remote or the VCR to move streaks for the best picture.</li> <li>• Check tape — it may be worn out or of poor quality.</li> </ul>
Time counter not working or time counter does not change during zero search feature	<ul style="list-style-type: none"> <li>• The time counter does not advance during unrecorded portions of tape. When an unrecorded segment of tape is encountered, the time counter will hold its count until recorded material is detected again.</li> <li>• A minus (-) appears in front of the time if you rewind the tape farther back than a counter reading of 0:00:00.</li> <li>• Time counter only appears when a tape is in the VCR.</li> </ul>
Will not record or play	<ul style="list-style-type: none"> <li>• No cassette in VCR.</li> <li>• Eject and reinsert cassette.</li> <li>• Broken tape — try another cassette.</li> <li>• VCR is in pause mode. Press PAUSE during recording or playback.</li> <li>• Check the Pro-Tect Plus™ feature.</li> </ul>
Will not record	<ul style="list-style-type: none"> <li>• Safety tab removed from cassette.</li> <li>• Make sure the line indicator (VIDEO) does not appear on the TV screen for normal recording from the VCR's tuner. Press INPUT on the remote to turn the line input off.</li> <li>• Check the Pro-Tect Plus™ feature.</li> </ul>
Rewind does not operate	<ul style="list-style-type: none"> <li>• Tape already rewound.</li> </ul>

## Trouble Checks

Trouble	Here's what to try:
Timer recording not made or wrong program recorded	<ul style="list-style-type: none"> <li>• Cable box was not turned on at time recording was to begin.</li> <li>• Program entered incorrectly (wrong channel or times).</li> <li>• Power interruption. Reset clock. <i>See page 10.</i></li> <li>• Check to see if time and date are correct — including AM/PM.</li> <li>• Program exceeded tape's length or tape was not rewound beforehand.</li> <li>• VCR was not turned off at the time recording was to start.</li> <li>• No tape in VCR or cassette's safety tab broken off.</li> </ul>
Incorrect time or date	<ul style="list-style-type: none"> <li>• Clock was not set accurately (check AM/PM and date). <i>See page 10.</i></li> </ul>
Time did not adjust for daylight savings	<ul style="list-style-type: none"> <li>• Check if AUTO DST is turned on.</li> </ul>
VCR makes noise when stopped	<ul style="list-style-type: none"> <li>• VCR is removing tape from heads. This is normal. The head cylinder inside the VCR continues to rotate for a few minutes after you put the VCR in the stop mode.</li> </ul>
Will not Auto Channel Search correctly	<ul style="list-style-type: none"> <li>• Check antenna connections.</li> <li>• Check SIGNAL TYPE: CABLE/ANTENNA feature. <i>See page 8.</i></li> </ul>
Cannot select channels over 69	<ul style="list-style-type: none"> <li>• Cable channels over 69 can only be selected if SIGNAL TYPE: CABLE/ANTENNA feature is set to CABLE. <i>Details are on page 8.</i></li> </ul>
Cassette with safety tab removed does not start to play automatically	<ul style="list-style-type: none"> <li>• Set AUTO PLAY ON/OFF feature to ON. <i>Details are on page 14.</i></li> </ul>
Tape plays back in slow motion	<ul style="list-style-type: none"> <li>• Press PLAY to return to normal playback.</li> </ul>
TIMER indicator flashes	<ul style="list-style-type: none"> <li>• Clock was not set. <i>See page 10.</i></li> <li>• Timer recording programmed and no cassette in VCR.</li> </ul>
On-screen menus are in English, French, or Spanish.	<ul style="list-style-type: none"> <li>• Check LANGUAGE feature. <i>See page 9.</i></li> </ul>
Time counter disappears while searching	<ul style="list-style-type: none"> <li>• This is normal. <i>Details are on page 15.</i></li> </ul>

## Index

- 3CH.4 Switch.....3-7,9,23
- Accessories, Included .....7
- Add or Remove Channels from Memory .....8
- ADD/REMOVE CHANNEL Menu .....8
- ALERT SOUND Feature.....11
- Antenna Connections .....2,3
- AUDIO1/VIDEO1 IN Jacks.....6,20,23
- AUDIO1/VIDEO1 OUT Jacks.....3-6,23
- AUTO CHANNEL SEARCH Feature .....8
- AUTO DST Feature .....10
- AUTO PLAY Feature.....13
- Back Panel .....23
- Batteries, Inserting in Remote .....7
- Cable System With Cable Box Connections .....2,4,5
- Cable System Without Cable Box Connections .....2,3
- Card, Registration .....i
- CHAN Buttons.....8,11,22
- Channel 00.....20,21
- CHANNELS Menu .....8
- Checking Timer Recordings .....20
- Checks, Trouble.....26,27
- Child Lock Feature.....20
- Choosing a Hookup.....2
- Cleaning the VCR.....24
- CLEAR Button .....10,11,14,15,19,20
- Clearing Timer Programs.....20
- Commercial Scan.....15
- Compatible Remotes.....21
- Connections .....2-6
  - Antenna .....2,3
  - Audio/Video Jacks.....2,3-6
  - Cable-TV .....2,3-5
  - Two VCRs .....6
- Contents.....1
- Copying Tape, Connections .....6
- Copying Tapes.....21
- Daylight-Saving Time.....10
- Date and Time, Setting .....10
- Design Specifications.....24
- DISPLAY Button.....11,14,15
- Display Panel .....23
- Editing Tapes .....21
- English Language.....9
- F. ADV (Frame Advance) Button.....11,16
- F F (Fast Forward) Button.....11,13-15,21
- FWD (Fast Forward) Button.....13-15,21,22
- Frame Advance Feature .....16
- French Language.....9
- Front Panel .....22
- Hookups
  - Antenna.....2-3
  - Audio/Video Jacks.....2,3-6
  - Cable-TV .....2,3-5
  - Two VCRs .....6
- Hookup, Choosing.....2
- Idioma.....9
- INDEX Feature.....15
- INDEX SEARCH Menu .....15
- IN FROM ANT. Connector.....3-6,23
- INPUT Button.....11,21,23
- LANGUAGE/IDIOMA/LANGUE Menu .....9
- Language, Selecting .....9
- Langue .....9
- Limited Warranty.....25
- Line Input, Recording From .....20
- Location of Controls
  - Remote Control .....11
  - VCR Back Panel.....23
  - VCR Display Panel.....23
  - VCR Front Panel.....22
- LP Speed .....17
- MENU Button .....8-11,14,19-21
- Normal Recording.....17
- Number Buttons .....11
- Operating Instructions
  - Copying Tapes.....21
  - Express Recording .....18
  - Normal Recording .....17
  - Playing a Tape .....12
  - Timer Recording.....19,20
- OUT TO TV Connector.....3-6,23
- PAUSE Button.....11, 16,20-22
- Pause for Stop Action .....16
- Pause, Recording.....20
- Picture Search .....13
- PLAY Button.....11-13,15,16,21,22
- Playing a Tape .....12-16
- POWER Button .....7,11,12,19,20,22
- Power Indicator .....7,12,23
- PREV CH (Previous Channel) Button.....11
- Problems, Solving .....26,27
- Product Registration.....i
- Pro-Tect Plus™ Feature.....20
- REC Button.....11,17-21
- REC Indicator .....17,18,23
- RECORD Button.....17-21,22
- Recording
  - From Another VCR.....21
  - One Program While
    - Watching Another .....17
  - Express .....18
  - Normal.....17
  - Pause .....20
  - Speeds .....17
  - Timer .....19,20
- Registration Card .....i
- REMOTE CONTROL Feature .....21
- Remote Control.....11
- Remote Sensor .....22
- Remove or Add Channels from Memory .....8
- REMOVE/ADD CHANNEL Menu .....8
- Review Programs Feature.....20
- REW Button .....11,13,15,21,22
- Safety Precautions.....i
- SEARCH Button .....11,13,15
- Searching, Picture.....13
- Seleccione el Idioma.....9
- Sélectionner la langue.....9

# Index

Sensor, Remote .....	22
Setting a Timer Recording .....	19
Setting Up the VCR .....	7-10
PREFERENCES Menu .....	9,10,13,21
SLOW Button.....	11,13,16
Slow Motion.....	13
SLP Speed.....	17
Solving Problems .....	26,27
SP Speed .....	17
Spanish.....	9
Specifications .....	24
SPEED Button.....	11,17-19,21
Speeds, Recording.....	17
Startup .....	7-10
Stop Action Pause .....	16
STOP Button.....	11,12,15,17,18,19,21
STOP•EJECT Button .....	12,17-19,21,22
Stopping Recording Program.....	17
Stopping Timer Programs.....	19
Table of Contents .....	1
Time and Date, Setting .....	10
Time Counter .....	14,15
TIME Menu.....	10
TIMER Indicator.....	7,18,19,23
Timer Recording	
Checking and Clearing.....	20
Front VCR Line Input.....	20
Setting .....	19
Stopping .....	19
Tracking, Automatic and Manual.....	14
TRACKING Button.....	11-13,16,22
Trouble Checks .....	26,27
SIGNAL TYPE Feature .....	8
Turn On VCR .....	7
TV•VCR Button .....	3-6,8,9,11,17,22
VCR Controls .....	22
VCR Indicator.....	7-9,12,17,23
VCR MAIN MENU.....	8-10,13,19-21
VCR, Cleaning .....	24
VCR, Turn On.....	7
VCR1/VCR2 Feature.....	21
VCRs Memory, Placing Channels.....	8
VCRs, Connecting for Tape Copying.....	6
VIDEO1 IN Jacks.....	6,21,23
VIDEO1 OUT Jacks.....	3-6,21,23
Warranty, Limited.....	25
Zero Search.....	15

For your nearest Home  
Entertainment Dealer  
or Authorized Servicenter  
call toll-free in the U.S.A.

1-800-336-1900

Canadian Consumers –  
Your toll free numbers are:

English: 1-800-522-0338

French: 1-800-522-0445

If you would like a copy of this manual in French, please follow the  
instructions below:

Si un livret d'instructions en français n'est pas inclus avec votre appareil, vous  
pouvez en obtenir un (indiquer le numéro de modèle, votre nom, et votre  
adresse) en vous adressant à:

Thomson Consumer Electronics  
Attention: Canadian Operations  
P.O. Box 0944  
Indianapolis, IN 46206-0944

Please do not send any products to the Indianapolis  
address listed in this manual or on the carton. This will  
only add delays in service for your product.

 **THOMSON CONSUMER ELECTRONICS**  
**10330 North Meridian Street**  
**Indianapolis, IN 46290-1024**

©1996 Thomson Consumer Electronics, Inc.  
Trademark(s)<sup>®</sup> Registered  
Marca(s) Registrada(s)  
Printed in Japan  
**Part Number 96-VR337/VR508-1**