



# FAN-LIGHT CONTROL INSTALLATION INSTRUCTIONS — MODEL 22787 FOR THREE FAN SPEED AND SIX LIGHT LEVEL CONTROL RF REMOTE CONTROL

## READ AND SAVE THESE INSTRUCTIONS

**CAUTION:** This device complies with part 13 of the FCC rules. Changes or modifications not expressly approved by Hunter Fan Company could void your authority to operate this equipment.

Operation Is Subject To The Following Two Conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

### BEFORE INSTALLING HUNTER FAN/LIGHT REMOTE CONTROL —

1. Be sure the fan pull chain switch is on "HIGH" position. Never use this pull chain switch to control speed of fan after installation of Hunter fan/light remote control. The speed of the fan can be controlled from the hand held remote control transmitter.
2. After setting the pull chain switch to the "HIGH" position, disconnect power at main panel to avoid possibility of electric shock.
3. All wiring must be in accordance with national and local electrical codes. If you are unfamiliar with the wiring codes, you should use a qualified electrician.
4. Use with a fan that incorporates an air gap switch (normal "ON-OFF" wall switch).

### WARNING!

Maximum fan load is 120 watts; maximum lamp is 240 watts. Do not use any speed control with this product. Do not switch fan by the pull chain switch.

## INSTALLATION

1. Install the fan up to the point of making the electrical connections according to the instructions supplied with the fan. (Reference Fan Installation instructions No. 40955, Step 6.) Connect the control as shown in Figure 2. Finish hanging the fan according to the fan instructions.

2. If the fan is already installed, loosen the two screws at the top of the canopy that are inserted into the slotted holes, and remove the screw that is in the round hole. Twist and lower the canopy to gain access to the inside. Hang the canopy from the ceiling plate by engaging one of the slotted holes onto the hook. See Figure 2 for views of the canopy and ceiling plate.

3. **IMPORTANT!** Before installing this control make sure the position of the dip switches of the transmitter and receiver are matched. If they are not matched, the control will not function. Select different combinations of dip switches for each fan installation in the house to prevent interference of one control with another. Figure 1.

**IMPORTANT!** When you change dip switches, make sure the battery is not connected in the transmitter.

4. Place the yoke-shaped electronic receiver inside the canopy. Align the control such that slot of the control is the line with the hook of the ceiling plate and connect the wires as shown in Figure 2. Tuck the wire connectors into the wiring box, pull antenna from one of the openings in the ceiling plate as shown. Position the canopy, then fasten in place.

5. Change the wall switch to "ON" position and install wall remote control bracket to hold remote control. See Figure 3. Now turn the main power on. Fan/Light will flash once.

6. Install 9V battery in the transmitter.

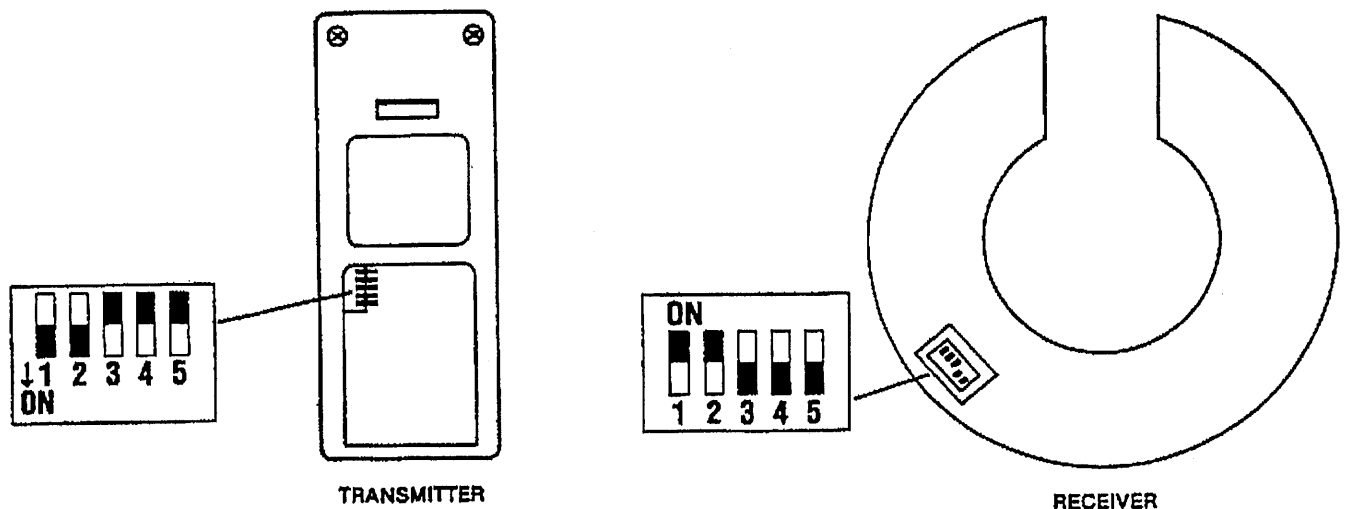


FIGURE 1

## ELECTRONIC RECEIVER

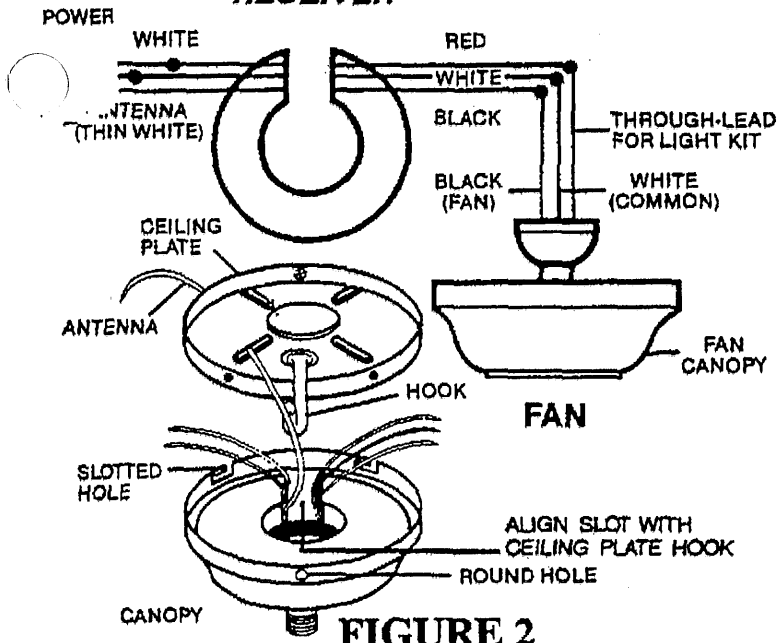


FIGURE 2

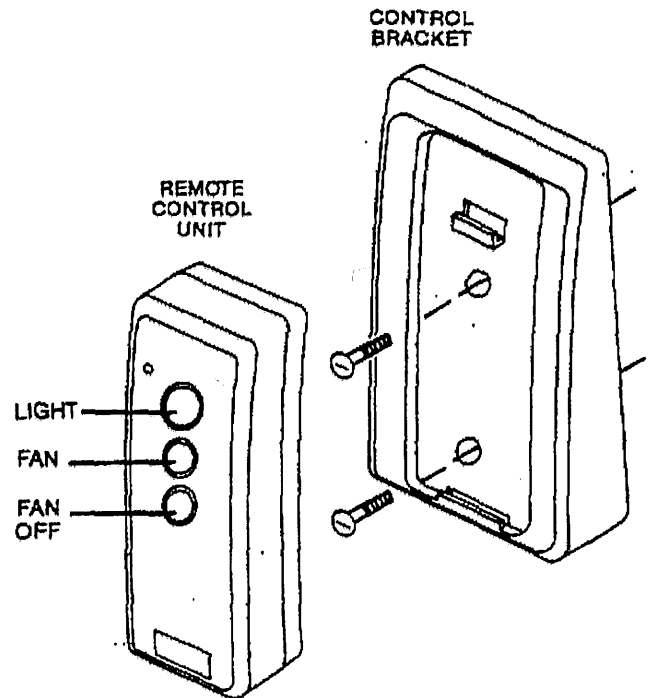


FIGURE 3

## OPERATION:

### IMPORTANT!

Do not pull fan speed pull chain switch while the fan is "ON" with Hunter fan/light remote control installed. "BEEP" will sound when the command from the transmitter is received by the receiver.

### LIGHT

- Press "LIGHT" button once — light will come on.
- Press once again — light will turn off.
- Press and hold — Light will dim in six steps. Release when desired level is reached.
- When turned off and turned on again, the light level will be same as your last setting.

### FAN

- Press "FAN" button once — fan will run on high speed.
- Press again — fan will run on medium speed.
- Press a third time — fan will run on low speed.
- Press "FAN OFF" button once — fan turns off.

FORM NO. 41050 REV. 10/91

**HUNTER**  
SINCE 1886

HUNTER FAN COMPANY  
2500 FRISCO AVENUE  
MEMPHIS, TN 38114

© 1991, HUNTER FAN COMPANY