

# Electrolux

## Factory Parts Catalog

Product No.	E48DF76EPS
Series	48" dual fuel
Color	stainless
Market	North America
Wiring Diagram	5995449500
Owner's Guide	5995447074
Installation Instructions	5995447082

# Electrolux

Electrolux Major Appliances  
North & Latin America  
P.O. BOX 212378  
AUGUSTA, GA 30917



Publication No.  
**5995467015**  
06/05/26  
(EN/SERVICE/ECL)  
369

**30-INCH FREE-  
STANDING GAS  
RANGE**

Model No.  
**E48DF76E**

Copyright © 2006 Electrolux Home Products, Inc.  
All rights reserved.

**BACKGUARD**

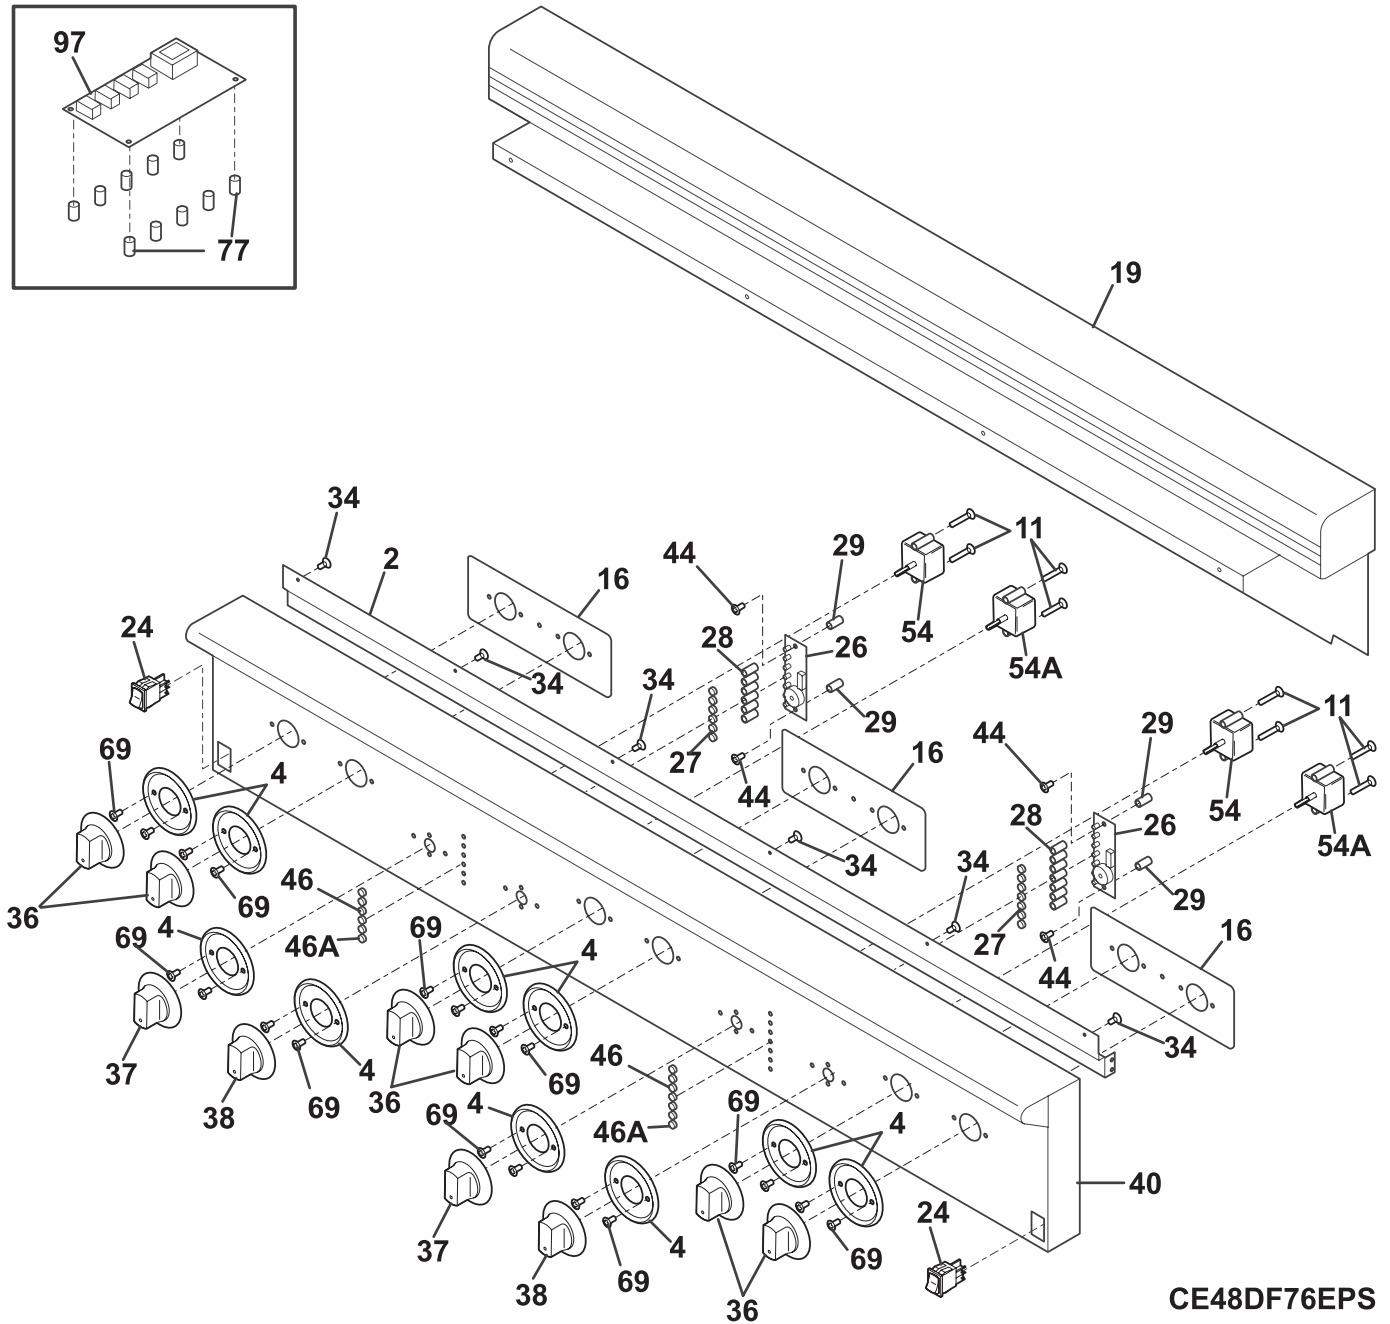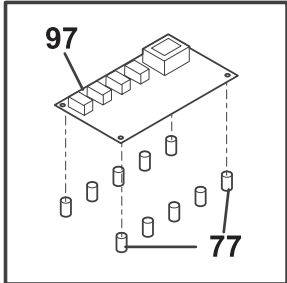


**CE48DF76EPS**

**BACKGUARD**

POS. NO	PART NO.	DESCRIPTION
2	5304453227	Support, spill tray, front
4	5304446031	Bezel, burner knob
11	5304452790	Screw, pan, 6/32 x 1/2
16	5304453228	Panel, mounting
19	5304453229	Panel, backguard
24 #	5304452794	Switch, rocker
26 #	5304452799	Board, indicator light, (2), LED
27	5304452786	Retainer, lens
28	5304452796	Tubing, indicator light
29	5304452793	Spacer, light board
34	5304452454	Screw, #8 x .375"
36	5304452800	Knob, top burner
37	5304452801	Knob, oven selector
38	5304452802	Knob, oven temp.
40	5304453230	Panel, control, stainless
44	5304446271	Screw, phil pan hd, #8 x 1/4, (8)
46	5304452795	Lens, indicator light, blue
46A	5304452805	Lens, indicator light, red
54 #	5304452797	Control, oven selector
54A#	5304452798	Control, oven temp.
69	5304452792	Screw, mounting
77	5304452791	Support, control board
97 #	5304453231	Board, control, large oven
97 #	5304453232	Board, control, small oven
* #	5304452804	Harness, wiring, oven controls
* #	5304452803	Harness, wiring, indicator light

**BURNER**

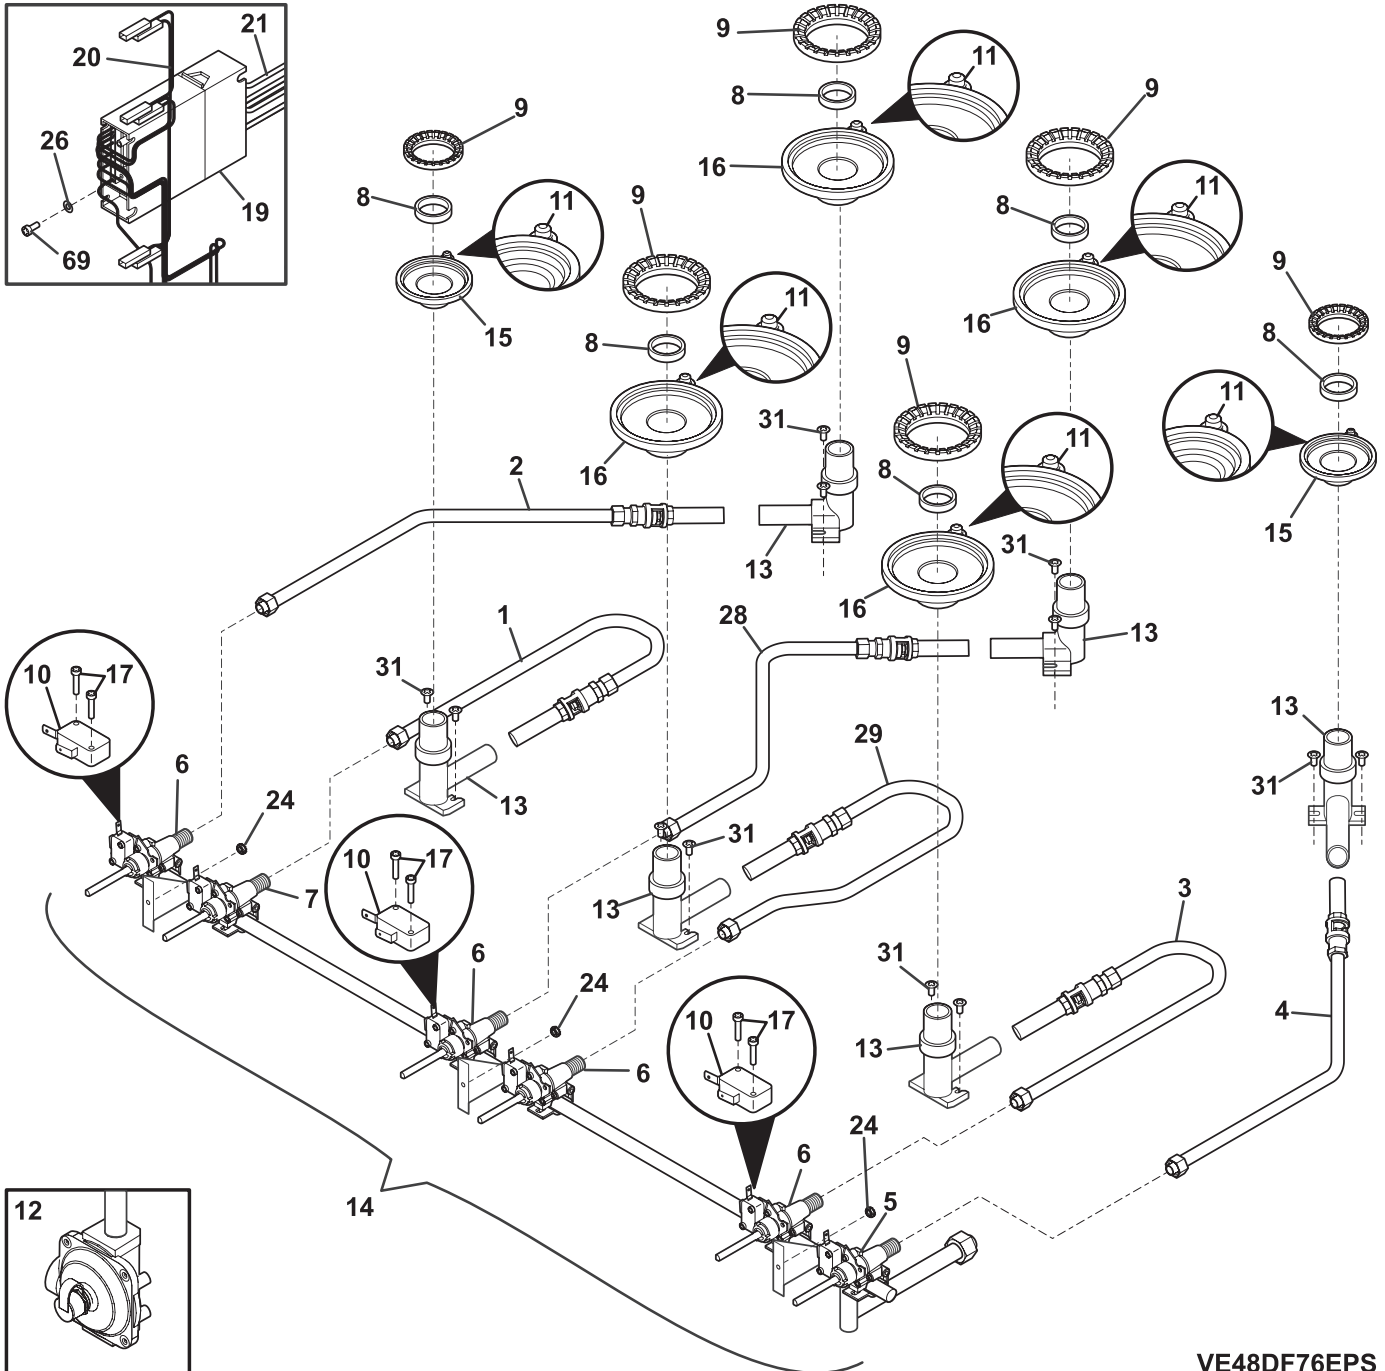


VE48DF76EPS

**BURNER**

POS. NO	PART NO.	DESCRIPTION
1 #	5304453233	Tubing Assembly, burner, left front
2 #	5304453234	Tubing Assembly, burner, left rear
3 #	5304453235	Tubing Assembly, burner, right front
4 #	5304453236	Tubing Assembly, burner, right rear
5 #	5304453237	Valve Assembly, w/switch, right rear
6 #	5304453238	Valve Assembly, w/switch, (2)
7 #	5304453239	Valve Assembly, w/switch, left front
8	5304446028	Nut, burner head, brass
9	5304452881	Rings, burner, set of 6
10 #	5304446014	Switch, ignitor
11 #	5304452824	Ignitor, burner, (6)
11*	5304446002	Jacket, ignitor wire
12 #	5304453240	Regulator, pressure
13	5304446001	Base, burner, (6)
14 #	5304453241	Manifold Assembly, w/valves
15	5304452825	Burner Head Assy, "B", 8500 BTU, w/ignitor
16	5304452826	Burner Head Assy, "D", 14000 BTU, w/ignitor
17	5304446023	Screw, ignitor switch
19 #	5304452821	Module, ignitor wire
20 #	5304453242	Harness, wiring, cooktop
21 #	5304453243	Harness, wiring, ignitors
24	5304446015	Nut, hex keps, #8-32
26	5304452823	Washer, 1/2"
28 #	5304453244	Tubing Assembly, burner, center rear
29 #	5304453245	Tubing Assembly, burner, center front
31	5304452822	Screw, slot hex hd, #10 x 3/8"
69	5304452792	Screw, mounting

**BODY**

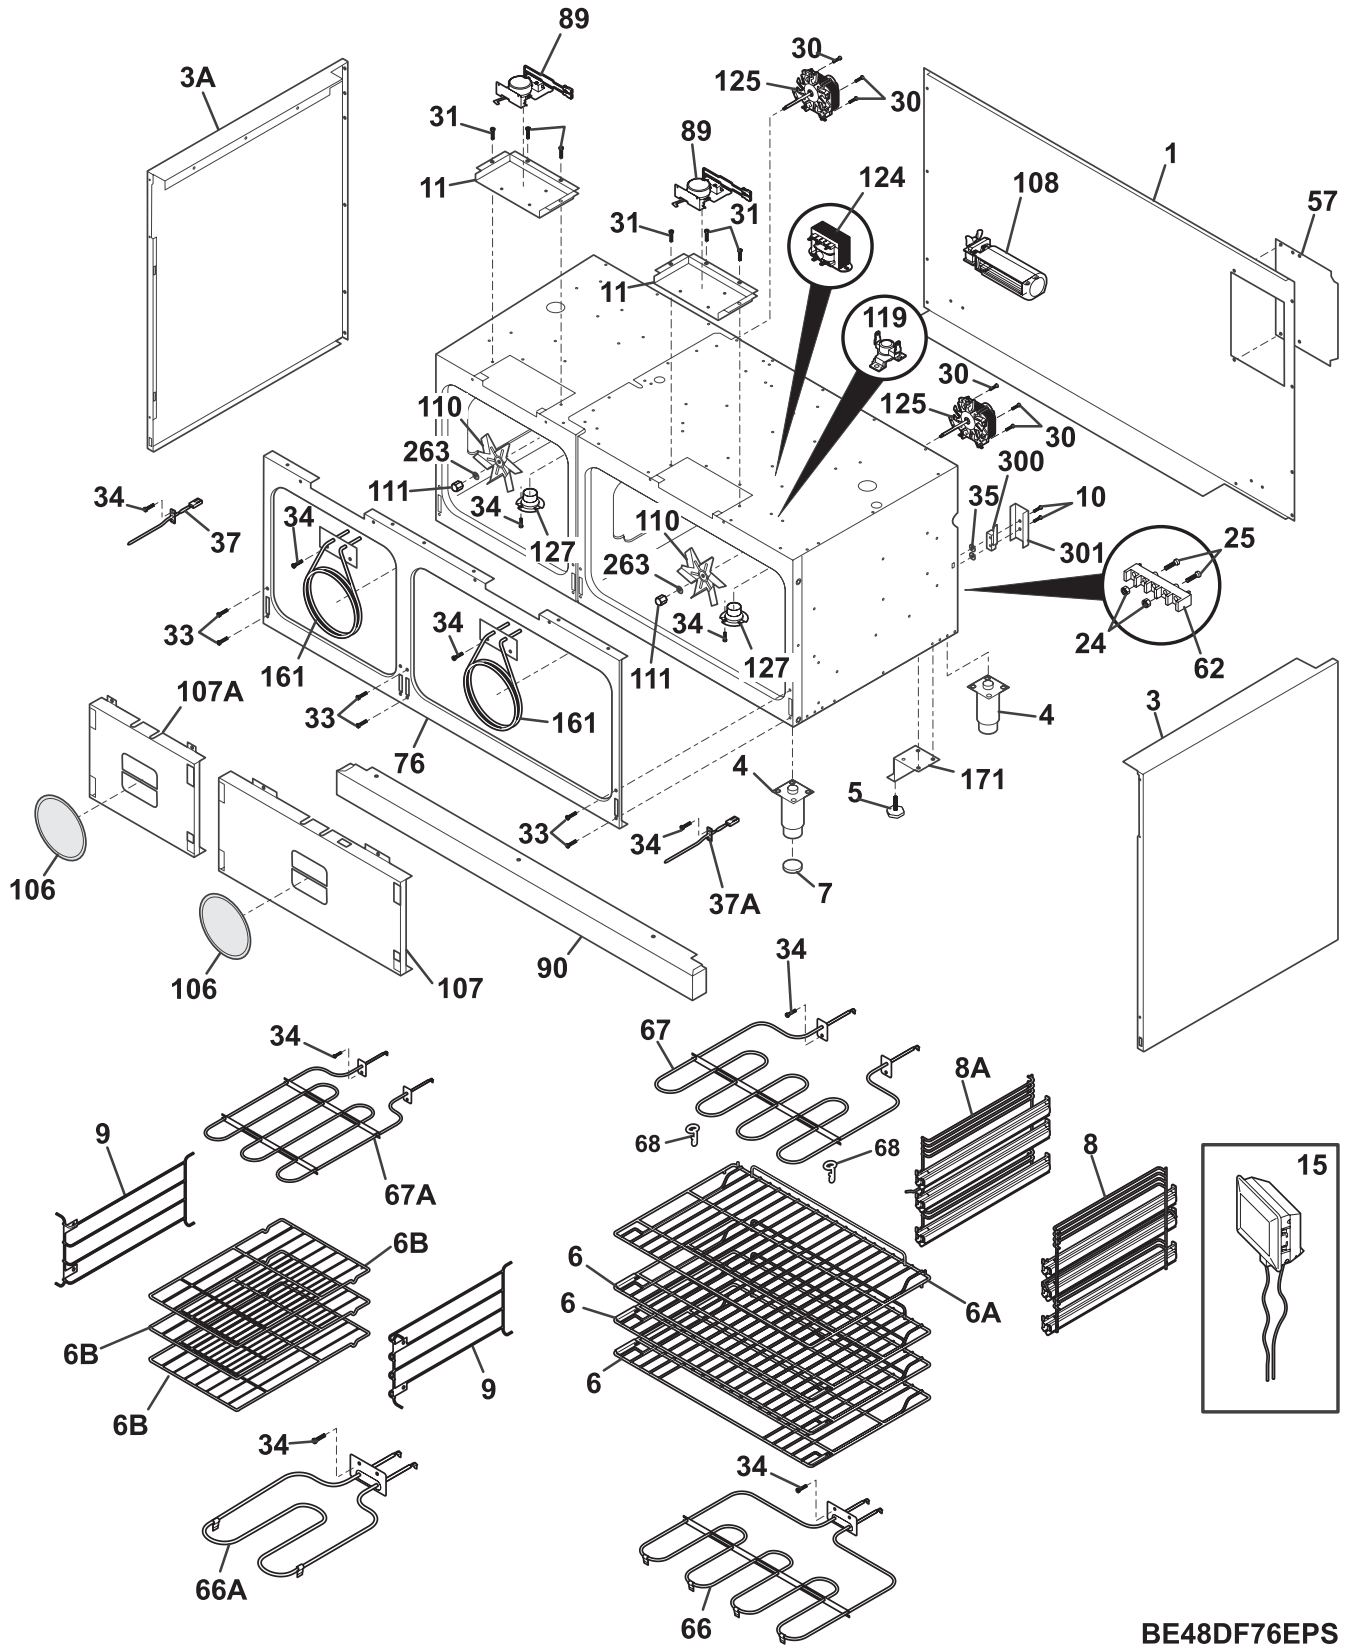

**BE48DF76EPS**


---

**BODY**


---

POS. NO	PART NO.	DESCRIPTION
1	5304453246	Panel, main back
3	5304453247	Panel, body side, RH
3A	5304453248	Panel, body side, LH
4	5304452840	Leg, adjustable, (4)
5	5304452863	Leveler, adjustable, (2)
6	5304452713	Rack, extendable, (3)
6A	5304452712	Rack, fixed
6B	5304453250	Rack, small oven, (3)
7	5304452848	Cap, leg, (4)
8	5304452867	Support, rack, RH
8A	5304452868	Support, rack, LH
9	5304453252	Support, rack, small oven, (2)
10	5304452830	Screw, #6 - 32 x 1", w/washer
11	5304452834	Plate, latch, (2)
15 #	5304452872	Light Assembly, halogen, (3)
15*#	5304452831	BULB, halogen, 20w
15*#	5304452873	Harness, wiring, lg oven light
15*#	5304453253	Harness, wiring, sm oven light
24	5304446015	Nut, hex keps, #8-32
25	5304446287	Screw, phil pan hd, #8-32 x 3/4, (2)
30	5304452862	Screw, slot hex hd, #8 x .370"
31	5304452822	Screw, slot hex hd, #10 x 3/8"
33	5304452865	Screw, btn hd, #10 - 32 x 1/2", (8)
34	5304452454	Screw, #8 x .375"
35	5304452866	Washer, fiber, (2)
37 #	5304452846	Probe, temperature, small oven
37A#	5304453254	Probe, temperature, large oven
57	5304452837	Panel, service, regulator
62 #	5304453255	Harness, wiring, main, w/term. block
66 #	5304452870	Element, bake, large oven
66A#	5304453256	Element, bake, small oven
67 #	5304452869	Element, broil, large oven
67A#	5304453257	Element, broil, small oven
68	5304403015	Support, hanger, (2), broil element
76	5304453258	Frame, oven front
89 #	5304452859	Latch, door
90	5304453259	Panel, bottom trim
106	5304452860	Filter, convection
107	5304452839	Cover, convection fan, large oven
107A	5304453260	Cover, convection fan, small oven
108#	5304453261	Blower, fan
110	5304452843	Blade, convection fan
111	5304452844	Nut, convection fan
119#	5304452861	Thermostat, temp. cutout
124#	5304452847	Transformer
125#	5304452842	Motor, convection fan
127	5304452858	Eliminator, smoke
161#	5304452857	Element, convection
171	5304452835	Bracket, anti-tip, range, (2)
263	5304452845	Washer, convection fan
300#	5304452871	Switch, interlock, racks
301	5304452832	Cover, intrck switch
*	5304452792	Screw, mounting

**TOP/DRAWER**

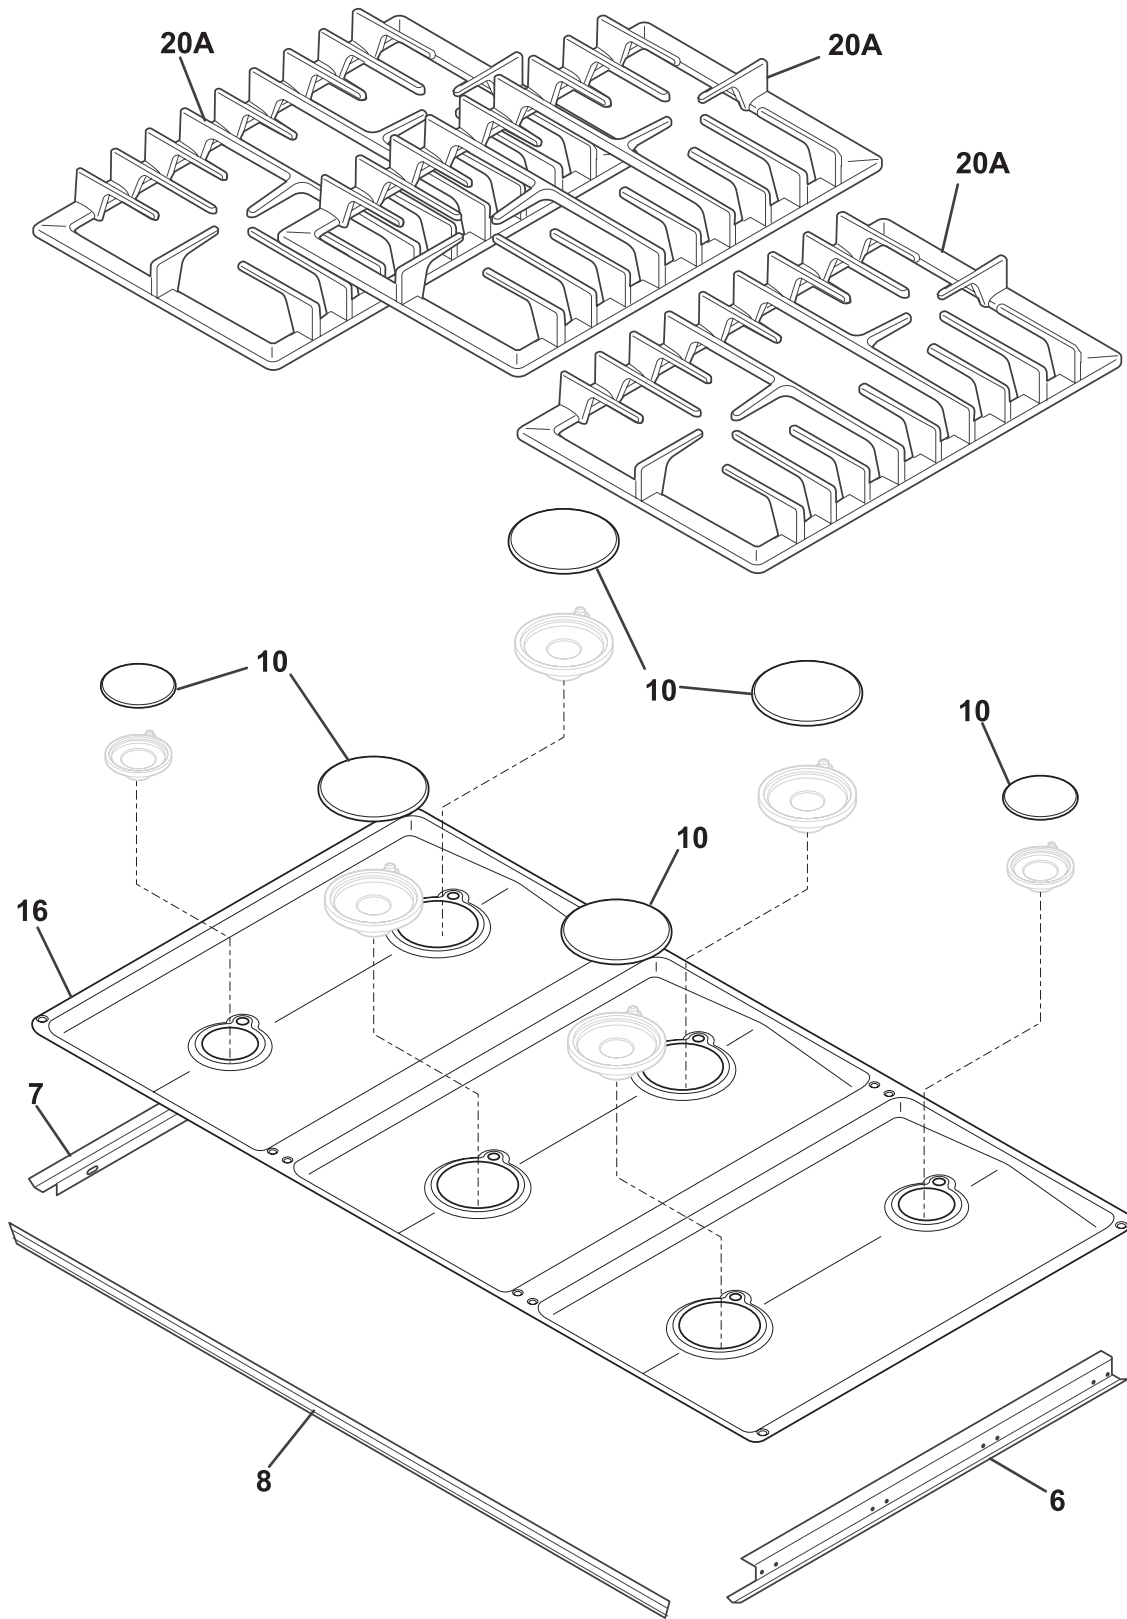

**ME48DF76EPS**




**TOP/DRAWER**

---

POS. NO	PART NO.	DESCRIPTION
6	5304452874	Support, maintop, side
7	5304453262	Angle, maintop support
8	5304453227	Support, spill tray, front
10	5304452880	Caps, burner, set of 6
16	5304453263	Maintop, spill tray
20A	5304452878	Grate, burner, 14"

DOOR

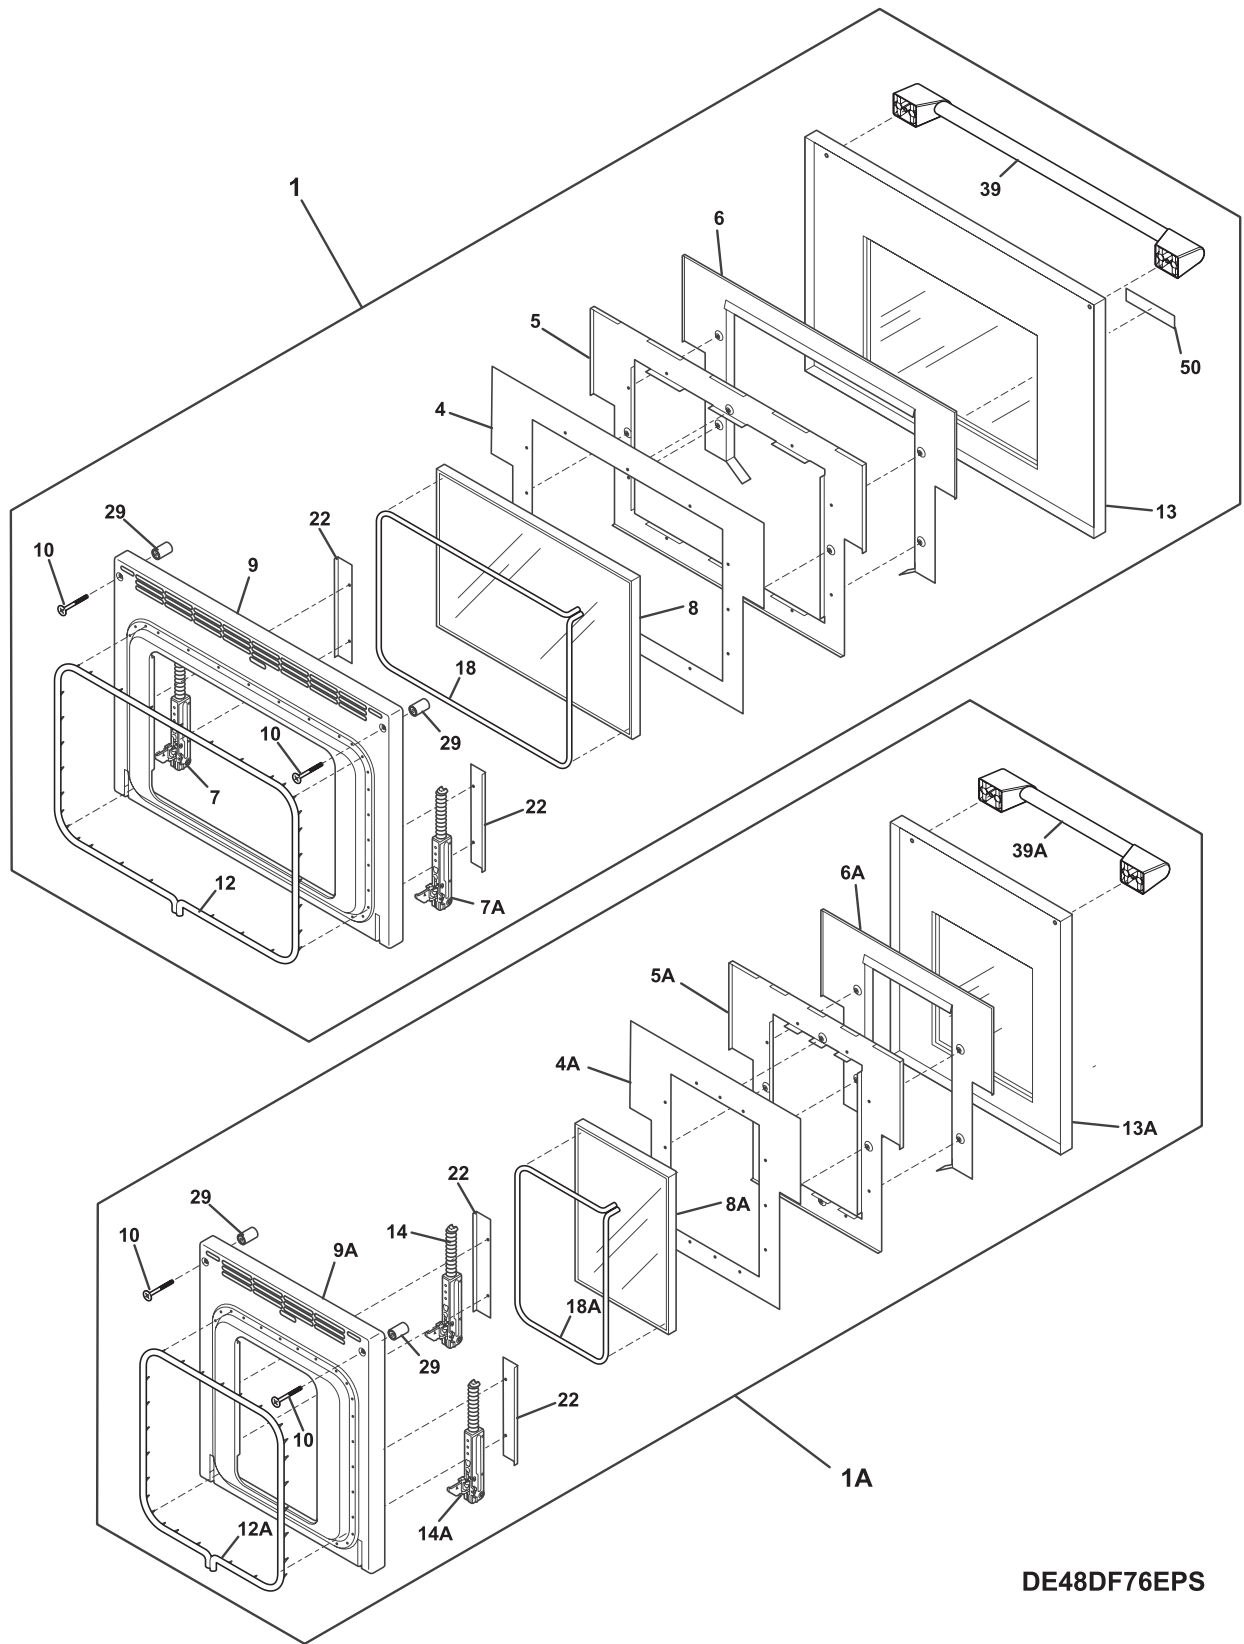

DE48DF76EPS


---

**DOOR**


---

POS. NO	PART NO.	DESCRIPTION
1	5304453265	Door Assembly, complete, large oven, w/handle
1A	5304453266	Door Assembly, complete, small oven, w/handle
4	5304456544	Shield, heat, lower, large oven
4A	5304456552	Shield, heat, lower, small oven
5	5304456545	Shield, heat, inner, large oven
5A	5304456553	Shield, heat, inner, small oven
6	5304456546	Shield, heat, outer, large oven
6A	5304456554	Shield, heat, outer, small oven
7	5304456516	Hinge, door, RH, large oven
7A	5304456517	Hinge, door, LH, large oven
8	5304456547	Glass, window package, large oven
8A	5304456555	Glass, window package, small oven
9	5304456548	Liner, door, large oven
9A	5304456556	Liner, door, small oven
10	5304453264	Screw, handle mtg.
12	5304456550	Gasket, door, large oven
12A	5304456557	Gasket, door, small oven
13	5304456558	Door Skin, assembly, large oven
13A	5304456559	Door Skin, assembly, small oven
14	5304456560	Hinge, door, RH, small oven
14A	5304456561	Hinge, door, LH, small oven
18	5304456551	Gasket, glass pack, large oven
18A	5304456562	Gasket, glass pack, small oven
22	5304456540	Bracket, hinge cover, (2)
29	5304456541	Spacer, handle, (4)
39	5304453267	Handle Assembly, w/endcaps, large oven
39A	5304453268	Handle Assembly, w/endcaps, small oven
50	5304456542	Nameplate, Electrolux, (2)
*	5304456543	Screw, wshr hd, #8 x 1/2", (2)

### WIRING DIAGRAM

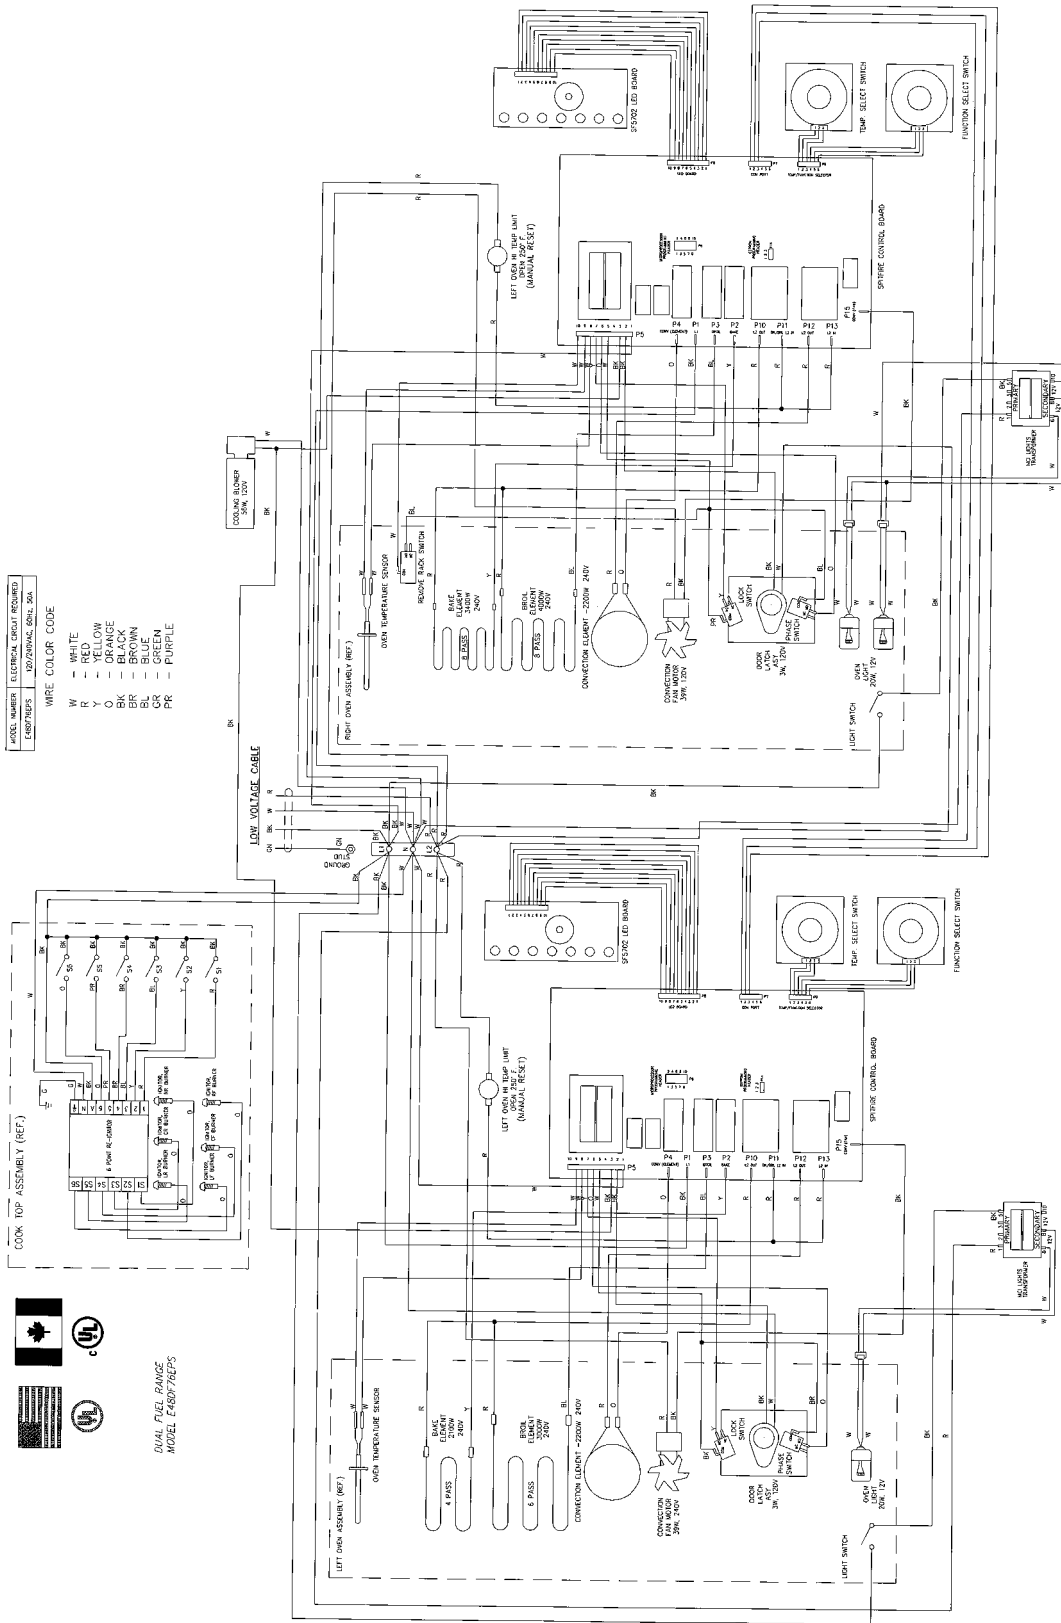

WIRE COLOR CODE

W	- WHITE
R	- RED
Y	- YELLOW
OR	- ORANGE
BR	- BROWN
BL	- BLUE
GRN	- GREEN
PR	- PURPLE



DUAL FUEL RANGE  
MODEL E48DF76EPS