

SONY[®]

4-166-642-13(1)

Home Audio Docking System

Operating Instructions

RDH-SK8iP



WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To reduce the risk of fire, do not cover the ventilation opening of the apparatus with newspapers, tablecloths, curtains, etc.

Do not place the naked flame sources such as lighted candles on the apparatus.

To reduce the risk of fire or electric shock, do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on the apparatus.

Do not expose batteries or apparatus with battery-installed to excessive heat such as sunshine, fire or the like.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet. As the main plug is used to disconnect the unit from the mains, connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the main plug from the AC outlet immediately.

The unit is not disconnected from the mains as long as it is connected to the AC outlet, even if the unit itself has been turned off.

The nameplate is located on the bottom exterior.

The date of manufacturer marking and the serial number are located on the bottom exterior.

The mains switch is located on the rear exterior.

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

For customer in Canada

The IC statement label is located on the bottom exterior.

For customer in the United States

Owner's Record

The model and serial numbers are located on the bottom of the unit. Record these numbers in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. _____ Serial No. _____

These following indications are located on the bottom exterior.



This symbol is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

The following FCC statement applies only to the version of this model manufactured for sale in the U.S.A. Other versions may not comply with FCC technical regulations.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Important Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Continued 

For customers in Europe



Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.



Disposal of waste batteries (applicable in the European Union and other European countries with separate collection systems)

This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste.

On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0.0005% mercury or 0.004% lead. By ensuring these batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery. The recycling of the materials will help to conserve natural resources.

In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only.

To ensure that the battery will be treated properly, hand over the product at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment.

For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the applicable collection point for the recycling of waste batteries.

For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

Notice for customers: The following information is only applicable to equipment sold in countries applying EU Directives.

The manufacturer of this product is Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. The Authorized Representative for EMC and product safety is Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters please refer to the addresses given in separate service or guarantee documents.

For customers in Australia



Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)

On copyrights

iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

iPhone is a trademark of Apple Inc.

All other trademarks and registered trademarks are trademarks or registered trademarks of their respective holders. In this manual, TM and [®] marks are not specified.

Table of Contents

 
Guide to parts and controls...	6
Getting started	8
Setting the voltage selector.....	8
Inserting the iPod/iPhone Dock Adapter.....	8
Turning on the unit	9
Playing the iPod/iPhone.....	9
Enjoying optional components	11
Changing the battery.....	12
Changing the graphic sheet	13
Customizing the graphic sheet	14
Troubleshooting	14
Precautions	16
Specifications	17
Compatible iPod/iPhone models with this unit.....	18

Guide to parts and controls


This manual mainly explains operations using the buttons on the remote, but the same operations can also be performed using the buttons on the unit having the same or similar names.


Unit

– Back view

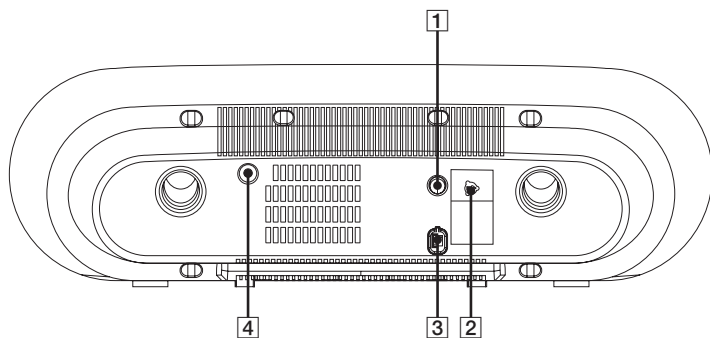

– Front and top view

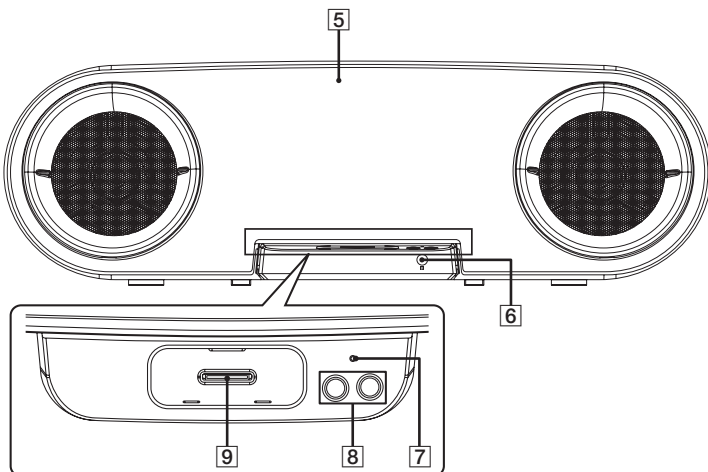 

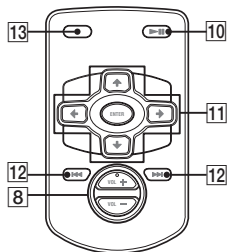 
Remote RM-ANU082


- 1** **POWER** (page 9, 15)
Turns the unit on or off.
- 2** **VOLTAGE SELECTOR** (Only for models equipped with voltage selector) (page 8)
- 3** **AC power cord (mains lead)** (page 9)
Connects to a wall outlet.
- 4** **AUDIO IN jack** (page 11)
Connects to an optional audio component (such as portable digital music player).
- 5** **Acrylic plate** (page 13)
Graphic sheet (page 13)
- 6** **Remote sensor**
Receives signals from remote.
- 7** **Indicator** (page 9, 14)
Shows the status of the unit.

Indicator	Status
Lights off	Power off
Lights on	Power on
Flashes until the button is released	A valid button is pressed
Flashes 3 times in quick succession	Volume is set to maximum or minimum

 
- 8** **Unit: VOLUME +/-** (page 9, 11)
Remote: VOL +/-* (page 9, 11)
Adjusts the volume.

* The VOL + button has tactile dots. Use the tactile dots as references when operating the unit.

- 9** **iPod/iPhone connector** (page 8, 10)
Places an optional iPod/iPhone to listen to audio contents stored in the iPod/iPhone.
- 10** **iPod & iPhone**  (page 9, 10)
Selects iPod & iPhone function, then starts or pauses playback.
- 11** **▲/▼/◀/▶, MENU, ENTER** (page 10)
Selects the menu items on the iPod/iPhone.
- 12** **◀◀/▶▶** (page 10)
Selects a track on the iPod/iPhone. Fast forward or fast rewind track on the iPod/iPhone.
- 13** **AUDIO IN** (page 11)
Selects the AUDIO IN function.

Notes

- Before using the remote for the first time, be sure to remove the insulation sheet attached to battery holder.



- The battery is factory-installed in the remote.

 
Getting started

Setting the voltage selector


For models equipped with a voltage selector, set **VOLTAGE SELECTOR** to the position of your local power line voltage before you connect the AC power cord (mains lead).

Depending on the model, the **VOLTAGE SELECTOR** may differ.

Brazil model only

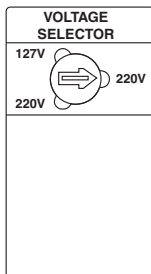


Other models

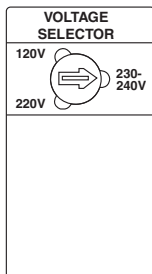 


Inserting the iPod/iPhone Dock Adapter

Insert the iPod/iPhone Dock Adapter into the iPod/iPhone connector on the unit before you connect the iPod/iPhone.

 Choose the iPod/iPhone Dock Adapter that fits your iPod/iPhone. For details on the supplied Dock Adapter, refer to the operating instructions supplied with the Dock Adapter.

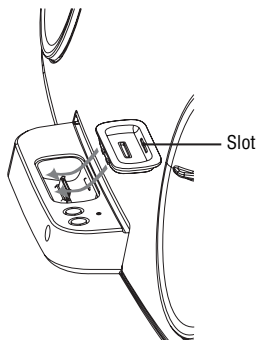

 To remove the iPod/iPhone Dock Adapter, pull it up with your fingernail or a flat object using the slot inside the adapter.

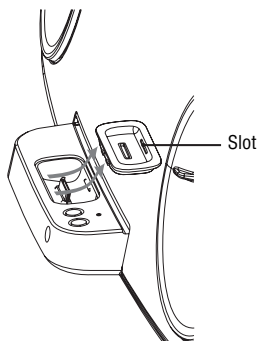

Turning on the unit

- 1 Connect the AC power cord (mains lead) to the wall outlet.
- 2 Press POWER on the back panel of the unit.
The indicator on the front panel lights up.

Playing the iPod/iPhone

You can listen to audio contents stored in the iPod/iPhone on this unit.

Update your iPod/iPhone with the latest software before using it.

We recommend you to use buttons on the remote to control the connected iPod/iPhone.


1 Place the iPod/iPhone.

When connecting the iPod/iPhone during playback, the unit continues the playback of the iPod/iPhone.

Otherwise, press iPod & iPhone ►|| to start playback.

Note

 If your iPod/iPhone has a protect case, we recommend you to remove the protect case before you place the iPod/iPhone onto the unit.

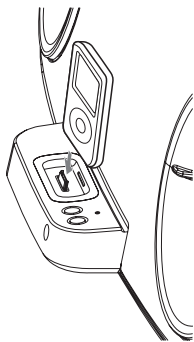

- 2 Press VOL +/- (or VOLUME +/- on the unit) repeatedly to adjust the volume.

Note

The volume level (except for iPhone ring volume) does not change even if adjusted on the iPod/iPhone.

Continued 

Other operations

You can control your iPod/iPhone using the buttons on the remote.

The following buttons have the similar function with the buttons on the iPod (except for iPod Touch and iPhone).

To	Do this
Pause playback	Press iPod & iPhone ► . To resume playback, press it again.
Select a track or chapter of audiobook/podcast	Press ◀◀ or ▶▶ repeatedly.
Locate a point while listening to the music (fast forward/fast rewind)	Hold down ◀◀ or ▶▶ during playback, then release it at the point you want.
Locate a point while viewing the iPod display (except for iPod Touch and iPhone)	Hold down ◀◀ or ▶▶ when playback is paused, then release it at the point you want.
Select the iPod/iPhone menu item	Press MENU and ↑/↓ to select a menu, then press ENTER or →. Note You can confirm menu and item selections on the iPod/iPhone display during operation.
Return to previous menu	Press MENU or ←.
Turn off the iPod/iPhone	Hold down iPod & iPhone ► .

Tip

Press and hold ↑ or ↓ on the remote has the similar function of turning the Click Wheel on the iPod/iPhone counterclockwise or clockwise.

To use the unit as a battery charger

You can use the unit as a battery charger for the iPod/iPhone when the unit is on. The charging begins when the iPod/iPhone is placed on the iPod/iPhone connector. The charging status appears in the iPod/iPhone display. For details, refer to the operating instructions of your iPod/iPhone.

To stop charging the iPod/iPhone

Remove the iPod/iPhone.

Notes

- When you connect an iPod/iPhone to the unit, the iPod/iPhone is automatically turned on if the unit is turned on.
- If you connect the iPod/iPhone when AUDIO IN function is selected, the function will automatically change to iPod & iPhone function.
- When placing or removing the iPod/iPhone – handle the iPod/iPhone in the same angle as that of the iPod/iPhone connector on the unit and do not twist or sway the iPod/iPhone to prevent connector damage.
– brace the unit with one hand and take care not to press the controls of the iPod/iPhone by mistake.
- Before carrying the unit, be sure to disconnect the iPod/iPhone.
- Do not carry the unit by holding the iPod/iPhone connector panel only. Doing so may break the unit.
- Before disconnecting the iPod/iPhone, pause playback.
- This iPod/iPhone connector is designed for iPod/iPhone only. Do not connect any other portable audio players to the connector.
- Refer to the operating instructions supplied with your iPod/iPhone for details on iPod/iPhone operations.
- Sony cannot accept responsibility in the event that data recorded to iPod/iPhone is lost or damaged when using an iPod/iPhone with this unit.

- Some iPod/iPhone operations may not be performed using buttons on the remote.
- Depending on the connected iPod/iPhone, operations may differ.
- The iPhone rings according to the ring volume set on the iPhone, even when the iPhone is placed on the unit. Adjust the ring volume using the controls on the iPhone.
- If the iPhone is placed on the unit and you receive a call during playback, playback will pause and you can answer the incoming call.
- Depending on the volume settings on each component, loud sound may be output.

Enjoying optional components

You can enjoy the sound from an optional audio component (such as a portable digital music player) through the speakers of this unit.

Be sure to turn off the power of the component before making any connections.

For details, refer to the operating instructions supplied with the connected component.

1 Connect an optional audio component to the AUDIO IN jack using an audio cord (not supplied).

2 Turn on the unit and the connected component.

3 Press VOL – (or VOLUME – on the unit) repeatedly to turn down the volume.

4 Press AUDIO IN.

5 Start playing the connected component.

 
 
The sound from the connected component is output from the speakers of this unit.

6 Press VOL +/- (or VOLUME +/- on the unit) repeatedly to adjust the volume.


Changing the battery

The working distance of the remote shortens as the battery becomes exhausted. When the remote no longer operates the unit, replace the battery with a new CR2025 lithium battery.

- 1 Push and hold the latch of the battery holder, then pull out the battery holder.**

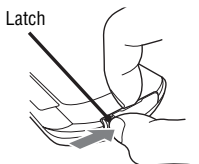

 - 2 Replace the battery with the "+" facing up, then insert the battery holder into the slot.**

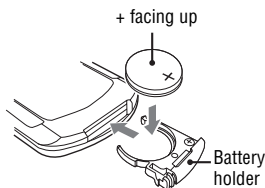

Notes

- If you do not use the remote for a long period of time, remove the battery to avoid possible damage from battery leakage and corrosion.
- Dispose of used battery promptly. Keep the lithium battery out of the reach of children. Should the battery be swallowed, immediately consult a doctor.
- Wipe the battery with a dry cloth to assure a good contact.
- Be sure to observe the correct polarity when installing the battery.
- Do not hold the battery with metallic tweezers, otherwise a short-circuit may occur.
- Use of batteries other than the CR2025 may cause a fire or explosion.

 
WARNING

Battery may explode if mistreated. Do not recharge, disassemble or dispose of in fire.


Changing the graphic sheet

You can change the graphic sheet on the front panel according to your preference. We supply 2 graphic sheets and each graphic sheet is a two-sided printed sheet.


- 1 Place the unit with the front panel facing up.



 
- 2 Turn the "R" ring counterclockwise by using the rib on the ring. Then, detach the ring. Repeat the procedure to detach the "L" ring.

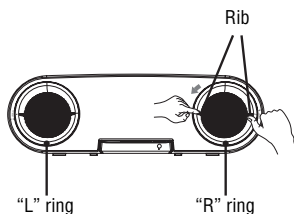

 
- 3 Remove the acrylic plate, then remove the graphic sheet.

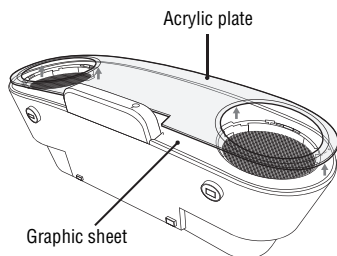

 - 4 Replace the graphic sheet you want by aligning it with the guide.

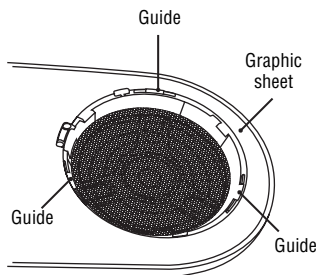


 - 5 Place back the acrylic plate by aligning it with the guide.
- 6 Place back the "R" ring by matching the "R ▶" on the ring with the "◀ R" on the acrylic plate. Then, turn the ring in the "LOCK" arrow direction until it locks.

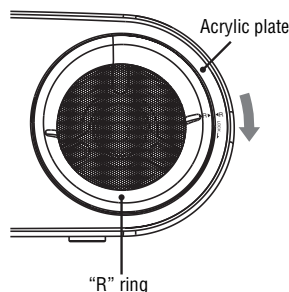

Continued 

 - 7** Place back the “L” ring by matching the “◀ L” on the ring with “L ▶” on the acrylic plate. Then, turn the ring in the “LOCK” arrow direction until it locks.

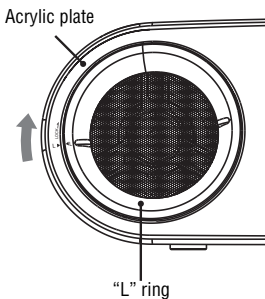

Notes

- Make sure the rib of the ring is horizontally parallel after you place back the ring. Otherwise, the ring is not attached to the front panel securely.
- Make sure the “R” ring is attached to the right of the front panel and the “L” ring is attached to the left of the front panel.

Customizing the graphic sheet

You can also create your own graphic sheet. Prepare the paper material (posters, newspapers, printing, handmade graphic arts, etc.).

After you have prepared the paper material, we recommend you to use the acrylic plate as a template to draw the outline of the custom graphic sheet. Then, trim the graphic sheet according to the outline.

Troubleshooting

Should you encounter a problem with your unit, do the following:

- 1** Make sure the AC power cord (mains lead) is connected correctly and firmly.
- 2** Find your problem in the troubleshooting checklist below and take the indicated corrective action.

If the problem persists after doing all of the above, consult your nearest Sony dealer.

Note that if service personnel changes some parts during repair, these parts may be retained.

When the indicator does not stop flashing

Immediately turn off the unit and unplug the AC power cord (mains lead).

Then perform the following items.

- Remove anything that is blocking the ventilation hole.
- Disconnect the iPod/iPhone.
- Disconnect audio cord from the AUDIO IN jack.

After performing the above items and fixing any problems, plug in the AC power cord (mains lead) again and turn on the unit. If the indicator still flashes, or if the cause of the problem cannot be found even after performing all the above items, consult your nearest Sony dealer.

General

The indicator does not light up.

- Make sure you press the POWER on the back panel.
- Disconnect the AC power cord (mains lead), then check that the voltage selector is set to the local power supply voltage (page 8).

There is severe noise.

- Someone is using a portable telephone or other equipment that emits radio waves near the unit. Move the portable telephone, etc. away from the unit.

The remote does not function.

- Remove any obstacles in the path of the unit and the remote.
- Point the remote at the remote sensor of the unit.
- Replace the battery.
- Locate the unit away from fluorescent lights.
- Place the iPod/iPhone to the connector firmly.

iPod/iPhone

If the iPod/iPhone does not operate properly, check that you have removed the protect case of the iPod/iPhone. If the problem persists, use the following troubleshooting guide to remedy the problem.

There is no sound.

- Make sure you press the POWER on the back panel.
- Make sure the iPod/iPhone is connected firmly.
- Make sure the iPod/iPhone is playing music.
- Press VOL + (or VOLUME + on the unit) repeatedly.
- Depending on the contents of the iPod/iPhone, it may take time to start playback.

- You are using an unsupported iPod/iPhone. See “Compatible iPod/iPhone models with this unit” (page 18) for the supported device types.

The sound is distorted.

- Press VOL – (or VOLUME – on the unit) repeatedly.
- Set the “EQ” setting of the iPod/iPhone to “Off” or “Flat”.

The iPod/iPhone cannot be charged.

- Make sure you press the POWER on the back panel.
- Make sure the iPod/iPhone is connected firmly.

The indicator does not stop flashing when the iPod/iPhone is connected.

- A problem has been detected with the level of electrical current from the iPod/iPhone. Turn off the unit and remove the iPod/iPhone. Make sure there is no problem with the iPod/iPhone. If this problem persists, contact your nearest Sony dealer.

The iPod/iPhone cannot be operated.

- Disconnect the iPod/iPhone and connect the iPod/iPhone again.
- You are using an unsupported iPod/iPhone. See “Compatible iPod/iPhone models with this unit” (page 18) for the supported device types.

The ring volume of the iPhone does not change.

- Adjust the ring volume using the controls on the iPhone.

Continued 

There is no sound.

- Make sure you press the POWER on the back panel.
- Press VOL + (or VOLUME + on the unit) repeatedly or adjust the volume on the connected component.
- Connect the component properly while checking:
 - if the cords are connected properly.
 - if the cord plugs are firmly inserted all the way.
- Turn on the connected component.
- Refer to the operating instructions supplied with the connected component and start playing.

Precautions

On safety

- Completely disconnect the AC power cord (mains lead) from the wall socket (mains) if it is not going to be used for an extended period of time. When unplugging the unit, always grip the plug. Never pull the cord itself.
- Should any solid object or liquid get into the unit, unplug the unit, and have it checked by qualified personnel before operating it again.
- (For customers in United States and Canada only)
One blade of the plug is wider than other for the purpose of safety and will fit to the wall outlet only one way. If you are unable to insert the plug fully into the outlet, contact your dealer.
- The AC power cord (mains lead) can be changed only by a qualified service facility.

On placement

- Do not place the unit in an inclined position or in locations that are extremely hot, cold, dusty, dirty, or humid or lacking adequate ventilation, or subject to vibration, direct sunlight or a bright light.
- Place the unit a few centimeters away from the wall to avoid blocking the ventilation holes.
- Be careful when placing the unit on surfaces that have been specially treated (for example, with wax, oil, polish) as staining or discoloration of the surface may result.
- Since a strong magnet is used for the speakers, keep personal credit cards using magnetic coding or spring-wound watches away from the unit to prevent possible damage from the magnet.

On heat buildup

- Heat buildup on the unit during operation is normal and is not a cause for alarm.
- Do not touch the cabinet if it has been used continuously at a high volume because the cabinet may have become hot.
- Do not obstruct the ventilation holes.

Cleaning the cabinet

Clean this unit with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent, such as thinner, benzene, or alcohol.

Specifications

AUDIO POWER SPECIFICATIONS

POWER OUTPUT AND TOTAL HARMONIC DISTORTION:

USA model only

With 8-ohm loads, both channels driven, from 120 Hz – 10 kHz; rates 10 watts per channel minimum RMS power, with no more than 0.7% total harmonic distortion from 250 milliwatts to rated output.

Amplifier section

North American model only

The following are measured at
AC 120 V, 60 Hz

RMS output power (reference)
37.5 W + 37.5 W (per channel at 8 Ω,
1 kHz)

Brazilian model only

The following are measured at
AC 127 V or 220 V, 60 Hz

Power output (rated)
13 W + 13 W (at 8 Ω, 1 kHz, 1% THD)

RMS output power (reference)
30 W + 30 W (per channel at 8 Ω,
1 kHz, 10% THD)

Other models

The following are measured at
Mexican model:

AC 127 V, 60 Hz

Other models:

AC 120 V, 220 V, 230 V – 240 V,
50/60 Hz

Power output (rated)
13 W + 13 W (at 8 Ω, 1 kHz, 1% THD)

RMS output power (reference)
37.5 W + 37.5 W (per channel at 8 Ω,
1 kHz)

Input

AUDIO IN:

Voltage 800 mV, impedance
47 kilohms

iPod/iPhone section

DC5V 500 mA MAX

Speakers section

Speaker system

2-way, coaxial

Speaker unit

Woofer: 120 mm (4 ³/₄ in),
cone type

Tweeter: 40 mm (1 ⁵/₈ in),
cone type

Rated impedance

8 ohms

General

Power requirements

North American model: AC 120 V,
60 Hz

European model: AC 230 V, 50/60 Hz

Mexican model: AC 127 V, 60 Hz

Oceanian model: AC 230 V – 240 V,
50/60 Hz

Brazilian model: AC 127 V or 220 V,
60 Hz, adjustable with voltage selector

Argentina model: AC 220 V, 50/60 Hz

China model: AC 220 V, 50/60 Hz

Korean model: AC 220 V, 60 Hz

Other models: AC 120 V, 220 V or
230 V – 240 V, 50/60 Hz, adjustable
with voltage selector

Power consumption

60 W

Dimensions (w/h/d) (Approx.)

603 mm × 201 mm × 228 mm
(23 ³/₄ in × 8 in × 9 in)

Mass (Approx.)

6.3 kg (13 lb 15 oz)

Supplied accessories

Remote Commander (including a 3V
CR2025 lithium battery) (1)

iPhone Dock Adapter (2 sets)

Design and specifications are subject to
change without notice.

Compatible iPod/iPhone models with this unit

You can use the following iPod/iPhone models on this unit. Update your iPod/iPhone with the latest software before using it.



iPod nano
5th generation
(video camera)



iPhone 3GS



iPod touch
2nd generation



iPod nano
4th generation
(video)



iPhone 3G



iPod touch
1st generation



iPod nano
3rd generation
(video)



iPod classic



iPhone



iPod nano
2nd generation
(aluminum)



iPod
5th generation
(video)



iPod nano
1st generation



iPod
4th generation
(color display)



iPod
4th generation



iPod mini

Notes

- This product has been designed specifically to work with iPod/iPhone and has been certified to meet Apple performance standards.
- Use a Dock Adapter supplied with your iPod/iPhone. Otherwise, a compatible Dock Adapter will need to be purchased separately from Apple Inc.
- “Made for iPod” means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.
- “Works with iPhone” means that an electronic accessory has been designed to connect specifically to iPhone and has been certified by the developer to meet Apple performance standards.
- Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.



* 4 1 6 6 6 4 2 1 3 * (1)