

# RADIO YourWay™

## User's Manual



AM/FM Radio Recorder/Voice Recorder/MP3 Player

 
MODEL: PRY900M2



Thank you for purchasing RADIO YourWay™. Please read all the information in this User manual carefully prior to using RADIO YourWay™ and keep this guide handy for future reference.

## ● OPTIONAL ACCESSORIES

---

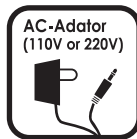

[www.pogoproducts.com](http://www.pogoproducts.com)

July, 2003  
Printed in KOREA

## Copyright



- All rights regarding the information in this manual are reserved for **PoGo! Products, Inc.**, No part of this manual may be copied or distributed or commercially used without the prior written permission from **PoGo! Products, Inc.**, and any violation of that may result in severe legal penalties.
- MP3 File(s) is/are intended only to be used personally and not for any commercial use/service and any violation of this clause is against domestic copyright laws.
- Except for personal use, unauthorized copying or distributing of recorded music is prohibited by law.
- (c)2003 **PoGo! Products, Inc.**, - RADIO YourWay™ is a trademark of **PoGo! Products, Inc.**,



# Table of Contents

## 1. RADIO YourWay™ Series

- 1) Precautions ..... 1
- 2) Player Functions ..... 2
- 3) Components and LCD Display ..... 4
- 4) Battery Use and Description of Components ..... 5
- 5) Basic Functions ..... 7
- 6) VOICE/AM/FM/MP3 Buttons ..... 8
- 7) Timer and Recording .....10
- 8) External Memory .....12
- 9) Play Modes .....13
- 10) Erasing Files .....16
- 11) Reserved Recording .....17
- 12) Line In .....19
- 13) AM/FM Radio .....20

## 2. RYW(Radio Your Way)-Explorer

- 1) What is the RYW-Explorer? ..... 22
- 2) Quick Software & Drivers Installation Guide ..... 23
- 3) RYW-Explorer User Interface ..... 27
- 4) Transmitting MP3 Files ..... 30
- 5) Transmitting RVF Files to the PC ..... 31
- 6) Deleting MP3 & RVF Files ..... 32
- 7) Initiating the Flash Memory ..... 33

## 3. General Specification ..... 34

## 4. Warranty ..... 36

## Radio YourWay™ Series



### 1) Precautions

- Do not drop RADIO YourWay™, it may cause a malfunction.
- Do not leave RADIO YourWay™ in the following areas:
  - Place of high temperature (above 60 °C)
  - Exposed to direct sunlight or near heating appliances.
  - Inside a car; especially in the summer
  - High humidity area like a bathroom
- Avoid any impact to the LCD Display
- Do not place credit cards, phone cards, bank books or subway tickets near RADIO YourWay™. The magnetism of the player may damage the data stored in the magnetic strip.
- We are not responsible for any damage or claims from a third party resulting from the use of RADIO YourWay™.
- We are not responsible for any loss of files caused by any reason.
- Do not repair, disassemble or make modifications to RADIO YourWay™.
- Do not use RADIO YourWay™ in any area designated **No Electronic Devices** like airports or medical facilities.
- Do not operate while driving.
- If RADIO YourWay™ is misused by the user, subjected to static electricity or electrical shock even if just changing the battery, the files stored in the memory may be lost or corrupted.  
Backup all important data!
- Only insert a memory card when the unit is off or a malfunction may occur



## Radio YourWay™ Series

### 2) Player Functions

RADIO YourWay™ is manufactured under strict quality control procedures to ensure the best performance and customer experience.

- **Elegant Design and Exterior Finishing**
- **AM/FM/Voice Recording and MP3 WMA PLAYER**  
RADIO YourWay™ can record AM/FM/Voice and play MP3 WMA PLAYER files.
- **External memory**  
RADIO YourWay™ has the ability to expand the memory capacity using SD or MMC memory cards.
- **Record AM/FM RADIO**  
With RADIO YourWay™ you can record live or future AM/FM broadcasts.
- **RYW-EXPLORER**  
With RADIO YourWay™ you can transmit data between the device and your PC and even send those files to a friend using E-mail.
- **Recording Timer**  
RADIO YourWay™ can be programmed to record voice or radio at a later time with its built in timer.
- **USB Interface**
- **Displays file/frequency/current time on the wide LCD Screen**
- **Built-in microphone**
- **Lock (HOLD) function to prevent unnecessary battery consumption caused by an accidental key press.**
- **TIMER recording function to allow voice or radio recording at a later time/date.**
- **REPEAT PLAY allows a message to be played repeatedly**
- **Resume Playback Function**
- **Section Repeat Play (A↔B REPEAT PLAY)**

## Radio YourWay™ Series

 
 


- Automatic power OFF after 3 minutes of no use.(SLEEP MODE)
- MONITOR Function allows the user to listen to what is being recorded using an earphone (MONITOR)
- H/D Function may be used as a portable hard disk (32MB)
- Volume adjustable 30 levels
- EQ equalizer modes (NORMAL,ROCK,LIVE,CLASSIC,POP)
- Repeat (NORMAL/SECTION REPEAT/1 TRACK/ALL TRACK)
- Download and playback of MP3 Files
- Real time or reserved FM RADIO RECORDING function
- Real time or reserved AM RADIO RECORDING function
- AM/FM PRESET CH function
- AM Region setting EUROPE (9) or USA (10)
- Setting up to 10 reserved recordings is possible
- S-FORWARD and S-REWIND Searching function (10 times/100 times searching)
- External memory slot (SD-CARD/MMC)
- Built-in high-power speaker
- Easy recording from external audio devices
- Recover time and settings after replacing the battery (BACK-UP Function)



# Radio YourWay™ Series

## 3) Components and LCD Display

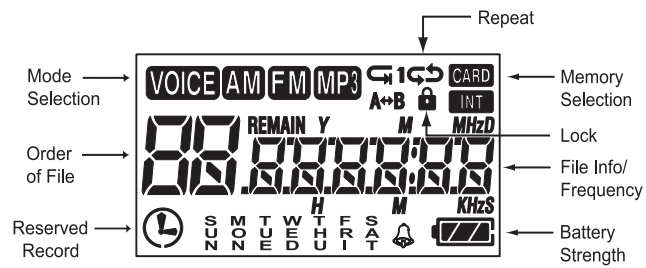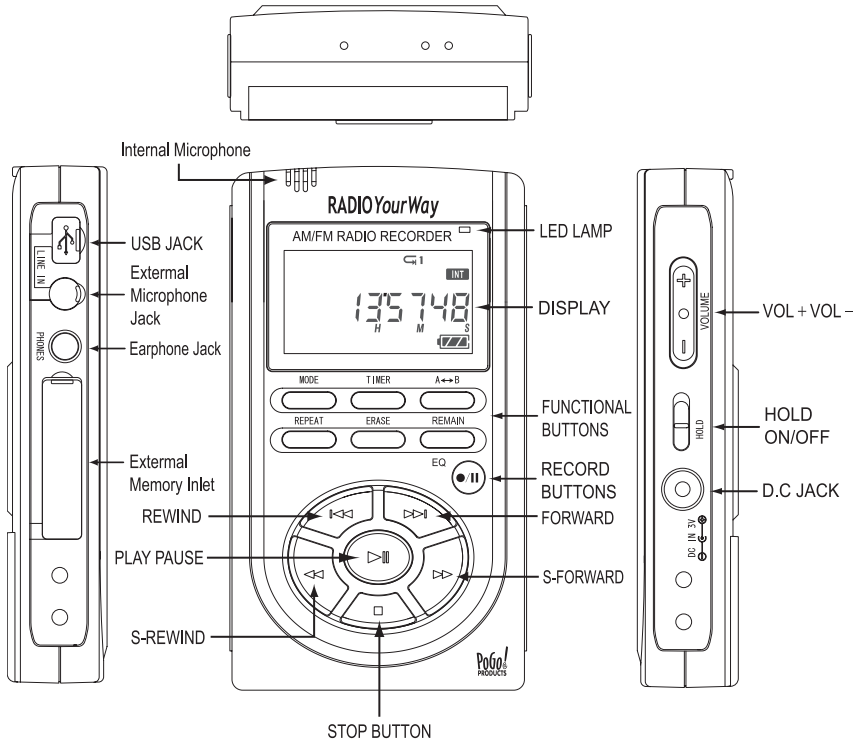




# Radio YourWay™ Series




## 4) Battery Use and Description of Components

 ① Open the Battery Cover.

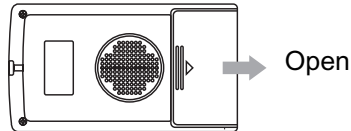

 ② Close the cover after inserting two AAA batteries corresponding to the correct (+) (-) polarities.  
Battery: (SIZE "AAA" or UM-4)

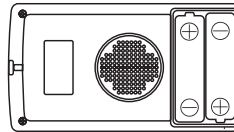

③ Check the battery strength by pressing the PLAY/STOP or record mode button.



Battery strength is strong.



Battery is partially run down.



Battery is almost run down.



Replace the battery.

### Caution

Check the polarities of the batteries if the LCD Display doesn't turn ON after inserting new batteries.

### Note

If you do not use RADIO YourWay™ for a long time, the batteries may be run down naturally. Take out the batteries if you do not plan on using RADIO YourWay™ for a long time.



## Radio YourWay™ Series

### ④ Battery Life

Battery Type	Recording Excepting Radio	Playback via Speaker (Volume: Middle)	Playback via Earphone
Alkaline "AAA" LR-03	Approx 10hr	Approx 8hr	Approx 14hr

Battery Life may be different from above mentioned time according to the battery & operating conditions.

### ⑤ Caution when Using the Battery

- Do not use different types of batteries together.
- If you do not use this recorder & player for a long time, take the batteries out of the body.
- When using rechargeable batteries, carefully read the manual of the battery and charger before using them.

### ⑥ Components

STEREO EARPHONE, INSTALL CD, LINE/IN CABLE, USB CABLE, TWO AAA BATTERIES, NECK STRAP, EXTERNAL ANTENNA, MANUAL

## Radio YourWay™ Series

 


### 5) Basic Functions

#### ● Turning the Power ON/OFF

To turn the player on, hold the PLAY button for 1-3 seconds.  
If no key is pressed for more than 3 minutes, the power is automatically shut OFF.

To turn the player off, hold the STOP button for 1-3 seconds

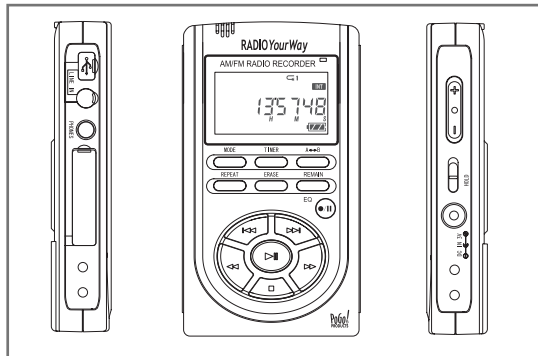


If you put in the provided batteries after purchasing RADIO YourWay, the Power should turn ON and the initial display screen appears

When the power is OFF, you may turn the power ON by pressing the PLAY Button.

#### ● How to Use the HOLD function

 When the lock button is in the upper position, the player is in HOLD and will not operate.

Use this recorder & player only after checking the lock switch is released from the HOLD position.



**HOLD OFF**  
Released



**HOLD ON**  
Player not operable



## Radio YourWay™ Series

### 6) VOICE/AM/FM/MP3 Buttons

#### ● VOICE MODE (VOICE)

Upon operating the keys, — means a short press and — means pressing and holding (longer than 1 sec).

Buttons	Key Operations	Stopped	Upon Recording	Playing
▶	—	Plays the beginning of a file	X	Pauses a file
▶▶	—	Moves to the next file	X	Begins to play the next file
◀◀	—	Moves to the previous file	X	Plays the previous file If key held down more than 5 seconds, goes to the beginning of the file
▶▶	—, —	S-FORWARD current file very fast	X	S-FORWARD current file
◀◀	—, —	S-REWIND current file very fast	X	S-REWIND the current file
■	—	Stop status	Stops recording	Stops playing
	—	Power OFF	Power OFF after recording	Power OFF
MODE	—	VOICE/AM/FM/MP3	X	VOICE/AM/FM/MP3
	—	USA/EUROPE/RADIO AREA SETTING	X	
TIMER	—	Checks the TIME and sets the timer for a future recording	X	X
	—	Modifies the TIME Setting	X	X
A-B	—	Selects from the external/ internal memories	X	Repeats the playing section between A-B
REC	—	Recording	Stop recording for a while	X
REPEAT	—	Change the repeat setting	X	Change the repeat setting
ERASE	—	Deletes the current file (push erase to confirm when blinking)	X	X
	—	Deletes all files (push erase to confirm when blinking)	X	X
EQ	—	Checking Remain Time	Check Remain	X
	—	Changing Bit-rate(32/16Kbps)		X
REMAIN	—	Shows remaining record time in Voice mode	Shows remaining record time in Voice mode	X
VOL		VOLUME( + )( - )	VOLUME( + )( - )	VOLUME( + )( - )
HOLD		ON/OFF	ON/OFF	ON/OFF

## Radio YourWay™ Series



### ● AM/FM Radio MODE (RADIO/KEY Operation)

Buttons	Key Operations	Receiving	Upon Recording
▶	—	PRESET the station	X
TIMER	—	Checks TIME and reserved settings	X
	—	Sets and modifies TIME	X
VOL+		VOLUME +	VOLUME +
VOL-		VOLUME -	VOLUME -
HOLD		ON/OFF	ON/OFF

#### Note

The earphone plays the role of the antenna in the FM Radio.  
If the earphone wire is longer, receiving sensitivity is improved.

### ● MP3 FILE MODE (MP3)

Buttons	Key Operations	Upon Stopping	Upon Playing
▶	—	Play the current file	Pauses the file
▶▶	—	Move to the next file	Begins to play the next file
◀◀	—	Moves to the previous file	Plays the previous file
	—		If key held down more than 5 seconds, goes to the beginning of the file
▶▶	—	S-FORWARD current file very fast	S-FORWARD current file
◀◀	—	S-REWIND current file very fast	S-REWIND current file
■	—	Stop	Stops playing file
	—	Power OFF	Power OFF
MODE	—	VOICE/AM/FM/MP3	VOICE/AM/FM/MP3
TIMER	—	Checks TIME	X
	—	Modifies TIME Setting	X
A-B	—	Selects from the external/internal memory	Repeats playing section between A-B
REPEAT	—	Changes repeat setting	Changes repeat setting
ERASE	—	Deletes the current file	X
	—	Deletes all files	X
EQ	—	ROCK/CLASSIC/NORMAL/POP/LIVE	ROCK/CLASSIC/NORMAL/POP/LIVE
VOL+		VOLUME +	VOLUME +
VOL-		VOLUME -	VOLUME -
HOLD		ON/OFF	ON/OFF

 
 


## Radio YourWay™ Series

### 7) Timer and recording

You need to set the current date and time prior to initiating a recording.

- ① Press and hold the TIMER Button while the player is stopped.
- ② When you hold the TIMER Button, the day will be flickering and then if you press ►► or ◀◀ you can change the day. Push the PLAY Button to set and now the window displaying the time will also be flickering. If you press ►► or ◀◀ you can change the hour, press PLAY again to set and do the same thing to change the minute and press PLAY again to set.

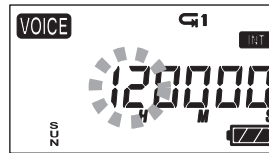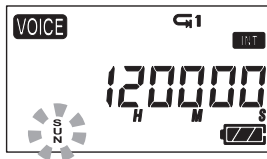

- ③ When the time setting is completed, you may return to the initial screen by pressing the STOP button.
- ④ To check the time, press the TIMER button, the current time (hour/minute/second) will display, and if you want to change the time, you may change the day/hour/minute by pressing and holding the TIMER Button.

#### ● How to Record

When you are in VOICE/AM/FM Mode, you may record using the RECORD Button.

- ① Select the mode by pressing the MODE Button.  
(When you are in the AM/FM Mode, the frequency currently received is recorded).
- ② Press and hold the RECORD (REC/STOP) Button for about 1 second with the internal microphone toward the sound source.  
The recording is initiated and a red light indicating recording turns ON.
- ③ To stop recording, press the STOP button.

- ※ Once recording is initiated, you may not stop recording for the first Five (5) seconds.
- ※ The recording is automatically recorded in the next available slot.
- ※ When recording for a long time, replace the battery with a new one.
- ※ Check the capacity of the battery prior to recording.


## Radio YourWay™ Series

 
 
 


### Note

Perform a test recording to avoid any errors while recording.  
If the battery is completely run down during a recording, the message "low batteries (BAT)" will display on the screen and the power will be automatically shut OFF.  
Replace the batteries with new set.


### ● Monitoring a Recording

You may listen to what is being recorded by connecting an earphone.



# Radio YourWay™ Series
 
## 8) External Memory

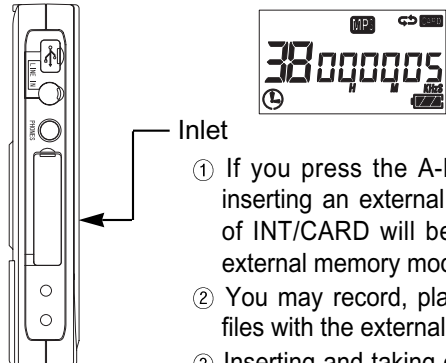


Inlet

A-B Mode Conversion Display

- ① If you press the A-B Button in the stop status after inserting an external memory card, the display screen of INT/CARD will be converted and the internal and external memory mode will be separated.
- ② You may record, play, save from the PC and transfer files with the external memory.
- ③ Inserting and taking out an external memory card must be performed only when the player is stopped.

**Note**

 - Only insert a memory card when the unit is off, or a malfunction may occur
- The external memory is compatible with an SD/MMC-CARD only.
- If you take out the battery or external memory during recording or playing back, it may cause a lost file or malfunction.  
Take out the battery only after stopping the player and take out or insert the external memory only after turning-off the power.
- If the corresponding file exceeds the recording capacity or it does not have any room left for the recording, the recording will not be available.  
When the memory is full, "FULL" message will be displayed.
- Recording in the MP3 or H/D mode is not available (Only playback is available in MP3).

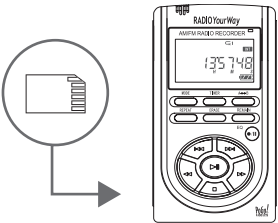




## Radio YourWay™ Series


 
### 9) Playback mode

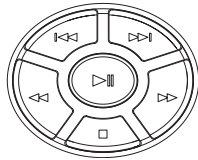

#### ● Playing a VOICE file

- ① Select the message you want to listen to.  
(Select the file you want 01-99 using ◀◀ ▶▶ Button.)
- ② You may play by pressing the PLAY (▶) Button.
- ③ Adjust the volume with the DIGITAL VOLUME button. Listen to music in quiet areas using the micro speaker.

Use the earphones to avoid interference or in noisy areas.

- ④ To stop, press the STOP (■) Button.  
If you want to PAUSE (||), press the PLAY Button during playback. PAUSE can be released by pressing the PLAY/STOP Button.
- ⑤ For the S-FORWARD and S-REWIND function, press the (◀◀ ▶▶) button. You may stop this function by pressing the PLAY (▶)/STOP (■) Button.
- ⑥ You may select and play the next or previous file during playback using the ◀◀ ▶▶ Button.

※ If the battery is completely run down while playing, a message "BAT" will flicker and automatically disappear after the warning. Replace the battery with a new one.

#### ● Playing MP3 files

- ① Using the MODE Button, select the MP3 Mode.
- ② If there is no music downloaded, the message "NO.IF" displays on the LCD.
- ③ If you download a music file (MP3) via the USB, the file will be saved in the MP3 Mode and you may play it using the PLAY Button.

#### ● S-FORWARD and S-REWIND

Selectively play the next file or previous file during playback using ◀◀ ▶▶ Button. If you press the ◀◀ ▶▶ Button during the playback of a file, S-REWIND/S-FORWARD is initiated at a speed



## Radio YourWay™ Series

of about 10 seconds per second.

 
※ Used to fast-forward or rewind a specific section.

If you press the ◀◀ ▶▶ Button when the player is stopped, (showing the file number) S-REWIND/S-FORWARD is initiated at a faster speed of about 1 minute per second. Pressing ◀◀ will S-REWIND from the end of the file (Exp a 1 hour file will rewind from 1:00:00 → 59:00:00 etc). Pressing ▶▶ will S-FORWARD from the beginning of the file. (Exp a 1 hour file will fast-forward from 0:00:00 → 0:01:00 etc)

※ Press PLAY to STOP and play the desired section.

### ● Resume Function

While listening to a file, press and hold the STOP(■) Button (this will turn the unit off) when you power on the unit again (pressing PLAY▶, the file will continue (resume) to play from the section you left off.

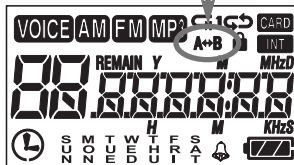

### ● Repeat playing in the VOICE Mode

### ● Repeat playing in the MP3 Mode

You may set the repeat functions by pressing the REPEAT Button during playback.

NOR: Plays and stops all music

NOR(1): Plays and stops only one music file(1) ALL: Repeats playing music

ALL: Keeps playing all music in order

※ This only works with one file at a time.

※ The section repeat is done the same way for ALL files.


● Repeat a Section A↔B

 
 
If you want to repeat playing a specific section, press the A-B button to select the beginning of that section and then press A-B again to select the end of that section. The selected section will continue repeating until you push A-B or PLAY.

● Equalizer Functions

When playing MP3 files, you may play according to genre using the equalizer functions NORMAL, ROCK, LIVE, CLASSIC and POP.

You may set the equalizer functions when the player is stopped using the EQ Button.

At this time, the message "NOR, ROCK, LIVE, CLA and POP" displays on the LCD.





## Radio YourWay™ Series

### 10) Erasing files

※ Deleting is only available when the player is stopped.

#### ● Deleting a Message One by One

- ① Select the file to delete using the ◀◀ ▶▶ Button.
- ② If you press ERASE, "ERASE" will be flickering on the LCD and the message to be deleted is displayed for confirmation.  
While the message "ERASE" is flickering, press the ERASE Button again to delete the message.  
If the message is deleted, the number displayed on the LCD will be forwarded to the next file.

※ While the message "ERASE" is flickering, if you press any button, the erase function is cancelled.

※ Note: Once a message is deleted, it is not recoverable.

#### ● Deleting all Files

- ① Select the files to delete using the MODE Button.
- ② If you press and hold the ERASE Button for longer than 5 seconds, the "AL.ERASE" will be flickering.  
If you press the ERASE Button again at this time, all files will be deleted.
- ③ You may delete the information in the MP3 Mode the same way.  
Deleting HD files is only available using the PC-APPLICATION after connecting your PC with the USB connection.

#### Note

If you use up (full) the memory by using the hard disk function, No recording capabilities will be available. Do not turn off the power or take out an external memory card while deleting files. It may cause a malfunction.

## Radio YourWay™ Series

 


### 11) Reserved Recording


- ※ To set a reserved (future) recording, the TIME Setting must be set.  
If you press the TIMER Button, the time (Hour/Minute/Day) displays.  
If the time setting is done, the correct Day/Hour/Minute/Second will appear on the display screen.

To change it:

1. Press and hold the TIMER Button while the player is stopped.
2. When you hold the TIMER Button, the day will be flickering and if you press ►► or ◀◀ you can change it. Push the PLAY Button to set and the window displaying the time will also be flickering. If you press ►► or ◀◀ you can change the hour, press PLAY to set and do the same to change the minute and press PLAY to set.

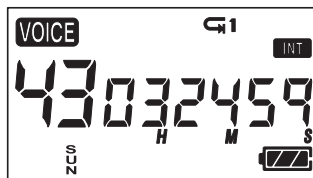

Example of Displaying the Time

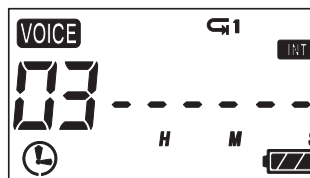 

Example of Displaying the Reserved Recording

- ※ Make sure you are in the desired mode to set a reserved (future) recording and/or tuned to the desired AM/FM station prior to setting a reserved (future) recording.

3. After the time setting is done, if you press the TIMER Button once, the time displays and if you press the TIMER Button twice, the reserved recording screen appears. (AM/FM/VOICE mode only)  
The minute needle clock indicator and setting channel should be flickering.  
Press ◀◀ ►► to select the file number and then push PLAY.  
Now the days of the week will flicker. Use ◀◀ ►► to select the desired day and press PLAY.
4. After selecting the day set the hour by using ◀◀ ►► and pushing PLAY (same as before) to select the desired hour (do the same for minutes).




## Radio YourWay™ Series

 After the minutes are set, the start time will flicker but you will be setting the ending time now. Set the hour by using ◀▶ and pushing PLAY (same as before) to select the desired hour (do the same for minutes). When you finish, you will see the main screen and your unit is ready to record on the selected day(s) & time(s).


(It will seem like you are changing the start time when setting the ending time but trust us you are setting the ending time)

A start and ending time setting requires 4 PLAY presses.

<Example- 1 start hour + 1 start minute + 1 ending hour + 1 ending minute = 4>

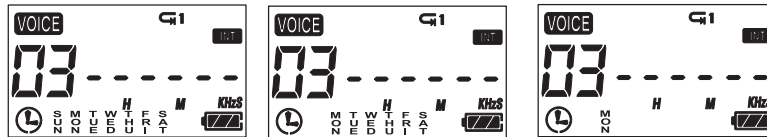

 5. 1) The reserved recording is initiated at every Nth time of every day
- 2) The reserved recording is initiated at every Nth time on Monday - Friday
- 3) The reserved recording is initiated on a certain day of every week  
You select using ◀▶ and confirming is done using ▶.
6. After setting the day, set the hour and minute
7. And then, set the hour and minute ending time.

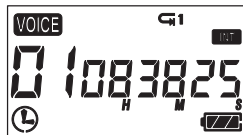

Once END Setting is done, the TIMER icon displays and the recording is automatically initiated at the designated time.

- ※ You may set up to 10 reserved recordings for all the sections in AM/FM/VOICE. It is set the same way described on the last page. A reserved recording is automatically initiated even when the power is OFF. (Timer function)
- ※ The reserved recording may be canceled by pressing ERASE Key and modified by resetting on the reserved channel.
- ※ The cancellation during set-up is done by STOP Key.

## Radio YourWay™ Series

 


### 12) Line in

- Connecting an External Microphone
  - Plug a pre-amplified microphone in the line in terminal of the body.

※ When an external microphone is connected to the line in, the built-in microphone is not operational.

- Connecting to External Devices
  - You may record from almost any device using the line in and audio cable.
- Connecting to a stereo
  - When recording from the line in of the voice recorder, connect the audio cable to the line in of the recorder and to the headphone jack of the output device.

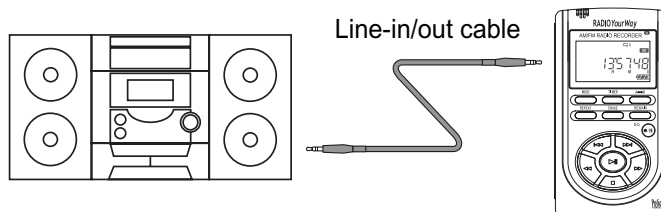

### Note

#### How to Connect to an audio source

- ※ When connecting to an external device, make the connections with the power OFF.
- ※ Before connecting to any external device, carefully read the manual of the external device
- When recording from an external device, record after connecting the audio cable to this device and decreasing the volume of the external device.
- To record in the external device, play this device and initiate the recording in the external device at the same time. (Refer to your devices user manual)  
(This timing may be different depending on each device, so make a test recording prior to performing an actual recording).



## Radio YourWay™ Series

### 13) AM/FM Radio

When listening to the FM Radio, use earphones. They act as the antenna. You can also plug an antenna in the headphone jack of the player and use the speaker.

It is very convenient for you to listen to a broadcast using the AUTO SEEK Function. After selecting the radio mode, if you press and hold **▶▶◀◀** for about 1 second, it will stop at an audible broadcast channel. This saves time in unfamiliar areas. After finding a station, AUTO SEEK will stop. When using AUTO SEEK to find a station, a precise TUNNING may not be available, please perform a fine adjustment using the REW or FF KEY.

#### ● How to Save a Channel

 
 
- ① Convert to AM/FM mode by pressing the MODE Button.
- ② The frequency will display on the LCD. Select the frequency using **◀◀▶▶**.
- ③ Press the PLAY Button, a file number (01-10) will be flickering on the display screen. Select a channel (01-10) using the **◀◀▶▶** Button and PRESS PLAY to select that channel. The selected channel will be saved. (01-10)
- ④ You may save up to ten channels the same way.

#### Confirming the saved channel

If you press the **◀◀▶▶** Button, the saved channel and frequency is displayed. You may select a channel using the **◀◀▶▶** Key. In this mode, if you press the **◀◀▶▶** Button, you will go back to the frequency (FR) selection mode.

#### ● How to Record a Radio Broadcast

- ① Select the broadcast channel you want to record (same as Radio Channel Setting)
- ② Record by pressing the RECORD Button. The recording will be saved in the voice folder and in the empty portion just after the last recorded message. You may check the file in the voice folder after you have finished the recording.

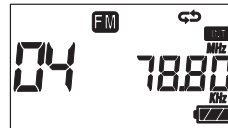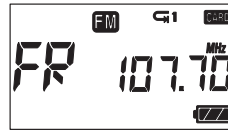

※ Please, refer to 11). Reserved Recording for more info.



## Radio YourWay™ Series



### ● AM/FM Reserved Recording

※ Make sure you are in tuned to the desired AM/FM station prior to setting a reserved (future) recording.

- ① Press the TIMER Button twice and the reserved recording screen appears. The minute needle clock indicator and setting channel should be flickering. Press **◀▶** to select the file number and then push PLAY. Now the days of the week will flicker. Use **◀▶** to select the desired day and press PLAY.
- ② After selecting the day set the hour by using **◀▶** and pushing PLAY (same as before) to select the desired hour (do the same for minutes). After the minutes are set, the start time will flicker but you will be setting the ending time now. Set the hour by using **◀▶** and pushing PLAY (same as before) to select the desired hour (do the same for minutes). When you finish, you will see the main screen and your unit is ready to record on the selected day(s) & time(s). (It will seem like you are changing the start time when setting the ending time but trust us you are setting the ending time) A start and ending time setting requires 4 PLAY presses.  
(Exp- 1 start hour + 1 start minute + 1 ending hour + 1 ending minute = 4)

※ You may set up to 10 reserved recordings for all the sections in AM/FM/VOICE.

### ● AM Region Setting

You can change RADIO YourWay's AM region setting from EUROPE (9) to USA (10) or USA (10) to EUROPE (9).

- ① In VOICE or MP3 mode, press and hold the MODE button.
- ② Press and hold the A-B button for about 3 seconds. (With the mode button still held down)
- ③ Let go of the A-B button and you should see RADIO YourWay display USA or EUROPE on the LCD.
- ④ Let go of the MODE button and use the A-B button to change between USA (10) & EUROPE (9).
- ⑤ Press PLAY to select the desired setting.

※ If you take too long to confirm your selections, you have to start the procedure all over again.



## **RYW - Explorer**

### 1) RYW-Explorer

**RYW-Explorer** is a management program for uploading and downloading files to RADIO YourWay™.

- You can (Download/Upload) MP3, RVF and other data files
- The Function of controlling files is the same as in window Explorer
- Plays MP3, WAV, RVF files and playing lists
- Inter-conversion function between RVF/WAV
- Convenient file transmission
- User-friendly interface

### System Requirements for RYW-Explorer

- Pentium 200MHz or faster
- 128MB RAM
- 600MB free hard driver space
- SVGA graphics adapter 256 colors or better
- Microsoft® Windows® 98SE/ME/2000/XP( NT not supported)
- USB port
- CD-ROM Drive
- Sound card, Speaker or Headphone

## RYW - Explorer

### 2) Quick Software & Drivers Installation Guide

 
Follow these instructions to load the software and drivers for RADIO YourWay™

1. Place the software CD label side up into your computer's CD-ROM drive. After a few seconds you should see the software selection screen.


#### Note

If the Installation Software screen does not load automatically, please click the START button in the bottom left corner of your computer screen and click RUN.


Type D:setup.exe and click ok  
(If your PC uses a letter other than "D" substitute that letter)

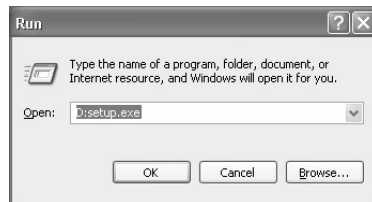

 You should now see the screen below (follow the wizard through)

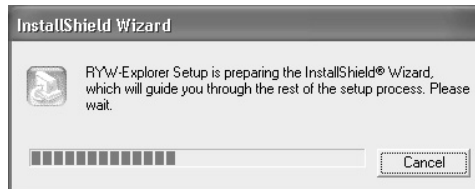

 
Once the screen below disappears, you have finished installing the software.

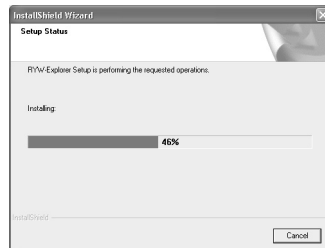



## **RYW - Explorer**

 Click finish and restart your computer.

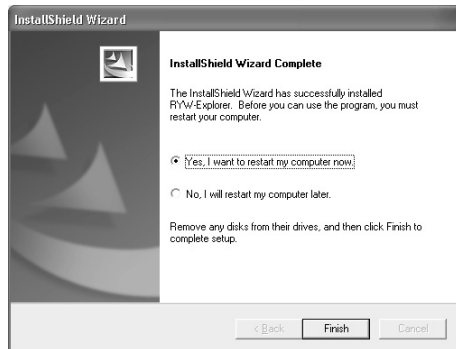

2. Plug in RADIO YourWay™ into your computer's USB port and power it on.

Tip> To power on your unit hold play for 2-3 seconds

Your computer now should display "Found new hardware" and RADIO YourWay™ should display USB on its LCD.

You should see the Found New Hardware screen below, just click next




# RYW - Explorer

 
Click continue anyways (Do not worry this will not HARM your PC we have tested this software to be compatible with your OS)



If you see the screen below click ok.

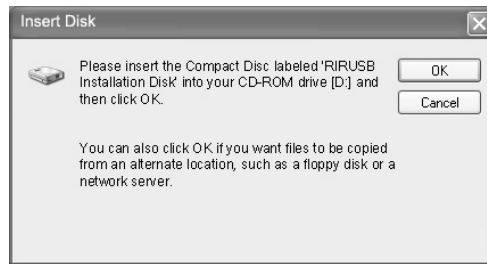

 When you see the screen below, type or browse to C:\windows\system32\drivers

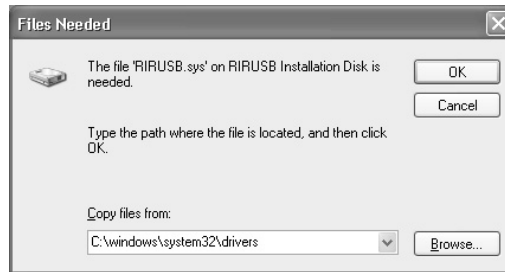


When you see the screen below, type or browse to C:\windows\inf and select retry



## RYW - Explorer

 When you see the screen below, type or browse to C:\windows\inf and select retry

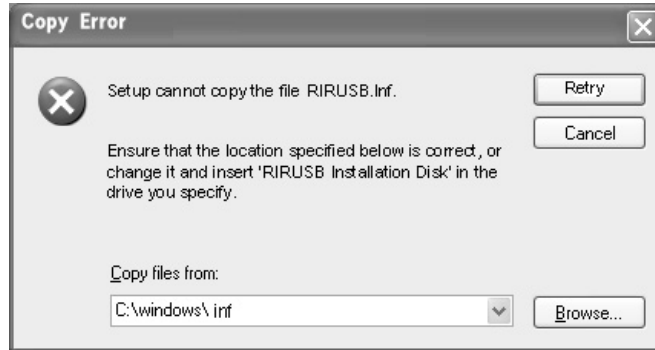

When you see the screen below click finish.



Click the Mp3 manager icon on your desktop (with the player plugged in)




RYW-Explorer


Congratulations your unit is installed and ready to use.

# RYW - Explorer
 
## 3) RYW-Explorer User Interface

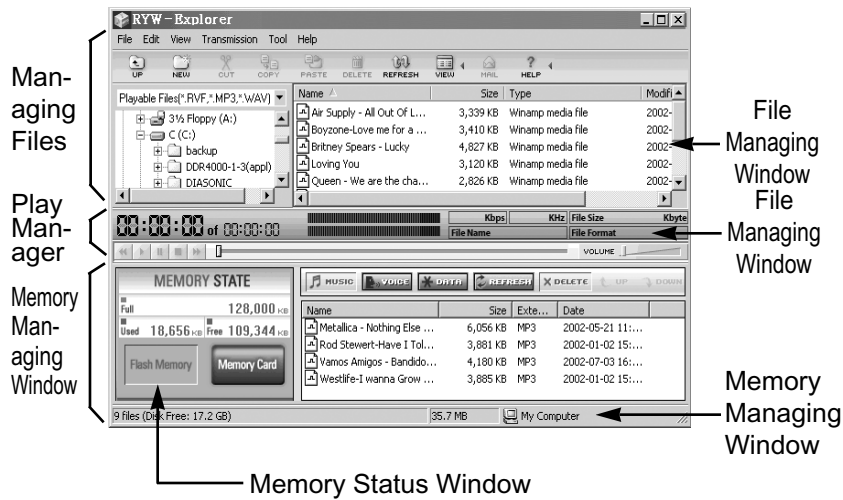

### (1) MP3, WAV and RVF Playing

 

After selecting an MP3, WAV or RVF File to play in the File Managing Window, if you double click the PLAY Button, playing will begin. At this time, you may check some information of the selected file like bit rate, sampling frequency, file size, file name, version of file and total running times of files. You may adjust the playing volume by moving the position bar of the 'VOLUME'.

You may move the playing position of the song clicking the white position bar with your mouse.




## RYW - Explorer
 
### (2) Managing MP3 and RVF Files



The file managing part of RYW-Explorer looks very similar to the one of Windows Explorer.

The hard disk, CD-ROM Driver and folder installed are in the system display on the window on the left and numbers of files in the folder displayed are on the window on the right.

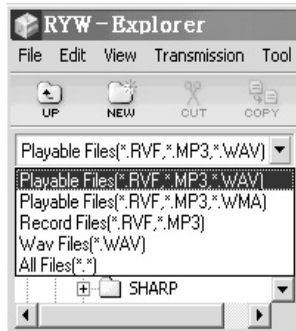

All files will display in the window and you may allow numbers of files (including MP3 Files) to be displayed on the window. You may use managing functions such as moving and copying just like you would with Windows Explorer. You may separately manage these RVF files after putting them in a folder using the file managing feature.

### (3) Memory Management








The lower part of RYW-Explorer is used to manage the flash memory and memory card inserted in RADIO YourWay™. If RADIO YourWay™ is properly connected; the window will show the status of the memory and files stored. MP3 files transmitted will appear on the lower right of the window and the size of the file and unused space will display as well.






## RYW - Explorer



### (4) Descriptions of Buttons

Buttons	Functions	Details
	Refresh	Reads and displays the new memory info on the screen.
	Transmit to RADIO YourWay™ (Download)	After selecting the files to transmit, if you press this button, the selected file will be transmitted (Download) to the memory.
	Transmit to the Computer (Upload)	Used to transmit (Upload) a file in the memory to the hard disk in the PC.
	Memory Card	Means a memory Card is used in the External Memory of RADIO YourWay™.
	Flash Memory	The flash memory of RADIO YourWay™.


※ Copyrighted MP3 Files can not be uploaded.

Buttons	Functions	Details
	Selects MP3	Used in MP3 Mode
	Selects the RECORD Folder	Used in Voice Record Mode Only a RVF recorded file, may be saved/produced
	Selects the HD Folder	Used in HD Mode (Removable Hard Drive)

 
You may divide and use the memories in 3 folders and play each folder in RADIO YourWay™.



# RYW - Explorer


## 4) Transmitting MP3 Files

Way of transmitting MP3 files to RADIO YourWay™ is very simple. As previously stated, select the file and Click and then click  to start downloading

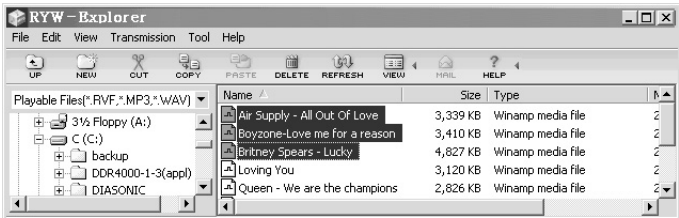
① Select the MP3 files to transmit in the file managing window.



 ② Click  button and then click  to start downloading.

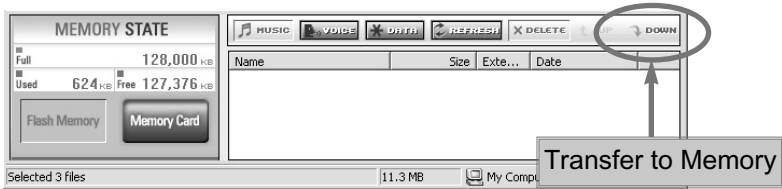

 ③ The selected MP3 File is being transmitted.

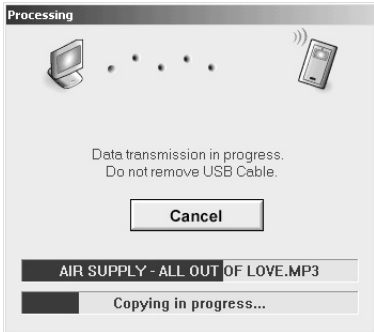


## RYW - Explorer


### 5) Transmitting RVF Files to the PC

Way of transmitting RVF files from RADIO YourWay™ to the PC is very simple. As previously stated, click **VOICE** in the folder managing window and then select the RVF files to transmit and click **UP**

 
- ① Click **VOICE** and then select RVF files to upload.

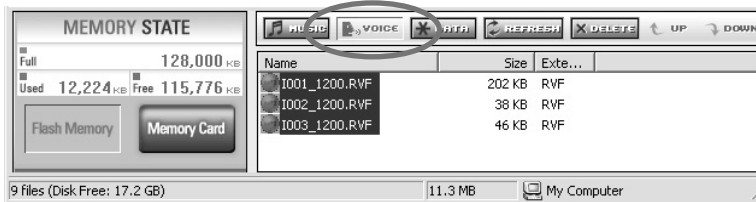

- ② Click **UP** to start uploading.

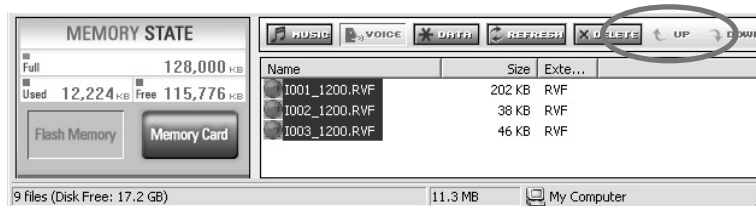 

 - ③ The selected RVF File is then transmitted to the PC.

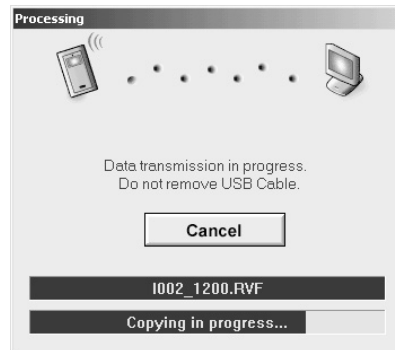


- When transmitting RVF files from the PC to RADIO YourWay™, the process after selecting the RVF **VOICE** file is the same as the one for transmitting MP3 Files.



## RYW - Explorer
 
### 6) Deleting MP3 & RVF Files

Deleting MP3 and RVF Files in RADIO YourWay™ is the same as deleting files in Windows Explorer. You may delete the files by selecting 'DELETE' after right clicking your mouse.

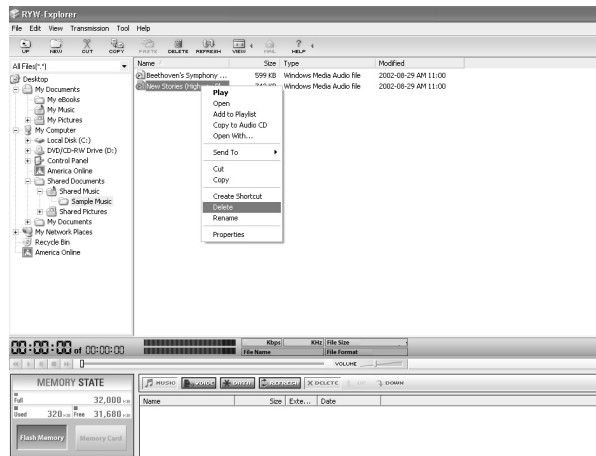

You may delete MP3 and RVF Files stored in the memory the following way:

- ① Select files to delete and then right click your mouse and select 'DELETE'

Name	Size	Ext...
1001_1200.RVF	202 KB	RVF
1002_1200.RVF	38 KB	RVF
1003_1200.RVF	46 KB	RVF

35.7 MB My Computer

RVF files

Name	Size	Ext...	Date
Air Supply - All Out Of L...	3,339 KB	MP3	2002-06-20 17:...
Boyzone-Love me for a ...	3,410 KB	MP3	2002-06-20 17:...
Britney Spears - Lucky....	4,827 KB	MP3	2002-06-20 17:...

35.7 MB My Computer

MP3 files

- ② Click **OK** to delete the file.



- ③ After few seconds, the file will be deleted from the memory.


## RYW - Explorer


 
### 7) Initializing the Flash Memory



Just like formatting a hard disk, you may initializ (format) the memory used in RADIO YourWay™. If you format the flash memory, all data stored in the memory will be lost.

- ① Select File → **Flash Memory Format** in the menu of RADIO YourWay™.

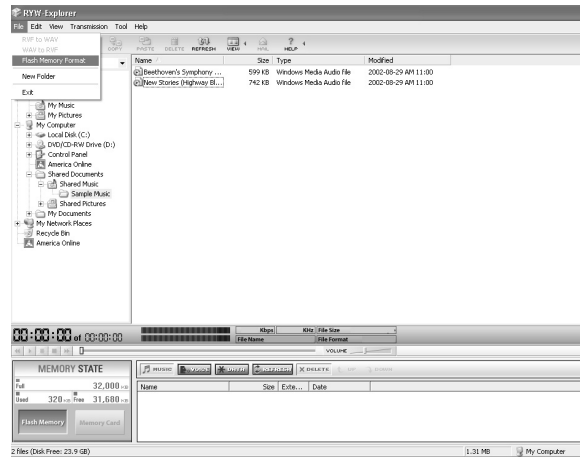

※ If you right click the mouse on any empty space in the flash memory managing window, you will see this **Flash Memory Format** command. This command also can be used to format the internal flash memory.

  - ② When a pop-up window prompting you to format appears, click the OK button and the formatting will be initiated.

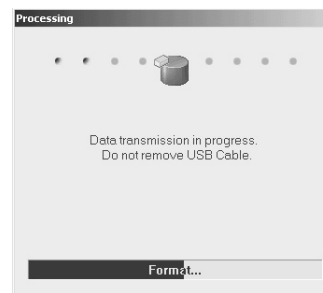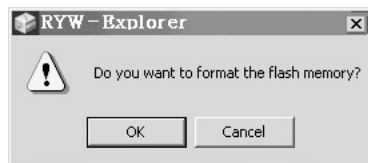



## General Specification

Model		PRY900M2
VOICE RECORD/ PLAY	Record Time	32Mbyte : 135Min/270Min
	Mode	ADPCM 32Kbps/16Kbps
	File	VOICE : 99 / MP3
	FM Record	FM band, Stereo (76MHz-108MHz) (USA 87.5-108)
	AM Record	530kHz - 1710kHz
	Timer Record	Date / Daily / Weekly
	Mic	Built-in Mic / Line (external Mic)
	Record Device	Built-in Flash Memory(32MB)/EXT(MMC/SD CARD 256)
	S/N	45db (62db input 1kHz , speaker output 50mW )
	Distortion	3% ±0.2 (62db input 1kHz , speaker output 50mW : HQ mode )
	Freq,Response	400Hz-3.2kHz(-6db)
	Output Power	Max 5mW(stereo earphone 16ohm)
	Repeat Play	One messages repeat/Cont. messages repeat / A-B repeat
FM RADIO (Stereo)	S/N	45db at 1mv 98.1MHz
	Distortion	0.8%(max) at 1mv 98.1MHz ?f=22.5kHz
	Freq,Response	350Hz ±30Hz,3kHz ±0.25kHz(150Hz-2.5kHz,60dbuV)
	Sensitivity	5uV at S/N=26db
	Frequency Cover Range	USA wide: 87.5-108MHz(Step:100KHz) EUROPE wide: 87.5-108MHz(Step:50KHz)
	Preset Mode	10 Radio station
AM RADIO	S/N	35db
	Distortion	3%
	Freq,Response	150Hz - 1.5kHz at 0db
	Sensitivity	68dbuV at 1000kHz
	Frequency Cover Range	USA wide: 530-1710MHz(Step:10KHz) EUROPE wide: 522-1620MHz(Step:9KHz)
	Preset Mode	10 Radio station
MP3	Bit/Rate	32Kbps-320Kbps(MPEG 1/2 LAYER 3)
	S/N	85db up(1kHz input 0db)
	Distortion	0.3% ±0.05 (1kHz input 0db)
	Freq,Response	20Hz-20kHz
	Earphone	Max 5mW(16ohm)
	EQ	EQ : NORMAL, ROCK, POP, CLASSIC, LIVE

## General Specification



MP3	Repeat Play	NOR/NOR1/1ALL/ALL
PC Interface	Communication	USB 1.1
	System	CPU200MHz more than, RAM 64MB more than, 20MB of free space
	OS	Windows 98SE, 2000, ME, XP
	Sound Card	Sound Blaster 16 compatible
	Display	640X480 more than
IN/OUT JACK	Ext Line in	φ3.5 plug-in power microphone(mini plug/stereo) IMP less than 3K Ω
	Earphone	φ 3.5 earphone(mini plug/stereo) IMP less than 16 Ω
	DC JACK	HOLE : φ2.75, Dia : φ0.65
	USB	Mini jack (PC : A TYPE)
SPEAKER	Diameter	28(IMP 8 Ω)
	Max output	80mw(volume max)
Volume		Digital volume (30 step)
Memory		Flash memory (32MB)
LED		Recording display LED(RED)
LCD (TN)	Mode	VOICE/AM/FM/MP3
	Messages	01-99(INDEX)
	EQ	NOR ,ROC ,POP ,CLA, LIV
	Repeat	NOR/NOR1/1ALL/ALL
	Clock	CLOCK,SUN,MON,TUE,WED,THU,FRI,SAT
Adaptor		DC3V/200mA(CE,CUL,T,FCC)
Key Function		FF/PLAY/STOP/REW/F.SEARCH/R.SEARCH/REC/REPEAT/ MODE/ERASE/EQ/A-B/TIMER/VOL+/VOL-
Power Requirement		3V , LR03 , tow alkaline battery("AAA" size or UM-4 )/NiMH 1.2V x 2
Battery Life	MP3 PLAY	Approx. 13hour during the mp3 play(earphone output: volume middle position)
	VOICE PLAY	Approx. 13hour during the voice play(earphone output: volume middle position)
	RADIO PLAY	Approx. 11hour during the radio play(earphone output: volume middle position)
	RADIO/ VOICE REC	Approx. 9hour during the radio play(earphone output: volume middle position)
Accessory		Connecting cable for external equipment(1) / application CD(1) / Neck strap(1) / stereo earphone(angle type)(1) / EXT ANT(1) / AAA battery(2) / USB cable (1) / manual (1)
Size		98.5 X 18 X 55



## Warranty

- If any defect or error occurs, stop using the product and contact the shop you purchased or **Pogo! Products, Inc.**, General Directory Number: (714) 671-1854
- **Warranty (Warranty Regulation)**  
 Pogo! Products guarantees a free repair or service for a period of one year from the original date of purchase only.  
 If any defect or error occurs during the warranty period, please contact us.  
 A dated order/receipt is **REQUIRED** for all warranty claims.  
 Ensure the above information is provided and if it not, consult with the shop you purchased to obtain it.

### (Free Repair or Service)

- A. This product is manufactured under a strict quality control and inspection process.
  - B. If any defect or error occurs under normal operation, in accordance with the caution or notes in this manual during the warranty period, you are entitled to a free repair or exchange from our company.
  - C. The free repair/service does **NOT** include shipping charges.
3. Even during the warranty period, you will be charged for the following defect/damage or error:
    - 1) Without a dated purchase order/receipt.
    - 2) If the original date of purchase is passed the warranty period or the dated purchase order/receipt is modified in any way.
    - 3) For any defect or damage resulting from misuse, abnormal use, abnormal condition, improper storage and/or exposure to direct sunlight or moisture.
    - 4) For any defect or damage resulting from any unauthorized modification or repair.
    - 5) For any defect or damage resulting from disasters such as fire, air pollution, earthquake or war.
    - 6) For any defect or damage resulting from a leak of the battery.
    - 7) Consumable such as battery.
  4. The warranty is valid only for service in the USA.



## Warranty



### (Caution Upon Shipping or Transporting)

Upon shipping or transporting the product, please be careful about the following:

1. Enclose the original dated purchase order/receipt with the product during the warranty period.
2. Avoid damage to the product during shipping/transportation using proper packing materials.  
The customer shall bear the cost of shipping/transportation.
3. Use registered and/or insured mail to prevent a loss.

- If any defect occurs during the use of this product, contact the shop you purchased or **Pogo! Products, Inc.**,
- Replacement, repairs (charge/free) or refunds must be in accordance with our policy and can be found at:  
<http://www.pogoproducts.com/support.html>
- If you have any further questions about this product, please contact **Pogo! Products, Inc.**,



**PoGo! Products, Inc.**,  
590 W. Central Ave Suite E  
Brea, CA 92821  
**Phone: 714-671-1854**  
**[www.pogoproducts.com](http://www.pogoproducts.com)**

The warranty may be used only in the USA. Please keep your dated purchase order/receipt safely as it is required for any warranty service.

