

Type ES76()

7.6-Meter ESA



7.6-Meter Earth Station Antenna

Table of Contents

Introduction	<i>Introduction</i>	3
	<i>Proprietary Data</i>	4
	<i>Information and Assistance</i>	4
	<i>Notice</i>	4
	<i>Technical Assistance</i>	4
How to Use This Manual	<i>Overview</i>	5
	<i>Content</i>	5
Getting Started	<i>Overview</i>	6
	<i>Warnings</i>	6
	<i>Recommended Tools</i>	7
	<i>Parts Verification</i>	8
	<i>Reporting Equipment Loss or Damage</i>	8
	<i>Reporting Visible Loss or Damage</i>	8
	<i>Reporting Concealed Damage</i>	8
	<i>Inventory Equipment Received</i>	8
	<i>Returning Equipment</i>	9
Installation Procedures	<i>Overview</i>	10
	<i>Foundation Preparation</i>	10
	<i>A-325 Tensioning</i>	11
	<i>Tripod Ground Mount Assembly</i>	12
	<i>Azimuth Beam Assembly</i>	12
	<i>Support Legs Assembly</i>	13
	<i>Panning Frame Assembly</i>	16
	<i>Elevation Jackscrew Assembly</i>	23
	<i>Azimuth Jackscrew Assembly</i>	25
	<i>Mount Assembly</i>	25
	<i>Reflector/Backstructure Installation Drawing (239501)</i>	30
	<i>Reflector/Backstructure Installation Drawing (239908)</i>	37
	<i>Theodolite & Alignment Installation Drawing (239611A)</i>	44
	<i>Subreflector and Subreflector Strut C-Band Installation Drawing (239906)</i>	50
	<i>Subreflector and Subreflector Strut Ku-Band Installation Drawing (239909)</i>	52
Operation	<i>Overview</i>	54
	<i>Acquiring A Satellite</i>	54
	<i>Subreflector Adjustment</i>	58
Preventive Maintenance	<i>Overview</i>	59
	<i>General Cleaning</i>	59
	<i>Electrical Parts</i>	59
	<i>Mechanical Parts</i>	60
	<i>Inspection</i>	60
	<i>Local Control/Motor Drive Controller</i>	60
	<i>Antenna</i>	61
	<i>Drive System Voltage and Current Checks</i>	63
	<i>Preservation of Component Parts</i>	65
	<i>Aluminum Parts</i>	65
	<i>Galvanized Surfaces</i>	65
	<i>Lubrication</i>	65
	<i>Jackscrews/Motors</i>	66
	<i>Gear Motor/Housing Fill Drain Requirements</i>	66

7.6-Meter Earth Station Antenna

Introduction

Like all Andrew earth station antennas, the 7.6-Meter Earth Station Antenna provides high gain and exceptional pattern characteristics. The electrical performance and exceptional versatility provides the ability to configure the antenna with your choice of linearly- or circularly-polarized 2-port or 4-port combining network. That versatility is provided at the time of initial purchase, as well as in the future, as your satellite communication requirements evolve.

The aluminum reflector is precision formed for accuracy and strength requiring minimal assembly. The reflector assembly is 25-feet (7.6-meters) in diameter and segmented in a sixteen piece configuration to reduce shipping volume and facilitate transport to remote sites. Reflector panels are chromate converted and painted with a highly reflective white paint.

The versatile tripod mount can be purchased with either manual or motorizable capabilities. The tripod mount features 180 degree azimuth coverage in three continuous 120 degree overlapping ranges and executes 90 degree continuous elevation adjustment. This large adjustment range provides non-critical foundation orientation and the ability to view geostationary satellites from horizon-to-horizon, from any location worldwide.

The motorizable tripod mount features self-aligning bearings for the elevation pivots, resulting in "zero" backlash. This mount can be operated manually, but has the ability to be upgraded for motorized operation, including steptracking/Smartrack™ applications. The motorizable mount type is indicated by the **ES76** or **ES76HS** letters within the antenna type number. The addition of the letter "HS" within the antenna type number indicates that the mount includes High-Speed azimuth/elevation machine jackscrews, instead of corresponding azimuth/elevation strut assemblies. The azimuth/elevation jackscrews are equipped for integration with the optional motor drive systems. A cross-axis grounding kit is supplied with each mount to ensure electrical interconnectivity of the complete structure.

The aluminum enclosure and hot-dipped galvanized steel mount maintain pointing accuracy and ensures durability and reliability. The antenna and standard manual mount with enclosure will survive 125 mph (200 km/h) wind, in any position of operation, without damage or permanent deformation in moderate coastal/industrial areas. Severe conditions require additional protection.

Andrew provides a complete line of available options, including motor drive systems (with power interfaces addressing domestic and international standards), remote micro-processor antenna control for motor drive systems, pressurization equipment, and inter-connecting HELIAX® cables and waveguide.

Proprietary Data

The technical data contained herein is proprietary to Andrew Corporation. It is intended for use in operation and maintenance of Andrew supplied equipment. This data shall not be disclosed or duplicated in whole or in part without express written consent of Andrew Corporation.

Information and Assistance

Andrew Corporation provides a world-wide technical support network. Refer to the technical assistance portion of this manual for the contact numbers appropriate to your location.

Notice

The installation, maintenance, or removal of antenna systems requires qualified, experienced personnel. Andrew installation instructions have been written for such personnel. Antenna systems should be inspected by qualified personnel to verify proper installation, maintenance and condition of equipment.

Andrew Corporation disclaims any liability or responsibility for the results of improper or unsafe installation and maintenance practices.

All designs, specifications, and availabilities of products and services presented in this manual are subject to change without notice.

Copyright © 2005, Andrew Corporation

Technical Assistance

24-hour Technical Assistance

For technical assistance, call the following numbers at anytime.

Call From	Call To	Telephone	Fax
North America (toll free)	U. S. A.	1-(800)-255-1479	(800)-349-5444
Any Location (International)	U. S. A.	(708)-349-3300	(708)-349-5410

Customer Service Center

The Andrew Customer Service Center gives you direct access to the information and personnel service you need, such as the following:

- Place or change orders
- Check price and delivery information
- Request technical literature

You can call from any of the following:

Call From	Telephone	Fax
North America	1-800-255-1479 (toll free)	1-(800)-349-5444 (toll free)
United Kingdom	00-800-0-255-1479 (toll free)	00-800-0-349-5444 (toll free)
Australia	0011-800-0-255-1479 (toll free)	0011-800-0-349-5444 (toll free)
China	00-800-0-255-1479 (toll free)	00-800-0-349-5444 (toll free)
New Zealand	00-800-0-255-1479 (toll free)	00-800-0-349-5444 (toll free)
Hong Kong	001-800-0-255-1479 (toll free)	001-800-0-349-5444 (toll free)



How to Use This Manual

Overview

The scope of this manual is intended to provide station personnel with the base installation, operation, and maintenance requirements necessary for a 7.6-Meter C-, X- or Ku-Band Earth Station Antenna. This manual provides a convenient reference for authorized operator/service personnel requiring technical information on general system or specific subsystem equipment.

The tables and figures presented in this manual are used as communication aids for the installation, operation, and maintenance of the 7.6-Meter Earth Station Antenna. These tables and figures instantly convey messages, as well as make the procedures easier to understand. This manual uses tables and figures for the following references:

- **Tables** The tables allow you to locate information quickly and easily.
- **Drawings** The drawings supplement the installation instructions by using a combination of graphics and verbiage to assist you in simplifying complex procedures and clarifying components.
- **Photographs** The photographs compliment the installation instructions by providing actual examples of the steps being performed, which allow you to view the installation in concrete form.

Content

The manual is divided into five distinct sections, each dealing with a specific technical topic relating to either system or component subsystem information. The sections contained in this manual are described and listed under the following technical headings:

- **How to Use This Manual** Describes the manual's purpose, content, and communication aids. Additionally, this section lists the related documentation for the 7.6-Meter Earth Station Antenna.
- **Getting Started** Provides the preliminary information needed to perform a successful installation. This section should be reviewed prior to the installation. The warnings, recommended tools, parts verification, instructions on reporting lost or damaged equipment, and installation checklist are located in this section.
- **Installation Procedures** Provides the procedures for the different phases of a 7.6-Meter Earth Station Antenna base installation. This section will help you easily find requirements for an individual task, as well as displays the sequence for each task execution.
- **Operation** Describes the controls, functions, and general operating procedures required for proper operation of the 7.6-Meter Andrew Earth Station Antenna.
- **Preventive Maintenance** Describes preventive maintenance procedures that are required to maintain proper functional operation of your new Andrew Earth Station Antenna.

Getting Started

Overview

The installation, operation, and maintenance of the 7.6-Meter Earth Station Antenna requires qualified and experienced personnel. Andrew installation, operation, and maintenance instructions are illustrated for such personnel. Additionally, the antenna should be inspected by qualified personnel to verify proper installation, maintenance, and condition of equipment as described in Preventive Maintenance. The basic equipment and accessories are either manufactured or design controlled by Andrew Corporation.

The prerequisite information necessary for the 7.6-Meter Earth Station Antenna can be found in this section. Furthermore, this section should be reviewed BEFORE performing the installation, operation, or maintenance. Warnings, recommended tools, and the antenna parts can be verified and/or determined with such a review.

Warnings

When installing the 7.6-Meter Earth Station Antenna, be conscious of the warnings presented below. For further information or clarification of this information, contact the Customer Service Center. The warnings are as follows:

1. Electrical shock from voltages used in this antenna system may cause personal injury or death. Prior to making any electrical connections or performing maintenance or repair, ensure that the power is removed. Electrical connections should be made only by qualified personnel in accordance with local regulations.
2. Installation of antennas may require persons to work at elevated work stations. Whenever persons are working at eight or more feet above the ground and not on a guarded platform, they should wear safety belts with at least one (preferably two) lanyards.
3. Never stand underneath any object while it is being lifted.
4. Always wear a hard hat, especially if someone is above you.
5. Make sure no person is in or under the reflector while it is being lifted or positioned; personal injury can result if the reflector assembly falls.
6. Personnel should never be hoisted in or out of the reflector by the crane; personal injury may result.
7. Andrew earth station antennas supplied to standard product specifications will survive 125 mph winds in any operational position in moderate coastal/industrial areas. Severe conditions require additional protection. Should it be expected that winds will exceed 125 mph, it is recommended that Andrew antennas be steered to specific azimuth and elevation orientations to minimize wind forces upon the structure and thereby increase the probability of survival.
8. It is recommended that all cross-axis waveguide and coaxial cables are secure such that high winds will not cause excessive flexing. Position the antenna to an elevation of 90 degrees. The azimuth jackscrew should be placed in the center of its travel.
9. When the antenna is transmitting, severe eye injury or injury to other parts of the body can result from exposure to radio frequency (RF) energy. The antenna must be turned off before entering the area in front of the reflector and near the feed.

NOTE: Failure to follow an installation procedure could result in damage to equipment or personal injury.

Additional warnings will be displayed throughout this manual for your awareness. These warnings can be identified in warning boxes as shown in the following sample.



Andrew disclaims any liability or responsibility for the results of improper or unsafe installation, operation, or maintenance practices.

Recommended Tools

Andrew supplies all appropriate hardware/parts required for the installation of your 7.6-Meter Earth Station Antenna. All tools necessary for the installation process should be provided by the installation crew. Andrew recommends the following tools to be used for a proper installation of the 7.6-Meter Earth Station Antenna.

Tool	Size	Quantity
Open End or Combination Wrenches	5/16 Inch	2
	7/16 Inch	2
	9/16 Inch	2
	7/8 Inch	2
	3/4 Inch	2
	1/2 Inch	2
	1-1/4 Inch	1
Crane	15 Ton Minimum Capacity, extended end	1
Nylon Web Slings (2000 pound breaking strength)	3 Inch by 14 Foot	2
Rope or Cord (2000 pound breaking strength)	50 Foot	1
Shackles	5/8 Inch	2
Ladder	10 Foot Extension	1
Drive Sockets	1/16 Inch	1
	9/16 Inch	1
	7/8 Inch	1
	3/4 Inch	1
	1-1/4 Inch	1
Breaker Bar	1/2 Inch	1
Spud Wrenches	1-1/16 Inch	1
	1-1/4 Inch	1
Screw Driver	Standard	1
	Phillips	1
Allen Wrench	7/64 Inch	1
	3/16 Inch	1
	1/4 Inch	1
Tape Measure (or other measuring device)	Standard	1
Felt-tip Marker (or other marking device)	Standard	1
Hammer	Standard	1
Rubber Mallet	Standard	1
Pry Bar	Standard	1
Tin Snips	Standard	1
Safety Gloves (each installer)	Standard	1

Table 2-1. Recommended Tools

Parts Verification

Upon receipt of your order, the shipment should be verified to ensure that all parts have reached your site. This process should occur before the installation process begins.

Andrew Corporation thoroughly inspects and carefully packs all equipment before shipment. If you find that there are missing components, please refer to page 9 for step-by-step instructions on how to properly report the equipment loss.

When you have received your order, verify that all parts contained in the shipment correspond to the parts listed on your packing list.

Reporting Equipment Loss or Damage

If you find that there was damage caused to the equipment during the shipping process, a claim should be filed with the carrier. Follow the "Reporting Visible Loss or Damage" or "Reporting Concealed Damage" procedures when filing a claim with the carrier.

Reporting Visible Loss or Damage


Make a note of any loss or evidence of external damage on the freight bill or receipt, and have it signed by the carrier's agent. Failure to adequately describe such external evidence of loss or damage may result in the carrier refusing to honor a damage claim. The form required to file such a claim will be supplied by the carrier.

Reporting Concealed Damage

Concealed damage means damage which does not become apparent until the unit has been unpacked. The contents may be damaged in transit due to rough handling, even though the carton may not show external damage. If you discover damage after unpacking the unit, make a written request for an inspection by the carrier's agent, then file a claim with the carrier since such damage is most likely the carrier's responsibility.

Inventory Equipment Received

After opening your shipment, an inventory of the parts should occur immediately. Check each item received in your shipment against the packing slip included with the shipment. If any items are missing, please notify Andrew Corporation immediately by contacting the Customer Service Center.

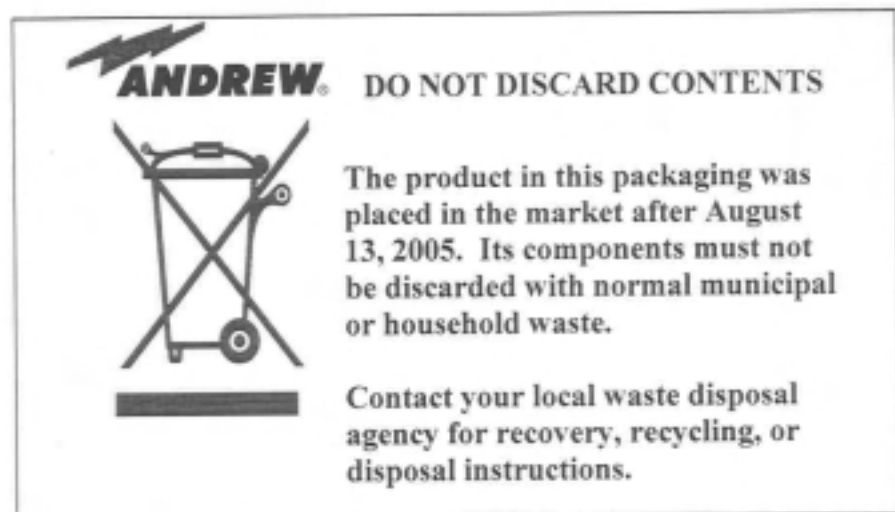

Returning Equipment

Andrew Corporation tries to ensure that all items arrive safe and in working order. Occasionally, despite these efforts, equipment is received which is not in working condition. When this occurs, and it is necessary to return the equipment to Andrew Corporation for either repair or replacement, return can be expedited by following the procedure listed below:

Step 1

Call the Andrew Customer Service Center and request a Return Material Authorization (RMA) number, as well as an address to forward the material to.

Step 2

Tag or identify the defective equipment, noting the defect or circumstances. Also, be sure to write the RMA number on the tag. It would be helpful to reference the sales order and purchase order, as well as the date the equipment was received.

Step 3

Pack the equipment in its original container with protective packing material. If the original container and packing material are no longer available; pack the equipment in a sturdy corrugated box, and cushion it with appropriate packing material.

Step 4

Be sure to include the following information when returning the equipment:

- Your Company Name
- Your Company Address
- City, State, and Zip Code
- Telephone Number
- RMA Number
- Problem Description
- Contact Name

NOTE: Absence of the RMA number will cause a delay in processing your equipment for repair. Be sure to include the RMA number on all correspondence.

Step 5

Ship the equipment to Andrew Corporation using UPS, U.S. Postal Service, or other appropriate carrier; freight prepaid and insured. The material should be forwarded to the address given by the Andrew contact in Step 1.

Installation Procedures

Overview

This section provides installation procedures for the 7.6-Meter Andrew Earth Station Antenna. The installation procedures include instructions on the following antenna components:

- Mount
- Reflector
- Enclosure
- Reflector-to-Mount Assembly
- Subreflector
- Feed System (C-, X- and Ku-band)

Foundation Preparation

Before beginning the installation process on the ground mount assembly, ensure that the foundation has been prepared. Foundation specifications are provided by Andrew and may be used as a reference by civil engineering personnel when preparing the foundation for local soil conditions. These specifications are available before the shipment arrives by contacting the Customer Service Center or your Account Manager.

- Foundation should be dimensioned as detailed in Figure 1.
- Sweep foundation clear of any dirt or debris.
- To ensure smooth surface for mount, scrape foundation pads as shown in Figure 2.
- Studs should extend 3 in. above the ground and are 7/8 in. in diameter
- Apply stick wax to stud threads to ease later connections.

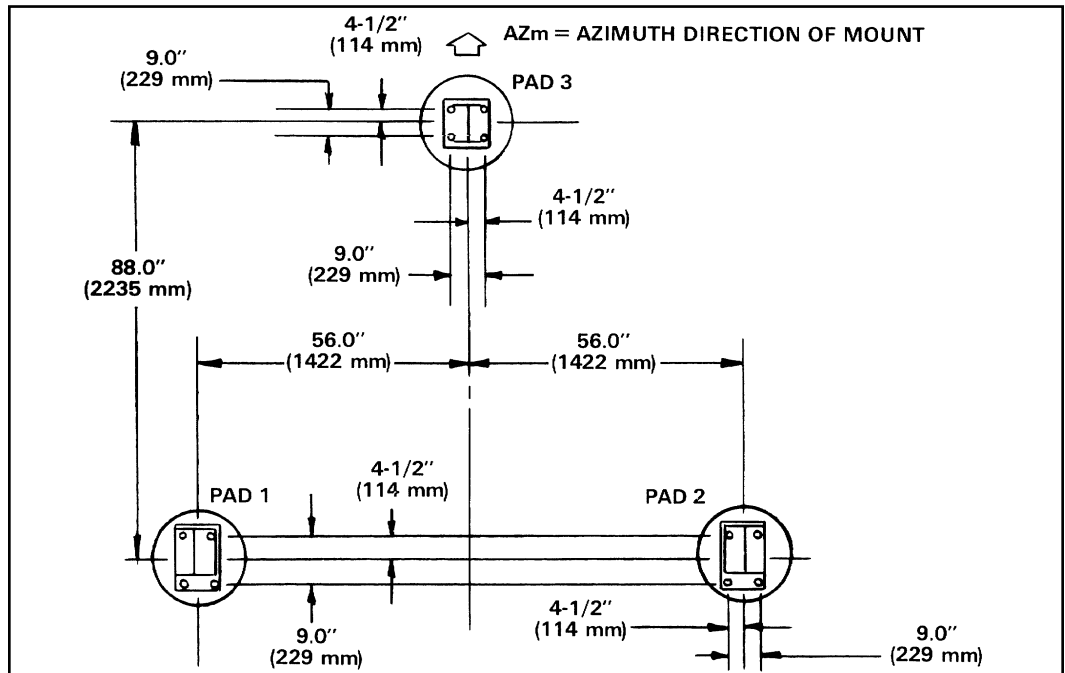


Figure 1



Figure 2

A-325 Tensioning

During the installation process, there are several references to the A-325 hardware tensioning procedure. The A-325 hardware must be properly tensioned to avoid slippage between bolted surfaces under high loads. Slippage can cause the corresponding assembly to move, causing antenna misalignment. When designated, the A-325 hardware should be tightened according to the following tensioning procedure.

NOTE: Tensioned bolts are for final connections only and should not be loosened for reuse.

Step 1

Lubricate the bolt threads with the provided stick wax to reduce friction.

Step 2

Insert the bolt, and add a flat washer—if required. **Do not** allow wax under the flat washer.

Step 3

Add the nut, and finger tighten.

Step 4

After the connections are complete, tighten the bolts until the surfaces are joined and the nuts are snug (for example, full effort of a person using an ordinary spud wrench). Do not proceed with Steps 5 and 6, unless the connection is final and is not intended to be loosened again.

Note: If the bolts are loosened after Steps 5 and 6, discard and replace with new hardware.

Step 5

Using a felt-tip marker, mark the nuts and the ends of the bolts with a straight line as shown in Figure 3-1a and Figure 3-1b.

Step 6

Tighten the nuts further with an extra long wrench until the nuts are moved 1/3 turn (120 degrees) as shown in **Figure 3-1a** for bolt lengths less than four diameters and 1/2 turn (180 degrees) as shown in **Figure 3-1b** for bolt lengths over four diameters.

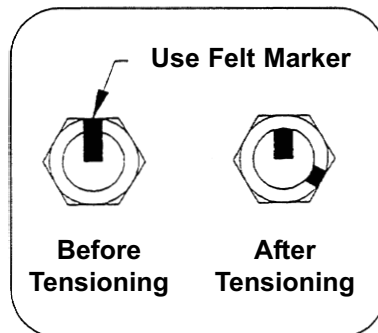


Figure 3-1a: A-325 Tensioning Procedure For bolts less than 4 diameters

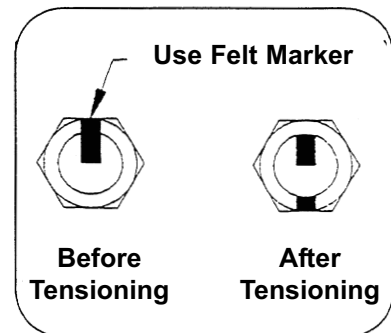


Figure 3-1b: A-325 Tensioning Procedure For bolts over four diameters

Tripod Ground Mount Assembly

Azimuth Beam Assembly

Step 1

The three-point mount is an elevation-over-azimuth mount optimized for geostationary satellite applications. The mount enables continuous elevation adjustment from 0 to 90°. Azimuth adjustment is $\pm 90^\circ$ and divided into three 120° ranges with 30° overlap. Follow the subsequent procedures for proper installation of tripod ground mount assembly.

All ground mount hardware is type A-325. Lubricate all A325 bolt threads with supplied stick wax. **Note:** Do not tighten hardware until ground mount installation is complete unless otherwise instructed.

Step 2

Attach 200056 and 200057 supports to upper portion of 201408 beam assembly as shown in Figure 3.

- Use 7/8 x 2-1/4 in (57 mm) hardware

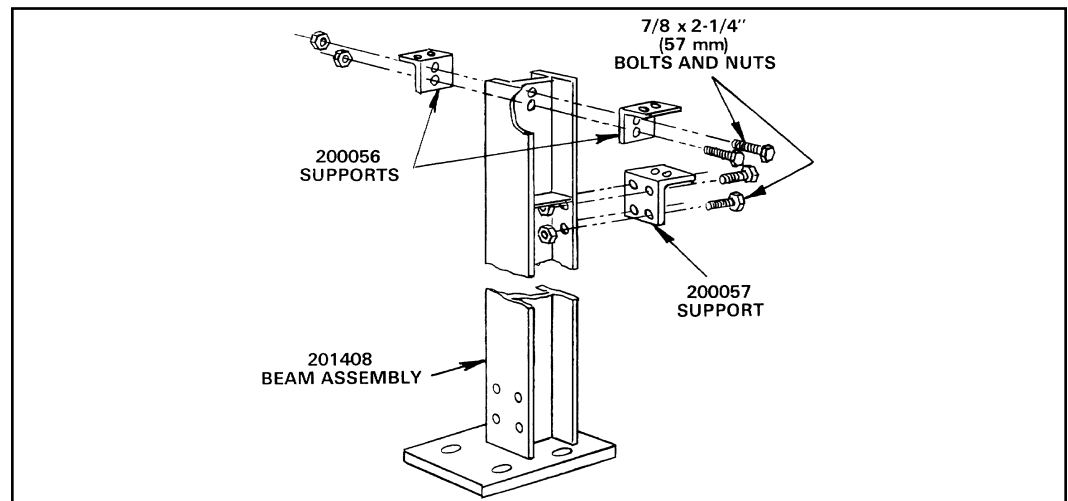


Figure 3

Step 3

Raise 201408 azimuth beam assembly and attach to front foundation pad as shown in Figure 4.

- Use 7/8 in. flatwashers and hex nuts

Note: Hex nuts and flatwashers supplied with 201630 anchor bolt kit

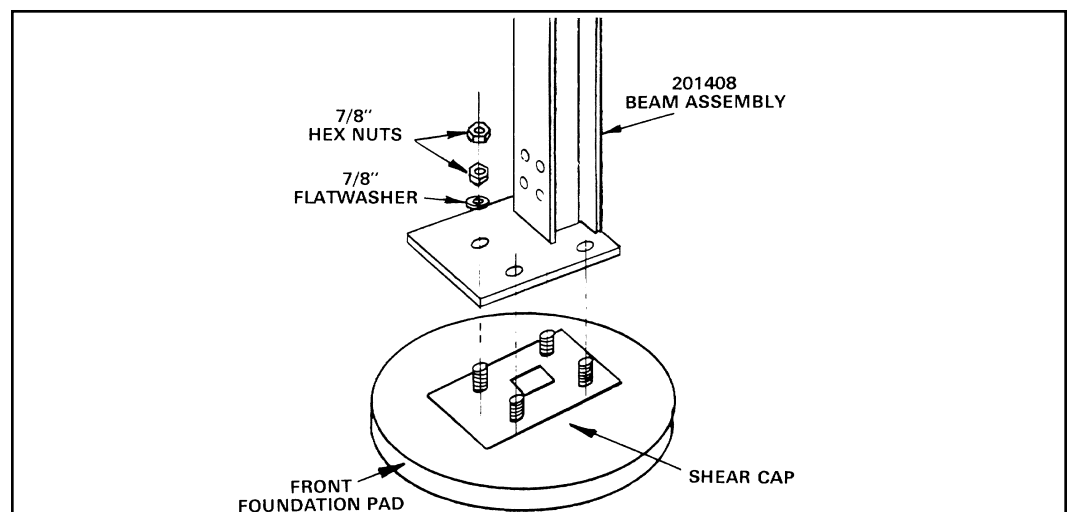


Figure 4

Support Legs Assembly

Step 1

Attach 201327A joint assembly to 201313A beam assembly as shown in Figure 5. Attach 200083 angles to 201313A beam assembly as shown in Figure 5.

- Use 7/8 x 2-1/4 in (57 mm) bolts and nuts for each connection

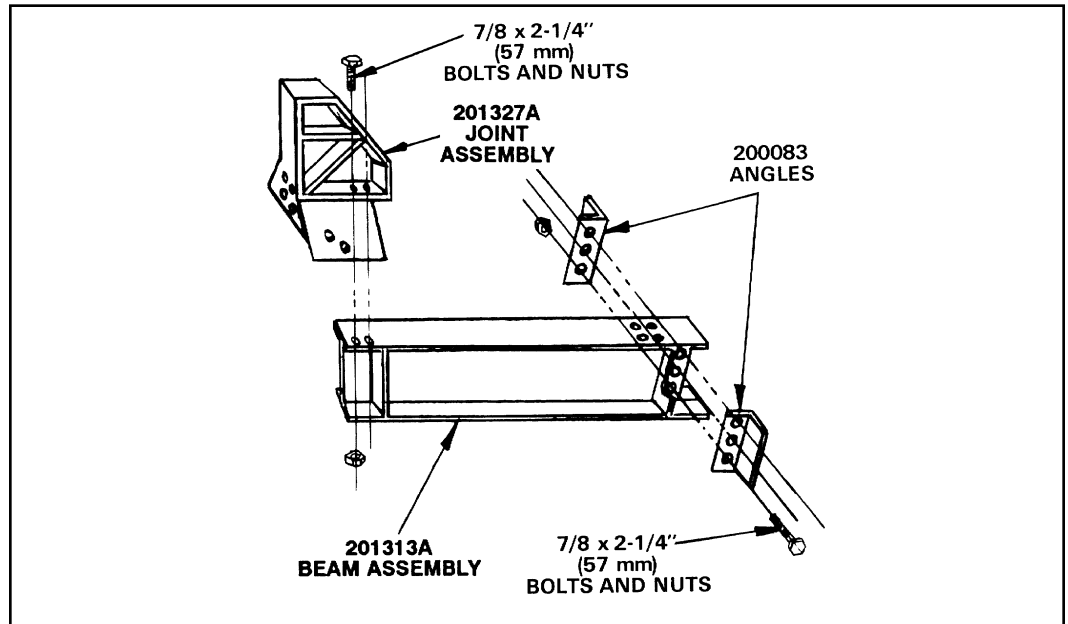


Figure 5

Step 2

Attach 200088A joint assembly to 201313A beam assembly as shown in Figure 6.

- Use 7/8 x 2-1/4 in (57 mm) bolts and nuts

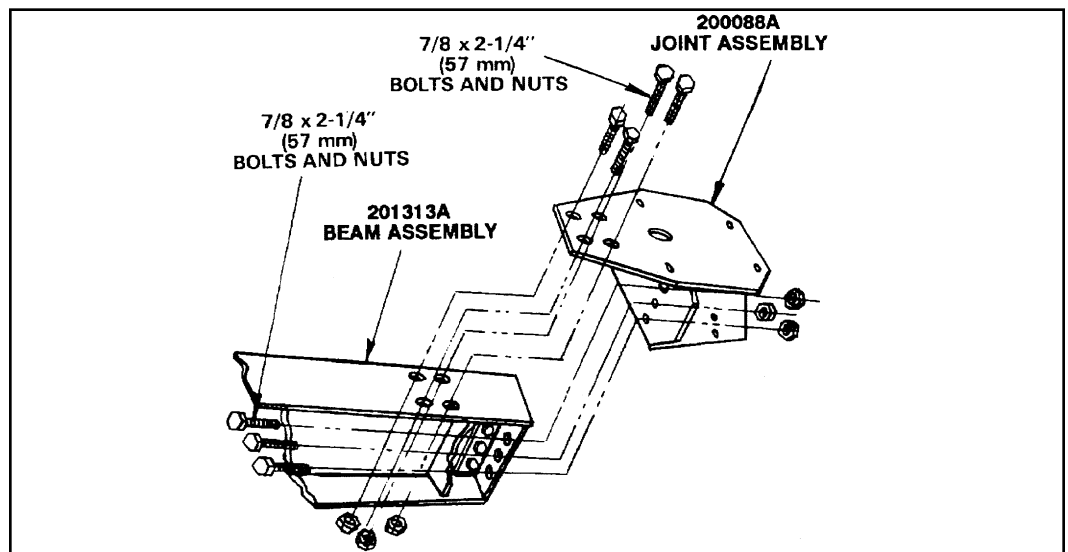


Figure 6

Step 3

Raise 201313A beam assembly to upright position and attach 201315 supports to 201327A joint assembly as shown in Figure 7.

- Use 7/8 x 2-1/4 in. (57 mm) bolts and nuts.
- Insert bolts from 201327A joint assembly to supports.
- Supports should be installed back-to-back with the flat of angle facing upwards.
- Tighten supports until assembly can support itself.



Figure 7

Step 4

Attach 201301/201302 rear pad assembly to 201315 supports as shown in Figure 8.

- Use 7/8 x 2-1/4 in. (57 mm) bolts and nuts
- Insert bolt from inside of rear pad assembly to outside of support
- Supports should be installed back-to-back with the edges forward and the flats of angles facing rear



Figure 8

Step 5

Attach 201314 supports to 201301/201302 rear pad assemblies and 200884 joint assembly as shown in Figure 9.

- Use 7/8 x 2-1/4 in. (57 mm) bolts and nuts
- Insert bolt from inside of joint assembly to outside of support
- Supports should be installed back-to-back with the edges forward and the flats of angles facing rear



Figure 9

Step 6

Attach 201317 supports between angle pairs as shown in Figure 10. Select corresponding mounting holes so that 201317 supports are parallel to 201313A beam assembly.

- Use 7/8 x 2-1/4 in. (57 mm) hardware
- Supports attached with edges inward and flats facing up.

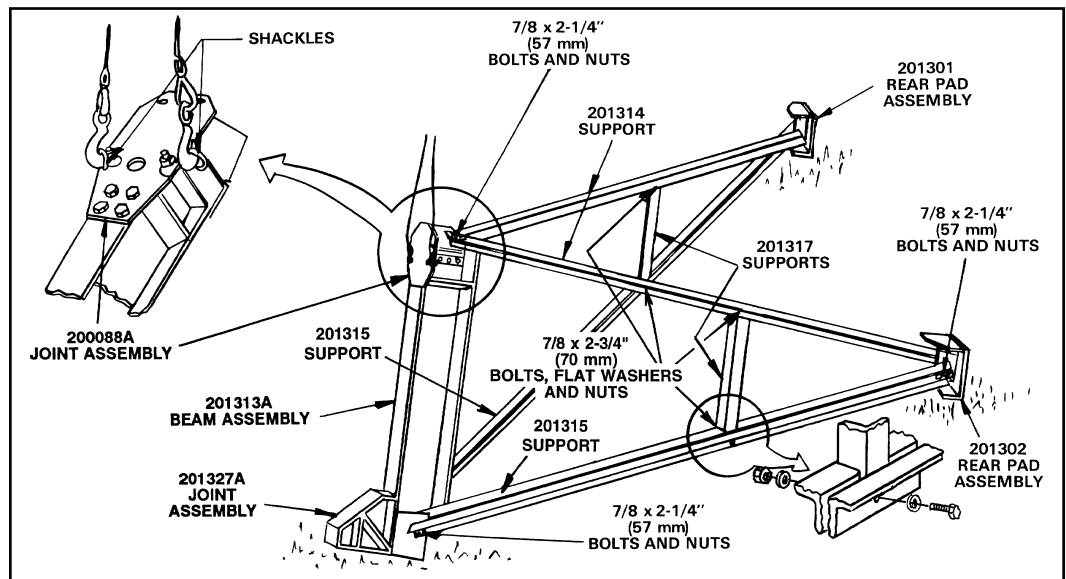


Figure 10

Panning Frame Assembly

Step 1

Attach 201487 panning frame to 221384 azimuth pivot assembly as shown in Figures 11 and 12.

- Use 7/8 x 2-1/4 in. (57 mm) hardware
- Bolts should connect from panning frame to pivot assembly



Figure 11

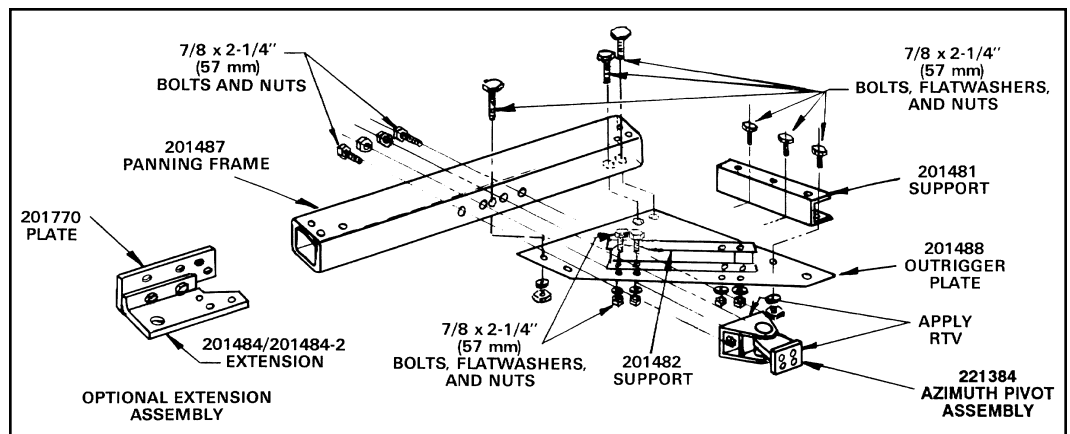


Figure 12

Step 2

Attach 221608 joint assemblies to panning frame as shown in Figures 13 and 14.

- Use 7/8 x 2-1/4 in (57 mm) hardware
- Insert bolts from panning frame to joint assembly



Figure 13

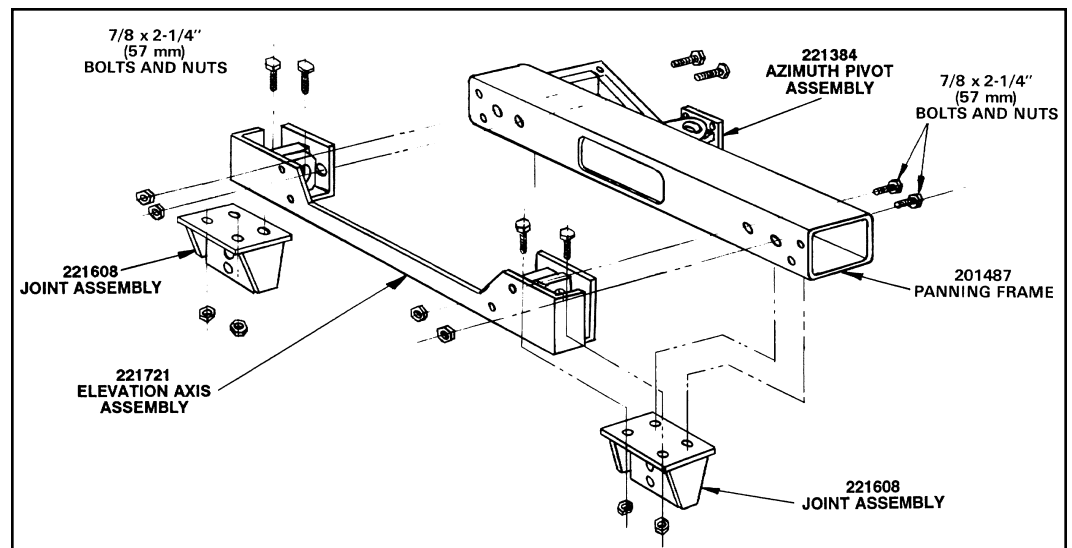


Figure 14

Step 3

Attach 201316 support pairs to 221608 joint assemblies as shown in Figure 15.

- Place supports back-to-back with edges out and flat of angle inward
- Install 45967 spacer at midpoints of support pairs
- Use 7/8 x 2-1/4 in (57 mm) hardware for each connection



Figure 15

Step 4

Attach 221345 azimuth pivot assembly to 201316 support pairs. Attach 201596 mounting plates to 201458 azimuth pivot assembly tab as shown in Figure 16.

- Use 7/8 x 2-1/4 in (57 mm) hardware for each connection
- Insert bolts from rear of pivot assembly to connect supports



Figure 16

Step 5

Attach 201770 plate connecting 201484/201484-2 extension assembly to 201487 panning frame as pictured in Figure 17.

- Use 7/8 x 2-1/4 in (57 mm) hardware
- Insert bolts from inside panning frame assembly

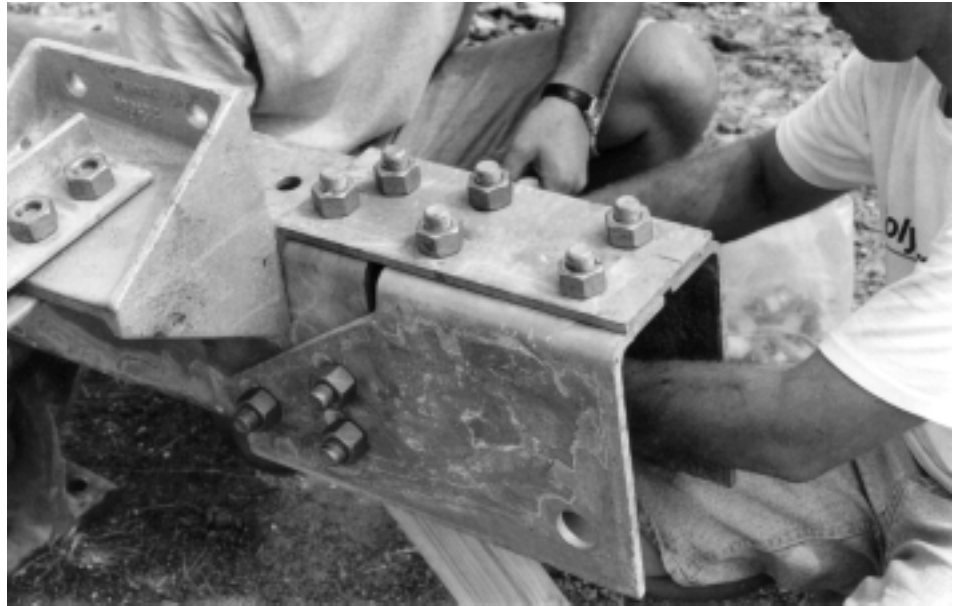


Figure 17

Step 6

Attach 201488 outrigger plate to opposite end of 201487 panning assembly. Attach 201481/201482 supports to outrigger plate as shown in Figure 18.

- Use 7/8 x 2-1/4 in (57 mm) hardware
- Insert bolts from supports to the outrigger plate



Figure 18

Step 7

Attach second 201488 outrigger plate to 201487 panning frame assembly as shown in Figure 19.

- Use 7/8 x 2-1/4 in (57 mm) hardware
- Insert bolts from inside assembly to outrigger plate



Figure 19

Step 8

Attach 221721 elevation axis assembly to 201487 panning frame assembly and 221608 joint assemblies as shown in Figures 20 and 21.

- Use 7/8 x 2-1/4 in (57 mm) hardware
- Insert bolts from elevation axis assembly to panning frame assembly and joint assembly



Figure 20

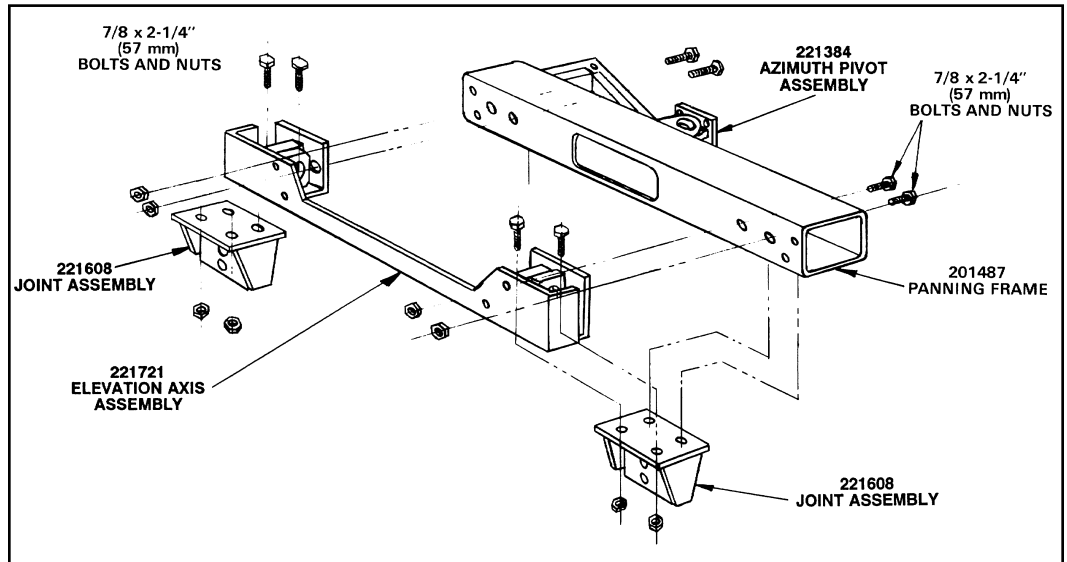


Figure 21

Step 9

Attach 301741/301742 tripod joint bracket to 221721 elevation axis assembly as shown in Figure 22.

- Use 7/8 x 2-1/4 in (57 mm) bolt, flatwasher under bolt and under nut, and nut
- Insert bolts from elevation axis assembly to tripod joint bracket



Figure 22

Step 10

Attach 300026 tripod channel legs to 301741/301742 tripod joint bracket as shown in Figure 23.

- Use 7/8 x 2-1/4 in (57 mm) bolt, flatwasher and nut
- Insert bolts from channel leg to joint bracket



Figure 23

Step 11

Attach 301725 tripod tube weldment to 300026 tripod channel legs as shown in Figure 24.

- Use 7/8 x 2-1/4 in (57 mm) bolt, flatwasher and nut
- Insert bolt from channel leg to tube weldment



Figure 24

**Elevation
Jackscrew
Assembly
Step 1**

Attach 301771/301736 elevation jackscrew assembly to 201596 mounting plates as shown in Figure 25. Tighten connection.

- Use 7/8 x 2-1/2 bolts and nuts



Figure 25

Step 2

Loosen rubber boot from end of jackscrew. Turn elevation drive screw to extend jack to dimension 67.7 in (1719 mm) as shown in Figure 26. Apply grease to screw shaft. Reattach rubber boot.



Figure 26

Step 3

Prop 301771/301736 elevation jackscrew up to align with 301725 tripod tube weldment as shown in Figure 27.



Figure 27

Step 4

Attach 301771/301736 elevation jackscrew to 301725 tripod tube weldment as shown in Figure 28.

- Use 7/8 x 5-1/4 (133 mm) bolt. Fasten with heavy hex nut and flatwasher according to A-325 procedure with the exception of tightening the nut 1/2 turn from snug condition. Tighten jam nut in accordance with A-325 procedure. Apply supplied Loctite to threads to act as locking nut.



Figure 28

Azimuth Jackscrew Assembly

Step 1

Insert 221923/223180 azimuth jackscrew tube into 221738 azimuth pivot assembly as shown in Figure 29. Insert jack carefully to prevent scratching jackscrew tube. **Note:** Ensure jackscrew assembly remains fully retracted at this time.

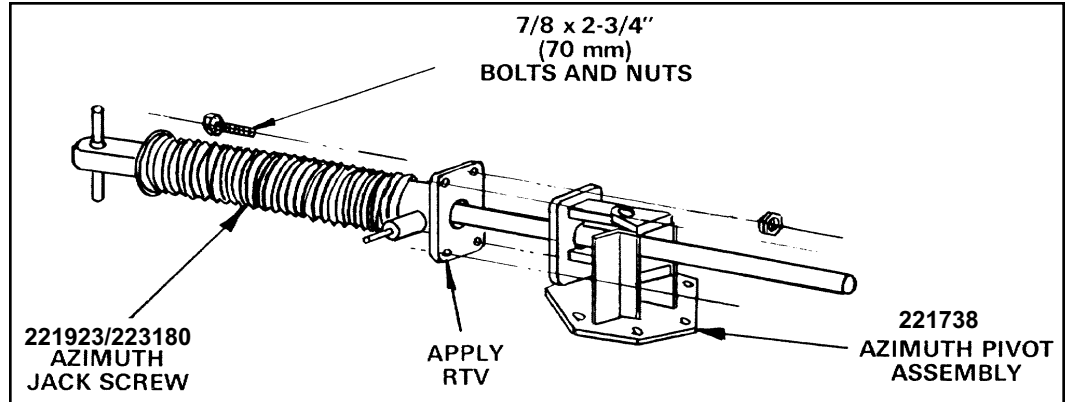


Figure 29

Step 2

Apply RTV to flange surface as shown in Figure 29. Fasten jack to pivot using 7/8 x 2-3/4 in (70 mm) bolts and nuts. Mounting hardware is included with corresponding jack assembly hardware kit.

Mount Assembly

Step 1

Attach shackles to beam assembly as shown in Figure 30.



Figure 30

Step 2

Lift support legs to azimuth beam assembly.

Step 3

Attach rear pad assemblies to rear foundation pads as pictured in Figure 31.

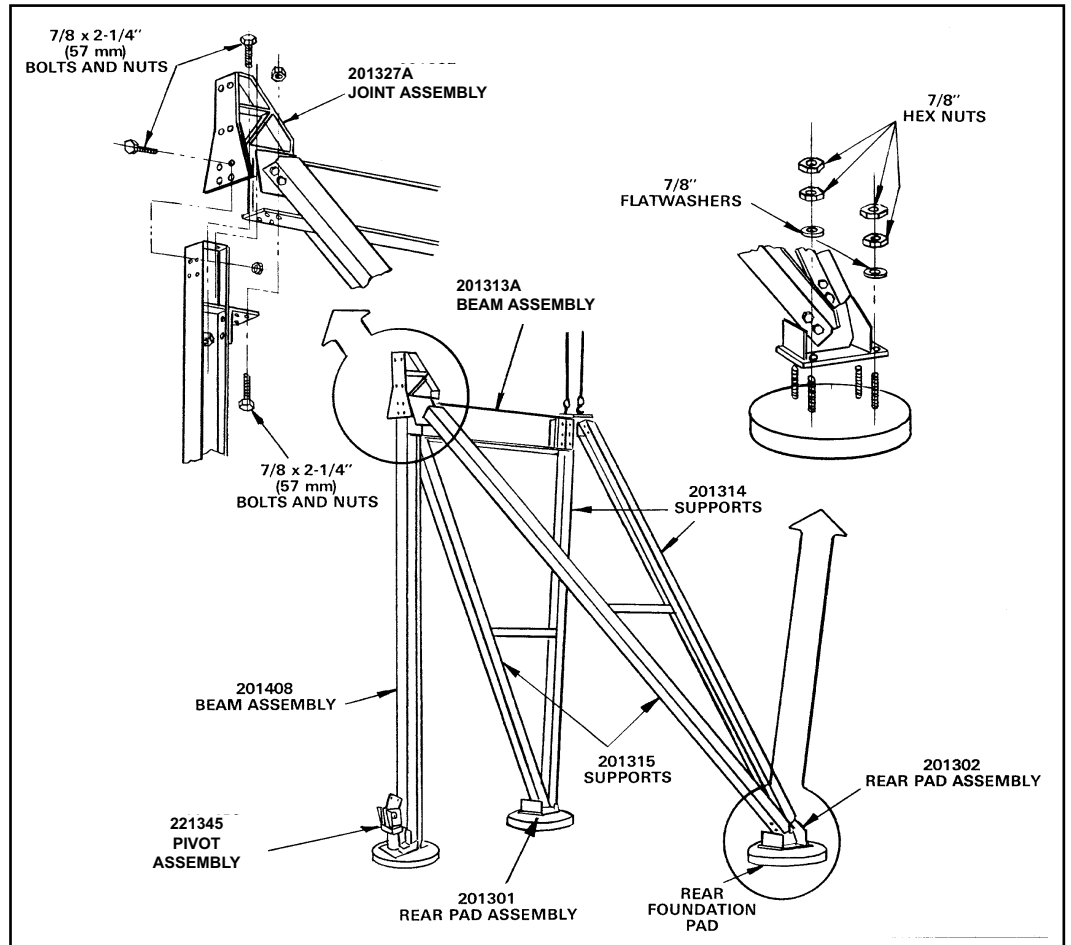


Figure 31

Step 4

Connect beam assembly using 7/8 x 2-1/4 in (57 mm) hardware. Tighten supports to beam assembly per A-325 tensing procedure.

Step 5

Hoist elevation jackscrew assembly to mount. Attach 221384 azimuth pivot assembly to 221608 joint assembly with 7/8 x 2-1/4 hardware from pivot assembly to joint assembly as shown in Figure 32.

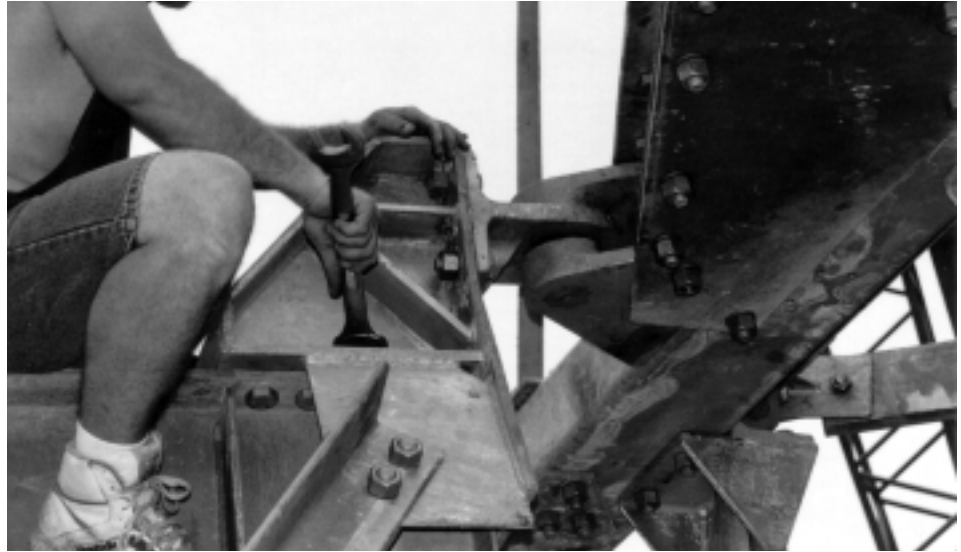


Figure 32

Step 6

Attach 221435 azimuth pivot assembly to 201408 beam assembly with a line of RTV around the plate and four 7/8 x 2-1/4 in (57 mm) bolts inserted from pivot assembly to beam assembly as shown in Figure 33.

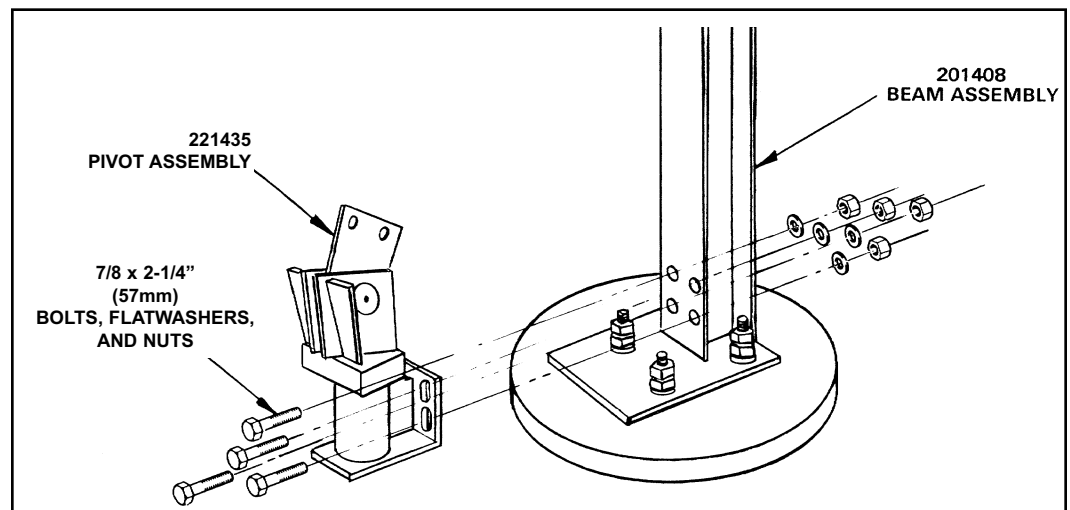


Figure 33

Note: If optional motor drive system is included, install motors at this point. Refer to installation instructions provided with motor kits.

Step 7

Refer to Figure 34. Position hoisting ropes on azimuth motor jack assembly so jack will not roll when hoisted. Attach one rope to motor frame next to gearbox to balance assembly. Tie up loose conduit before lifting jack.



Figure 34

Step 8

Refer to Figure 34. Position hoisting ropes on motor/jack assembly so jack will not roll when hoisted. Attach one rope to large motor frame next to gearbox to balance assembly; do not attach rope to small motor. Tie up loose conduit before lifting jack.

Step 9

Raise 221923/223180 azimuth jackscrew and attach 221738 pivot assembly to 201327A joint assembly with 1 x 2-1/2 in (63 mm) hardware. **Note:** Mounting position of azimuth pivot jackscrew assembly is dependent upon azimuth range requirements and corresponds with mounting position of 201488 outrigger plate or extension assembly.

Step 10

Extend jackscrew to meet outrigger assembly. Loosely re-attach outrigger plate to pin assembly in azimuth jackscrew as shown in Figure 35. **Note:** Realignment of panning frame/pivot assembly may be necessary to ensure proper alignment of azimuth jackscrew pin. Snug panning frame/pivot assembly hardware and fully extend azimuth jackscrew to ensure binding does not occur throughout entire azimuth pivot range.

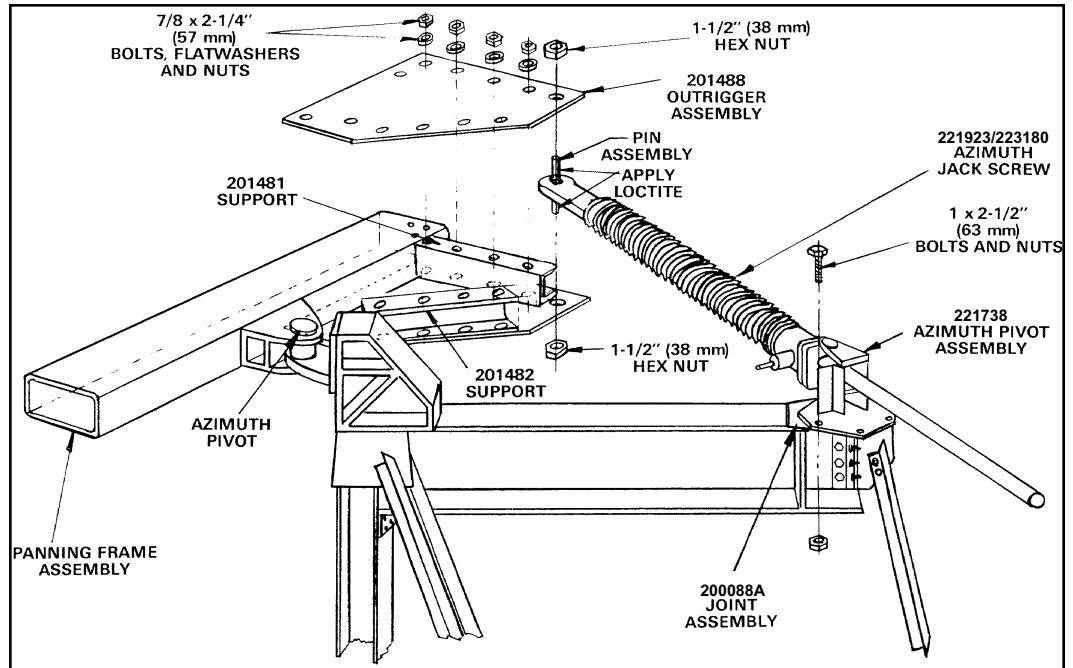


Figure 35


Step 11

Loosen both setscrews in upper and lower collars of pin assembly at end of azimuth jack. **Do not retighten these collars.** Apply supplied Loctite to pin threads and nuts. Attach 1-1/2 in (38 mm) hex nuts to top and bottom of azimuth jackscrew pin assembly and securely tighten mounting hardware using 6 foot (1.8 m) lever arm. Reattach rubber boot. Tighten an outrigger plate hardware.

The tripod ground mount assembly is now completed with the necessary operational essentials. All ground mount options have separate instructional bulletins located in the parts kit that contain the option.

The next step in the installation process is the reflector assembly. Proceed to the next page to begin installation of the reflector.

8	7	6	5	4	3	2	1																																																														
<p>NOTES: (UNLESS OTHERWISE SPECIFIED):</p> <ol style="list-style-type: none"> 1. REPLACE ALL BOLTS AND SHAP BOLTS 2. WASH AND OIL ALL CONTACT SURFACES 3. INSPECT FOR CORROSION AND DAMAGE 	<p>GENERAL</p> <p>READ THE INSTRUCTIONS THOROUGHLY BEFORE ASSEMBLY. FOLLOW THE SEQUENCES FOR PROPER ASSEMBLY AND OPERATION.</p> <p> THIS WARNING INDICATES THAT FAILURE TO FOLLOW THE PROPER PROCEDURES MAY DAMAGE THE ANTENNA AND/OR OTHER PROPERTY AND POSSIBLE INJURY TO CAUTION PERSONNEL.</p> <p>NOTICES</p> <p>THIS INDICATES INFORMATION THAT SHOULD BE READ BEFORE PROCEEDING.</p> <p>CAREFULLY REMOVE ALL PARTS FROM SHIPPING BOXES. THE CONTENTS SHOULD CORRESPOND WITH THE PARTS LIST. ANY DAMAGE OR MISSING PARTS SHOULD BE REPORTED IMMEDIATELY TO ANDREW.</p> <p>THE INSTALLATION, MAINTENANCE OR REMOVAL OF AN ANTENNA SHOULD BE PERFORMED BY PERSONNEL TRAINED IN THE PROPER INSTALLATION, MAINTENANCE AND CONDITION OF EQUIPMENT. ANDREW DISCLAIMS ANY LIABILITY FOR DAMAGE TO EQUIPMENT OR PERSONS OR PROPERTY DURING THE INSTALLATION OF MAINTENANCE PRACTICES.</p>	<p>1. USE FELT MARKER</p> <p>FIG. N</p> <p>FIG. L</p> <p>FIG. M</p> <p>FIG. K</p>	<p>TENSIONING PROCEDURES A-25S HARDWARE</p> <ol style="list-style-type: none"> 1. LUBRICATE BOLT THREADS WITH STEAK WAX (ITEM 28) TO REDUCE FRICTION DO NOT ALLOW WAX UNDER FLAT WASHER. 2. AFTER CONNECTIONS ARE COMPLETED, TIGHTEN BOLTS UNTIL PERSON USING DROPMAN SPUD WRENCH, DO NOT PROCEED WITH STEPS 3 & 4 UNLESS THE CONNECTION IS FIRM. IF BOLTS ARE LOBBERED AFTER REPEAT ALL STEPS. 3. MARK NUTS AND END OF BOLTS WITH STRAIGHT LINE, SEE FIGURE L. 4. TIGHTEN NUTS FURTHER WITH SPUD WRENCH OR SPUD WRENCH UNTIL NUTS ARE MOVED 1/2 TURN (60°/30°) FOR BOLT LENGTHS UP TO AND INCLUDING 4 DIMETERS; SEE FIGURE N 1/2 TURN (90°/45°) FOR BOLT LENGTHS OVER 4 DIMETERS; SEE FIGURE N. 	<p>UNPACKING:</p> <p>CHECK PARTS AGAINST THE PARTS LIST.</p>	<p>REVISIONS</p> <p>DATE APPROVAL</p> <p>DESCRIPTION</p> <p>REVISOR</p> <p>DATE</p> <p>APPROVAL</p>	<p>REV. 239500</p> <p>1</p> <p>1</p>	<p>REV. 239501</p> <p>1</p>																																																														
<p>TOOLS RECOMMENDED FOR PROPER INSTALLATION</p> <table border="1"> <thead> <tr> <th>QUANTITY</th> <th>DESCRIPTION</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>1/4 TON CRANE (SLOTTED)</td> </tr> <tr> <td>2</td> <td>5/16 HEX SOCKET (ALLEN) WRENCH</td> </tr> <tr> <td>4</td> <td>3/16 HEX SOCKET (ALLEN) WRENCH</td> </tr> <tr> <td>4</td> <td>1/4 HEX SOCKET (ALLEN) WRENCH</td> </tr> <tr> <td>2</td> <td>7/16 SOCKET</td> </tr> <tr> <td>2</td> <td>1/2 SOCKET</td> </tr> <tr> <td>2</td> <td>3/4 SOCKET</td> </tr> <tr> <td>2</td> <td>7/8 SOCKET</td> </tr> <tr> <td>2</td> <td>1 1/4 SOCKET</td> </tr> <tr> <td>2</td> <td>1 7/16 SOCKET</td> </tr> <tr> <td>2</td> <td>1/2 DRIVE BATCHET</td> </tr> <tr> <td>2</td> <td>1/2 DRIVE EXTENSION</td> </tr> <tr> <td>2</td> <td>7/16 COMBINATION WRENCH</td> </tr> <tr> <td>2</td> <td>1/2 COMBINATION WRENCH</td> </tr> <tr> <td>2</td> <td>9/16 COMBINATION WRENCH</td> </tr> <tr> <td>2</td> <td>3/4 COMBINATION WRENCH</td> </tr> <tr> <td>2</td> <td>7/16 COMBINATION WRENCH</td> </tr> <tr> <td>2</td> <td>1 1/4 COMBINATION WRENCH</td> </tr> <tr> <td>1</td> <td>1 1/4 SPUD WRENCH</td> </tr> <tr> <td>1</td> <td>3 FT NYLON CHOKER (3/8" DIA)</td> </tr> <tr> <td>1</td> <td>6 FT NYLON CHOKER (3/8" DIA)</td> </tr> <tr> <td>1</td> <td>PULLER HOIST/A TON</td> </tr> <tr> <td>4</td> <td>2x4x8 FT LUMBER (TEMPORARY SUPPORT)</td> </tr> <tr> <td>4</td> <td>5/8 SHACKLES</td> </tr> <tr> <td>4</td> <td>20 FT TAG LINE</td> </tr> <tr> <td>4</td> <td>18 FT STEEL TADEF</td> </tr> <tr> <td>4</td> <td>18 FT EXTENSION LADDER</td> </tr> <tr> <td>2</td> <td>25 FT EXTENSION WRENCH</td> </tr> <tr> <td>1</td> <td>8' ADJUSTABLE WRENCH</td> </tr> <tr> <td>4</td> <td>TEMPORARY WOOD SUPPORT BLOCKS</td> </tr> </tbody> </table>	QUANTITY	DESCRIPTION	1	1/4 TON CRANE (SLOTTED)	2	5/16 HEX SOCKET (ALLEN) WRENCH	4	3/16 HEX SOCKET (ALLEN) WRENCH	4	1/4 HEX SOCKET (ALLEN) WRENCH	2	7/16 SOCKET	2	1/2 SOCKET	2	3/4 SOCKET	2	7/8 SOCKET	2	1 1/4 SOCKET	2	1 7/16 SOCKET	2	1/2 DRIVE BATCHET	2	1/2 DRIVE EXTENSION	2	7/16 COMBINATION WRENCH	2	1/2 COMBINATION WRENCH	2	9/16 COMBINATION WRENCH	2	3/4 COMBINATION WRENCH	2	7/16 COMBINATION WRENCH	2	1 1/4 COMBINATION WRENCH	1	1 1/4 SPUD WRENCH	1	3 FT NYLON CHOKER (3/8" DIA)	1	6 FT NYLON CHOKER (3/8" DIA)	1	PULLER HOIST/A TON	4	2x4x8 FT LUMBER (TEMPORARY SUPPORT)	4	5/8 SHACKLES	4	20 FT TAG LINE	4	18 FT STEEL TADEF	4	18 FT EXTENSION LADDER	2	25 FT EXTENSION WRENCH	1	8' ADJUSTABLE WRENCH	4	TEMPORARY WOOD SUPPORT BLOCKS	<p>UNLESS OTHERWISE SPECIFIED MATERIAL</p> <p>DIMENSIONS ARE IN INCHES</p> <p>1. HARDWARE</p> <p>2. HARDWARE</p> <p>3. HARDWARE</p> <p>4. HARDWARE</p>	<p>PARTS LIST</p> <p>QTY. REQ. PART NO. PART OPT. DESCRIPTION</p>	<p>UNLESS OTHERWISE SPECIFIED MATERIAL</p> <p>DIMENSIONS ARE IN INCHES</p> <p>1. HARDWARE</p> <p>2. HARDWARE</p> <p>3. HARDWARE</p> <p>4. HARDWARE</p>	<p>PARTS LIST</p> <p>QTY. REQ. PART NO. PART OPT. DESCRIPTION</p>	<p>UNLESS OTHERWISE SPECIFIED MATERIAL</p> <p>DIMENSIONS ARE IN INCHES</p> <p>1. HARDWARE</p> <p>2. HARDWARE</p> <p>3. HARDWARE</p> <p>4. HARDWARE</p>	<p>UNLESS OTHERWISE SPECIFIED MATERIAL</p> <p>DIMENSIONS ARE IN INCHES</p> <p>1. HARDWARE</p> <p>2. HARDWARE</p> <p>3. HARDWARE</p> <p>4. HARDWARE</p>	<p>UNLESS OTHERWISE SPECIFIED MATERIAL</p> <p>DIMENSIONS ARE IN INCHES</p> <p>1. HARDWARE</p> <p>2. HARDWARE</p> <p>3. HARDWARE</p> <p>4. HARDWARE</p>
QUANTITY	DESCRIPTION																																																																				
1	1/4 TON CRANE (SLOTTED)																																																																				
2	5/16 HEX SOCKET (ALLEN) WRENCH																																																																				
4	3/16 HEX SOCKET (ALLEN) WRENCH																																																																				
4	1/4 HEX SOCKET (ALLEN) WRENCH																																																																				
2	7/16 SOCKET																																																																				
2	1/2 SOCKET																																																																				
2	3/4 SOCKET																																																																				
2	7/8 SOCKET																																																																				
2	1 1/4 SOCKET																																																																				
2	1 7/16 SOCKET																																																																				
2	1/2 DRIVE BATCHET																																																																				
2	1/2 DRIVE EXTENSION																																																																				
2	7/16 COMBINATION WRENCH																																																																				
2	1/2 COMBINATION WRENCH																																																																				
2	9/16 COMBINATION WRENCH																																																																				
2	3/4 COMBINATION WRENCH																																																																				
2	7/16 COMBINATION WRENCH																																																																				
2	1 1/4 COMBINATION WRENCH																																																																				
1	1 1/4 SPUD WRENCH																																																																				
1	3 FT NYLON CHOKER (3/8" DIA)																																																																				
1	6 FT NYLON CHOKER (3/8" DIA)																																																																				
1	PULLER HOIST/A TON																																																																				
4	2x4x8 FT LUMBER (TEMPORARY SUPPORT)																																																																				
4	5/8 SHACKLES																																																																				
4	20 FT TAG LINE																																																																				
4	18 FT STEEL TADEF																																																																				
4	18 FT EXTENSION LADDER																																																																				
2	25 FT EXTENSION WRENCH																																																																				
1	8' ADJUSTABLE WRENCH																																																																				
4	TEMPORARY WOOD SUPPORT BLOCKS																																																																				
A	B	C	D																																																																		
<p>7.6 METRE REFLECTOR/BACK INSTRUCTIONS</p> <p>(C-BAND)</p> <p>REV. 239501</p> <p>1</p>	<p>1. 58 EA 301742 LEFT TRIPPOD JOINT VELUMENT</p> <p>10 57 EA 9974-10 LOCKWASHER</p> <p>10 56 EA 9997-66 WASHER - FLAT</p> <p>18 55 EA 9999-12L HEAVY HEX NUT</p> <p>4 54 EA 203672 FULLY THREADED ROD</p> <p>2 53 EA 301611 LOAD PLATE</p> <p>4 52 EA 45980-22 1625-100X 20 LG BUL & NUT ASSY</p> <p>4 51 EA 45980-14 222618 1625-100X 125 LG BUL & NUT ASSY</p> <p>16 50 EA 300040 STRIP SPACER</p> <p>1 49 EA 9999-224 1625-100X HEAVY HEX ANUT</p> <p>1 48 EA 9997-174 222013 10875 FLATWASHER(A25)</p> <p>1 47 EA 45980-25 222013 1625-100X 20 LG BUL & NUT ASSY</p> <p>5 46 EA 45980-37 1625-100X 100 LG BUL & NUT ASSY</p> <p>3 45 EA 300031 CAST BEVEL WASHER</p> <p>5 44 EA 209140 CLIPPED WASHER</p> <p>22 43 EA 300311</p>	<p>1. 33 EA 209565 220914-2 ENCLOSURE DOOR ASSEMBLY</p> <p>2 32 EA 200852 222618 STICK WAX</p> <p>53 31 EA 9963-165 222618 1625-100X 125 LG HK(CSST)</p> <p>4 30 EA 9903-15 222618 ALLEN WRENCH(0.25)</p> <p>4 29 EA 9903-11 222618 ALLEN WRENCH(0.312)</p> <p>4 28 EA 9903-10 222618 ALLEN WRENCH(0.187)</p> <p>53 27 EA 9997-236 222618 0.625 FLATWASHER(CSST)</p> <p>33 26 EA 9858-22 222618 1625X40 LG SHOULDER BUL(CSST)</p> <p>4 25 EA 209967-72 TRACING PLATE</p> <p>4 24 EA 206278 222618 LIFTING TAB</p> <p>3 23 EA 9997-208 222618 0.75 FLATWASHER(A25)</p> <p>132 22 EA 9997-227 222618 0.625 FLATWASHER(A25)</p> <p>5 21 EA 9997-66 222618 1625-100X 20 LG BUL & NUT ASSY</p> <p>3 20 EA 45980-18 222618 1625-100X 20 LG BUL & NUT ASSY</p> <p>64 19 EA 45980-7 222618 1625-100X 22.0 LG BUL & NUT ASSY</p> <p>35 18 EA 9997-131 222618 0.25 FLATWASHER(CSST)</p> <p>18 17 EA 9999-57 222618 0.25-200X HEX NUT(CSST)</p> <p>18 16 EA 9963-76 222618 0.25-200X 125 LG HK(CSST)</p> <p>69 15 EA 9974-64 222618 0.50 LOCKWASHER(CSST)</p> <p>69 14 EA 9999-61 222618 0.50-130X HEX NUT(CSST)</p> <p>35 13 EA 9963-129 222618 0.50 FLATWASHER(CSST)</p> <p>210 12 EA 9997-65 222618 0.50 FLATWASHER(CSST)</p> <p>158 11 EA 9997-145 222618 0.375 FLATWASHER(CSST)</p> <p>106 10 EA 9974-63 222618 0.375 LOCKWASHER(CSST)</p> <p>106 9 EA 9999-60 222618 0.375-160X HEX NUT(CSST)</p> <p>33 8 EA 9858-18 222618 1625X40 LG SHOULDER BUL(CSST)</p> <p>17 7 EA 9858-19 222618 1625X40 LG SHOULDER BUL(CSST)</p> <p>1267 6 EA 9997-17 222618 0.312 LOCKWASHER(CSST)</p> <p>1440 5 EA 9997-56 222618 0.312 FLATWASHER(CSST)</p> <p>35 4 EA 9999-59 222618 0.312-160X HEX NUT(CSST)</p> <p>35 3 EA 9859-11 222618 1625-100X 100 LG BUL(CSST)</p> <p>1640 2 EA 209236 222618 1625-100X 100 LG BUL(CSST)</p> <p>88 1 EA 209765-1 222618 0.650 SPACER</p>	<p>1. 42 EA 300027 222618 CAST SPACER</p> <p>1 41 EA 301741 220914-2 TRIPPOD TUBE VELUMENT</p> <p>2 40 EA 300026 220914-2 TRIPPOD CHANNEL LEG</p> <p>16 39 EA 300915 222617 SHORT STRUT</p> <p>32 38 EA 300020 222617 LONG STRUT</p> <p>16 37 EA 222765 222619 STRETCH-FORMED SKIRT</p> <p>16 36 EA 222673 222619 MACHINED RIB</p> <p>16 35 EA 222677 222619 REFLECTOR PANEL</p> <p>1 34 EA 20911 220914-2 MODULAR ENCLOSURE</p>	<p>3. 120 EA 45980-18 222618 1625-100X 20 LG BUL & NUT ASSY</p> <p>64 19 EA 45980-7 222618 1625-100X 22.0 LG BUL & NUT ASSY</p> <p>35 18 EA 9997-131 222618 0.25 FLATWASHER(CSST)</p> <p>18 17 EA 9999-57 222618 0.25-200X HEX NUT(CSST)</p> <p>18 16 EA 9963-76 222618 0.25-200X 125 LG HK(CSST)</p> <p>69 15 EA 9974-64 222618 0.50 LOCKWASHER(CSST)</p> <p>69 14 EA 9999-61 222618 0.50-130X HEX NUT(CSST)</p> <p>35 13 EA 9963-129 222618 0.50 FLATWASHER(CSST)</p> <p>210 12 EA 9997-65 222618 0.50 FLATWASHER(CSST)</p> <p>158 11 EA 9997-145 222618 0.375 FLATWASHER(CSST)</p> <p>106 10 EA 9974-63 222618 0.375 LOCKWASHER(CSST)</p> <p>106 9 EA 9999-60 222618 0.375-160X HEX NUT(CSST)</p> <p>33 8 EA 9858-18 222618 1625X40 LG SHOULDER BUL(CSST)</p> <p>17 7 EA 9858-19 222618 1625X40 LG SHOULDER BUL(CSST)</p> <p>1267 6 EA 9997-17 222618 0.312 LOCKWASHER(CSST)</p> <p>1440 5 EA 9997-56 222618 0.312 FLATWASHER(CSST)</p> <p>35 4 EA 9999-59 222618 0.312-160X HEX NUT(CSST)</p> <p>35 3 EA 9859-11 222618 1625-100X 100 LG BUL(CSST)</p> <p>1640 2 EA 209236 222618 1625-100X 100 LG BUL(CSST)</p> <p>88 1 EA 209765-1 222618 0.650 SPACER</p>	<p>1. 42 EA 300027 222618 CAST SPACER</p> <p>1 41 EA 301741 220914-2 TRIPPOD TUBE VELUMENT</p> <p>2 40 EA 300026 220914-2 TRIPPOD CHANNEL LEG</p> <p>16 39 EA 300915 222617 SHORT STRUT</p> <p>32 38 EA 300020 222617 LONG STRUT</p> <p>16 37 EA 222765 222619 STRETCH-FORMED SKIRT</p> <p>16 36 EA 222673 222619 MACHINED RIB</p> <p>16 35 EA 222677 222619 REFLECTOR PANEL</p> <p>1 34 EA 20911 220914-2 MODULAR ENCLOSURE</p> <p>1 33 EA 209565 220914-2 ENCLOSURE DOOR ASSEMBLY</p> <p>2 32 EA 200852 222618 STICK WAX</p> <p>53 31 EA 9963-165 222618 1625-100X 125 LG HK(CSST)</p> <p>4 30 EA 9903-15 222618 ALLEN WRENCH(0.25)</p> <p>4 29 EA 9903-11 222618 ALLEN WRENCH(0.312)</p> <p>4 28 EA 9903-10 222618 ALLEN WRENCH(0.187)</p> <p>53 27 EA 9997-236 222618 0.625 FLATWASHER(CSST)</p> <p>33 26 EA 9858-22 222618 1625X40 LG SHOULDER BUL(CSST)</p> <p>4 25 EA 209967-72 TRACING PLATE</p> <p>4 24 EA 206278 222618 LIFTING TAB</p> <p>3 23 EA 9997-208 222618 0.75 FLATWASHER(A25)</p> <p>132 22 EA 9997-227 222618 0.625 FLATWASHER(A25)</p> <p>5 21 EA 9997-66 222618 1625-100X 20 LG BUL & NUT ASSY</p> <p>3 20 EA 45980-18 222618 1625-100X 20 LG BUL & NUT ASSY</p> <p>64 19 EA 45980-7 222618 1625-100X 22.0 LG BUL & NUT ASSY</p> <p>35 18 EA 9997-131 222618 0.25 FLATWASHER(CSST)</p> <p>18 17 EA 9999-57 222618 0.25-200X HEX NUT(CSST)</p> <p>18 16 EA 9963-76 222618 0.25-200X 125 LG HK(CSST)</p> <p>69 15 EA 9974-64 222618 0.50 LOCKWASHER(CSST)</p> <p>69 14 EA 9999-61 222618 0.50-130X HEX NUT(CSST)</p> <p>35 13 EA 9963-129 222618 0.50 FLATWASHER(CSST)</p> <p>210 12 EA 9997-65 222618 0.50 FLATWASHER(CSST)</p> <p>158 11 EA 9997-145 222618 0.375 FLATWASHER(CSST)</p> <p>106 10 EA 9974-63 222618 0.375 LOCKWASHER(CSST)</p> <p>106 9 EA 9999-60 222618 0.375-160X HEX NUT(CSST)</p> <p>33 8 EA 9858-18 222618 1625X40 LG SHOULDER BUL(CSST)</p> <p>17 7 EA 9858-19 222618 1625X40 LG SHOULDER BUL(CSST)</p> <p>1267 6 EA 9997-17 222618 0.312 LOCKWASHER(CSST)</p> <p>1440 5 EA 9997-56 222618 0.312 FLATWASHER(CSST)</p> <p>35 4 EA 9999-59 222618 0.312-160X HEX NUT(CSST)</p> <p>35 3 EA 9859-11 222618 1625-100X 100 LG BUL(CSST)</p> <p>1640 2 EA 209236 222618 1625-100X 100 LG BUL(CSST)</p> <p>88 1 EA 209765-1 222618 0.650 SPACER</p>	<p>INSPECTION TEST PROCESSES/PROCEDURES</p> <p>AUSA SPECIFICATIONS</p>	<p>DATE FILED: E-307401G</p> <p>APPLICATION: 222618</p> <p>REV. 239501</p> <p>FIG. N</p> <p>FIG. L</p> <p>FIG. M</p> <p>FIG. K</p>	<p>REV. 239501</p> <p>1</p>	<p>REV. 239501</p> <p>1</p>																																																												

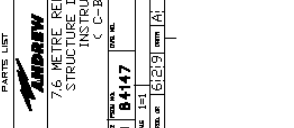

7.6 METRE REFLECTOR/BACK INSTRUCTIONS

REV. 239501

NOTES: (UNLESS OTHERWISE SPECIFIED)

1. DIMENSIONS ARE IN INCHES
2. DIMENSIONS ARE IN MILLIMETERS
3. DIMENSIONS ARE IN FEET AND INCHES
4. DIMENSIONS ARE IN METERS

CAUTION

INSTALL REFLECTOR/BACK STRUCTURE ASSEMBLY ONLY WHEN WINDS ARE LESS THAN 15 MPH TO PREVENT DAMAGE TO REFLECTOR PANELS AND EASE ASSEMBLY.

CAUTION

FOR STEPS 1 THRU 4: LUBRICATE BOLT THREADS OF BOTH STAINLESS STEEL AND A-325 HARDWARE WITH STICK VAX ITEM 323 TO REDUCE FRICTION. DO NOT ALLOW VAX UNDER FLATWASHER.

STEP 1:
PLACE MODULAR ENCLOSURE (ITEM 34) ON FOUR TEMPORARY WOOD SUPPORT BLOCKS. BE CAREFUL NOT TO DAMAGE MACHINED SURFACES. BOLT ON SHORT STRUTS (ITEM 39) TO ENCLOSURE REFER TO FIGURE 1. FULLY TIGHTEN ALL HARDWARE.

STEP 2:
ATTACH TWO LONG STRUTS (ITEM 38) LOOSELY TOGETHER PER VIEW A-A IN FIGURE 1 TO MAKE 16 PAIRS OF STRUTS. USE 0.625 SPACERS (ITEM D) BETWEEN LONG STRUTS. ATTACH EACH PAIR OF LONG STRUTS TO SHORT STRUTS. REFER TO SECTION B-B, FIGURE 1.

STEP 3:
ATTACH RIBS (ITEM 36) TO SHORT STRUTS (ITEM 39) REFER TO SECTION D-D FIGURE 1. HANDLE RIBS CAREFULLY TO KEEP FROM DISTORTING SHAPE.

STEP 4:
RAISE LONG STRUTS (ITEM 38) AND RIB (ITEM 36). ATTACH LONG STRUT TO RIB WITH 0.625 DIA SHOULDER BOLT (ITEM 26) AND 0.625 DIA A-325 BOLT (ITEM 19). REFER TO FIGURE 1 VIEW C-C.

STEP 5:
MAKE SURE THAT ALL 0.625 SPACERS (ITEM D) ARE PROPERLY PLACED AND SHOULDER BOLTS ARE PROPERLY SEATED THROUGH ALL CONNECTIONS.

SECURELY TIGHTEN ALL STAINLESS STEEL HARDWARE FIRST. NEXT, TIGHTEN ALL A-325 HARDWARE FOLLOWING TENSIONING PROCEDURES SHOWN ON SHEET 1.

SECTION D-D
SHORT STRUT/RIB CONNECTION (TYPICAL 16 PLACES)

SECTION B-B
LONG STRUT/SHORT STRUT CONNECTION (TYPICAL 16 PLACES)

VIEW A-A
LONG STRUT MIDDLE CONNECTION (TYPICAL 16 PLACES)

VIEW C-C
LONG STRUT/RIB CONNECTION (TYPICAL 16 PLACES)

FIGURE 1


REV	DATE	DESCRIPTION
1	17/01/94	INITIAL PRODUCTION
2	08/02/98	REVISED FOR NEW DESIGN

MARK	DATE	BY	CHKD	APPV	DESCRIPTION
JHD	JHD	JHD	JHD	JHD	AGENCY OPERATOR
RVS	RVS	RVS	RVS	RVS	7.6 METER REFLECTOR/BACK STRUCTURE INSTALLATION INSTRUCTIONS (C-BAND)
RVR	RVR	RVR	RVR	RVR	
JHD	JHD	JHD	JHD	JHD	
JHD	JHD	JHD	JHD	JHD	


UNLESS OTHERWISE SPECIFIED	TOLERANCES	FINISH
DIMENSIONS ARE IN INCHES	± 0.005	AS SUPPLIED
DIMENSIONS ARE IN MILLIMETERS	± 0.05	
DIMENSIONS ARE IN FEET AND INCHES	± 0.005	
DIMENSIONS ARE IN METERS	± 0.005	

ALL METALS TO BE GALVANNEAL	ALL METALS TO BE GALVANNEAL
ALL METALS TO BE GALVANNEAL	ALL METALS TO BE GALVANNEAL
ALL METALS TO BE GALVANNEAL	ALL METALS TO BE GALVANNEAL
ALL METALS TO BE GALVANNEAL	ALL METALS TO BE GALVANNEAL

INSPECTED	TESTED
PROCEDURES	PROCEDURES
AUSA SPECIFICATIONS	AUSA SPECIFICATIONS

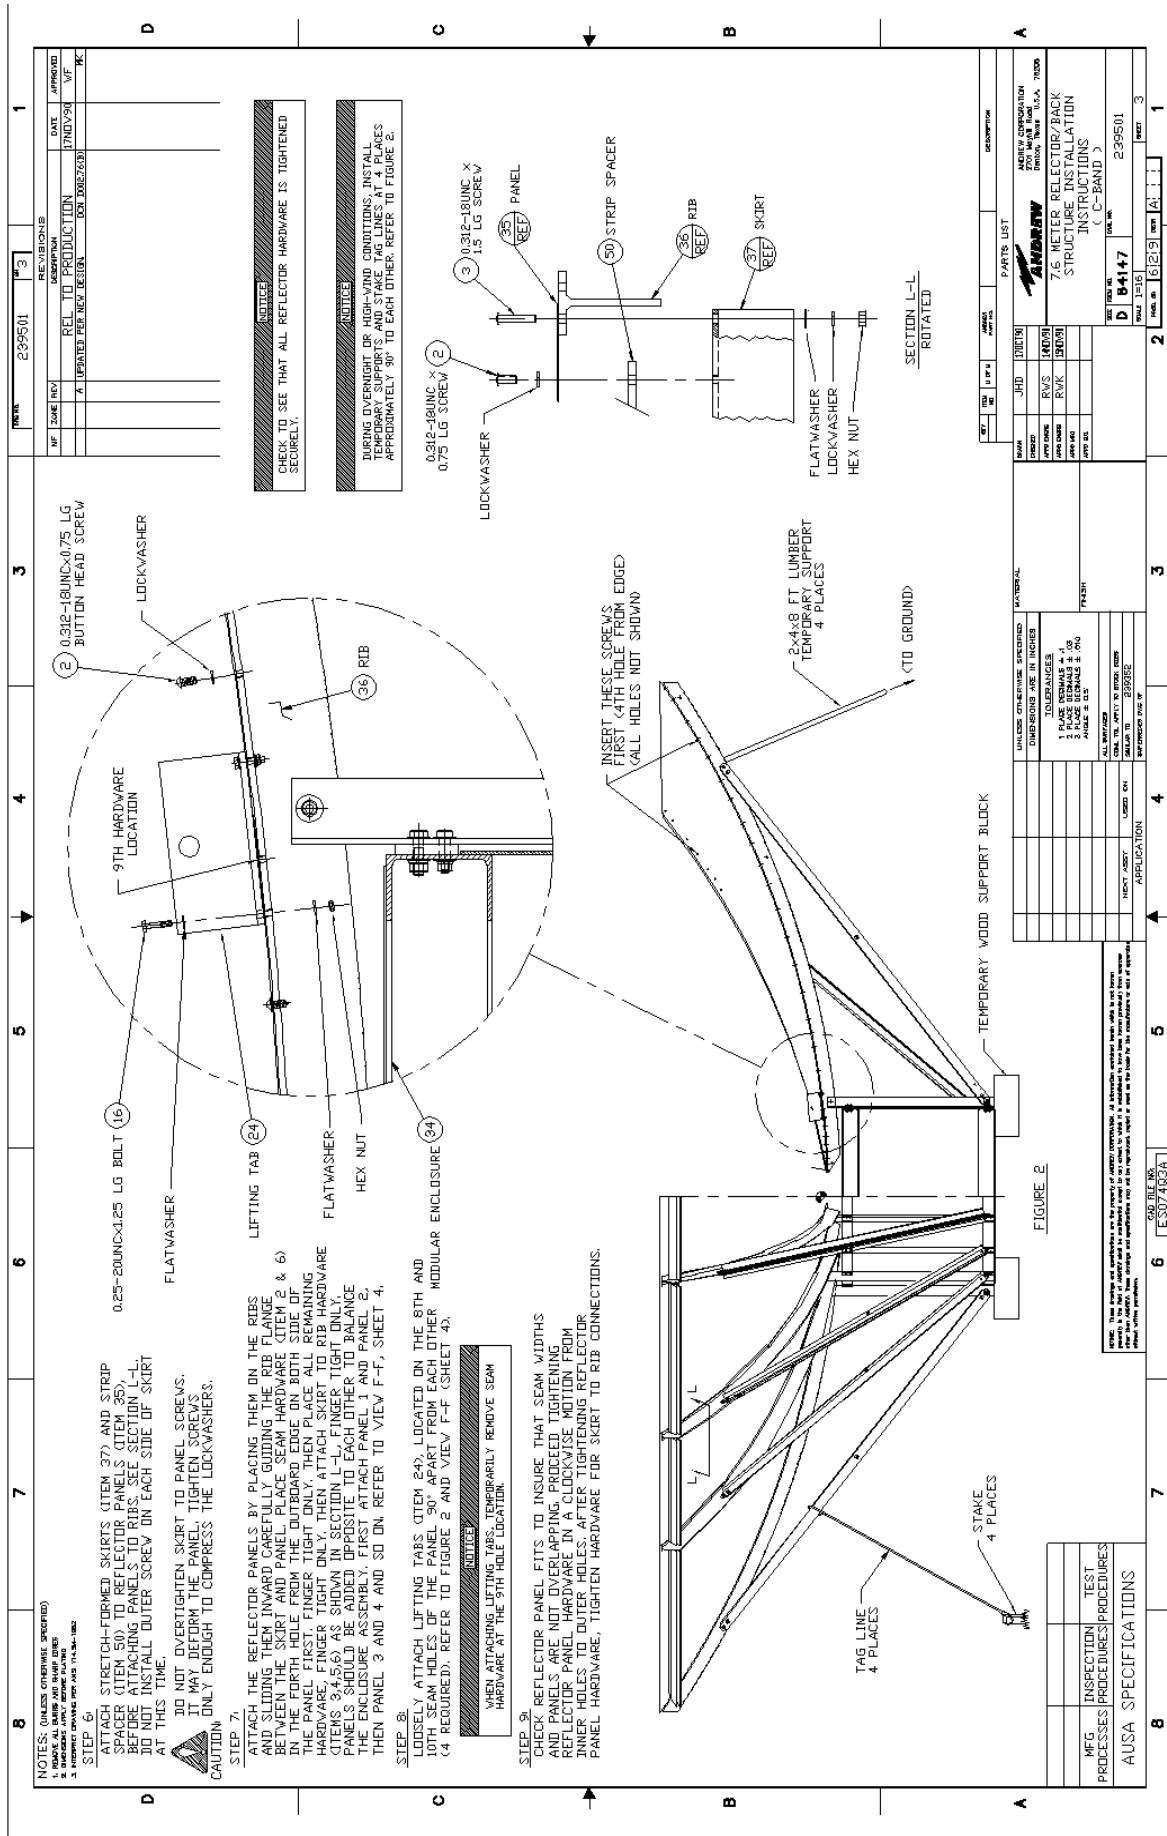

8	7	6	5	4	3	2	1															
<p>NOTES: (UNLESS OTHERWISE SPECIFIED)</p> <p>1. DIMENSIONS ARE IN INCHES</p> <p>2. DIMENSIONS ARE TO FACE UNLESS NOTED OTHERWISE</p> <p>3. INTERPRET DIMENSIONS PER ANSI Y14.3M-1992</p>																						
<p style="text-align: center;">FRONT VIEW OF REFLECTOR/BACK STRUCTURE ASSEMBLY</p> <p style="text-align: center;">VIEW F-F</p>																						
<p>REVISIONS</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>REV</th> <th>DATE</th> <th>APPROVED</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>17/01/2014</td> <td>[Signature]</td> </tr> <tr> <td>2</td> <td></td> <td></td> </tr> <tr> <td>3</td> <td></td> <td></td> </tr> <tr> <td>4</td> <td></td> <td></td> </tr> </tbody> </table>								REV	DATE	APPROVED	1	17/01/2014	[Signature]	2			3			4		
REV	DATE	APPROVED																				
1	17/01/2014	[Signature]																				
2																						
3																						
4																						
<p>DESCRIPTION</p> <p>7.6 METRE REFLECTOR/BACK STRUCTURE INSTALLATION INSTRUCTIONS</p> <p>Part No: 299501</p> <p>Rev: 04147</p> <p>Rev Date: 06/28/14</p>																						
<p>PARTS LIST</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>QTY</th> <th>REF</th> <th>DESCRIPTION</th> <th>UNIT</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>1</td> <td>REFLECTOR/BACK STRUCTURE ASSEMBLY</td> <td>EA</td> </tr> <tr> <td>1</td> <td>2</td> <td>REFLECTOR/BACK STRUCTURE ASSEMBLY</td> <td>EA</td> </tr> </tbody> </table>								QTY	REF	DESCRIPTION	UNIT	1	1	REFLECTOR/BACK STRUCTURE ASSEMBLY	EA	1	2	REFLECTOR/BACK STRUCTURE ASSEMBLY	EA			
QTY	REF	DESCRIPTION	UNIT																			
1	1	REFLECTOR/BACK STRUCTURE ASSEMBLY	EA																			
1	2	REFLECTOR/BACK STRUCTURE ASSEMBLY	EA																			
<p>UNLESS OTHERWISE SPECIFIED</p> <p>DIMENSIONS ARE IN INCHES</p> <p>TOLERANCES</p> <p>1. FRACTIONS ±.005</p> <p>2. DECIMALS ±.005</p> <p>3. HOLE DIMENSIONS ±.005</p> <p>4. ANGLES ±.01</p> <p>5. HOLE LOCATIONS ±.01</p> <p>6. HOLE DIA ±.005</p> <p>7. HOLE DIA ±.005</p> <p>8. HOLE DIA ±.005</p> <p>9. HOLE DIA ±.005</p> <p>10. HOLE DIA ±.005</p> <p>11. HOLE DIA ±.005</p> <p>12. HOLE DIA ±.005</p> <p>13. HOLE DIA ±.005</p> <p>14. HOLE DIA ±.005</p> <p>15. HOLE DIA ±.005</p> <p>16. HOLE DIA ±.005</p> <p>17. HOLE DIA ±.005</p> <p>18. HOLE DIA ±.005</p> <p>19. HOLE DIA ±.005</p> <p>20. HOLE DIA ±.005</p> <p>21. HOLE DIA ±.005</p> <p>22. HOLE DIA ±.005</p> <p>23. HOLE DIA ±.005</p> <p>24. HOLE DIA ±.005</p> <p>25. HOLE DIA ±.005</p> <p>26. HOLE DIA ±.005</p> <p>27. HOLE DIA ±.005</p> <p>28. HOLE DIA ±.005</p> <p>29. HOLE DIA ±.005</p> <p>30. HOLE DIA ±.005</p> <p>31. HOLE DIA ±.005</p> <p>32. HOLE DIA ±.005</p> <p>33. HOLE DIA ±.005</p> <p>34. HOLE DIA ±.005</p> <p>35. HOLE DIA ±.005</p> <p>36. HOLE DIA ±.005</p> <p>37. HOLE DIA ±.005</p> <p>38. HOLE DIA ±.005</p> <p>39. HOLE DIA ±.005</p> <p>40. HOLE DIA ±.005</p> <p>41. HOLE DIA ±.005</p> <p>42. HOLE DIA ±.005</p> <p>43. HOLE DIA ±.005</p> <p>44. HOLE DIA ±.005</p> <p>45. HOLE DIA ±.005</p> <p>46. HOLE DIA ±.005</p> <p>47. HOLE DIA ±.005</p> <p>48. HOLE DIA ±.005</p> <p>49. HOLE DIA ±.005</p> <p>50. HOLE DIA ±.005</p> <p>51. HOLE DIA ±.005</p> <p>52. HOLE DIA ±.005</p> <p>53. HOLE DIA ±.005</p> <p>54. HOLE DIA ±.005</p> <p>55. HOLE DIA ±.005</p> <p>56. HOLE DIA ±.005</p> <p>57. HOLE DIA ±.005</p> <p>58. HOLE DIA ±.005</p> <p>59. HOLE DIA ±.005</p> <p>60. HOLE DIA ±.005</p> <p>61. HOLE DIA ±.005</p> <p>62. HOLE DIA ±.005</p> <p>63. HOLE DIA ±.005</p> <p>64. HOLE DIA ±.005</p> <p>65. HOLE DIA ±.005</p> <p>66. HOLE DIA ±.005</p> <p>67. HOLE DIA ±.005</p> <p>68. HOLE DIA ±.005</p> <p>69. HOLE DIA ±.005</p> <p>70. HOLE DIA ±.005</p> <p>71. HOLE DIA ±.005</p> <p>72. HOLE DIA ±.005</p> <p>73. HOLE DIA ±.005</p> <p>74. HOLE DIA ±.005</p> <p>75. HOLE DIA ±.005</p> <p>76. HOLE DIA ±.005</p> <p>77. HOLE DIA ±.005</p> <p>78. HOLE DIA ±.005</p> <p>79. HOLE DIA ±.005</p> <p>80. HOLE DIA ±.005</p> <p>81. HOLE DIA ±.005</p> <p>82. HOLE DIA ±.005</p> <p>83. HOLE DIA ±.005</p> <p>84. HOLE DIA ±.005</p> <p>85. HOLE DIA ±.005</p> <p>86. HOLE DIA ±.005</p> <p>87. HOLE DIA ±.005</p> <p>88. HOLE DIA ±.005</p> <p>89. HOLE DIA ±.005</p> <p>90. HOLE DIA ±.005</p> <p>91. HOLE DIA ±.005</p> <p>92. HOLE DIA ±.005</p> <p>93. HOLE DIA ±.005</p> <p>94. HOLE DIA ±.005</p> <p>95. HOLE DIA ±.005</p> <p>96. HOLE DIA ±.005</p> <p>97. HOLE DIA ±.005</p> <p>98. HOLE DIA ±.005</p> <p>99. HOLE DIA ±.005</p> <p>100. HOLE DIA ±.005</p>																						
<p>APPLICATION</p> <p>7.6 METRE REFLECTOR/BACK STRUCTURE ASSEMBLY</p>																						
<p>INSPECTION TEST PROCESSES/PROCEDURES</p> <p>AUSA SPECIFICATIONS</p>																						

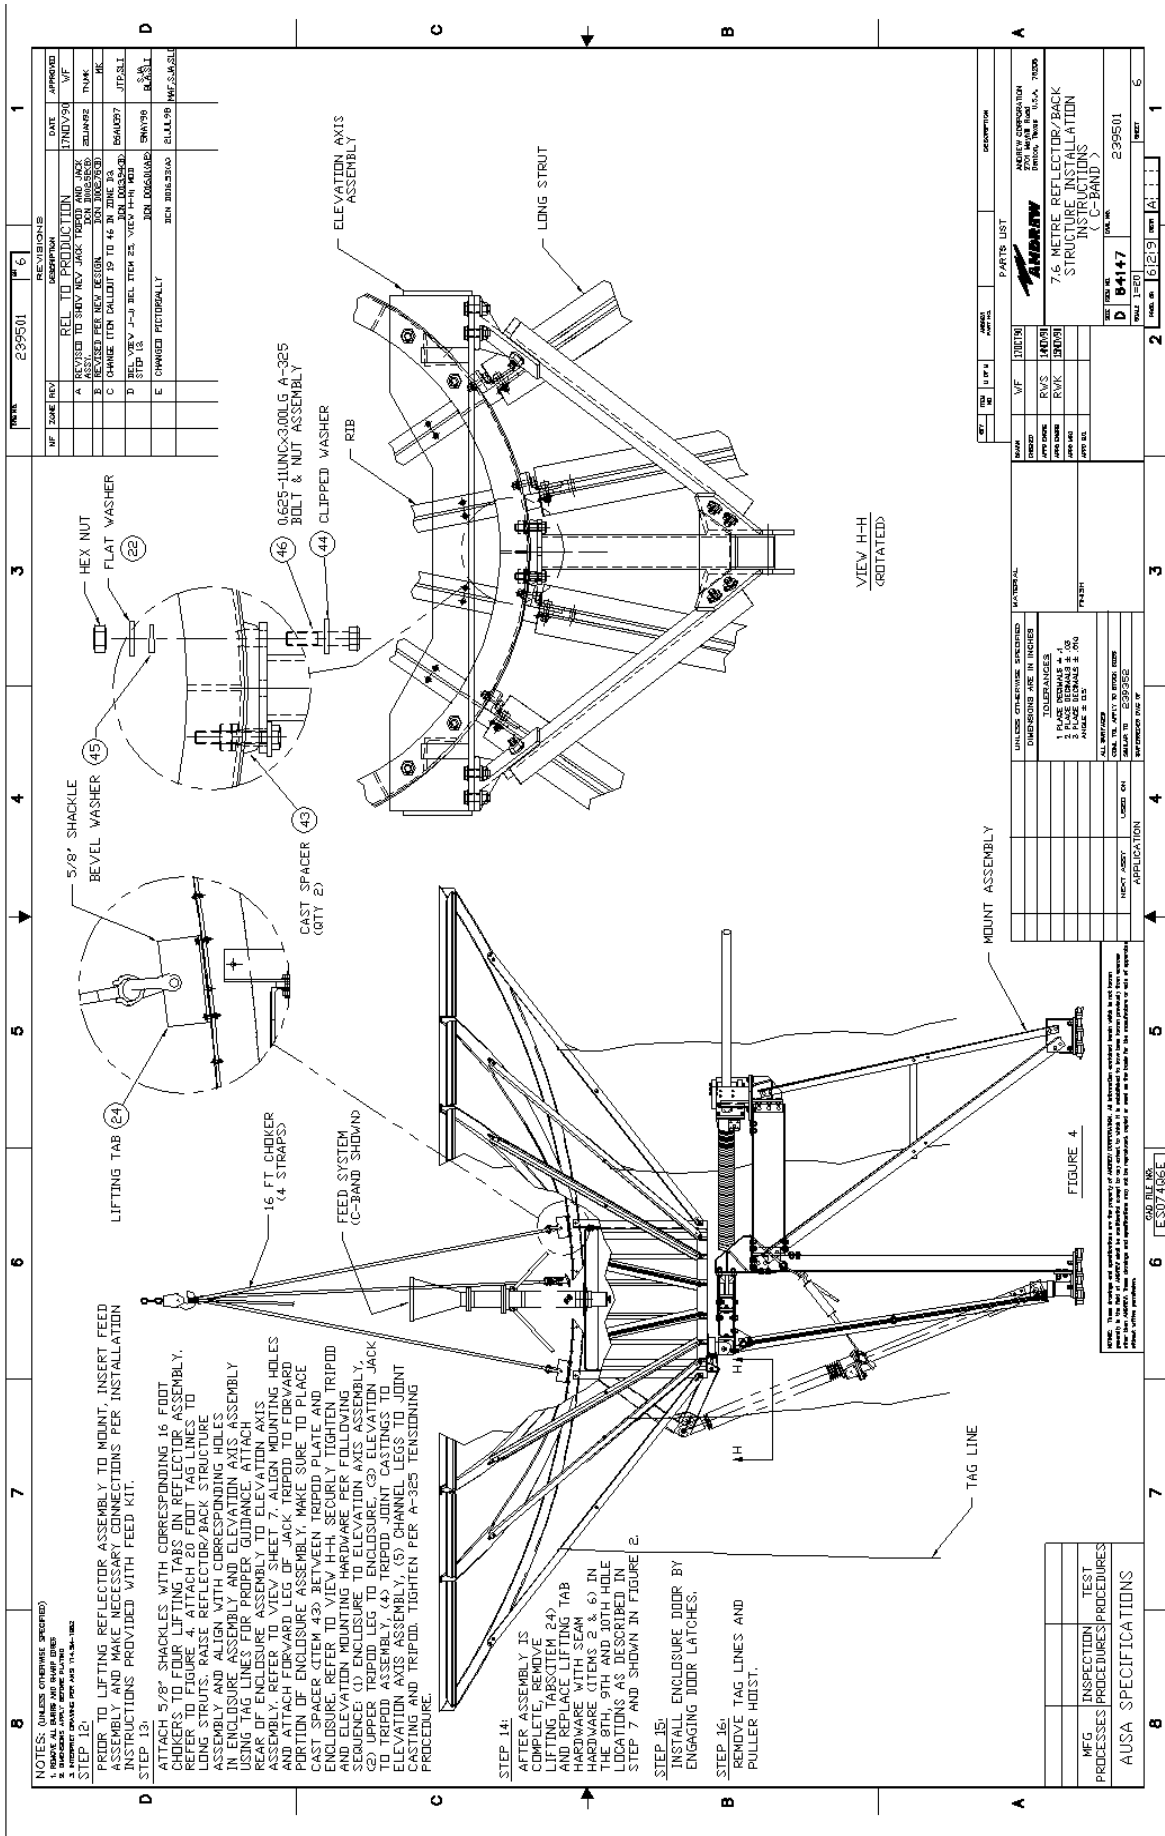

REV. 239501

REV. NO.	DATE	DESCRIPTION
A	1/10/79	REVISED TO SHOW NEW JACK TRIPOD AND JACK
B	1/10/79	REVISED TO SHOW NEW REFLECTOR/BACK STRUCTURE
C	1/10/79	CHANGED (ITEM DALLIT) TO 46 IN ZONE 3A
D	1/10/79	REV. VIEW 7-3 BEL. TRIP. 22. VIEW H-H AND
E	1/10/79	CHANGED TRIPOD ASSEMBLY

DATE	APPROVED
1/10/79	TRUMP
1/10/79	TRUMP
1/10/79	TRUMP
1/10/79	TRUMP
1/10/79	TRUMP
1/10/79	TRUMP

UNLESS OTHERWISE SPECIFIED

DIMENSIONS ARE IN INCHES

INTOLERANCES

1. FRACTIONS ±.005

2. DECIMALS ±.005

3. ANGLES ±.01

4. HOLE DIA. ±.005

5. HOLE DIA. ±.005

6. HOLE DIA. ±.005

7. HOLE DIA. ±.005

8. HOLE DIA. ±.005

9. HOLE DIA. ±.005

10. HOLE DIA. ±.005

11. HOLE DIA. ±.005

12. HOLE DIA. ±.005

13. HOLE DIA. ±.005

14. HOLE DIA. ±.005

15. HOLE DIA. ±.005

16. HOLE DIA. ±.005

17. HOLE DIA. ±.005

18. HOLE DIA. ±.005

19. HOLE DIA. ±.005

20. HOLE DIA. ±.005

21. HOLE DIA. ±.005

22. HOLE DIA. ±.005

23. HOLE DIA. ±.005

24. HOLE DIA. ±.005

NOTES: (UNLESS OTHERWISE SPECIFIED)

1. DIMENSIONS ARE IN INCHES

2. INTOLERANCES

3. FRACTIONS ±.005

4. DECIMALS ±.005

5. ANGLES ±.01

6. HOLE DIA. ±.005

7. HOLE DIA. ±.005

8. HOLE DIA. ±.005

9. HOLE DIA. ±.005

10. HOLE DIA. ±.005

11. HOLE DIA. ±.005

12. HOLE DIA. ±.005

13. HOLE DIA. ±.005

14. HOLE DIA. ±.005

15. HOLE DIA. ±.005

16. HOLE DIA. ±.005

17. HOLE DIA. ±.005

18. HOLE DIA. ±.005

19. HOLE DIA. ±.005

20. HOLE DIA. ±.005

21. HOLE DIA. ±.005

22. HOLE DIA. ±.005

23. HOLE DIA. ±.005

24. HOLE DIA. ±.005

STEP 13:

ATTACH 5/8" SHACKLES WITH CORRESPONDING 16 FOOT CHOKERS TO FOUR LIFTING TABS ON REFLECTOR ASSEMBLY. REFER TO FIGURE 4. ATTACH 20 FOOT TAG LINES TO LONG STRUTS. RAISE REFLECTOR/BACK STRUCTURE ASSEMBLY AND ALIGN WITH CORRESPONDING HOLES IN ENCLOSURE ASSEMBLY AND ELEVATION AXIS ASSEMBLY USING TAG LINES FOR PROPER GUIDANCE. ATTACH ASSEMBLY REFLECTOR ASSEMBLY TO ELEVATION AXIS AND ATTACH FORWARD LEG OF JACK TRIPOD TO FORWARD PORTION OF ENCLOSURE ASSEMBLY. MAKE SURE TO PLACE CAST SPACER (ITEM 43) BETWEEN TRIPOD PLATE AND ENCLOSURE. REFER TO VIEW H-H. SECURELY TIGHTEN TRIPOD AND ELEVATION MOUNTING HARDWARE PER FOLLOWING SEQUENCE: (1) ENCLOSURE TO ELEVATION AXIS ASSEMBLY, (2) TRIPOD ASSEMBLY TO ELEVATION AXIS ASSEMBLY, (3) ELEVATION AXIS ASSEMBLY TO TRIPOD ASSEMBLY. (4) TRIPOD ASSEMBLY TO CASTING AND TRIPOD. TIGHTEN PER A-325 TENSILING PROCEDURE.

STEP 14:

AFTER ASSEMBLY IS COMPLETE, REMOVE LIFTING TABS (ITEM 24) AND REPLACE LIFTING TAB HARDWARE (ITEMS 23, 4, 6) IN THE 8TH, 9TH AND 10TH HOLE LOCATIONS AS DESCRIBED IN STEP 7 AND SHOWN IN FIGURE 2.

STEP 15:

INSTALL ENCLOSURE DOOR BY ENGAGING DOOR LATCHES.

STEP 16:

REMOVE TAG LINES AND PULLER HOIST.

PARTS LIST

QTY	REF	ITEM NO.	DESCRIPTION
1	VF	100036	...
1	RVS	140531	...
1	RVR	140532	...
1	AVS

ITEM NO.	DESCRIPTION
239501	7.6 METRE REFLECTOR/BACK STRUCTURE INSTALLATION INSTRUCTIONS (C-BAND)
84147	...
628	...

QTY	REF	ITEM NO.	DESCRIPTION
1	VF	100036	...
1	RVS	140531	...
1	RVR	140532	...
1	AVS

QTY	REF	ITEM NO.	DESCRIPTION
1	VF	100036	...
1	RVS	140531	...
1	RVR	140532	...
1	AVS

QTY	REF	ITEM NO.	DESCRIPTION
1	VF	100036	...
1	RVS	140531	...
1	RVR	140532	...
1	AVS

QTY	REF	ITEM NO.	DESCRIPTION
1	VF	100036	...
1	RVS	140531	...
1	RVR	140532	...
1	AVS

QTY	REF	ITEM NO.	DESCRIPTION
1	VF	100036	...
1	RVS	140531	...
1	RVR	140532	...
1	AVS

QTY	REF	ITEM NO.	DESCRIPTION
1	VF	100036	...
1	RVS	140531	...
1	RVR	140532	...
1	AVS

QTY	REF	ITEM NO.	DESCRIPTION
1	VF	100036	...
1	RVS	140531	...
1	RVR	140532	...
1	AVS

QTY	REF	ITEM NO.	DESCRIPTION
1	VF	100036	...
1	RVS	140531	...
1	RVR	140532	...
1	AVS

QTY	REF	ITEM NO.	DESCRIPTION
1	VF	100036	...
1	RVS	140531	...
1	RVR	140532	...
1	AVS

QTY	REF	ITEM NO.	DESCRIPTION
1	VF	100036	...
1	RVS	140531	...
1	RVR	140532	...
1	AVS

1 **2** **3** **4** **5** **6** **7** **8**

EXPLODED VIEW

ASSEMBLED VIEW

ASSEMBLED VIEW

ASSEMBLED VIEW

ELEVATION PIVOT ASSEMBLY (SOME ITEMS REMOVED FOR CLARITY)

SET APPROX. 75mm (3.0")

NOTES: (UNLESS OTHERWISE SPECIFIED)
1. DIMENSIONS ARE IN MILLIMETERS.
2. DIMENSIONS IN PARENTHESES ARE IN INCHES.
3. INTERPRET DIMENSIONS PER ASME Y14.5M-2018.

4. ITEMS 55, 56 & 57 INCLUDE 2 SPARES.

5. TIGHTENING SEQUENCE: SET DISTANCE SHOWN IN (A), TIGHTEN SECURELY (B) 135 FT-LB (185 N-m), FINGER TIGHTEN (D) THEN TIGHTEN SECURELY (C) 135 FT-LB (185 N-m). LAST, TIGHTEN (D) TO 135 FT-LB (185 N-m).

QTY	REF	U OF U	DESCRIPTION

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN INCHES

TOLERANCES
1. FRACTIONS
2. DECIMALS
3. HOLE DIMENSIONS & Ø
4. TYPICAL DIMENSIONS
5. FINISH

ALL DIMENSIONS TO UNLESS OTHERWISE SPECIFIED

MATERIAL	DESCRIPTION

PARTS LIST

QTY	REF	U OF U	DESCRIPTION

5/6/7/6 ENCLOSURE MOUNTING INSTRUCTIONS

REV. 1.1 DATE: 2/2020

8 **ES07407** **7** **5** **4** **3** **2** **1**

MFG.	INSPECTION	TEST

AUSA SPECIFICATIONS

REV. NO.	DATE	BY	DESCRIPTION
1	239918		REVISED INSTRUCTIONS
2			REVISED INSTRUCTIONS
3			REVISED INSTRUCTIONS
4			REVISED INSTRUCTIONS
5			REVISED INSTRUCTIONS
6			REVISED INSTRUCTIONS
7			REVISED INSTRUCTIONS

GENERAL
 READ THE INSTRUCTIONS THOROUGHLY BEFORE ASSEMBLY. FOLLOW THE SEQUENCES FOR PROPER ASSEMBLY AND OPERATION.
 THIS WARNING INDICATES THAT FAILURE TO FOLLOW THE PROPER PRECEDURE AT THIS POINT COULD RESULT IN DAMAGE TO THE ANTENNA AND/OR OTHER PROPERTY AND POSSIBLE INJURY TO CAUTION PERSONNEL.

NOTICE
 THIS INDICATES INFORMATION THAT SHOULD BE READ BEFORE PROCEEDING.

UNPACKING
 REMOVE ALL PARTS FROM SHIPPING BOXES. THE CONTENTS SHOULD CORRESPOND WITH THE PARTS LIST. ANY DAMAGE OR SHORTAGE WILL PREVENT SATISFACTORY ASSEMBLY, INSTALLATION, AND OPERATION OF THE ANTENNA.

NOTICE
 THE INSTALLATION, MAINTENANCE OR REMOVAL OF AN ANTENNA REQUIRES QUALIFIED, EXPERIENCED PERSONNEL. ANDREW INSTALLATION PERSONNEL ANTENNA SYSTEMS SHOULD BE INSPECTED FOR PROPER INSTALLATION, MAINTENANCE AND OPERATION. ANDREW DISCLAIMS ANY LIABILITY OR RESPONSIBILITY FOR THE RESULTS OF IMPROPER OR UNSAFE INSTALLATION OR MAINTENANCE PRACTICES.

TOOLS RECOMMENDED FOR PROPER INSTALLATION

QUANTITY	DESCRIPTION
1	1/2 IN CRANE
2	SCREWDRIVER (SL/TITLED)
2	1/8 HEX SOCKET (ALLEN) WRENCH
4	1/4 HEX SOCKET (ALLEN) WRENCH
4	1/4 HEX SOCKET (ALLEN) WRENCH
2	7/16 SOCKET
2	3/4 SOCKET
2	7/8 SOCKET
2	1 1/8 SOCKET
2	1 1/2 SOCKET
2	1 7/16 SOCKET
2	1/2 DRIVE RATCHET
2	1/2 DRIVE EXTENSION
2	7/16 COMBINATION WRENCH
2	9/16 COMBINATION WRENCH
2	3/4 COMBINATION WRENCH
2	1 1/4 COMBINATION WRENCH
2	1 1/4 COMBINATION WRENCH
2	1 1/4 SPUD WRENCH
1	6 FT NYLON CHOKER (3/8" DIA)
1	3 FT NYLON CHOKER (3/8" DIA)
1	PULLER HOOK/TWIN
4	2x4x8 FT LUMBER (TEMPORARY SUPPORT)
4	2x8 FT LUMBER
4	2x8 FT LUMBER
4	16 FT CHOKER (1/2" DIA)
4	12 FT STEP LADDER
2	25 FT EXTENSION LADDER
2	8' ADJUSTABLE WRENCH
4	TEMP RARY W.D.D. SPT. RR. BL-KCS

1. LUBRICATE BOLT THREADS WITH STICK WAX (ITEM 39) TO REDUCE AFTER CONNECTIONS ARE COMPLETED. TIGHTEN BOLTS UNTIL SURFACES ARE FLATTENED AND NUTS ARE SNUG. (A FULL LEFT-RT 3/4 TURN IS APPROXIMATELY CORRECT. DO NOT OVER TIGHTEN. AFTER STEPS 9 AND 4, DISCARD AND REPLACE WITH NEW HARDWARE. REPEAT ALL STEPS.

2. MARK NUTS AND END OF BOLTS WITH STRAIGHT LINE SEE FIGURE 1.

3. TIGHTEN NUTS FURTHER WITH EXTRA LONG WRENCH OR POWER WRENCH UNTIL NUTS ARE ADVISORY 2 FULL LEFT-RT 3/4 TURN LONGER THAN THE ORIGINAL LENGTHS. SEE FIGURE 1. BOLT LENGTHS SHOULD BE FIGURE 1. 1/2 TURN (180°) FOR BOLT LENGTHS OVER 4 DIAMETERS. SEE FIGURE 1.

4. DISCARD AND REPLACE WITH NEW HARDWARE.

TENSIONING PROCEDURES A-295 HARDWARE

USE FELT HAMMER

FIG. 1
TENSIONING AFTER

FIG. 2
TENSIONING AFTER

FIG. 3
TENSIONING AFTER

5/16" FLAT WASHER

831167 EA	9997-56	
1	166 EA	31074E
1	165 EA	9974-11
1	164 EA	9997-66
18	163 EA	9999-18
4	162 EA	21567E
2	161 EA	31161I
4	159 EA	9997-79
4	158 EA	4598-14
16	157 EA	31114J
16	156 EA	31182-2
16	155 EA	31108I
16	154 EA	31079J
16	153 EA	31078K
4	152 EA	4598-37
4	151 EA	31131I
4	150 EA	21914J
2	149 EA	31102T
2	148 EA	31174I
2	147 EA	31172B
2	146 EA	31126E
16	145 EA	31107T
16	144 EA	31107T

831167 EA 9997-56
 1 166 EA 31074E
 1 165 EA 9974-11
 18 164 EA 9999-18
 4 163 EA 21567E
 2 162 EA 31161I
 4 159 EA 9997-79
 4 158 EA 4598-14
 16 157 EA 31114J
 16 156 EA 31182-2
 16 155 EA 31108I
 16 154 EA 31079J
 16 153 EA 31078K
 4 152 EA 4598-37
 4 151 EA 31131I
 4 150 EA 21914J
 2 149 EA 31102T
 2 148 EA 31174I
 2 147 EA 31172B
 2 146 EA 31126E
 16 145 EA 31107T
 16 144 EA 31107T

TOOLS LIST

NO.	DESCRIPTION	QTY	UNIT	REMARKS
1	1/2 IN CRANE	1	EA	
2	SCREWDRIVER (SL/TITLED)	2	EA	
2	1/8 HEX SOCKET (ALLEN) WRENCH	2	EA	
4	1/4 HEX SOCKET (ALLEN) WRENCH	4	EA	
4	1/4 HEX SOCKET (ALLEN) WRENCH	4	EA	
2	7/16 SOCKET	2	EA	
2	3/4 SOCKET	2	EA	
2	7/8 SOCKET	2	EA	
2	1 1/8 SOCKET	2	EA	
2	1 1/2 SOCKET	2	EA	
2	1 7/16 SOCKET	2	EA	
2	1/2 DRIVE RATCHET	2	EA	
2	1/2 DRIVE EXTENSION	2	EA	
2	7/16 COMBINATION WRENCH	2	EA	
2	9/16 COMBINATION WRENCH	2	EA	
2	3/4 COMBINATION WRENCH	2	EA	
2	1 1/4 COMBINATION WRENCH	2	EA	
2	1 1/4 COMBINATION WRENCH	2	EA	
2	1 1/4 SPUD WRENCH	2	EA	
1	6 FT NYLON CHOKER (3/8" DIA)	1	EA	
1	3 FT NYLON CHOKER (3/8" DIA)	1	EA	
1	PULLER HOOK/TWIN	1	EA	
4	2x4x8 FT LUMBER (TEMPORARY SUPPORT)	4	EA	
4	2x8 FT LUMBER	4	EA	
4	2x8 FT LUMBER	4	EA	
4	16 FT CHOKER (1/2" DIA)	4	EA	
4	12 FT STEP LADDER	4	EA	
2	25 FT EXTENSION LADDER	2	EA	
2	8' ADJUSTABLE WRENCH	2	EA	
4	TEMP RARY W.D.D. SPT. RR. BL-KCS	4	EA	

PARTS LIST

NO.	DESCRIPTION	QTY	UNIT	REMARKS
16	44 EA	251915		
16	43 EA	311176		
16	42 EA	222765		
16	41 EA	222673		
16	40 EA	222677		
1	39 EA	221911		
1	38 EA	219565		
32	37 EA	9979-54		
2	36 EA	211832		
32	35 EA	9963-165		
4	34 EA	9913-15		
4	32 EA	9913-11		
4	32 EA	9913-11		
16	31 EA	9997-164		
16	30 EA	9858-22		
4	28 EA	216278		
1	27 EA	9699-224		
1	26 EA	9699-174		
2	23 EA	8997-232		
78	24 EA	9997-227		
1	23 EA	4598-35		
2	121 EA	4598-18		
4	121 EA	4598-22		
32	19 EA	9999-57		
16	18 EA	9999-57		
16	17 EA	9963-76		
48	16 EA	9974-64		
48	15 EA	9999-61		
32	14 EA	9963-129		
256	13 EA	9997-111		
16	12 EA	9997-89		
144	11 EA	9974-63		
144	10 EA	9999-61		
64	9 EA	9858-18		
48	8 EA	9858-19		
112	7 EA	9974-17		
48	6 EA	4598-11		
831167	5 EA	9999-59		
8324	4 EA	9959-11		
352	3 EA	212636		
64	2 EA	212636		
32	1 EA	212636		
32	1 EA	311844		

INSPECTION TEST PROCESSES/PROCEDURES/INSTRUCTIONS

AUSA SPECIFICATIONS

7.6 METER (KU-BAND) REFLECTOR/BACK STRUCTURE INSTALLATION INSTRUCTIONS

239918

REV. NO. 1


DATE 6/21/98

BY 54147

APPROVED 6/21/98

1

<p>NOTES (UNLESS OTHERWISE SPECIFIED)</p> <ol style="list-style-type: none"> 1. INSTALL ALL BOLTS AND NUTS TO SPECIFICATION. 2. HANGERS APPLY TO ALL BOLTS AND NUTS. 3. REFER TO DRAWING FOR ALL DIMENSIONS. 	<p>CAUTION</p> <p>INSTALL REFLECTOR/BACK STRUCTURE ASSEMBLY ONLY WHEN WINDS ARE LESS THAN 15 MPH TO PREVENT DAMAGE TO REFLECTOR PANELS AND EASE ASSEMBLY.</p>	<p>NOTICE</p> <p>FOR STEPS 1 THRU 8: LUBRICATE BOLT THREADS OF BOTH STAINLESS STEEL AND A-325 HARDWARE WITH STICK WAX (ITEM 36) TO REDUCE FRICTION. DO NOT ALLOW WAX UNDER FLATWASHER.</p>	<p>NOTICE</p> <p>REFER TO SHEET 3 VIEWS A THRU J FOR STEPS 1 THRU 6 TRUSS HARDWARE ASST.</p>	<p>STEP 1</p> <p>REFER TO FIGURE 1 (FULLY TIGHTEN HARDWARE)</p>	<p>STEP 2</p> <p>SPECIAL TARGET SCREWS PART #P-223711 ALIGN. FIT. GREY (P-239611) FULLY TIGHTEN. INSTALL TARGET SCREWS</p>	<p>STEP 3</p> <p>REFER TO VIEWS D & E DO NOT TIGHTEN HARDWARE</p>	<p>STEP 4</p> <p>REFER TO VIEWS B & H DO NOT TIGHTEN HARDWARE</p>	<p>STEP 5</p> <p>REFER TO VIEWS A & C DO NOT TIGHTEN HARDWARE</p>	<p>STEP 6</p> <p>REFER TO VIEWS E & I DO NOT TIGHTEN HARDWARE</p>	<p>STEP 7</p> <p>SECURELY TIGHTEN ALL STAINLESS STEEL SHOULDER BOLT FIRST. NEXT, TIGHTEN ALL A-325 HARDWARE FOLLOWING TENSING PROCEDURES SHOWN ON SHEET 1.</p> <p>CAUTION</p> <p>DO NOT TIGHTEN ECCENTRIC BOLTS (ITEM 1) UNTIL ALIGNMENT PROCEDURE SPECIFICS.</p>	<p>NOTICE</p> <p>MAKE SURE THAT ALL #25 SPACERS (ITEM 2) ARE PROPERLY PLACED AND SHOULDER BOLTS ARE PROPERLY SEATED THROUGH ALL CONNECTIONS.</p>	<p>NOTICE</p> <p>These drawings are representations of the product of ANDREW CORPORATION. All dimensions are shown in inches unless otherwise noted. Andrew Corporation is not responsible for errors or omissions in these drawings. These drawings are intended for use as a reference only and are not to be used as the basis for the manufacture of any product.</p>																																																																						
<p>FIGURE 1</p>																																																																																		
<table border="1" style="width:100%; border-collapse: collapse;"> <tr> <th style="width:10%;">REV.</th> <th style="width:10%;">BY</th> <th style="width:10%;">APP'D.</th> <th style="width:10%;">DATE</th> <th style="width:20%;">DESCRIPTION</th> <th style="width:10%;">REVISED BY</th> <th style="width:10%;">DATE</th> <th style="width:10%;">APPROV. BY</th> </tr> <tr> <td>1</td> <td></td> <td></td> <td></td> <td>REL. TO PRODUCTION</td> <td>BRB/RSB</td> <td></td> <td>AKC</td> </tr> <tr> <td>2</td> <td></td> <td></td> <td></td> <td>REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE</td> <td>BRB/RSB</td> <td></td> <td>AKC</td> </tr> <tr> <td>3</td> <td></td> <td></td> <td></td> <td>REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE</td> <td>BRB/RSB</td> <td></td> <td>AKC</td> </tr> <tr> <td>4</td> <td></td> <td></td> <td></td> <td>REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE</td> <td>BRB/RSB</td> <td></td> <td>AKC</td> </tr> <tr> <td>5</td> <td></td> <td></td> <td></td> <td>REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE</td> <td>BRB/RSB</td> <td></td> <td>AKC</td> </tr> <tr> <td>6</td> <td></td> <td></td> <td></td> <td>REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE</td> <td>BRB/RSB</td> <td></td> <td>AKC</td> </tr> <tr> <td>7</td> <td></td> <td></td> <td></td> <td>REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE</td> <td>BRB/RSB</td> <td></td> <td>AKC</td> </tr> <tr> <td>8</td> <td></td> <td></td> <td></td> <td>REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE</td> <td>BRB/RSB</td> <td></td> <td>AKC</td> </tr> </table>											REV.	BY	APP'D.	DATE	DESCRIPTION	REVISED BY	DATE	APPROV. BY	1				REL. TO PRODUCTION	BRB/RSB		AKC	2				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC	3				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC	4				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC	5				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC	6				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC	7				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC	8				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC
REV.	BY	APP'D.	DATE	DESCRIPTION	REVISED BY	DATE	APPROV. BY																																																																											
1				REL. TO PRODUCTION	BRB/RSB		AKC																																																																											
2				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC																																																																											
3				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC																																																																											
4				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC																																																																											
5				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC																																																																											
6				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC																																																																											
7				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC																																																																											
8				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC																																																																											
<table border="1" style="width:100%; border-collapse: collapse;"> <tr> <th style="width:10%;">REV.</th> <th style="width:10%;">BY</th> <th style="width:10%;">APP'D.</th> <th style="width:10%;">DATE</th> <th style="width:20%;">DESCRIPTION</th> <th style="width:10%;">REVISED BY</th> <th style="width:10%;">DATE</th> <th style="width:10%;">APPROV. BY</th> </tr> <tr> <td>1</td> <td></td> <td></td> <td></td> <td>REL. TO PRODUCTION</td> <td>BRB/RSB</td> <td></td> <td>AKC</td> </tr> <tr> <td>2</td> <td></td> <td></td> <td></td> <td>REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE</td> <td>BRB/RSB</td> <td></td> <td>AKC</td> </tr> <tr> <td>3</td> <td></td> <td></td> <td></td> <td>REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE</td> <td>BRB/RSB</td> <td></td> <td>AKC</td> </tr> <tr> <td>4</td> <td></td> <td></td> <td></td> <td>REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE</td> <td>BRB/RSB</td> <td></td> <td>AKC</td> </tr> <tr> <td>5</td> <td></td> <td></td> <td></td> <td>REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE</td> <td>BRB/RSB</td> <td></td> <td>AKC</td> </tr> <tr> <td>6</td> <td></td> <td></td> <td></td> <td>REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE</td> <td>BRB/RSB</td> <td></td> <td>AKC</td> </tr> <tr> <td>7</td> <td></td> <td></td> <td></td> <td>REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE</td> <td>BRB/RSB</td> <td></td> <td>AKC</td> </tr> <tr> <td>8</td> <td></td> <td></td> <td></td> <td>REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE</td> <td>BRB/RSB</td> <td></td> <td>AKC</td> </tr> </table>											REV.	BY	APP'D.	DATE	DESCRIPTION	REVISED BY	DATE	APPROV. BY	1				REL. TO PRODUCTION	BRB/RSB		AKC	2				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC	3				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC	4				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC	5				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC	6				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC	7				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC	8				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC
REV.	BY	APP'D.	DATE	DESCRIPTION	REVISED BY	DATE	APPROV. BY																																																																											
1				REL. TO PRODUCTION	BRB/RSB		AKC																																																																											
2				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC																																																																											
3				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC																																																																											
4				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC																																																																											
5				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC																																																																											
6				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC																																																																											
7				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC																																																																											
8				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC																																																																											
<table border="1" style="width:100%; border-collapse: collapse;"> <tr> <th style="width:10%;">REV.</th> <th style="width:10%;">BY</th> <th style="width:10%;">APP'D.</th> <th style="width:10%;">DATE</th> <th style="width:20%;">DESCRIPTION</th> <th style="width:10%;">REVISED BY</th> <th style="width:10%;">DATE</th> <th style="width:10%;">APPROV. BY</th> </tr> <tr> <td>1</td> <td></td> <td></td> <td></td> <td>REL. TO PRODUCTION</td> <td>BRB/RSB</td> <td></td> <td>AKC</td> </tr> <tr> <td>2</td> <td></td> <td></td> <td></td> <td>REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE</td> <td>BRB/RSB</td> <td></td> <td>AKC</td> </tr> <tr> <td>3</td> <td></td> <td></td> <td></td> <td>REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE</td> <td>BRB/RSB</td> <td></td> <td>AKC</td> </tr> <tr> <td>4</td> <td></td> <td></td> <td></td> <td>REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE</td> <td>BRB/RSB</td> <td></td> <td>AKC</td> </tr> <tr> <td>5</td> <td></td> <td></td> <td></td> <td>REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE</td> <td>BRB/RSB</td> <td></td> <td>AKC</td> </tr> <tr> <td>6</td> <td></td> <td></td> <td></td> <td>REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE</td> <td>BRB/RSB</td> <td></td> <td>AKC</td> </tr> <tr> <td>7</td> <td></td> <td></td> <td></td> <td>REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE</td> <td>BRB/RSB</td> <td></td> <td>AKC</td> </tr> <tr> <td>8</td> <td></td> <td></td> <td></td> <td>REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE</td> <td>BRB/RSB</td> <td></td> <td>AKC</td> </tr> </table>											REV.	BY	APP'D.	DATE	DESCRIPTION	REVISED BY	DATE	APPROV. BY	1				REL. TO PRODUCTION	BRB/RSB		AKC	2				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC	3				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC	4				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC	5				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC	6				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC	7				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC	8				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC
REV.	BY	APP'D.	DATE	DESCRIPTION	REVISED BY	DATE	APPROV. BY																																																																											
1				REL. TO PRODUCTION	BRB/RSB		AKC																																																																											
2				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC																																																																											
3				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC																																																																											
4				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC																																																																											
5				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC																																																																											
6				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC																																																																											
7				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC																																																																											
8				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC																																																																											
<table border="1" style="width:100%; border-collapse: collapse;"> <tr> <th style="width:10%;">REV.</th> <th style="width:10%;">BY</th> <th style="width:10%;">APP'D.</th> <th style="width:10%;">DATE</th> <th style="width:20%;">DESCRIPTION</th> <th style="width:10%;">REVISED BY</th> <th style="width:10%;">DATE</th> <th style="width:10%;">APPROV. BY</th> </tr> <tr> <td>1</td> <td></td> <td></td> <td></td> <td>REL. TO PRODUCTION</td> <td>BRB/RSB</td> <td></td> <td>AKC</td> </tr> <tr> <td>2</td> <td></td> <td></td> <td></td> <td>REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE</td> <td>BRB/RSB</td> <td></td> <td>AKC</td> </tr> <tr> <td>3</td> <td></td> <td></td> <td></td> <td>REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE</td> <td>BRB/RSB</td> <td></td> <td>AKC</td> </tr> <tr> <td>4</td> <td></td> <td></td> <td></td> <td>REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE</td> <td>BRB/RSB</td> <td></td> <td>AKC</td> </tr> <tr> <td>5</td> <td></td> <td></td> <td></td> <td>REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE</td> <td>BRB/RSB</td> <td></td> <td>AKC</td> </tr> <tr> <td>6</td> <td></td> <td></td> <td></td> <td>REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE</td> <td>BRB/RSB</td> <td></td> <td>AKC</td> </tr> <tr> <td>7</td> <td></td> <td></td> <td></td> <td>REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE</td> <td>BRB/RSB</td> <td></td> <td>AKC</td> </tr> <tr> <td>8</td> <td></td> <td></td> <td></td> <td>REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE</td> <td>BRB/RSB</td> <td></td> <td>AKC</td> </tr> </table>											REV.	BY	APP'D.	DATE	DESCRIPTION	REVISED BY	DATE	APPROV. BY	1				REL. TO PRODUCTION	BRB/RSB		AKC	2				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC	3				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC	4				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC	5				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC	6				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC	7				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC	8				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC
REV.	BY	APP'D.	DATE	DESCRIPTION	REVISED BY	DATE	APPROV. BY																																																																											
1				REL. TO PRODUCTION	BRB/RSB		AKC																																																																											
2				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC																																																																											
3				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC																																																																											
4				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC																																																																											
5				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC																																																																											
6				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC																																																																											
7				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC																																																																											
8				REVISED INSTALLATION INSTRUCTIONS FOR DOWNSIDE	BRB/RSB		AKC																																																																											

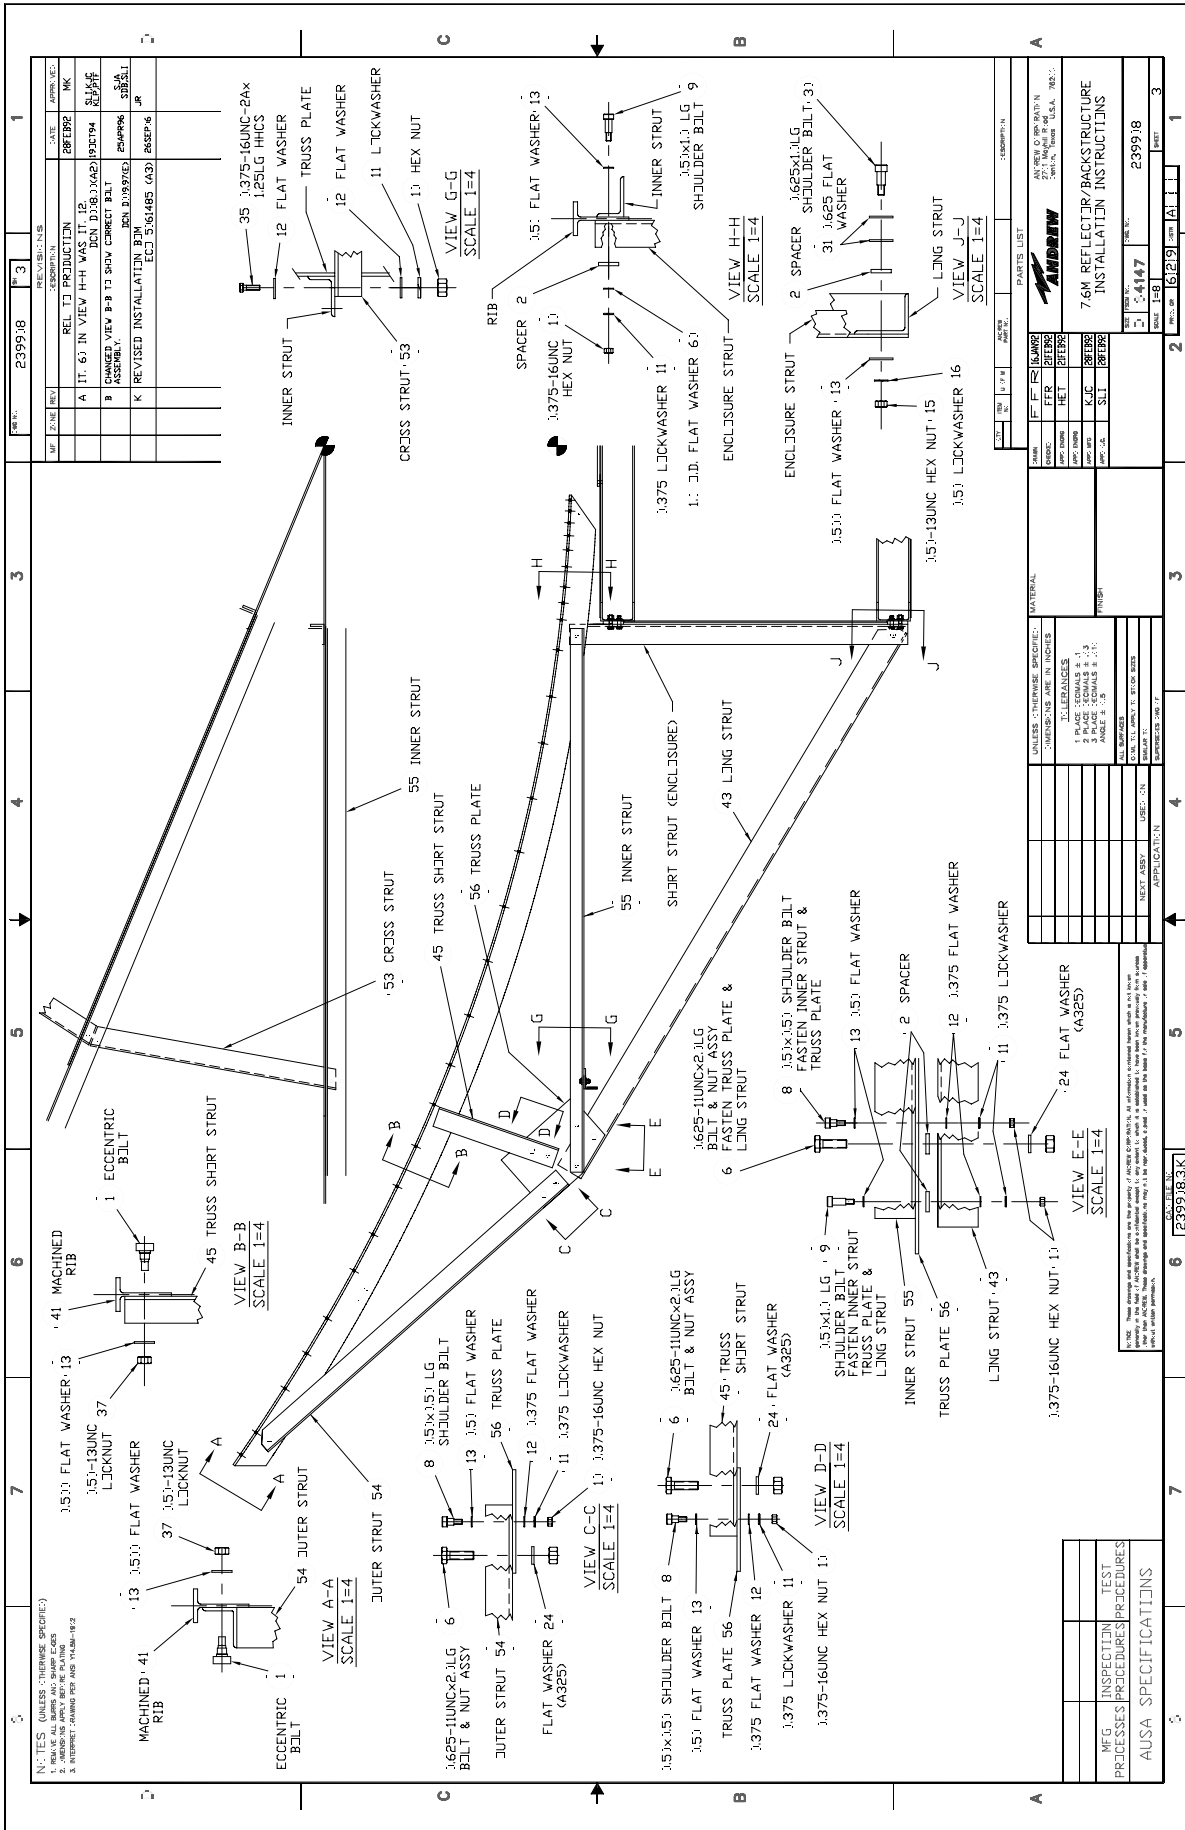

<p>NOTES: (UNLESS OTHERWISE SPECIFIED): 1. DIMENSIONS ARE IN INCHES. 2. DIMENSIONS ARE TO FACE UNLESS NOTED OTHERWISE. 3. DIMENSIONS ARE TO CENTER UNLESS NOTED OTHERWISE. 4. DIMENSIONS ARE TO SURFACE UNLESS NOTED OTHERWISE. 5. DIMENSIONS ARE TO CENTER UNLESS NOTED OTHERWISE. 6. DIMENSIONS ARE TO SURFACE UNLESS NOTED OTHERWISE. 7. DIMENSIONS ARE TO CENTER UNLESS NOTED OTHERWISE. 8. DIMENSIONS ARE TO SURFACE UNLESS NOTED OTHERWISE. 9. DIMENSIONS ARE TO CENTER UNLESS NOTED OTHERWISE. 10. DIMENSIONS ARE TO SURFACE UNLESS NOTED OTHERWISE.</p>	<p>REV. NO. DATE BY 239918 4 1 2 3 4 5 6 7</p>	<p>DESCRIPTION BEL TO PRODUCTION A ADD 'STEP' NOTE AND STEP 13. B REVISED INSTALLATION INSTRUCTIONS FOR 2025 PER 239918. C REVISED INSTALLATION INSTRUCTIONS FOR 2025 PER 239918.</p>	<p>APPROVED BY DATE 239918 239918 239918 239918 239918 239918 239918</p>	<p>DATE: 08/11/2025 TIME: 10:00 AM DRAWN: [REDACTED] CHECKED: [REDACTED] APPROVED: [REDACTED]</p>	<p>PROJECT: 239918 SHEET: 4 TITLE: 7.6M REFLECTOR/BACKSTRUCTURE INSTALLATION INSTRUCTIONS</p>
---	--	---	--	---	---

STEP 9:
 ATTACH THE REFLECTOR PANELS BY PLACING THEM IN THE RIBS AND SLIDING THEM INWARD CAREFULLY GUIDING THE RIB FLANGE BETWEEN THE SKIRT AND PANEL. PLACE SEAM HARDWARE (ITEM 4 & 7) IN THE 4TH HOLE FROM THE OUTBOARD EDGE ON BOTH SIDES OF THE PANEL FIRST. FINGER TIGHT ONLY. THEN PLACE ALL REMAINING HARDWARE. FINGER TIGHT ONLY. THEN ATTACH SKIRT TO RIB HARDWARE AS SHOWN IN SECTION L-L. FINGER TIGHT ONLY. PANELS SHOULD BE FIRST ATTACHED TO EACH RIB TO BALANCE THE ENCLASURE ASSEMBLY. THEN ATTACH PANEL 1 AND PANEL 2, THEN PANEL 3 AND 4 AND SO ON. REFER TO VIEW M-M, SHEET 4.

STEP 11:
 LOOSELY ATTACH LIFTING TABS (ITEM 28), LOCATED IN THE 8TH AND INNER 55 1/8" SEAM HOLES OF THE PANEL 9). APART FROM EACH OTHER (4 REQUIRED); REFER TO FIGURE 2 AND VIEW M-M.

NOTICE:
 WHEN ATTACHING LIFTING TABS, TEMPORARILY REMOVE SEAM HARDWARE AT THE 9TH HOLE LOCATION.

STEP 12:
 CHECK REFLECTOR PANEL FITS TO INSURE THAT SEAM WIDTHS AND PANELS ARE NOT OVERLAPPING. ALL PANEL SEAM HARDWARE SHOULD BE TIGHT BEFORE THE INITIAL INSTALLATION AND CALIBRATION. PER NOTICE IN 239611, SHEET 1.

STEP 13:
 AFTER ALL 16 REFLECTOR PANELS ARE FASTENED TO RIBS, ATTACH THE CROSS STRUTS (ITEM 53) BY PLACING THEM IN BETWEEN THE INNER STRUTS AND THEN TIGHTEN THE INNER STRUTS AND STRUTS TO BE ATTACHED TO THE INNER STRUTS. TIGHTEN ALL HARDWARE. REFER TO VIEW G-G (SHEET 3).

NOTICE:
 THE CROSS STRUTS (ITEM 53) ARE THE LAST ITEM TO BE INSTALLED ON TOP SIDE OF THE RIBS.

FIGURE 2

STEP 13: SEE SHEET 5

NOTICE:
 DURING OVERNIGHT OR HIGH-WIND CONDITIONS, INSTALL TEMPORARY SUPPORTS AND STAKE TAG LINES AT 4 PLACES APPROXIMATELY 9' TO EACH OTHER. REFER TO FIGURE 2.

MFG	INSPECTION	TEST	PROCEDURES/PROCEDURES

AUSA SPECIFICATIONS

5	6	7	4	3	2	1
---	---	---	---	---	---	---

NOTES (UNLESS OTHERWISE SPECIFIED):

1. DIMENSIONS APPLY UNLESS OTHERWISE SPECIFIED.
2. DIMENSIONS APPLY UNLESS OTHERWISE SPECIFIED.
3. DIMENSIONS APPLY UNLESS OTHERWISE SPECIFIED.

STEP 13:

ATTACH TRIPJD CHANNEL LEGS TO TRIPJD JOINT CASTINGS AND TRIPJD TUBE WELDMENT. REFER TO VIEW N-N, SNUG HARDWARE. DO NOT TIGHTEN RAISE TRIPJD ASSEMBLY AND ATTACH TO ELEVATION JACK ASSEMBLY AND TRIPJD TUBE WELDMENT. DRIVE 1/2" x 1/4" NYLON SCREW INTO NYLON DRIVE BOLT. EXTEND JACK TO DIMENSION SHOWN. REATTACH BOLT. RAISE JACK UP TO TRIPJD AND MAKE FINAL CONNECTION AND SNUG. DO NOT TIGHTEN. USE THE 3 FT NYLON CHOKER JUST BELOW THE ELEVATION JACK BODY AND THE 6 FT NYLON CHOKER AROUND THE TJP OF THE MOUNT KING POST. CONNECT A PULLER JST BETWEEN THE TWJ AND THE MOUNT KING POST. REFER TO INSTALLATION INSTRUCTION P/N 239918A FOR MOUNT ASSEMBLY.

CAUTION: WHEN RAISING, DO NOT ALLOW ANY PERSONNEL CLIMB UNDER THE JACK.

PARTS LIST	
QTY	DESCRIPTION
2	1/2-11UNCx2.1 LG A-325 BOLT & NUT ASSEMBLY
2	1/2-11UNCx1.75 LG A-325 BOLT & NUT ASSEMBLY
2	1/2-9UNCx5.25 LG A-325 BOLT & NUT ASSEMBLY
2	FLATWASHER A-325
2	JAM NUT

DATE	REV	DESCRIPTION	APPROVED
239918	5	REL TO PRODUCTION	BBE/BBB
	A	IN VIEW N-N, ITEM 39 WAS ITEM P. DESCRIPTION: 1/2-11UNCx2.1 LG A-325 BOLT & NUT ASSEMBLY	BBB/BBB
	B	1/2-11UNCx1.75 LG A-325 BOLT & NUT ASSEMBLY	BBB/BBB
	C	CHANGED PROBABLY	BBB/BBB
	K	REVISED INSTALLATION B3M	BBB/BBB

DATE	REV	DESCRIPTION	APPROVED
239918	5	REL TO PRODUCTION	BBB/BBB
	A	IN VIEW N-N, ITEM 39 WAS ITEM P. DESCRIPTION: 1/2-11UNCx2.1 LG A-325 BOLT & NUT ASSEMBLY	BBB/BBB
	B	1/2-11UNCx1.75 LG A-325 BOLT & NUT ASSEMBLY	BBB/BBB
	C	CHANGED PROBABLY	BBB/BBB
	K	REVISED INSTALLATION B3M	BBB/BBB

PARTS LIST	
QTY	DESCRIPTION
2	1/2-11UNCx2.1 LG A-325 BOLT & NUT ASSEMBLY
2	1/2-11UNCx1.75 LG A-325 BOLT & NUT ASSEMBLY
2	1/2-9UNCx5.25 LG A-325 BOLT & NUT ASSEMBLY
2	FLATWASHER A-325
2	JAM NUT

DATE	REV	DESCRIPTION	APPROVED
239918	5	REL TO PRODUCTION	BBB/BBB
	A	IN VIEW N-N, ITEM 39 WAS ITEM P. DESCRIPTION: 1/2-11UNCx2.1 LG A-325 BOLT & NUT ASSEMBLY	BBB/BBB
	B	1/2-11UNCx1.75 LG A-325 BOLT & NUT ASSEMBLY	BBB/BBB
	C	CHANGED PROBABLY	BBB/BBB
	K	REVISED INSTALLATION B3M	BBB/BBB

DATE	REV	DESCRIPTION	APPROVED
239918	5	REL TO PRODUCTION	BBB/BBB
	A	IN VIEW N-N, ITEM 39 WAS ITEM P. DESCRIPTION: 1/2-11UNCx2.1 LG A-325 BOLT & NUT ASSEMBLY	BBB/BBB
	B	1/2-11UNCx1.75 LG A-325 BOLT & NUT ASSEMBLY	BBB/BBB
	C	CHANGED PROBABLY	BBB/BBB
	K	REVISED INSTALLATION B3M	BBB/BBB

REV. 1: (UNLESS OTHERWISE SPECIFIED)
 2. APPROVED APPROVED BY PLANNING
 3. APPROVED APPROVED BY PLANNING
 4. APPROVED APPROVED BY PLANNING
 5. APPROVED APPROVED BY PLANNING
 6. APPROVED APPROVED BY PLANNING
 7. APPROVED APPROVED BY PLANNING

1
2
3
4
5
6
7

NOTES: (UNLESS OTHERWISE SPECIFIED)
 1. APPROVED APPROVED BY PLANNING
 2. APPROVED APPROVED BY PLANNING
 3. APPROVED APPROVED BY PLANNING
 4. APPROVED APPROVED BY PLANNING
 5. APPROVED APPROVED BY PLANNING
 6. APPROVED APPROVED BY PLANNING
 7. APPROVED APPROVED BY PLANNING

STEP 14:
 PRIOR TO LIFTING REFLECTOR ASSEMBLY TO MOUNT, INSERT FEED SYSTEM AND NECESSARY CONNECTIONS PER INSTALLATION INSTRUCTIONS PROVIDED WITH FEED KIT.

STEP 15:
 ATTACH 5/8" SHACKLES WITH CORRESPONDING 16 FOOT CHECKERS TO FOUR LIFTING TABS IN REFLECTOR ASSEMBLY. REFER TO FIGURE 4. ATTACH 23 FOOT TAG LINES TO LONG STRUTS. RAISE REFLECTOR/BACK STRUCTURE ASSEMBLY USING 16 FT CHECKER AND ELEVATION AXIS ASSEMBLY USING TAG LINES FOR PROPER GUIDANCE. ATTACH REAR JIF ENCLOSURE ASSEMBLY TO ELEVATION AXIS ASSEMBLY. REFER TO SHEET 7. ALIGN MOUNTING HOLES AND ATTACH FORWARD LEG OF JACK TRIPID TO FORWARD PART OF ENCLOSURE ASSEMBLY. MAKE SURE TO PLACE CAST SPACER (ITEM 49) BETWEEN TRIPID LEG AND ENCLOSURE. KEEPING JIF HARDWARE PREVIOUSLY INSTALLED IN PLACE, ATTACH ELEVATION AXIS ASSEMBLY TO UPPER TRIPID LEG TO ENCLOSURE. (3) ELEVATION JACK TO TRIPID ASSEMBLY. (4) TRIPID JOINT CASTINGS TO ELEVATION AXIS ASSEMBLY. (5) CHANNEL LEGS TO JOINT CASTING AND TRIPID. TIGHTEN PER A-325 TENSURING PROCEDURE.

STEP 16:
 AFTER ASSEMBLY IS COMPLETE, REMOVE ALL HARDWARE (ITEMS 28) AND REPLACE LIFTING TAB HARDWARE WITH SEAM HARDWARE (ITEMS 3 & 7) IN THE 8TH, 9TH AND 17TH HOLE LOCATIONS AS DESCRIBED IN STEP 11 AND SHOWN IN FIGURE 2.

STEP 17:
 INSTALL ENCLOSURE DOOR BY ENGAGING DOOR LATCHES.

STEP 18:
 REMOVE TAG LINES AND PULLER HOIST.

FIGURE 4

PART NO.	QTY	DESCRIPTION	MATERIAL	UNIT PRICE	TOTAL PRICE
UNLESS OTHERWISE SPECIFIED:					
DIMENSIONS ARE IN INCHES					
TOLERANCES:					
1. FINISHES: DIMENSIONS ± .13					
2. PLACES: DIMENSIONS ± .13					
3. HOLES: DIMENSIONS ± .13					
4. ANGLES: DIMENSIONS ± .13					
ALL SURFACES:					
FINISH: AS SUPPLIED					
DRAWN BY: 239918					
CHECKED BY: 239918					
APPROVED BY: 239918					

DATE	REV	DESCRIPTION	BY	CHK	APP
239918	6	REVISIONS			
		A: BEL VIEW P-P & T T 29, VIEW P-P, MODIFIED STEP 15	JEN.DJG.11(02)	SMY99	BLK.SLL
		B: CHANGED PICTORIALY	JEN.DJG.11(02)	BLK.SLL	WFL.SLL
		K: REVISED INSTALLATION BOM	ECJ.S36.1(05) (A3)	RSEP16	JR

PARTS LIST	MATERIAL	UNIT PRICE	TOTAL PRICE
UNLESS OTHERWISE SPECIFIED:			
DIMENSIONS ARE IN INCHES			
TOLERANCES:			
1. FINISHES: DIMENSIONS ± .13			
2. PLACES: DIMENSIONS ± .13			
3. HOLES: DIMENSIONS ± .13			
4. ANGLES: DIMENSIONS ± .13			
ALL SURFACES:			
FINISH: AS SUPPLIED			
DRAWN BY: 239918			
CHECKED BY: 239918			
APPROVED BY: 239918			

DATE	REV	DESCRIPTION	BY	CHK	APP
239918	6	REVISIONS			
		A: BEL VIEW P-P & T T 29, VIEW P-P, MODIFIED STEP 15	JEN.DJG.11(02)	SMY99	BLK.SLL
		B: CHANGED PICTORIALY	JEN.DJG.11(02)	BLK.SLL	WFL.SLL
		K: REVISED INSTALLATION BOM	ECJ.S36.1(05) (A3)	RSEP16	JR

7

6

5

4

3

2

1

C

B

A

B

C

NOTES (UNLESS OTHERWISE SPECIFIED):

1. DIMENSIONS APPLY UNLESS NOTED OTHERWISE
2. DIMENSIONS APPLY UNLESS NOTED OTHERWISE
3. DIMENSIONS APPLY UNLESS NOTED OTHERWISE
4. ITEMS 63, 64 & 65 INCLUDE 2 SPARES.
5. TIGHTENING SEQUENCE: SET DISTANCE SHOWN IN A, TIGHTEN SECURELY B THEN TIGHTEN SECURELY C 135 FT-LB 185 N-M. LAST, TIGHTEN D 135 FT-LB 185 N-M.

A SET APPROX. 75mm (3.0")

EXPLODED VIEW

ASSEMBLED VIEW

ELEVATION PIVOT ASSEMBLY
SOME ITEMS REMOVED FOR CLARITY

ASSEMBLED VIEW

REVISIONS

REV.	DATE	DESCRIPTION
1	05/16/14	REL TO PRODUCTION
2	06/20/14	REVISE INSTALLATION BOM
3	09/18/14	ECC 50161485 (A3)
4	06/20/16	

APPROVALS

DATE	APPROVED BY	APPROVED FOR

PARTS LIST

QTY	PART NO.	DESCRIPTION
1	56776	ENCLOSURE
1	56776	MOUNTING INSTRUCTIONS

UNLESS OTHERWISE SPECIFIED:

UNIT	DIMENSIONS	FINISH
INCHES	1/8" (0.125")	
INCHES	1/4" (0.250")	
INCHES	3/8" (0.375")	
INCHES	1/2" (0.500")	
INCHES	5/8" (0.625")	
INCHES	3/4" (0.750")	
INCHES	7/8" (0.875")	
INCHES	1" (1.000")	


REVISIONS

REV.	DATE	DESCRIPTION
1	05/16/14	REL TO PRODUCTION
2	06/20/14	REVISE INSTALLATION BOM
3	09/18/14	ECC 50161485 (A3)
4	06/20/16	

APPROVALS

DATE	APPROVED BY	APPROVED FOR

8	7	6	5	4	3	2	1																																																			
<p>NOTES: (UNLESS OTHERWISE SPECIFIED)</p> <ol style="list-style-type: none"> 1. UNLESS OTHERWISE SPECIFIED, ALL DIMENSIONS ARE IN INCHES. 2. DIMENSIONS ARE TO CENTER UNLESS OTHERWISE SPECIFIED. 3. DIMENSIONS ARE TO CENTER UNLESS OTHERWISE SPECIFIED. 4. DIMENSIONS ARE TO CENTER UNLESS OTHERWISE SPECIFIED. 																																																										
<p>GENERAL READ THE INSTRUCTIONS THOROUGHLY BEFORE ASSEMBLY. FOLLOW THE SEQUENCES FOR PROPER ASSEMBLY AND OPERATION.</p> <p>CAUTION THIS WARNING INDICATES THAT FAILURE TO FOLLOW THE PROPER PROCEDURE AT THIS POINT COULD RESULT IN DAMAGE TO THE EQUIPMENT AND/OR OTHER PROPERTY AND POSSIBLE INJURY TO PERSONNEL.</p> <p style="text-align: center;">NOTICE THIS INDICATES INFORMATION THAT SHOULD BE READ BEFORE PROCEEDING.</p> <p>UNPACKING CAREFULLY REMOVE ALL PARTS FROM SHIPPING BOXES. THE CONTENTS SHOULD CORRESPOND WITH THE PARTS LIST. ANY DAMAGE OR DISCREPANCY SHOULD BE REPORTED TO THE FACTORY IMMEDIATELY.</p> <p style="text-align: center;">NOTICE THE INSTALLATION, MAINTENANCE OR REMOVAL OF AN ANTENNA SYSTEM SHOULD BE DONE BY QUALIFIED PERSONNEL. TO PREVENT PERSONAL INJURY, ANTENNA MAINTENANCE AND OPERATION OF EQUIPMENT, ALWAYS DISCONNECT THE ANTENNA FROM THE POWER SOURCE BEFORE INSTALLATION OR MAINTENANCE PRACTICES.</p>																																																										
<p>TOOLS RECOMMENDED FOR PROPER INSTALLATION</p> <table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th>QUANTITY</th> <th>DESCRIPTION</th> </tr> </thead> <tbody> <tr> <td>4</td> <td>3/16 HEX SOCKET (ALLEN) WRENCH</td> </tr> <tr> <td>4</td> <td>1/4 HEX SOCKET (ALLEN) WRENCH</td> </tr> <tr> <td>2</td> <td>3/16 SOCKET</td> </tr> <tr> <td>2</td> <td>1/8 SOCKET</td> </tr> <tr> <td>2</td> <td>1/8 SOCKET</td> </tr> <tr> <td>2</td> <td>1/2 DRIVE RATCHET</td> </tr> <tr> <td>2</td> <td>1/2 DRIVE EXTENSION</td> </tr> <tr> <td>1</td> <td>8" ADJUSTABLE WRENCH</td> </tr> <tr> <td>1</td> <td>12 FT STEP LADDER</td> </tr> </tbody> </table>								QUANTITY	DESCRIPTION	4	3/16 HEX SOCKET (ALLEN) WRENCH	4	1/4 HEX SOCKET (ALLEN) WRENCH	2	3/16 SOCKET	2	1/8 SOCKET	2	1/8 SOCKET	2	1/2 DRIVE RATCHET	2	1/2 DRIVE EXTENSION	1	8" ADJUSTABLE WRENCH	1	12 FT STEP LADDER																															
QUANTITY	DESCRIPTION																																																									
4	3/16 HEX SOCKET (ALLEN) WRENCH																																																									
4	1/4 HEX SOCKET (ALLEN) WRENCH																																																									
2	3/16 SOCKET																																																									
2	1/8 SOCKET																																																									
2	1/8 SOCKET																																																									
2	1/2 DRIVE RATCHET																																																									
2	1/2 DRIVE EXTENSION																																																									
1	8" ADJUSTABLE WRENCH																																																									
1	12 FT STEP LADDER																																																									
<p>7.6M FINAL ALIGNMENT DATA</p> <p>SITE: _____ INSTALLER: _____ DATE: _____</p> <table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th>RIB</th> <th>OUTBOARD (2E1) TARGET ANGLE</th> <th>INBOARD (2E2) TARGET ANGLE</th> </tr> </thead> <tbody> <tr><td>RIB 1</td><td></td><td></td></tr> <tr><td>RIB 2</td><td></td><td></td></tr> <tr><td>RIB 3</td><td></td><td></td></tr> <tr><td>RIB 4</td><td></td><td></td></tr> <tr><td>RIB 5</td><td></td><td></td></tr> <tr><td>RIB 6</td><td></td><td></td></tr> <tr><td>RIB 7</td><td></td><td></td></tr> <tr><td>RIB 8</td><td></td><td></td></tr> <tr><td>RIB 9</td><td></td><td></td></tr> <tr><td>RIB 10</td><td></td><td></td></tr> <tr><td>RIB 11</td><td></td><td></td></tr> <tr><td>RIB 12</td><td></td><td></td></tr> <tr><td>RIB 13</td><td></td><td></td></tr> <tr><td>RIB 14</td><td></td><td></td></tr> <tr><td>RIB 15</td><td></td><td></td></tr> <tr><td>RIB 16</td><td></td><td></td></tr> </tbody> </table>								RIB	OUTBOARD (2E1) TARGET ANGLE	INBOARD (2E2) TARGET ANGLE	RIB 1			RIB 2			RIB 3			RIB 4			RIB 5			RIB 6			RIB 7			RIB 8			RIB 9			RIB 10			RIB 11			RIB 12			RIB 13			RIB 14			RIB 15			RIB 16		
RIB	OUTBOARD (2E1) TARGET ANGLE	INBOARD (2E2) TARGET ANGLE																																																								
RIB 1																																																										
RIB 2																																																										
RIB 3																																																										
RIB 4																																																										
RIB 5																																																										
RIB 6																																																										
RIB 7																																																										
RIB 8																																																										
RIB 9																																																										
RIB 10																																																										
RIB 11																																																										
RIB 12																																																										
RIB 13																																																										
RIB 14																																																										
RIB 15																																																										
RIB 16																																																										
<p>THEODOLITE CALIBRATION SPECIFICATIONS</p> <table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th>LEVELING</th> <th>READING WITHIN 15" (0.0042") OF EACH OTHER.</th> </tr> </thead> <tbody> <tr> <td>ALL 3 STICK POSITION READINGS</td> <td>(0.0042") OF EACH OTHER.</td> </tr> <tr> <th>CENTERING</th> <th>READING WITHIN 15" (0.0042") OF 90°/0°/00°.</th> </tr> <tr> <td>ALL 4 CENTER READINGS</td> <td>(0.0069") OF EACH OTHER.</td> </tr> <tr> <th>HEIGHT</th> <th>READING WITHIN 15" (0.0042") OF 90°/0°/00°.</th> </tr> <tr> <td>ALL 3 LEVEL POSITION READINGS</td> <td>(0.0042") OF EACH OTHER.</td> </tr> </tbody> </table>								LEVELING	READING WITHIN 15" (0.0042") OF EACH OTHER.	ALL 3 STICK POSITION READINGS	(0.0042") OF EACH OTHER.	CENTERING	READING WITHIN 15" (0.0042") OF 90°/0°/00°.	ALL 4 CENTER READINGS	(0.0069") OF EACH OTHER.	HEIGHT	READING WITHIN 15" (0.0042") OF 90°/0°/00°.	ALL 3 LEVEL POSITION READINGS	(0.0042") OF EACH OTHER.																																							
LEVELING	READING WITHIN 15" (0.0042") OF EACH OTHER.																																																									
ALL 3 STICK POSITION READINGS	(0.0042") OF EACH OTHER.																																																									
CENTERING	READING WITHIN 15" (0.0042") OF 90°/0°/00°.																																																									
ALL 4 CENTER READINGS	(0.0069") OF EACH OTHER.																																																									
HEIGHT	READING WITHIN 15" (0.0042") OF 90°/0°/00°.																																																									
ALL 3 LEVEL POSITION READINGS	(0.0042") OF EACH OTHER.																																																									
<p>REFLECTOR ALIGNMENT ANGLE SPECIFICATIONS</p> <table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th>FOR TOPCON THEODOLITE</th> <th>FOR WILD THEODOLITE</th> </tr> </thead> <tbody> <tr> <td>EL 1 88° 55' 23"</td> <td>89° 12' 58"</td> </tr> <tr> <td>EL 2 101° 23' 28"</td> <td>101° 47' 17"</td> </tr> </tbody> </table>								FOR TOPCON THEODOLITE	FOR WILD THEODOLITE	EL 1 88° 55' 23"	89° 12' 58"	EL 2 101° 23' 28"	101° 47' 17"																																													
FOR TOPCON THEODOLITE	FOR WILD THEODOLITE																																																									
EL 1 88° 55' 23"	89° 12' 58"																																																									
EL 2 101° 23' 28"	101° 47' 17"																																																									
<p>THEODOLITE CALIBRATION SPECIFICATIONS</p> <p>ALL 3 STICK POSITION READINGS WITHIN 15" (0.0042") OF EACH OTHER.</p> <p>ALL 4 CENTER READINGS WITHIN 15" (0.0042") OF 90°/0°/00°.</p> <p>ALL 3 LEVEL POSITION READINGS WITHIN 15" (0.0042") OF EACH OTHER.</p>																																																										
<p>NOTICE</p> <p>TEMPERATURE CHANGE DURING CALIBRATION OR ALIGNMENT OF THIS REFLECTOR WILL ADVERSELY AFFECT THE ALIGNMENT QUALITY, AND THEREFORE, THE PERFORMANCE OF THIS ANTENNA. CALIBRATION AND ALIGNMENT SHOULD ONLY BE ATTEMPTED UNDER IDEAL CONDITIONS, TYPICALLY AFTER SUNSET OR UNDER HEAVY CLOUD COVER.</p> <p>BEFORE THEODOLITE INSTALLATION/CALIBRATION, OR REFLECTOR ALIGNMENT, ALL PANEL SEAM HARDWARE SHOULD BE LOOSE, INCLUDING THE TORQUE TUBE SUPPORT. TO PREVENT INJURY TO THE OPERATOR, THE TORQUE TUBE SUPPORT HARDWARE AND BRACKETS, WHICH SHOULD BE TIGHT, THE SUBREFLECTOR STRUTS SHOULD NOT BE TIGHT. ATTACHED TO THE REFLECTOR AT THIS TIME.</p>																																																										
<p>7.6M THEODOLITE & ALIGNMENT INSTRUCTIONS</p> <p>1. MARK NUTS AND END OF BOLTS WITH STRAIGHT LINE SEE FIGURE L.</p> <p>2. TIGHTEN NUTS FURTHER WITH EXTRA LONG WRENCH OR POWER WRENCH UNTIL NUTS ARE FLUSH WITH END OF BOLT. MARK END OF BOLT WITH STRAIGHT LINE.</p> <p>3. TIGHTEN NUTS WITH EXTRA LONG WRENCH OR POWER WRENCH UNTIL NUTS ARE FLUSH WITH END OF BOLT. MARK END OF BOLT WITH STRAIGHT LINE.</p> <p>4. TIGHTEN NUTS WITH EXTRA LONG WRENCH OR POWER WRENCH UNTIL NUTS ARE FLUSH WITH END OF BOLT. MARK END OF BOLT WITH STRAIGHT LINE.</p> <p>5. TIGHTEN NUTS WITH EXTRA LONG WRENCH OR POWER WRENCH UNTIL NUTS ARE FLUSH WITH END OF BOLT. MARK END OF BOLT WITH STRAIGHT LINE.</p> <p>6. TIGHTEN NUTS WITH EXTRA LONG WRENCH OR POWER WRENCH UNTIL NUTS ARE FLUSH WITH END OF BOLT. MARK END OF BOLT WITH STRAIGHT LINE.</p> <p>7. TIGHTEN NUTS WITH EXTRA LONG WRENCH OR POWER WRENCH UNTIL NUTS ARE FLUSH WITH END OF BOLT. MARK END OF BOLT WITH STRAIGHT LINE.</p> <p>8. TIGHTEN NUTS WITH EXTRA LONG WRENCH OR POWER WRENCH UNTIL NUTS ARE FLUSH WITH END OF BOLT. MARK END OF BOLT WITH STRAIGHT LINE.</p>																																																										
<p>TOOLS RECOMMENDED FOR PROPER INSTALLATION</p> <table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th>QUANTITY</th> <th>DESCRIPTION</th> </tr> </thead> <tbody> <tr> <td>4</td> <td>3/16 HEX SOCKET (ALLEN) WRENCH</td> </tr> <tr> <td>4</td> <td>1/4 HEX SOCKET (ALLEN) WRENCH</td> </tr> <tr> <td>2</td> <td>3/16 SOCKET</td> </tr> <tr> <td>2</td> <td>1/8 SOCKET</td> </tr> <tr> <td>2</td> <td>1/8 SOCKET</td> </tr> <tr> <td>2</td> <td>1/2 DRIVE RATCHET</td> </tr> <tr> <td>2</td> <td>1/2 DRIVE EXTENSION</td> </tr> <tr> <td>1</td> <td>8" ADJUSTABLE WRENCH</td> </tr> <tr> <td>1</td> <td>12 FT STEP LADDER</td> </tr> </tbody> </table>								QUANTITY	DESCRIPTION	4	3/16 HEX SOCKET (ALLEN) WRENCH	4	1/4 HEX SOCKET (ALLEN) WRENCH	2	3/16 SOCKET	2	1/8 SOCKET	2	1/8 SOCKET	2	1/2 DRIVE RATCHET	2	1/2 DRIVE EXTENSION	1	8" ADJUSTABLE WRENCH	1	12 FT STEP LADDER																															
QUANTITY	DESCRIPTION																																																									
4	3/16 HEX SOCKET (ALLEN) WRENCH																																																									
4	1/4 HEX SOCKET (ALLEN) WRENCH																																																									
2	3/16 SOCKET																																																									
2	1/8 SOCKET																																																									
2	1/8 SOCKET																																																									
2	1/2 DRIVE RATCHET																																																									
2	1/2 DRIVE EXTENSION																																																									
1	8" ADJUSTABLE WRENCH																																																									
1	12 FT STEP LADDER																																																									
<p>USE FELT MARKER</p> <p>FIG. L AFTER TENSILING</p> <p>FIG. M AFTER TENSILING</p> <p>FIG. N AFTER TENSILING</p> <p>FIG. O AFTER TENSILING</p>																																																										
<p>UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE IN INCHES</p> <p>TOLERANCES</p> <p>1. FRACTIONS TO NEAREST 1/16"</p> <p>2. DECIMALS TO NEAREST 0.005"</p> <p>3. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>4. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>5. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>6. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>7. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>8. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>9. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>10. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>11. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>12. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>13. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>14. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>15. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>16. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>17. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>18. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>19. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>20. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>21. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>22. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>23. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>24. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>25. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>26. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>27. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>28. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>29. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>30. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>31. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>32. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>33. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>34. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>35. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>36. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>37. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>38. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>39. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>40. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>41. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>42. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>43. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>44. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>45. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>46. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>47. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>48. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>49. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>50. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>51. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>52. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>53. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>54. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>55. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>56. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>57. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>58. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>59. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>60. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>61. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>62. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>63. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>64. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>65. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>66. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>67. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>68. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>69. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>70. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>71. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>72. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>73. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>74. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>75. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>76. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>77. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>78. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>79. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>80. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>81. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>82. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>83. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>84. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>85. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>86. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>87. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>88. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>89. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>90. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>91. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>92. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>93. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>94. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>95. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>96. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>97. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>98. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>99. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p> <p>100. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED</p>																																																										
<p>REVISIONS</p> <table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th>NO.</th> <th>DATE</th> <th>DESCRIPTION</th> <th>BY</th> <th>APP'D</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>08/01/00</td> <td>REVISED FOR NEW MODEL</td> <td></td> <td></td> </tr> <tr> <td>2</td> <td>08/01/00</td> <td>REVISED FOR NEW MODEL</td> <td></td> <td></td> </tr> <tr> <td>3</td> <td>08/01/00</td> <td>REVISED FOR NEW MODEL</td> <td></td> <td></td> </tr> <tr> <td>4</td> <td>08/01/00</td> <td>REVISED FOR NEW MODEL</td> <td></td> <td></td> </tr> </tbody> </table>								NO.	DATE	DESCRIPTION	BY	APP'D	1	08/01/00	REVISED FOR NEW MODEL			2	08/01/00	REVISED FOR NEW MODEL			3	08/01/00	REVISED FOR NEW MODEL			4	08/01/00	REVISED FOR NEW MODEL																												
NO.	DATE	DESCRIPTION	BY	APP'D																																																						
1	08/01/00	REVISED FOR NEW MODEL																																																								
2	08/01/00	REVISED FOR NEW MODEL																																																								
3	08/01/00	REVISED FOR NEW MODEL																																																								
4	08/01/00	REVISED FOR NEW MODEL																																																								
<p>PARTS LIST</p> <table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th>QTY</th> <th>DESCRIPTION</th> </tr> </thead> <tbody> <tr><td>1</td><td>TARGET SCREW (SPECIAL)</td></tr> <tr><td>4</td><td>0.50-150NC-2B HEX NUT</td></tr> <tr><td>4</td><td>0.50 LOCKWASHER</td></tr> <tr><td>4</td><td>0.50 FLAT WASHER</td></tr> <tr><td>4</td><td>0.50-200NC-2D0LG PHCS</td></tr> <tr><td>4</td><td>0.50-200NC-2B HEX NUT</td></tr> <tr><td>4</td><td>0.25 FLAT WASHER</td></tr> <tr><td>4</td><td>KNOB ASSY</td></tr> <tr><td>1</td><td>RIB HOLDER ASSY (7.6M)</td></tr> <tr><td>4</td><td>ALIGN STICK ASSY</td></tr> <tr><td>1</td><td>THEODOLITE SUPPORT ASSY</td></tr> <tr><td>1</td><td>THEODOLITE KIT</td></tr> </tbody> </table>								QTY	DESCRIPTION	1	TARGET SCREW (SPECIAL)	4	0.50-150NC-2B HEX NUT	4	0.50 LOCKWASHER	4	0.50 FLAT WASHER	4	0.50-200NC-2D0LG PHCS	4	0.50-200NC-2B HEX NUT	4	0.25 FLAT WASHER	4	KNOB ASSY	1	RIB HOLDER ASSY (7.6M)	4	ALIGN STICK ASSY	1	THEODOLITE SUPPORT ASSY	1	THEODOLITE KIT																									
QTY	DESCRIPTION																																																									
1	TARGET SCREW (SPECIAL)																																																									
4	0.50-150NC-2B HEX NUT																																																									
4	0.50 LOCKWASHER																																																									
4	0.50 FLAT WASHER																																																									
4	0.50-200NC-2D0LG PHCS																																																									
4	0.50-200NC-2B HEX NUT																																																									
4	0.25 FLAT WASHER																																																									
4	KNOB ASSY																																																									
1	RIB HOLDER ASSY (7.6M)																																																									
4	ALIGN STICK ASSY																																																									
1	THEODOLITE SUPPORT ASSY																																																									
1	THEODOLITE KIT																																																									
<p>AGENCY APPROVAL</p> <p>NAME: _____ TITLE: _____</p> <p>DATE: _____</p> <p>7.6M THEODOLITE & ALIGNMENT INSTRUCTIONS</p> <p>FIG. NO. D 84147</p> <p>REV. 1 OF 6</p>																																																										

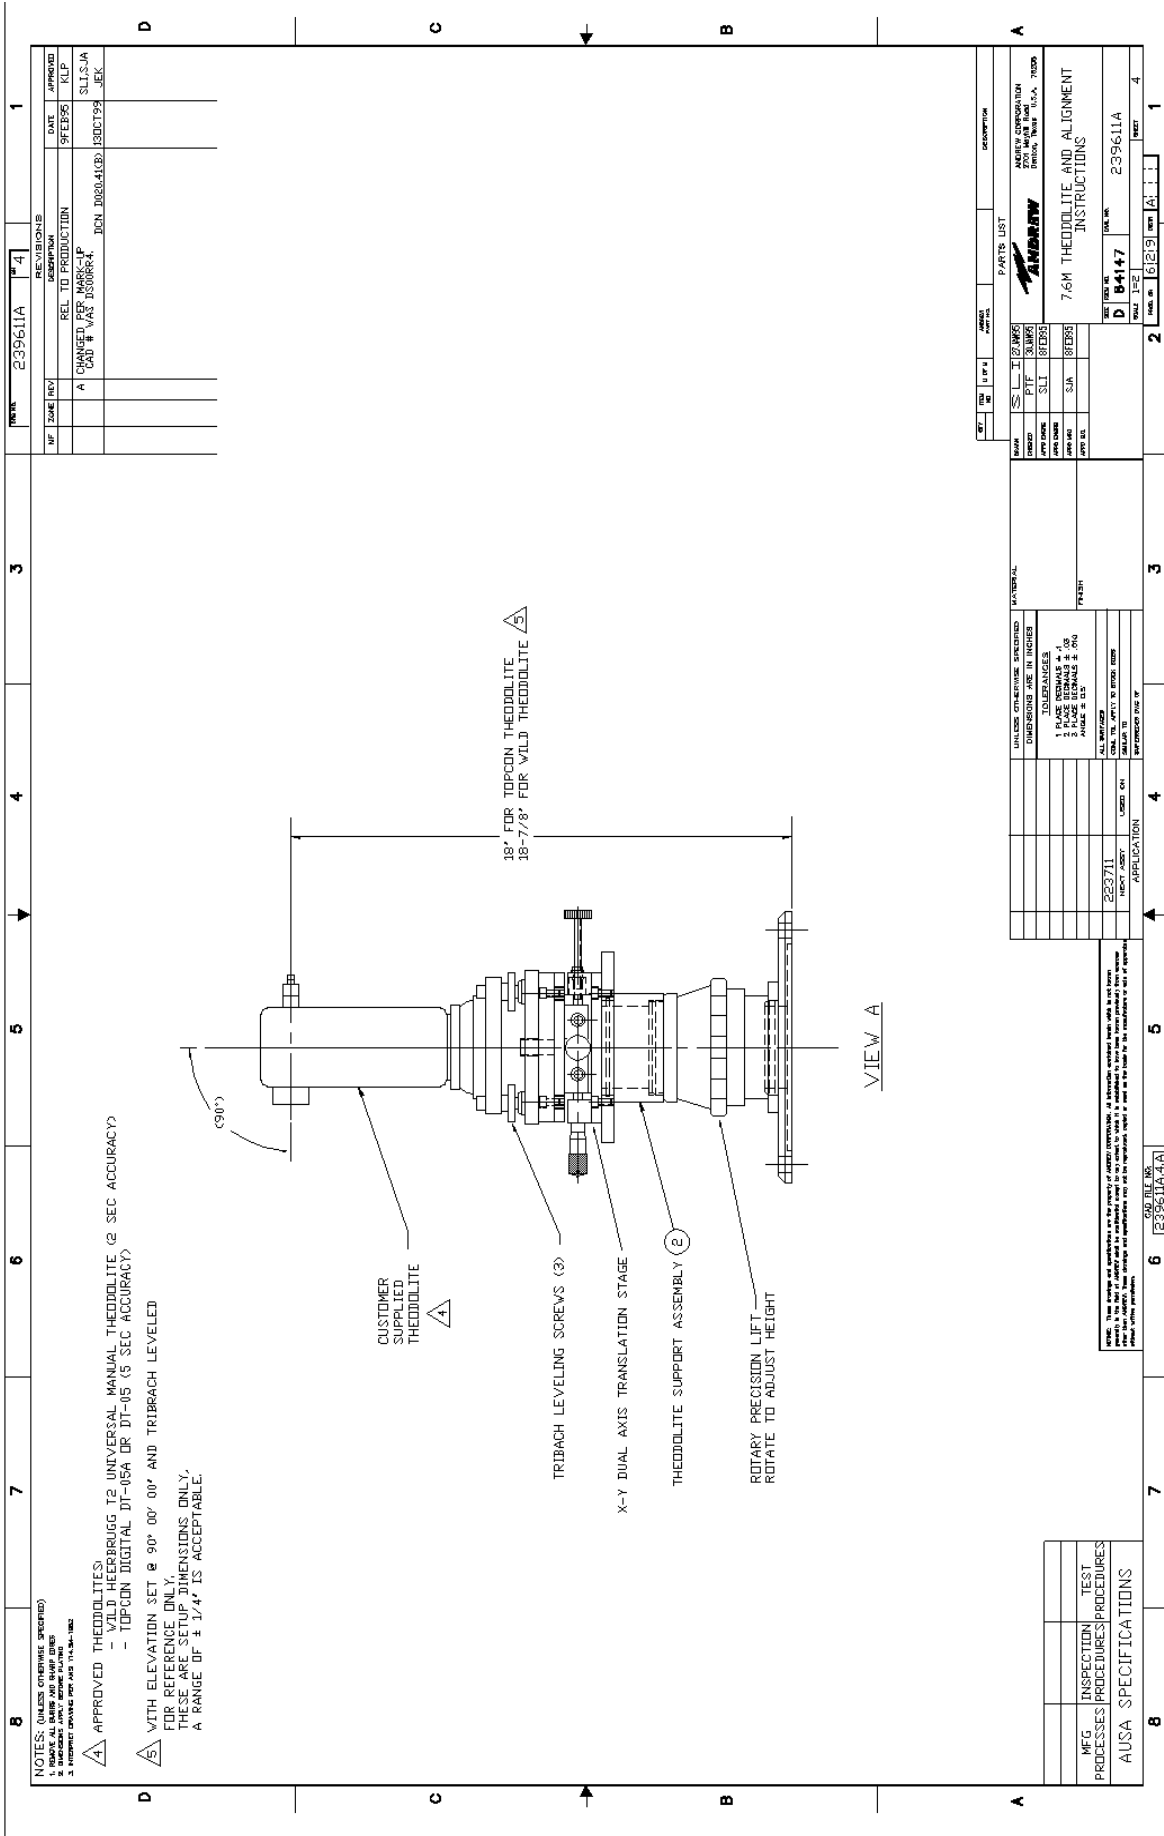

INSPECTION TEST PROCESSES/PROCEDURES

AUSA SPECIFICATIONS

7.6M THEODOLITE AND ALIGNMENT INSTRUCTIONS


DRAWING NO. 239611A


REV. 01

DATE: 10/22/2019

SCALE: 1:1

AGENCY CORPORATION
 1155 S. BRADSHAW BLVD., SUITE 100
 DENVER, CO 80202

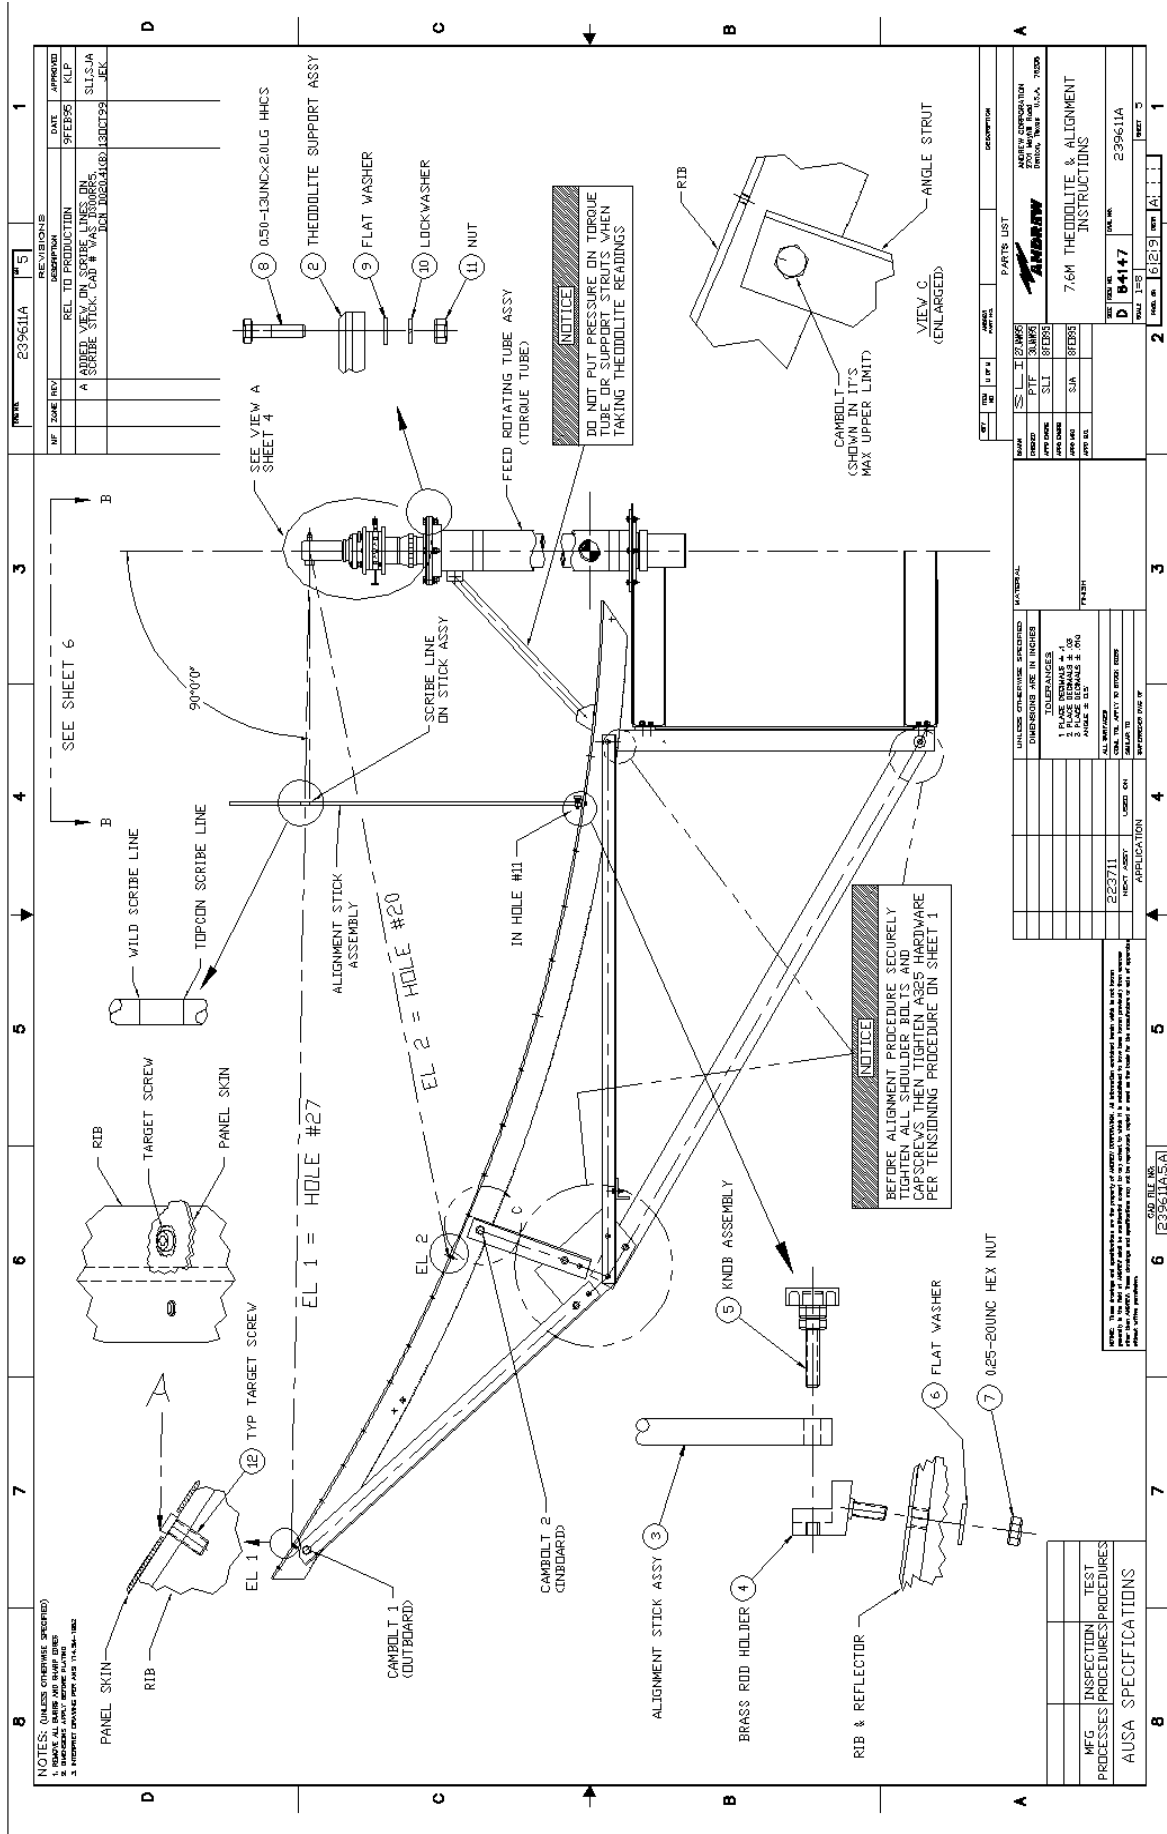

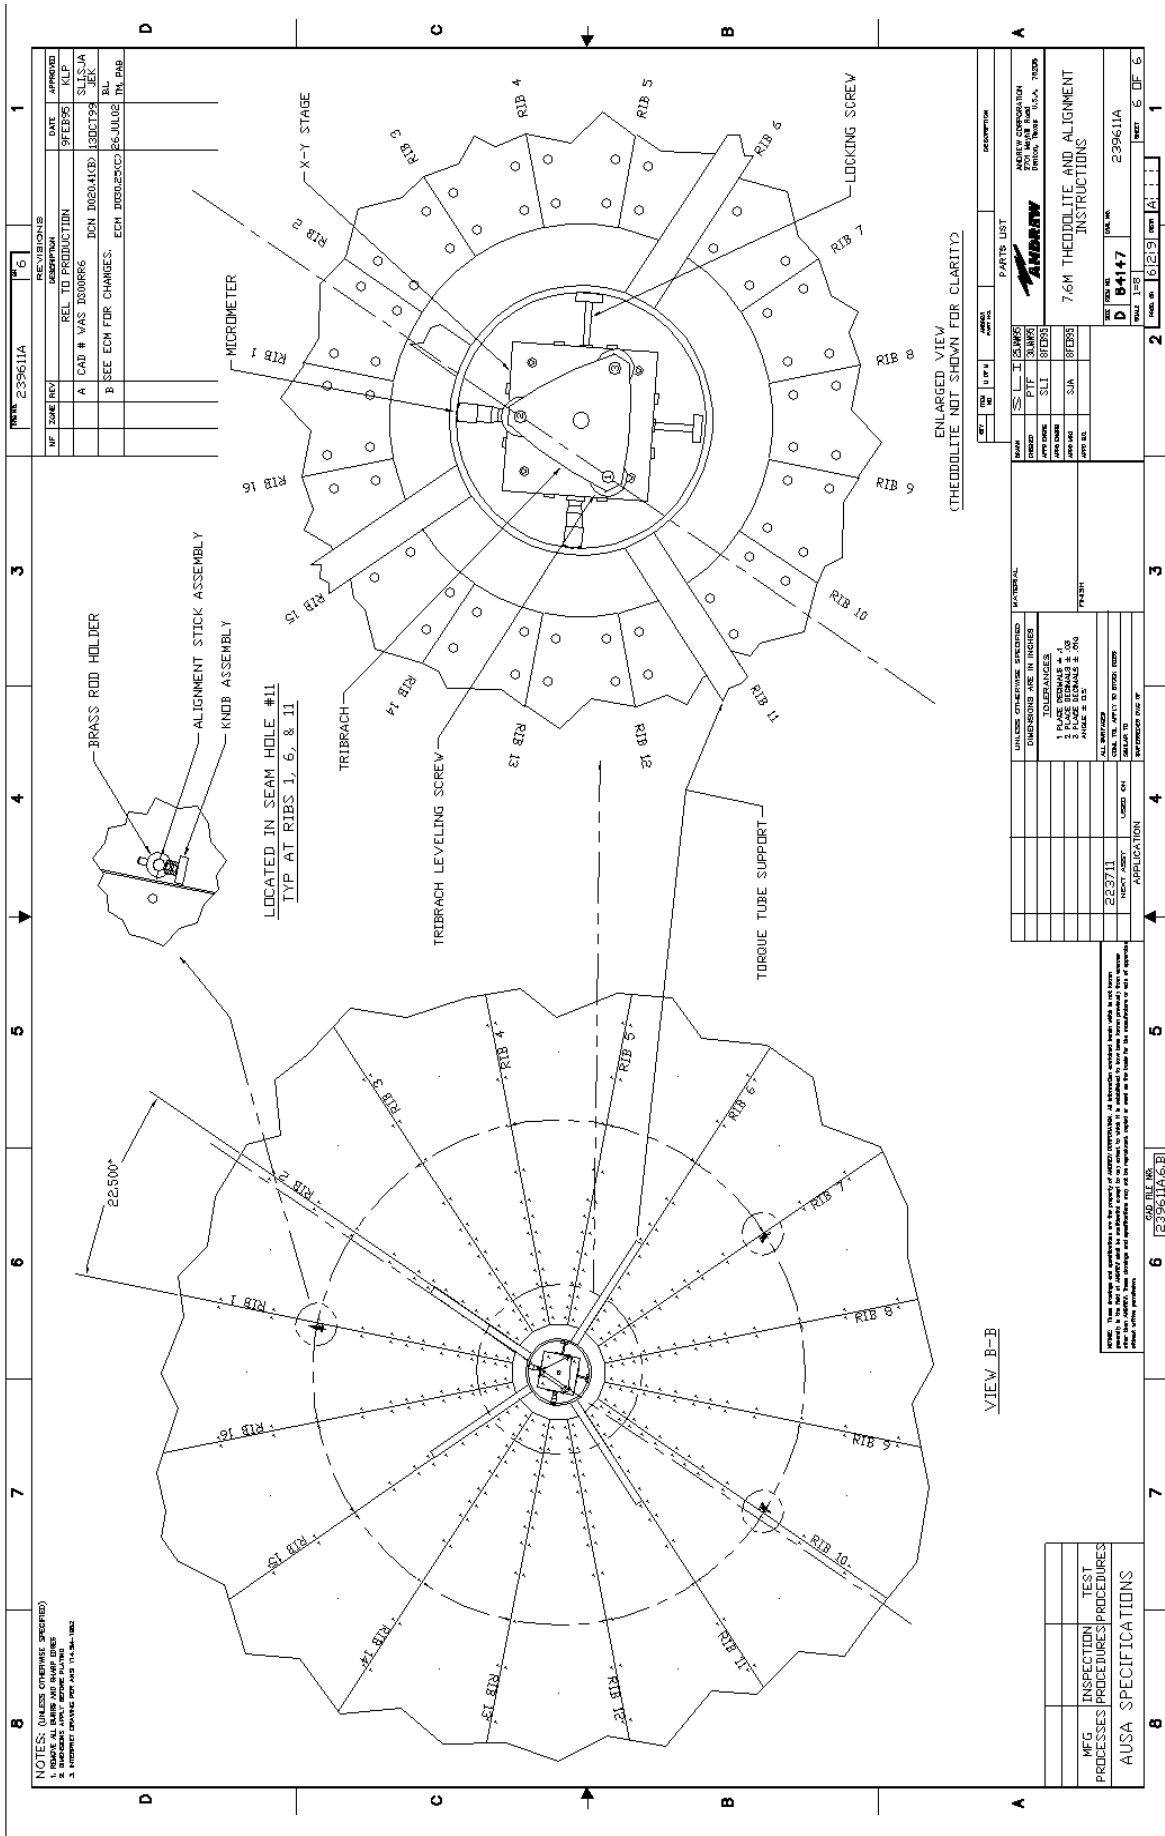

REVISED DRAWING TITLE: DCN 0008.31(AE)H40094 10.26.11A
DCN: 001516(E) 20JAN99 JWS/SLA

DATE: 259906
DESCRIPTION: REL TO PRODUCTION
APPROVED: _____
DATE: 259906
CHK: _____

REVISIONS:

NO.	DATE	DESCRIPTION	BY	CHK
A	259906	REVISED SHIT. E	DCN 0008.31(AE)H40094	10.26.11A
B	20JAN99	REVISED DRAWING TITLE	DCN 001516(E)	JWS/SLA

STEP 1: ATTACH AND LOOSELY ASSEMBLE SUBREFLECTOR/FLLOATING RING ASSEMBLY TO CORRESPONDING MOUNTING HOLES IN SUBREFLECTOR STRUT BRACKETS AS SHOWN IN FIGURE 1 USING SUPPLIED STRUT BRACKETS, RECTANGULAR WASHERS, LOCK WASHERS AND NUTS. ATTACH TEMPORARY NYLON SLINGS, LOCK WASHERS AND NUTS TO DAMAGE SUBREFLECTOR ASSEMBLY.

STEP 2: CAREFULLY RAISE AND ATTACH PREASSEMBLED SUBREFLECTOR/STRUT ASSEMBLY TO CORRESPONDING SUBREFLECTOR STRUT SUPPORTS AS SHOWN IN VIEW A-A AND SECTION D-D USING SUPPLIED BOLTS, FLAT WASHERS, LOCK WASHERS AND NUTS.

STEP 3: SECURELY TIGHTEN ALL SUBREFLECTOR/STRUT ASSEMBLY MOUNTING HARDWARE EXCEPT FOR FLOATING RING HARDWARE SHOWN IN VIEW 'B'. REMOVE TEMPORARY NYLON SLINGS.

STEP 4: ATTACH AND LOOSELY ASSEMBLE SUBREFLECTOR/FLLOATING RING ASSEMBLY TO CORRESPONDING MOUNTING HOLES IN SUBREFLECTOR STRUT BRACKETS AS SHOWN IN FIGURE 1 USING SUPPLIED STRUT BRACKETS, RECTANGULAR WASHERS, LOCK WASHERS AND NUTS. ATTACH TEMPORARY NYLON SLINGS, LOCK WASHERS AND NUTS TO DAMAGE SUBREFLECTOR ASSEMBLY.

STEP 5: CAREFULLY RAISE AND ATTACH PREASSEMBLED SUBREFLECTOR/STRUT ASSEMBLY TO CORRESPONDING SUBREFLECTOR STRUT SUPPORTS AS SHOWN IN VIEW A-A AND SECTION D-D USING SUPPLIED BOLTS, FLAT WASHERS, LOCK WASHERS AND NUTS.

STEP 6: SECURELY TIGHTEN ALL SUBREFLECTOR/STRUT ASSEMBLY MOUNTING HARDWARE EXCEPT FOR FLOATING RING HARDWARE SHOWN IN VIEW 'B'. REMOVE TEMPORARY NYLON SLINGS.

UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN INCHES

TOLERANCES:
FIT PRACTICES ARE TO PERFORM TO THE CLOSEST PRACTICE

QTY	PART NO.	DESCRIPTION	
17	EA	224459	SUBREFLECTOR KIT
4	EA	300072	BACKUP WASHER
4	EA	300030	BACKUP PLATE
13	EA	200822	RECTANGULAR WASHER
9	EA	200826	3/16-18UNCX1.5LG RHMS
28	EA	9599-11	3/16-18UNCX1.5LG RHMS
36	EA	9599-56	3/16-18UNCX1.5LG RHMS
18	EA	9599-59	3/16-18UNCX1.5LG RHMS
18	EA	9974-17	3/16-18UNCX1.5LG RHMS
26	EA	9599-109	3/16-18UNCX1.5LG RHMS
22	EA	9599-235	3/16-18UNCX1.5LG RHMS
9	EA	9997-28	50-13UNCX2.5LG HHMB
26	EA	9974-4	50-13UNCX2.5LG HHMB
5	EA	9563-316	50-13UNCX2.5LG HHMB
4	EA	300070	SUBREFLECTOR STRUT BRACKET
4	EA	300035	SUBREFLECTOR STRUT SUPPORT
4	EA	300069	VERTX ANGLE CLIP
4	EA	300071	SUBREFLECTOR STRUT

NOTES: (UNLESS OTHERWISE SPECIFIED)
1. REFER TO THE INSTRUCTIONS THROUGHOUT THIS PROCEDURE FOR THE PROPER ASSEMBLY AND OPERATION.
2. THIS WARNING INDICATES THAT FAILURE TO FOLLOW THE PROPER PROCEDURE AT THIS POINT COULD RESULT IN DAMAGE TO THE EQUIPMENT OR TO OTHER PROPERTY AND POSSIBLE INJURY TO CAUTION! PERSONNEL

UNPACKING:
CAREFULLY REMOVE ALL PARTS FROM SHIPPING BOXES. THE CONTENT SHOULD CORRESPOND WITH THE PARTS LIST. ANY DAMAGE OR DEVIATION OF THE ANTENNA.

TOOLS RECOMMENDED FOR PROPER INSTALLATION:
1. SORENEREVER (GLUTTED)
1. 1/4 CONSUMATION WRENCH
1. 1/2 SOCKET
20 FT TAPE MEASURE
15 PENCILS AND EYE TYFED NYLON SLING
20 FT EXTENSION LADDER
1. 8 FT STEP LADDER

NOTES:
THE FOLLOWING INSTRUCTIONS HAVE BEEN WRITTEN SUCH THAT THE SUBREFLECTOR SHOULD BE INSTALLED ON A FRAME OR ON THE GROUND AND LIFTED INTO REFLECTOR BY USE OF A CRANE. IF A FRAME IS NOT AVAILABLE, A PERSONNEL SHOULD BE RESPONSIBLE FOR THE RESULTS OF UNSAFE INSTALLATION OR MAINTENANCE PRACTICES.


NOTES:
SUBREFLECTOR STRUT SUPPORTS SHOULD BE INSTALLED ON THE REFLECTOR PRIOR TO THE SUBREFLECTOR STRUTS.

NOTES:
SUBREFLECTOR STRUT SUPPORTS SHOULD BE INSTALLED ON THE REFLECTOR PRIOR TO THE SUBREFLECTOR STRUTS. THE SAME SEAM LOCATION AS THE DOUBLE LONG STRUTS FROM REFLECTOR ASSEMBLY.

MFG	INSPECTION	TEST
	PROCESSES	PROCEDURES

APPICATION: 252738
REV: 1
DATE: 10/27/11
SHEET: 1 OF 2

DATE: 06/23/11
REV: 1
FILE NO: 239906

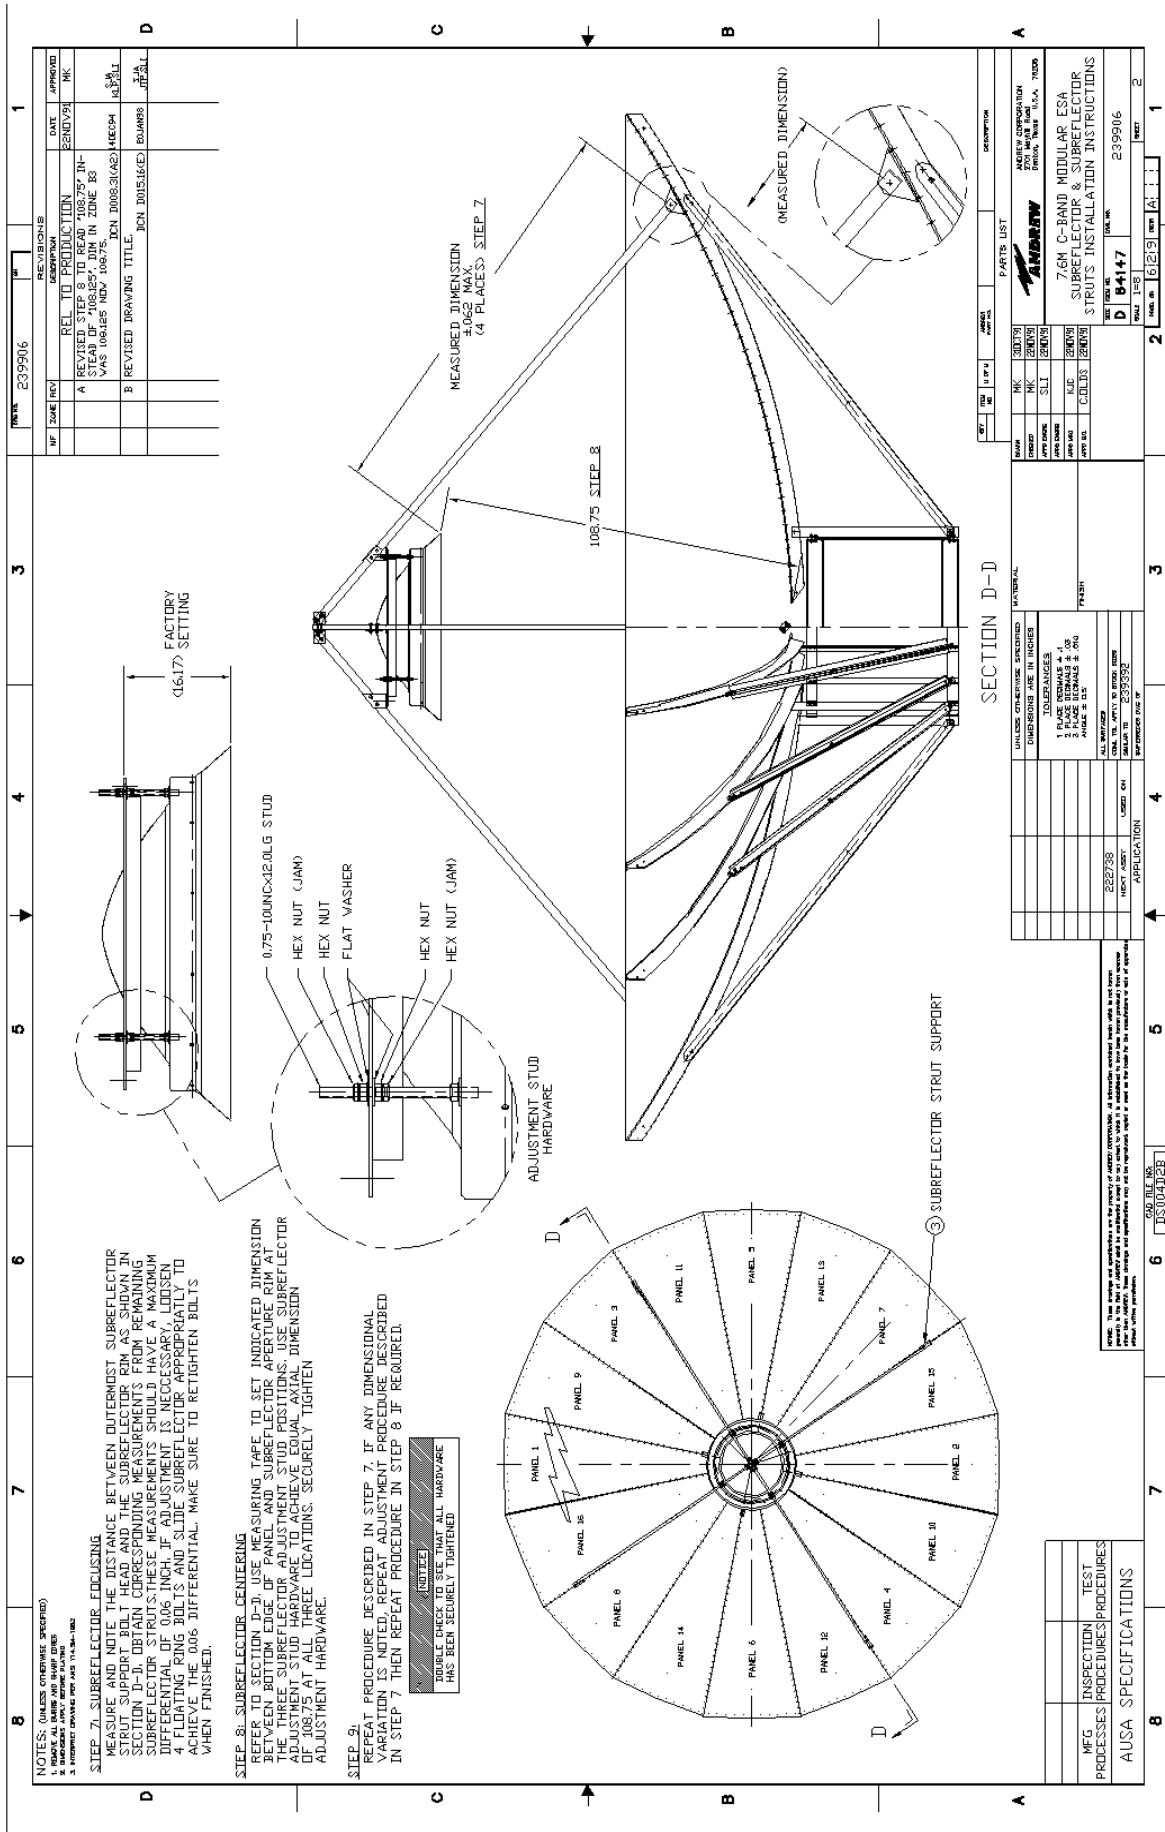

NOTES: (UNLESS OTHERWISE SPECIFIED)

- INSTALLATION MUST BE DONE BY QUALIFIED PERSONNEL.
- REFER TO DRAWING 2399J08 FOR PARTS LIST.

GENERAL:

READ THE INSTRUCTIONS THOROUGHLY BEFORE ASSEMBLY. FOLLOW THE SEQUENCES FOR PROPER ASSEMBLY AND OPERATION.

CAUTION: THIS WARNING INDICATES THAT FAILURE TO FOLLOW TO THE PROPER PROCEDURE AT THIS POINT COULD RESULT IN DAMAGE TO THE EQUIPMENT OR TO PERSONS OR OTHER PROPERTY AND POSSIBLE INJURY TO CAUTION PERSONNEL.

NOTICE: THIS INDICATES INFORMATION THAT SHOULD BE READ BEFORE PROCEEDING.

UNPACKING: CAREFULLY REMOVE ALL PARTS FROM SHIPPING BOXES. THE CONTENT SHOULD CORRESPOND WITH THE PARTS LIST. ANY DAMAGE OR DEFORMATION OF THE ANTENNA.

NOTICE: THIS INSTALLATION MUST BE PERFORMED BY AN ANTENNA TECHNICIAN WHOSE QUALIFICATIONS HAVE BEEN VERIFIED BY AN ANTI-CORRUPTION PROGRAM. THESE INSTRUCTIONS HAVE BEEN WRITTEN AND ILLUSTRATED FOR REFLECTOR USE BY QUALIFIED PERSONNEL TO VERIFY PROPER INSTALLATION. THE USER ACCEPTS FULL RESPONSIBILITY FOR THE RESULTS OF ANY UNSAFE INSTALLATION OR MAINTENANCE PRACTICES.

NOTICE: THE FOLLOWING INSTRUCTIONS HAVE BEEN WRITTEN SUCH THAT THE REFLECTOR SHOULD BE INSTALLED ON THE GROUND AND LIFTED INTO REFLECTOR BY USE OF A CRANE. IF A CRANE IS NOT AVAILABLE, THE USER MUST USE A STRUT SUPPORT IN REFLECTOR THEN INSTALL REFLECTOR.

TOOLS RECOMMENDED FOR PROPER INSTALLATION:

QUANTITY	DESCRIPTION
1	SORENSEN CRUTCH
1	1/4 CONSUMATION WRENCH
2	1/2 SOCKET
1	20 FT TAPE MEASURE
2	15 FT STEEL AND EYE TYPED NYLON SLING
1	20 FT EXTENSION LADDER
1	8 FT STEP LADDER

NOTICE: MAKE SURE THAT THE FEED SYSTEM IS INSTALLED ON THE REFLECTOR PRIOR TO THE SUBREFLECTOR STRUTS.


FIGURE 1

NOTICE: SUBREFLECTOR STRUT SUPPORTS SHOULD BE INSTALLED ON THE REFLECTOR AT THE OUTBOARD END OF THE RIB. REFER TO SECTION D-D ON SHEET 2.

STEP 1: PLACE REFLECTOR IN TENTH (45-90°) POSITION. REFER TO INSTALLATION INSTRUCTION P/N 2399J08 FOR REFLECTOR ASSEMBLY INSTALLATION.

STEP 2: REFER TO FIGURE 1. LOOSELY ASSEMBLE SUBREFLECTOR STRUT ASSEMBLY (ITEM 1) AS SHOWN USING SUPPLIED ANGLES (ITEM 2), SUBREFLECTOR STRUT BRACKETS (ITEM 4) AND CORRESPONDING MOUNTING HARDWARE.

STEP 3: REFER TO FIGURE 1. LOOSELY ATTACH SUBREFLECTOR STRUT SUPPORTS (ITEM 3). D. PANELS (ITEMS 8-16), 3-1/2" x 1-1/2" SHEETS, LOCK WASHERS, AND NUTS PREVIOUSLY INSTALLED DURING REFLECTOR ASSEMBLY.

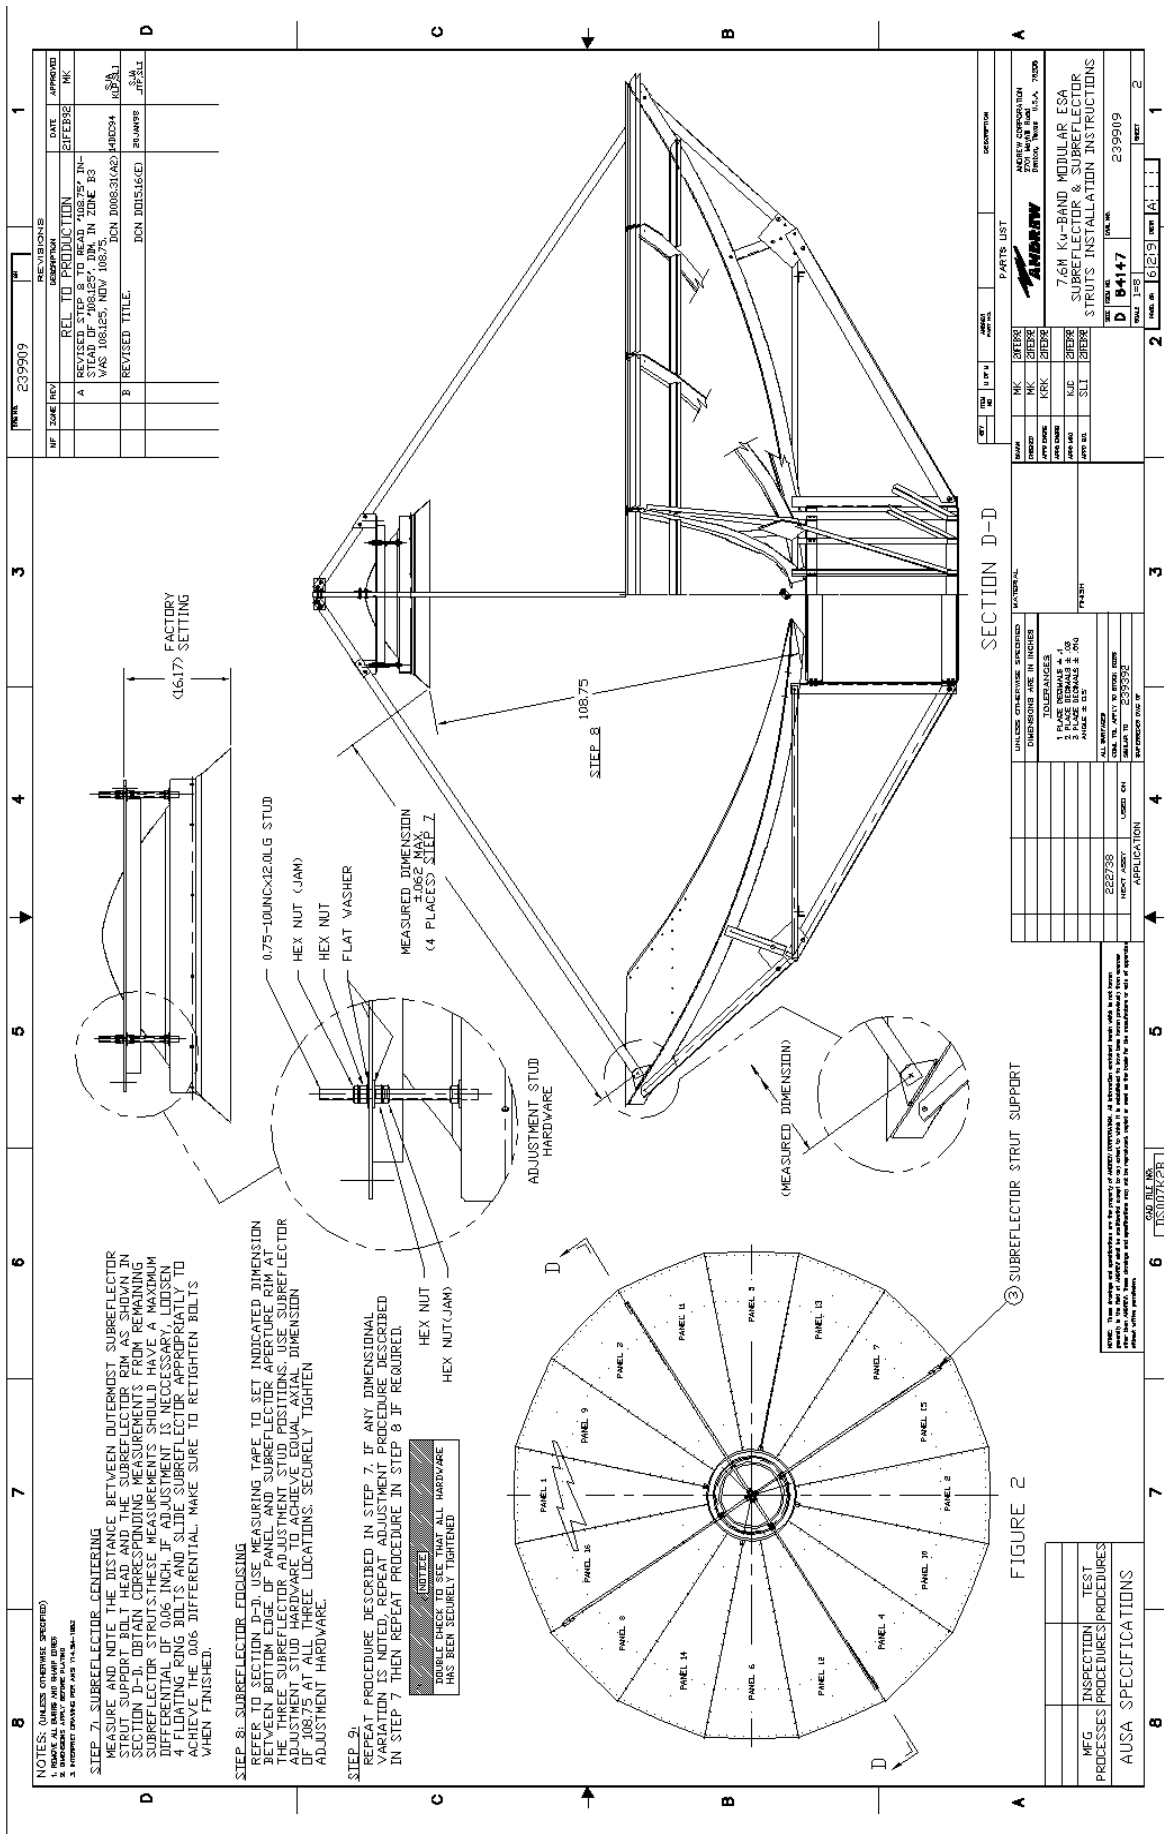

UNLESS OTHERWISE SPECIFIED MATERIAL DIMENSIONS ARE IN INCHES

FINISH

282738

239909

BS007K2B

MFG	INSPECTION	TEST
AUSA SPECIFICATIONS		

Operation

Overview

After you have completed the assembly of your antenna, you are now ready to become operational. In order to operate the earth station antenna, you will need to direct it to the desired satellite adjusting both the elevation and azimuth angles appropriately. The following procedures provide details on how to correctly position your antenna on the desired satellite.

Acquiring A Satellite

There are several procedures that may be used to properly acquire the satellite. Andrew recommends that a spectrum analyzer be used. The following procedures provide explanation as to how to use the spectrum analyzer.

While viewing the spectrum analyzer screen, a pure noise signal as shown in Figure 4-1 will probably be observed. Additionally, some transponder signals may be observed above the noise signal as shown in Figure 4-2.

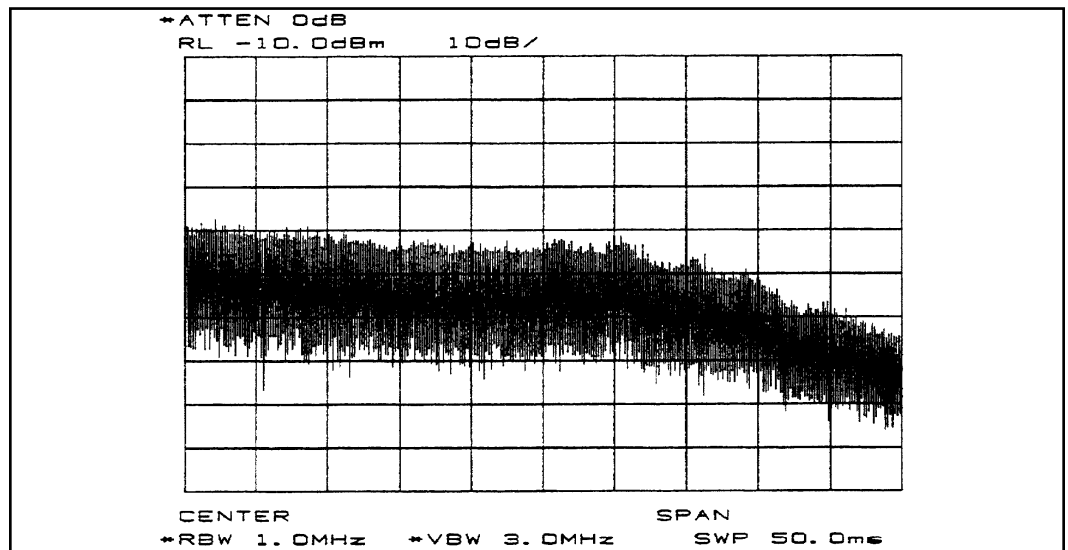


Figure 4-1: Pure Noise Signal on Spectrum Analyzer

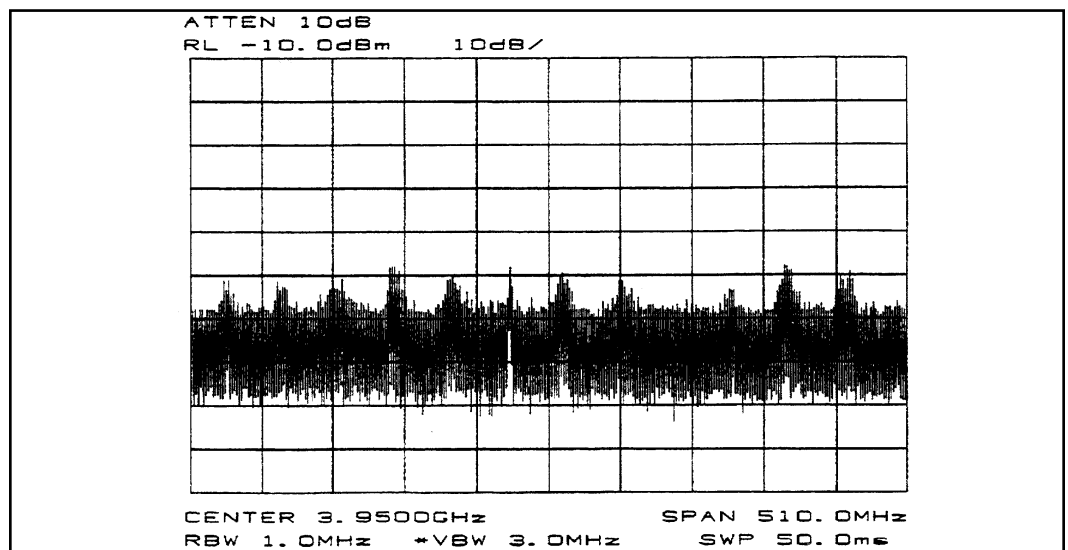


Figure 4-2: Minimum transponder Signal on Spectrum Analyzer

The following steps provide the procedure for acquiring a satellite.

Step 1

Manually move the antenna in the azimuth (scanning back-and-forth) to achieve the maximum (greatest amplitude) transponder signals.

- Scan in one direction until the amplitude continues to diminish and then scan in the opposite direction until the same condition occurs.
- Return to the position yielding the greatest amplitude.

The maximum azimuth excursion from the original setting should not exceed plus or minus 1.5 degrees or the antenna may begin to access a different satellite.

Step 2

With the antenna positioned in azimuth such that the transponder signals are maximized, follow the same procedure manually moving the antenna in elevation (scanning up-and-down) to further maximize the transponder signals.

Step 3

Repeat this procedure alternating between the azimuth and elevation excursions of the antenna to peak the transponder signal amplitude.

A transponder signal amplitude of 30 dB or greater from peak to average noise signal indicates the antenna is receiving the signal on the main beam. A transponder signal amplitude less than 30 dB or greater indicates the antenna is receiving the signal on a side lobe of the main beam.

Step 4

With the antenna peaked on a side lobe in azimuth and/or elevation, move the antenna in azimuth while observing the spectrum analyzer screen as shown in Figure 4-3.

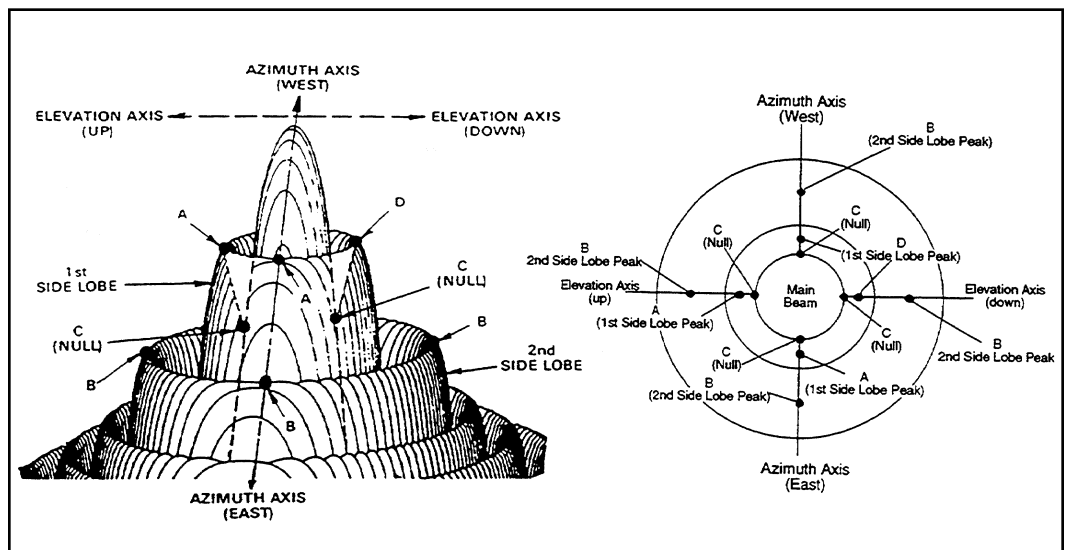


Figure 4-3: Antenna Radiation Pattern Topographical Diagram with Plan View

Step 5

If the signal amplitude diminishes and does not increase (position B) to the level noted when the antenna was peaked on the side lobe, the antenna is moving away from the main beam; reverse the direction of the antenna movement.

From the original side lobe position (position A), the signal amplitude should now diminish to a null point at position C (minimum amplitude showing only signal noise) and then symmetrically increase again to the same level at position D as noted at position A. At the null point (position C), the antenna is aligned with the alternate (elevation) axis. If the antenna was peaked on a side lobe in azimuth, it was appropriately aligned with the elevation axis; proceed with step 6. If the antenna was peaked on a side lobe in elevation, it was appropriately aligned with the azimuth axis; proceed with step 6 moving the antenna in azimuth rather than elevation.

Step 6

Move the antenna in elevation while observing the spectrum analyzer screen. If the signal amplitude increases, decreases and then increases again but to a lesser value, the antenna is moving in the wrong direction; reverse the direction of the antenna movement. From the original null point, the signal level should increase and decrease alternately, but with increasing amplitude until the transponder signal increases to a level of at least 30 dB at which time the main beam. Continue to manually peak the signal to a maximum level using the azimuth and elevation adjustments.

Step 7

If the antenna is aligned in azimuth and elevation (signal maximized) and 24 transponder signals (12 horizontal and 12 vertical) are noted, the polarization adjustment is set incorrectly and must be modified. If 12 transponder signals are noted, they may or may not be the properly polarized signals. Therefore 24 transponder signals must be visually noted in order to determine the proper polarization setting.

Step 8

Rotate the feed assembly clockwise until 24 transponder signals are noted and of approximately equal amplitude.

NOTE: It is more accurate and visually easier to minimize the alternate set of transponder signals rather than maximizing the transponder of interest.

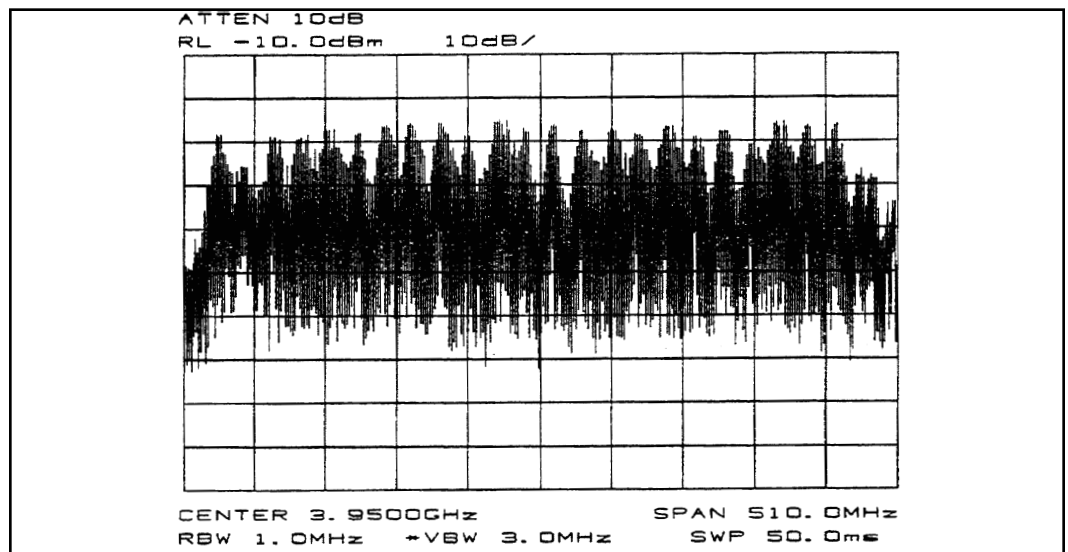


Figure 4-4: Polarization at 45 degrees from Optimum Setting

Step 9

With all 24 transponder signals of approximately equal amplitude appearing on the spectrum analyzer screen determine the specific antenna system and satellite parameters. Rotate the feed assembly as required until the appropriate (odd or even) transponder signals are maximized.

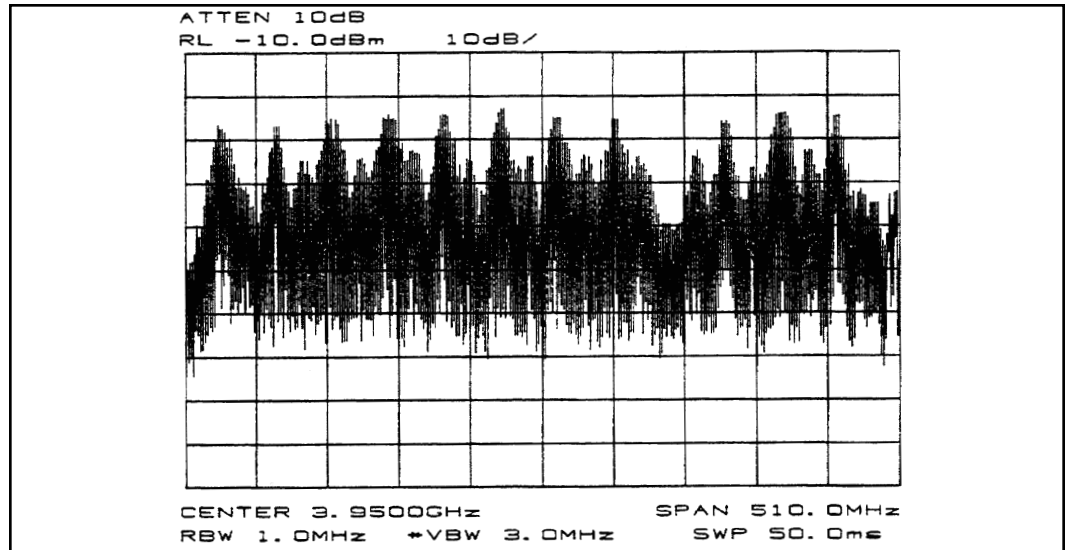


Figure 4-5: Maximizing Odd Transponders

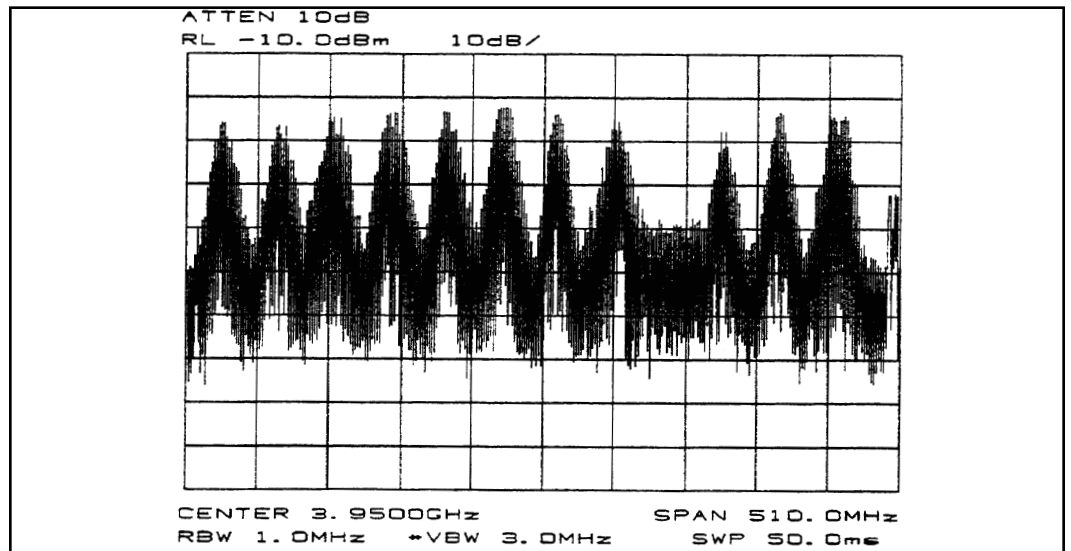


Figure 4-6: Optimum Polarization Setting

Subreflector Adjustment

After the satellite has been acquired and testing has taken place with the spectrum analyzer, the subreflector may need to be adjusted to maximize optimum performance of your antenna. The following procedures should be followed if a subreflector adjustment is required to maximize optimum performance.

NOTE: All INTELSAT Type Approved antennas do not require subreflector adjustment.

Before proceeding, azimuth and elevation patterns should be conducted to determine the adjustments that need to be made. The goal is to achieve a high peak on the main lobe and even distances between the main lobe and sidelobes as shown in Figure 4-6.

NOTE: No adjustments should be made in the receive band.

If your pattern dictates a need to adjust the azimuth angle (the left sidelobe requires adjustment), the west side of the subreflector should be adjusted outward by loosening the screws on the subreflector and adjusting the left side outward. An easy way to remember this adjustment feature is through the acronym WOLD (West Out Left Down).

If your pattern dictates a need to adjust the elevation angle (the right sidelobe requires adjustment), the bottom side of the subreflector should be adjusted downward by loosening the screws between the subreflector and the struts and adjusting the bottom side of the subreflector downward. An easy way to remember this adjustment is through the acronym BOLD (Bold Out Left Down).

Each of these adjustments should be repeated until each sidelobe is of equal distance from the peak of the mainlobe.

After the BOLD and WOLD adjustments have been made, it may be necessary to adjust the main lobe. The goal is to achieve a high null depth (distance between lower intersection of sidelobes and top of main lobe) as shown in Figure 4-6.

In order to adjust the main lobe pattern characteristics **ALL** subreflector adjustment screws should be adjusted at the same degree (Note: Because the azimuth and elevation adjustments have been set, it is very important that the null depth adjustment be carefully conducted. Be careful not to alter any previous adjustments that have been made to the subreflector. Follow the procedure listed below when adjusting the null depth of the main lobe.

C-band feeds - Adjustment screws are 3/4 X 10. Move 1 turn per 1dB of imbalance.

Ku-band feeds - Adjustment screws are 1/4 X 20. Move 1 turn per 1 dB of imbalance.

All adjustments should be continued until the desired pattern is achieved. Upon completion the antenna should be properly aligned with the satellite for maximum performance.

Preventive Maintenance

Overview

This section contains periodic preventive maintenance instructions for the 5.6-Meter Earth Station Antenna. Included in this section are inspection and preventive maintenance procedures including cleaning and lubrication, painting, and an operational voltage/current checkout procedure deemed within the capabilities of the average station technician. Refer to applicable vendor manuals for any repair procedures not included in this section yet designated as capable of being performed in the “field” rather than requiring specialized facilities, tools, and/or test equipment as well as technically trained personnel.

An operational checkout procedure provides an accurate indication of the overall earth station performance and should be performed at intervals of approximately three months. This procedure is essentially performed during the various modes of normal operation of the earth station. In addition, the operational checkout procedure should be performed after any repairs or adjustments have been made, or whenever the earth station is suspected of degraded operation. If any discrepancy in performance exists and the condition cannot be readily remedied to return the earth station to a proper operating condition, the appropriate troubleshooting procedures should be referenced to locate the fault. After the trouble is determined and the repairs affected, a final operational checkout procedure should be performed to verify that all discrepancies have been corrected.

The following paragraphs describe the inspection and preventive maintenance procedures for the earth station. These instructions include general cleaning and inspection, the preservation of metal parts and lubrication. Periodic replacement of assemblies or components as a preventive measure is not required. Malfunctions of the earth station can be traced to components, assemblies, and parts through the use of applicable troubleshooting procedures.

General Cleaning

To prevent the excessive accumulation of dust and dirt as well as the removal of such contaminants, thoroughly clean the equipment whenever visually inspecting the earth station components. No special cleaning procedures are required. However, a thorough cleaning in accordance with the following procedures is required to assure continued trouble-free operation.

Electrical Parts

Minor cleaning, such as the removal of dust and loose foreign particles can be accomplished by one of the following:

- Vacuuming
- Using a soft brush or lint-free cloth
- Blowing out the dust and dirt with low pressure (5 to 25 psi), dry compressed air

When using air to blow off the contaminants, either avoid or be careful when directing the air stream on delicate parts. To remove imbedded dirt, grease, or oil from electrical parts; use a 50 percent solution of isopropyl (rubbing) alcohol and apply with a soft bristle brush. It may be necessary to brush some parts vigorously with a stiff bristle brush to remove imbedded and hardened dirt particles. If possible, avoid excessive use of cleaning solvent on electrical insulation. After cleaning, allow the cleaned parts to dry for 10 to 15 minutes before placing the equipment into operation.

Clean mechanical parts by first removing dust, dirt, and other loose contaminants with a

Mechanical Parts

scraper, stiff brush (bristle or wire in the case of rust or other corrosion), or cloth or compressed air at 25 to 40 psi. Any accumulated imbedded dirt, corrosion, grease, or oil deposits that require further cleaning may be removed with a bristle or wire brush and a cleaning solvent such as trichlorethylene or equal. After cleaning, allow cleaned parts to dry for 10 to 15 minutes before placing the equipment into operation.

Inspection

The frequency of inspection is contingent upon the user's individual standards and the operational environment in which the earth station is located. However, a visual inspection of the earth station components should be performed at least semi-annually. Where there are no established wear limits, perform a visual inspection to locate worn or damaged parts which could cause improper functioning of the earth station. It is recommended that the mechanical and electrical inspection be performed on the assembled or partially disassembled equipment to determine the extent of disassembly required prior to completely disassembling a suspected malfunctioning component or module. In the absence of any special inspection requirements, operational tests are the most effective means in isolating parts and assemblies requiring further inspection. Any condition noted during inspection that may preclude continued proper operation of the earth station prior to the next scheduled inspection should be noted. The discrepant condition should be corrected (repaired or replaced) immediately or at the conclusion of the inspection procedure.

Local Control/Motor Drive Controller

Inspection of the local control/motor drive controller conforms generally to standard visual inspection procedures on electromechanical equipment. In addition to these standard procedures, perform the following checks and visual inspections for the specific conditions noted:

- Check the front panel for illegible and indistinct panel markings.
- Check the three position selector switches (Azimuth Off/Slow/Fast, Elevation-Off/Slow/Fast, and Polarization-CCW/Off/CW) for smooth operation, audible clicking at each actuation (left to center and return) and spring return from right to center. For each of the two position selector switches (Azimuth-East/West, Elevation-Up/Down, and Local/Remote) check for smooth operation and audible clicking at each actuation.
- Inspect all wiring and cables for discolorization and burned insulation, dirt, breaks, security of connection and other signs of deterioration. Examine connections for dirt, flux, corrosion, and mechanical defects. Check for loose or broken lacing and cut, brittle, abraided, frayed, or cracked insulation.
- Examine connectors for corrosion, broken inserts and stripped threads. Check connector shells for distortion and dents, and contact pins for bends, misalignment, or other deformities. Check connector inserts for carbon tracking indicating arc-over.
- Check all electrical components for dirt, cracks, chips, breaks, discoloration and other signs of deterioration and damage. A discolored, blistered, or burnt condition is evidence of overload. Measure actual value of suspect electrical components and compare against specified value.
- Check transformer for an excessive wax deposit on the surface, discoloration, or a

pungent odor indicative of burning varnish denoting overheating or a total breakdown.

- Check all terminal boards for broken or missing terminals and stripped threads. Check tightness of lead attaching hardware.
- Check each starter for a make-after-break provision through the release of one pushbutton as the alternate pushbutton is pressed.
- Check the relays and contactors for free operation of the armatures and contact condition. The contacts are usable even though pitted, burned, worn, or discolored. The contacts or contactor or relay assembly should be replaced only when the contact material has been completely torn away or worn off.
- Visually inspect all mechanical parts for freedom of operation without binding or interference. Check for security of all hardware and stripped or otherwise damaged threads. Check metallic parts for corrosion, dents, distortion, and other deformation.
- Check for evidence of water inside the enclosure. If any water is in evidence, check that all seals are intact and if not, use a coating of RTV-108 (silicone rubber sealant) to seal any exposed electrical fitting, bolt hole, or other possible water entry to the enclosed electrical components in order to maintain a waterproof condition.
- Check or change humidity absorber.

Antenna

Inspection of the antenna conforms generally to standard visual inspection procedures performed on electromechanical equipment. In addition to these procedures, perform the following checks and visual inspections for the specific conditions noted:

- Inspect all wiring and cables particularly the network to enclosure and enclosure to mount interfaces for discoloration and burned insulation, moisture entry, corrosion, dirt, breaks, security of connection, and other signs of deterioration. Examine connections for dirt, corrosion, and mechanical defects. Check for loose or broken lacing and cut, abraided, frayed, brittle, and cracked insulation.
- Examine connectors for corrosion, broken inserts and stripped threads. Check connector shells for distortion and dents, and contact pins for bends, misalignment or other deformities. Check connector inserts for cracks, and carbon tracking, burns or charring indicating arc-over.
- Check all electrical component for dirt, cracks, chips, breaks, discoloration, and other signs of deterioration and damage. A discolored, blistered, or burnt condition is evidence of overload.
- Operate the azimuth and elevation drives as well as the feed rotation in both the plus

and minus direction from the local control/motor drive controller at least once every three months during antenna down time. Check the mechanical limit switches provided at the end points stop antenna and feed movement, and limit travel to prevent structural interference and damage. Check the mechanical limit switches for corrosion and water entry and the arm on each feed limit switch for free movement without binding. Be certain both feed rotation limit switch arms are not distorted and ride centrally on the actuating cam to open their corresponding limit switch.

- Inspect the azimuth and elevation jackscrew boots for security of attachment at both ends, for abrasion, tears, cuts, brittleness and other damage that may expose the jackscrew to the environment (water, dust, etc.). Minor repairs can be made with RTV-108 silicone rubber sealant.
- Visually inspect the feed window for dirt and the feed, feed supports, feed window, and reflector for distortion, foreign object damage and environmental deterioration due to ice and snow, dust, rain, hail, and high winds, etc. which may cause electrical component and/or structural deformation.
- Check the cable attachment to the resolvers and to the LNA or LNB's and enclosure mount interface for security, the cable routing for secure hanger attachment and the cable insulation for cuts, cracking, abrasion, and other deterioration. Check the LNA or LNB's and the resolvers for a secure mechanical attachment. Ensure proper torquing of polarization drive gear box setscrews and appropriate tensioning of corresponding drive chain assembly, if applicable.
- Check (if applicable) that the drain holes in the bottom of the enclosure are not obstructed and there is no evidence of water accumulation. Check the enclosure doors for proper closure and that the door seals are intact, not torn, abraded or otherwise damaged. Check that all other seals are intact and if not, use a coating of RTV-108 (silicone rubber sealant) to seal any exposed electrical fitting, bolt hold, or other possible water entry to electrical components in order to maintain a weatherproof condition. If the enclosure is provided with a vent fan, check for free operation of the fan blade. The fan bearings are permanently lubricated; any binding, abnormal noise or vibration necessitates replacement of the fan assembly. Check and replace the fan filter element if it appears dirty or obstructed with dust.
- Check for the appearance of surface lubricants that will cause the accumulation of dirt and grime. Clean off all excess surface lubricants with a cloth and if required, a cloth dampened not wetted with trichlorethylene, or equal.
- Visually inspect all mechanical parts for freedom of operation with no misalignment, binding or interference. Check all cabling for sufficient slack to prevent cable strain as well as adequate restraint to prevent abrasion or chaffing during antenna and feed movement.
- Check security of antenna mounting and interconnecting assembly hardware. Be cer-

Drive System Voltage and Current Checks

tain all electrical grounding connections (including cross-axis grounding straps) are intact and secure, not corroded or broken. Thoroughly clean any noticeable corroded portions of grounding cables, unplated portion of universal terminals and corresponding mounting surfaces using a wire brush. Replace rather than tighten any loose A-325 structural hardware. The hardware distorts at initial installation and once loosened will not maintain the required high strength friction connection. All other assembly and installation hardware should be tightened to its original torqued condition. When installing new structural hardware, do not use a wrench with a lever arm longer than two feet.

- Examine painted aluminum and galvanized surfaces and tough-up where required.

At the conclusion of the installation procedure prior to turning the system over to the station facility, an installation acceptance check off sheet was prepared and duly signed off if installed by Andrew crew. Part of this check off included voltage readings retaken to determine if proper voltage was available. Current readings were also taken as a reference for future comparison to serve as a troubleshooting aid in determining possible equipment degradation and shortened life. Any current reading taken during the following procedure that varies by more than five percent from the pre-established reference values necessitates troubleshooting the particular system involved to determine the cause and required corrective action.

Step 1

Approximately every three months and during a period of down time, disconnect as applicable the RF transmitter and all power supplies. The main disconnect switch in the main load center box at the antenna site must be in the ON position and the LOCAL/REMOTE switch in the local control motor drive controller must be in the LOCAL position.

Step 2

Open the outer local control/motor drive controller door at the antenna site to gain access to the conductors supplying power to the azimuth, elevation, and polarization drive motors.

NOTE: During the following procedures, the antenna drives (azimuth, elevation, and polarization) will be powered to rotate the antenna and feed in both directions of travel. Check that this condition can be tolerated from a safety as well as an operational standpoint, and that the electrical limits are not reached before the testing is concluded. Reaching an electrical limit before concluding a test necessitates rotating the antenna or feed in the opposite direction a sufficient distance to permit retesting in the desired direction.

Step 3

Turn the FEED CCW/OFF/CW switch to either the CW or CCW position and while the feed is rotating, carefully use a clamp on ammeter in accordance with the ammeter manufacturer's instructions to take current readings off each of the three conductors (phases) connected to the load side of the polarization motor circuit breaker. Record the current draw in the equipment log and compare the readings to the reference values entered in the installation/acceptance check off. If the readings differ by more than five percent, refer to appropriate troubleshooting information and perform applicable corrective action. Then take voltage readings off each of the three conductors; the readings should agree with each other within two percent. Turn the FEED CCW/OFF/CW switch to OFF. Repeat preceding step (3) with the FEED CCW/OFF/CW switch in the alternate operating position.

Step 4

Turn the AZIMUTH EAST/WEST switch to either position and while the antenna is rotating, carefully use a clamp on ammeter in accordance with the ammeter manufacturer's instructions to take current readings off each of the three conductors (phases) connected to the load side of the azimuth drive motor circuit breaker. Record the current draw in the equipment log and compare the readings to the reference values entered in the installation/acceptance check off. If the readings differ by more than five percent, refer to appropriate troubleshooting information and perform applicable corrective action. Then take voltage readings off each of the three conductors; the readings should agree with each other—within two percent. Turn the AZIMUTH switch to OFF.

Step 5

Repeat steps (5) with the AZIMUTH EAST/WEST switch in the alternate operating position.

Step 6

Turn the ELEVATION DOWN/UP switch to either position and while the antenna is rotating, carefully use a clamp on ammeter in accordance with the ammeter manufacturer's instructions to take current readings off each of the three conductors (phases) connected to the load side of the elevation drive motor circuit breaker. Record the current draw in the equipment log and compare the readings to the reference values entered in the installation/acceptance check off. If the readings differ by more than five percent, refer to appropriate troubleshooting information and perform applicable corrective action. Then take voltage readings off each of the three conductors; the readings should agree with each other within two percent. Turn the ELEVATION switch to OFF.

Step 7

Repeat steps (7) with the ELEVATION DOWN/UP switch in the alternate operating position.

Step 8

If all voltage and current readings are within tolerance, close the local control/motor drive controller inner door and place the LOCAL/REMOTE switch in the REMOTE position to return antenna control to the studio. Then close and lock the outer local control/motor drive controller door.

Step 9

When preserving the component parts, refer to the following paragraphs in this section.

Preservation of Component Parts

Aluminum Parts

Remove all loose paint and corrosion by scraping, wire brushing, or using steel wool. If using steel wool near the feed window, make sure that none remains on the feed horn window. Edges of existing paint can be blended with the metal surface by using a fine grit sandpaper. Wipe the surface to be painted with a soft rag dampened in trichlorethylene, lacquer thinner or equal. Be certain to remove all loose paint, corrosion, imbedded dirt, grease, and oil deposits or the paint will not adhere to the surface. Lacquer thinner will dissolve paint if applied heavily and rubbed vigorously. The reflector may be washed with plain water if necessary. Do not use bleach, soap solutions, or kerosene as it is difficult to remove the residue. Allow the cleaned surface to dry thoroughly before priming.

Prime the cleaned surface by applying zinc chromate primer. The primer can be applied with a brush, roller, or pressurized spray. If necessary, thin the primer with lacquer thinner to the proper consistency. Feather primer onto adjacent painted surfaces;. Allow primer to thoroughly dry before applying the finish paint coat.

Paint all RF surfaces, such as the inside of the main reflector and subreflector with a high-reflectance white paint. This type of paint disperses light rays, reducing the focusing effect of the sun's radiation, thereby reducing heat build-up caused by the focused sun's rays on the feed system. Rear surfaces of the reflector and subreflector may be painted with a flat white enamel paint. The paint can be applied with a brush, roller, or pressurized spray. If necessary, thin the paint with the appropriate thinner to the proper consistency. Thoroughly paint over the primed surfaces and blend with the existing painted surface.

Galvanized Surfaces

Remove all loose paint and corrosion by scraping, wire brushing, or using steel wool. Edges of existing paint can be blended with the metal surface by using a fine grit sandpaper. Wipe the surface to be painted with a soft rag dampened in trichlorethylene, lacquer thinner, or equal. Be certain to remove all loose paint, corrosion, imbedded dirt, grease, and oil deposits or the paint will not adhere to the surface. Lacquer thinner will dissolve paint if applied heavily and rubbed vigorously. Do not use bleach, soap solutions, or kerosene as it is difficult to remove the residue. Allow the clean surface to dry thoroughly before painting.

Paint the cleaned surface with a zing-rich paint. The paint can be applied with a brush, roller, or pressurized spray. If necessary, thin the paint with the appropriate thinner to the proper consistency. Thoroughly paint over the cleaned surface and blend with the existing painted surface.

Lubrication

For long life and trouble-free operation be certain not to extend the lubrication schedule beyond the frequency recommended in the Lubrication Chart. The frequency should be shortened if the antenna is subjected to an adverse environment (e.g., high temperature, extended periods of rainfall, high humidity, dust storms, etc). Any component or part should be immediately be lubricated if during inspection or operation, rough, jarring, or intermittent motion is noted, or if squeaky or other unusual noises are heard. Lubrication is required on all metal-to-metal rolling or sliding parts. Use the lubricants recommended. Do not over lubricate. Over lubrication can often be as damaging as under lubrication. Prior to the application of lubricant to any parts, use a clean cloth and/or bristle brush and remove any old lubricant to prevent an excessive build-up. Remove indicated access plugs from square tube weldment and apply lubricant to panning frame

tube assembly and corresponding thrust pads. Securely replace access plugs in square tube weldment. Be certain to remove any protective caps and clean off each lubrication fitting prior to injecting fresh grease. The elevation and azimuth jackscrew assemblies are equipped with a grease fitting and corresponding pipe plug on opposite sides of the jack housing. Remove the appropriate pipe plug and fill with grease until lubricant seeps from the pipe plug opening. Replace and securely tighten pipe plug.

The following is a list of the lubricant characteristics:

- Mobil Temp SHC32 A non-soap hydrocarbon fluid type grease. Operating temperature range is -65 degrees to 350+ degrees Fahrenheit (-54 degrees to 177+ degrees Celsius).
- Mobil SHC624 A low temperature synthetic oil for worm gear reducers. Operating temperature range is -40 degrees to 125+ degrees Fahrenheit (-40 degrees to 52+ degrees Celsius).
- Moly Grease A grease lubricant containing molybdenum disulfide. Operating temperature range is -85 degrees to 300+ degrees Fahrenheit (-29 degrees to 149+ degrees Celsius).

Periodically inspect lifting screws on jackscrew assemblies to ensure adequate lubrication. Loosen Jackscrew boot clamps to expose the lifting screw assembly. Fully extend jackscrew assembly being careful not to exceed preset mechanical limits. Brush thin coating of Mobil SHC32 grease on exposed lifting screw. Replace boot and attach corresponding boot clamps. If lifting screw is rusty, remove existing lubricant with solvent and wire brush rusted area. Rinse with solvent and apply fresh grease.

Periodically inspect and remove dust or dirt deposits from the motor housings to avoid hindering the heat exchange with the ambient air. Slight dirt accumulation on the air vent screw through splash oil cannot be avoided; however, keep vent screw clean to ensure proper pressure compensation.

Lube points 2, 3, 7 and 8, shown in the Lubrication Chart, require removal of the indicated drain plugs and collecting/measuring the amount of SHC624 drain oil using measuring cup. The specified amount of oil must be added to the gear motor/housing (after installing the drain plug) via the fill/vent plug opening using supplied funnel. Addition of the oil requires use of an appropriate filling utensil. Use of a modified level stick will not correctly gauge the appropriate amount of oil in the gear housings.

Jackscrews/Motors

Gear Motor/Housing Fill Drain Requirements

Lubrication Chart

Lube Point No.	Components to be Lubricated	Frequency (Months)				Type of Service	Type of Lube	No. of Lube Points or Quantity
		1	3	6	12			
1.	Elevation Jackscrew Housing		X			Pressure Fitting	SHC32	1
2. ¹	Elevation Jackscrew Gear Housing Fill and Drain			I*	C**	Pipe Plugs	SHC624	10 Oz
3. ²	Elevation Drive Intermediate Gearbox Fill and Drain	I*	C**			Pipe Plugs	SHC624	34 Oz.
4.	Elevation Jackscrew Pivot Pin, upper		X			Pressure Fitting	SHC32	1
5.	Azimuth Jackscrew Pivot Pin, front		X			Pressure Fitting	SHC32	1
6.	Azimuth Jackscrew Housing		X			Pressure Fitting	SHC32	2
7. ¹	Azimuth Jackscrew Gear Housing Fill and Drain	I*	C**			Pipe Plugs	SHC624	4 Oz.
8. ²	Azimuth Drive Intermediate Gearbox Fill and Drain			I*	C**	Pipe Plugs	SHC624	34 Oz.
9.	Polarization Drive Gear			X		Brush	SHC32	Minimum Surface Coverage
10.	Feed Rotation Worm Gear Pillow Blocks			X		Pressure Fitting	SHC32	2


X = Lubricate I = Inspect C = Change

* Inspection requires checking for visible signs of oil leakage, draining replacing and adding oil to ensure appropriate oil level requirements. Excessively dirty oil will require fresh oil replacement. If oil leakage is found to be excessive, refer to appropriate troubleshooting information and perform applicable corrective action. Periodic inspection procedures can be less frequent after first or second scheduled inspections.


** Initial oil change requirements include flushing gear boxes with a standard cleaning agent.

1 Type 'HS' and 'STHS' drives only. 10 oz. required for gearbox on Type 'MS' drives.

2 Type 'HS' and 'STHS' drives only.

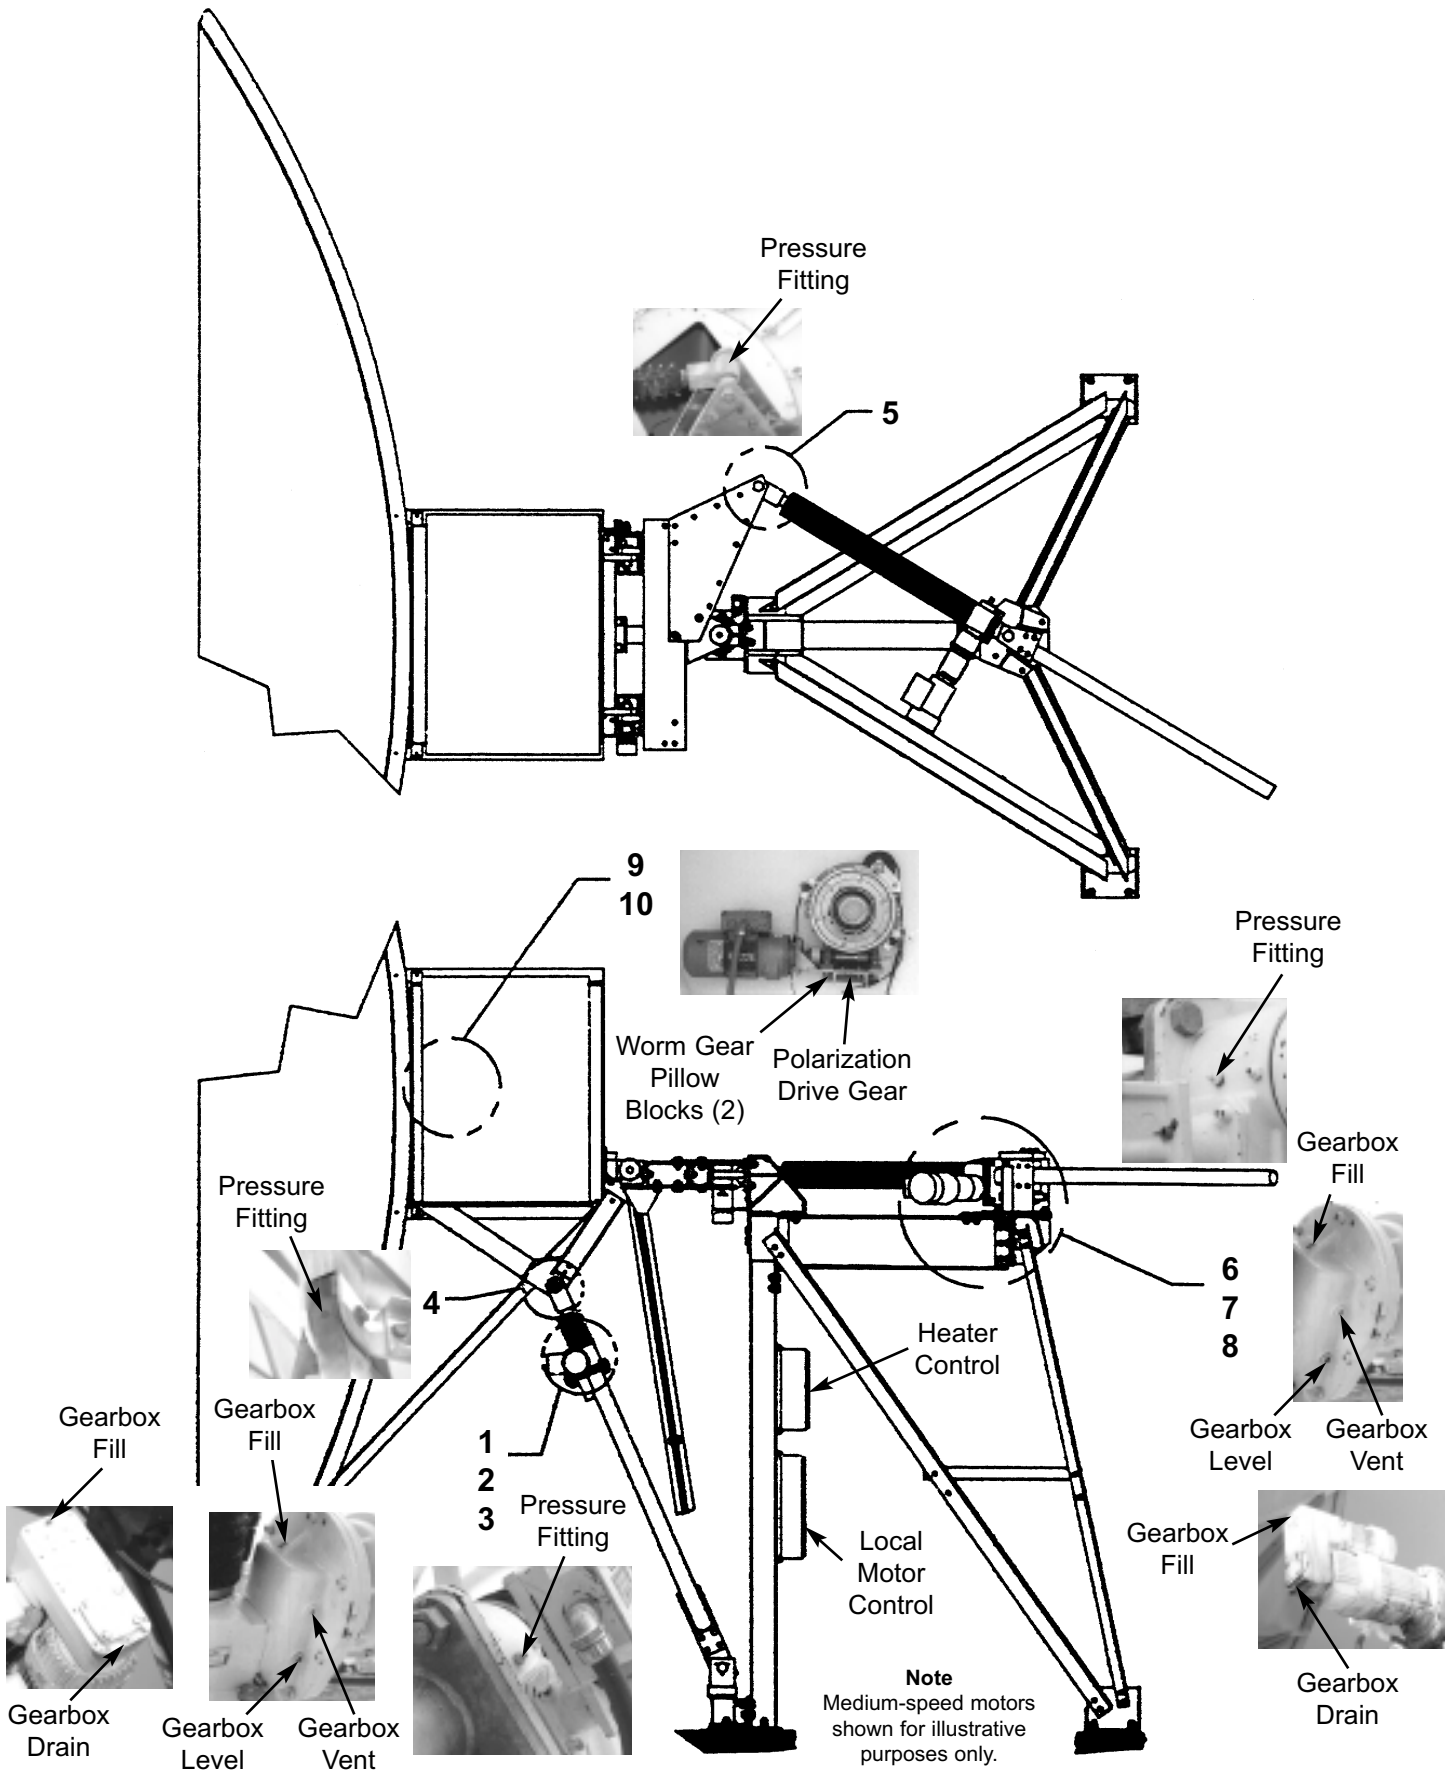

High-Speed Antenna Lubrication Points

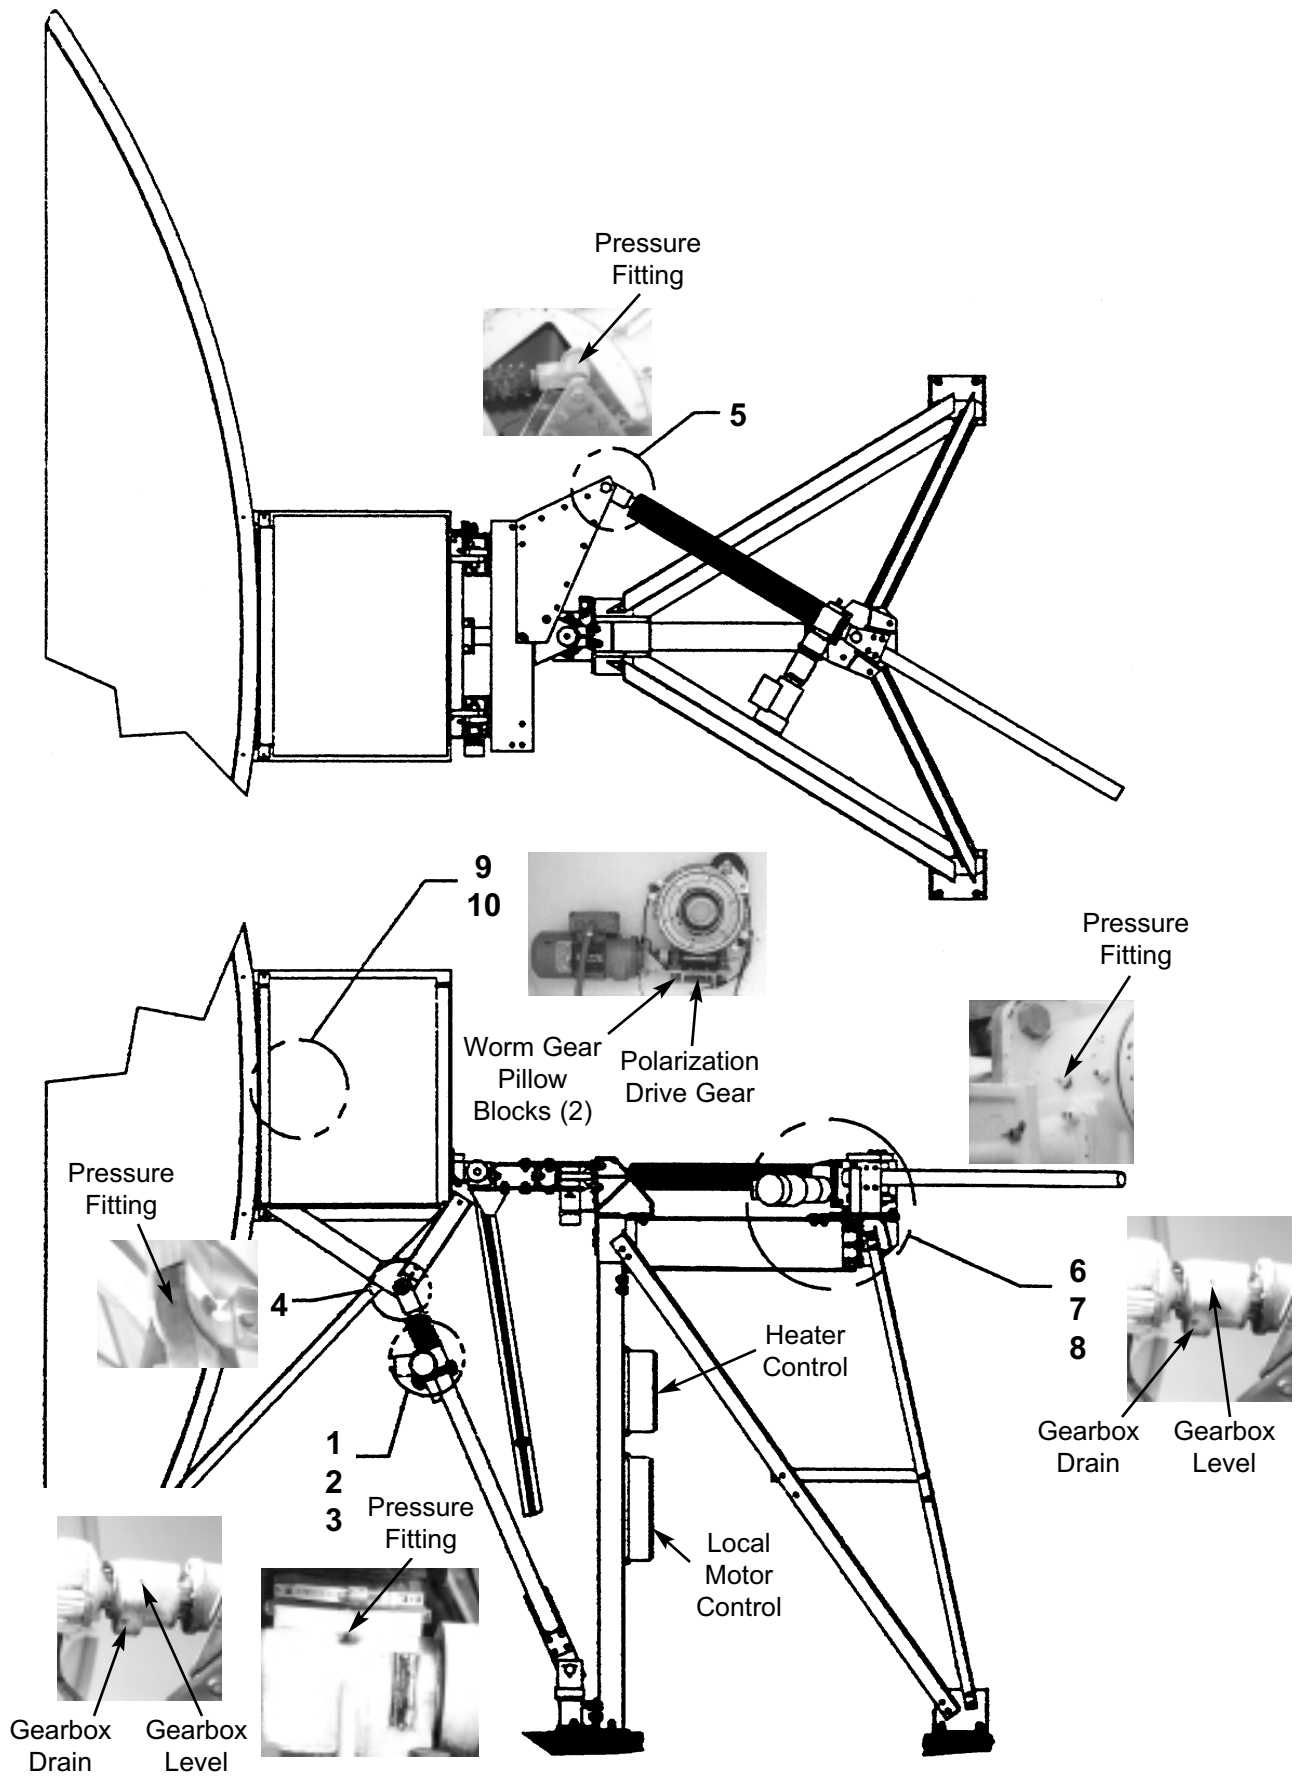

Medium-Speed Antenna Lubrication Points