

A Package Contents

Packaging
 Monitor
 Cameras x 4
 Extension Cables x 4
 Power Supply
 Security Stickers
 Manual

B Front Control Panel

1. Channel Indicator
2. Select Button - Change channels/cameras
3. Mode Button - Auto mode switches between cameras and Manual displays 1 camera
4. Time Dial - Length of time between changing cameras
5. Volume Dial
6. Monitor Power Button
7. Power Indicator

C Rear Control Panel

1. Power Supply Input - Use only provided power supply with this product
2. Camera Extension Cable Inputs
3. Video and Audio Output to VCR
4. V-Hold Dial - Controls / adjusts rolling image
5. Brightness Control Dial - Brightens or darkens image
6. Contrast Control Dial - Intensifies darker or lighter images

D Connecting Cameras to the Monitor



E Auto Switching Mode


Depress the 'Mode' Button to turn Auto Switching on/off
The Monitor will automatically switch cameras based on the 'Time' setting




Turn the 'Time' Dial to set the length of pause between switching cameras - Min = 1 second - Max = 20 Seconds

F Connecting the Monitor to a VCR or DVD Recorder

1 Connect an A/V Cable* to the Yellow and White 'Video Out' and 'Audio Out' Connectors on the back of the monitor

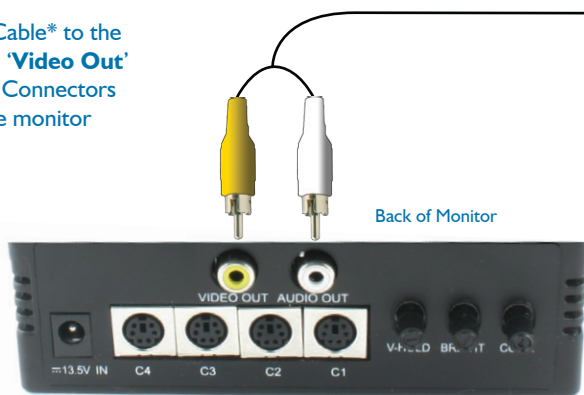

2 Connect the other end of the A/V Cable to your VCR or DVD video 'Input'

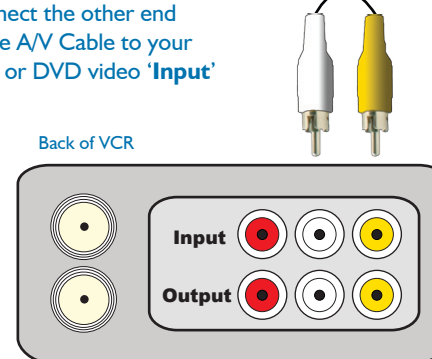

3 Tune your VCR to the correct 'Input,' This is sometimes marked as LI, INPUT, SOURCE, A/V etc. Consult your VCR or recording device's manual for specific information on your recorder

*Not Included