

# Slimline Caller ID Phone

Model EM-2517

# FCC and telephone company information

Your telephone equipment is approved for connection to the Public Switched Telephone Network and is in compliance with parts 15 and 68, FCC Rules and Regulations and the Technical Requirements for Telephone Terminal Equipment published by

#### FCC Part 15

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna. Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for
- Do not attempt to repair or modify this equipment.

### **Warning:** Changes or modifications to this equipment not expressly

approved by the party responsible for compliance could void the user's authority to operate the equipment.

### FCC Part 68 and ACTA

This equipment complies with Part 68 of the FCC rules and with technical requirements adopted by the Administrative Council for Terminal Attachments (ACTA). The label on the back or bottom of this equipment contains, among other things, a product identifier in the format US:AAAEQ##TXXXX. This identifier must be provided to your local telephone company upon request.

The plug and jack used to connect this equipment to premises wiring and the telephone network must comply with applicable Part 68 rules and technical requirements adopted by ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular ack that is also compliant. An RJ11 jack should normally be used for connecting to a single line and an RJ14 jack for two lines.

The Ringer Equivalence Number (REN) is used to determine how many devices you may connect to your telephone line and still have them ring when you are called. The REN for this product is encoded as the 6th and 7th characters following the US: in the product identifier (e.g., if ## is 03, the REN is 0.3). In most, but not all areas, the sum of all RENs should be five (5.0) or less. For more information, please contact your local telephone company.

This equipment may not be used with Party Lines. If you have specially wired alarm dialing equipment connected to your telephone line, ensure the connection of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

If this equipment is malfunctioning, it must be unplugged from the modular jack until the problem has been corrected. Repairs to this telephone equipment can only be made by the manufacturer or it's authorized agents. For repair procedures, follow the instructions


telephone company may temporarily discontinue your telephone

outlined under the Limited Warranty. If this equipment is causing harm to the telephone network, the

service. The telephone company is required to notify you before interrupting service. If advance notice is not practical, you will be notified as soon as possible. You will be given the opportunity to correct the problem and the telephone company is required to inform you of your right to file a complaint with the FCC. Your telephone company may make changes in its facilities, equipment, operation, or procedures that could affect the proper functioning of this product. The telephone company is required to notify you if such changes are planned.

### This telephone system meets FCC Standards for Hearing Aid Compatibility.

TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

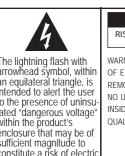

RISK OF ELECTRIC SHOCK RNING: TO REDUCE THE R F ELECTRIC SHOCK, DO NOT MOVE COVER (OR BACK). USER SERVICEABLE PART SIDE. REFER SERVICING T UALIFIED SERVICE PERSONNEL

within the equilateral angle is intended to a ortant operating and naintenance (servicing nstructions in the litera ccompanying the produc

Rating plate and caution marking are marked on the bottom enclosure of the apparatus.



**CAUTION:** When using telephone equipment, there are basic safety instructions that should always be followed. Refer to the IMPORTANT **SAFETY INSTRUCTIONS** provided with this product and save them for future reference.

# Important safety instructions

NOTE: Some of the precautions below may not apply to your product, e.g.: Battery and power cord precautions.

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

- Read and understand all instructions
- 2. Follow all warnings and instructions marked on the product. 3. Unplug this product from the wall outlet before cleaning. Do not
- use liquid or aerosol cleaners. Use a damp cloth for cleaning. 4. Do not use this product near water (for example, near a bath
- tub, kitchen sink or swimming pool). 5. Do not place this product on an unstable surface.
- 6. Slots and openings in the back or bottom of this product are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register. This product should not be placed in any area where proper ventilation is not provided.
- 7. Never push objects of any kind into the ventilation slots of this product as they may touch dangerous voltage points or create a short circuit that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
- 8. Use only the power cord and batteries indicated in this manual. 9. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home, consult your dealer or local power company
- 10. Plug the adaptor to the socket outlet that is closest to the equipment and which is easily accessible.
- 11. Do not allow anything to rest on the power cord. Do not install this product where the cord may have anyone walking on it.
- 12. To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the telephone base or handset other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used.
- 13. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
- 14. The power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling or an under-the-table/cabinet outlet.
- 15. Unplug this product from the wall outlet and refer servicing to an authorized service facility under the following conditions: A. When the power supply cord or plug is damaged or frayed. B. If liquid has been spilled onto the product.
- C. If the product has been exposed to rain or water. D. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as improper adjustment of other controls may result in damage and often requires extensive work by an authorized technician to restore the product to normal operation.
- E. If the product has been dropped and damaged.
- F. If the product exhibits a distinct change in performance. 16. Avoid using a telephone (other than cordless) during an electrical storm. There is a remote risk of electric shock from
- 17. Do not use the telephone to report a gas leak in the vicinity of the leak
- 18. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.

 
# For products that require batteries

Important battery precautions

- Use only the type of battery specified in this user manual Batteries may present a risk of fire, explosion, or chemical burn if abused. Do not try to charge a battery that is not intended to
- Do not dispose of the battery(ies) in a fire. They may explode Check with local codes for disposal instructions.
- Non-rechargeable batteries, such as alkaline batteries, may leak if left in your product for a long period of time. Remove the batteries from the product if you are not going to use it for a
- If your product uses more than one battery, do not mix types and make sure they are inserted correctly. Mixing different types of
- batteries or inserting them incorrectly, may cause them to leak. Discard any leaky or deformed battery immediately. Leakage
- from battery acid can cause skin burns or other personal injury. • Please help to protect the environment by recycling or disposing of batteries according to federal, state, and local regulations.

# SAVE THESE INSTRUCTIONS

Telephone jack requirements



telephone company to find out how to get one installed

To use this phone, you must have an RJ11C

modular telephone jack. If you do not have


a modular jack, please call your local

# [6] Important installation information


- Never install telephone wiring during a lightning storm.
- Never touch uninsulated telephone wires or terminals, unless the telephone line has been disconnected at the network Use caution when installing or modifying telephone lines.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Temporarily disconnect any equipment connected to the phone, such as faxes, other phones, or modems.



CAUTION: Disconnect the phone cord from the wall outlet before installing or replacing the batteries. (Only for telephones which require

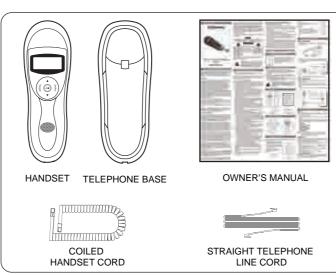

# **Solution Location of controls**

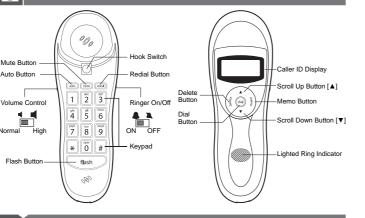


# Location of controls

This telephone requires 4 AA-size alkaline batteries to operate the Caller ID and memory functions.

1. Make sure that the telephone is disconnected from the wall jack. 2. Remove the battery compartment covers located at the bottom of

 the unit's base.



[ + AA 1.5V -

"AA" size battery

Battery compartment covers

# Connecting DESK MOUNTING

Re-connect the line cord to the modular

• If you will not be using the phone for a long


period of time, remove the batteries to

prevent possible leakage and corrosion.


Do not mix old and new batteries.

wall jack.

1. Connect the coil cord to the handset and base as shown in the diagram below.

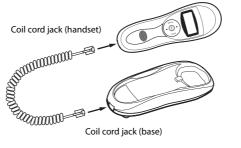

Plug one end of the straight line cord into the jack at the bottom of the phone's base, and the other end into a modular wall telephone jack.

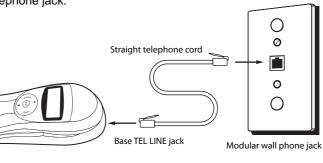


3. Pick up the handset and confirm you hear the dial tone.

## WALL MOUNTING

To mount your telephone on a wall plate (not included), follow the instructions below:

- 1. Plug the straight line cord into a modular wall phone jack. 2. Align the holes on the base with the mounting studs on the wall
- 3. Pull the base down onto the studs until the telephone is secure.

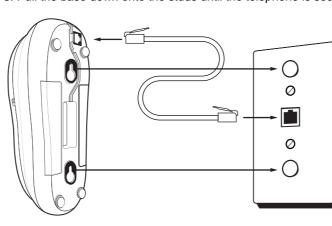

# Setting up the Caller ID menu

IMPORTANT: Do not connect the telephone into the wall jack while setting up the Caller ID menu because an incoming call may invalidate the information not yet saved.

- 1. Press and hold the [dial] button until the display shows "SET **◀** OR ▶".
- 2. Use the [▲] or [▼] buttons to scroll through the options below. and press the **[dial]** button to select the desired option you wish • DATE/TIME
- LOCAL AREA CODE
- REGIONAL AC'S-1 • SELECT LANGUAGE
- T/P DIAL MODE
- EXIT SETUP
- NOTE: Press the [flash] button to exit the setup menu, or the phone will exit automatically if there is no operation within 20 seconds and return to the "NO CALLS" screen.

# DATE AND TIME

The date and time is programmed automatically when the first Caller ID record is received. It is also possible to set the date and time manually if desired.

- 1. Press and hold the **[dial]** button until the display shows "SET **◄** OR ▶".
- 2. Use the [▲] or [▼] buttons and select "DATE/TIME" and press the [dial] button to enter. 3. Use the [▲] or [▼] buttons to set the hour, minute, AM/PM,
- 4. Press the [dial] button to confirm your selections.

# LOCAL AREA CODE

The telephone uses the programmed area code to determine the number format to display when receiving Caller ID information. It is also used for the dial back feature.

1. Press and hold the **[dial]** button until the display shows "SET **◀** OR ▶".

- 2. Use the [▲] or [▼] buttons and select "LOCAL AREA CODE" and press the [dial] button to enter.
- 3. Use the  $[\, lacktriangledown]$  button to select the first digit and press the  $[\, lacktriangledown]$ button to confirm and skip to the next digit.
- 4. Use the **[delete]** button to edit, and press the **[dial]** button to
- 5. Use the same method to set the rest of the digits.
- NOTE: You can also use the keypad to set the area code.

#### REGIONAL AREA CODES Similar to programming local area codes, programmed regional

area codes allow the phone to determine the number format to display when receiving Caller ID information. Calls matching any of the programmed regional area codes are displayed as 10 digits. This is helpful for areas that have multiple or overlapping area codes that require 10 digit dialing.

- 1. Press and hold the **[dial]** button until the display shows "SET **◀** OR ▶".
- 2. Use the [▲] or [▼] buttons and select "REGIONAL AC'S-1" and press the [dial] button to enter 3. Use the [▼] button to select the first digit and press the [▲]
- button to confirm and skip to the next digit. 4. Use the [delete] button to edit, and press the [dial] button to
- 5. Use the same method to set the rest of the digits. Up to 6 regional area codes may be programmed.
- **NOTE:** You can also use the keypad to set the regional area

### SELECT LANGUAGE

This setting allows you to choose the language for the display

- 1. Press and hold the **[dial]** button until the display shows "SET ◀ OR ▶" 2. Use the [▲] or [▼] buttons and select "SELECT LANGUAGE"
- and press the [dial] button to enter. Use the [▲] or [▼] buttons to select the desired language. 4. Press the [dial] button to confirm.

## **TONE / PULSE DIAL MODE**


Choose Tone or Pulse dialing.

- 1. Press and hold the [dial] button until the display shows "SET ◀ OR ▶"
- 2. Use the [▲] or [▼] buttons and select "T/P DIAL MODE" and press the [dial] button to enter. 3. Use the [▲] or [▼] buttons to select the desired dial mode.
- 4. Press the [dial] button to confirm.


When "EXIT SETUP" is displayed press the [dial] button exit.

### **SWITCHING THE RINGER ON OR OFF** Slide the ringer switch to the "OFF" position to turn the ringer off. The ringer will not be activated by any incoming calls. Don't forget to turn the ringer "ON" when you are ready to receive calls,

otherwise you will not hear the ringing sound during incoming calls. **NOTE:** When the ringer switch is in the "OFF" position, the lighted local telephone company. ring indicator will still alert you to incoming calls.

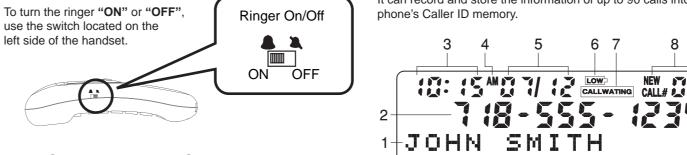

### ADJUSTING THE HANDSET VOLUME

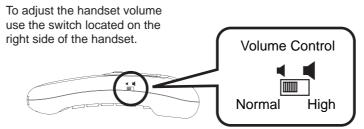

To redial the last number called use the redial feature. This feature is useful when the number you are calling is busy. Pick up the handset.

- 2. Press the [redial] button.
- 3. The last number called is redialed. **FLASH**

call, the second call will be put on hold.

through your local phone company, such as Call Waiting, and Three Way Calling. To use the features below you must subscribe to these services from your local telephone company. To answer an incoming call while having a conversation:

The Flash feature is used to activate calling services available

After you hear the Call Waiting tone, press and release the [flash] button. The first call is placed on hold and the second call is answered. To return to the first call and put the second call on hold:

Press and release the [flash] button again to return to the first

## To activate Three Way Calling:

Press and release the [flash] button while on the first call, you will hear a dial tone. Dial a second number, and press the [flash] button again to connect the two calls.

To temporarily prevent the person on the other end of the line from hearing your conversation, press the **[mute]** button. To deactivate mute, press the [mute] button again.

**Deleting Caller ID information** 

ID records will be erased.

Dialing back a number from Caller ID memory

2. Press the [delete] button.

If the phone is ON the base:

automatically.

like dialed from the Caller ID memory.

options (7, 10, or 11 digits).

dialed from the Caller ID memory.

If the phone is OFF the base:

3. The display shows "ADJUST"

code, and calling region.

is called automatically.

you are on the phone.

Phone does not ring

Replace batteries.

No display

options (7, 10, or 11 digits).

Caller ID display messages

NO CALLS - The Caller ID memory is empty.

batteries, and do not mix old and new batteries.

number, and Caller ID information is withheld.

Check all cabling, and telephone jack connections.

Make sure the ringer switch is set to the ON position.

Be sure to wait until the second ring before answering.

• In order to receive Caller ID records, you must subscribe to the

standard name and number Caller ID service available through

• Make sure the batteries are properly installed.

No information is shown after the phone rings

your local telephone company.

Check if the [mute] button has

deactivate the mute function.

properly plugged in.

• Make sure the handset coil cord is

Check that extension phones are

on the hook at the same time

for the volume to drop when

used at the same time.

you're using the phone. It is normal

additional extension phones are

♠ Product maintenance

been accidently pressed, if so

press the [mute] button again to

Other party cannot hear you

2. Press the [dial] button

wish to delete.

1. Use the [▲] or [▼] buttons to select the caller information you

NOTE: To delete all Caller ID information, press and hold the

When reviewing Caller ID information, you may dial back the

1. Use the [▲] or [▼] buttons and select the number you would

3. Pick up the handset and the displayed number will be dialed

**NOTE:** Depending on how the incoming caller's phone number is

formatted when it's received, and whether or not you

setup menu, you may need to adjust the format of the

1. Use the [▲] or [▼] buttons to select the number you would like

4. A three second timer begins allowing you to adjust the number

5. Press the [dial] button to scroll through the different dialing

UNAVAILABLE - The incoming call does not have Caller ID

service. If "UNKNOWN CALLER" appears along with a calling

**LOW** - **Low** The battery power is low, and the batteries need to

**BLOCKED CALL** - The incoming call is registered as a private

**CALL WAITING** - **CALLWATING** If you subscribe to Call Waiting

Caller ID Service, this icon flashes when you receive a call while

NEW CALL - Indicates call or calls that have not been reviewed.

be replaced as soon as possible. Please remember to use alkaline

number, the name information for that number is not available.

6. When the three second timer runs out, the displayed number

format to either 7, 10, or 11 digits depending on your local area

previously pre-programmed your local area code into the

incoming caller's stored phone number before making the

call. Press the [dial] button to scroll through different dialing

phone number displayed by pressing the **[dial]** button.

[delete] button until the display shows "ERASE ALL?",

then press the [delete] button again to confirm. All Caller

This telephone can store up to 10 of your most frequently dialed

### Storing frequently called numbers

- Pick up the handset.
- Press the [memo] button, the display shows "M0-M9". 3. Push the desired memory location (0-9) on the handset keypad,
- and press the [memo] button to confirm.
- 4. Use the keypad to enter the telephone number and press the [memo] button to confirm.

5. Use the keypad to enter the name and press the **[memo]** button

to confirm and exit. **NOTE:** Use the [redial] button to insert a pause when a delay is

# needed in an automatic dialing sequence.

Repeat the storage sequence above, the new number will replace the previously stored number at that memory location.

#### Dialing a stored number 1. Pick up the handset.

dialed automatically.

Changing a stored number

3. Press a memory location (0-9) and the stored number will be

2. Press the [auto] button on the handset keypad.

- 1. Pick up the handset 2. Press the [memo] button.
- 3. Use the  $[\blacktriangle]$  or  $[\blacktriangledown]$  buttons to select a memory location from

### 4. Press the **[dial]** button, to dial that number. Copying a number from the Caller ID memory

You can copy a number from the Caller ID memory by following

- Pick up the handset Use the [▲] or [▼] buttons to select a number from the Caller
- ID memory list 3. Press the [memo] button, and select a memory location (0-9) from the keypad.
- 4. Press the [memo] button to confirm the memory location, press the [memo] button again to confirm the number, and press the
- [memo] button a third time to confirm the name and exit. (6) Caller ID

IMPORTANT: In order to use this unit's Caller ID features, vou must subscribe to either the standard Name/Number Caller ID Service or Call Waiting Caller ID Service from your

This telephone automatically displays an incoming caller's name and telephone number, as well as the date and time of the call. It can record and store the information of up to 90 calls into the

CALLWATING CALL# -7 (8-555- (234

# Call Waiting Caller ID

Number

4. AM / PM

Time

Provided you subscribe to Call Waiting Caller ID service from your phone company; if you receive an incoming call while on the phone, a beep will indicate the presence of a Call Waiting call on the line. The Call Waiting Caller ID information will be displayed and stored in the Caller ID memory. NOTE: When you hear the Call Waiting beep, press the [flash]

Low Battery Indicator

7. Call Waiting indicator

New Calls

button to put the current call on hold and answer the incoming call. Press the [flash] button again to return to the original call. Receiving Caller ID information

# When you receive a call, the caller's information is displayed,

Reviewing Caller ID information

allowing you to decide whether or not to answer the call. If you are away from home or unable to answer the phone, the information for up to 90 of the most recent calls will be stored into the telephone's Caller ID memory. When receiving the 91st call, the oldest Caller ID record will be deleted.

To review the information of your received calls which are stored

in the phone's Caller ID memory, use the [▲] or [▼] buttons.

generate electrical noise (for example: motors or fluorescent

- Avoid dropping the unit and/or other rough treatment.
- Clean with a soft cloth.
- this will damage the finish.

## 1 Year Limited Warranty

In the unlikely event that this product is defective, or does not perform properly, you may within one (1) year from your original date of

Warranty information

purchase return it to the authorized service center for repair or

- TO OBTAIN WARRANTY SERVICE: • Provide proof of the date of purchase within the package (Dated bill of sale)
- Prepay all shipping costs to the authorized service center,
- and remember to insure your return • Include a return shipping address (no P.O. Boxes),

 
a telephone contact number, and the defective unit within

the package. • Describe the defect or reason you are returning the product. 2. Press the [dial] button, the display shows "PICK UP OR ADJ". Your product will be repaired or replaced, at our option, for the same

or similar model of equal value if examination by the service center

determines this product is defective. Products received damaged

as a result of shipping will require you to file a claim with the carrier.



Should you have any questions or problems concerning this

product, please contact our customer service department at:



Monday - Thursday: 9AM - 5PM (EST) Friday: 9AM - 3PM (EST)

via e-mail at **☐** cs@southerntelecom.com

Warranty service not provided This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, and unauthorized modification. This warranty is voided in the event any unauthorized person opens, alters or repairs this product.

#### All products being returned to the authorized service center for repair must be suitably packaged.

Limitation of Warranty:

- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES. EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY SOUTHERN TELECOM INC. IT'S AGENTS, OR EMPLOYEES SHALL CREATE A GUARANTY
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. SOUTHERN TELECOM INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF NEW YORK. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH

OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY

or consequential damages, or limitations on how long an implied warranty lasts so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

Some states do not allow the exclusion nor limitation of incidental



Manufactured by Southern Telecom Inc. Brooklyn NY. 11232 © 2009 Southern Telecom Inc. All rights reserved. Emerson and the G-Clef logo are registered trademarks of Emerson Radio Corp. Parsippany, New Jersey USA.

### Follow the guidelines below to properly maintain this product: Avoid putting it near heating appliances and devices that

DO NOT expose to direct sunlight or moisture.

Never use a strong cleaning agent or abrasive powder because

# • Retain the original packaging in case you need to ship it at a