


# **Angle Drill**

13 mm (1/2") MODEL DA6300

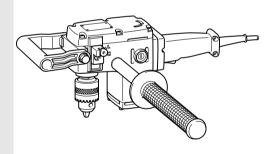

003005

# INSTRUCTION MANUAL

## **⚠ WARNING:**

For your personal safety, READ and UNDERSTAND before using. SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

www.makitatools.com

# **SPECIFICATIONS**

Model			DA6300		
Speed		High	Low		
Capacities		Auger bit	29 mm (1-1/8")	38 mm (1-1/2")	
	Wood	Ship-auger bit	38 mm (1-1/2")	38 mm (1-1/2")	
		Self-feed bit	35 mm (1-3/8")	118 mm (4-5/8")	
	Steel		13 mm (1/2")	13 mm (1/2")	
No load speed (RPM)		1,200/min.	300/min.		
Overall length		330 mm (13") * 410 mm (16-3/16)			
Net weight		4.3 kg (9.5 lbs)			

<sup>\*</sup> Extended spade grip

- Manufacturer reserves the right to change specifications without notice.
- · Specifications may differ from country to country.

# **GENERAL SAFETY RULES**

USA001-2

(For All Tools)

# **↑ WARNING:**

**Read and understand all instructions.** Failure to follow all instructions listed below, may result in electric shock, fire and/or serious personal injury.

# SAVE THESE INSTRUCTIONS

#### **Work Area**

- Keep your work area clean and well lit.
   Cluttered benches and dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of
- flammable liquids, gases, or dust. Power tools create sparks which may ignite the dust or fumes.
- Keep bystanders, children, and visitors away while operating a power tool. Distractions can cause you to lose control.

## **Electrical Safety**

- 4. Grounded tools must be plugged into an outlet properly installed and grounded in accordance with all codes and ordinances. Never remove the grounding prong or modify the plug in any way. Do not use any adaptor plugs. Check with a qualified electrician if you are in doubt as to whether the outlet is properly grounded. If the tools should electrically malfunction or break down, grounding provides a low resistance path to carry electricity away from the user.
- Avoid body contact with grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is grounded.
- Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- Do not abuse the cord. Never use the cord to carry the tools or pull the plug from an outlet. Keep cord away from heat, oil, sharp edges or moving parts. Replace damaged cords immediately. Damaged cords increase the risk of electric shock.
- When operating a power tool outside, use an outdoor extension cord marked "W-A" or "W". These cords are rated for outdoor use and reduce the risk of electric shock.

#### **Personal Safety**

- Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use tool while tired or under the influence of drugs, alcohol, or medication. A moment of inattention while operating power tools may result in serious personal injury.
- 10. Dress properly. Do not wear loose clothing or jewelry. Contain long hair. Keep your hair, clothing, and gloves away from moving parts. Loose clothes, jewelry, or long hair can be caught in moving parts.

- 11. Avoid accidental starting. Be sure switch is off before plugging in. Carrying tools with your finger on the switch or plugging in tools that have the switch on invites accidents.
- 12. Remove adjusting keys or wrenches before turning the tool on. A wrench or a key that is left attached to a rotating part of the tool may result in personal injury.
- 13. Do not overreach. Keep proper footing and balance at all times. Proper footing and balance enables better control of the tool in unexpected situations.
- 14. Use safety equipment. Always wear eye protection. Dust mask, non-skid safety shoes, hard hat, or hearing protection must be used for appropriate conditions. Ordinary eye or sun glasses are NOT eye protection.

#### **Tool Use and Care**

- 15. Use clamps or other practical way to secure and support the workpiece to a stable platform. Holding the work by hand or against your body is unstable and may lead to loss of control.
- 16. Do not force tool. Use the correct tool for your application. The correct tool will do the job better and safer at the rate for which it is designed.
- 17. Do not use tool if switch does not turn it on or off. Any tool that cannot be controlled with the switch is dangerous and must be repaired.
- 18. Disconnect the plug from the power source before making any adjustments, changing accessories, or storing the tool. Such preventive safety measures reduce the risk of starting the tool accidentally.
- 19. Store idle tools out of reach of children and other untrained persons. Tools are dangerous in the hands of untrained users.
- 20. Maintain tools with care. Keep cutting tools sharp and clean. Properly maintained tools with sharp cutting edges are less likely to bind and are easier to control.

- 21. Check for misalignment or binding of moving parts, breakage of parts, and any other condition that may affect the tools operation. If damaged, have the tool serviced before using. Many accidents are caused by poorly maintained tools.
- 22. Use only accessories that are recommended by the manufacturer for your model. Accessories that may be suitable for one tool, may become hazardous when used on another tool.

#### SERVICE

- 23. Tool service must be performed only by qualified repair personnel. Service or maintenance performed by unqualified personnel could result in a risk of injury.
- 24. When servicing a tool, use only identical replacement parts. Follow instructions in the Maintenance section of this manual. Use of unauthorized parts or failure to follow Maintenance instructions may create a risk of electric shock or injury.

**USE PROPER EXTENSION CORD:** Use only three-wire extension cords that have three-prong grounding-type plugs and three-pole receptacles that accept the tool's plug. Make sure your extension cord is in good condition. Replace or repair damaged or worn cord immediately. When using an extension cord, be sure to use one heavy enough to carry the current your product will draw. An undersized cord will cause a drop in line voltage resulting in loss of power and overheating. Table 1 shows the correct size to use depending on cord length and nameplate ampere rating. If in doubt, use the next heavier gage. The smaller the gage number, the heavier the cord.


Ampere Rating		Volts	Total length of cord in feet			
		120 V	25 ft.	50 ft.	100 ft.	150 ft.
More Than	Not More Than	AWG				
0	6		18	16	16	14
6	10		18	16	14	12
10	12		16	16	14	12
12	16		14	12	Not Reco	mmended

Table 1: Minimum gage for cord

#### **GROUNDING INSTRUCTIONS**

This tool should be grounded while in use to protect the operator from electric shock. The tool is equipped with a three-conductor cord and three-prong grounding type plug to fit the proper grounding type receptacle. The green (or green and yellow) conductor in the cord is the grounding wire. Never connect the green (or green and yellow) wire to a live terminal. Your unit is for use on 120 volts and has a plug that looks like Fig. "A".

An adapter Fig. "B" and "C" is available for connecting Fig. "A" type plugs to two-prong receptacles. The green-colored rigid ear, lug, etc., extending from the adapter must be connected to a permanent ground, such as a properly grounded outlet box.

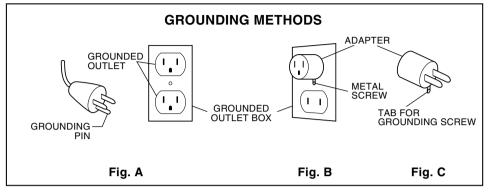

# **SPECIFIC SAFETY RULES**

USB001-2

DO NOT let comfort or familiarity with product (gained from repeated use) replace strict adherence to drill safety rules. If you use this tool unsafely or incorrectly, you can suffer serious personal injury.

- Hold tool by insulated gripping surfaces when performing an operation where the cutting tools may contact hidden wiring or its own cord. Contact with a "live" wire will make exposed metal parts of the tool "live" and shock the operator.
- Always be sure you have a firm footing. Be sure no one is below when using the tool in high locations.
- 3. Hold the tool firmly.

 
- 4. Keep hands away from rotating parts.
- 5. Do not leave the tool running. Operate the tool only when hand-held.
- Do not touch the drill bit or the workpiece immediately after operation; they may be extremely hot and could burn your skin.
- Some material contains chemicals which may be toxic. Take caution to prevent dust inhalation and skin contact. Follow material supplier safety data.

# SAVE THESE INSTRUCTIONS


# **↑ WARNING:**

MISUSE or failure to follow the safety rules stated in this instruction manual may cause serious personal injury.

# FUNCTIONAL DESCRIPTION



 - 1. Counterclockwise
- 2. Switch trigger
- 3. Clockwise



- 1. Pin
- 2. Slide button

## **⚠** CAUTION:

 Always be sure that the tool is switched off and unplugged before adjusting or checking function on the tool.

#### Switch action

#### **↑** CAUTION:

- Before plugging in the tool, always check to see that the switch trigger actuates properly and returns to the "OFF" position when released.
- Change the direction of rotation only when the tool comes to a complete stop. Changing it before the tool stops may damage the tool.

The switch is reversible, providing either clockwise or counterclockwise rotation. To start the tool, simply pull the lower part of the switch trigger for clockwise or the upper part for counterclockwise. Release the switch trigger to stop.

## Speed change

To change the speed, pull the pin and slide the button to the "L" position for low speed or the "H" position for high speed. If the button does not slide easily, turn the chuck slightly in either direction while sliding the button.

# **ASSEMBLY**

#### **↑** CAUTION:

 
 Always be sure that the tool is switched off and unplugged before carrying out any work on the tool.

# 003038

# Spade grip

The spade grip can be installed in either of the positions as shown in the figure. To change the location of the spade grip from one position to the other, loosen the hex bolts with a wrench and turn the spade grip to another position. Then tighten the hex bolts securely.


- 1. Spade grip
- 2. Hex. bolt



# Installing or removing drill bit


To install the bit, place it in the chuck as far as it will go. Tighten the chuck by hand. Place the chuck key in each of the three holes and tighten clockwise. Be sure to tighten all three chuck holes evenly.

 To remove the bit, turn the chuck key counterclockwise in just one hole, then loosen the chuck by hand.




1. Chuck key

# **OPERATION**

 

1. Reaction

 2. Forward



1. Reaction

2. Reverse

# **Holding tool**

#### **↑** CAUTION:

 This is a powerful tool. High torque is developed and it is important that the tool should be securely held and properly braced.

Grasp the switch handle with one hand and the spade grip with the other hand. When drilling a large hole with a hole saw, etc., the side grip (auxiliary handle) should be used as a brace to maintain safe control of the tool.

When drilling action is forward (clockwise), the tool should be braced to prevent a counterclockwise reaction if the bit should bind. When reversing, brace the tool to prevent a clockwise reaction. If the bit must be removed from a partially drilled hole, be sure the tool is properly braced before reversing.

# **Drilling operation**

# **Drilling in wood**

When drilling in wood, the best results are obtained with wood drills equipped with a guide screw. The guide screw makes drilling easier by pulling the bit into the workpiece.

# **Drilling in metal**

To prevent the bit from slipping when starting a hole, make an indentation with a center-punch and hammer at the point to be drilled. Place the point of the bit in the indentation and start drilling.

Use a cutting lubricant when drilling metals. The exceptions are iron and brass which should be drilled dry.

#### **△ CAUTION:**

- Pressing excessively on the tool will not speed up the drilling. In fact, this excessive pressure will only serve to damage the tip of your bit, decrease the tool performance and shorten the service life of the tool.
- There is a tremendous twisting force exerted on the tool/ bit at the time of hole breakthrough. Hold the tool firmly

 
and exert care when the bit begins to break through the workpiece.

- · A stuck bit can be removed simply by setting the reversing switch to reverse rotation in order to back out. However, the tool may back out abruptly if you do not hold it firmly.
- Always secure small workpieces in a vise or similar holddown device
- Avoid drilling in material that you suspect contains hidden nails or other things that may cause the bit to bind or break

# MAINTENANCE


#### 

Always be sure that the tool is switched off and unplugged before attempting to perform inspection or maintenance.



# Replacing carbon brushes

 Remove and check the carbon brushes regularly. Replace when they wear down to the limit mark. Keep the carbon brushes clean and free to slip in the holders. Both carbon brushes should be replaced at the same time. Use only identical carbon brushes.



Screwdriver

1. Limit mark

2. Brush holder cap

Use a screwdriver to remove the brush holder caps. Take out the worn carbon brushes, insert the new ones and secure the brush holder caps.

To maintain product SAFETY and RELIABILITY, repairs, any other maintenance or adjustment should be performed by Makita Authorized or Factory Service Centers, always using Makita replacement parts.

# **ACCESSORIES**

#### **↑** CAUTION:

 These accessories or attachments are recommended for use with your Makita tool specified in this manual. The use of any other accessories or attachments might present a risk of injury to persons. Only use accessory or attachment for its stated purpose.

If you need any assistance for more details regarding these accessories, ask your local Makita service center.

- Drill bits
- Hole saws
- · Chuck key

Memo			

First-Class
Postage
Required

Post Office will
not deliver
without proper
postage.

# Makita U.S.A., Inc. 14930 Northam Street

La Mirada, CA 90638-5753

Hdallaallaalldalalddaladdalallalall

# **MAIL THIS PORTION**

# Your answers to the following questions are appreciated.

1. This product was purchased	from:	3. How did you learn abo	out this product:
Home Center Hardware/Lumber Store Tool Distributor Industrial Supply Construction Supply	Other ( )	Magazine From Dealer Newspaper Store Display Catalog	Radio Exhibition From Friend Previous Usage Other ( )
2. Use of the product is intende	ed for:	4. Most favored points a	ire:
Construction Trade Industrial Maintenance Home Maintenance Hobby Other ( )		Design Features Size Price Makita Brand	Repair Service Durability Power Other ( )
5. Any comments:			
DATE PURCHASED		MODEL NO.	
MONTH DAY	YEAR	OFFILM NO	
		SERIAL NO.	
INTL. LAST NAME / COMP/	ANY NAME		STATUS SEX Married Single M F
STREET ADRESS			
CITY			
			AREA
CTATE	ZID CODE	PHONE	CODE
STATE	ZIP CODE	PHONE	
STATE  AGE: Under 15		9HONE 30-39 40-49	

Paste

Paste

Paste

Facsimile No: (714) 522-8133

Paste

Please return this portion by facsimile or mail.

Past

Paste

Paste

Dooto

Paste

# **FACTORY SERVICE CENTERS**

#### 1-800-4-MAKITA

# RETAIN THIS PORTION FOR YOUR RECORDS

#### ALABAMA

2365 Pelham Parkway Pelham, AL 35124 (205) 620-1791

#### ADIZONA

3707 E. Broadway Rd., Ste. 6 Phoenix, AZ 85040 (602) 437-2850

#### ARKANSAS

Shackleford Shopping Center 240 South Shackleford Rd., Little Rock, AR 72211 (501) 224-5733

#### CALIFORNIA

41850 Christy St. Fremont, CA 94538-5107 (510) 657-9881

1421 N. Clovis Ave., Ste. 112 Fresno, CA 93727 (559) 252-5166

14930 Northam St. La Mirada, CA 90638-5753 (714) 522-8088

1970 Fulton Avenu Sacramento, CA 95825

1440 South "E" Street San Bernardino, CA 92408

(909) 885-1289 7674 Clairemont Mesa Blvd.

San Diego, CA 92111 (858) 278-4471 1714 E.McFadden Ave., Unit M

Santa Ana CA 92705 (714) 667-5066

Campbell, CA 95008-0501 (408) 379-0377

16735 Saticov St., Ste. 105 Van Nuys, CA 91406 (818) 782-2440

#### COLOBADO 11839 E. 51st Ave

Denver, CO 80239-2709 (303) 371-2850

#### CONNECTICUT 508 Spring St.

Windsor Locks, CT 06096 (860) 292-6405

#### FLORIDA

620 Douglas Ave. Suite 1302 Altamonte Springs, FL 32714 (407) 774-6000

750 Fast Sample Boad Pompano Beach, FL 33064 (954) 781-6333

Thompson Center Waters 5501 W. Waters Ave., Ste. 406 Tampa, FL 33634 (813) 886-8292

#### GEORGIA

4680 River Green Parkway Duluth, GA 30096-2566 (770) 476-8911

4510 Salt Lake Blvd., Suite A7 Honolulu, HI 96818 (808) 847-0038

1450 Feehanville Dr Mt. Prospect, IL 60056-6011 (847) 297-3100

8403 Michigan Road, Unit 1 Indianapolis, IN 46268 (317) 334-9980

#### KANSAS

8819 W. 95th St. Overland Park, KS 66212 (913) 642-1111

#### KENTUCKY

1215 S. Hurstbourne Parkway Louisville, KY 40222 (502) 326-3740

#### LOUGIANA 5626 Jefferson Hwy

Harahan, LA 70123 (504) 733-4138

#### MARYLAND

7541 - 45 Ritchie Highway Glen Burnie, MD 21061 (410) 590-0160

#### MASSACHUSETTS 232 Providence Hwy Westwood, MA 02090 (617) 461-9754

MICHIGAN 37454 Ann Arbor Trail Livonia, MI 48150

## (313) 432-1012 MINNESOTA

6427 Penn Ave. South Richfield MN 55423

#### MISSOURI

9876 Watson Road St Louis MO 63126-2221

#### NEBRASKA

4129 S. 84th St. Omaha NF 68127 (402) 597-2925

#### NEVADA

3375 S. Decatur Blvd. Suites. 22 - 24 Las Vegas, NV 89102 (702) 368-4277

## NEW JERSEY

251 Herrod Blvd. Dayton, NJ 08810-1539 (609) 655-1212

#### NEW MEXICO

5805 Menaul Blvd. NF Albuquerque, NM 87110

#### NEW YORK 4917 Genessee Street

Cheektowaga, NY 14225 (716) 685-9503

131-35 31st Ave Flushing, NY 11354 (718) 886-0971

## NORTH CAROLINA

3501-G S. Tryon St. Charlotte, NC 28217 (704) 527-0611

6253 E. Main St Columbus, OH 43213 (614) 860<sub>0</sub>0222

6379 Pearl Boad Parma Heights, OH 44130 (440) 843-7555

1617 E. Kemper Rd. Sharonville OH 45246 (513) 771-0788

#### OKLAHOMA

552 E. Memorial Road Oklahoma City, OK 73114 (405) 752-2655

#### OREGON 828 19th Avenue., N.W.

Portland OR 97209 (503) 222-1823

#### DENINGVI VANIA Springwater Plaza

364 Wilmington W. Chester Pike Glen Mills PA 19342 (610) 459-4122

6200 Babcock Blvd Pittsburgh, PA 15237 (412) 366-6363

#### PUERTO RICO

200 Guayama St Hato Rey, PR 00917 (787) 250-8776

#### TENNESSEE 4655 Nolensville Rd

Nashville, TN 37211 (615) 331-9922

12801 Stemmons Fwy Ste 809 Farmers Branch, TX 75234 (972) 243-1150

12701 Directors Dr Stafford, TX 77477-3701 (281) 565-8665

3453 IH-35 North, Ste. 101 San Antonio, TX 78219 (210) 228-0676

145 E. 1300 S., Ste. 101 Salt Lake City, UT 84115 (801) 359-3410

#### VIRGINIA

5760 Northampton Blvd,. Ste Virginia Beach, VA 23455 (757) 460-0280

#### WASHINGTON 22220 84th Ave So Bldg A

Kent, WA 98032 (253) 395-8055

#### WISCONSIN Lincoln Plaza Shopping Ctr.

2245 S. 108th St. West Allis, WI (414) 541-4776

#### CUSTOMER'S RECORD

When you need service: Send	Date Purchased
complete tool (prepaid) to one of the Makita Factory Service	Dealer's Name & Address
Centers listed, or to an Authorized Makita Service Center. Be sure	
to attach a letter to the outside of the carton detailing the problem with your tool.	Model No.
	Serial No.

# **WARNING**

Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- lead from lead-based paints,
- crystalline silica from bricks and cement and other masonry products, and
- arsenic and chromium from chemically-treated lumber.

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

# MAKITA LIMITED ONE YEAR WARRANTY

# Warranty Policy

Every Makita tool is thoroughly inspected and tested before leaving the factory. It is warranted to be free of defects from workmanship and materials for the period of ONE YEAR from the date of original purchase. Should any trouble develop during this one-year period, return the COMPLETE tool, freight prepaid, to one of Makita's Factory or Authorized Service Centers. If inspection shows the trouble is caused by defective workmanship or material, Makita will repair (or at our option, replace) without charge.

This Warranty does not apply where:

- · repairs have been made or attempted by others:
- repairs are required because of normal wear and tear:
- the tool has been abused, misused or improperly maintained:
- alterations have been made to the tool.

IN NO EVENT SHALL MAKITA BE LIABLE FOR ANY INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES FROM THE SALE OR USE OF THE PRODUCT. THIS DISCLAIMER APPLIES BOTH DURING AND AFTER THE TERM OF THIS WARRANTY.

MAKITA DISCLAIMS LIABILITY FOR ANY IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF "MERCHANTABILITY" AND "FITNESS FOR A SPECIFIC PURPOSE," AFTER THE ONE-YEAR TERM OF THIS WARRANTY.

This Warranty gives you specific legal rights, and you may also have other rights which vary form state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you.

# Makita Corporation

3-11-8, Sumiyoshi-cho, Anjo, Aichi 446-8502 Japan