

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

19PFL3403/77



---

EN User manual

3

**PHILIPS**



# Contents

---

<b>1 Notice</b>	4
-----------------	---

---

<b>2 Important</b>	5
Safety	5
Screen care	6
Environmental care	6

---

<b>3 Your TV</b>	7
TV overview	7
Remote control	8

---

<b>4 Get started</b>	10
Position the TV	10
Wall mount the TV	10
Connect the antenna cable	10
To connect the power cord	11
Insert the remote control batteries	11

---

<b>5 Use your TV</b>	13
Switch your TV on/off or to standby	13
Switch channels	13
Adjust volume	13

---

<b>6 Use more of your TV</b>	14
Adjust picture and sound settings	14
Use timers	16
Create and use lists of favorite channels	17
View closed captions (subtitles)	18
Use child control and rating locks	19

---

<b>7 Use your TV as a PC monitor</b>	23
Configure your TV in PC mode	23
Adjust display settings for PC mode	23

---

<b>8 Use your TV in HDTV mode</b>	24
Configure your TV in HD mode	24
Adjust display settings in HD mode	24

---

<b>9 Install channels</b>	26
---------------------------	----

Select your language	26
Automatically install channels	26
Fine tune channels	26
Exclude channels from a list	27

---

<b>10 Troubleshooting</b>	28
---------------------------	----

---

<b>11 Product information</b>	29
-------------------------------	----

# 1 Notice

2008 © Koninklijke Philips Electronics N.V. All rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

Philips reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.

The material in this manual is believed adequate for the intended use of the system. If the product, or its individual modules or procedures, are used for purposes other than those specified herein, confirmation of their validity and suitability must be obtained. Philips warrants that the material itself does not infringe any United States patents. No further warranty is expressed or implied.

## Warranty

No components are user serviceable. Do not open or remove covers to the inside of the product. Repairs may only be done by Philips Service Centres and official repair shops. Failure to do so shall void any warranty, stated or implied.

Any operation expressly prohibited in this manual, any adjustments, or assembly procedures not recommended or authorised in this manual shall void the warranty.

## Pixel characteristics

This LCD product has a high number of colour pixels. Although it has effective pixels of 99.999% or more, black dots or bright points of light (red, green or blue) may appear constantly on the screen. This is a structural property of the display (within common industry standards) and is not a malfunction.

## Compliance with EMF

Koninklijke Philips Electronics N.V. manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.

Philips is committed to develop, produce and market products that cause no adverse health effects. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.

Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardisation for early integration in its products.

## Copyright



VESA, FDMI and the VESA Mounting Compliant logo are trademarks of the Video Electronics Standards Association.

® Kensington and Micro Saver are registered US trademarks of ACCO World corporation with issued registrations and pending applications in other countries throughout the world.

All other registered and unregistered trademarks are the property of their respective owners.


## 2 Important

Read this user manual before you start to use this product.

Pay close attention to this section and follow the safety and screen care instructions. The product warranty does not apply if damage is caused by failing to follow these instructions. The model and serial number of your TV can be found on the back of the TV as well as on the packaging.

### Safety

- Two people are required to lift and carry a TV that weighs more than 25 kilos (55lb). Improper handling of the TV can result in serious injury.
- If transporting the TV in low temperatures (less than 5°C), open the box and wait until the TV matches the ambient temperature of the room before unpacking.
- To avoid short circuit, do not expose the TV, remote control or remote control batteries to rain or water.
- To avoid risk of fire or electric shock, do not place the TV, remote control or remote control batteries near naked flame sources (e.g. lighted candles) and other heat sources including direct sunlight.
- Do not place vessels filled with water on top of or near to the TV. Spilling water into the TV can result in electric shock. If you spill water into the TV, do not operate the TV. Immediately disconnect the TV from the power and have the TV checked by a qualified technician.
- Do not install the TV in a confined space such as a bookcase. Leave a space of at least 10cm (four inches) around the TV for ventilation. Be sure air flow is not obstructed.
- If placing the TV on a flat, solid surface be sure to use only the supplied stand. Do not move the TV if the stand is not properly screwed to the TV.
- Wall mounting of the TV should only be performed by qualified personnel. The TV must only be mounted on an appropriate wall bracket and on a wall that can safely hold the weight of the TV. Improper wall mounting can result in severe injury or damage. Do not attempt to wall mount the TV yourself.
- If the TV is mounted on a swivel base or swivel arm, ensure no strain is placed on the power cord when the TV is swivelled. Strain on the power cord can loosen connections and cause arcing or fire.
- Disconnect the TV from the mains and antenna before lightning storms. During lightning storms do not touch any part of the TV, mains cord or antenna cable.
- Be sure that you have full access to the mains cord for easy disconnection of the TV from the mains.
- When disconnecting the TV from the mains, be sure to:
  - 1 Turn off the TV, then the mains power (if available).
  - 2 Unplug the mains cord from the mains socket outlet.
  - 3 Unplug the mains cord from the power connector at the back of the TV. Always pull the mains cord by the plug. Do not pull the mains cord.
- Permanent hearing loss can occur if you use earphones or headphones at high volumes. Though high volume may sound

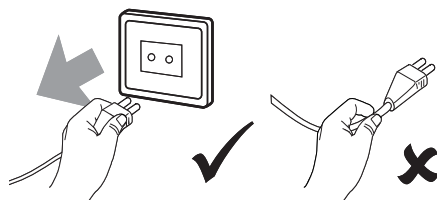


normal over time, it can damage your hearing. To protect your hearing, limit the amount of time you use earphones or headphones at high volume.

---

## Screen care

- Turn off and unplug the mains cord before cleaning the screen. Clean the screen with a soft, dry cloth. Do not use substances such as household cleaning agents as these may damage the screen.

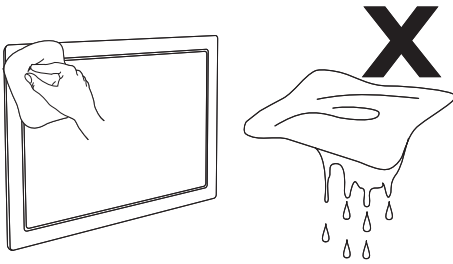

- To avoid deformations or colour fading, wipe off water droplets as soon as possible.
- Do not touch, push, rub or strike the screen with hard objects as this may damage the screen permanently.
- Where possible, avoid stationary images that remain on-screen for extended periods of time. Examples include screen menus, teletext pages, black bars or stock market tickers. If you must use stationary images, reduce the screen contrast and brightness to avoid screen damage.

---

## Environmental care


### Recycling your packaging

The packaging of this product is intended to be recycled. Contact your local authorities for information on how to recycle the packaging.

### Disposing your used product

Your product is manufactured with high-quality materials and components that can be recycled

and reused. When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:

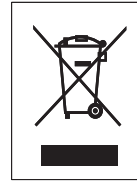

Do not dispose your used product with household waste. Ask your dealer for information on how to safely dispose of the product. Uncontrolled waste disposal harms both the environment and human health.

### Disposing used batteries

The supplied batteries do not contain mercury or cadmium. Dispose supplied and all other used batteries according to your local regulations.

### Power consumption

The TV consumes minimal energy in standby mode to minimize environmental impact. Active power consumption is displayed at the back of the TV. For more product specifications, see the product leaflet at [www.philips.com/support](http://www.philips.com/support).


# 3 Your TV

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

## TV overview


This section gives you an overview of commonly-used TV controls and functions.

### Side controls and indicators

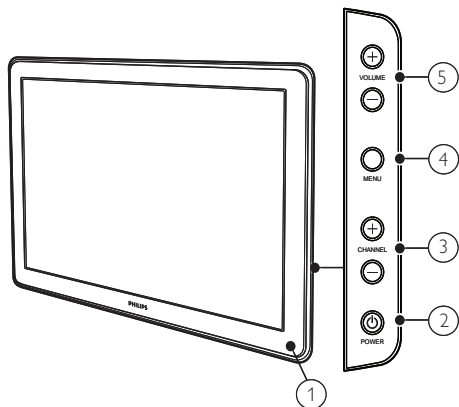

- ① Standby indicator / remote control sensor
- ② POWER: Switches the TV on from standby or back to standby. The TV is not powered off completely unless it is physically unplugged.
- ③ CHANNEL + / -: Switches to the next or previous channel.
- ④ MENU: Toggles the main menu on or off.
- ⑤ VOLUME + / -: Increases or decreases volume.

### Connectors

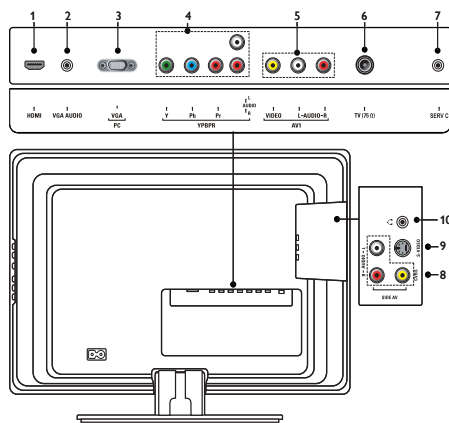


- ① HDMI  
HDMI for DVD player, HD digital receiver, HD game console, PC, etc.
- ② VGA AUDIO  
Mini-jack connector for PC audio when connecting a PC via DVI-HDMI or VGA.
- ③ VGA PC  
To connect a PC.
- ④ YPBPR  
Component video input with YPbPr and Audio L/R connectors for DVD, digital receiver or game console, etc.
- ⑤ AV1  
Composite video input to be used with Audio L/R connectors for camcorder, game console, etc.
- ⑥ TV (75 Ω)  
Antenna input
- ⑦ SERV C  
For software update.
- ⑧ SIDE AV  
Composite video (side) to be used with Audio L/R connectors for camcorder, game console, etc.
- ⑨ S-VIDEO

S-Video (side) to be used with Audio L/R connectors for camcorder, game console, etc. When you use the S-Video (side) for video signals, do not use the Composite video (side) input for video signals.

⑩ Headphones

Headphone stereo mini jack.  
For software update.

## Remote control

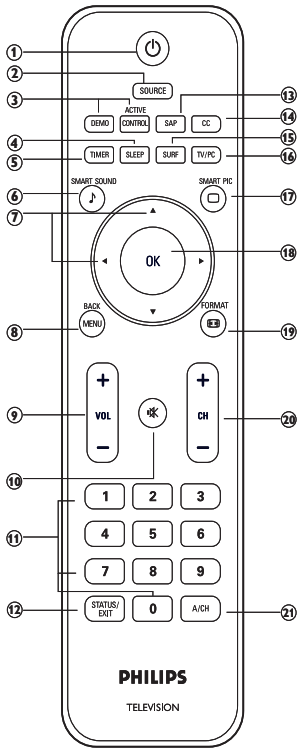

① **Power**  
Switches the TV on from standby or back to standby. The TV is not powered off completely unless it is physically unplugged.

② **SOURCE**  
Selects connected devices.

③ Not used.

④ **SLEEP**  
Sets a delay after which the TV switches to standby.

⑤ **TIMER**  
Sets the clock and timers.

⑥ **SMART SOUND**  
Selects pre-defined sound settings.

⑦ **Navigation keys**  
Navigates through the menus.

⑧ **MENU/BACK**  
Toggles the menu on or off or returns to a previous screen.

⑨ **VOL + / -**  
Increases or decreases volume.

⑩ **Mute**  
Mutes or unmutes audio.

⑪ **Number buttons**  
Selects a channel, page or setting.

⑫ **STATUS/EXIT**  
Displays status information or exits the menu.

⑬ **SAP**  
Selects Secondary Audio Program (SAP), stereo or mono.

⑭ **CC**  
Displays closed captions settings.

⑮ **SURF**  
Displays a list of all channels marked as favorite.

⑯ **TV/PC**  
Toggles between PC mode and the last accessed mode.

⑰ **SMART PIC**  
Selects pre-defined picture settings.

⑱ **OK**  
Activates a selection or accesses the menu.

⑲ **FORMAT**



Selects a picture format.

⑳ CH + / -  
Switches to the next or previous channel.

㉑ A/CH  
Toggles between the current channel and the last viewed channel.

## 4 Get started

This section supplements information in the Quick Start. For information about how to mount and install your TV, refer to the Quick Start.

### Position the TV

#### Warning


- Do not insert the power plug into the wall socket before all the connections are made.
- Large screen TVs are heavy. Two people are required to carry and handle a large screen TV.
- Before you move the TV, disconnect the cables to prevent breakage.

In addition to reading and understanding the safety instructions (see 'Safety' on page 5), consider the following before positioning your TV:

- Ensure that you always have easy access to the power cord or plug to disconnect the TV from the power.
- If the TV is mounted on a swivel base, ensure that no strain is placed on the power cord when the TV is swiveled. Strain on the power cord can loosen connections.
- The ideal viewing distance for watching TV is three times its screen size.
- Position the TV where light does not fall on the screen.
- Connect your devices before you position the TV.

### Use a Kensington lock

There is a Kensington security slot at the back of the TV. If you connect a Kensington lock (not supplied), position the TV near a heavy or immovable object that you can attach the cable to.

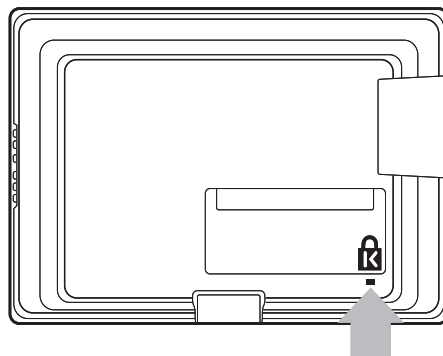

### Wall mount the TV

#### Warning


- Wall mounting of the TV should only be performed by qualified installers. Koninklijke Philips Electronics N.V. bears no responsibility for improper mounting that results in accident or injury.

Screen size	VESA-compatible bracket (mm)	Bolt type and min length (not supplied)
19" (48cm)	Adjustable 100 x 100	M4 x 10mm
26" (66cm)	Adjustable 200 x 100	M4 x 10mm

The minimum bolt length is 10mm. If you use a spacer, the bolt length should be the spacer length plus 10mm. For example, if you use a 40mm spacer, the bolt length should be 50mm (40mm + 10mm).

### Connect the antenna cable

Connect the antenna cable to the TV antenna socket (75 Ω) at the back of the TV.

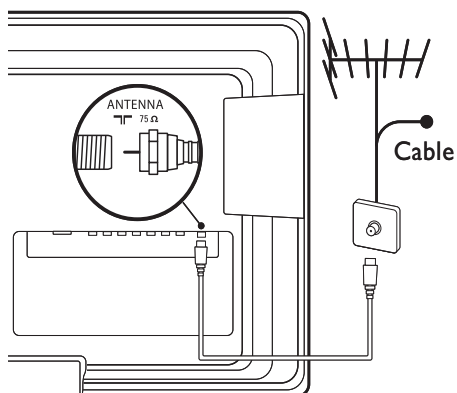


## To connect the power cord



### Warning

- Verify that your mains voltage corresponds with the voltage printed at the back of the TV. Do not insert the mains cord if the voltage is different.

- 1 Locate the power connector at the back of the TV.  
The location of the power connector varies according to TV model.
- 2 Insert the power cord fully into the power connector.
- 3 Connect the power cord plug to the power outlet. Ensure that the cord is tightly secured at both ends.

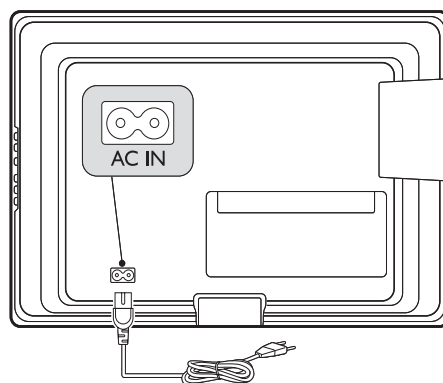

## To disconnect the TV from the power

Disconnect the TV from the power in one of the following ways:

- Unplug the power cord from the power connector at the back of the TV.
- Unplug the power cord from the power socket outlet.

Pull the power cord by the plug; do not pull on the power cord.


## Insert the remote control batteries

- 1 Slide the battery cover off the back of the remote control.
- 2 Insert the 2 supplied batteries (AAA). Be sure the + and - ends of the batteries line up with the markings inside the case.
- 3 Slide the cover back into position.



## Note


- Remove the batteries if you are not going to use the remote control for an extended period of time.

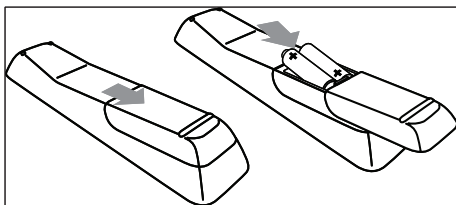

## 5 Use your TV

This section helps you perform basic TV operations.

### Switch your TV on/off or to standby

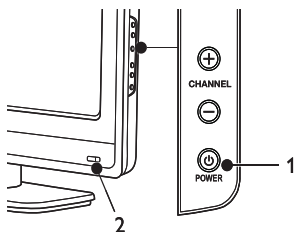

#### To switch on


- If the standby indicator (2) is off, press **POWER** (1) at the side of the TV.
- If the standby indicator (2) is red, press **⏻** on the remote control.

#### To switch to standby

- Press **⏻** on the remote control.
  - ↳ The standby indicator (2) switches to red.

#### To switch off

- Press **⏻POWER** (1) at the side of the TV.

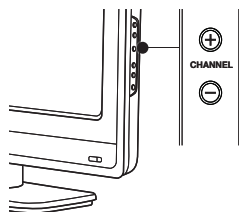

- Press **CH + / -** or key in the number on the remote control.
- Press **CHANNEL + / -** on the side of the TV.

### Adjust volume

#### To increase or decrease volume

- Press **VOL + / -** on the remote control or press **VOLUME + / -** on the side of the TV.


#### To mute or unmute sound

- Press **⏻** on the remote control to mute the sound.
- Press **⏻** again to restore the sound.

#### To adjust headphone volume

- Press **VOL + / -** on the remote control or press **VOLUME + / -** on the side of the TV. When headphones are plugged into the TV, the loud speakers are automatically muted.

### Switch channels

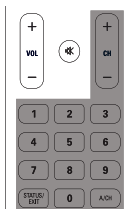


# 6 Use more of your TV

## Adjust picture and sound settings

This section describes how to adjust picture and sound settings.

### Adjust picture settings

- 1 Press **MENU/BACK** and select **[Picture]**.
- 2 Press **OK**.
- 3 Press **▲** or **▼** to highlight **[Picture]**.
- 4 Press **◀** or **▶** to adjust the settings.

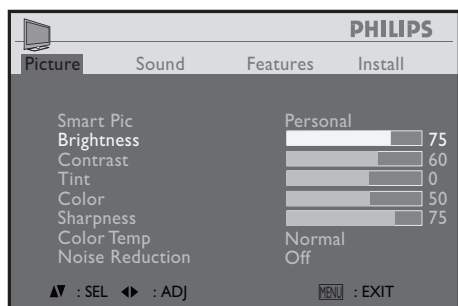

- 5 Press **MENU/BACK** to return to the previous menu, or press **STATUS/EXIT** to exit.

The following smart picture settings can be configured. Depending on the format of the picture source, some picture settings are not available.

- **[Brightness]**: Adjusts the intensity and details of dark areas.
- **[Contrast]**: Adjusts the intensity of bright areas, keeping dark areas unchanged.
- **[Tint]**: Adjusts the color balance in an image.
- **[Color]**: Adjusts color saturation.
- **[Sharpness]**: Adjusts the level of sharpness in image details.

- **[Color Temp.]**: Makes colors more vivid and improve the resolution of details in bright colors. You can switch this feature on or off.
- **[Noise Reduction]**: Filters and reduces noise in an image.

### Use smart picture settings

You can use smart picture instead of the manual picture adjustments to set your TV to a predefined setting.

The settings are pre-defined to suit different viewing environments.

- 1 Press **MENU/BACK** and select **[Picture]**.
- 2 Press **OK**.
- 3 Press **▼** to highlight **[Smart Pic]** and press **◀** or **▶** to select a setting.
- 4 Press **MENU/BACK** to return to the previous menu, or press **STATUS/EXIT** to exit.



#### Tip

- Press **SMART PIC** on the remote control repeatedly to toggle the available settings.

The following settings are pre-defined factory settings to match your viewing environment.

- **[Rich]**
- **[Natural]**
- **[Soft]**
- **[Personal]**

### Change picture format

- 1 Press **MENU/BACK** and select **[Features]** > **[Format]**
- 2 Press **◀** or **▶** to select the following picture formats.

### Tip

- Toggle **FORMAT** on the remote control to access the formats.



**[4:3]**: Shows the classic 4:3 format.




**[Widescreen]**: Stretches the classic 4:3 format to 16:9.

## Adjust sound settings

This section describes how to adjust sound settings.

- 1 Press **MENU/BACK** and select **[Sound]**.
- 2 Press **OK**.
- 3 Press **▲** or **▼** to select an item and press **◀** or **▶** to adjust the setting.

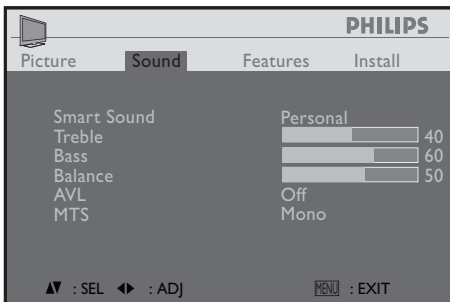

- 4 Press **MENU/BACK** to return to the previous menu, or press **STATUS/EXIT** to exit.

## Summary of sound settings

- **[Smart Sound]**: Pre-defined sound settings to suit your listening environment.
- **[Treble]**: Adjusts the high frequency sound levels.

- **[Bass]**: Adjusts the low frequency sound levels.
- **[Balance]**: Adjusts the balance of the right and left speakers to best suit your listening position.
- **[AVL]**: Reduces sudden changes in volume, for example, during commercials or when switching channels. Set on or off.
- **[MTS]**: Multi-channel TV sound. Select mono, stereo or a Secondary Audio Program (SAP).

## Use smart sound settings

You can use smart sound instead of the manual sound settings to set your TV to a predefined setting.

The settings are pre-defined to suit different listening environments.

- 1 Press **MENU/BACK** and select **[Sound]**.
- 2 Press **OK**.
- 3 Press **▼** to highlight **[Smart Sound]** and press **◀** or **▶** to select a setting.
- 4 Press **MENU/BACK** to return to the previous menu, or press **STATUS/EXIT** to exit.

### Tip

- Toggle **SMART SOUND** to access the settings.


The following settings are pre-defined to match your listening environment.

- **[Movie]**
- **[Music]**
- **[Voice]**
- **[Personal]**

## Use Back Light

Adjust the brightness of the TV backlight to suit your surrounding ambient lighting.

- 1 Press **MENU/BACK** and select **[Features]** > **[Back Light]**.
- 2 Press **◀** or **▶** to adjust the level.

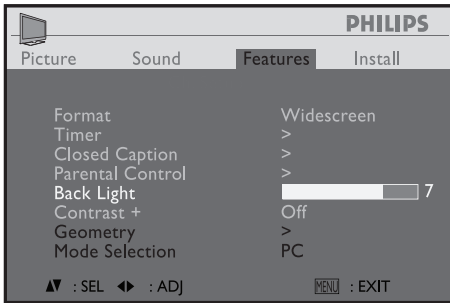


- 3 Press **MENU/BACK** to return to the previous menu, or press **STATUS/EXIT** to exit.

## Use Contrast +

Optimizes the contrast settings for overall picture quality.

- 1 Press **MENU/BACK** and select **[Features]** > **[Contrast +]**.
- 2 Press **◀** or **▶** to turn on **[Contrast +]**.

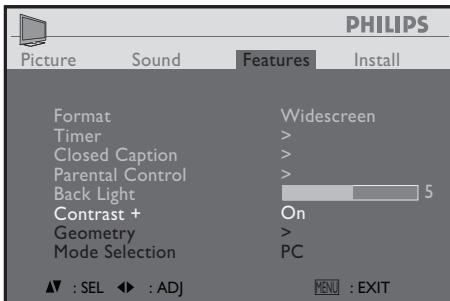

- 3 Press **MENU/BACK** to return to the previous menu, or press **STATUS/EXIT** to exit.

## Use timers

This section describes how to set the clock and switch the TV on or off at a specified time.

## Automatically switch the TV to standby (Sleeptimer)

Sleeptimer switches the TV to standby after a delay. You can always switch off your TV earlier or reset the sleeptimer during the countdown.


- 1 Toggle **SLEEP** on the remote control to cycle through the sleep timer settings: off, 15, 30, 45, 60, 90, 120, 180 and 240 minutes.

### Tip

- Press **SLEEP** once to view the remaining time before the TV switches to standby. Press **SLEEP** repeatedly to change the setting or to turn off sleep timer.

## Set the clock

- 1 Press **MENU/BACK** and select **[Features]** > **[Timer]**.
- 2 Press **OK**.
- 3 Press **▼** to highlight **[Current Time]** and press **◀** or **▶** to select the hours or minutes.
- 4 Press **▲** or **▼** to adjust the hours or minutes.

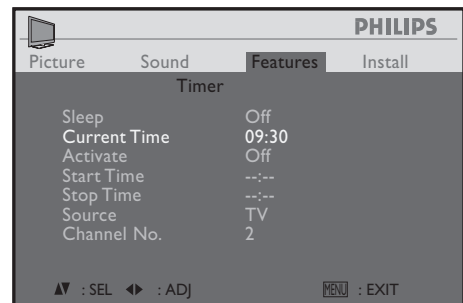


- 5 Press **MENU/BACK** to return to the previous menu, or press **STATUS/EXIT** to exit.




## Activate the timer

- 1 Press **MENU/BACK** and select **[Features]** > **[Timer]**.
- 2 Press **OK**.
- 3 Press **▼** and select **[Activate]** > **[On]**.

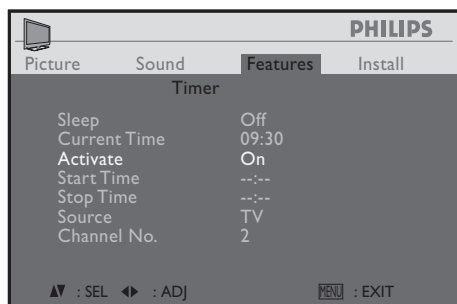

## Set the TV timer

- 1 Press **MENU/BACK** and select **[Features]** > **[Timer]**.
- 2 Press **OK**.
- 3 Press **▼** to highlight **[Start Time]**.
- 4 Press **▶** to select the hour field, then press **▲** or **▼** to adjust the hours.
- 5 Press **▶** to select the minute field, then press **▲** or **▼** to adjust the minutes.
- 6 Press **▼** to highlight **[Stop Time]**.
- 7 Press **▶** to select the hour field, then press **▲** or **▼** to adjust the hours.
- 8 Press **▶** to select the minute field, then press **▲** or **▼** to adjust the minutes.
- 9 Press to highlight **[Source]**.
- 10 Press **◀** or **▶** to select the source.
- 11 If you select the TV source, set the channel for the TV to switch to from standby. Press **▼** to highlight **[Channel No.]**, then press **◀** or **▶** to select the number.

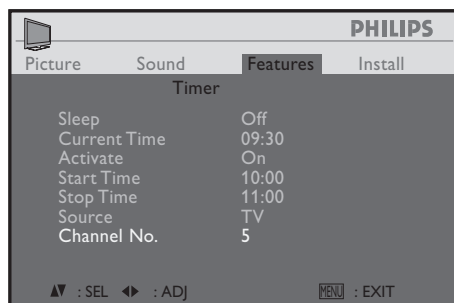


- 12 Press **MENU/BACK** to return to the previous menu, or press **STATUS/EXIT** to exit.

## Check timer status

Check the status of the timers that you set for current time, sleep timer and TV timer.

- 1 Press **TIMER** on the remote control.  
↳ The TV timer status is displayed.

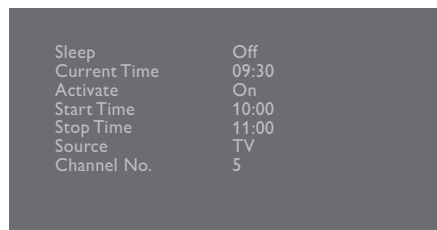

You can change the timer settings from this screen.


- 2 Press **TIMER** again to exit the timer display.

## Create and use lists of favorite channels

This section describes how to set up a list of your preferred TV channels.

## Create and use your favorite list

- 1 Press **MENU/BACK** and select **[Install] > [Fav. Channel]**.
- 2 Press **OK**.
- 3 Press **▲** or **▼** to highlight the favorite channel number.
- 4 Use the number keys to key in the channel number.
  - ↳ The channel number is displayed beside the favorite list number. Enter up to six favorite channels in the list.

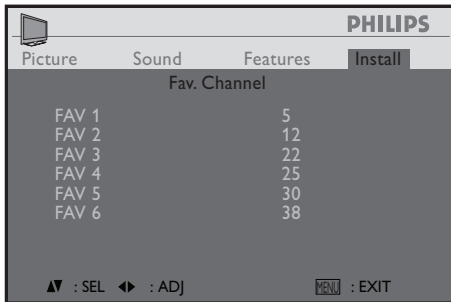

- 5 Press **MENU/BACK** to return to the previous menu, or press **STATUS/EXIT** to exit.
- 6 Press **SURF** repeatedly to cycle through the favorite channels.

## View closed captions (subtitles)


The caption service displays transmitted closed caption text. The captioned text can be displayed permanently or only when the TV is muted.

### Note

- This television provides a display of television closed captioning that conforms with the EIA-608 standard and in accordance with Sections 15.119 of the FCC rules.
- If you connect your set-top box via HDMI or component video input, you cannot select closed caption through the TV. You can select closed caption through the set-top box only.
- The captions do not always use correct spelling and grammar.
- Not all TV programs and product commercials include closed caption information. Refer to your area TV program listings for the TV channels and times of closed caption shows. The captioned programs are usually noted in the TV listings with service marks such as 'CC'.

## Turn on Closed Caption

- 1 Press **MENU/BACK** and select **[Features] > [Closed Caption]**.
- 2 Press **OK**.
- 3 Press **◀** or **▶** to turn on **[CC Setting]**.

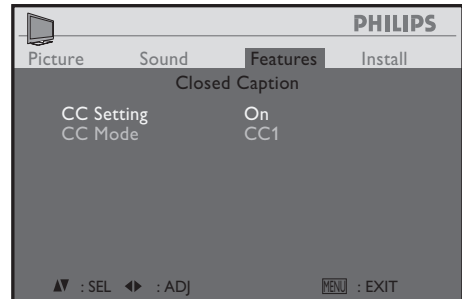

- 4 Press **▼** to highlight **[CC Mode]** and press **◀** or **▶** to select a setting.
- 5 Press **MENU/BACK** to return to the previous menu, or press **STATUS/EXIT** to exit.

## Summary of caption services

Service	Description
CC-1 and CC-2	Dialog and descriptions for the action on the captioned TV program show on screen. Usually CC1 is the most used. CC 2 can be used for alternate languages if they are transmitted.

## Use child control and rating locks

This section describes how to lock or unlock the TV. You can set a PIN code or use ratings to prevent children from watching certain programs or channels.


### Change your password

Follow these steps to set your PIN or to reset your PIN if you have forgotten it.

- 1 Press **MENU/BACK** and select **[Features]** > **[Parental Control]**.
- 2 Press **OK**.  
↳ You are prompted to enter a password.
- 3 Enter your 4-digit PIN on the number keys of the remote control.
  - If you have never set your PIN before, enter **0000**.
  - If you have set your PIN but have forgotten it, enter **0711**.  
The **[Parental Control]** menu is displayed.
- 4 Select **[Change Password]** and press **OK**.
- 5 Enter a new PIN, and then enter the PIN again to confirm.
- 6 Press **MENU/BACK** to return to the previous menu, or press **STATUS/EXIT** to exit.

### Turn on parental control

- 1 Press **MENU/BACK** and select **[Features]** > **[Parental Control]**.
- 2 Press **OK**.  
↳ You are prompted to enter your password.
- 3 Enter your PIN on remote control.
  - If you have never set a PIN before, enter **0000**.
  - If you have forgotten your PIN, reset it (see 'Change your password' on page 19).  
The **[Parental Control]** menu is displayed.

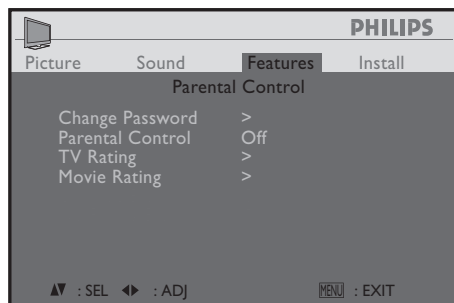


- 4 Press **▼** to highlight **[Parental Control]** and press **▶** to turn on **[Parental Control]**.

### Use TV ratings lock

Your TV is equipped with a V-chip that allows you to control access to individual programs based on their age rating and content rating. The program content advisory data are from the broadcaster or by the program provider. If you receive channels through a set-top box or cable box connected by HDMI, you cannot use the TV ratings lock. Your set-top box or cable box must be connected through RF or AV connectors.

- 1 Access the **[Parental Control]** menu.
- 2 Press **▼** and select **[TV Rating]**.
- 3 Press **OK**.

- 4 Press ▼ to highlight a rating and press OK to select [View] or [Block].

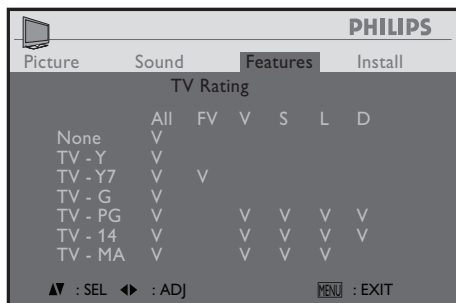

When you block a rating, all ratings in the younger age categories are automatically blocked.

- 5 Press MENU/BACK to return to the previous menu, or press STATUS/EXIT to exit.


## Summary of TV ratings

Age rating	Content rating
All	None
None	None
<b>TV-Y:</b> Appropriate for children of all ages with themes and elements suitable for children aged 2-6.	None
<b>TV-Y7:</b> Programs designed for children age 7 and older.	[(FV) Fantasy Violence]
<b>TV-G:</b> Programs suitable for all ages. These programs contain little or no violence, no strong language and little or no sexual dialog or situations.	None
<b>TV-PG:</b> Programs contain elements that some parents may find unsuitable for younger children and which may need parental guidance. The program may contain moderate violence, sexual dialog and/or situations and some strong language.	[(D) Dialog] [(L) Language] [(S) Sex] [(V) Violence]
<b>TV-14:</b> Programs contain elements that may not be suitable for children under 14 years of age. These programs include one or more of the following: intense violence, intense sexual situations, suggestive dialog and strong language.	[(D) Dialog] [(L) Language] [(S) Sex] [(V) Violence]
<b>TV-MA:</b> Programs are designed to be viewed by adults and may be unsuitable for children under the age of 17. These programs may contain graphical violence, explicit sexual activity and/or crude or indecent language.	[(L) Language] [(S) Sex] [(V) Violence]

## Use movie ratings lock

This section describes how to control viewing of movies based on their Motion Picture Association of America (MPAA) rating.

- 1 Access the **[Parental Control]** menu.
- 2 Press **▼** and select **[Movie Rating]**.
- 3 Press **OK**.
- 4 Press **▼** to highlight a rating and press **◀** or **▶** to change the setting to **[View]** or **[Block]**.

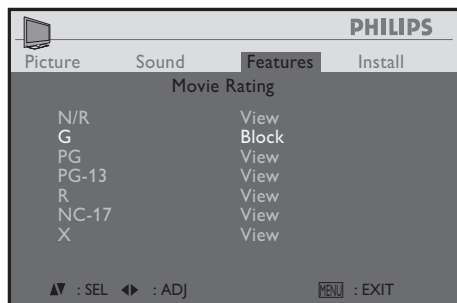

When you block a movie rating, all items for ages below that movie rating are automatically blocked.

- 5 Press **MENU/BACK** to return to the previous menu, or press **STATUS/EXIT** to exit.

## Summary of US movie ratings

Rating	Description
All	All items in the ratings list are locked.
NR	Not rated.
G	Movies with a mild content, suitable for all ages.
PG	Movies for which parental guidance is recommended. They may contain a few racy or violent scenes or maybe some bad language.
PG -13	Movies for which parental guidance may be recommended if under age 13.
R	Restricted. The movies usually contain offensive sex or bad language and may be unsuitable for children under the age of 17. Parental guidance or permission needed.
NC-17	Even with parental permission, forbidden under age 17. More offensive sex, violence or bad language.
X	Movies which generally focus on sex, violence and/or bad language. Also known as pornography.

## Block unrated or no rating programs

Block unrated programs such as "director's cut" edition or programs with no advisory data.

- 1 Access the **[Parental Control]** menu.
- 2 Press **▼** to highlight **[Unrated Block]** or **[No Rating Block]**.
- 3 Press **OK**.
- 4 Press **◀** or **▶** to select **[On]**.
- 5 Press **MENU/BACK** to return to the previous menu, or press **STATUS/EXIT** to exit.

---


## Unlock blocked channels or programs

To view programs or channels blocked with the parental control blocking options, unlock them with the password or turn off parental control.

---

### Turn off parental control

- 1 Access the [Parental Control] menu.
- 2 Press ▼ to highlight [Parental Control] and press ◀ or ▶ to turn off [Parental Control].

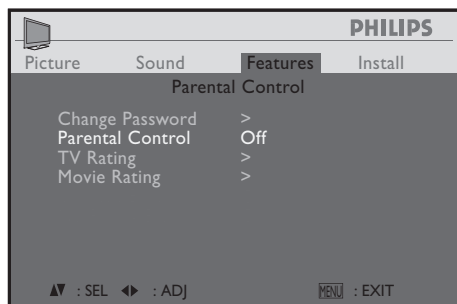

- 3 Press MENU/BACK to return to the previous menu, or press STATUS/EXIT to exit.

## 7 Use your TV as a PC monitor

For information about how to connect a PC to the TV, see the Quick Start.

### ! Caution

- Before you connect your PC, set the PC monitor refresh rate to 60Hz.

## Configure your TV in PC mode

- 1 Press **SOURCE** and select **PC**, then press **OK**.

### \* Tip

- Toggle **TV/PC** to switch to PC and the last accessed mode.

### ☰ Note

- Certain picture and sound features are not available in PC mode.

## Supported screen resolutions

The following screen resolutions are supported in PC mode:


Resolution	Refresh rate
640 × 480	60Hz
800 × 600	60Hz
1024 × 768	60Hz
1280 × 768	60Hz
1280 × 1024	60Hz

If necessary, adjust the picture position to the center of the screen with the cursor buttons.

## Adjust display settings for PC mode

Adjust your TV display settings in PC mode.

- 1 Press **MENU/BACK** and select **[Features]** > **[Geometry]**.
- 2 Press **OK**.

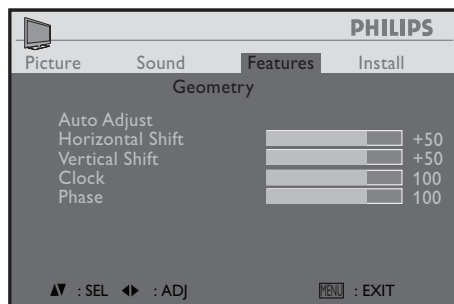

- 3 Press **▲** or **▼** to select an item.
- 4 Press **◀** or **▶** to adjust the setting.
- 5 Press **MENU/BACK** to return to the previous menu, or press **STATUS/EXIT** to exit.

You can configure the following display settings for PC mode:

- **[Auto Adjust]**: Synchronizes the phase and clock on the TV and PC.
- **[Horizontal Shift]** and **[Vertical Shift]**: Adjusts the horizontal and vertical position of the picture.
- **[Clock]** and **[Phase]**: Fine-tunes the TV to match the display settings of the PC.


## 8 Use your TV in HDTV mode

Not all models can be configured in high definition (HD) mode. For information about your set, see the specification.

When you connect an HD device to your TV, configure the display format of your TV. You might also have to configure the display format of your HD device. For information about configuring your device, see the documentation of the device.

### Configure your TV in HD mode

- 1 Connect your HD device to the TV. Refer to the Quick Start.
- 2 Press **SOURCE** and select **HDMI** or **YPbPr**, then press **OK**.
- 3 Press **MENU/BACK** and select **[Features]** > **[Mode Selection]**.
- 4 Press **OK**.
- 5 Press **◀** or **▶** to select a mode.

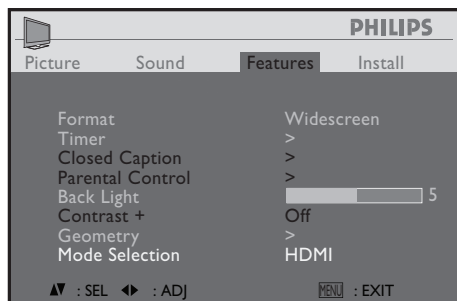

- 6 Press **MENU/BACK** to return to the previous menu, or press **STATUS/EXIT** to exit.

### Note

- Certain picture and sound features are not available in **HDMI** and **YCbCr** modes.

### Supported screen resolutions

The following screen resolutions are supported in **HDMI** and **YPbPr** modes:


Resolution	Refresh rate
480i	60Hz
480p	60Hz
576i	50Hz
576p	50Hz
720p	50Hz
720p	60Hz
1080i	50Hz
1080i	60Hz

If necessary, adjust the picture position to the center of the screen with the cursor buttons.

### Adjust display settings in HD mode

Adjust your TV display settings in HD mode.

- 1 Press **MENU/BACK** and select **[Features]** > **[Geometry]**.
- 2 Press **OK**.

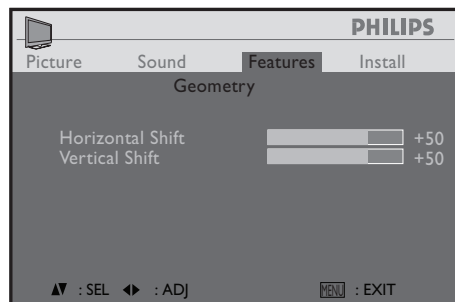

- 3 Press **▲** or **▼** to select an item.



- 4 Press ◀ or ▶ to adjust the setting.
- 5 Press **MENU/BACK** to return to the previous menu, or press **STATUS/EXIT** to exit.

The following display settings can be configured when an HD device is connected to the TV.


- **[Horizontal Shift]** and **[Vertical Shift]**:  
Adjusts the horizontal and vertical position of the picture.

## 9 Install channels

The first time you setup your TV, you are prompted to select a menu language and to install TV and digital radio channels (if available). This chapter provides instructions on how to reinstall and fine-tune channels.

### Select your language

- 1 Press **MENU/BACK** and select **[Install]** > **[Language]**.

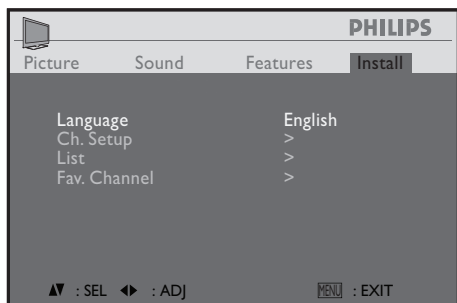


- 2 Press ◀ or ▶ to select a language, then press **OK**.
- 3 Press **MENU/BACK** to return to the previous menu, or press **STATUS/EXIT** to exit.


### Automatically install channels

This section describes how to search and store channels automatically. Instructions are for both digital and analogue channels.

- 1 Press **MENU/BACK** and select **[Install]** > **[Ch. Setup]** > **[Tuner Mode]**.
- 2 Press ◀ or ▶ and select **[Antenna]** or **[Cable]**.

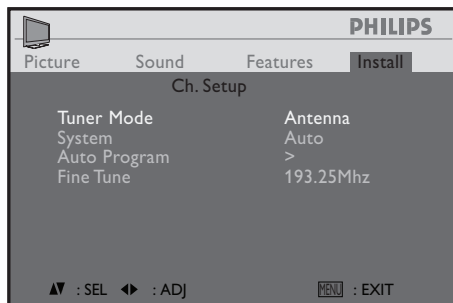

- 3 Press ▼ and select **[System]**.
- 4 Press ◀ or ▶ and select **[AUTO]**, **[PAL M]**, **[PAL N]** or **[NTSC]**.

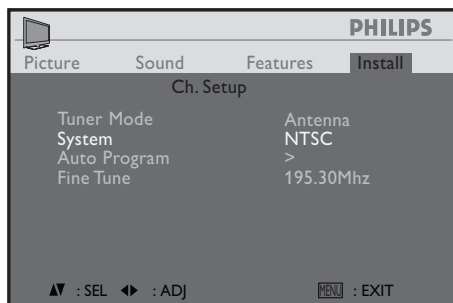


- 5 Press ▼ to highlight **[Auto Program]** and press **OK**.
  - The TV detects the **[Antenna]** or **[Cable]** signal that you have selected and search for all the available channels.
  - When the search completes, the TV switches to the first channel found.
- 6 Press **MENU/BACK** to return to the previous menu, or press **STATUS/EXIT** to exit.

### Fine tune channels


You can manually fine tune channels when the reception is poor.

- 1 Press **CH + / -** or use the number keys to select the channel to fine tune.

- 2 Press **MENU/BACK** and select **[Install]** > **[Ch. Setup]** > **[Fine Tune]**.
- 3 Press **◀** or **▶** to adjust the frequency setting.

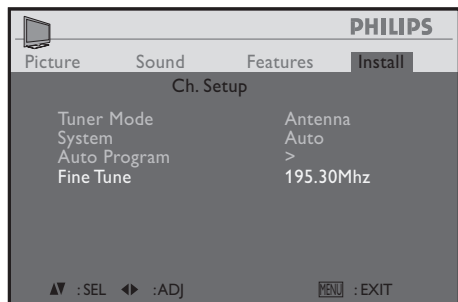

- 4 Press **MENU/BACK** to return to the previous menu, or press **STATUS/EXIT** to exit.

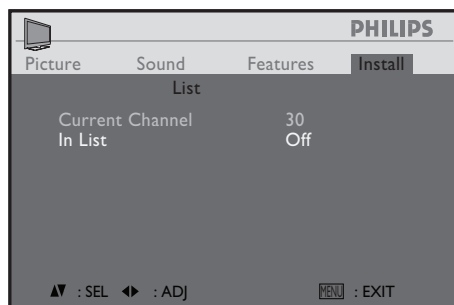

- 5 Press **MENU/BACK** to return to the previous menu, or press **STATUS/EXIT** to exit.

## Exclude channels from a list

You can exclude a channel from your list of channels. Excluded channels are not accessed when you press **CH + / -** on the remote control or **CHANNEL + / -** on the side of the TV. Excluded channels can be accessed, however, by pressing the number keys on the remote control. It can be useful to exclude channels with weak signals.

- 1 Press **MENU/BACK** and select **[Install]** > **[List]**.
- 2 Press **OK**.
- 3 Press **◀** or **▶** to select a channel number.
- 4 Press **▼** to highlight **[In List]**, and press **◀** or **▶** to select **[Off]**.

# 10 Troubleshooting

This section describes commonly-encountered issues and accompanying solutions. Some problems you encounter with your TV can be corrected by consulting the following list:

## No picture, no sound

- 1 Check if the fuse or circuit breaker works.
- 2 Plug another electrical device into the outlet to make sure it works or is turned on.
- 3 Power plug is in a bad contact with the outlet.
- 4 Check the signal source.

## No color

- 1 Change the color system.
- 2 Adjust the saturation.
- 3 Try another program. Black-white program may be received.

## Remote control does not work

- 1 Change the batteries.
- 2 Batteries are not installed correctly.
- 3 Main power is not connected.

## No picture, normal sound

- 1 Adjust the brightness and contrast.
- 2 Broadcasting failure may happen.

## Normal picture, no sound

- 1 Press the VOLUME + button to increase volume.
- 2 Volume is set to mute, press MUTE to restore sound.
- 3 Change the sound system.
- 4 Broadcasting failure may happen.

## Ripples on the picture

Usually caused by local interference such as cars, daylight lamps and hair driers. Adjust the antenna to minimize the interference.

## Blank screen in VGA(PC) mode

Perhaps the TV can not recognize the resolution set by the PC. Change to the best resolution or other standard resolutions of the PC system.

Check the connections.

Set the PC refresh rate to 60Hz.

## Snowy dots and interference

If the antenna is located in the fringe area of a television signal where the signal is weak, the picture may appear snowy. When the signal is weak, it may be necessary to install a special antenna to improve the reception.

- Adjust the position and orientation of the indoor/outdoor antenna.
- Check the connection of antenna.
- Fine tune the program.
- Try another program. Broadcasting failure may happen.

## Ghost

“Ghosting” occurs when the television signal follows two paths. One is the direct path, the other is reflected from tall buildings, hills, or other objects. Changing the direction or position of the antenna may improve the reception.

## Radio frequency interference

This interference produces moving ripples or diagonal streaks, and in some case, loss of contrast in the picture. Find out and remove the radio interference source.

# 11 Product information



## Note

- Product information is subject to change without prior notice.

## Supported display resolutions

- Computer formats (see 'Supported screen resolutions' on page 23)
- Video formats (see 'Supported screen resolutions' on page 24)

## Tuner/Reception/Transmission

- Antenna input: 75ohm coaxial (IEC75)
- TV system:
- Video playback: NTSC, PAL

## Sound

- Sound system:
  - Mono/Stereo/SAP
- Power output:
  - 2 x 3W (19PFL3403)
  - 2 x 5W (26PFL3403)

## Remote control

- Type: PF05L08B
- Batteries: 2 x AAA size (LR03 type)

## Connections (Rear)

- AV 1: Composite video (CVBS in), Audio L/R in
- YPBPR: Component video (CVI in), Audio L/R in
- PC:VGA in,VGA Audio in
- HDMI: 1x
- TV:TV ANTENNA

## Connections (Side)

- Headphone out (stereo mini-jack)
- AV1: Composite video (CVBS) in, AUDIO L/R in
- SVIDEO: 1x S-Video in

## Power

- Mains power: AC 100-240V ( $\pm 10\%$ )
- Power power consumption: 50 W (19PFL3403), 80 W (26PFL3403)
- Standby power consumption: < 0.3 W
- Specifications are subject to change without notice. For detailed specifications of this product go to [www.philips.com/support](http://www.philips.com/support).

## Weight

- TV weight: 4.2 kg (19PFL3403), 7.7 kg (26PFL3403)
- TV weight with stand: 4.9 kg (19PFL3403), 9.1 kg (26PFL3403)

## Dimensions

- TV dimensions:
  - Height: 35.3 cm (19PFL3403), 45.8 cm (26PFL3403)

- Width: 47.3 cm (19PFL3403), 67.1 cm (26PFL3403)
- Depth: 6.9 cm (19PFL3403), 9.0 cm (26PFL3403)
- TV dimensions with stand:
  - Height: 39.4 cm (19PFL3403), 50.3 cm (26PFL3403)
  - Width: 47.3 cm (19PFL3403), 67.1 cm (26PFL3403)
  - Depth: 16.0 cm (19PFL3403), 21.5 cm (26PFL3403)

This information is correct at the time of press.  
For updated contact information, refer to [www.philips.com/support](http://www.philips.com/support).





© 2008 Koninklijke Philips Electronics N.V.

All rights reserved.

Document order number: