

# T1600 Internet Routing Node Upgrade Guide

**28 April 2008**  
**Part Number: 530-021924-01**  
**Revision 2**

This guide provides procedures for upgrading an operational T640 Internet routing node to a T1600 Internet routing node. These procedures include preparing the site, replacing hardware, and verifying operation.



---

**NOTE:** Before you upgrade, the T640 routing node must be running JUNOS Release 8.5 or later.

---

## Contents

T1600 Routing Node Overview .....	3
T1600 Upgrade Kit .....	5
Power Supplies .....	6
Three-Input 240-A Power Supplies .....	6
T1600-SIBs .....	9
T1600 Routing Node Upgrade Overview .....	10
Verifying the Hardware Version of the Rear Fan Tray .....	11
Preparing the Site .....	12
Typical Power Distribution .....	12
Provisioning Additional Power for the T1600 Routing Node .....	13
Replacing the Rear Fan Tray .....	13
Removing the Rear Fan Tray .....	14
Installing a Rear Fan Tray .....	15
Upgrading the DC Power Supplies .....	17
Preparing the DC Power Cables .....	17
Tools and Parts Required .....	17
Removing a Two-Input 160-A Power Supply .....	18
Setting the Input Mode Switch on a Three-Input 240-A Power Supply .....	21

- Installing a Three-Input 240-A Power Supply .....22
- Replacing the Cable Restraint on a Three-Input 240-A Power Supply .....23
  - Removing the Standard Cable Restraint from a Three-Input 240-A Power Supply .....24
  - Installing the Optional Cable Restraint on a Three-Input 240-A Power Supply .....24
- Connecting a Three-Input 240-A Power Supply .....25
- Powering On a Three-Input 240-A Power Supply .....26
- Upgrading SIBs .....27
  - Overview of Upgrading the SIBs .....28
  - Preparing to Upgrade the SIBs .....29
  - Tools Required .....30
  - Removing a Standard SIB or SIB Version B .....30
  - Installing a T1600-SIB .....32
  - Verifying the Installation of a T1600-SIB .....33
  - Preparing to Exit Upgrade Mode .....33
  - Exiting Upgrade Mode .....34
  - Verifying Operation .....35
- Removing the Upper Front Fan Tray .....39
- Replacing the Craft Interface .....40
  - Removing the Craft Interface .....40
  - Installing the Craft Interface .....41
- Installing the Upper Front Fan Tray .....42
- Attaching the T1600 Agency Label .....42
- Registering Your T1600 Upgrade .....43
- T1600 Routing Node Environmental Specifications .....43
- T1600 Routing Node DC Power Specifications .....44
  - Power System Electrical Specifications .....44
  - Three-Input 240-A Power Supply Specifications .....45
  - DC Power Cable Specifications .....46
- Preventing Electrostatic Discharge Damage .....47
- List of Technical Publications .....48
- Documentation Feedback .....54
- Requesting Technical Support .....55
- Revision History .....56

## T1600 Routing Node Overview

---


The T1600 Internet routing node is a complete routing system that provides Gigabit Ethernet, SONET/SDH, and other high-speed interfaces for large networks and network applications, such as those supported by Internet service providers (ISPs). The routing node accommodates up to eight Flexible PIC Concentrators (FPCs), which can each be configured with a variety of network media types. The T1600 routing node provides up to 800 gigabits per second (Gbps), full duplex (1600 Gbps of any-to-any, non-blocking, half-duplex switching).


The routing node architecture cleanly separates control operations from packet forwarding operations. This design eliminates processing and traffic bottlenecks, permitting the routing node to achieve high performance.

- Control operations in the routing node are performed by the host subsystem, which runs JUNOS Internet software to handle routing protocols, traffic engineering, policy, policing, monitoring, and configuration management.
- Forwarding operations in the routing node are performed by the Packet Forwarding Engines, which consist of hardware, including ASICs, designed by Juniper Networks. Application-specific integrated circuits (ASICs) are a definitive part of the routing node design; these ASICs enable the routing node to achieve data forwarding rates that match current fiber-optic capacity. The T1600 routing node provides up to a total of 1600 million packets per second (Mpps) of forwarding.

Figure 1 on page 4 and Figure 2 on page 5 illustrate the front and rear of a T1600 routing node.

**Figure 1: Front View of the T1600 Routing Node**

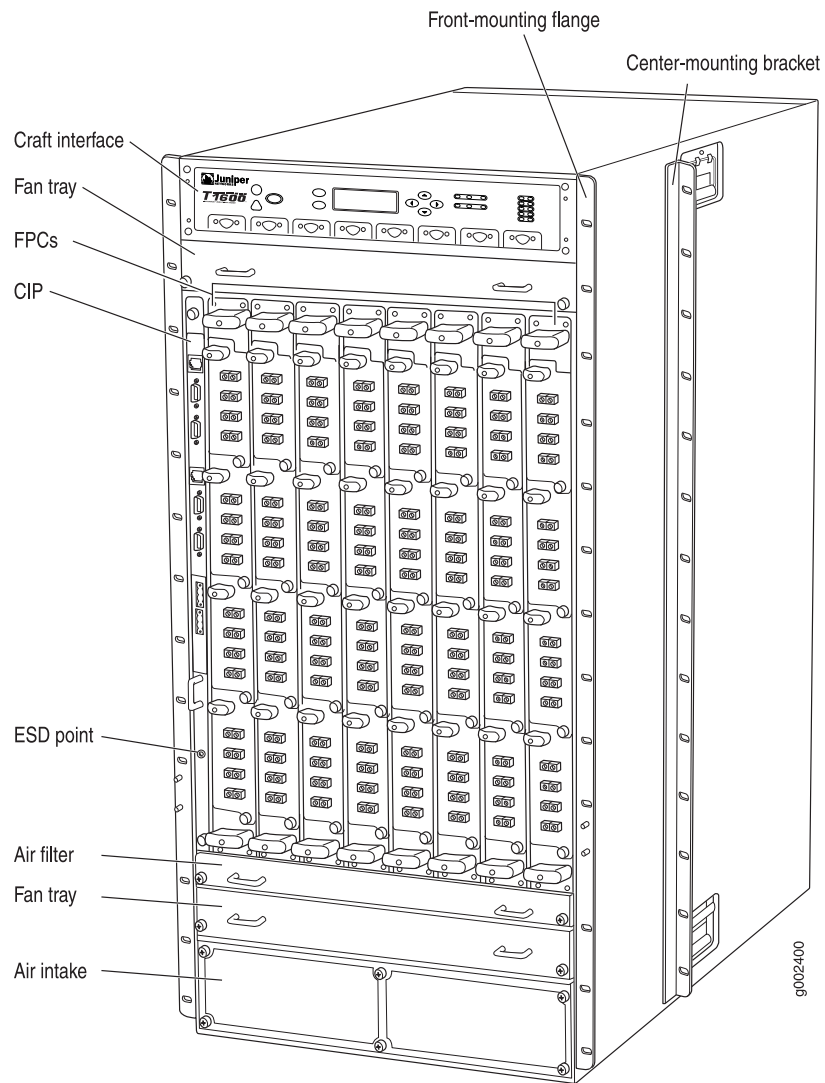

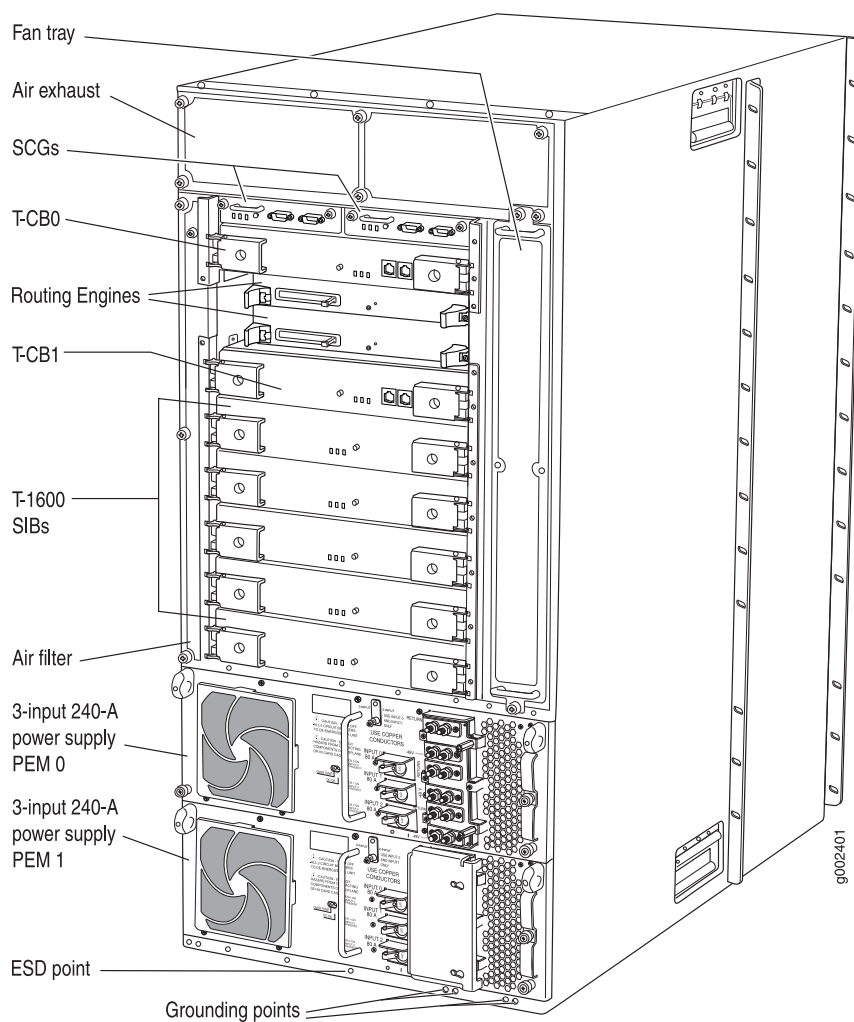**Figure 2: Rear View of the T1600 Routing Node**

## T1600 Upgrade Kit

To upgrade a T640 routing node to a T1600 routing node, you install the following hardware components:

- Two redundant, load-sharing, three-input 240-A power supplies that connect to the rear of the midplane
- Five T1600-SIBs
- One T1600 craft interface panel

You can order these components individually or order a T1600 upgrade kit that contains all the components. You must supply four additional DC power cables.



**NOTE:** These components must be installed before you can install a T1600-FPC in the T1600 routing node.


## Power Supplies

Two redundant, load-sharing DC power supplies are located at the lower rear of the chassis in slots PEM0 and PEM1 (top to bottom). For power specifications for the system, power supplies, and power cables, see “T1600 Routing Node DC Power Specifications” on page 44.

### Three-Input 240-A Power Supplies

Each three-input 240-A power supply weighs approximately 25 lb. (11.3 kg) and consists of three inputs, three 80-A circuit breakers, a fan, and LEDs to monitor the status of the power supply. Figure 3 on page 6 shows the three-input 240-A power supply.

**Figure 3: Three-Input 240-A Power Supply**

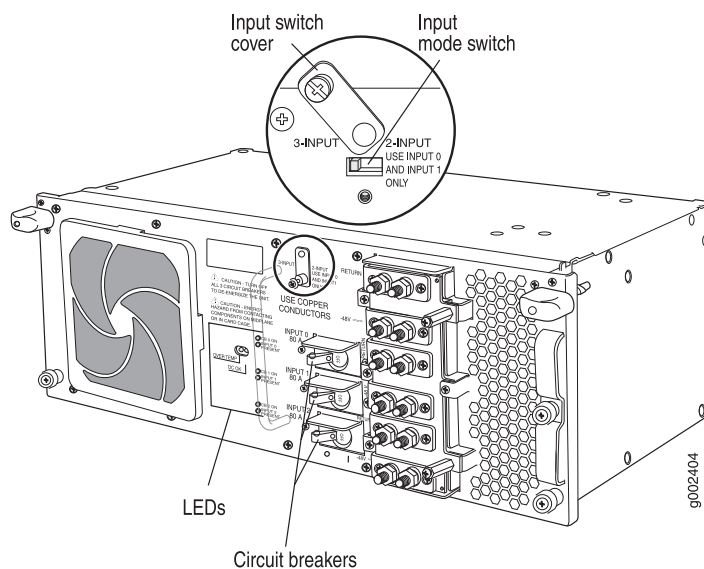

### Three-Input 240-A Power Supply Inputs

The three-input 240-A DC power supply inputs are labeled INPUT 0, INPUT 1, and INPUT 2, from top to bottom. Each input consists of -48 VDC and return—each with its own 80-A circuit breaker. The input mode switch on the faceplate allows you to set the DC power supply to either two-input or three-input mode. Three-input mode is required for the T1600 routing node. Two-input mode is not currently supported.

Table 1 on page 7 describes which components are powered by each input.

**Table 1: Components Powered by Each Three-Input 240-A Power Supply Input**

Input	Three-Input Mode	Two-Input Mode
INPUT 0	T1600-SIBs, T-CBs, fan trays, and Routing Engines	FPCs in slots FPC0 and FPC1, SIBs, T-CBs, fan trays, and Routing Engines
INPUT 1	FPCs in slots FPC4 through FPC7	FPCs in slots FPC2 and FPC7
INPUT 2	FPCs in slots FPC0 through FPC3	Not applicable

**Three-Input 240-A Power Supply Load Sharing and Fault Tolerance**

When the routing node is operating normally and both power supplies are switched on, load sharing between them occurs automatically. When one power supply fails or is turned off, the other power supply immediately assumes the entire electrical load for the system. A single power supply can provide full power for as long as the routing node is operational. Table 2 on page 7 describes the behavior of the power supply if one of the inputs fails.

**Table 2: Fault Tolerance**

Input	Three-Input Mode	Two-Input Mode
INPUT 0	If this input fails, INPUT 0, INPUT 1, and INPUT 2 shut down. The power supply shuts down, and the other power supply assumes the electrical load for all three inputs.	If this input fails, INPUT 0 and INPUT 1 shut down. The power supply shuts down, and the other power supply assumes the electrical load of INPUT 0 and INPUT 1.
INPUT 1	If this input fails, INPUT 0 is unaffected and INPUT 1 and INPUT 2 shut down. The other power supply assumes the electrical load of INPUT 1 and INPUT 2.	If this input fails, INPUT 0 is unaffected and INPUT 1 shuts down. The other power supply assumes the electrical load of INPUT 1.
INPUT 2	If this input fails, INPUT 0 is unaffected and INPUT 1 and INPUT 2 shut down. The other power supply assumes the electrical load of INPUT 1 and INPUT 2.	Not applicable

**Three-Input 240-A Power Supply LEDs**

LEDs on each power supply faceplate (see Figure 4 on page 8) indicate the status of the power supply. In addition, a power supply failure triggers the red alarm LED on the craft interface. Table 3 on page 8 describes the functions of the power supply LEDs.

**Figure 4: Three-Input 240-A Power Supply LEDs**

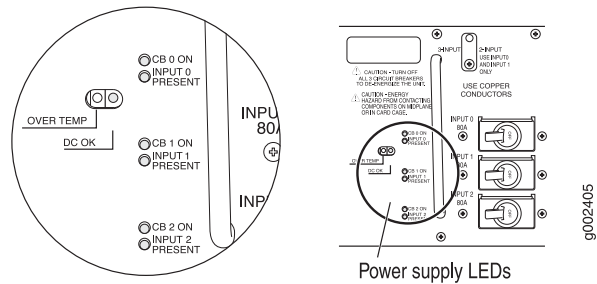


Table 3 on page 8 describes the three-input 240-A power supply LEDs.

**Table 3: Three-Input 240-A Power Supply LEDs**


LED	Color	State	Description
CB ON—One per input	Green	On steadily	Circuit breaker is on.
		Off	Circuit breaker is not turned on, or host subsystem has detected a failure and has turned the circuit breaker off.
DC OK—One per power supply	Blue	On steadily	When the power supply is correctly set to three-input mode and all three inputs are properly energized, the DC OK LED indicates that the power supply is functioning normally.  When the power supply is correctly set to two-input mode and INPUT 0 and INPUT 1 are both properly energized, the DC OK LED indicates that the power supply is functioning normally.
		Blinking	Power supply is starting up, is not functioning, is not properly installed, or is not operating properly.
INPUT PRESENT—One per input	Green	On steadily	Input is receiving voltage.
		Off	Input voltage is not present.
OVER TEMP—One per power supply	Amber	On steadily	Power supply has exceeded recommended temperature.
		Off	Power supply is within the recommended temperature or the power supply is not on.



## T1600-SIBs

Figure 5 on page 9 shows a T1600-SIB.

**Figure 5: T1600-SIB**

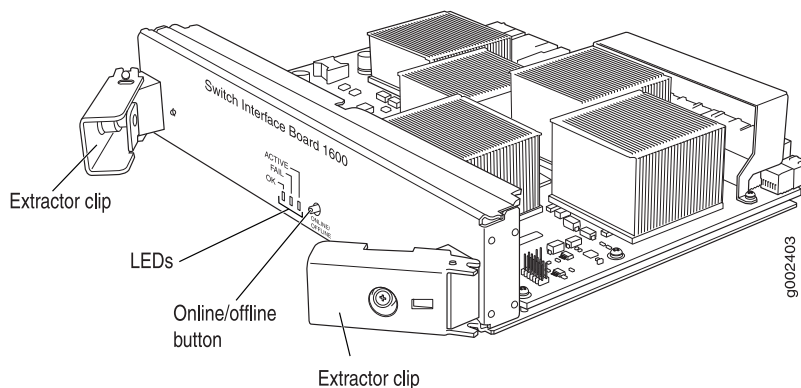

Each T1600-SIB consists of the following components:

- Switch fabric ASICs.
- High-speed links to each FPC.
- SIB online/offline button, located on the SIB faceplate.
- Three LEDs located on the SIB faceplate that display the status of the SIB. Table 4 on page 9 describes the functions of the SIB LEDs. If all three LEDs are off, the SIB is not receiving power. The craft interface has three additional LEDs that show the status of each T1600-SIB. The OK and FAIL LEDs are replicated on the craft interface.

**Table 4: SIB LEDs**

Label	Color	State	Description
ACTIVE	Green	On steadily	SIB is in active mode.
OK	Green	On steadily	SIB is functioning normally.
		Blinking	SIB is starting up.
FAIL	Amber	On steadily	SIB has failed.

Each SIB weighs approximately 6.5 lb (3 kg).

## T1600 Routing Node Upgrade Overview

---



**NOTE:** The T640 routing node can be upgraded while the routing node is powered on and operational.

---



**NOTE:** During the SIB upgrade:

- The routing node should not experience packet loss if the traffic is less than 50 percent per Packet Forwarding Engine in each FPC.
- The routing node might experience some packet loss if the traffic is more than 50 percent per Packet Forwarding Engine in each FPC, depending on the operational environment.

For more information, contact your customer support representative.

---

To upgrade the T640 routing node, use the following procedures:

1. If you have not already done so, install JUNOS Release 8.5 or later in the T640 routing node.
2. Verify that the required hardware version of the rear fan tray is installed. If needed, order a new rear fan tray.
3. Prepare the site. Provision additional power as needed.
4. Remove one two-input 160-A power supply.
5. Install a three-input 240-A power supply.
6. Replace the other power supply.
7. Upgrade the existing standard SIBs to T1600-SIBs.
8. Remove the upper fan tray.
9. Replace the craft interface.
10. Reinstall the upper fan tray.
11. Verify the installation of components.
12. Attach the T1600 agency label.
13. Register your T1600 upgrade.



**NOTE:** Do not install T1600-FPC4s until after all upgrade procedures are completed.

---

## Verifying the Hardware Version of the Rear Fan Tray

The rear fan tray, model number FAN-REAR-TX-T640-S, has eight fans and is required to support the additional thermal power generation of the T1600 routing node. Model number RHTREARTRAY-T-S has five blowers and does not provide sufficient cooling for the T1600 routing node. To verify that FAN-REAR-TX-T640-S is installed:

1. Issue the show chassis environment command:

In this example, the output shows that the rear fan tray has five blowers, indicating that RHTREARTRAY-T-S is installed. The last five lines of the output for the fans each include **Blower** in the description.

```
user@host> show chassis environment
```

```
Fans  Top Left Front fan      OK      Spinning at normal speed
      Top Left Middle fan    OK      Spinning at normal speed
      Top Left Rear fan      OK      Spinning at normal speed
      Top Right Front fan    OK      Spinning at normal speed
      Top Right Middle fan   OK      Spinning at normal speed
      Top Right Rear fan     OK      Spinning at normal speed
      Bottom Left Front fan  OK      Spinning at normal speed
      Bottom Left Middle fan OK      Spinning at normal speed
      Bottom Left Rear fan  OK      Spinning at normal speed
      Bottom Right Front fan OK      Spinning at normal speed
      Bottom Right Middle fan OK      Spinning at normal speed
      Bottom Right Rear fan OK      Spinning at normal speed
      Fourth Blower from top OK      Spinning at normal speed
      Bottom Blower         OK      Spinning at normal speed
      Middle Blower         OK      Spinning at normal speed
      Top Blower            OK      Spinning at normal speed
      Second Blower from top OK      Spinning at normal speed
```

In this example, the output shows that the rear fan tray has eight fans, indicating that FAN-REAR-TX-T640-S is installed. The last eight lines of the output for the fans each begin with **Rear Tray** and include **fan** in the description.

```
Fans  Top Left Front fan      OK      Spinning at normal speed
      Top Left Middle fan    OK      Spinning at normal speed
      Top Left Rear fan      OK      Spinning at normal speed
      Top Right Front fan    OK      Spinning at normal speed
      Top Right Middle fan   OK      Spinning at normal speed
      Top Right Rear fan     OK      Spinning at normal speed
      Bottom Left Front fan  OK      Spinning at normal speed
      Bottom Left Middle fan OK      Spinning at normal speed
      Bottom Left Rear fan  OK      Spinning at normal speed
      Bottom Right Front fan OK      Spinning at normal speed
```

Bottom Right Middle fan	OK	Spinning at normal speed
Bottom Right Rear fan	OK	Spinning at normal speed
Rear Tray Top fan	OK	Spinning at normal speed
Rear Tray Second fan	OK	Spinning at normal speed
Rear Tray Third fan	OK	Spinning at normal speed
Rear Tray Fourth fan	OK	Spinning at normal speed
Rear Tray Fifth fan	OK	Spinning at normal speed
Rear Tray Sixth fan	OK	Spinning at normal speed
Rear Tray Seventh fan	OK	Spinning at normal speed
Rear Tray Bottom fan	OK	Spinning at normal speed

2. If RHTREARTRAY-T-S is installed, order FAN-REAR-TX-T640-S and install it before installing the three-input 240-A power supplies.

## Preparing the Site

---

The following sections describe how to prepare your site so that you can install upgrade components.


- Typical Power Distribution on page 12
- Provisioning Additional Power for the T1600 Routing Node on page 13

### Typical Power Distribution

Most sites distribute DC power through a main conduit that leads to frame-mounted DC power distribution panels, one of which might be located at the top of the rack that houses the T1600 routing node. A pair of cables (one input and one return) connects each set of terminal studs to the power distribution panel.

The DC power supply in slot **PEM0** must be powered by a dedicated power feed derived from feed **A**, and the DC power supply in slot **PEM1** must be powered by a dedicated power feed derived from feed **B**. This configuration provides the commonly deployed A/B feed redundancy for the system.

Figure 6 on page 13 shows a typical DC source cabling arrangement.

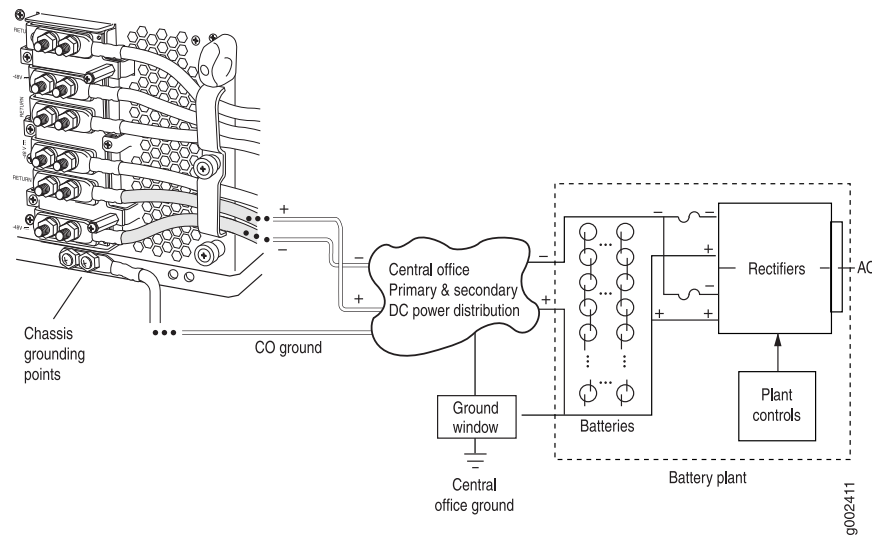**Figure 6: Typical DC Source Cabling to the T1600 Routing Node**

### Provisioning Additional Power for the T1600 Routing Node

For a maximally configured T1600 routing node, we recommend that you provision at least 64 A @ -48 VDC for each power supply input in the system.

We recommend that you provision a facility circuit breaker for each DC power supply input rated for at least 125 % of the continuous current that the input draws at -48 VDC.

### Replacing the Rear Fan Tray



**NOTE:** If the rear fan tray (model number FAN-REAR-TX-T640-S) is already installed, replacing the rear fan tray is not necessary. Proceed to “Upgrading the DC Power Supplies” on page 17.

The rear fan tray is hot-insertable and hot-removable. To replace a fan tray, use the following procedures:

- Removing the Rear Fan Tray on page 14
- Installing a Rear Fan Tray on page 15

## Removing the Rear Fan Tray

The rear fan tray is mounted vertically on the right side of the rear of the chassis. The rear fan tray (model number RHTREARTRAY-T-S) weighs about 12 lb (5.4 kg).

To remove the rear fan tray, follow this procedure (see Figure 7 on page 15):

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis. See “Preventing Electrostatic Discharge Damage” on page 47.
2. Loosen the captive screws on the top and bottom of the fan tray faceplate, using a Phillips (+) screwdriver, number 2.
3. Grasp the handles and pull the fan tray halfway out of the chassis.




**WARNING:** To avoid injury, keep tools and your fingers away from the fans as you slide the fan tray out of the chassis. The fans might still be spinning.

- 
4. When the fans stop spinning, grasp the handles and pull the fan tray completely out of the chassis.



**CAUTION:** To maintain proper cooling, do not operate the T1600 routing node with the rear fan tray removed for more than one minute.

---

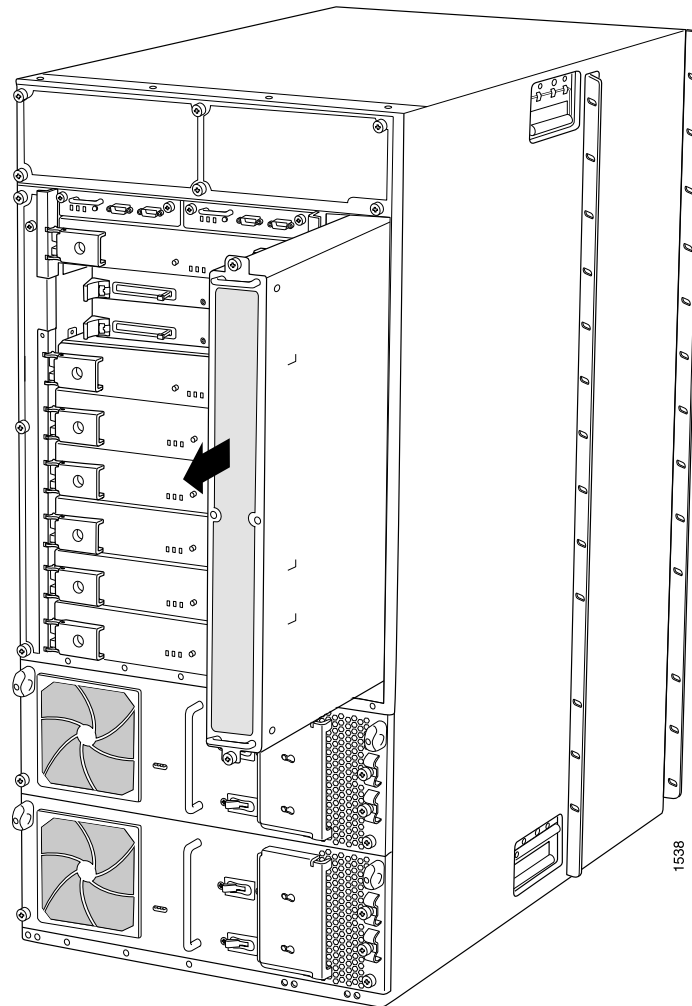
**Figure 7: Removing the Rear Fan Tray**

### ***Installing a Rear Fan Tray***

The rear fan tray (model number FAN-REAR-TX-T640-S) weighs about 10 pounds (4.5 kg). To install a replacement rear fan tray, follow this procedure (see Figure 8 on page 16):

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis. See “Preventing Electrostatic Discharge Damage” on page 47.
2. Grasp the fan tray by its handles and insert it straight into the chassis.
3. Tighten the captive screws on the fan tray faceplate to secure it in the chassis, using a Phillips (+) screwdriver, number 2.

**Figure 8: Installing a Rear Fan Tray**

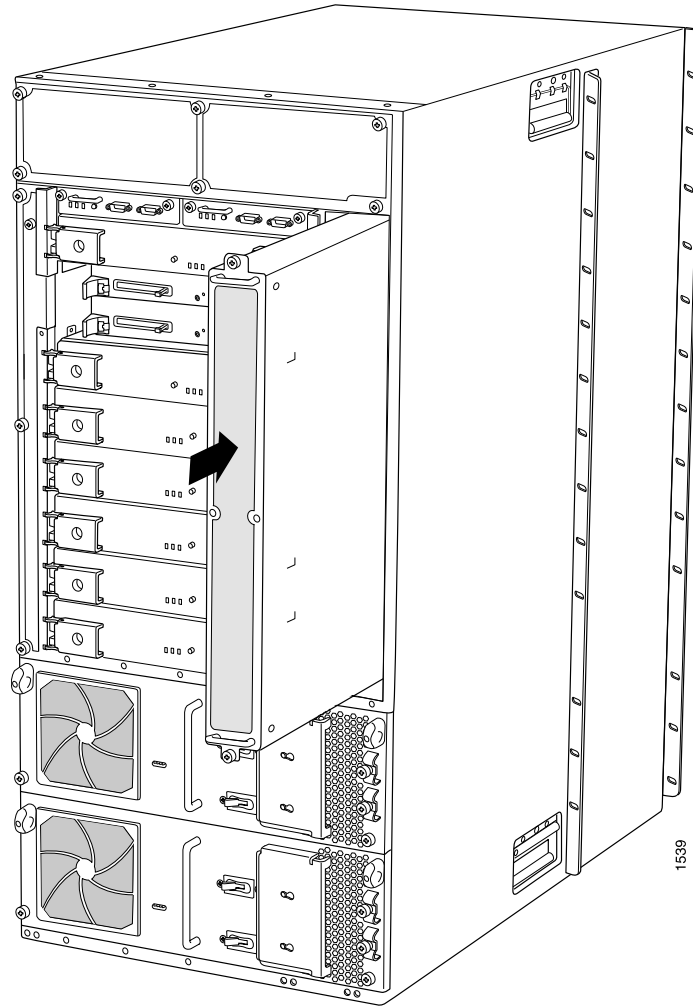



## Upgrading the DC Power Supplies

---



**NOTE:** You must upgrade both power supplies. Follow these procedures for one power supply, then immediately upgrade the other power supply. Mixing a two-input 160-A power supply and a three-input 240-A power supply is supported only during the upgrade.

---

The power supplies are located at the lower rear of the chassis. Each power supply is hot-insertable and hot-removable. When one power supply is powered down or removed, the other power supply automatically assumes the entire electrical load for the routing node. To upgrade each two-input 160-A power supply to a three-input 240-A power supply, use the following procedures:

- Preparing the DC Power Cables on page 17
- Tools and Parts Required on page 17
- Removing a Two-Input 160-A Power Supply on page 18
- Setting the Input Mode Switch on a Three-Input 240-A Power Supply on page 21
- Installing a Three-Input 240-A Power Supply on page 22
- Replacing the Cable Restraint on a Three-Input 240-A Power Supply on page 23
- Connecting a Three-Input 240-A Power Supply on page 25
- Powering On a Three-Input 240-A Power Supply on page 26

### Preparing the DC Power Cables

The accessory box shipped with the installation kit includes the cable lugs that attach to the terminal studs of each power supply (see Figure 25 on page 46).

---



**CAUTION:** Before the power supply installation begins, a licensed electrician must attach cable lugs to the power cables that you supply. A cable with an incorrectly attached lug can damage the power supply.

---

### Tools and Parts Required

To upgrade the power supplies, you need the following tools and parts:

- Four additional DC power cables (two cables for each power supply)
- Electrostatic discharge (ESD) grounding wrist strap
- 7/16-in. nut driver or pliers



**CAUTION:** Do not substitute a metric nut driver or wrench. A tool that does not fit the nuts exactly can damage them. If a 7/16-in. tool is not available, use pliers or an adjustable wrench.


- Phillips (+) screwdrivers, numbers 1 and 2
- Flashlight
- Non-conductive sharp object to set the input-mode switch
- Wire cutters

### Removing a Two-Input 160-A Power Supply

To remove a two-input 160-A power supply, follow this procedure:

1. Switch off the external circuit breakers to the power supply being removed. Make sure that the voltage across the DC power source cable leads is 0 V and that there is no chance that the cables might become active during the removal process.
2. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis. See “Preventing Electrostatic Discharge Damage” on page 47.
3. Switch both circuit breakers on the power supply faceplate to the off position (O).

**Figure 9: Two-Input 160-A Power Supply**

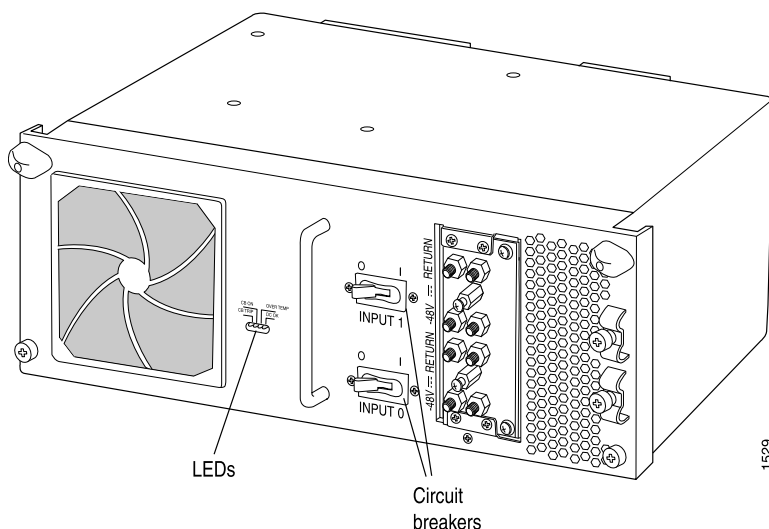

**NOTE:** After powering off a power supply, wait at least 60 seconds before turning it back on.


4. Remove the clear plastic cover protecting the terminal studs on the faceplate.



**CAUTION:** You must ensure that power connections maintain the proper polarity. The power source cables might be labeled (+) and (-) to indicate their polarity. There is no standard color coding for DC power cables. The color coding used by the external DC power source at your site determines the color coding for the leads on the power cables that attach to the terminal studs on each power supply.

- Using a 7/16-in. nut driver or pliers, remove the nuts and washers from the terminal studs (see Figure 10 on page 19).

**Figure 10: Disconnecting Power Cables From the DC Power Supply**

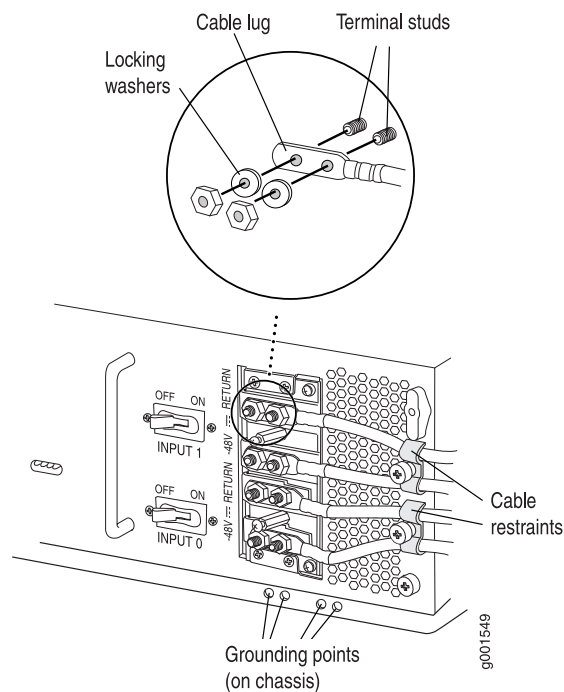


- Remove the cable lugs from the terminal studs.
- Loosen the captive screws on the cable restraints on the right edge of the power supply faceplate.
- Carefully move the power cables out of the way.
- Loosen the captive screws on the lower corners of the power supply faceplate completely.
- Twist the ejector handles on the upper corners of the faceplate counterclockwise to unseat the power supply.



**WARNING:** Do not touch the power connectors on the rear of the power supply (see Figure 11 on page 20). They can contain dangerous voltages.

**Figure 11: Rear of the Power Supply Showing Midplane Connectors**

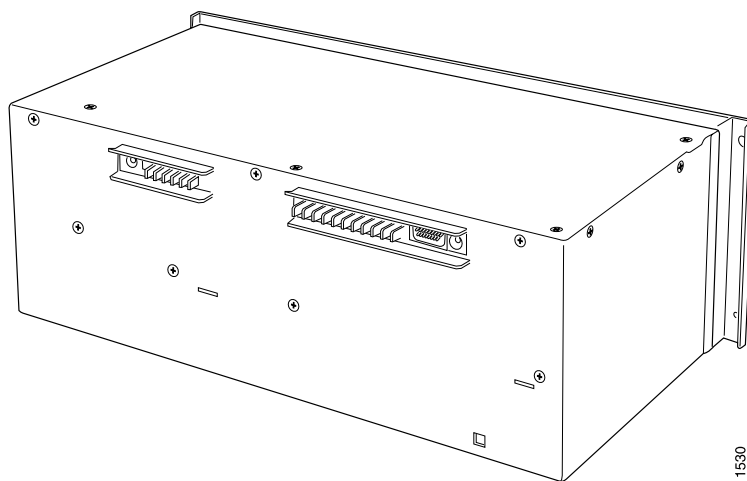

11. Grasp the handle on the power supply faceplate and pull firmly. Slide it halfway out of the chassis (see Figure 12 on page 21).




**CAUTION:** Each two-input 160-A power supply weighs approximately 23 lb (10.5 kg). Be prepared to support the full weight of the power supply as you remove it from the routing platform.

- 
12. Place one hand underneath the power supply to support it and slide it completely out of the chassis.



**CAUTION:** Do not leave a power supply slot empty for more than a short time while the routing node is operational. For proper airflow, the power supply must remain in the chassis or a blank panel must be used in an empty slot.

---

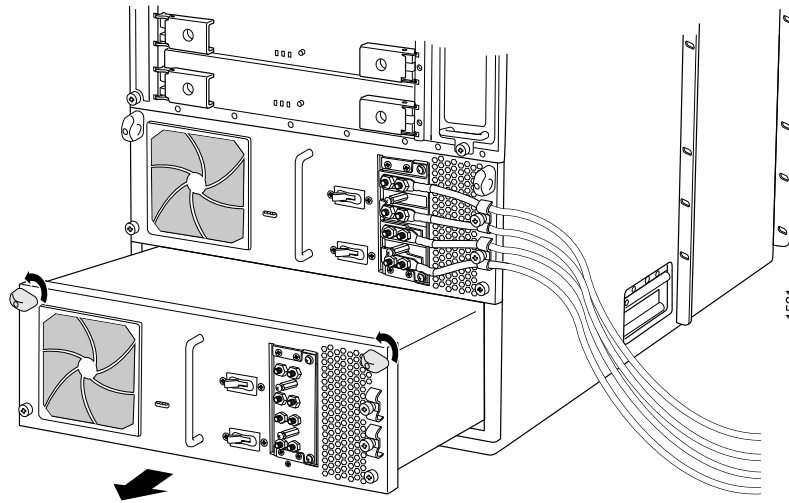**Figure 12: Removing a Power Supply**

### Setting the Input Mode Switch on a Three-Input 240-A Power Supply



**NOTE:** Do not set the input mode switch if the power supply is installed in the chassis. If the power supply is already installed, you must remove it before setting the input mode switch.

To set the input mode switch:


1. Using a screwdriver, loosen the captive screw holding the metal cover over the input mode switch (see Figure 13 on page 22).
2. Rotate the metal cover away from the input mode switch to expose the switch.
3. Check the setting of the input mode switch. Use a flashlight, if necessary. In **3-INPUT** mode, the switch is located all the way to the left.
4. Use a sharp, nonconductive object to slide the switch all the way to the left to set the power supply to three-input mode.



**CAUTION:** Do not use a pencil, because fragments can break off and cause damage to the power supply.

5. Rotate the metal cover over the input mode switch, and use a screwdriver to tighten the captive screw.

Figure 13 on page 22 shows the input mode switch.

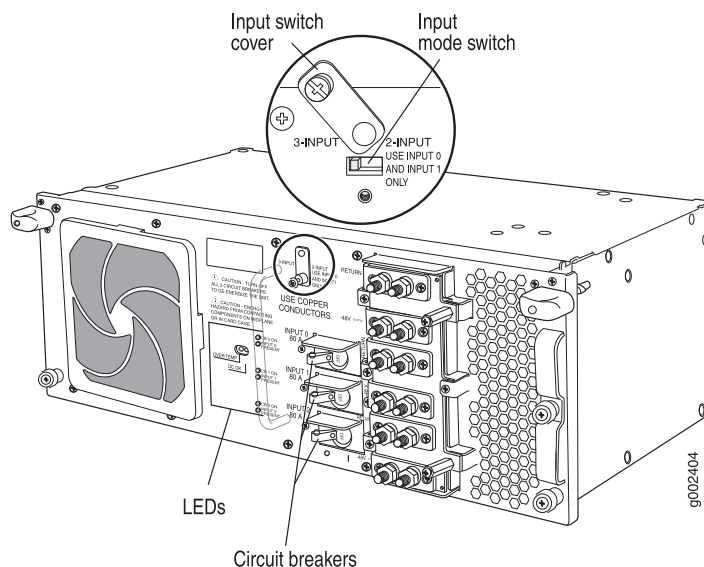
**Figure 13: Three-Input 240-A Power Supply**

### **Installing a Three-Input 240-A Power Supply**

Each three-input 240-A power supply weighs approximately 25 lb (11.3 kg). To install a three-input 240-A power supply, follow this procedure:

1. Make sure that the voltage across the DC power source cable leads is 0 V and that there is no chance that the cables might become active during installation.
2. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis. See “Preventing Electrostatic Discharge Damage” on page 47.
3. Switch the circuit breakers on the power supply faceplate to the OFF position (O).
4. Using both hands, slide the power supply into the chassis until you feel resistance (see Figure 14 on page 23).
5. Twist the ejector handles at the upper corners of the power supply faceplate clockwise until they stop.
6. Tighten the captive screws at the lower corners of the power supply faceplate to secure the power supply in the chassis.

**Figure 14: Installing a Three-Input 240-A Power Supply**

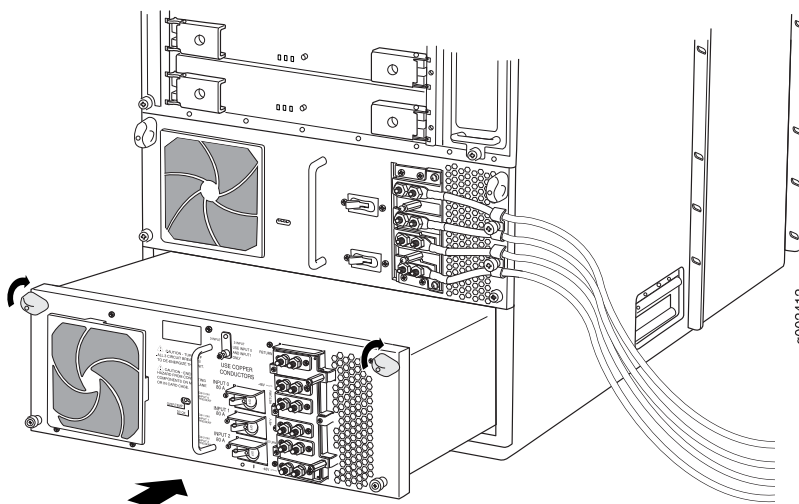



**Replacing the Cable Restraint on a Three-Input 240-A Power Supply**

Each three-input 240-A power supply is shipped with the standard cable restraint shown in Figure 15 on page 23. Two optional cable restraints are shipped in the accessory box for the T1600 routing node and in the T1600 upgrade kit.

If your DC power cables are too large or inflexible to fit into the standard cable restraint, we recommend that you remove the standard cable restraint and install the optional cable restraint (see Figure 16 on page 24) on each three-input 240-A power supply.

**Figure 15: Three-Input 240-A Power Supply with the Standard Cable Restraint**

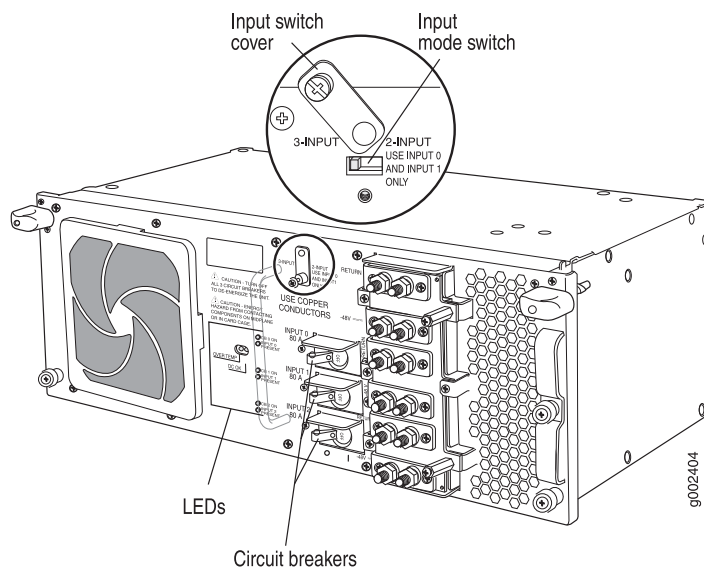

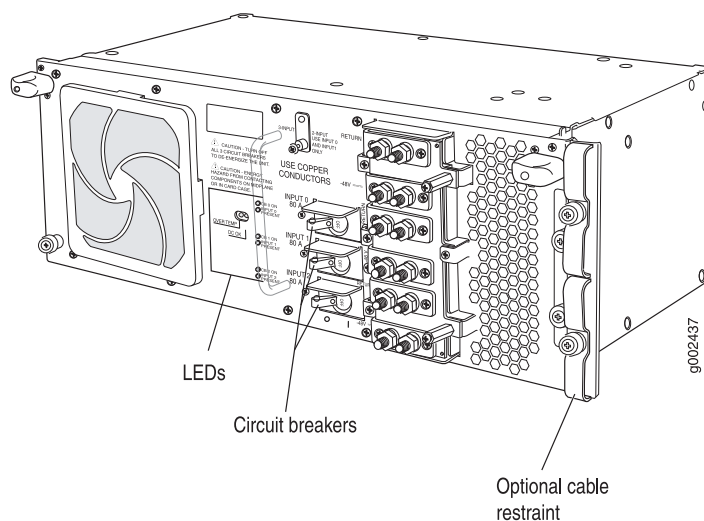**Figure 16: Three-Input 240-A Power Supply with the Optional Cable Restraint**

To replace the cable restraint on a three-input 240-A power supply, use the following procedures:

- Removing the Standard Cable Restraint from a Three-Input 240-A Power Supply on page 24
- Installing the Optional Cable Restraint on a Three-Input 240-A Power Supply on page 24

### Removing the Standard Cable Restraint from a Three-Input 240-A Power Supply

The cable restraint is located on the right edge of the power supply faceplate. To remove the standard cable restraint, follow this procedure:

1. Loosen the captive screw on the standard cable restraint.
2. Remove the cable restraint from the power supply.

### Installing the Optional Cable Restraint on a Three-Input 240-A Power Supply

To install the optional cable restraint, follow this procedure:

1. Align the two captive screws on the optional cable restraint with the two threaded holes located at the right edge of the power supply faceplate.
2. Fasten the captive screws.



## Connecting a Three-Input 240-A Power Supply

To connect a three-input 240-A power supply to the power sources, follow this procedure:

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis. See “Preventing Electrostatic Discharge Damage” on page 47.
2. Verify that a licensed electrician has attached cable lugs to the power cables that you supply.
3. Verify that the voltage across the DC power source cables leads is 0 V and that there is no chance that the cables might become active during installation. If needed, switch off the external circuit breakers.
4. Verify that the circuit breakers on the power supply faceplate are in the **OFF** position (O).
5. Remove the clear plastic cover protecting the terminal studs on the faceplate.
6. Remove the nut and washer from each power terminal stud.



**CAUTION:** You must ensure that power connections maintain the proper polarity. The power source cables might be labeled (+) and (–) to indicate their polarity. There is no standard color coding for DC power cables. The color coding used by the external DC power source at your site determines the color coding for the leads on the power cables that attach to the terminal studs on each power supply.

- 
7. Attach the lugs on the DC source power cables to the terminal studs.
    - a. Attach the positive (+) DC source power cable lugs to the **RETURN** (return) terminals.
    - b. Attach the negative (–) DC source power cable lugs to the **–48V** (input) terminals.

Secure the cable lugs to the terminal studs, first with a washer, then with a nut (see Figure 17 on page 26). Use a 7/16-in. (11-mm) nut driver or wrench to tighten the nut. Apply between 23 lb-in. (2.6 Nm) and 25 lb-in. (2.8 Nm) of torque to each nut.



**NOTE:** For power supplies set to **3-INPUT** mode (required for the T1600 routing node), connect two DC power cables to each of the three inputs.

- 
8. Loosen the captive screw or screws on the cable restraint on the right edge of the power supply faceplate.
  9. Route the DC power cables through the cable restraint.
  10. Tighten the cable restraint captive screw or screws to hold the power cables in place.





**NOTE:** After a power supply is powered on, it can take up to 60 seconds for status indicators—such as the LEDs on the power supply, the `show chassis` command display, and messages on the LED display on the craft interface—to indicate that the power supply is functioning normally. Ignore error indicators that appear during the first 60 seconds.

5. Verify that the **CB ON** LEDs on the power supply faceplate are lit steadily. The **CB ON** LEDs blink momentarily, then light steadily to indicate that the circuit breakers are on.
6. Verify that the **DC OK** LED on the power supply faceplate is lit steadily, indicating that the power supply is correctly installed and is functioning properly.



**NOTE:** After powering on a power supply, wait at least 60 seconds before turning it off. If the system is completely powered off when you power on the power supply, the Routing Engine boots as the power supply completes its startup sequence. If the Routing Engine finishes booting and you need to power off the system again, first issue the CLI `request system halt` command.

After powering off a power supply, wait at least 60 seconds before turning it back on.

## Upgrading SIBs

To convert an operational T640 routing node to a T1600 routing node, you upgrade the standard SIBs or SIBs version B in the T640 routing node to T1600-SIBs. You repeat the upgrade procedures for each of the five SIBs in the routing node.



**NOTE:** During the SIB upgrade:

- The routing node should not experience packet loss if the traffic is less than 50 percent per Packet Forwarding Engine in each FPC.
- The routing node might experience some packet loss if the traffic is more than 50 percent per Packet Forwarding Engine in each FPC, depending on the operational environment.

For more information, contact your customer support representative.

- Overview of Upgrading the SIBs on page 28
- Preparing to Upgrade the SIBs on page 29
- Tools Required on page 30
- Removing a Standard SIB or SIB Version B on page 30
- Installing a T1600-SIB on page 32

- Verifying the Installation of a T1600-SIB on page 33
- Preparing to Exit Upgrade Mode on page 33
- Exiting Upgrade Mode on page 34
- Verifying Operation on page 35

### **Overview of Upgrading the SIBs**

To replace the standard SIBs or SIB version B in a T640 routing node with T1600-SIBs, follow these procedures:

1. Identify the spare SIB.
2. Upgrade the spare SIB.
  - a. Remove the spare SIB using the procedure “Removing a Standard SIB or SIB Version B” on page 30.
  - b. Install a T1600-SIB in the slot where the spare SIB was located. See “Installing a T1600-SIB” on page 32
3. Remove one of the remaining standard SIBs or SIB version B and install a T1600-SIB. Then, repeat the procedures for each of the remaining SIBs.

## Preparing to Upgrade the SIBs

To prepare to upgrade the SIBs, follow this procedure:

1. The T640 routing node must contain five standard SIBs or SIBs version B before the upgrade. Verify that four SIBs are in the **Online** state and one SIB is in the **Spare** state. Display the status of the SIBs by issuing the `show chassis sibs` command:

```
user@host> show chassis sibs
```

Slot	State	Uptime
0	Spare	255 days, 31 minutes, 12 seconds
1	Online	255 days, 31 minutes, 12 seconds
2	Online	255 days, 31 minutes, 12 seconds
3	Online	255 days, 31 minutes, 12 seconds
4	Online	255 days, 31 minutes, 12 seconds

To bring a SIB online, issue the `request chassis sib online operational mode` command. To install additional SIBs, use the standard installation procedure described in the *T640 Internet Routing Node Hardware Guide*.



**NOTE:** Do not proceed with the upgrade until all five SIBs are present and operational.

---

2. Enter configuration mode.

```
user@host> configure
```

3. Include the `fabric upgrade-mode` statement in the configuration at the `[edit chassis]` hierarchy level.

```
user@host# set chassis fabric upgrade-mode
```

4. Commit the configuration:

- If GRES is enabled, commit the configuration on both the master and the backup Routing Engines:

```
user@host# commit synchronize
```

- If GRES is not enabled, commit the configuration on the master Routing Engine:

```
user@host# commit
```

5. Exit configuration mode.

```
user@host# exit
```

## Tools Required

To upgrade the SIBs, you need the following tools and parts.

- Electrostatic discharge (ESD) grounding wrist strap
- Phillips (+) screwdrivers, numbers 1 and 2

## Removing a Standard SIB or SIB Version B

To remove a standard SIB or SIB version B, follow this procedure:

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis. See “Preventing Electrostatic Discharge Damage” on page 47.
2. Take the SIB offline by using one of the following methods:
  - Press and hold the **ONLINE/OFFLINE** button on the SIB faceplate for about five seconds until the OK LED is not lit.
  - Issue the `request chassis sib offline slot 0` command. For example:

```
user@host> request chassis sib offline slot 0
```



**NOTE:** When you bring an active SIB offline, the spare SIB becomes active and transitions to the **Online** state.

---


3. Loosen the captive screws (using a Phillips (+) screwdriver, number 2) on the ejector handles on each side of the SIB faceplate.
  4. Flip the ejector handles outward to unseat the SIB.
  5. Grasp both ejector handles, pull firmly, and slide the SIB about three-quarters of the way out of the chassis.
  6. Place one hand underneath the SIB to support it and slide it completely out of the chassis. Place the SIB on the antistatic mat.
- 




**CAUTION:** Do not stack hardware components on one another after you remove them. Place each component on an antistatic mat resting on a stable, flat surface.

---

**Figure 18: Removing a SIB from a T640 Routing Node**

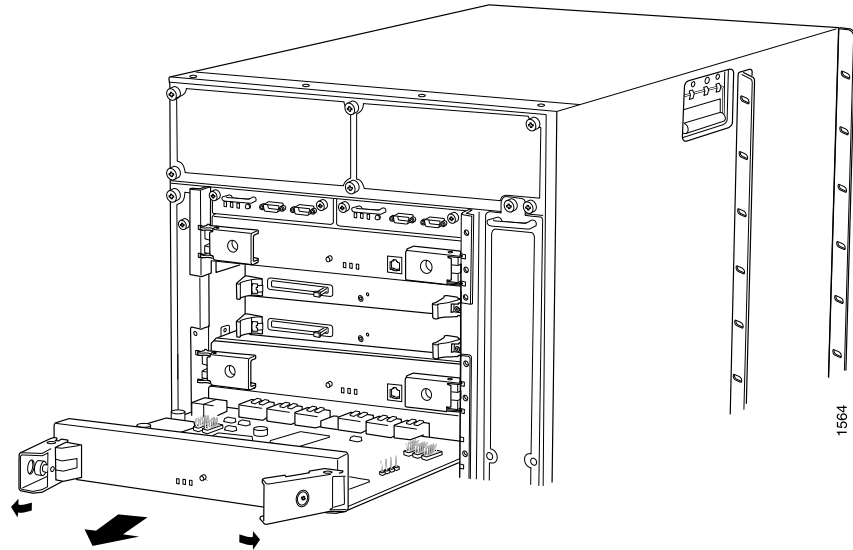

**Figure 19: Standard SIB Supported in a T640 Routing Node**

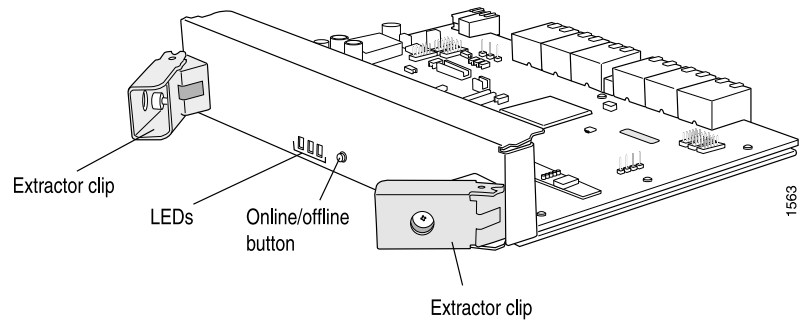


## Installing a T1600-SIB

Each SIB weighs approximately 6.5 lb (3 kg). To install a T1600-SIB, follow this procedure (see Figure 20 on page 32):

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis. See “Preventing Electrostatic Discharge Damage” on page 47.
2. Place one hand underneath the T1600-SIB to support it. With the other hand, hold one of the ejector handles on the T1600-SIB faceplate.
3. Carefully align the sides of the T1600-SIB with the guides inside the chassis.
4. Slide the T1600-SIB into the chassis, carefully ensuring that it is correctly aligned.
5. Grasp both ejector handles and press them inward to seat the T1600-SIB. Ensure that the ejector handle tabs are properly mated inside their corresponding chassis slots. You might have to close and open the handles a few times before the tabs catch the slots.
6. Tighten the captive screws on the ejector handles.
7. Bring the T1600-SIB online using one of the following methods:
  - Press and hold the ONLINE/OFFLINE button on the T1600-SIB faceplate. The green OK LED on the faceplate begins to blink. Hold the button down until the LED blinks.
  - Issue the following CLI command on the routing node:

```
user@host> request chassis sib online slot 0
```

**Figure 20: Installing a T1600-SIB in a T1600**

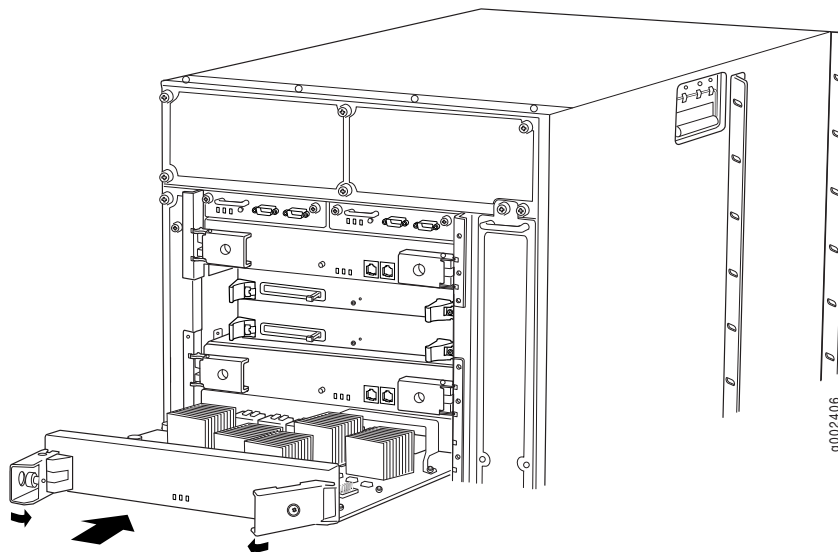



## Verifying the Installation of a T1600-SIB

To verify that the T1600-SIB is functioning normally, follow this procedure:

1. Check the LEDs on the T1600-SIB faceplate.
  - The green OK LED should light steadily a few minutes after the T1600-SIB is installed.
  - If the FAIL LED is lit steadily, remove and install the T1600-SIB again. Make sure that the T1600-SIB is seated properly. If the FAIL LED still lights steadily, the T1600-SIB is not functioning properly. Contact your customer support representative.
2. Verify that four T1600-SIB are in the **Online** state and one SIB is in the **Spare** state. Display the status of the T1600-SIB by issuing the `show chassis sibs` command:

```
user@host> show chassis sibs

Slot State                Uptime
0   Spare                0 days, 30 minutes, 12 seconds
1   Online               0 days, 25 minutes, 45 seconds
2   Online               0 days, 20 minutes, 28 seconds
3   Online               0 days, 15 minutes, 7 seconds
4   Online               0 days, 10 minutes, 52 seconds
```

To bring a T1600-SIB online, issue the `request chassis sib online operational mode` command.

## Preparing to Exit Upgrade Mode

After all five T1600-SIBs have been installed, use the following commands to exit upgrade mode :

1. Determine if GRES is enabled.

```
user@host> show system switchover

Graceful switchover: On
Configuration database: Ready
Kernel database: Ready
```

2. Verify that the Routing Engines are operating properly by issuing the `show chassis routing-engine` command.

```
user@host> show chassis routing-engine

Routing Engine status:
Slot 0:
  Current state           Master
  Election priority      Master (default)
  Temperature             32 degrees C / 89 degrees F
  CPU temperature        33 degrees C / 91 degrees F
```

```

DRAM                               2048 MB
Memory utilization                   8 percent
CPU utilization:
  User                               0 percent
  Background                         0 percent
  Kernel                             2 percent
  Interrupt                          0 percent
  Idle                               98 percent
Model                               RE-4.0
Serial ID                           P13004101110
Start time                          2007-04-30 08:38:22 PDT
Uptime                              2 days, 2 hours, 22 minutes, 43 seconds

Load averages:                     1 minute  5 minute 15 minute
                                   0.02      0.02   0.00

```

## Exiting Upgrade Mode

Use the following commands to exit upgrade mode:

1. Enter configuration mode.

```
user@host> configure
```

2. Delete the `fabric upgrade-mode` statement in the configuration at the [edit chassis] hierarchy level.

```
user@host# delete chassis fabric upgrade-mode
```

3. Commit the configuration:

- If GRES is enabled, commit the configuration on both the master and the backup Routing Engines:

```
user@host# commit synchronize
```

- If GRES is not enabled, commit the configuration on the master Routing Engine:

```
user@host# commit
```

4. Exit configuration mode.

```
user@host# exit
```

## Verifying Operation

Use the following commands to verify proper operation of the T1600 routing node:

1. Verify that the model number is now T1600 by issuing the `show version` command.

```
user@host> show version
```

```

Hostname: myhost
Model: t1600
JUNOS Base OS boot [8.5R1]
JUNOS Base OS Software Suite [8.5R1]
JUNOS Kernel Software Suite [8.5R1]
JUNOS Crypto Software Suite [8.5R1]
JUNOS Packet Forwarding Engine Support (M/T Common) [8.5R1] JUNOS Packet Forwarding Engine Support
(T-Series) [8.5R1] JUNOS Online Documentation [8.5R1] JUNOS Routing Software Suite [8.5R1]

```

2. Verify that no alarms are present by issuing the `show chassis alarms` command.

```
user@host> show chassis alarms
```

```
No alarms currently active
```

3. Verify that the LEDs and indicators on the craft interface show that the routing node is operating properly by issuing the `show chassis craft-interface` command.

```
user@host> show chassis craft-interface
```

```
FPM Display contents:
```

```

+-----+
|Myhost router   |
|Up: 0+22:34     |
|                |
|Temperature OK  |
+-----+

```

```
Front Panel System LEDs:
```

```
Routing Engine    0    1
```

```

-----
OK                *    *
Fail              .    .
Master           *    .

```

```
Front Panel Alarm Indicators:
```

```

-----
Red LED          .
Yellow LED       .
Major relay      .
Minor relay      .

```

```
Front Panel FPC LEDs:
```

```

FPC    0    1    2    3    4    5    6    7
-----
Red    .    .    .    .    .    .    .    .
Green  *    *    *    *    *    *    *    *

```

```
CB LEDs:
```

```

CB 0 1
-----
Amber . .
Green * *
Blue * .

SCG LEDs:
SCG 0 1
-----
Amber . .
Green * *
Blue * .

SIB LEDs:
SIB 0 1 2 3 4
-----
Red . . . . .
Green * * * * *
    
```

4. Verify that all FPCs in the routing node are detected and online by issuing the `show chassis fpc` and `show chassis hardware` commands.

`user@host> show chassis fpc`

Slot	State	Temp (C)	CPU Utilization (%)		Memory DRAM (MB)	Utilization (%)	
			Total	Interrupt		Heap	Buffer
0	Online	41	6	0	1024	6	49
1	Online	35	4	0	1024	4	49
2	Online	35	4	0	1024	4	49
3	Online	31	1	0	1024	2	49
4	Online	33	1	0	1024	2	49
5	Online	56	9	0	2048	5	24
6	Online	35	4	0	1024	4	49
7	Online	32	1	0	1024	2	49

`user@host> show chassis hardware`

```

Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis              JN1090E5DAHA  T1600
Midplane            REV 02  710-017247  RC0094         T640 Backplane
FPM GBUS            REV 09  710-002901  WE0156         T640 FPM Board
FPM Display         REV 05  710-021387  DE4543         T1600 FPM Display
CIP                 REV 06  710-002895  WD8691         T-series CIP
PEM 0               Rev 06  740-017906  TE27790       Power Entry Module 3x80
PEM 1               Rev 06  740-017906  TE27779       Power Entry Module 3x80
SCG 0               REV 14  710-003423  WF1874         T640 Sonet Clock Gen.
SCG 1               REV 14  710-003423  WF1881         T640 Sonet Clock Gen.
Routing Engine 0    REV 06  740-014082  1000688671    RE-A-2000
Routing Engine 1    REV 06  740-014082  1000688739    RE-A-2000
CB 0                REV 06  710-007655  KB9648         Control Board (CB-T)
CB 1                REV 15  710-002728  HR8130         T-series Control Board
FPC 0               REV 10  710-010845  JZ2728         FPC Type 4
  CPU               REV 04  710-011481  JT8139         FPC CPU-Enhanced
  PIC 0             REV 05  750-017405  DF3515         4x 10GE (LAN/WAN) XFP
    Xcvr 0          REV 01  740-014279  KB405P1        XFP-10G-LR
    Xcvr 1          REV 01  740-014289  C701XU05U     XFP-10G-SR
  MMB 0             REV 01  710-016606  JW7943         ST-MMB
    
```

FPC 1	REV 03	710-013035	DF5574	FPC Type 3-ES
CPU				
FPC 2	REV 04	710-013560	WF7206	E2-FPC Type 3
CPU	REV 03	710-013563	WE9007	FPC CPU-Enhanced
PIC 0	REV 16	750-007141	NF5528	10x 1GE(LAN), 1000 BASE
Xcvr 0	REV 01	740-011782	P8P085F	SFP-SX
PIC 1	REV 12	750-009567	WF3566	1x 10GE(LAN), XENPAK
Xcvr 0	REV 02	740-013170	T07C94489	XENPAK-LR
PIC 2	REV 11	750-009567	CW9479	1x 10GE(LAN), XENPAK
Xcvr 0	REV 02	740-013170	T06F90331	XENPAK-LR
PIC 3	REV 07	750-012793	WF5106	1x 10GE(LAN/WAN) IQ2
Xcvr 0	REV 01	740-014279	KB405Q8	XFP-10G-LR
MMB 0	REV 06	710-010171	WF6759	MMB-5M3-288mbit
MMB 1	REV 06	710-010171	WF6800	MMB-5M3-288mbit
FPC 3	REV 04	710-013553	JW1482	E2-FPC Type 1
CPU	REV 02	710-013563	JY4119	FPC CPU-Enhanced
PIC 0	REV 10	750-012266	JX5515	4x 1GE(LAN), IQ2
Xcvr 0	REV 01	740-011613	PAM2Y9H	SFP-SX
Xcvr 1	REV 01	740-011613	PAM2Y99	SFP-SX
Xcvr 2	REV 01	740-011613	AM07287E42	SFP-SX
Xcvr 3	REV 01	740-011613	PAJ4SQL	SFP-SX
PIC 1	REV 04	750-011209	HY3332	Adaptive Services-II
PIC 2	REV 03	750-011750	JH4537	Adaptive Services-II FIPS
MMB 1	REV 05	710-008923	JS8106	MMB 3M 288-bit
FPC 4	REV 04	710-013558	JX5622	E2-FPC Type 2
CPU	REV 02	710-013563	JT5841	FPC CPU-Enhanced
PIC 3	REV 21	750-001901	HZ6258	4x OC-12 SONET, SMIR
MMB 1	REV 05	710-010171	JY3756	MMB-5M3-288mbit
FPC 5	REV 10	710-010845	JZ2728	FPC Type 4
CPU	REV 04	710-011481	JT8139	FPC CPU-Enhanced
PIC 0	REV 01	750-010850	JA0329	1x OC-768 SONET SR
MMB 0	REV 01	710-016606	JW7943	ST-MMB
FPC 6	REV 10	710-010845	JZ2729	FPC Type 4
CPU	REV 04	710-011481	JT8138	FPC CPU-Enhanced
PIC 0	REV 01	750-010850	JA0324	1x OC-768 SONET SR
MMB 0	REV 01	710-016606	JW7942	ST-MMB
FPC 7	REV 05	710-013558	WF4779	E2-FPC Type 2
CPU	REV 03	710-013563	WF4663	FPC CPU-Enhanced
PIC 0	REV 09	750-011800	KA2397	8x 1GE(LAN), IQ2
Xcvr 0	REV 01	740-007326	P5S0PD9	SFP-SX
Xcvr 1	REV 01	740-007326	P5S0PD6	SFP-SX
Xcvr 2	REV 01	740-011613	PAJ4SQV	SFP-SX
Xcvr 3	REV 01	740-011613	PAM2Y94	SFP-SX
Xcvr 5	REV 01	740-011613	P9R0AJV	SFP-SX
Xcvr 7	REV 01	740-013111	70191002	SFP-T
MMB 1	REV 06	710-010171	WF4050	MMB-5M3-288mbit
SPMB 0	REV 10	710-003229	JZ1095	T-series Switch CPU
SPMB 1	REV 09	710-003229	HR8670	T-series Switch CPU
SIB 0	REV 05	710-013074	DE7894	SIB-I8-SF
SIB 1	REV 05	710-013074	DE7916	SIB-I8-SF
SIB 2	REV 05	710-013074	DE7890	SIB-I8-SF
SIB 3	REV 05	710-013074	DE7883	SIB-I8-SF
SIB 4	REV 05	710-013074	DE7913	SIB-I8-SF

- Verify that all interfaces in the routing node are up by issuing the `show interfaces terse` command:

```
user@host> show interfaces terse
```

Interface	Admin	Link	Proto	Local	Remote
xe-0/0/0	up	up			
xe-0/0/1	up	down			
xe-0/0/2	up	down			
xe-0/0/3	up	down			
ge-2/0/0	up	down			
ge-2/0/1	up	down			
ge-2/0/2	up	down			
ge-2/0/3	up	down			
ge-2/0/4	up	down			
ge-2/0/5	up	down			
ge-2/0/6	up	down			
ge-2/0/7	up	down			
ge-2/0/8	up	down			
ge-2/0/9	up	down			
ge-2/1/0	up	up			
ge-2/2/0	up	up			
pc-2/3/0	up	up			
pc-2/3/0.16383	up	up	inet	10.0.0.1 10.0.0.6	--> 10.0.0.51 --> 0/0
xe-2/3/0	up	down			
ge-3/0/0	up	up			
pc-3/0/0	up	up			
pc-3/0/0.16383	up	up	inet	10.0.0.1 10.0.0.6	--> 10.0.0.64 --> 0/0
ge-3/0/1	up	up			
ge-3/0/2	up	down			
ge-3/0/3	up	up			
gr-3/1/0	up	up			
ip-3/1/0	up	up			
mt-3/1/0	up	up			
pd-3/1/0	up	up			
pe-3/1/0	up	up			
sp-3/1/0	up	up			
sp-3/1/0.16383	up	up	inet	10.0.0.1	--> 10.0.0.65
vt-3/1/0	up	up			
gr-3/2/0	up	up			
ip-3/2/0	up	up			
mt-3/2/0	up	up			
pd-3/2/0	up	up			
pe-3/2/0	up	up			
sp-3/2/0	up	up			
sp-3/2/0.16383	up	up	inet	10.0.0.1	--> 10.0.0.66
vt-3/2/0	up	up			
so-4/3/0	up	up			
so-4/3/1	up	down			
so-4/3/2	up	down			
so-4/3/3	up	down			
so-5/0/0	up	up			
so-5/1/0	up	up			
so-5/1/1	up	up			
so-5/1/2	up	down			
so-5/1/3	up	down			
ge-7/0/0	up	up			
pc-7/0/0	up	up			
pc-7/0/0.16383	up	up	inet	10.0.0.1 10.0.0.6	--> 10.0.0.128 --> 0/0
ge-7/0/1	up	up			
ge-7/0/2	up	down			
ge-7/0/3	up	up			
ge-7/0/4	up	down			

```

ge-7/0/5          up    down
ge-7/0/6          up    down
ge-7/0/7          up    up
bcm0              up    up
bcm0.0            up    up    inet    10.0.0.4/8
                  up    up    inet6   fe80::200:ff:fe00:4/64
                  up    up    inet6   fec0::a:0:0:4/64
                  up    up    tnp     4

dsc              up    up
em0              up    up
em0.0            up    up    inet    10.0.0.4/8
                  up    up    inet6   fe80::200:1ff:fe00:4/64
                  up    up    inet6   fec0::a:0:0:4/64
                  up    up    tnp     4

fxp0             up    up
fxp0.0           up    up    inet    192.168.168.34/22
gre              up    up
ipip             up    up
lo0              up    up
lo0.0            up    up    inet    10.255.168.34    --> 0/0
                  up    up    inet    127.0.0.1        --> 0/0
                  up    up    iso     47.0005.80ff.f800.0000.0108.0001.0102.5516.8034
                  up    up    inet6   abcd::10:255:168:34
                  up    up    inet6   fe80::2a0:a5ff:fe5e:59f5
lo0.16384        up    up    inet    127.0.0.1        --> 0/0
lo0.16385        up    up    inet
lsi              up    up
mtun             up    up
pimd             up    up
pime             up    up
tap              up    up

```

After you have verified operation, you can install T1600-FPC4s.

## Removing the Upper Front Fan Tray



**NOTE:** Remove the front upper fan tray to make the craft interface easier to replace and to avoid injury and damaging the equipment.

The upper front fan tray is located above the FPC card cage. The fan tray weighs about 18.6 lb (8.4 kg). To remove the upper front fan tray, follow this procedure (see Figure 21 on page 40):


1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis. See “Preventing Electrostatic Discharge Damage” on page 47.
2. Loosen the captive screws on the corners of the fan tray faceplate.
3. Grasp the handles and pull the fan tray halfway out of the chassis.



**WARNING:** To avoid injury, keep tools and your fingers away from the fans as you slide the fan tray out of the chassis. The fans might still be spinning.

4. When the fans stop spinning, place one hand under the fan tray to support it and pull the fan tray completely out of the chassis.

**Figure 21: Removing a Front Fan Tray**

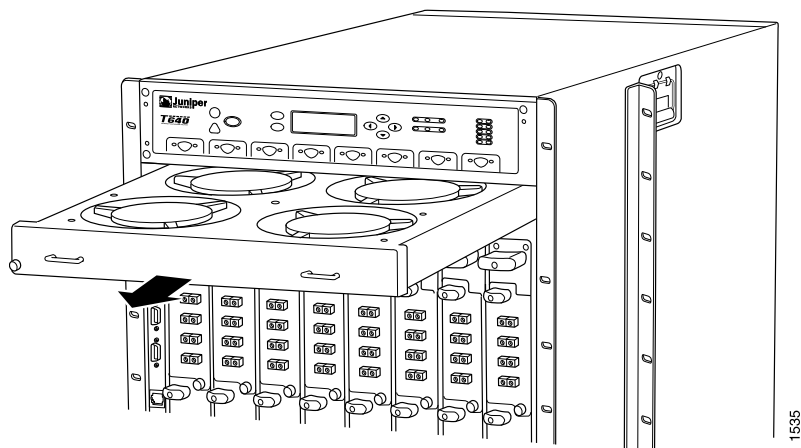

## Replacing the Craft Interface

The craft interface is hot-insertable and hot-removable. When you install the craft interface, allow several minutes for the display to reflect the current state of the T1600 routing node. Before you remove the craft interface, remove the front upper fan tray. For instructions on removing a front fan tray, see “Removing the Upper Front Fan Tray” on page 39

To replace the craft interface, use the following procedures:

- Removing the Craft Interface on page 40
- Installing the Craft Interface on page 41

### Removing the Craft Interface


The craft interface is located on the front of the chassis above the FPC card cage. The craft interface weighs approximately 2 lb (0.9 kg). To remove the craft interface, follow this procedure (see Figure 22 on page 41):

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis. See “Preventing Electrostatic Discharge Damage” on page 47.
2. Completely loosen the screws at the four corners of the craft interface.
3. Insert the blade of a flat-blade screwdriver into the slot on one side of the craft interface, then gently pry that side out from the chassis.



4. Repeat Step 3 for the other side of the craft interface.
5. Grasp the craft interface by the top and bottom edges and carefully pull it straight out of the chassis.

**Figure 22: Removing the Craft Interface**

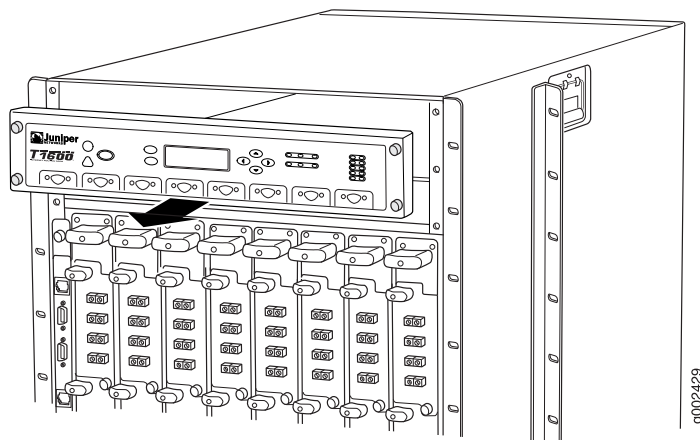

### Installing the Craft Interface


To install the craft interface, follow this procedure (see Figure 23 on page 42):

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis. See “Preventing Electrostatic Discharge Damage” on page 47.
2. Grasping the craft interface by the top and bottom edges, press it into place.
3. Tighten the screws at the corners of the craft interface.



**NOTE:** When you install the craft interface in an operating T1600 routing node, allow several minutes for the LEDs on the craft interface to reflect the current state of the T1600 routing node.

After you install the replacement craft interface, immediately reinstall the upper front fan tray.

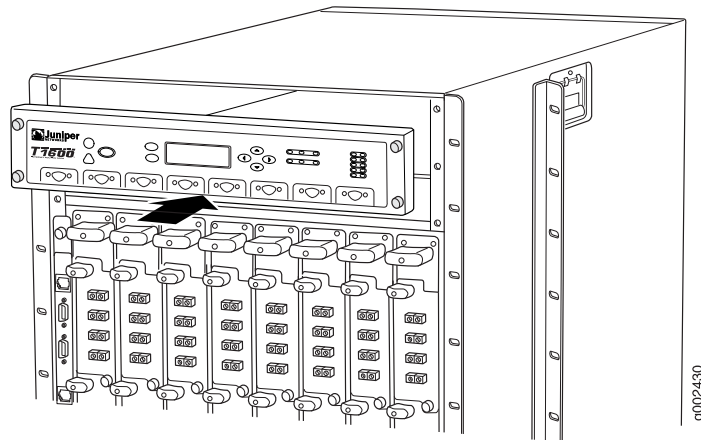
**Figure 23: Installing a Replacement Craft Interface**

g002430

## Installing the Upper Front Fan Tray

To install the upper front fan tray, follow this procedure (see Figure 24 on page 42):

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis. See “Preventing Electrostatic Discharge Damage” on page 47.
2. Grasp the fan tray by its handles and insert it straight into the chassis.
3. Tighten the captive screws on each side of the fan tray faceplate to secure it in the chassis.

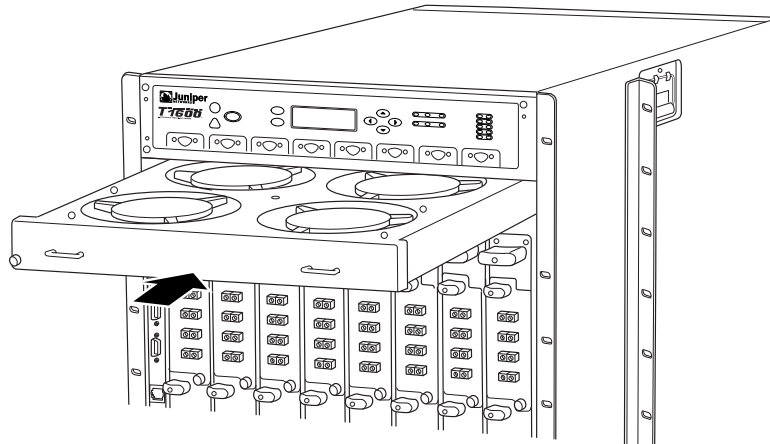**Figure 24: Installing a Front Fan Tray**

g002426

## Attaching the T1600 Agency Label

To attach the T1600 agency label, follow this procedure:

1. Locate the T640 agency label on the side of the chassis.

2. Peel the protective backing off the T1600 agency label.
3. Apply the T1600 agency label on top of the T640 agency label.

## **Registering Your T1600 Upgrade**

---

You must register the T1600 upgrade with Juniper upon completion of the upgrade. To register your upgrade:

1. Log on to the Juniper Customer Support Center at <http://www.juniper.net/customers/support/>.
2. Click on **Update Install Base**.
3. Follow the instructions provided in this link.

After your T600 upgrade is registered, allow up to 45 days for restocking of the new hardware configuration to support any Next Day or Same Day contracts. Juniper Networks will provide Best Effort support until restocking of the upgraded product is complete.

## T1600 Routing Node Environmental Specifications

Table 5 on page 44 specifies the environmental specifications required for normal T1600 routing node operation.

**Table 5: T1600 Routing Node Environmental Specifications**

Description	Value
Altitude	No performance degradation to 10,000 ft (3048 m)
Relative humidity	Normal operation ensured in relative humidity range of 5% to 90%, noncondensing
Temperature	Normal operation ensured in temperature range of 32°F (0°C) to 104°F (40°C)  Nonoperating storage temperature in shipping crate: -40°F (-40°C) to 158°F (70°C)
Seismic	Designed to meet Telcordia Technologies Zone 4 earthquake requirements
Maximum thermal output	28,500 BTU/hour est (8350 W)

**NOTE:** These specifications are estimates and subject to change.

## T1600 Routing Node DC Power Specifications

This section contains specifications for the power system, power supply, and DC power cables.

- Power System Electrical Specifications on page 44
- Three-Input 240-A Power Supply Specifications on page 45
- DC Power Cable Specifications on page 46

### Power System Electrical Specifications

Table 6 on page 45 lists the power system electrical specifications.

**Table 6: Power System Electrical Specifications**

Item	Specification
DC input voltage	<p>Operating range: <math>-40.0</math> to <math>-72</math> VDC</p> <p><b>NOTE:</b> If the input voltage from the DC power source drops below <math>-37.5</math> to <math>-39.5</math> VDC, the routing platform automatically shuts down. During automatic shutdown, the circuit remains active. When the input voltage returns to <math>-43.0</math> to <math>-44.0</math> VDC, the router automatically starts up again and the system returns to normal operation within 30 minutes. No operator intervention is required.</p>
DC system current rating	174 A @ $-48$ VDC (nominal)
DC system input power	8350 W

### Three-Input 240-A Power Supply Specifications

Table 7 on page 45 lists the power supply electrical specifications.

**Table 7: Power Supply Electrical Specifications**

Item	Specification
DC input voltage	<p>Nominal <math>-48</math> VDC, <math>-60</math> VDC Operating range: <math>-40.0</math> to <math>-72.0</math> VDC</p> <p><b>NOTE:</b> If the input voltage from the DC power source drops below <math>-37.5</math> to <math>-39.5</math> VDC, the routing platform automatically shuts down. During automatic shutdown, the circuit remains active. When the input voltage returns to <math>-43.0</math> to <math>-44.00</math> VDC, the router automatically starts up again and the system returns to normal operation within 30 minutes. No operator intervention is required.</p>
Input DC current rating	<p>Input 0: 46 A @ <math>-48</math> VDC (nominal)</p> <p>Input 1: 64 A @ <math>-48</math> VDC (nominal)</p> <p>Input 2: 64 A @ <math>-48</math> VDC (nominal)</p>




**NOTE:** If you plan to operate a maximally configured T1600 routing node, we recommend that you provision at least 64 A @ -48 VDC for each power supply input in the system. Although Input 0 requires less power, we recommend provisioning the same amount of power for each input to avoid the possibility of connecting the lower-powered DC cable to Input 1 or Input 2.

Use a facility circuit breaker rated for 80 A (-48 VDC) minimum for each power supply input. Doing so enables you to operate the T1600 routing node in any configuration without upgrading the power infrastructure. You must provision a circuit breaker for each DC power supply input rated for at least 125% of the continuous current that the system draws at -48 VDC.

## DC Power Cable Specifications

Table 8 on page 46 summarizes the specifications for the DC power cables, which you supply. For two of the inputs on each power supply, use the DC power cables and lugs that were connected to the two-input 160-A power supply. Four additional DC power cables are required. The accessory box shipped with the T1600 upgrade kit includes four cable lugs that attach to the terminal studs of the additional third input on each three-input 240-A power supply (see Figure 25 on page 46).

**Figure 25: DC Power Cable Lug**

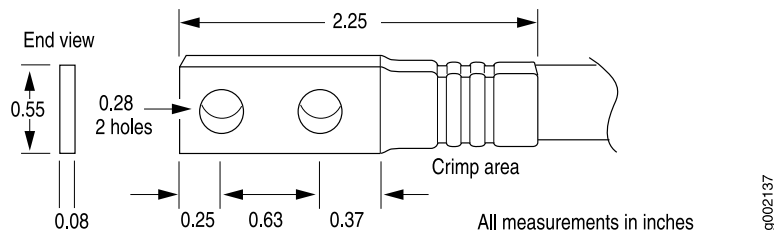

**Table 8: DC Power Cable Specifications**

Cable Type	Quantity and Specification
Power	Four 4-AWG (21.2 mm <sup>2</sup> ), minimum 90°C wire, or as permitted by the local code

## Preventing Electrostatic Discharge Damage

Many T1 600 routing node hardware components are sensitive to damage from static electricity. Some components can be impaired by voltages as low as 30 V. You can easily generate potentially damaging static voltages whenever you handle plastic or foam packing material or if you move components across plastic or carpets. Observe the following guidelines to minimize the potential for electrostatic discharge (ESD) damage, which can cause intermittent or complete component failures:


- Always use an ESD wrist strap or ankle strap, and verify that it is in direct contact with your skin.



**CAUTION:** For safety, periodically check the resistance value of the ESD strap. The measurement should be in the range of 1 to 10 Mohms.

- When handling any component that is removed from the chassis, verify that the equipment end of your ESD strap is attached to one of the ESD points on the chassis, which are shown in Figure 1 on page 4 and Figure 2 on page 5.
- Avoid contact between the component and your clothing. ESD voltages emitted from clothing can still damage components.
- When removing or installing a component, always place it component-side up on an antistatic surface, in an antistatic card rack, or in an electrostatic bag (see Figure 26 on page 47). If you are returning a component, place it in an electrostatic bag before packing it.

**Figure 26: Placing a Component into an Electrostatic Bag**

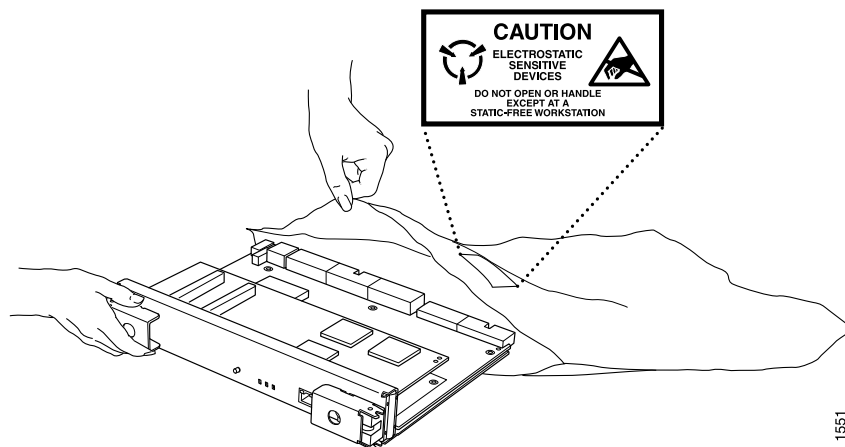

1551

## List of Technical Publications

Table 9 on page 48 lists the software and hardware guides and release notes for Juniper Networks J-series, M-series, MX-series, and T-series routing platforms and describes the contents of each document. Table 10 on page 52 lists the books included in the *Network Operations Guide* series. Table 11 on page 53 lists the manuals and release notes supporting JUNOS software with enhanced services. All documents are available at <http://www.juniper.net/techpubs/>.

Table 12 on page 54 lists additional books on Juniper Networks solutions that you can order through your bookstore. A complete list of such books is available at <http://www.juniper.net/books>.

**Table 9: Technical Documentation for Supported Routing Platforms**

Book	Description
<b>JUNOS Software for Supported Routing Platforms</b>	
<i>Access Privilege</i>	Explains how to configure access privileges in user classes by using permission flags and regular expressions. Lists the permission flags along with their associated command-line interface (CLI) operational mode commands and configuration statements.
<i>Class of Service</i>	Provides an overview of the class-of-service (CoS) functions of the JUNOS software and describes how to configure CoS features, including configuring multiple forwarding classes for transmitting packets, defining which packets are placed into each output queue, scheduling the transmission service level for each queue, and managing congestion through the random early detection (RED) algorithm.
<i>CLI User Guide</i>	Describes how to use the JUNOS command-line interface (CLI) to configure, monitor, and manage Juniper Networks routing platforms. This material was formerly covered in the <i>JUNOS System Basics Configuration Guide</i> .
<i>Feature Guide</i>	Provides a detailed explanation and configuration examples for several of the most complex features in the JUNOS software.
<i>High Availability</i>	Provides an overview of hardware and software resources that ensure a high level of continuous routing platform operation and describes how to configure high availability (HA) features such as nonstop active routing (NSR) and graceful Routing Engine switchover (GRES).
<i>MPLS Applications</i>	Provides an overview of traffic engineering concepts and describes how to configure traffic engineering protocols.
<i>Multicast Protocols</i>	Provides an overview of multicast concepts and describes how to configure multicast routing protocols.
<i>Multiplay Solutions</i>	Describes how you can deploy IPTV and voice over IP (VoIP) services in your network.



**Table 9: Technical Documentation for Supported Routing Platforms (continued)**

Book	Description
<i>MX-series Solutions Guide</i>	Describes common configuration scenarios for the Layer 2 features supported on the MX-series routers, including basic bridged VLANs with normalized VLAN tags, aggregated Ethernet links, bridge domains, Multiple Spanning Tree Protocol (MSTP), and integrated routing and bridging (IRB).
<i>Network Interfaces</i>	Provides an overview of the network interface functions of the JUNOS software and describes how to configure the network interfaces on the routing platform.
<i>Network Management</i>	Provides an overview of network management concepts and describes how to configure various network management features, such as SNMP and accounting options.
<i>Policy Framework</i>	Provides an overview of policy concepts and describes how to configure routing policy, firewall filters, and forwarding options.
<i>Protected System Domain</i>	Provides an overview of the JCS 1200 platform and the concept of Protected System Domains (PSDs). The JCS 1200 platform, which contains up to six redundant pairs of Routing Engines running JUNOS software, is connected to a T320 router or to a T640 or T1600 routing node. To configure a PSD, you assign any number of Flexible PIC concentrators (FPCs) in the T-series routing platform to a pair of Routing Engines on the JCS 1200 platform. Each PSD has the same capabilities and functionality as a physical router, with its own control plane, forwarding plane, and administration.
<i>Routing Protocols</i>	Provides an overview of routing concepts and describes how to configure routing, routing instances, and unicast routing protocols.
<i>Secure Configuration Guide for Common Criteria and JUNOS-FIPS</i>	Provides an overview of secure Common Criteria and JUNOS-FIPS protocols for the JUNOS software and describes how to install and configure secure Common Criteria and JUNOS-FIPS on a routing platform.
<i>Services Interfaces</i>	Provides an overview of the services interfaces functions of the JUNOS software and describes how to configure the services interfaces on the router.
<i>Software Installation and Upgrade Guide</i>	Describes the JUNOS software components and packaging and explains how to initially configure, reinstall, and upgrade the JUNOS system software. This material was formerly covered in the <i>JUNOS System Basics Configuration Guide</i> .
<i>System Basics</i>	Describes Juniper Networks routing platforms and explains how to configure basic system parameters, supported protocols and software processes, authentication, and a variety of utilities for managing your router on the network.
<i>VPNs</i>	Provides an overview and describes how to configure Layer 2 and Layer 3 virtual private networks (VPNs), virtual private LAN service (VPLS), and Layer 2 circuits. Provides configuration examples.
<b>JUNOS References</b>	

**Table 9: Technical Documentation for Supported Routing Platforms (continued)**

Book	Description
<i>Hierarchy and RFC Reference</i>	Describes the JUNOS configuration mode commands. Provides a hierarchy reference that displays each level of a configuration hierarchy, and includes all possible configuration statements that can be used at that level. This material was formerly covered in the <i>JUNOS System Basics Configuration Guide</i> .
<i>Interfaces Command Reference</i>	Describes the JUNOS software operational mode commands you use to monitor and troubleshoot interfaces.
<i>Routing Protocols and Policies Command Reference</i>	Describes the JUNOS software operational mode commands you use to monitor and troubleshoot routing policies and protocols, including firewall filters.
<i>System Basics and Services Command Reference</i>	Describes the JUNOS software operational mode commands you use to monitor and troubleshoot system basics, including commands for real-time monitoring and route (or path) tracing, system software management, and chassis management. Also describes commands for monitoring and troubleshooting services such as class of service (CoS), IP Security (IPSec), stateful firewalls, flow collection, and flow monitoring.
<i>System Log Messages Reference</i>	Describes how to access and interpret system log messages generated by JUNOS software modules and provides a reference page for each message.
<b>J-Web User Guide</b>	
<i>J-Web Interface User Guide</i>	Describes how to use the J-Web graphical user interface (GUI) to configure, monitor, and manage Juniper Networks routing platforms.
<b>JUNOS API and Scripting Documentation</b>	
<i>JUNOScript API Guide</i>	Describes how to use the JUNOScript application programming interface (API) to monitor and configure Juniper Networks routing platforms.
<i>JUNOS XML API Configuration Reference</i>	Provides reference pages for the configuration tag elements in the JUNOS XML API.
<i>JUNOS XML API Operational Reference</i>	Provides reference pages for the operational tag elements in the JUNOS XML API.
<i>NETCONF API Guide</i>	Describes how to use the NETCONF API to monitor and configure Juniper Networks routing platforms.
<i>JUNOS Configuration and Diagnostic Automation Guide</i>	Describes how to use the commit script and self-diagnosis features of the JUNOS software. This guide explains how to enforce custom configuration rules defined in scripts, how to use commit script macros to provide simplified aliases for frequently used configuration statements, and how to configure diagnostic event policies.
<b>Hardware Documentation</b>	

**Table 9: Technical Documentation for Supported Routing Platforms** (continued)

<b>Book</b>	<b>Description</b>
<i>Hardware Guide</i>	Describes how to install, maintain, and troubleshoot routing platforms and components. Each platform has its own hardware guide.
<i>PIC Guide</i>	Describes the routing platform's Physical Interface Cards (PICs). Each platform has its own PIC guide.
<i>DPC Guide</i>	Describes the Dense Port Concentrators (DPCs) for all MX-series routers.
<b>JUNOScope Documentation</b>	
<i>JUNOScope Software User Guide</i>	Describes the JUNOScope software graphical user interface (GUI), how to install and administer the software, and how to use the software to manage routing platform configuration files and monitor routing platform operations.
<b>Advanced Insight Solutions (AIS) Documentation</b>	
<i>Advanced Insight Solutions Guide</i>	Describes the Advanced Insight Manager (AIM) application, which provides a gateway between JUNOS devices and Juniper Support Systems (JSS) for case management and intelligence updates. Explains how to run AI scripts on Juniper Networks devices.
<b>J-series Routing Platform Documentation</b>	
<i>Getting Started Guide</i>	Provides an overview, basic instructions, and specifications for J-series routing platforms. The guide explains how to prepare your site for installation, unpack and install the router and its components, install licenses, and establish basic connectivity. Use the <i>Getting Started Guide</i> for your router model.
<i>Basic LAN and WAN Access Configuration Guide</i>	Explains how to configure the interfaces on J-series Services Routers for basic IP routing with standard routing protocols, ISDN backup, and digital subscriber line (DSL) connections.
<i>Advanced WAN Access Configuration Guide</i>	Explains how to configure J-series Services Routers in virtual private networks (VPNs) and multicast networks, configure data link switching (DLSw) services, and apply routing techniques such as policies, stateless and stateful firewall filters, IP Security (IPSec) tunnels, and class-of-service (CoS) classification for safer, more efficient routing.
<i>Administration Guide</i>	Shows how to manage users and operations, monitor network performance, upgrade software, and diagnose common problems on J-series Services Routers.
<b>Release Notes</b>	
<i>JUNOS Release Notes</i>	Summarize new features and known problems for a particular software release, provide corrections and updates to published JUNOS, JUNOScript, and NETCONF manuals, provide information that might have been omitted from the manuals, and describe upgrade and downgrade procedures.
<i>Hardware Release Notes</i>	Describe the available documentation for the routing platform and summarize known problems with the hardware and accompanying software. Each platform has its own release notes.

**Table 9: Technical Documentation for Supported Routing Platforms** (continued)

Book	Description
<i>JUNOScope Release Notes</i>	Contain corrections and updates to the published JUNOScope manual, provide information that might have been omitted from the manual, and describe upgrade and downgrade procedures.
<i>AIS Release Notes</i>	Summarize AIS new features and guidelines, identify known and resolved problems, provide information that might have been omitted from the manuals, and provide initial setup, upgrade, and downgrade procedures.
<i>AIS AI Script Release Notes</i>	Summarize AI Scripts new features, identify known and resolved problems, provide information that might have been omitted from the manuals, and provide instructions for automatic and manual installation, including deleting and rolling back.
<i>J-series Services Router Release Notes</i>	Briefly describe Services Router features, identify known hardware problems, and provide upgrade and downgrade instructions.

**Table 10: JUNOS Software Network Operations Guides**

Book	Description
<i>Baseline</i>	Describes the most basic tasks for running a network using Juniper Networks products. Tasks include upgrading and reinstalling JUNOS software, gathering basic system management information, verifying your network topology, and searching log messages.
<i>Interfaces</i>	Describes tasks for monitoring interfaces. Tasks include using loopback testing and locating alarms.
<i>MPLS</i>	Describes tasks for configuring, monitoring, and troubleshooting an example MPLS network. Tasks include verifying the correct configuration of the MPLS and RSVP protocols, displaying the status and statistics of MPLS running on all routing platforms in the network, and using the layered MPLS troubleshooting model to investigate problems with an MPLS network.
<i>MPLS Log Reference</i>	Describes MPLS status and error messages that appear in the output of the <code>show mpls lsp extensive</code> command. The guide also describes how and when to configure Constrained Shortest Path First (CSPF) and RSVP trace options, and how to examine a CSPF or RSVP failure in a sample network.
<i>MPLS Fast Reroute</i>	Describes operational information helpful in monitoring and troubleshooting an MPLS network configured with fast reroute (FRR) and load balancing.
<i>Hardware</i>	Describes tasks for monitoring M-series and T-series routing platforms.

To configure and operate a J-series Services Router running JUNOS software with enhanced services, you must also use the configuration statements and operational

mode commands documented in JUNOS configuration guides and command references. To configure and operate a WX Integrated Services Module, you must also use WX documentation.

**Table 11: JUNOS Software with Enhanced Services Documentation**

Book	Description
<i>JUNOS Software with Enhanced Services Design and Implementation Guide</i>	Provides guidelines and examples for designing and implementing IP Security (IPSec) virtual private networks (VPNs), firewalls, and routing on J-series routers running JUNOS software with enhanced services.
<i>JUNOS Software with Enhanced Services J-series Services Router Quick Start</i>	Explains how to quickly set up a J-series router. This document contains router declarations of conformity.
<i>JUNOS Software with Enhanced Services J-series Services Router Getting Started Guide</i>	Provides an overview, basic instructions, and specifications for J-series Services Routers. This guide explains how to prepare a site, unpack and install the router, replace router hardware, and establish basic router connectivity. This guide contains hardware descriptions and specifications.
<i>JUNOS Software with Enhanced Services Migration Guide</i>	Provides instructions for migrating an SSG device running ScreenOS software or a J-series router running the JUNOS software to JUNOS software with enhanced services.
<i>JUNOS Software with Enhanced Services Interfaces and Routing Configuration Guide</i>	Explains how to configure J-series router interfaces for basic IP routing with standard routing protocols, ISDN service, firewall filters (access control lists), and class-of-service (CoS) traffic classification.
<i>JUNOS Software with Enhanced Services Security Configuration Guide</i>	Explains how to configure and manage security services such as stateful firewall policies, IPSec VPNs, firewall screens, Network Address translation (NAT) and Router interface modes, Public Key Cryptography, and Application Layer Gateways (ALGs).
<i>JUNOS Software with Enhanced Services Administration Guide</i>	Shows how to monitor the router and routing operations, firewall and security services, system alarms and events, and network performance. This guide also shows how to administer user authentication and access, upgrade software, and diagnose common problems.
<i>JUNOS Software with Enhanced Services CLI Reference</i>	Provides the complete JUNOS software with enhanced services configuration hierarchy and describes the configuration statements and operational mode commands not documented in the standard JUNOS manuals.
<i>WXC Integrated Services Module Installation and Configuration Guide</i>	Explains how to install and initially configure a WXC Integrated Services Module in a J-series router for application acceleration.
<i>JUNOS Software with Enhanced Services Release Notes</i>	Summarize new features and known problems for a particular release of JUNOS software with enhanced services on J-series routers, including J-Web interface features and problems. The release notes also contain corrections and updates to the manuals and software upgrade and downgrade instructions for JUNOS software with enhanced services.

**Table 12: Additional Books Available Through <http://www.juniper.net/books>**

Book	Description
<i>Interdomain Multicast Routing</i>	Provides background and in-depth analysis of multicast routing using Protocol Independent Multicast sparse mode (PIM SM) and Multicast Source Discovery Protocol (MSDP); details any-source and source-specific multicast delivery models; explores multiprotocol BGP (MBGP) and multicast IS-IS; explains Internet Gateway Management Protocol (IGMP) versions 1, 2, and 3; lists packet formats for IGMP, PIM, and MSDP; and provides a complete glossary of multicast terms.
<i>JUNOS Cookbook</i>	Provides detailed examples of common JUNOS software configuration tasks, such as basic router configuration and file management, security and access control, logging, routing policy, firewalls, routing protocols, MPLS, and VPNs.
<i>MPLS-Enabled Applications</i>	Provides an overview of Multiprotocol Label Switching (MPLS) applications (such as Layer 3 virtual private networks [VPNs], Layer 2 VPNs, virtual private LAN service [VPLS], and pseudowires), explains how to apply MPLS, examines the scaling requirements of equipment at different points in the network, and covers the following topics: point-to-multipoint label switched paths (LSPs), DiffServ-aware traffic engineering, class of service, interdomain traffic engineering, path computation, route target filtering, multicast support for Layer 3 VPNs, and management and troubleshooting of MPLS networks.
<i>OSPF and IS-IS: Choosing an IGP for Large-Scale Networks</i>	Explores the full range of characteristics and capabilities for the two major link-state routing protocols: Open Shortest Path First (OSPF) and IS-IS. Explains architecture, packet types, and addressing; demonstrates how to improve scalability; shows how to design large-scale networks for maximum security and reliability; details protocol extensions for MPLS-based traffic engineering, IPv6, and multitopology routing; and covers troubleshooting for OSPF and IS-IS networks.
<i>Routing Policy and Protocols for Multivendor IP Networks</i>	Provides a brief history of the Internet, explains IP addressing and routing (Routing Information Protocol [RIP], OSPF, IS-IS, and Border Gateway Protocol [BGP]), explores ISP peering and routing policies, and displays configurations for both Juniper Networks and other vendors' routers.
<i>The Complete IS-IS Protocol</i>	Provides the insight and practical solutions necessary to understand the IS-IS protocol and how it works by using a multivendor, real-world approach.

## Documentation Feedback

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation. You can send your comments to [techpubs-comments@juniper.net](mailto:techpubs-comments@juniper.net), or fill out the documentation feedback form at <http://www.juniper.net/techpubs/docbug/docbugreport.html>. If you are using e-mail, be sure to include the following information with your comments:

- Document name
- Document part number
- Page number
- Software release version (not required for *Network Operations Guides [NOGs]*)

## Requesting Technical Support

---

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or JNASC support contract, or are covered under warranty, and need postsales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the JTAC User Guide located at <http://www.juniper.net/customers/support/downloads/710059.pdf>.
- Product warranties—For product warranty information, visit <http://www.juniper.net/support/warranty/>.
- JTAC Hours of Operation —The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

### Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <http://www.juniper.net/customers/support/>
- Search for known bugs: <http://www2.juniper.net/kb/>
- Find product documentation: <http://www.juniper.net/techpubs/>
- Find solutions and answer questions using our Knowledge Base: <http://kb.juniper.net/>
- Download the latest versions of software and review release notes: <http://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications: <https://www.juniper.net/alerts/>
- Join and participate in the Juniper Networks Community Forum: <http://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Manager: <http://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool located at <https://tools.juniper.net/SerialNumberEntitlementSearch/>.

### Opening a Case with JTAC

You can open a case with JTAC on the Web or by telephone.

- Use the Case Manager tool in the CSC at <http://www.juniper.net/cm/> .
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, visit us at <http://www.juniper.net/support/requesting-support.html>.

## Revision History

---

28 April 2008—530-021924-01. Revision 2. Minor updates.

19 October 2007—530-021924-01. Revision 1.

Copyright © 2008, Juniper Networks, Inc. All rights reserved.

Juniper Networks, the Juniper Networks logo, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. JUNOS and JUNOSe are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Products made or sold by Juniper Networks or components thereof might be covered by one or more of the following patents that are owned by or licensed to Juniper Networks: U.S. Patent Nos. 5,473,599, 5,905,725, 5,909,440, 6,192,051, 6,333,650, 6,359,479, 6,406,312, 6,429,706, 6,459,579, 6,493,347, 6,538,518, 6,538,899, 6,552,918, 6,567,902, 6,578,186, and 6,590,785.