
HANNSpree Quick Start Guide


DT02-10H1 9.6" Liquid Crystal Display TV

This guide is designed as a reference to help you start using your LCD TV quickly. Please refer to the User's Manual for more detailed installation and safety instructions.

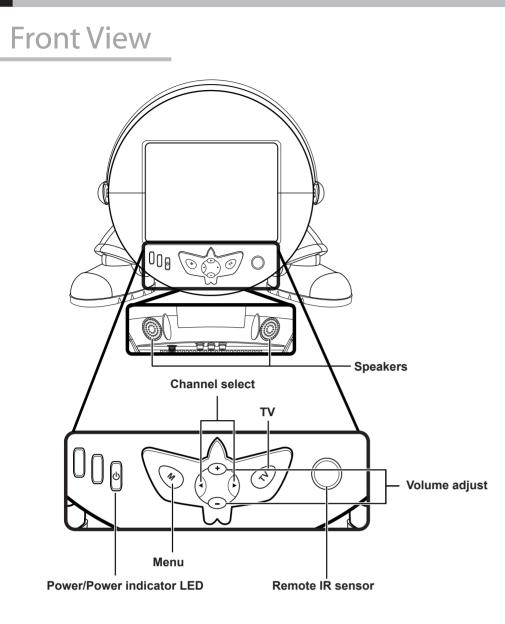


Making Connections

Connecting to Antenna/Cable TV

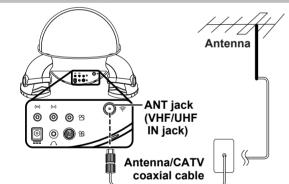


- Connect one end of the VHF/UHF (Antenna) or CATV cable to ANT Jack (VHF/UHF IN Jack) on the back of the TV.
- Connect the other end of the VHF/UHF (Antenna) or CATV cable to the Antenna or CATV socket.

Connecting to a VCR, VCD, DVD Player, or Video Game Console

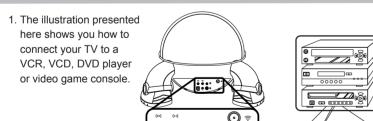

2. The cables are color-coded (black, red, white, yellow). Connect each color-VCD coded cable to DVD the appropriate connector on your device

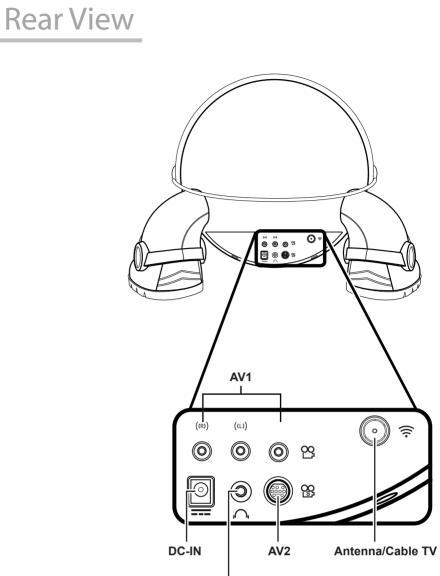



Headphone jack


A/V and Channel Setup

Selecting A/V Sources

 
- Make sure your TV is turned on and a device such as a DVD player is connected.
- Press the SOURCE button on the control panel to select different source signals.
 TV channel number, AV1, AV2 or AV2s appear on the screen.

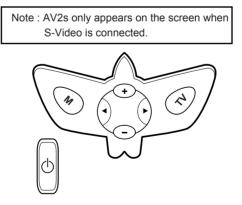

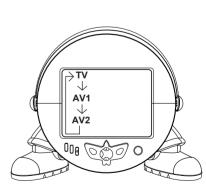



Connecting the Power Adapter

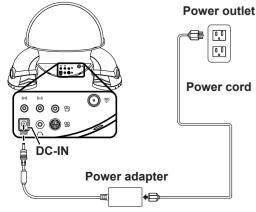

- 1. Connect the power cord to the power adapter as illustrated.
- 2. Plug the power adapter connector into the DC-IN input jack on the rear panel of the TV.
- Insert the three-pronged plug at the other end of the power cord into a power outlet.

Note : Images are for illustration only and may vary by model or region.

Auto Channel Setup

Please follow the instructions by using the control panel.

1. Press the **MENU** button to enter the OSD menu.

2. Use the CH button to select "TV".


3. Press the **VOL +** button to enter the TV setting.

4. Press the CH ◀ button until the "Auto Program" feature is selected.

5. Press the VOL + button to begin "Auto Program".

6. Your television will begin automatically memorizing the available channels.

Auto Program

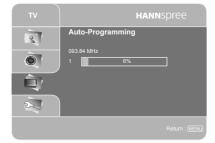

© Copyright 2005, Hannspree, Inc. All rights reserved.