

Barcode: 690 5017 10 000 3 00069



# SLOW COOKER

Model Number:  
169143  
UPC: 0681131691437

## Customer Assistance

1 877 207 0923 (US)  
1 877 556 0973 (Canada)



## Thank you for purchasing a small GE appliance.

In keeping with the GE ecomagination initiative, please consider the option to recycle the packaging material and donate the appliance you are no longer using.

To read more about GE's ecomagination commitment, visit:  
[ge.ecomagination.com](http://ge.ecomagination.com)

Client: Midea (Wal\*Mart)  
Project: 169143  
Language: EN (US)

Date: 11.07.2007  
Version: 04  
Page: 1 (of 10 pages)

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to prevent the risk of fire, electric shock, burns, or other injuries or damages.

- **Read all instructions before use.**
- Do not touch hot surfaces. Use handles or knobs. Always use pot holders when removing the glass lid, ceramic pot or moving the base unit.
- To protect against electrical shock do not immerse cord, plugs, or the base unit in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow it to cool before putting on or taking off parts.
- Do not operate appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Call our toll-free customer assistance number for information on examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors or in a damp area.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids. Do not move during operation.
- To disconnect, turn every control to "off", then remove plug from the wall outlet.
- Do not use this appliance for anything other than its intended use.
- Always leave the glass lid on the slow cooker when cooking.
- To avoid damage or electrical shock, do not fill any liquids into the base unit. Never use appliance without the ceramic pot.
- The supplied ceramic pot is only suitable for use with the base unit. Do not set the hot ceramic pot on a not heat-resistant surface. The surface may be damaged.
- This appliance has a non-metallic pot. Avoid sudden temperature changes, such as adding refrigerated foods into a heated pot.
- This product is for household use only.

## SAVE THESE INSTRUCTIONS!

## ADDITIONAL SAFEGUARDS

This appliance is for **HOUSEHOLD USE ONLY**.

**DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE, OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.**

### Extension cord use

 
A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply cord or extension cord is used,


- 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and
- 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

### Polarized plug










This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

## PARTS

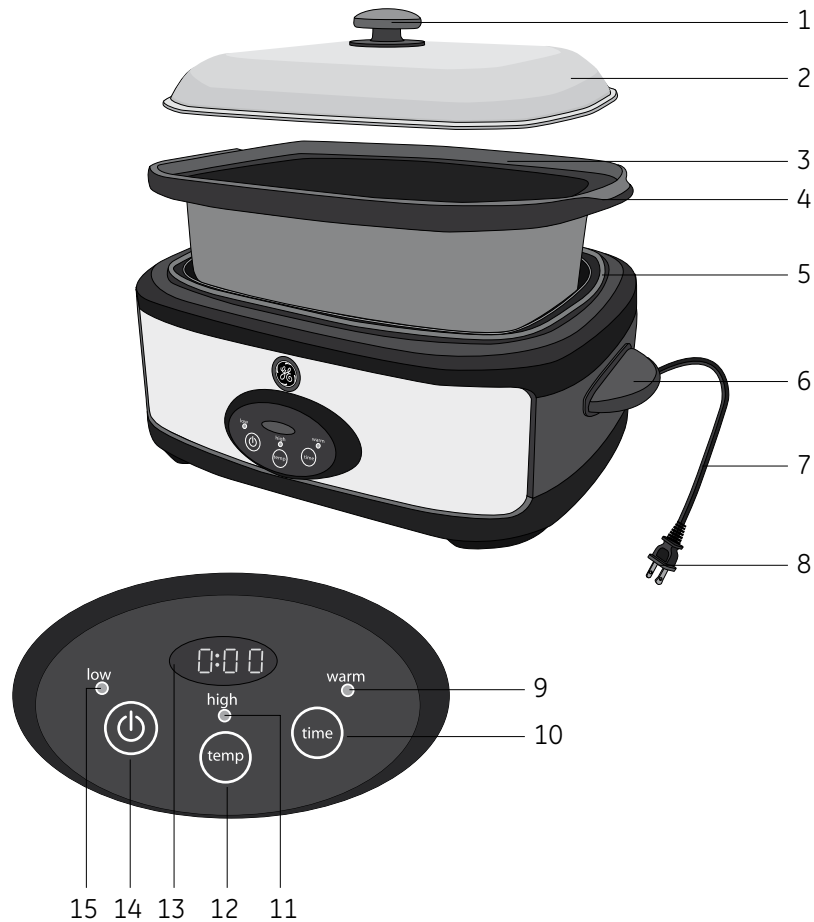

- |                       |  |
|-----------------------|--|
| 1. Knob               | 9. <b>warm</b> indicator   |
| 2. Glass lid          | 10. <b>time</b> button   |
| 3. Ceramic pot        | 11. <b>high</b> indicator  |
| 4. Ceramic pot handle | 12. <b>temp</b> button   |
| 5. Base unit          | 13. Display  |
| 6. Base unit handle   | 14. Power button  |
| 7. Power cord         | 15. <b>low</b> indicator   |
| 8. Polarized plug     |  |

# ILLUSTRATIONS

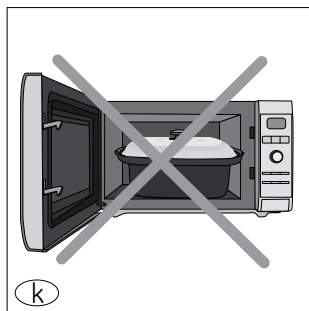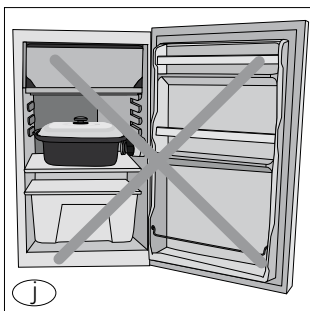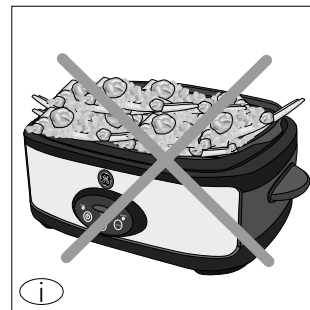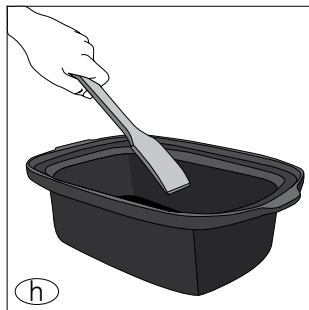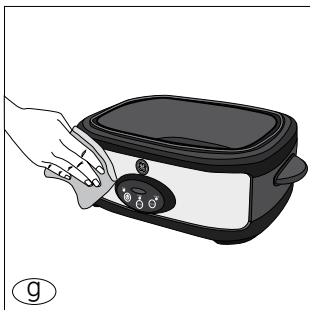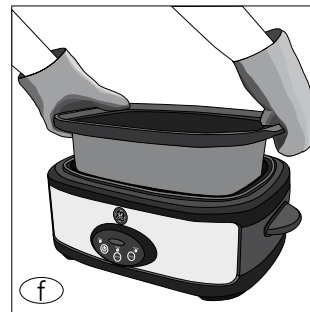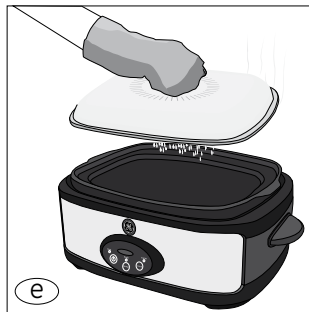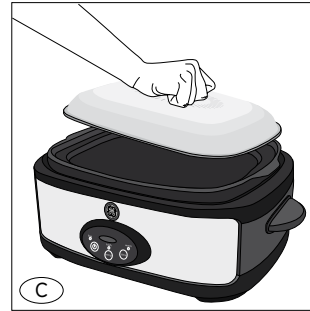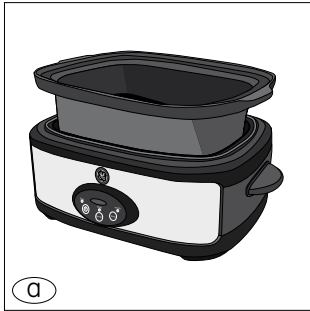         

# OPERATION

## Before first use

- Unpack the slow cooker and remove all packaging material. Carefully unpack the ceramic pot **(3)**.
- Clean the glass lid **(2)**, ceramic pot **(3)** and base unit **(5)** (↳ *Cleaning*).

**NOTE:** For the first use, fill the ceramic pot **(3)** with 3 cups of water and run the slow cooker for 30 minutes. Due to the manufacturing process, the slow cooker may emit a slight odor during first use.

## Assembly

- Place the base unit **(5)** on a stable and dry surface.
- Put the ceramic pot **(3)** into the base unit **(5)** (ill. **(a)**).
- Fill food into the ceramic pot **(3)** (ill. **(b)**) and cover with the glass lid **(2)** (ill. **(c)**).

## Operating instructions

The slow cooker is intended for cooking food at low temperatures for a long time. If the temperature is set to high, the slow cooker works like a pot on a burner. Do not leave the slow cooker unattended while heating.

- Prepare a recipe suitable for slow cooking.
- Place the prepared food in the ceramic pot **(3)** (ill. **(b)**) (↳ *Tips & Tricks*).
- Do not fill the ceramic pot **(3)** to the brim (ill. **(i)**).
- Connect the power plug **(8)** to an energized wall outlet. The display **(13)** flashes **----**.
- **Setting the temperature:** Press **temp (12)** repeatedly to choose the desired cook setting.

Press temp	Setting
1 time	<b>low</b> (slow cooking)
2 times	<b>high</b> (faster cooking)
3 times	<b>warm</b> (↳ <i>Warm setting</i> )

- **Setting the cooking time:** Press **time (10)** repeatedly to increase the cooking time in 30-minute steps. The cooking time can be set from 30 minutes to 8 hours.
- Press **power button (14)** to start cooking. The display **(13)** shows a countdown of the programmed cooking time. The indicator light for the selected setting (**low (15)** or **high (11)**) lights up.

## OPERATION

- Do not lift the glass lid **(2)** during the cooking process. If steam escapes the cooking time increases. Always grasp the glass lid with pot holders using the knob **(1)** (*ill.* **(d)**).
- After the programmed cooking time is finished, the slow cooker will automatically switch to standby mode for 10 minutes. The display **(13)** shows the countdown timer starting with 10 minutes and the indicator light **warm (9)** flashes.
- When the countdown timer reaches **0:00**, the slow cooker will switch to warm mode. The initial warming time of 8 hours is shown on the display **(13)**. The indicator light **warm (9)** is continuously displayed.
- Press **power button (14)** to stop the cooking process at any time. The slow cooker will switch to standby mode. The display **(13)** flashes **----**.
- Disconnect the slow cooker from the wall outlet.
- After the cooking process is finished, use pot holders to grasp the ceramic pot handles **(4)** to remove the ceramic pot **(3)** from the base unit **(5)** (*ill.* **(f)**).
- Wait for the slow cooker to cool down before grasping the base unit handles **(6)** with pot holders.

**NOTE:** Cooking time may differ due to factors like room temperature or amount of food in the ceramic pot. The cooking time can be adjusted any time.

**CAUTION:** When lifting the glass lid **(2)** hot steam may cause serious injuries. Always lift the glass lid in a way that the steam is diverted away from you. Let the condensed hot water drip into the pot (*ill.* **(e)**).

**WARNING:** Do not fill liquids or food into the base unit **(5)** (*ill.* **(1)**).



### Warm setting

Use the warm setting to keep food warm for up to 8 hours.

- Press **temp (12)** to select the warm mode. The indicator light **warm (9)** lights up. Press **time (10)** to set the desired time the food should be kept warm.
- Put cooked food into the ceramic pot **(3)**. Place the ceramic pot into the base unit.
- Press **power button (14)** to start warm mode. The slow cooker will keep the food warm for the selected time.
- Press **power button (14)** to stop warm mode.

## OPERATION

### Notes on the ceramic pot

- Only fill the warm food into the ceramic pot **(3)**, when it is at room temperature. The ceramic pot **(3)** may be damaged if the temperature changes rapidly.
- Ceramic is a material sensitive to temperature changes. Never let the temperature in the pot rise or fall rapidly. This will result in the pot being damaged or destroyed.
- Do not put the pot in a refrigerator to store food. Reheating a cold pot may damage or destroy your appliance (ill. ).
- Do not place hot food in the pot when it is cold or cold food when the pot is hot.
- Do not put the pot under cold water if still hot.
- Do not hit the pot against hard surfaces or faucets.
- Do not use the pot if it is chipped, cracked or otherwise damaged.
- Do not put the pot or lid into a microwave oven (ill. .

## TIPS & TRICKS

- During slow cooking liquids do not boil away. Begin with a small amount of liquid and add more during the cooking process when needed. If there is too much liquid at the end of the cooking process, set the slow cooker to **high**. Cook on this setting to reduce the liquid.
- For better flavor do not crush or ground herbs and spices.
- If cooking on **low** setting, some recipes may require 8 hours.
- Meats with a high percentage of fat can influence the flavor of the dish. Browning or pre-cooking can reduce the fat.
- Cut food into smaller pieces. They will cook faster than food left whole.
- Some vegetables require a longer cooking time. Place vegetables like potatoes, carrots or beets on the bottom of the ceramic pot. Cover with liquid.
- Add pre-cooked rice or pasta only at the end of the cooking process.



## CLEANING

Clean the slow cooker after every use. This appliance contains no user serviceable parts and requires little maintenance. Leave any servicing or repairs to qualified personnel.

- Always let the base unit **(5)**, ceramic pot **(3)** and glass lid **(2)** cool down completely before cleaning.
- The ceramic pot **(3)** and the glass lid **(2)** can be hand washed with warm and soapy water or be cleaned with dishwasher.
- Should food stick to the surface of the ceramic pot **(3)**, fill pot with warm soapy water and let soak before cleaning. Use a sponge or rubber scraper to remove sticky food remains (ill. **(h)**).
- Do not use scouring pads or abrasive cleaners. As they might damage the surface of the ceramic pot **(3)** or scratch the surface of the glass lid **(2)**.
- Use a soft damp cloth to wipe the inside and outer parts of the base unit **(5)** (ill. **(g)**).

**DANGER:** Do not immerse the base unit **(5)**, power cord **(7)** or power plug **(8)** in water or other liquids.

## TROUBLESHOOTING

Problem	Solution
Slow cooker not working.	Check power connection. The power plug <b>(8)</b> should be inserted properly in the outlet.
Slow cooker not heating.	Check if the slow cooker is in standby mode. Press <b>power button (14)</b> to activate the slow cooker.

If additional assistance is needed, please contact our Customer Assistance at 1.877.207.0923 (U.S.) or 1.877.556.0973 (Canada).

## TECHNICAL DATA

Rated voltage: 120V ~60Hz  
Rated current: 3 A  
Rated power input: 260W

## CUSTOMER ASSISTANCE

If you have a claim under this warranty, please call our Customer Assistance Number. For faster service, please have the model number and product name ready for the operator to assist you. This number can be found on the bottom of your appliance and on the front page of this manual.

**Model Number:** \_\_\_\_\_ **Product Name:** \_\_\_\_\_

Customer Assistance Number 1.877.207.0923 (U.S.) or 1.877.556.0973 (Canada).

Keep these numbers for future reference!

For more information, please visit us at [WWW.GEHOUSEWARES.COM](http://WWW.GEHOUSEWARES.COM)

### Two-year limited warranty

#### What does your warranty cover?

- Any defect in material or workmanship.

#### For how long after the original purchase?

- Two years.

#### What will we do?

- Provide you with a new one.
- For those items still under warranty but no longer available, WAL-MART reserves the right to replace with a similar GE branded product of equal or greater value.

#### How do you make a warranty claim?

- Save your receipt.
- Properly pack your unit. We recommend using the original carton and packing materials.
- Return the product to your nearest WAL-MART store or call Customer Assistance at 1-877-207-0923 (U.S.) or 1-877-556-0973 (Canada).

#### What does your warranty not cover?

- Parts subject to wear, including, without limitation, glass parts, glass containers, cutter/strainer, blades, seals, gaskets, clutches, motor brushes, and/or agitators, etc.
- Commercial use or any other use not found in printed directions.
- Damage from misuse, abuse, or neglect, including failure to clean

product regularly in accordance with manufacturer's instructions.

#### How does state law relate to this warranty?

- This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.
- This warranty is in lieu of any other warranty or condition, whether express or implied, written or oral, including, without limitation, any statutory warranty or condition of merchantability or fitness for a particular purpose.
- WAL-MART, GE and the product manufacturer expressly disclaim all responsibility for special, incidental, and consequential damages or losses caused by use of this appliance. Any liability is expressly limited to an amount equal to the purchase price paid whether a claim, however instituted, is based on contract, indemnity, warranty, tort (including negligence), strict liability, or otherwise. Some states or provinces do not allow this exclusion or limitation of incidental or consequential losses, so the foregoing disclaimer may not apply to you.

#### What if you encounter a problem with this product while using it outside the country of purchase?

- The warranty is valid only in the country of purchase and if you follow the warranty claim procedure as noted.



is a trademark of General Electric Company and is used under the license by Wal-Mart Stores Inc., Bentonville, AR 72716

#### Marketed in Canada by:

Wal-Mart Canada Corp.  
1940 Argentia Road, Mississauga,  
Ontario L5N1P9

Client: Midea (Wal\*Mart)  
Project: 169143  
Language: EN (US)

Date: 11.07.2007  
Version: 04  
Page: 10 (of 10 pages)