

Wireless 802.11g AP Router

WX-6615

User's Guide



Version 1.0

Copyright statement

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, whether electronic, mechanical, photocopying, recording, or otherwise without the prior writing of the publisher.

March. 2003

.Contents

1. Introduction.....	3
2. Safety Notification.....	4
3. Hardware Installation.....	5
4 Web Management Settings.....	6
4.1. Setup.....	7
4.2. Security.....	10
4.3. System.....	12
4.4. DHCP.....	15
4.5. SNMP.....	17
4.6. Status.....	18
4.7. Advanced Wireless.....	19
4.8. Filters.....	22
4.9. Port Forwarding.....	25
4.10. Routing.....	27
4.11. DDNS.....	29
5. Troubleshooting.....	30

1. Introduction

Thank you for purchasing your WX-6615 Wireless 802.11g AP Router.

This user guide will assist you with the installation procedure.

The package you have received should contain the following items:

- WX-6615 Wireless 802.11g AP Router
- User Guide
- Power Supply / Cord
- Ethernet Cable

Note: if anything is missing, please contact your vendor

2. Safety Notification

Your Wireless AP Router should be placed in a safe and secure location. To ensure proper operation, please keep the unit away from water and other damaging elements. Please read the user manual thoroughly before you install the device. The device should only be repaired by authorized and qualified personnel.

- Please do not try to open or repair the device yourself.
- Do not place the device in a damp or humid location, i.e. a bathroom.
- The device should be placed in a sheltered and non-slip location within a temperature range of +5 to +40 Celsius degree.
- Please do not expose the device to direct sunlight or other heat sources. The housing and electronic components may be damaged by direct sunlight or heat sources.

3. Hardware Installation

Front Panel

The front panel provides LED's for device status. Refer to the following table for the meaning of each feature.

LED	STATUS	Description
PWR/STAT	Off	No power
	Red On	1. Power on 2. Reset to default 3. Firmware upgrade (first 1 minute)
	Red Blink	1. System up 2. Power on 3. Firmware upgrade
LAN	Off	no Ethernet link detected
	Green On	10/100Mbps Fast Ethernet link detected. No activity.
	Green Blink	Indicates data traffic on the 10/100 Mbps LAN
WAN	Orange Blink	Indicates data traffic on the 10/100 Mbps LAN
G	Yellow Blink	Indicates the device is linking or active data through wireless links

Rear Panel

The rear panel features 4 LAN ports, 1 WAN port and Reset button. Refer to the following table for the meaning of each feature.

Power (DC 5v)	Used to connect to the power outlet. Only use the power adapter provided with the device. Use of an unauthorized power adapter may cause damage to your device and violate your warranty.
Reset	Press the Reset Button for approximately ten seconds, all configurations will set to factory default settings.
LAN	The RJ-45 Ethernet ports used to connect your PC, hub, switch or Ethernet network.
WAN	The RJ-45 Ethernet port labeled WAN is used to connect your AP Router to your xDSL or Cable modem.

WX-6615 AP Router Default Settings

The default settings are shown following.

User Name	
Password	admin
AP Router IP Address	192.168.1.1
AP Router Subnet Mask	255.255.255.0
RF ESSID	sparklan-g
11g RF Channel	6
Mode	Mixed (11b and 11g)
Encryption	Disabled
DHCP client	Enabled


4 Web Management Settings

TURN ON POWER SUPPLY

Quick power cycle can caused system corruption. When power on, be careful not to shut down in about 5 seconds, because data is writing to the flash.

START UP & LOGIN

In order to configure the Wireless 11g AP Router, you must use your web browser and manually input `http://192.168.1.1` into the Address box and press Enter. The Main Page will appear.

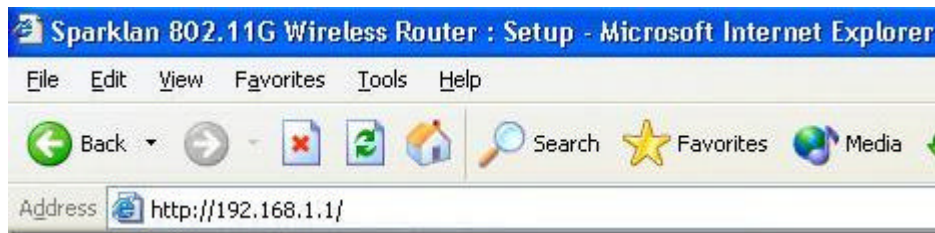

In order to configure the Wireless 11g AP Router, you must input the password into the **Password** box and leave blank on the **User Name** box. The default password is “**admin**”.

Once you have logged-in as administrator, it is a good idea to change the administrator password to ensure a secure protection to the Wireless 11g AP Router. The Security Settings section described later in this manual describes how to change the password.

Once you have input the correct password and logged-in, the screen will change to the Setup page screen.


4.1. Setup

MAKE CORRECT NETWORK SETTINGS OF YOUR COMPUTER

To change the configuration, use Internet Explorer (IE) or Netscape Communicator to connect the WEB management **192.168.1.1**.

Setup

This screen contains all of the Router's basic setup functions.

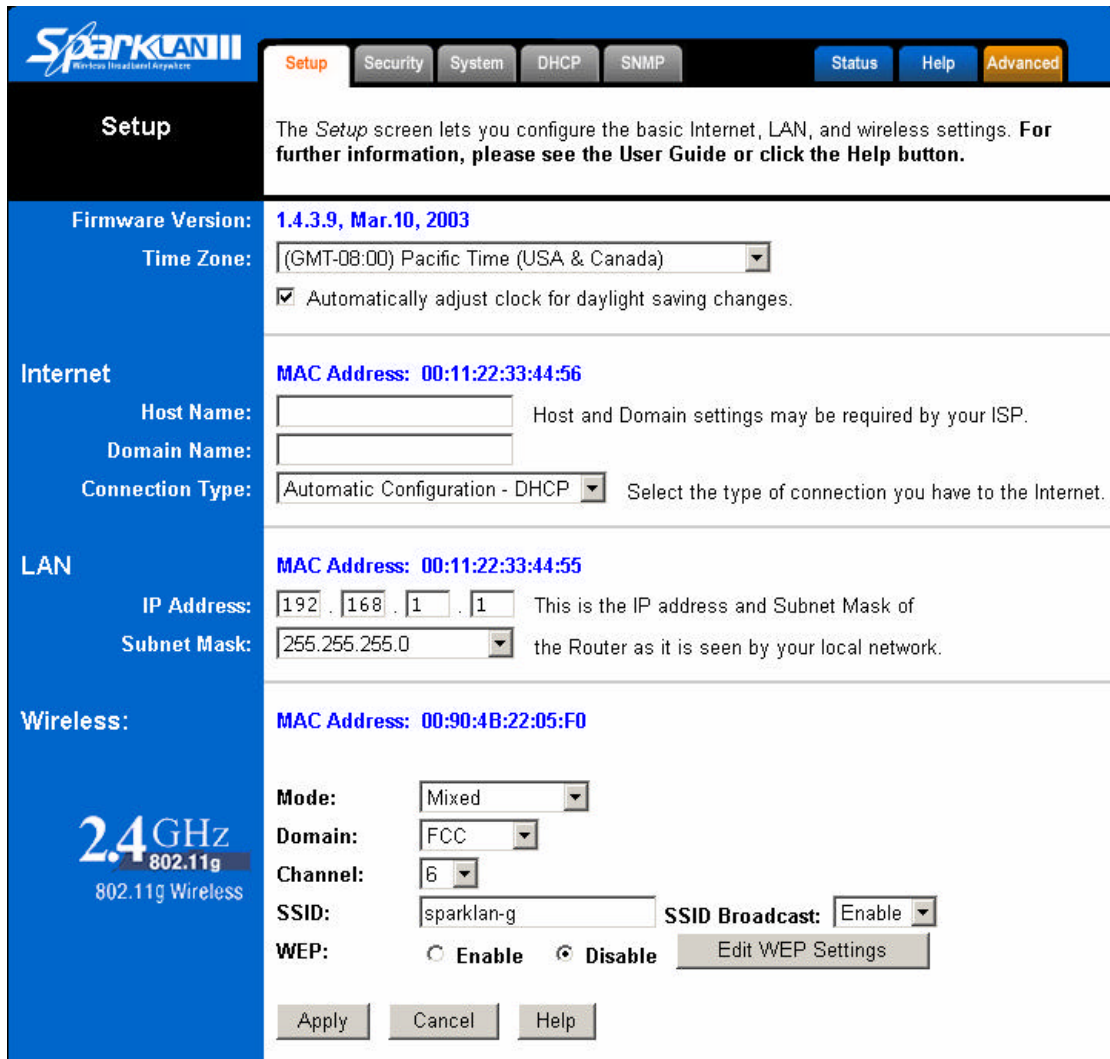

SparkLAN III
Wireless Internet Appliance

Setup Security System DHCP SNMP Status Help Advanced

The Setup screen lets you configure the basic Internet, LAN, and wireless settings. For further information, please see the User Guide or click the Help button.

Setup

Firmware Version: 1.4.3.9, Mar.10, 2003

Time Zone: (GMT-08:00) Pacific Time (USA & Canada) Automatically adjust clock for daylight saving changes.

Internet

MAC Address: 00:11:22:33:44:56

Host Name: Host and Domain settings may be required by your ISP.

Domain Name:

Connection Type: Automatic Configuration - DHCP Select the type of connection you have to the Internet.

LAN

MAC Address: 00:11:22:33:44:55

IP Address: 192 . 168 . 1 . 1 This is the IP address and Subnet Mask of

Subnet Mask: 255.255.255.0 the Router as it is seen by your local network.

Wireless:

MAC Address: 00:90:4B:22:05:F0

Mode: Mixed

Domain: FCC

Channel: 6

SSID: sparklan-g SSID Broadcast: Enable

WEP: Enable Disable

2.4GHz
802.11g
802.11g Wireless

Most users will be able to configure the AP Router and get it working properly using the settings on this screen. Some Internet Service Providers (ISPs) will require that you enter WX-6615 Wireless 802.11g AP Router specific information, such as User Name, Password, IP Address, Default Gateway Address, or DNS IP Address. This information can be obtained from your ISP, if required.

Internet:

Host Name: This entry is necessary for some ISPs and can be provided by them.

Domain Name: This entry is necessary for some ISPs and can be provided by them.

Configuration Type: The Router supports four connection types:

Automatic Configuration - DHCP

Static IP

PPPoE (Point-to-Point Protocol over Ethernet)

PPTP (Point-to-Point Tunneling Protocol)

These types can be selected from the drop-down menu next to Internet Connection. The information required and available features will differ depending on what kind of connection type you select.

Some descriptions of this information are included here:

Internet IP Address and Subnet Mask

This is the Router's IP Address and Subnet Mask as seen by external users on the Internet (including your ISP). If your Internet connection requires a static IP address, then your ISP will provide you with a Static IP Address and Subnet Mask.

- **Default Gateway**

Your ISP will provide you with the Gateway IP Address.

- **DNS (Domain Name Server) IP Address**

Your ISP will provide you with at least one DNS IP Address.

- **User Name and Password**

Enter the **User Name** and **Password** you use when logging onto your ISP through a PPPoE or PPTP connection.

- **Connect on Demand**

You can configure the Router to disconnect your Internet connection after a specified period of inactivity (Max Idle Time). If your Internet connection has been terminated due to inactivity, Connect on Demand enables the Router to automatically re-establish your connection as soon as you attempt to access the Internet again. If you wish to activate Connect on Demand, click the radio button.

If you want your Internet connection to remain active at all times, enter **0** in the WX-6615 802.11g AP Router max Idle Time field. Otherwise, enter the number of minutes you want to have elapsed before your Internet connection terminates.


- **Keep Alive Option**

This option keeps you connected to the Internet indefinitely, even when your connection sits idle. To use this option, click the radio button next to *Keep Alive*. The default Redial Period is 30 seconds (in other words, the Router will check the Internet connection every 30 seconds).

LAN IP Address and Subnet Mask: This is the Router's IP Address and Subnet Mask as seen on the internal LAN. The default value is 192.168.1.1 for IP Address and 255.255.255.0 for Subnet Mask.

Wireless: This section provide the Wireless Network settings for your WLAN

2.4GHz Settings

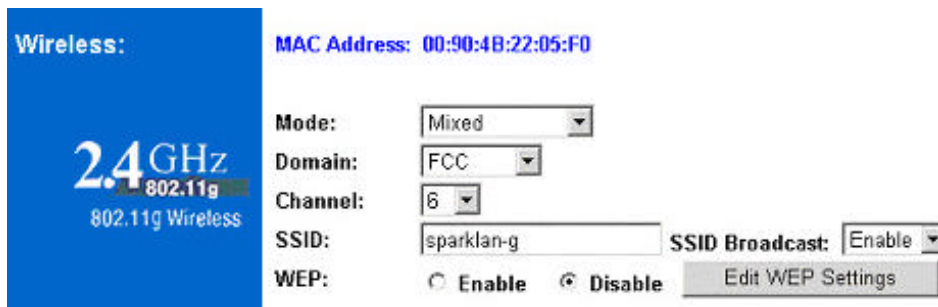

Wireless: MAC Address: 00:90:4B:22:05:F0

Mode:

Domain:

Channel:

SSID: SSID Broadcast:


WEP: Enable Disable

SSID: The service set identifier (SSID) or network name. It is case sensitive and must not exceed 32 characters, which may be any keyboard character. You shall have selected the same SSID for all the APs that will be communicating with mobile wireless stations.

Domain: Please select the correct Domain for your physical location. European countries differ from American region.

Channel: Select the appropriate channel from the list provided to correspond with your network settings. You shall assign a different channel for each AP to avoid signal interference.

WEP: Make sure that all wireless devices on your network are using the same encryption level and key. WEP keys must consist of the letters "A" through "F" and the numbers "0" through "9".

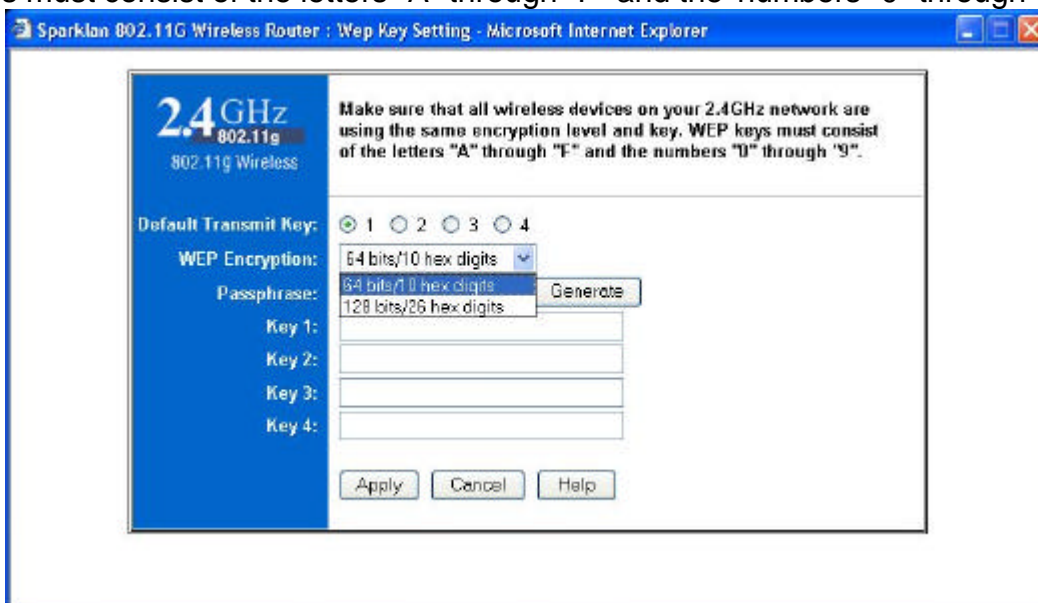

Sparklan 802.11G Wireless Router : Wep Key Setting - Microsoft Internet Explorer

2.4GHz 802.11g 802.11g Wireless

Make sure that all wireless devices on your 2.4GHz network are using the same encryption level and key. WEP keys must consist of the letters "A" through "F" and the numbers "0" through "9".

Default Transmit Key: 1 2 3 4

WEP Encryption:

Passphrase:

Key 1:


Key 2:

Key 3:

Key 4:

* Click **Apply** to save your settings.

4.2. Security

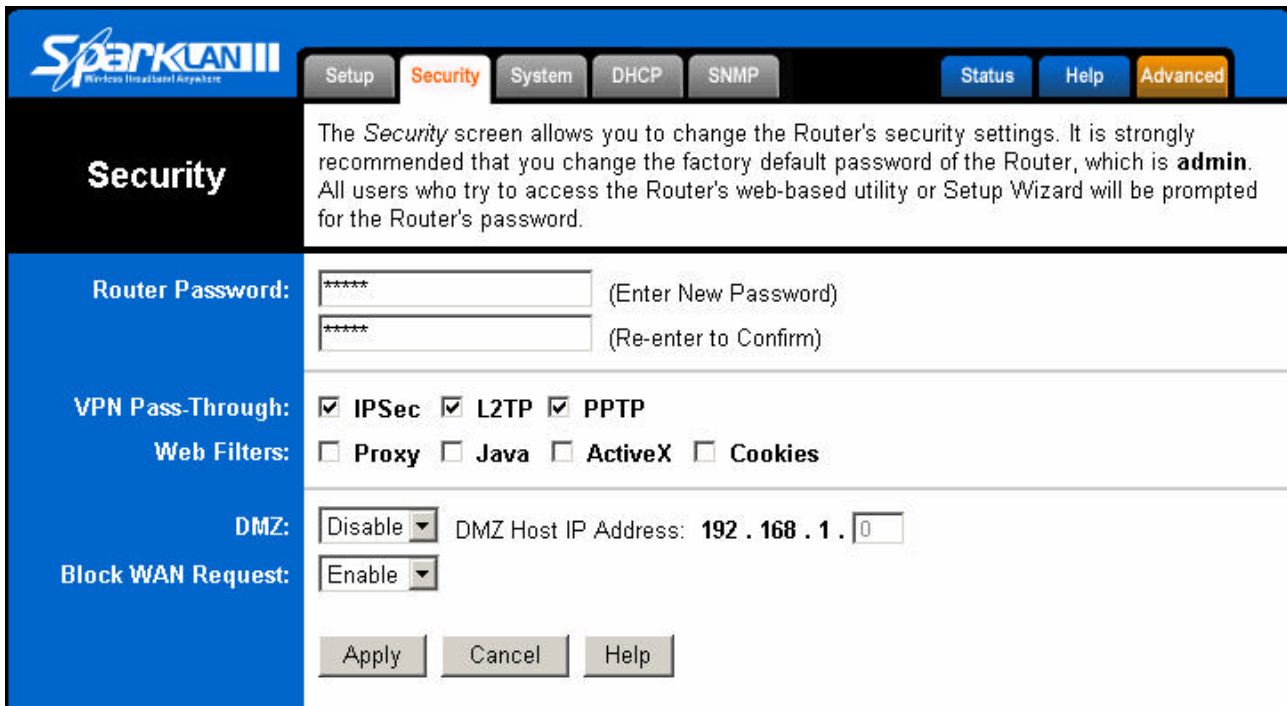

The *Security* screen allows you to change the Router's security settings. It is strongly recommended that you change the factory default password of the Router, which is **admin**. All users who try to access the Router's web-based utility or Setup Wizard will be prompted for the Router's password.

Router Password: [*****] (Enter New Password)
 [*****] (Re-enter to Confirm)

VPN Pass-Through: IPsec L2TP PPTP

Web Filters: Proxy Java ActiveX Cookies

DMZ: [Disable] DMZ Host IP Address: 192 . 168 . 1 . [0]

Block WAN Request: [Enable]

[Apply] [Cancel] [Help]

Router Password: Changing the password for the AP Router is as easy as typing the password into the **Enter New Password** field. Then, type it again into the Re-enter to confirm.

* Click the **Apply** button to save the setting.

Use the default password when you first open the configuration pages, after you have configured these settings, you should set a new password for the Router (using the Security screen). This will increase security, protecting the Router from unauthorized changes.

VPN Pass-Through: Virtual Private Networking (VPN) is typically used for work-related networking. For VPN tunnels, the Router supports IPsec Pass-Through, L2TP Pass-Through, and PPTP Pass-Through.

- **IPsec** - Internet Protocol Security (IPsec) is a suite of protocols used to implement secure exchange of packets at the IP layer. To allow IPsec tunnels to pass through the Router, IPsec Pass-Through is enabled by default. To disable IPsec Pass-Through, uncheck the box next to *IPsec*.
- **L2TP** - Layer 2 Tunneling Protocol is a protocol used to tunnel Point-to-Point Protocol (PPP) over the Internet. To allow L2TP tunnels to pass through the Router, L2TP Pass-Through is enabled by default. To disable L2TP Pass-Through, uncheck the box next to *L2TP*.
- **PPTP** - Point-to-Point Tunneling Protocol is the method used to enable VPN sessions to a Windows NT 4.0 or 2000 server. To allow PPTP tunnels to pass through the Router, PPTP Pass-Through is enabled by default. To disable PPTP Pass-Through, uncheck the box next to *PPTP*.

Web Filters: Using the Web Filters feature, you may enable up to four different filters.

- **Proxy** - Use of WAN proxy servers may compromise network security. Denying Proxy will disable access to any WAN proxy servers. To enable proxy filtering, click the box next to *Proxy*.
- **Java** - Java is a programming language for websites. If you deny Java, you run the risk of not having access to Internet sites created using this programming language. To enable Java filtering, click the box next to *Java*.
- **ActiveX** - ActiveX is a programming language for websites. If you deny ActiveX, you run the risk of not having access to Internet sites created using this programming language. To enable ActiveX filtering, click the box next to *ActiveX*.
- **Cookies** - A cookie is data stored on your PC and used by Internet sites when you interact with them. To enable cookie filtering, click the box next to *Cookies*.

DMZ: The DMZ hosting feature allows one local user to be exposed to the Internet for use of a special-purpose service such as Internet gaming or videoconferencing. DMZ hosting forwards all the ports at the same time to one PC. The Port Forwarding feature is more secure because it only opens the ports you want to have opened, while DMZ hosting opens all the ports of one computer, exposing the computer so the Internet can see it.


Any PC whose port is being forwarded must have its DHCP client function disabled and should have a new static IP address assigned to it because its IP address may change when using the DHCP function.

1. To expose one PC, select **Enable**.
2. Enter the computer's IP address in the *DMZ Host IP Address* field.
3. Click the **Apply** button.

Block WAN Request: By enabling the Block WAN Request feature, you can prevent your network from being "pinged," or detected, by other Internet users. The Block WAN Request feature also reinforces your network security by hiding your network ports. Both functions of the Block WAN Request feature make it more difficult for outside users to work their way into your network. This feature is enabled by default. Select **Disable** to disable this feature.

* Check all the settings and click **Apply** to save them.

4.3. System

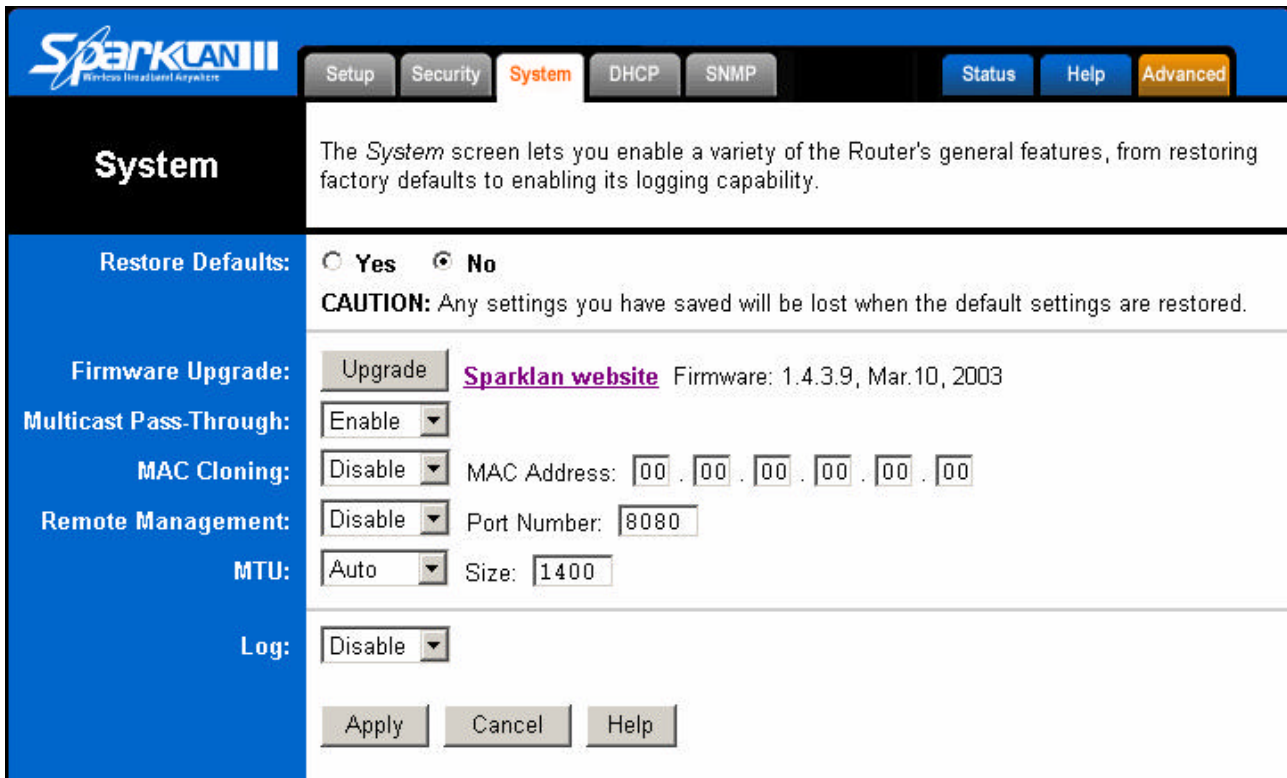

Restore Factory Defaults: Click the **Yes** button to reset all configuration settings to factory default values. Note: Any settings you have saved will be lost when the default settings are restored. Click the **No** button to disable the Restore Factory Defaults feature.

*Click the **Apply** button to save the setting.

Firmware Upgrade: Click the **Upgrade** button to load new firmware onto the Router. New firmware versions are posted at www.sparklan.com and can be downloaded for free. If the Router is not experiencing difficulties, then there is no need to download a more recent firmware version, unless that version has a new feature that you want to use.

Note: When you upgrade the Router's firmware, you may lose its configuration settings, so make sure you write down the Router's settings before you upgrade its firmware.

To upgrade the Router's firmware:

1. Download the firmware upgrade file from the Sparklan website.
2. Extract the firmware upgrade file.
3. Click the **Upgrade** button.

4. On the *Firmware Upgrade* screen, click the **Browse** button to find the firmware upgrade file.



5. Double-click the firmware upgrade file.
6. Click the **Upgrade** button, and follow the on-screen instructions.

Note: Do not power off the Router or press the Reset button while the firmware is being upgraded.

Multicast Pass-Through: IP Multicasting occurs when a single data transmission is sent to multiple recipients at the same time. Using the Multicast Pass-Through feature, the Router allows IP multicast packets to be forwarded to the appropriate computers. Keep the default setting, **Enable**, to support the feature, or select **Disable** to disable it.

MAC Cloning: The Router's MAC address is a 12-digit code assigned to a unique piece of hardware for identification. Some ISPs require that you register the MAC address of your network card/adapter, which was connected to your cable or DSL modem during installation. If your ISP requires MAC address registration, find your adapter's MAC address by following the instructions for your PC's operating system.

For Windows 98 and Millennium:

1. Click the **Start** button, and select **Run**.
2. Type **winipcfg** in the field provided, and press the **OK** key.
3. Select the Ethernet adapter you are using.
4. Click **More Info**.
5. Write down your adapter's MAC address.

For Windows 2000 and XP:

1. Click the **Start** button, and select **Run**.
2. Type **cmd** in the field provided, and press the **OK** key.
3. At the command prompt, run **ipconfig /all**, and look at your adapter's physical address.
4. Write down your adapter's MAC address.

To clone your network adapter's MAC address onto the Router and avoid calling your ISP to change the registered MAC address, follow these instructions:

1. Select **Enable**.
2. Enter your adapter's MAC address in the *MAC Address* field.
3. Click the **Apply** button.

To disable MAC address cloning, keep the default setting, **Disable**.

Remote Management: This feature allows you to manage your Router from a remote location, via the Internet. To disable this feature, keep the default setting, **Disable**. To enable this feature, select **Enable**, and use the specified port (default is **8080**) on your PC to remotely manage the Router. You must also change the Router's default password to one of your own, if you haven't already. A unique password will increase security.

To remotely manage the Router, enter **http://xxx.xxx.xxx.xxx:8080** (the x's represent the Router's Internet IP address, and 8080 represents the specified port) in your web browser's *Address* field. You will be asked for the Router's password. After successfully entering the password, you will be able to access the Router's web-based utility.

Note: If the Remote Management feature is enabled, anyone who knows the Router's Internet IP address and password will be able to alter the Router's settings.

MTU: MTU is the Maximum Transmission Unit. It specifies the largest packet size permitted for Internet transmission. Keep the default setting, **Auto**, to have the Router select the best MTU for your Internet connection. To specify a MTU size, select **Manual**, and enter the value desired (default is **1400**). You should leave this value in the 1200 to 1500 range.


Log: The Router can keep logs of all incoming or outgoing traffic for your Internet connection. This feature is disabled by default. To keep activity logs, select **Enable**.

To keep a permanent record of activity logs as a file on your PC's hard drive, Logviewer software must be used. This software is downloadable from the Sparklan website, www.sparklan.com. In the *Send Log to* field, enter the fixed IP address of the PC running the Logviewer software. The Router will send updated logs to that PC.

To see a temporary log of the Router's most recent incoming traffic, click the **Incoming Access Log** button. To see a temporary log of the Router's most recent outgoing traffic, click the **Outgoing Access Log** button.

*Click the **Apply** button to save the setting.

4.4. DHCP

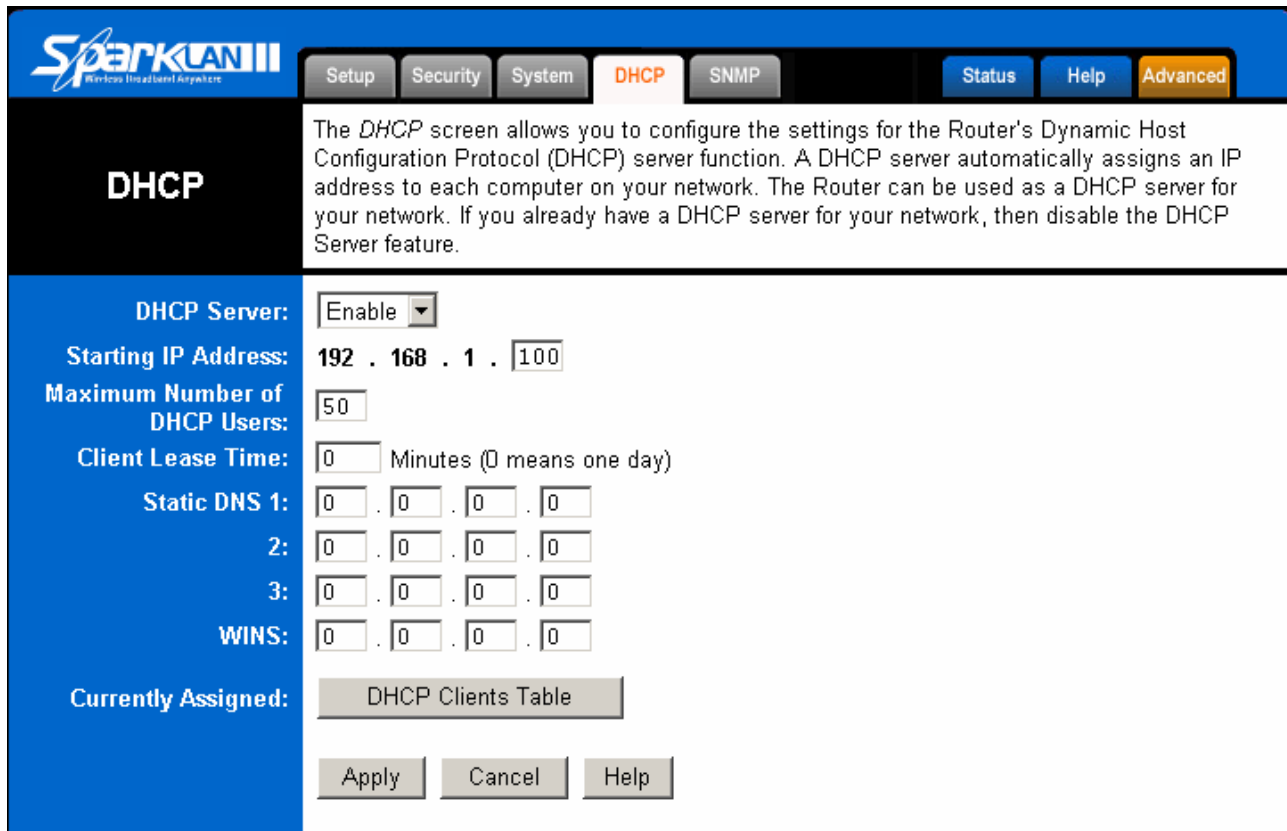

The DHCP screen allows you to configure the settings for the Router's Dynamic Host Configuration Protocol (DHCP) server function. The Router can be used as a DHCP server for your network. A DHCP server automatically assigns an IP address to each computer on your network. If you choose to enable the Router's DHCP server option, you must configure your entire network PCs to connect to a DHCP server, the Router.

If you disable the Router's DHCP server function, you must configure the IP Address, Subnet Mask, and DNS for each network computer (note that each IP Address must be unique).

DHCP Server: Select the **Enable** option to enable the Router's DHCP server option.

If you already have a DHCP server on your network or you do not want a DHCP server, then select **Disable** from the options.

Starting IP Address: Enter a numerical value for the DHCP server to start with when issuing IP addresses. Because the Router's default IP address is **192.168.1.1**, the Starting IP Address must be 192.168.1.2 or greater, but smaller than 192.168.5.253. The default Starting IP Address is **192.168.1.100**.

Number of DHCP Users: Enter the maximum number of PCs that you want the DHCP server to assign IP addresses to. The absolute maximum is 253 - possible if 192.168.1.1 is your starting IP address. The default is **50**.

Client Lease Time: The Client Lease Time is the amount of time a network user will be allowed connection to the Router with their current dynamic IP address.

Enter the amount of time, in minutes, that the user will be "leased" this dynamic IP address. The default is **0** minutes, which means one day.

Static DNS 1-3: The Domain Name System (DNS) is how the Internet translates domain or website names into Internet addresses or URLs. Your ISP will provide you with at least one DNS Server

IP Address. If you wish to utilize another, enter that IP Address in one of these fields. You can enter up to three DNS Server IP Addresses here. The Router will utilize these for quicker access to functioning DNS servers.

WINS: The Windows Internet Naming Service (WINS) manages each PC' s interaction with the Internet. If you use a WINS server, enter that server' s IP Address here. Otherwise, leave this blank.

Currently Assigned: Click the **DHCP Clients Table** button to see a list of PCs assigned IP addresses by the Router. For each PC, the list shows the client hostname, MAC address, IP address, and the amount of DHCP client lease time left. Click the **Refresh** button to display the most current information.

* Click **Apply** to save your settings.

4.5. SNMP

The screenshot shows the SparkLAN III web interface. At the top, there is a navigation bar with tabs for Setup, Security, System, DHCP, **SNMP**, Status, Help, and Advanced. Below the navigation bar, the page title is "SNMP". A descriptive text states: "The *SNMP* screen allows you to customize the Simple Network Management Protocol (SNMP) settings for the Router and two SNMP Communities." Below this, the "SNMPv2c:" setting is shown as a dropdown menu currently set to "Disable". At the bottom of the configuration area, there are three buttons: "Apply", "Cancel", and "Help".

SNMP: The *SNMP* screen allows you to customize the Simple Network Management Protocol (SNMP) settings. SNMP is a popular network monitoring and management protocol.

SNMPv2c		To enable the SNMP support feature, select Enable . Otherwise, select Disable .
Identification	Contact	In the <i>Contact</i> field, enter contact information for the Router.
	Device Name	In the <i>Device Name</i> field, enter the name of the Router.
	Location	In the <i>Location</i> field, specify the area or location where the Router resides.
SNMP Community	(public)	You may change the SNMP Community's name from its default, public . Then configure the community's access as either Read-Only or Read-Write .
	(private)	You may change the SNMP Community's name from its default, private . Then configure the community's access as either Read-Only or Read-Write .

* Click **Apply** to save your settings.

4.6. Status



Status

The *Status* screen displays the Router's current status and configuration. This information is read-only.

Firmware Version: 1.4.3.9, Mar.10, 2003

Current Time: Thu Jan 1 00:27:59 1970

Host Name:

Domain Name:

LAN

MAC Address: 00:11:22:33:44:55

IP Address: 192.168.1.1

Subnet Mask: 255.255.255.0

DHCP server: Enable

MAC Address: 00:90:4B:22:05:F0

Mode: Mixed

Channel: 6

SSID: sparklan-g

Encryption Function: Disable

Internet

MAC Address: 00:11:22:33:44:56

Configuration Type: Automatic Configuration - DHCP

IP Address: 0.0.0.0

Subnet Mask: 0.0.0.0

Default Gateway: 0.0.0.0

DNS: 0.0.0.0

DHCP Release DHCP Renew

Refresh Help

This screen displays the Wireless Router's current status and settings. This information is read-only. This page will auto re-flash every 5 seconds to keep most update information.

Host Name: The Host Name is the name of the Router. This entry is necessary for some ISPs.

Domain Name: The Domain Name is the name of the Router's domain. This entry is necessary for some ISPs.

DHCP Release: Click the **DHCP Release** button to delete the Router's current Internet IP address.

DHCP Renew: Click the **DHCP Renew** button to get a new Internet IP address for the Router.

*Click the **Refresh** button to refresh the Router's status and settings.

4.7. Advanced Wireless

The screenshot shows the SparkLAN web interface. The top navigation bar includes 'Advanced Wireless', 'Filters', 'Port Forwarding', 'Routing', 'DDNS', and 'Setup'. The left sidebar is blue and contains the following menu items: 'Advanced Wireless', 'Wireless MAC Filters', '2.4GHz 802.11g 802.11g Wireless', 'Authentication Type:', 'Transmit Rate:', 'Beacon Interval:', 'DTIM Interval:', 'RTS Threshold:', 'Fragmentation Threshold:', 'AP Mode:', and 'Wireless Bridge:'. The main content area has a title 'Advanced Wireless' and a description: 'The Advanced Wireless screen allows you to customize data transmission settings. In most cases, the advanced settings on this screen should remain at their default values.' Below this, the 'Wireless MAC Filters:' dropdown is set to 'Disable'. The configuration options include: 'Authentication Type:' (Auto), 'Transmit Rate:' (Auto), 'Beacon Interval:' (100), 'DTIM Interval:' (3), 'RTS Threshold:' (2347), and 'Fragmentation Threshold:' (2346). Under 'AP Mode:', the 'Access Point' radio button is selected. There are four empty input fields for MAC addresses. At the bottom are 'Apply', 'Cancel', and 'Help' buttons.


Wireless MAC Filters: This function allow administrator to have access control by enter MAC address of client stations. When **Enable** this function, two new options will show up.

This screenshot shows the same SparkLAN web interface, but with 'Wireless MAC Filters:' set to 'Enable'. The 'Access Point' radio button remains selected. Two new options are visible: 'Prevent PCs listed from accessing the wireless network.' (selected) and 'Permit PCs listed to access the wireless network.' (unselected). An 'Edit MAC Filter List' button is now present at the bottom of the configuration area.

Depend on the filtering propose, it can be selected to **Prevent** or **Permit**.

Click on **Edit MAC Filter List** to add the client stations MAC list.

The table could store up to **40** different MAC addresses. Please follow the format that it required when an address is input.

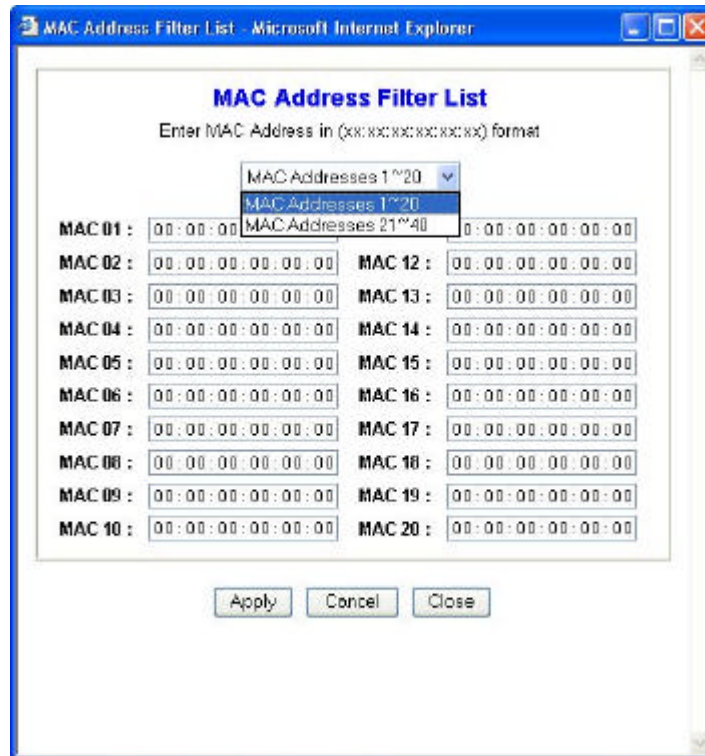

Authentication Type:

Auto: Auto is the default authentication algorithm. It will change its authentication type automatically to fulfill client's requirement.

Open System: Open System authentication is not required to be successful while a client may decline to authenticate with any particular other client.

Shared Key: Shared Key is only available if the WEP option is implemented. Shared Key authentication supports authentication of clients as either a member of those who know a shared secret key or a member of those who do not. IEEE 802.11 Shared Key authentication accomplishes this without the need to transmit the secret key in clear. Requiring the use of the WEP privacy mechanism.

Transmission Rate: The rate of data transmission should be set depending on the speed of your wireless network. You can select from a range of transmission speeds, or you can select **AUTO** to have the Router automatically use the fastest possible data rate and enable the Auto-Fallback feature. Auto-Fallback will negotiate the best possible connection speed between the Router and a wireless client. The default setting is **AUTO**.

DTIM Interval: This value indicates the interval of the Delivery Traffic Indication Message (DTIM). A DTIM field is a countdown field informing clients of the next window for listening to broadcast and multicast messages. When the Access Point has buffered broadcast or multicast messages for associated clients, it sends the next DTIM with a DTIM Interval value.

Access Point Clients hear the beacons and awaken to receive the broadcast and multicast messages.

Beacon Interval: The Beacon Interval value indicates the frequency interval of the beacon. Enter a value between 20 and 1000. A beacon is a packet broadcast by the Router to synchronize the wireless network. The default value is **100**.

RTS Threshold: This value should remain at its default setting of 2346. Should you encounter inconsistent data flow, only minor modifications are recommended. If a network packet is smaller than the preset RTS threshold size, the RTS/CTS mechanism will not be enabled. The Router sends Request to Send (RTS) frames to a particular receiving station and negotiates the sending of a data

frame. After receiving an RTS, the wireless station responds with a Clear to Send (CTS) frame to acknowledge the right to begin transmission.

Fragmentation Threshold: This value specifies the maximum size for a packet before data is fragmented into multiple packets. It should remain at its default setting of 2346. If you experience a high packet error rate, you may slightly increase the Fragmentation Threshold. Setting the Fragmentation Threshold too low may result in poor network performance. Only minor modifications of this value are recommended.

AP Mode or Wireless Bridge Mode: WX-6615 802.11g AP Router can operate in two mode. When the **AP Mode** is selected, the device operates as a normal Access Point. Providing every wireless client station a join network point.

The **Wireless Bridge Mode** will be able to join different WX-6615 wirelessly by input the destination MAC Address.

* Click **Apply** to save your settings.

4.8. Filters

The *Internet Filter* screen allows you to block or allow specific kinds of Internet usage. You can set up Internet access policies for specific PCs and set up filters by using network port numbers.

<p>Internet Access Policy</p>	<p>This feature allows you to customize up to 15 different Internet Access Policies for particular PCs, which are identified by their IP or MAC addresses. For each policy's designated PCs, the Router can do one or more of the following:</p> <ul style="list-style-type: none"> • block or allow Internet access or inbound traffic during the days and time periods specified • block designated services • block websites with specific URL addresses • block websites that use specific keywords in their URL addresses. <p><i>To create or edit a policy, follow these instructions:</i></p> <ol style="list-style-type: none"> 1. Select the policy's number (1-15) in the drop-down menu. 2. Enter a name in the <i>Enter Policy Name</i> field. 3. Select Internet Access or Inbound Traffic from the <i>Policy Type</i> drop-down box, depending on the kind of access you want to control. Select Internet
--------------------------------------	---

	<p>Access to control your network PCs' access to the Internet. Select Inbound Traffic to control Internet PCs' access to your local area network.</p> <p>Note: The screen's settings will vary depending on which Policy Type you select.</p> <ol style="list-style-type: none"> 4. Select Deny or Allow, depending on how you want to control access for specific PCs. 5. Click the Edit List button next to <i>PCs</i> or <i>Internet PCs</i>. <ol style="list-style-type: none"> a. On the <i>List of PCs</i> or <i>List of Internet PCs</i> screen, specify PCs by IP address or MAC address. Enter the appropriate IP addresses into the <i>IP</i> fields. If you have a range of IP addresses to filter, complete the appropriate <i>IP Range</i> fields. Enter the appropriate MAC addresses into the <i>MAC</i> fields. b. Click the Apply button to save your changes. Click the Cancel button to cancel your unsaved changes. Click the Close button to return to the <i>Internet Filter</i> screen. 6. Set the days when access will be filtered. Keep the default setting, Everyday, or select the appropriate days of the week. 7. Set the time when access will be filtered. Keep the default setting, 24 Hours, or check the box next to <i>From</i> and use the drop-down boxes to designate a specific time period. <p>Note: Access for the listed PCs will be controlled during the selected days and times. Any blocked services or websites will be blocked at all times.</p> <ol style="list-style-type: none"> 8. In the <i>Blocking Services</i> drop-down boxes, select the services you want to block (the default setting is None). In the <i>Blocking Services</i> fields, the range of ports for this service will appear. If you want to change the range of ports, enter the new numbers in the <i>Blocking Services</i> fields, or edit the service's settings (see below). <p>To add a service or edit a service's settings, follow these instructions:</p> <ol style="list-style-type: none"> a. Click the Add Service button. b. To create a new service, enter the name of the service in the <i>Service Name</i> field. To edit a service's settings, select the service from the box on the right of the screen. c. From the <i>Protocol</i> drop-down menu, select the protocol type for this service: ICMP, UDP, TCP, or UDP & TCP. d. In the <i>Port Range</i> fields, enter the range of ports for this service. e. To add a service, click the Add button. To edit the settings for a service, click the Modify button. f. To delete a service, select the service from the box on the right of the screen. Click the Delete button. g. Click the Apply button to save your changes. Click the Cancel button to undo your changes. Click the Close button to close the <i>Add Service</i> window. <ol style="list-style-type: none"> 9. If you want to block websites with specific URL addresses, enter each URL address in a <i>Website Blocking by URL Address</i> field. You can enter up to four URL addresses. (This feature is not available if you chose Inbound Traffic for the <i>Policy Type</i>.) 10. If you want to block websites that use specific keywords as part of their URL addresses, enter each keyword in a <i>Website Blocking by Keyword</i> field. You can enter up to six keywords. (This feature is not available if you chose Inbound Traffic for the <i>Policy Type</i>.) 11. Click the Apply button to save your settings for an Internet Access Policy. Click the Cancel button to cancel your unsaved changes. 12. To create or edit additional policies, repeat steps 1-11.
Delete	To delete an Internet Access Policy, select the policy's number, and click the Delete button.
Summary	To see a summary of all the policies, click the Summary button. The <i>Internet Policy Summary</i> screen will show each policy's number, Name, Type, Days, and Time of Day. To delete a policy,

click its box, and then click the **Delete** button. Click the **Close** button to return to the *Internet Filter* screen.

4.9. Port Forwarding

The *Port Range Forwarding* screen sets up public services on your network, such as web servers, ftp servers, e-mail servers, or other specialized Internet applications.

External Port	Protocol TCP	Protocol UDP	IP Address	Enable
0 to 0	<input type="checkbox"/>	<input type="checkbox"/>	192.168.1. 0	<input type="checkbox"/>
0 to 0	<input type="checkbox"/>	<input type="checkbox"/>	192.168.1. 0	<input type="checkbox"/>
0 to 0	<input type="checkbox"/>	<input type="checkbox"/>	192.168.1. 0	<input type="checkbox"/>
0 to 0	<input type="checkbox"/>	<input type="checkbox"/>	192.168.1. 0	<input type="checkbox"/>
0 to 0	<input type="checkbox"/>	<input type="checkbox"/>	192.168.1. 0	<input type="checkbox"/>
0 to 0	<input type="checkbox"/>	<input type="checkbox"/>	192.168.1. 0	<input type="checkbox"/>
0 to 0	<input type="checkbox"/>	<input type="checkbox"/>	192.168.1. 0	<input type="checkbox"/>
0 to 0	<input type="checkbox"/>	<input type="checkbox"/>	192.168.1. 0	<input type="checkbox"/>
0 to 0	<input type="checkbox"/>	<input type="checkbox"/>	192.168.1. 0	<input type="checkbox"/>
0 to 0	<input type="checkbox"/>	<input type="checkbox"/>	192.168.1. 0	<input type="checkbox"/>

Port Triggering

Apply Cancel Help

The *Port Forwarding* screen sets up public services on your network, such as web servers, ftp servers, e-mail servers, or other specialized Internet applications. (Specialized Internet applications are any applications that use Internet access to perform functions such as videoconferencing or online gaming. Some Internet applications may not require any forwarding.)

When users send this type of request to your network via the Internet, the Router will forward those requests to the appropriate PC. Any PC whose port is being forwarded must have its DHCP client function disabled and must have a new static IP address assigned to it because its IP address may change when using the DHCP function.

Customized Applications	Enter the name of the public service or other Internet application in the field provided.
External Port	Enter the numbers of the External Ports (the port numbers seen by users on the Internet).
TCP Protocol	Click this checkbox if the application requires TCP.
UDP Protocol	Click this checkbox if the application requires UDP.
IP Address	Enter the IP Address of the PC running the application.
Enable	Click the Enable checkbox to enable port forwarding for the application.
Port Triggering	Port Triggering is used for special Internet applications whose outgoing ports differ from the

incoming ports. For this feature, the Router will watch outgoing data for specific port numbers. The Router will remember the IP address of the computer that sends a transmission requesting data, so that when the requested data returns through the Router, the data is pulled back to the proper computer by way of IP address and port mapping rules. Click the **Port Triggering** button to set up triggered ports, and follow these instructions:

1. Enter the Application Name of the trigger.
2. Enter the Outgoing Port Range used by the application. Check with the Internet application for the port number(s) needed.
3. Enter the Incoming Port Range used by the application. Check with the Internet application for the port number(s) needed.
4. Click the **Apply** button to save your changes. Click the **Cancel** button to cancel your unsaved changes. Click the **Close** button to return to the *Port Forwarding* screen.

Check all the settings and click **Apply** to save them.

4.10. Routing


On the *Routing* screen, you can set the routing mode and settings of the Router. Gateway mode is recommended for most users.

<p>Operating Mode</p>	<p>The default setting is Gateway.</p> <p>Choose the correct working mode. Keep the default setting, Gateway, if the Router is hosting your network's connection to the Internet (Gateway mode is recommended for most users). Select Router if the Router exists on a network with other routers.</p>
<p>Dynamic Routing (RIP)</p>	<p>Note: This feature is not available in Gateway mode.</p> <p>The default setting is Disable.</p> <p>Dynamic Routing enables the Router to automatically adjust to physical changes in the network's layout and exchange routing tables with other routers. The Router determines the network packets' route based on the fewest number of hops between the source and destination.</p> <p>To enable the Dynamic Routing feature, select Enable. To disable the Dynamic Routing feature for all data transmissions, keep the default setting, Disable.</p>
<p>Static Routing, Destination IP Address, Subnet Mask, Gateway, and Interface</p>	<ol style="list-style-type: none"> To set up a static route between the Router and another network, select a number from the <i>Static Routing</i> drop-down list. (A static route is a pre-determined pathway that network information must travel to reach a specific host or network.) Enter the following data: <ul style="list-style-type: none"> • Destination IP Address - The Destination IP Address is the address of the network or host to which you want to assign a static route. • Subnet Mask - The Subnet Mask determines which portion of an IP address is the network portion, and which portion is the host portion.

	<ul style="list-style-type: none"> • Gateway - This is the IP address of the gateway device that allows for contact between the Router and the network or host. <p>3. Depending on where the Destination IP Address is located, select LAN & Wireless or Internet (WAN) from the <i>Interface</i> drop-down menu.</p> <p>4. To save your changes, click the Apply button. To cancel your unsaved changes, click the Cancel button.</p> <p>For additional static routes, repeat steps 1-4.</p>
<p>Delete This Entry</p>	<p>To delete a static route entry:</p> <ol style="list-style-type: none"> 1. From the <i>Static Routing</i> drop-down list, select the entry number of the static route. 2. Click the Delete This Entry button. 3. To save a deletion, click the Apply button. To cancel a deletion, click the Cancel button.
<p>Show Routing Table</p>	<p>Click the Show Routing Table button to view all of the valid route entries in use. The Destination IP address, Subnet Mask, Gateway, and Interface will be displayed for each entry. Click the Refresh button to refresh the data displayed.</p> <ul style="list-style-type: none"> • Destination LAN IP - The Destination IP Address is the address of the network or host to which the static route is assigned. • Subnet Mask - The Subnet Mask determines which portion of an IP address is the network portion, and which portion is the host portion. • Gateway - This is the IP address of the gateway device that allows for contact between the Router and the network or host. • Interface - This interface tells you whether the Destination IP Address is on the LAN & Wireless (internal wired and wireless networks), the WAN (Internet), or Loopback (a dummy network in which one PC acts like a network—necessary for certain software programs).

* Click **Apply** to save your settings.

4.11. DDNS

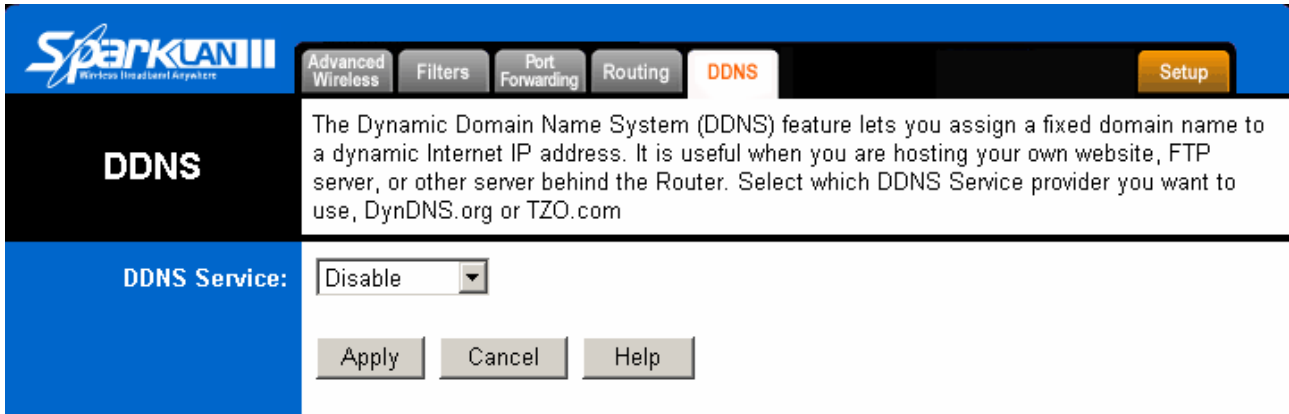

The Router offers a Dynamic Domain Name System (DDNS) feature. DDNS lets you assign a fixed host and domain name to a dynamic Internet IP address. It is useful when you are hosting your own website, FTP server, or other server behind the Router. Before using this feature, you need to sign up for DDNS service with one of two DDNS service providers, DynDNS.org or TZO.

DynDNS.org

DDNS Service	To disable DDNS Service, keep the default setting, Disable . To enable DDNS Service using DynDNS.org, follow these instructions: <ol style="list-style-type: none"> 1. On the <i>DDNS</i> screen, select DynDNS.org from the <i>DDNS Service Provider</i> drop-down menu. 2. Sign up for DynDNS service at www.dyndns.org (you can click the link on the <i>DDNS</i> screen). Write down your account information. 3. Complete the <i>User Name</i>, <i>Password</i>, and <i>Host Name</i> fields. 4. Click the Apply button to save your changes. Click the Cancel button to cancel unsaved changes.
Internet IP Address	The Router's current Internet IP Address is displayed here.
Status	The status of the DDNS service connection is displayed here.

TZO.com

DDNS Service	To disable DDNS Service, keep the default setting, Disable . To enable DDNS Service using TZO.com, follow these instructions: <ol style="list-style-type: none"> 1. On the <i>DDNS</i> screen, select TZO.com from the <i>DDNS Service Provider</i> drop-down menu. 2. Sign up for a free, 30-day trial of TZO service at sparklan.tzo.com, or order TZO service at www.tzo.com/order.html (you can click the appropriate link on the <i>DDNS</i> screen). Write down your account information. 3. Complete the <i>Email Address</i>, <i>TZO Password Key</i>, and <i>Domain Name</i> fields. 4. Click the Apply button to save your changes. Click the Cancel button to cancel unsaved changes.
Internet IP Address	The Router's current Internet IP Address is displayed here.
Status	The status of the DDNS service connection is displayed here.

* Click **Apply** to save your settings.

5. Troubleshooting

Basic Functions

Note: If you are using a cable or DSL modem and are experiencing problems connecting to the Internet, follow these steps:

1. Power off your cable or DSL modem, PC, and the Router.
2. Power on your modem and wait a few minutes until the modem has established a connection with your ISP.
3. Power on the Router.
4. Power on your PC and attempt to connect to the Internet. For most users, the Router's default values should be satisfactory. Some users may need to enter additional information in order to connect to the Internet through their ISP or broadband (cable or DSL) carrier. For example, some cable providers require a specific MAC address for connection to the Internet. To learn more about this, click the **Advanced** tab and then the **MAC Address Clone** tab.

My Wireless AP Router will not turn on. No LED's light up.

Cause:

- The power is not connected.

Resolution:

- Connect the power adapter to your AP and plug it into the power outlet.

Note: Only use the power adapter provided with your AP. Using any other adapter may damage your AP Router.

LAN Connection Problems I can't access my AP Router.

Cause:

- The unit is not powered on.
- There is not a network connection.
- The computer you are using does not have a compatible IP Address.

Resolution:

- Make sure your AP is powered on.
- Make sure that your computer has a compatible IP Address. Be sure that the IP Address used on your computer is set to the same subnet as the AP. For example, if the AP is set to 192.168.1.1, change the IP address of your computer to 192.168.1.15 or another unique IP Address that corresponds to the 192.168.1.X subnet.

Use the Reset button located on the rear of the AP Router to revert to the default settings.

I can't connect to other computers on my LAN.

Cause:

- The IP Addresses of the computers are not set correctly.
- Network cables are not connected properly.

- Windows network settings are not set correctly.

Resolution:

- Make sure that each computer has a unique IP Address. If using DHCP through the AP Router, makes sure that each computer is enable DHCP function and restart the computer.
- Make sure that the Link LED is on. If it is not, try a different network cable.
- Check each computer for correct network settings.

Wireless Troubleshooting

I can't access the Wireless AP Router from a wireless network card

Cause:

- Out of range.
- IP Address is not set correctly.

Resolution:

- Make sure that the Mode, SSID, Channel and encryption settings are set the same on each wireless adapter.
- Make sure that your computer is within range and free from any strong electrical devices that may cause interference.
- Check your IP Address to make sure that it is compatible with the Wireless AP Router.