

ACCUSPLIT[®] ALLIANCE™ 609T

OPERATING INSTRUCTIONS

RESET

- Two button Reset (press MIN and SEC at the same time).

SETTING COUNTDOWN TIMER

- Enter Minutes by pressing MIN button in one min. increments (0 – 99).
- Enter Seconds by pressing SEC button in one sec. increments (0 – 59).
- Repeat as necessary.

STARTING AND STOPPING COUNTDOWN FUNCTION

- Press the START-STOP button to START the countdown timer.
- Press the START-STOP button to STOP the countdown timer.

STARTING AND STOPPING COUNT-UP FUNCTION

- Starting from 00:00,
- Press the START-STOP button to START count-up. (There is no alarm for this setting, as it will continue to count up until it is stopped.)
 - Press the START-STOP button to STOP count-up.

PRODUCT SPECIFICATIONS

Operating Temperature:
14°F – 138°F (-10°C – 59°C)

Battery:

- When LCD Display becomes dim, replace battery with LR-44 or equivalent.
- 18-Month Circuit Battery Life (reduced dependent on extensive alarm usage).

REGISTER NOW Please return your AL609T Registration to the Repair Center address in the warranty, & we will let you know about future products.

Email (preferred) _____

User _____

ACCUSPLIT, Inc.

3090 Independence Drive,, Suite 148
Livermore, CA 94551 USA

800-935-1996 • 925-290-1900 • FAX 925-290-1930
www.ACCUSPLIT.com • support@ACCUSPLIT.com

NO-PROOF-OF-PURCHASE LIMITED WARRANTY

See label on the back of your timer.

ASSEMBLED IN PRChina
© 2005 ACCUSPLIT