 


# morphy richards®

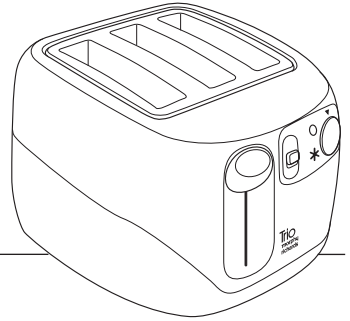

 
## 3 slice Trio toaster

CE

### Dear Customer

Morphy Richards present the Trio 3 slice toaster, a brand new concept in vari-width toasters. It has 3 extra wide, extra deep slots which can toast a wide range of items, reflecting today's changing eating habits.

The Trio can toast 1, 2 or 3 slices of bread and its vari-width slots can toast thick or thin slices. It can toast one side only in the 2 outer slots - perfect for burger buns and bagels. It also has a single slice facility in the centre slot, which is ideal for quick snacks, and saves heating the whole machine for just one slice.

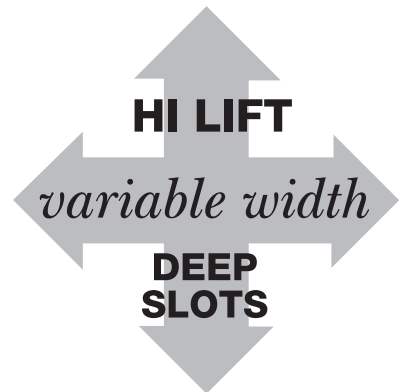

Please read the instruction book carefully before using your toaster, so you can gain maximum benefit from your appliance.

# IMPORTANT SAFEGUARDS

- 1 Read all instructions.
- 2 Do not touch hot surfaces. Use handles or knobs.
- 3 To protect against fire and electrical shock do not immerse cord, plug or toaster itself in water or other liquid.
- 4 Ensure that this toaster is situated out of the reach of children. Children should never be allowed to operate this toaster.
- 5 Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- 6 Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Should you require service, advice or repairs to your toaster, please use the freephone number.  
This product contains no user-serviceable parts.
- 7 The use of accessory attachments not recommended by the toaster manufacturer may cause injuries.
- 8 Do not use outdoors.
- 9 Do not let cord hang over edge of table or counter, or touch hot surfaces.
- 10 Do not place on or near a hot gas or electric burner, or in a heated oven.
- 11 Do not attempt to move your toaster whilst hot.
- 12 When unplugging, turn any control to off, then remove plug from wall outlet.
- 13 Do not use your toaster for other than intended use.
- 14 Preheating of this toaster is not required.
- 15 DO NOT TOUCH THE METAL TOP RIM OF THE TOASTER DURING

OR AFTER USE AS THIS GETS VERY HOT.

 
- 16 ENSURE THAT SUFFICIENT SPACE IS LEFT ABOVE AND AROUND ALL SIDES OF YOUR TOASTER TO ALLOW AIR TO CIRCULATE. DO WATCH YOUR TOASTER DURING USE. A FIRE MAY OCCUR IF TOASTERS ARE COVERED OR TOUCHING FLAMMABLE MATERIAL, INCLUDING CURTAINS, DRAPERIES, WALLS, AND THE LIKE, WHEN IN OPERATION.
- 17 Oversize foods, metal foil packages, or utensils must not be inserted into a toaster, as they may involve a risk of fire or electric shock.
- 18 Do not attempt to dislodge food when toaster is plugged in and never introduce cooking utensils into the slots.
- 19 Do not place bread or other items on top of the bread slots as this will damage your toaster and creates a fire hazard.  
Worth noting: If your toaster does not work, check the following points:
- 20 Has the toaster been set correctly - is the plug in its socket and the switch in the 'on' position?
- 21 Is the plug itself or the socket faulty - check this by plugging in another appliance.
- 22 Does the fuse need replacing - if you have fitted your own plug, are the internal plug connections secure and correctly made?
- 23 Do not lift or move the toaster by inserting fingers in bread slots.

## SAVE THESE INSTRUCTIONS

Please take time to read this useful information before using your 3 slice Trio toaster

### Position 3

function  
switch in  
upper  
position →

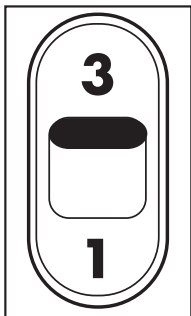


### Toasts 2 or 3 slices

Use this setting when toasting 2 or 3 slices of bread. This function toasts both sides in all 3 slots. Ideal for:

- Normal sliced bread
- Thin slices
- Thick slices
- English muffins
- Fruit bread
- Crumpets
- Waffles

### Position 1

 function  
switch in  
lower  
position →

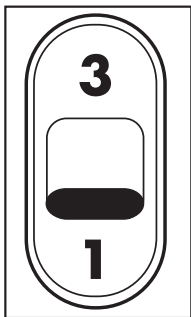


### 1 side only (in 2 outer slots)

This function toasts *one side only*. To prepare, slice the item in half if required. Place the item(s) in the two outer slots and proceed as normal, this is ideal for:

- Burger buns
- Bagels
- Fruit scones
- English muffins
- Crumpets
- Tea cakes
- Bread rolls
- Bread crusts
 
### Position 1

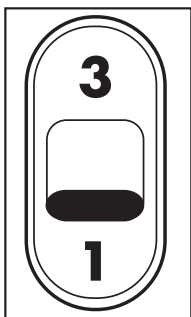

### 1 slice only (centre slot)

If you wish to toast one slice of bread only, place the bread in centre slot and proceed as normal. This function toasts both sides in the centre slot, which is ideal for quick snacks for any member of the family.

## Warning

*We recommend that Pop Tarts and pitta breads are not used in the Trio toaster.*

# Electrical requirements

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).

 
If the socket outlets in your home are not suitable for the plug supplied with this appliance, the plug should be removed and the appropriate one fitted.

Note: The plug removed from the mains lead, if severed, must be destroyed as a plug with bared flexible cord is hazardous if engaged into a live socket outlet.

**WARNING: THIS APPLIANCE MUST BE EARTHED**


Should the fuse in the 13 amp plug require replacement, a BS1362 13 amp fuse must be fitted.

# Features of your toaster

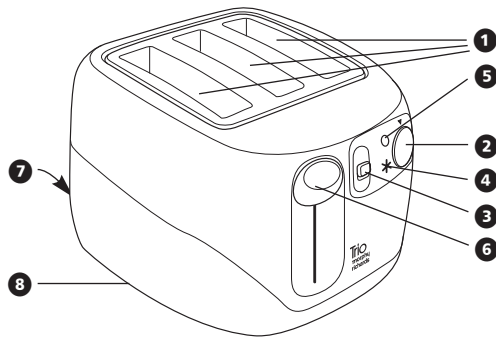

- 1 Variable width bread slots
- 2 Electronic variable browning control
- 3 2 position function switch
- 4 Frozen bread button
- 5 Cancel button
- 6 Bread carriage lever/hi lift for small items
- 7 Removable crumb tray (at rear)
- 8 Cord storage (on base)

## Control Panel

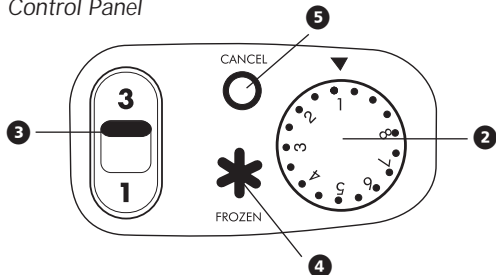 

# Instructions for use

 
**Please read before use, taking careful note of points 1 to 3**

- 1 Before plugging in ensure that the carriage lever **6** is in the upper position.
- 2 Use your toaster once without bread. This will pre-heat the new elements and burn off any dust which may have accumulated during storage.
- 3 Select the desired level of browning on the browning control **2** marked 1 to 8. You will need to vary the setting according to the moisture content and thickness of bread. For best results ensure that the bread slices are of even thickness, freshness and size. The variable width bread slots will accept thicker or thinner bread than a conventional toaster. Remember that stale bread toasts more rapidly than fresh and thin bread toasts quicker than thick. See the 'additional points' section for more information.


- 4 After selecting the desired setting, place your bread in the slots and depress the bread carriage lever **6** downwards until it locks.

*Note: The bread carriage lever will not stay down unless the toaster is plugged in and wall switch is on.*


- 5 When the toast is cooked, it will pop-up automatically ready for removal from the slots. The bread carriage lever will have returned to its upper position and disconnected the element, ready for the next toasting.
  - If the first slices are not dark enough turn the browning control to a higher setting.
  - If the first slices are too dark turn the browning control to a lower setting.
  - When toasting two slices, put the bread in the two outer slots for best results. One side may appear to be a darker colour than the other. This is quite normal and is not a fault.
  - If the bread in your toaster becomes jammed, disconnect your toaster at the socket, allow it to cool, then remove the bread.
  - When not in use, switch your toaster off at the mains and remove the plug from the socket. **DO NOT WRAP THE CABLE AROUND THE MAIN BODY OF THE TOASTER DURING OR IMMEDIATELY AFTER USE. THE CABLE STORAGE AREA UNDERNEATH THE TOASTER SHOULD BE USED.**

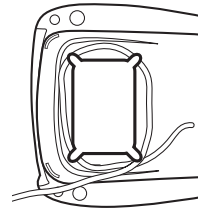

## Using the cancel button

If you wish to interrupt the toasting process, press the cancel button .

## Using the frozen bread button

To toast frozen bread, do not adjust the browning control, place the bread normally in the bread slots, depress the bread carriage lever and press the frozen bread button . The button will illuminate and the toaster will automatically toast for an extended period.


## Using the high lift release

 
If small bread is toasted, this may be removed more easily by raising the bread carriage lever to its highest position.

# Cleaning

- 1 After use and before cleaning, switch off at the mains, remove the plug and wait for the toaster to cool.
  - 2 Wipe the outside of the toaster with a damp cloth only and dry with another cloth or tissue.
- NEVER use metal polish or coarse scouring agents and never immerse your toaster in any sort of liquid.
  - NEVER use any pointed or sharp articles for cleaning the inside, otherwise the heating element will be damaged.
  - NEVER use a brush or push your fingers or metal objects down the slots.

## Crumb tray

Crumbs will accumulate in the crumb tray and could catch fire if not emptied periodically. When the toaster has cooled down completely, tap the sides of the case lightly to dislodge any crumbs lodged in the toasting chamber and pull out the crumb tray . Empty the tray and replace it.

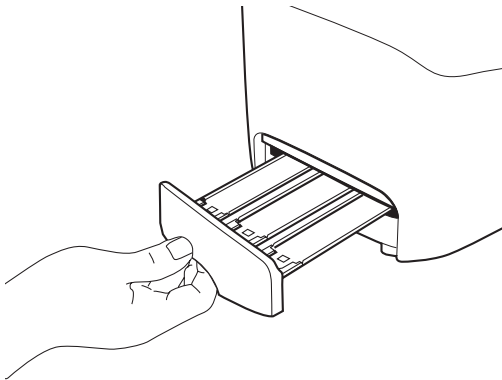

# Additional points

- In order to achieve uniform browning, we recommend you wait a minimum of 30 seconds between each toasting, so that the control can automatically be reset.
- If toasting one slice only, you may need to adjust the browning control to a slightly lower setting.
- Stale bread toasts more rapidly than fresh bread. Therefore, the browning control should be set at a lower setting than usual.
- Because of the variable width bread slots feature, all sorts of bread can be used as well as teacakes, small rolls etc. Slices should not however be so thick as to cause burning or jamming within the bread slots.
- When toasting multiple slices it is recommended they are of equal size and freshness.
- Allow the toaster to cool fully before putting away.

# Two year guarantee

This guarantee is valid in the UK and Ireland only. It is in your interest to retain the retailers receipt as proof of purchase. Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model No. \_\_\_\_\_ Serial No. \_\_\_\_\_

All Morphy Richards Products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 24 months of original purchase, you should contact the freephone number quoting Model number and Serial number on the product, or write to the address below. You will be asked to return the product (in secure, adequate packaging) to the address below along with a copy of proof of purchase. Subject to the exclusions set out below (see 'Exclusions') the faulty appliance will then be repaired or replaced and dispatched usually within 7 working days of receipt.

If for any reason this item is replaced during the 2 year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee the appliance must have been used according to the manufacturers instructions. For example kettles should have been regularly descaled or an iron cord should have been stored as recommended by the instructions.

## EXCLUSIONS

Morphy Richards shall not be liable to replace or repair the goods under the terms of the Guarantee where:

- 1 The fault has been caused or is attributable to accidental use, mis-use, negligent use or used contrary to the manufacturers recommendations or where the fault has been caused by power surges or damage caused in transit.
- 2 The appliance has been used on a voltage supply other than that stamped on the products.
- 3 Repairs have been attempted by persons other than our service staff (or authorised dealer).
- 4 Where the appliance has been used for hire purposes or non-domestic use.
- 5 Morphy Richards are not liable to carry out any type of servicing work, under the guarantee.
- 6 Plastic filters for all Morphy Richards kettles and coffee makers are not covered by the guarantee.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.

*Morphy Richards products are intended for household use only.*

*Morphy Richards has a policy of continuous improvement in product quality and design. The Company, therefore, reserves the right to change the specification of its models at any time.*

# morphy richards®

Morphy Richards Limited, Mexborough,  
South Yorkshire, England S64 8AJ

444-8304-87 Rev OI June '99