

MARGARITA OASIS™
MOS-400 Series



FOR HOUSEHOLD USE ONLY

**READ THESE INSTRUCTIONS BEFORE
USING THIS UNIT!**

SAVE THESE INSTRUCTIONS!

IMPORTANT PRECAUTIONS

Appliance Specifications:

450 Watts 120V / 60HZ

Important Precautions to Remember:

- A. NEVER immerse the MARGARITA OASIS™ base or cord in water.
- B. NEVER use near water.
- C. NEVER leave unit unattended if used near children.
- D. NEVER use a scouring pad on the MARGARITA OASIS™.
- E. NEVER use an abrasive sponge or harsh cleaning products on the MARGARITA OASIS™.
- F. NEVER use for anything other than what this item was originally intended.
- G. Avoid contact with moving parts.
- H. DO NOT operate this appliance with a damaged cord or plug, or in the event the appliance ever malfunctions.
- I. DO NOT place motor base in dishwasher.
- J. Keep out of reach of children.
- K. Unplug MARGARITA OASIS™ from electrical outlet when not in use and before cleaning. Remove plug by gripping the plug body and pulling out of the outlet. Never yank or twist cord to unplug the unit.
- L. This appliance is NOT A TOY
- M. This appliance is not intended for use by young children or infirm persons without supervision.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS before operating this MARGARITA OASIS™

- **Do not use outdoors, FOR HOUSEHOLD USE ONLY.**
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- To protect against electrical shock, do not immerse cord, plugs or unit in water.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Do not operate any appliance with a damaged cord or plug. Should the appliance malfunction or become damaged, return the appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.

IMPORTANT SAFE GUARDS (Continued)

- The appliance manufacturer does not recommend the use of accessory attachments. This may result in injuries.
- Never place fingers or other utensils into feed or discharge areas.
- The cord should be arranged so that it will not drape over the table or counter top in such a way where it can be pulled on by children. This should also reduce the risk of becoming entangled or tripping.
- Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the MARGARITA OASIS™. A scraper may be used, but only when the MARGARITA OASIS™ is not running.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Before plugging your unit into the main electrical supply, make sure the voltage corresponds to that indicated on the maker's nameplate.
- Extreme caution must be used when moving the MARGARITA OASIS™ with liquids.
- Do not use this appliance for other than intended use.
- Blades are sharp. Handle carefully.
- To reduce the risk of injury, never place cutter-assembly blades on base without pitcher properly attached.
- Always operate the MARGARITA OASIS™ with cover in place.
- A unit that is plugged into an outlet should not be left unattended.
- Check the ice shaving chamber for presence of foreign objects prior to use.
- Make sure the glass pitcher with blender base is properly attached before inserting into MARGARITA OASIS™ base unit.

PRE-USE PREPARATION AND ASSEMBLY


Prepare for first use by thoroughly washing the glass pitcher, lid, blending blade and base, clear ice bowl, see through ice cover, and water reservoir in warm sudsy water and thoroughly dry. DO NOT put the motor base in water. To clean the motor base when needed, use a damp cloth to wipe the exterior, and then dry off with a clean, non-abrasive towel. (See Parts Breakdown on page 3).

1. Check the blending base of the glass pitcher to confirm the mixing blade and rubber washer are in place and the base has been properly attached.
2. Set the pitcher lid on the mouth of the glass pitcher. Note the ice shaving chute goes up and down to allow for the insertion of the pitcher. Tip the pitcher slightly as you insert the mouth of the pitcher under the ice shaving chute, pushing upward and simultaneously setting the pitcher base onto the motor base. (See Photo Illustration on page 4.)
3. To open the ice shaving chamber located at the top of the motor base, push the front tab away from you. With your thumb on the tab and your first two fingers hooked into the lip (located directly across from the tab over clear window), gently lift up.

PRE-USE PREPARATION AND ASSEMBLY (Continued)

4. To close the ice chamber lid, note the two hinge holes located at the top back of the motor base that will accept the two hinges located on the underside of the ice chamber lid. Set the hinges in place as **this is an important step in properly repositioning and closing the lid**. Next, make sure the tab extrusion located at the front (opposite end) of the lid is positioned to fit into the groove located at the front inside top of the ice chamber. **The proper insertion of the tab into the groove is mandatory in order for the MARGARITA OASIS™ to operate.** (See Illustration C on page 4.)
5. Your lid should close and snap shut with the lid fitting smoothly into place.
6. The water reservoir is located at the rear side of the motor base. It is removable and snaps in and out for easy cleaning.

PARTS BREAKDOWN

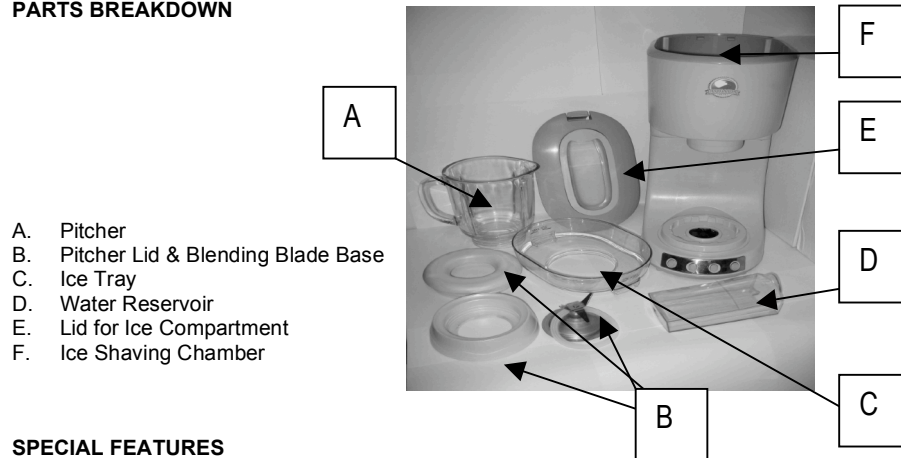


- A. Pitcher
- B. Pitcher Lid & Blending Blade Base
- C. Ice Tray
- D. Water Reservoir
- E. Lid for Ice Compartment
- F. Ice Shaving Chamber

SPECIAL FEATURES

Your MARGARITA OASIS™ is a frozen drink machine that will make perfect frozen drinks such as margaritas, daiquiri or smoothies every time!

- Your MARGARITA OASIS™ has a generous 36 ounce glass pitcher with liquid measurements on the side, and is ideal for small groups. Note: the pitcher will actually hold more liquid but has been marked to allow for ice shaving volume. *IF USING THE ICE SHAVER, MAKE SURE TO FILL THE PITCHER WITH NO MORE THAN 24 OZ. OF LIQUID. EXCEEDING THIS AMOUNT WILL RESULT IN SPILLAGE.
- The MARGARITA OASIS™ allows you a choice of shave pulse, shave constant, blend pulse, blend constant and shave/blend simultaneously.
- By choosing constant or pulsating action to control the amount of shaved ice to your beverage, the MARGARITA OASIS™ is designed to ensure the right amount of shaved ice and drink mix is proportionately added.
- The attractive, thin, upright design will take a limited amount of space on the counter.
- Motor base unit has a rear water reservoir. Melting ice is channeled into reservoir to prevent watered-down margaritas and other frozen drinks. Cord storage is also located at the back.

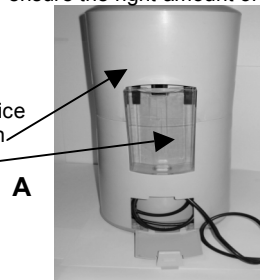


OPERATING YOUR MARGARITA OASIS™

Now that you have cleaned and reassembled your MARGARITA OASIS™, making perfect frozen drinks is both easy and fun!

Make sure you have taken steps 1 through 4 listed on pages 2 and 3 (Pre-use and Preparation Assembly) before moving on to step 5.

- A. Fill the pitcher with your favorite liquor, mix or fruit. You may choose to follow one of the recipes included in this booklet. Put the lid on the pitcher, and set the pitcher in place (refer to page 3 Pre-use Preparation and Assembly for proper placement and insertion).
- B. Open the ice compartment and remove any foreign objects. Add enough cubed ice to fill, but not exceed, the max fill line.
- C. Select the desired blending and ice settings by pushing the buttons located at the bottom of your MARGARATOR OASIS.™

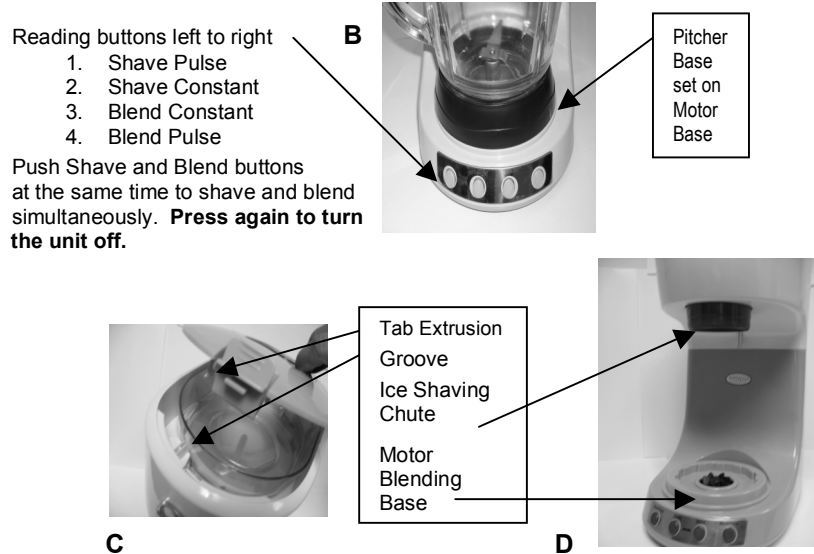

CLEANING

1. After using your MARGARITA OASIS™, disconnect from electrical outlet. Remove plug by gripping the plug body and pulling out of the outlet. Never yank or twist cord to unplug the unit.
2. Thoroughly wash the clear pitcher and lid, blending blade with washer ring and base, clear ice tray, ice compartment lid, and water reservoir in warm sudsy water and thoroughly dry. **DO NOT** put the motor base in water. When needed, use a damp cloth to wipe exterior.
3. Once washing and thorough drying is complete, reassemble your MARGARITA OASIS™. Wind the cord and return to the convenient storage location at the rear of the motor base. Now your MARGARITA OASIS™ is ready to use again.

Easy as 1 -2 -3, easy to use, easy to clean, easy to store!

RECIPE IDEAS

Use your imagination to create many different drinks with your MARGARITA OASIS™. Here, you will find several recipes. You can adjust the ingredients to your particular taste, or create your own – so have fun! If you have a recipe for a drink made for ‘1’ – your MARGARITA OASIS™ has the capacity for 10 – 8 oz. drinks – so remember to adjust your recipes accordingly.

Basic Margarita (Serves 1)

2 shots Tequila
 1 shot Triple Sec
 1 1/2 cups Margarita Mix
 1 shot freshly squeezed Lime Juice
 Salt & Lime wedge for glass

LEGEND

1 Shot = 1 1/2 ounces (45ml)
 1 Cup (239.85 ml) = 5.33 Shots

Strawberry Mango Margarita (Serves approx 15)

1 1/2 cups Tequila
 7 cups Mango Juice
 *8 - 16 oz fresh strawberries (cut / quartered)
 Salt rim of glasses (if desired)
 *frozen strawberries can be substituted for fresh strawberries.

Strawberry Daiquiri Slush with Honeydew Melon (Serves 4)

1 (12 oz) pkg. frozen unsweetened strawberries
 1 1/3 cup light corn syrup
 2/3 cup White Rum
 3 Tbs fresh Lime Juice
 1/2 ripe Honeydew Melon, seeded and fresh, cut into 1/2 inch cubes
 Lime slices for garnish

Orange Julius Slush (Serves 2)

2 1/2 oz. Malibu Rum
 12 oz. Orange Juice
 2 1/4 oz. Vodka

Apricot Smoothie (Serves 2)

2 oz. White Rum
 1 oz. Triple Sec
 6 oz. Apricot Juice
 1/2 oz. Cream

Kahlua Colada (Serves 1)

1 1/2 oz. Kahlua
 1/2 oz. Rum
 2 1/4 oz. Coconut Crème
 2 1/4 oz. Pineapple Juice
 1/2 oz. Crème

RETURNS & WARRANTY

SHOULD YOUR UNIT NOT WORK OR IS DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX, PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY.

Should you have any questions, please contact us via email or at the customer service number listed below between the hours of 8:00 AM and 5:00 PM, Monday through Friday, Central Standard Time.

Distributed by:

Nostalgia Products Group LLC
1471 Partnership Dr.
Green Bay, WI 54304-5685

Customer Service

Phone: (920) 347-9122
Web: www.nostalgielectrics.com

Customer Service Inquiry

To submit a Customer Service inquiry, go to www.nostalgielectrics.com and fill out the **Customer Service Inquiry** form and click the Submit button. A representative will contact you as soon as possible.

MARGARITA OASIS™

MOS-400 Series
Limited Warranty

This appliance is designed and built to provide many years of satisfactory performance under normal household use. The distributor pledges to the original owner that should there be any defects in material or workmanship during the first 90 days of purchase, we will repair or replace the unit at our option. Our pledge does not apply to damages caused by shipping, mishandling or unit being dropped. A product deemed defective either from manufacturing or being mishandled is up to the distributor's discretion. To obtain service under this warranty, return this unit to Nostalgia Products Group, LLC at the address above, shipping prepaid. You must also include a copy of the original receipt along with your name, address and phone number. Include a description of the defect along with the date you purchased the product.

This warranty does not apply to re-manufactured merchandise.

Please read these instructions carefully. Failure to comply with these instructions, damages caused by improper replacement parts, abuse or misuse will void this pledge to you and is being made in place of all other expressed warranties.



Nostalgia Products Group LLC
1471 Partnership Dr.
Green Bay, WI 54304-5685

Visit Us Online at
www.nostalgielectrics.com

©2009 Nostalgia Products Group LLC

Rev. 6/16/09
