

Welcome to your fax machine

- A** Control panel
- B** Exit document extension tray
- C** Exit document tray
- D** Recording paper tray
- E** Recording paper cassette
- F** Side cover
- G** Top cover release button
- H** Telephone connection
- I** Document tray
- J** Control panel release button
- K** Document guides

1 DISPLAY

Displays indications about the operating modes of your fax machine. Your control monitor for all function settings.

2 Warning lamps

If there is a malfunction on your fax machine, the lamp under the corresponding symbol will light up.



Paper jam:
Indicates that there is a document jam or copy paper jam. (see page 116/117)



Paper out:
Indicates that the user must replenish the copy paper. (see page 9)



Toner out:
Indicates that the user will use have to replenish the toner. (see page 6)



Drum operating time:
Indicates that the printing unit will soon have to be replaced. (see page 8)



Alarm lamp:
Indicates an operating malfunction which cannot be clearly identified. Please contact service personnel in these cases.

3 MENU KEYS

Use these keys to select the menu or a specific menu item.

DTMF key (▼)

When the pulse dialling mode has been selected (see page 14), this button temporarily switches over the dialling procedure to DTMF.

4 DIAL KEYPAD

Used for entering telephone numbers or selecting characters.

5 MONITOR

When you press this key, the fax machine connects to the line and the speaker enabling the user to listen into the call establishment attempt is activated. The subsequent fax connection is handled directly, i.e. without job administration via the memory.

6 REDIAL / PAUSE

Activates the last number dialled, inserts a dialling pause.

7 SPEED DIAL

Press this key to select a stored alphabet dial number, a name or a group.

8 Line lamp

Indicates transmission on the telephone line.

9 PC COMM lamp

If this lamp flashes, it indicates that data are being transmitted from the PC to the interface (the PC interface is optional).

10 One-touch dial cover for one-touch dial keys 36-69 and function keys.

11 ONE TOUCH DIAL KEYS

Sends documents at the push of a button.

12 JOB STATUS KEY

You can use this key to query the status of individual jobs.

13 JOB CANCEL KEY

Use this key if you wish to cancel a job which has been stored or which is due to be handled.

14 MULTI KEY

To create a group consisting of one-touch dial, ABB dial and manual dial numbers. Available for group dialling as well as for group polling.

15 MODE KEY, with status lamps

Use this key to select the resolution for the current fax job. The status lamps represent the selected mode. If no status lamp lights up, the STD resolution has been set.

16 COPY KEY

The user is able to make copies of documents which have been inserted. If no document has been inserted, press this key to request the journal.

17 TX REPORT KEY

Use this key to set the output criteria for the transmission report.

18 ENTER KEY

Activates selected menu items and also used for terminating data input.

19 STOP KEY

Cancels error messages and terminates menu input.

20 START KEY

Activates transmission, reception (off-hook) and selected menu items.

21 SUPER POWER SAVER KEY

Immediately activates the Super Power Saver features (see page 97).

Contents

Preparation

Unpacking	4
Remove transport fittings:	5
Prepare and insert the printer unit	5
Change toner	6
Replace drum unit	8
Connection to the mains	8
How to insert the recording paper:	9
Install exit paper trays:	9
Insert memory card	10

Installation

The menu system	11
Enter user name	12
Enter terminal ID	13
Setting dialling method	14
Connection to PABX, obtaining a public line/ Digital PABXs	15
Set language	16
Set date and time	17

Reception of documents

Set standby mode	18
Automatic reception	18
Manual reception	18
Reception reduction	19
Memory reception	20
SECURE RX	21
Activate and deactivate Secure Rx	24
Correct sequence printout	25
Multiple printout	26
Delete reception	27
Reception protection	28
Local copy	29
Copy reduction	30

Transmit documents

Document format	31
Automatic fax messages	32
Stack mode	33
Useful job management	34
Important transmission	35
Direct transmission	36
Transmission using alpha dial	37
Transmission one-touch dial	38
Faxing with telephone directory	39
Single multi-address transmission	40
Stored broadcast	41
Monitoring (direkt)	42
Monitoring (by job)	43

Set resolution	44
Set contrast	45
Transmission options, ECM on/off	46
Transmission options, number of pages	47
Transmission options, protected transmission	48
Transmission options, reduced speed	49
Transmission options, send cover sheet	50
Chain dialing	51
Redial	52
Resend (retained job)	53
Cancel a retained job (with retain job)	54
Cancel transmission	55

Polling

Reserve polling	56
Polling protection	57
Reserve polling, permanent (general infobox)	58
Reserve polling, append documents	59
Cancel polling reservation	60
Single polling	61
Multiple polling	62
Cancel polling	64
Program Continuous Polling	65
Reverse direction	67

Store numbers

Alphabet dial memory	69
Alphabet dial options	71
Modify ABB numbers	72
Delete ABB numbers	73
One-touch dial keys	74
Cancel one-touch dial keys	76
Define groups	77
Edit groups	79
Cancel groups	80

Report Prints

Program selection list	81
Transmission reports	81
Transmission report:	83
Multi transmission report	85
Multi polling report	85
Transmission and reception journal	86
The function list	88
Reservation list	88
The dial number lists	90
Department list	91
Mains failure report	91

Advanced settings

Delayed fax job	92
Set transmission header position	93
Reception trailer (RTI)	94
Permanent monitoring	94
Call redial	95
Set ringer volume	96
Power saver (stand by)	97
Cost centre management	98
Divider sheet	98
Department code	99
Modify or delete a department	100
Disable department code	101
Cover sheet	102
Retain jobs	103
Query job status	104
Basic setting, document length	105
Basic setting, transmission memory	105
Basic setting, resolution and contrast	106
Basic setting, ECM (error correction mode)	107
Basic setting, protected transmission	107
Basic setting, superfine reception (only with memory expansion)	108
Additional features (SUB, SEP, PWD)	109
Additional paper cassettes (optional)	109

Possible problems

Error messages in the display	111
Error codes in journal	113
Transmission problems	115
Receiving problems	116
Cleaning document scanner	117
Document jam	117
How to clear a recording paper jam	118
Cleaning the corona	118
Remote maintenance (COMLINE)	119
Connection to PABX	119

UK Connection information

UK Connection information	120
EPA ENERGY STAR	120

Index


Index	121
-------------	-----

Preparation


Unpacking

When unpacking your machine, please check that all parts shown here are present and in perfect condition.


1. Fax machine

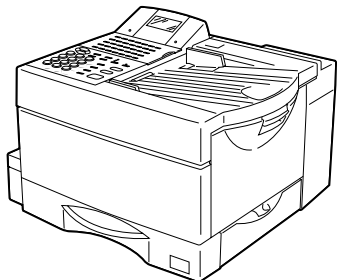


2. Phone line cord

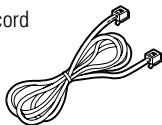

3. Document exit tray

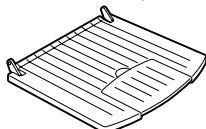


4. Recording paper exit tray

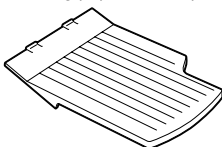


5. Recording paper size label



 
6. Fuser cleaner




7. Developer assembly

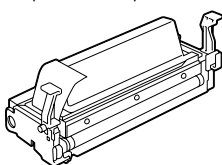


8. Drum unit

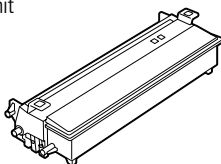


9. User manual

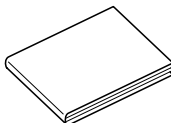

 10. Address sheet




11. Overlay

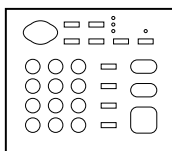

12. AC Power cord



 13. Charger cleaner



14. Scraper



15. Cotton swab



The correct location for your fax machine is easily found:


- near a 230 V AC socket*,
- near a telephone connection, ideally with a single line reserved for your fax machine.

* No other equipment with high power consumption (such as a photocopier) or equipment which generates electrical noise (such as a radio, computer, radio transmitting and receiving equipment) should be connected to this mains supply.

AC power

You will find the mains connection on the back of the machine. The ON/OFF switch is situated above the mains jack. Now switch your machine on.

Please protect your machine from:

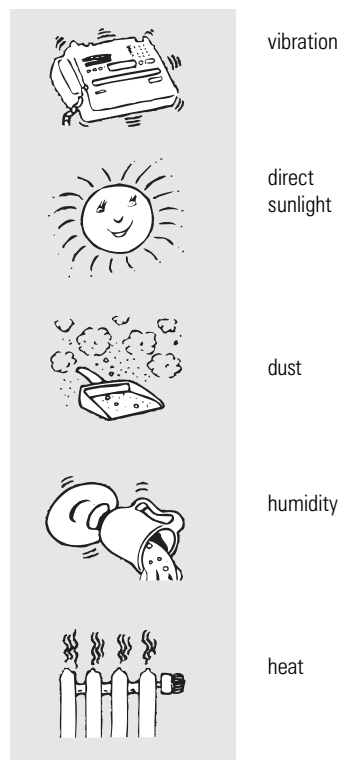

Preparation


Remove transport fittings:

Before you start to use your fax machine, please remove all transport fittings.



Prepare and insert the printer unit

In order to prevent any transport damage, the high-quality printer unit of your new fax machine is supplied with the additional protection of special packaging. Please also follow the enclosed instructions. The printer unit consists of two separate components, namely the drum unit and the developer assembly. Remove these two parts from their packaging and follow the following instructions.

1. Pull the release button to open the fax machine.


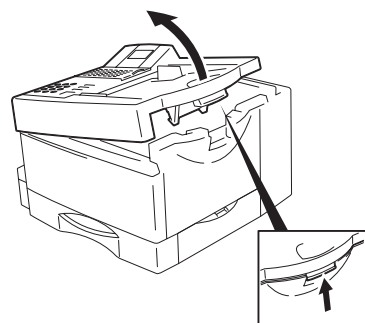


2. Hold the ends of the developer assembly, and shake the assembly several times from side to side. This will loosen the toner.
 - Avoid touching the metal roller.

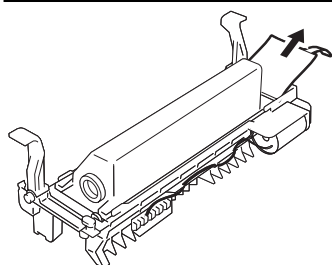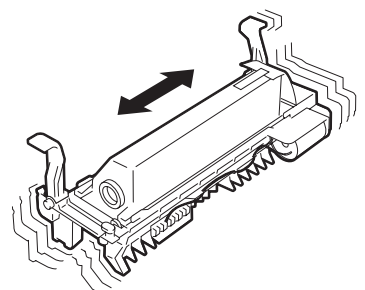


3. Hold the developer assembly securely in one hand, and use your other hand to peel the protective film off from the toner cartridge.
 - Avoid touching the protective film, as there may be toner residues on the film.


4. Take the drum unit and insert it into the developer assembly as detailed in the drawing.
 - Any damage to the printer drum will impair the image quality. You must therefore never touch the green drum surface or expose the drum to direct sunlight for more than three minutes.

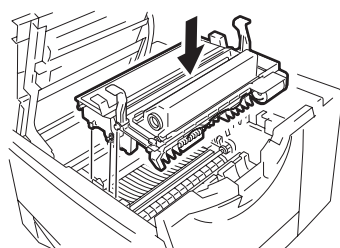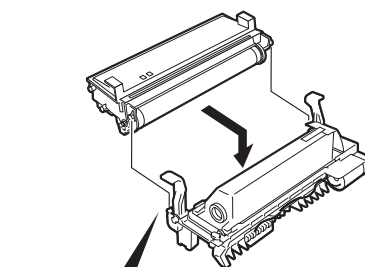

5. Use the green handles to hold the printer unit, and place the unit in the fax machine as detailed in the drawing.

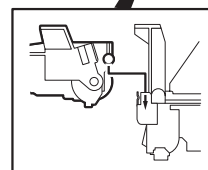


6. Press lightly on the green rectangles on the drum unit so that the unit audibly clicks into position.

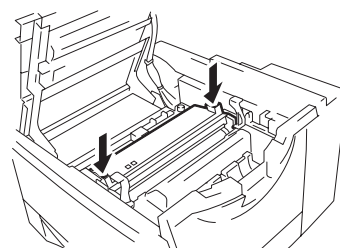


The printer unit must be removed before the machine is transported or moved.



Preparation

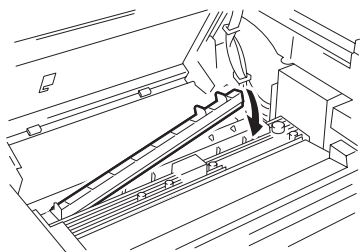

7. Take the fixing roller cleaner out of its packaging and install it as detailed in the drawings.

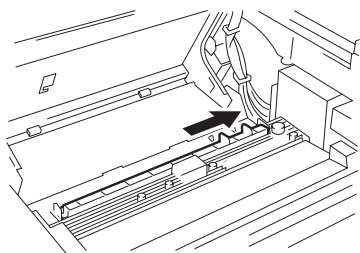

8. Insert the ozone filter.

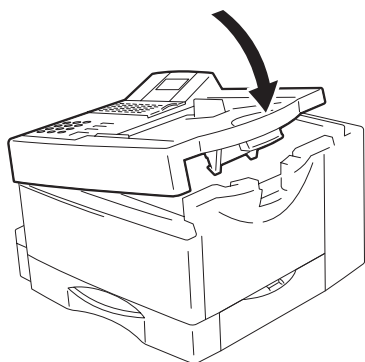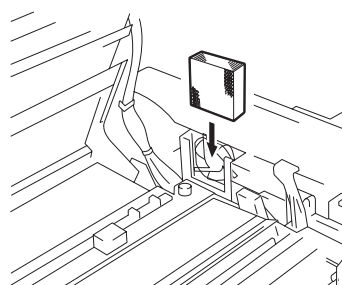


9. Close the cover of the fax machine, which must audibly click into place.



Change toner

As soon as the "toner out" warning lamp (see page 2) lights up on your fax machine, you should replace the toner cartridge. The "TONER LOW" message in the display indicates that the machine can only print out approx. 100 more documents (depending on the print density). If you fail to replenish toner during this period, the "TONER EMPTY" message will appear in the display; this message indicates that no further documents will be printed out. If toner is not replenished, incoming fax documents are saved in memory.

1. Pull the release button to open the fax machine.

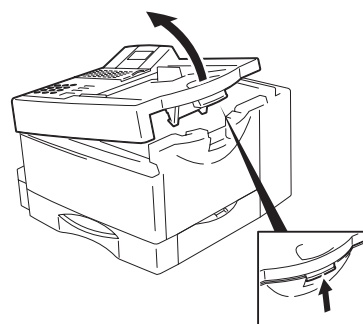



2. Hold the green handles and remove the printer unit.

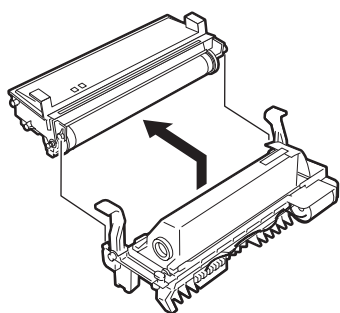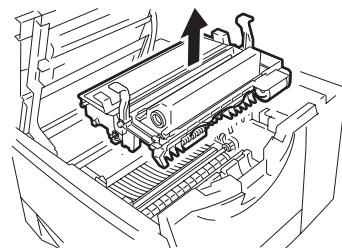


3. Remove the drum unit from the developer assembly.
 - Do not touch the developer roller (the black roller with a toner coating).
 - Any damage to the printer drum will impair the image quality. You must therefore never touch the green drum surface or expose the drum to direct sunlight for more than three minutes.

Preparation

4. Press the green button on the developer assembly, and slide the toner cartridge in the direction of this button. You can then remove the unlocked toner cartridge.

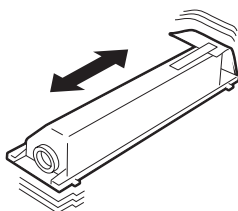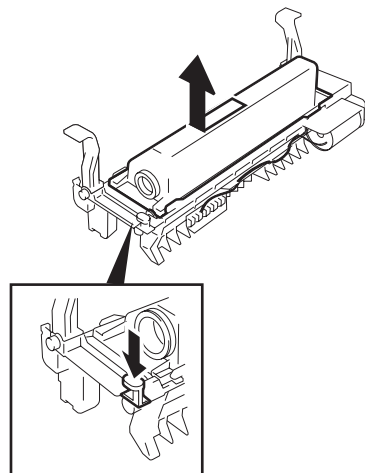

5. Take the new toner cartridge and shake it as detailed in the diagram. This loosens the toner.

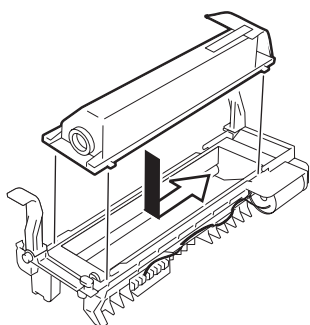

6. Place the toner cartridge on the developer assembly and slide it under the four guides.
7. Then proceed as detailed on page 5.

Caution:

In case you come into contact with toner:

- If any toner dust comes into contact with a textile fabric, remove only by tapping the fabric; if necessary, brush out or use a vacuum cleaner. **Never rub.**
- Wash hands in cold water and clean thoroughly with soap.
- Wash eyes with plenty of water.
- If you have inhaled toner, breath deeply in the open air.
- If toner gets in your mouth, wash it out with plenty of water.
- In an emergency, call a doctor.




Consumables are taken back and recycled by your TOSHIBA dealer.

Preparation


Replace drum unit

As soon as the "drum operating time" warning lamp (see page 2) lights up on your fax machine, you should ensure that a new drum unit is near to hand. The "DRUM LIFE WARNING" message in the display indicates that the fax machine will only print out a further approx. 300 documents (depending on the print density). If you fail to change the drum in this period, the "REPLACE DRUM" message appears in the display; this indicates that the fax machine will not print out any more documents. If the drum unit is not replaced, incoming fax documents are saved in memory.


1. Pull the release button to open the fax machine.

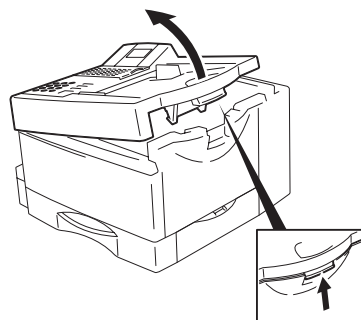


2. Hold the green handles and remove the printer unit.

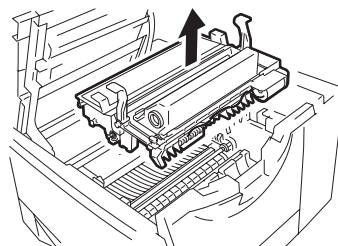


3. Remove the drum unit from the developer assembly.
 - Do not touch the developer roller (the black roller with a toner coating).

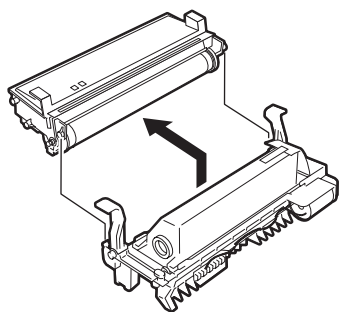

4. Take the new drum unit and insert it into the developer assembly as detailed in the drawing.
 - Any damage to the printer drum will impair the image quality. You must therefore never touch the green drum surface or expose the drum to direct sunlight for more than three minutes.

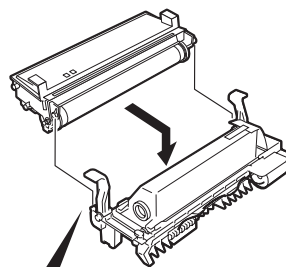

5. Now proceed as described on page 5 (the fixing roller cleaner is **not** replaced).

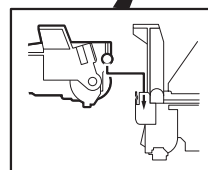


Consumables are taken back and recycled by your TOSHIBA dealer.

Connection to the mains


Telephone connection

Connect your fax machine (LINE jack) to the telephone socket, as shown on the right.

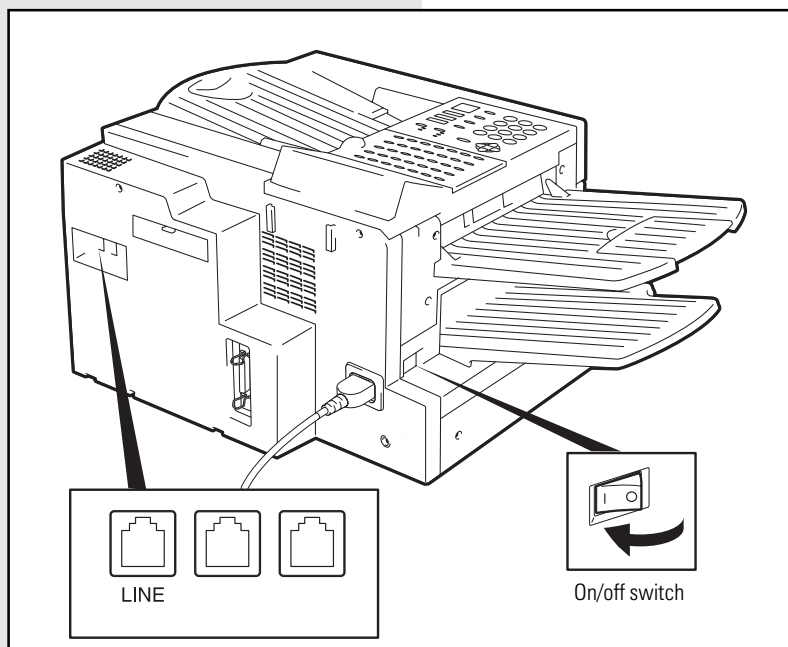



Preparation

How to insert the recording paper:

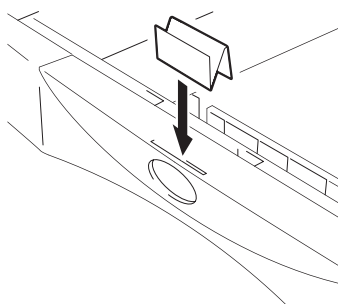



Remove the paper cassette

Insert cassette index (A4).

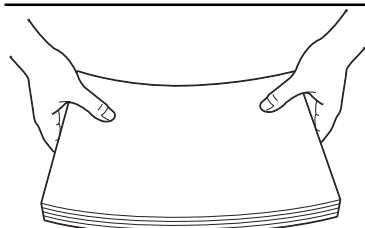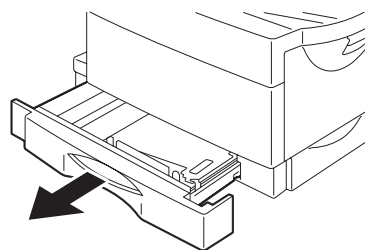

Prepare the recording paper by flexing and fanning out the stack to separate the sheets.

Press down the pressure plate until you hear it lock in place.

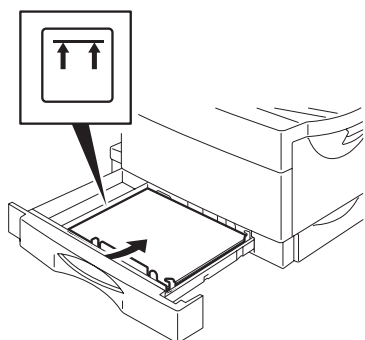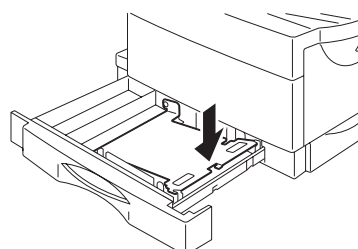

Place the paper so that it lies straight in the cassette with the side to be printed facedown and don't forget:




The paper cassette holds a maximum 250 sheets (80 g/sm). The paper is never stacked above the limit mark. (as shown on the left)


Then: Slide the cassette into the slot until you hear it lock in place.



Do not use damp, wrinkled or torn paper.

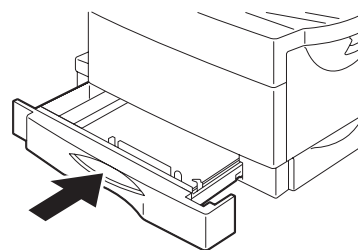


Install exit paper trays:

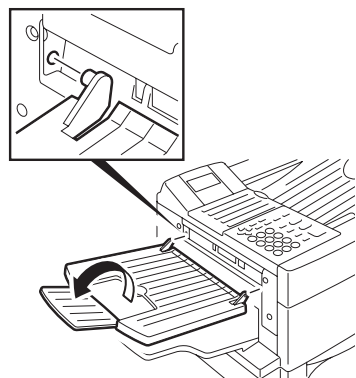

Install the exit paper tray fits in the slots on the left side of the fax.

Secure the document tray. Insert the pins of the tray into the corresponding receptacles. Unfold the extension if required.

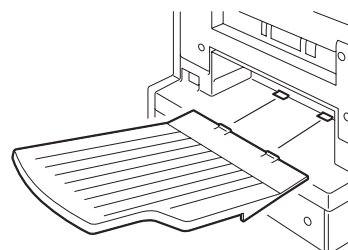


Preparation

Insert memory card


1. Switch your fax machine **OFF**.



Stack memory is deleted when a memory expansion is inserted. Please ensure that, before the memory expansion is inserted, the memory display is 100 % in order to prevent the transmission job being lost.

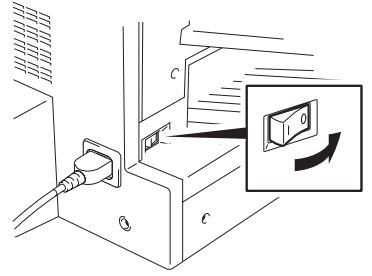


2. Remove the cover for the memory modules.

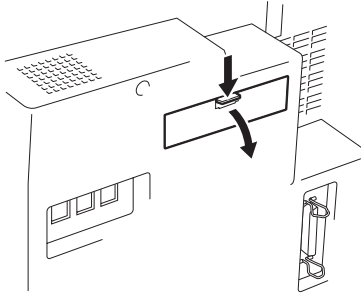

3. Insert the memory expansion card so that the soldered side is pointing upwards.

Close the cover for the memory modules.

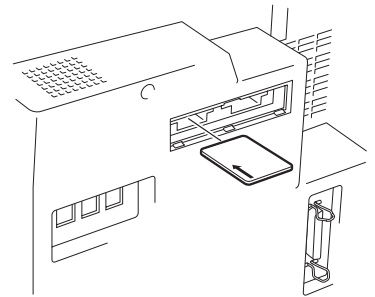

Installation

The menu system

Your fax machine is equipped with a four-line display which provides you with information concerning all operating modes. This display makes it more easy for you to work with the various functions of your fax machine, and everything is set out in a clear menu. Up to four menu items are displayed on each occasion, and a number is assigned to each of these items.

A special group of keys is used for activating the menu as well as for control activities within the various menu levels.





The ▲ key activates the menu and moves the highlight bar up.

The ▼ key moves the highlight bar down.

The ► key selects the appropriate submenu level.

The ◀ key selects the superior menu level.

Once a menu item has been selected with the highlight bar via these control keys, it is activated by pressing the ↵(ENTER) key. Alternatively, you can use the START key for this purpose. It may well happen that more than four items are displayed in one menu. In this case, press the ▲/▼ control keys several times to display these concealed menu items. Example: Menu 3, 1 (Installation, Setup, 1. Menu item highlighted)

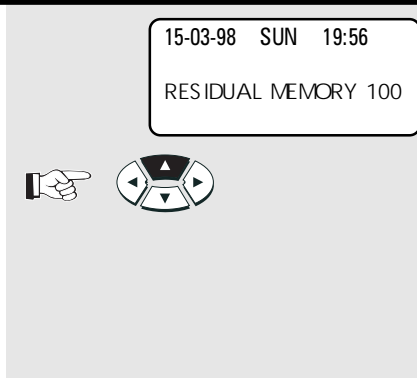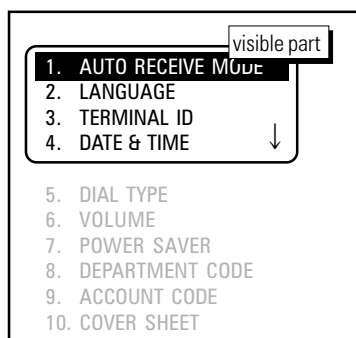


Standby mode



Start the menu

A

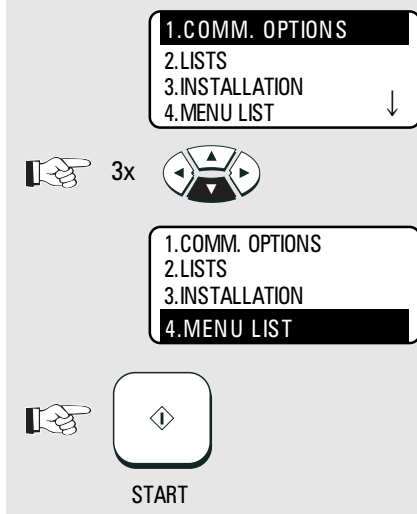


The first 4 menu items are displayed.


Select a menu item

Confirm with Start

B

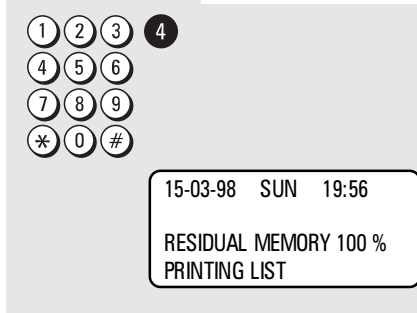

Select a menu item

 To select a sub menu, there is no need to see it in the LCD. The only requirement is that this menu item has to be in the same menu level.

The report is printed.

One version of the menu selection procedure is to enter the corresponding number of the particular menu item. It is not necessary to press the INSERT button. As soon as the relevant number has been entered, the menu item is executed. This is also applicable for the concealed menu items.



If no further key is pressed during a minute, the menu is automatically exited.

Consider the following example in order to familiarise yourself with the menu system. The system prints out the **program selection list**, on which you receive the complete menu structure of your fax machine.

Installation

Enter user name

In order to ensure that a transmitted fax document can also be uniquely identified, a transmission header is printed on the top 5 mm of the document. This transmission header contains various items of information, incl. the user name and the sender ID of the fax machine which transmitted the documents.


User name:

You can enter any 40 characters (max.) for the user name.

Use the number keypad for entering the characters. Several characters are assigned to each number, and the characters can be selected by repeatedly pressing the corresponding key.

The following table sets out all characters which are allocated to the various number keys.

Key	Allocated characters
1	1
2	ABC2abcAAAÁÀÆßàáâãäåæç
3	DEF3defÉÊËÈèéêë
4	GHI4ghilíllí
5	JKL5jkl
6	MNO6mnoNñòóôõö
7	PQRS7pqrs
8	TUV8tuvUÚÜUúüÜü
9	WXYZ9wxyz
0	(+)0 space 0ø!#S%&*-/:=@?`

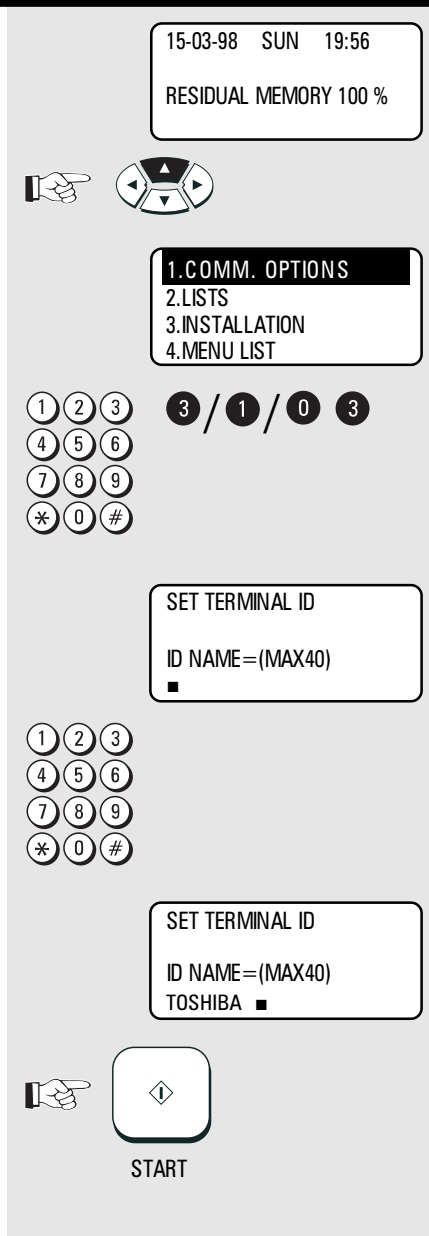

Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item

Make your selection

Enter the name

Example: Toshiba

1 x 8 > T 7 x 4 > i
 7 x 6 > o 6 x 2 > b
 9 x 7 > s 5 x 2 > a
 6 x 4 > h

Name is ready...

Confirm with START

Continue with „Enter the terminal ID“

Place character:

The character of your choice is placed wherever the flashing cursor is located. Please use the ◀ / ▶ keys to control the highlighted input.

Cancel characters:

Move the highlighting to the appropriate position and press the DELETE key on the one-touch dial key field. The character is then deleted and is replaced by an empty character. If you do not wish to have an empty character, press the INSERT key on the one-touch dial keyfield **before** deleting the character. In this mode, the characters to the right move one position to the left. The insert mode is indicated by a corresponding symbol in the display. Press the INSERT key again to exit this mode.

Replace character:

Move the highlighting to the appropriate position and proceed as detailed under the procedure for entering a new character. The character is then overwritten.

Insert character:

Press the INSERT key before you insert a character. To exit this mode, press the INSERT key again.

If a character has just been inserted, you cannot delete it immediately. In this case, move the cursor to the next field and then return immediately to the previous position. The character can then be deleted.

When the name is completed, press the **START** key.

Example: TOSHIBA


Installation

Enter terminal ID

The terminal ID which is part of the transmitting header contains the number under which your fax machine can be reached. The number should be entered in the international format:

Example:

+44-2131-12345678

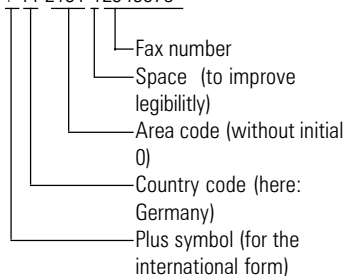

In Germany it is obligatory to enter the terminal ID!

INT. CODE ? LINE-1
1.ADD +
2.NOT NEEDED

1 2 3
4 5 6
7 8 9
* 0 #

1

SET TERMINAL ID
TEL NUMBER =(MAX20)
+ ■

1 2 3
4 5 6
7 8 9
* 0 #

SET TERMINAL ID
TEL NUMBER =(MAX20)
+44-2131-123456 ■

START

STOP

Continued from "Enter user name"

Option for selecting the national or international form.



Please always select the international form.

Select a menu item

Make your selection

Now enter the code

Insert a pause with pause button

Code is complete...


Confirm with START


Press STOP, return to standby mode

Installation

Setting dialling method

There are two dialling methods. The pulse-dialling method is normally used in the public switched telephone network. If your fax machine is connected to a PABX, the DTMF dialling method may also be used. As the public network is modernised, this dialling method may also be used in the public network. If you are in any doubt, first try the pulse-dialling method (basic setting). If the dialling procedure fails, try DTMP dialling.

 Depending on the sales area this function may be not available!

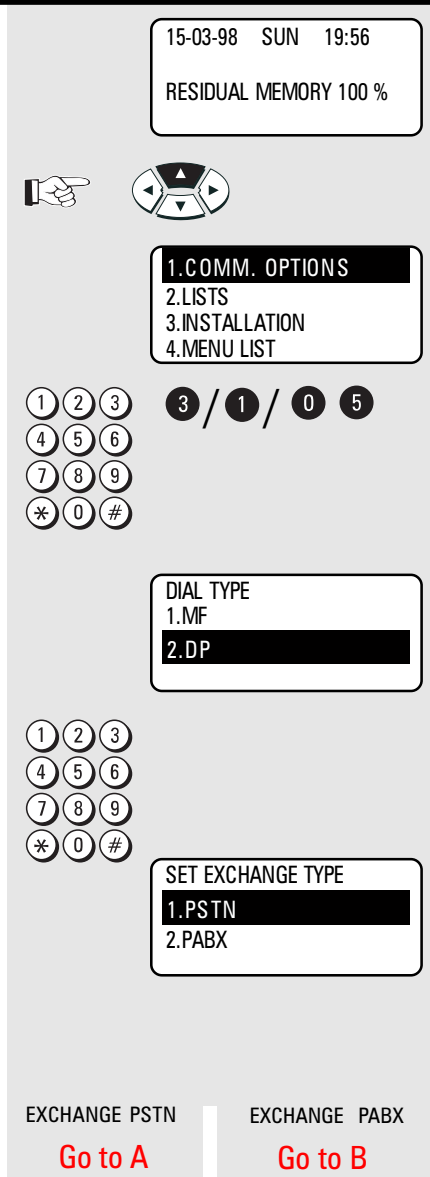

15-03-98 SUN 19:56
RESIDUAL MEMORY 100 %

1. COMM. OPTIONS
2. LISTS
3. INSTALLATION
4. MENU LIST

3 / 1 / 0 5

DIAL TYPE
1. MF
2. DP

SET EXCHANGE TYPE
1. PSTN
2. PABX

EXCHANGE PSTN EXCHANGE PABX
Go to A **Go to B**

Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item

The current dialling method is highlighted

Select a menu item

The current connection type is highlighted
Continue with "Connection to main line / PABX's"


Installation

Connection to PABX, obtaining a public line/Digital PABXs

The TF 631 can be connected not only to the public switched telephone network (public line) but also to a PABX. In this case, additional parameters have to be entered.

With **PABXs**, the public line is obtained in various ways:

- **Number** Dial one digit (or several digits) in order to obtain the public line
- **Earth key** Earth potential is connected to the line in order to obtain the public line.
- **Flash key** With this method of obtaining the public line, the connection circuit is interrupted briefly.

 When the method of obtaining a public line has been entered, you must always press the key "*" before the actual number when you dial your fax partner. This is also applicable for saving the fax numbers (see page 69ff).

A PSTN

SET EXCHANGE TYPE
1.PSTN
2.PABX

1 2 3
4 5 6
7 8 9
* 0 #

1

Select a menu item

STOP

Press STOP, return to standby mode

B PABX

SET EXCHANGE TYPE
1.PSTN
2.PABX

1 2 3
4 5 6
7 8 9
* 0 #

2

Select a menu item

SET ACCESS TYPE
1.EARTH
2.FLASH
3.DIGIT

Make your selection

SET ACCESS TYPE

Select a menu item
Example: digit

SET ACCESS TYPE
ACCESS DIGIT = (1-3) ■

Enter the digit(s) for obtaining public line
Example: 0

1 2 3
4 5 6
7 8 9
* 0 #

SET ACCESS TYPE
ACCESS DIGIT = (1-3) 0

Confirm with START

START


STOP

Press STOP, return to standby mode

Installation

Set language

Your fax machine is set to English. Please carry out the following menu steps if you wish to use another language for the menu and the list prints.

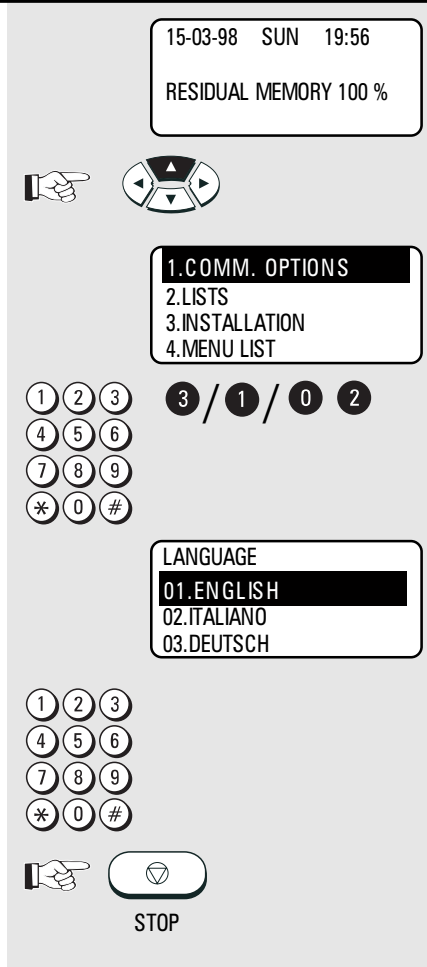

Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item

Select a menu item

Press STOP, return to standby mode

Installation

Set date and time

Enter the current date and time at this point so that all details relating to date and time is correct. The internal clock of your fax machine then runs automatically - even in the event of a power failure.

15-03-98 SUN 19:56
RESIDUAL MEMORY 100 %

1.COMM. OPTIONS
2.LISTS
3.INSTALLATION
4.MENU LIST

3 / 1 / 0 4

SET TIME FORMAT
1.24HOURS
2.12HOURS

SET DATE & TIME
DD-MM-YY HH:MM WWW
15-03-98 SUN 19:56

START

SET DATA MODE
1.MM-DD-YY
2.DD-MM-YY
3.YY-MM-DD

SET MONTH MODE
1.NUMERIC
2.NAME

STOP

Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item

Make your selection for 12- or 24-hour format

Select a menu item

Example: 24-hour format

Enter the date and the time

Confirm with START

Make your selection for the date format

Select a menu item

Make your selection for the month (using figures or the name)

Select a menu item

Press STOP, return to standby mode

Reception of documents

Set standby mode

If your fax machine is connected to the PSTN, there are two different ways of receiving documents.

Automatic reception

If the line is reserved exclusively for fax operation.

The fax machine switches over to reception as soon as the line rings. The number of rings before the fax machine is activated can be set (see below).



The fax machine is always activated, even if the call is initiated by a voice partner.

Manual reception

If the line is used primarily for telephone traffic.

The call must be accepted manually; the fax machine is not activated when the line rings. The call must be accepted manually; the fax machine is not activated when the line rings. The call must be accepted by an additional telephone. If you wish to transmit a document, you must press the START key of the fax machine.



Ensure that any fax calls can be accepted by means of the external telephone. Pressing the start key only has an effect if the handset is off-hook.

To set reception mode do the following:

Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item

Make your selection
1. Automatic reception
2. Manual reception

Select a menu item

Example: Automatic reception

Make your selection for the number of ringing signals before the fax machine connects to the line.

Enter the required number
Confirm with START

Press STOP, return to standby mode

Reception of documents

Reception reduction

Your fax machine uses A4 paper. For technical reasons the entire length of this page cannot be used. So the fax machine reduces the length of the incoming document (max. 90%). This means that the received image may be slightly compressed.

In general, this effect is not problematical. However, if the sizes of the documents must be absolutely identical, it is necessary to deactivate the **reception reduction** facility. In this case, that part of the copy which no longer fits on the page is printed out on a second page. If you are able to do without the "rest" of the page, activate the **discard** facility to suppress printout on the second page.


Original (A4)



Reception reduction: **ON**



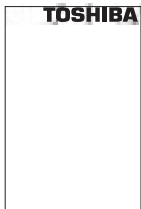

Reception reduction: **OFF**
Discard: **OFF**



Reception reduction: **OFF**
Discard: **ON**



15-03-98 SUN 19:56
RESIDUAL MEMORY 100 %



1.COMM. OPTIONS
2.LISTS
3.INSTALLATION
4.MENU LIST

1 2 3
4 5 6
7 8 9
* 0 #

3 / 2 / 0 2

RX REDUCTION
1.ON
2.OFF

1 2 3
4 5 6
7 8 9
* 0 #

 
STOP

Reception reduction ON/OFF
Standby mode

Start the menu

The first 4 menu items are displayed.



Select a menu item

Make your selection
1. Reception reduction ON
2. Reception reduction OFF

Select a menu item

Press STOP, return to standby mode

15-03-98 SUN 19:56
RESIDUAL MEMORY 100 %



1.COMM. OPTIONS
2.LISTS
3.INSTALLATION
4.MENU LIST

1 2 3
4 5 6
7 8 9
* 0 #

3 / 2 / 0 3

DISCARD
1.ON
2.OFF

1 2 3
4 5 6
7 8 9
* 0 #

 
STOP

Discard ON/OFF
Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item

Make your selection
1. Discard ON
2. Discard OFF

Select a menu item

Press STOP, return to standby mode

Reception of documents

Memory reception

Under certain circumstances, the machine cannot print out any further incoming copies:

- If there is no recording paper
- If there is a paper jam

In order to prevent problems with reception, the remaining pages are buffered in the memory of your fax machine. Once the problem has been solved, the document is printed out automatically.



In the event of a power failure, the contents of memory are retained for approx. one hour.


If the fax machine is to receive documents (in memory) in the event of paper-out or paper jam, the memory reception facility must be activated. This ensures that the fax machine is still able to receive documents outside normal business hours (e.g. at weekend or during the night).



When the memory capacity is full, no further calls will be accepted.



If the memory regularly proves to be too small, you can purchase a memory expansion from your dealer.

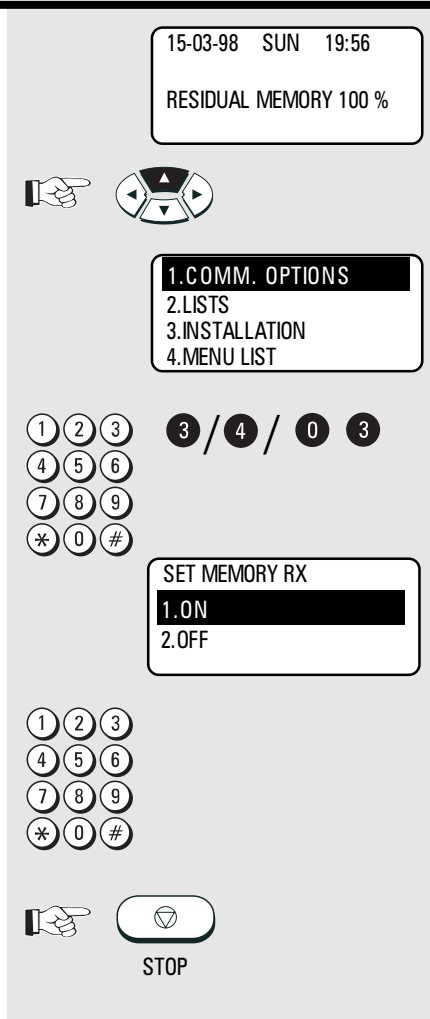

Memory reception ON/ OFF

Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item

Make your selection

1. Memory reception ON
2. Memory reception OFF

Select a menu item

Press STOP, return to standby mode

Display messages for memory reception

Display in case of paper low.

or

Display in case of paper jam.

Reception of documents

SECURE RX

In the **Secure RX** mode, the fax machine is ready to receive documents; however, incoming fax documents are not printed out and are retained in memory for a defined period. This for instance prevents fax documents which are received outside normal office hours from falling into the "wrong hands". The user is able to set the period during which the **Secure RX** mode is active. The user can also expand specific days in the week.

Outside this period, all stored faxes are automatically printed out and further documents are received without any restriction.



Secure RX can only be activated if **memory reception** has been activated (see page 20).

Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item

Make your selection

1. Enter / edit security code (**see A**)
2. Activate **Secure RX** (only possible if security code is used - **see B**)

Select a menu item

A1 Enter security code (for first time)

Make your selection for security code

Enter the security code

Confirm with START

Make your selection

1. Enter / edit security code
2. Activate **Secure RX** (only possible if security code is used)

Reception of documents

A2 Security code edit

SECURITY CODE ENTRY
CURRENT CODE
SECURITY CODE= ■■■■

1 2 3
4 5 6
7 8 9
* 0 #

SECURITY CODE ENTRY
NEW CODE
SECURITY CODE= ****

START

SECURITY CODE ENTRY
NEW CODE
SECURITY CODE= ■■■■

1 2 3
4 5 6
7 8 9
* 0 #

SECURITY CODE ENTRY
NEW CODE
SECURITY CODE= 9876

START

SECURE RX
1. SECURITY CODE
2. ACTIVITY MODE

Make your selection for (old) security code

Enter the old security code

Confirm with START

Make your selection for new security code

Enter the new security code

Confirm with START

Make your selection

1. Enter / edit security code
2. Activate **Secure RX** (only possible if security code is used)

Reception of documents

B Activate / deactivate Secure RX

SECURE RX
SECURITY CODE= ■■■■



Make your selection for the current security code

Enter the current security code

SECURE RX
1.ON
2.OFF



1

Make your selection for configuration of **Secure RX**

1. Configure and activate **Secure RX**
2. Deactivate **Secure RX**

Select a menu item

SECURE RX
TIME PERIOD = 16:00 - 09:00



Make your selection for the period in which **Secure RX** is active.
(Move the cursor with the ◀▶ keys)

Enter the period



START

Confirm with START

SECURE RX
FOR EACH DAY?
1.YES
2.NO



Make your selection for **Secure RX**

1. Settings for day menu
2. Same setting for all days

Select a menu item
(Example: Menu item 1)

MONDAY
SET ALL DAY SECURE
1.YES
2.NO



Make your selection

- Is set period applicable for Monday?
1. YES
 2. NO

Select a menu item

All days of the week (up to Sunday) can be set individually.



STOP


Press STOP, return to standby mode


Reception of documents

Activate and deactivate Secure Rx

You can also activate the **Secure Rx** mode outside the set period, if for instance staff leave the office early. You can also deactivate the **Secure Rx** mode at any time (assuming that you know the security code) in order to obtain a printout of the saved documents.

The setting made in this way is retained for the rest of the day. From midnight onwards, the fax machine behaves in accordance with the setting made on [page 23](#).

 If you wish to activate Secure Rx for another period, please follow the steps on [page 21](#).

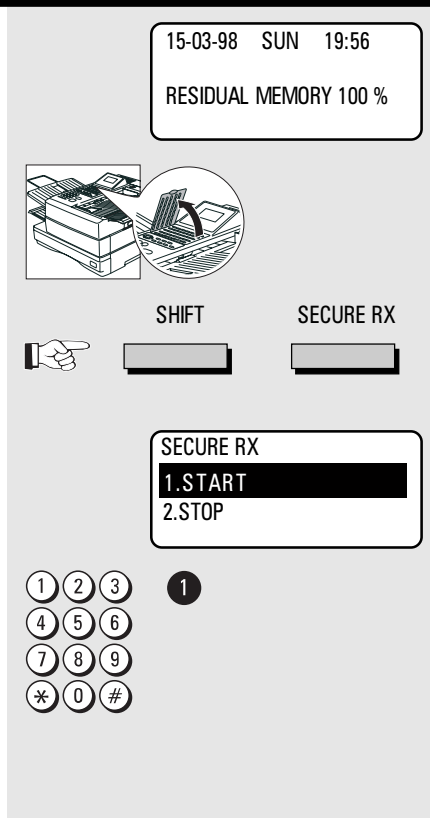

Activate Secure RX for the rest of the day

Standby mode

Open the one-touch dial cover


Press the Shift key and then the corresponding function key


Make your selection

1. Activate **Secure RX** mode
2. Deactivate **Secure Rx** mode

Select a menu item

The Secure RX mode is activated for the rest of the day.

 This mode can be set only if **Secure Rx** has been configured ([see page 21](#)).

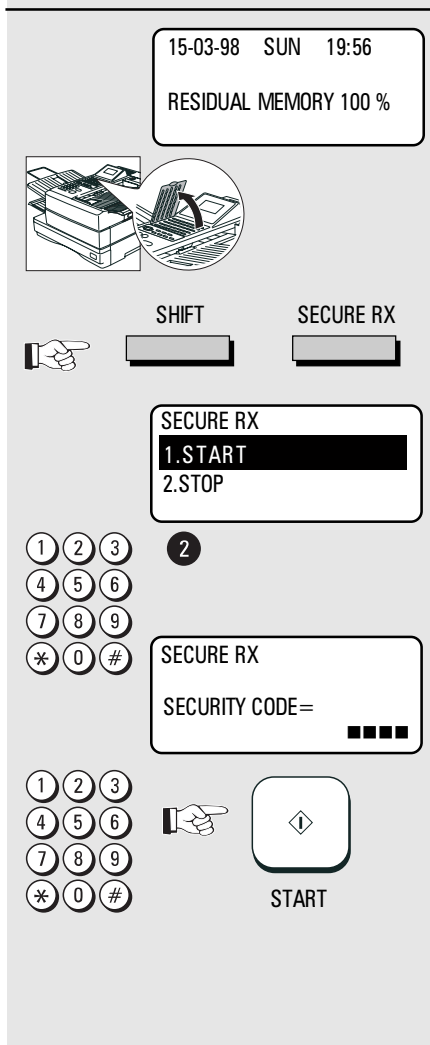

Deactivate Secure RX for the rest of the day

Standby mode

Open the one-touch dial cover

Press the Shift key and then the corresponding function key

Make your selection


1. Activate **Secure RX** mode
2. Deactivate **Secure Rx** mode

Select a menu item

Make your selection for the current security code

Enter the current security code Confirm with START

The Secure RX mode is deactivated for the rest of the day. The memory contents are printed out immediately.

 This mode can be set only if **Secure Rx** has been configured ([see page 21](#)).

Reception of documents


Correct sequence print-out

If more than one document is transmitted, it is normal to start with the first page. As received copies are printed out face-up, this means that the received stack of documents is in reversed order. This would mean that the first page is the last page to be printed. You can set your fax machine to cope with this factor.

Please note that the entire reception procedure is first stored in memory before it is subsequently printed out. If the capacity of the memory is not sufficient, there will be a delay in printing out the documents in the correct sequence.



If you find that the memory is frequently too small, ask your dealer for a memory expansion!

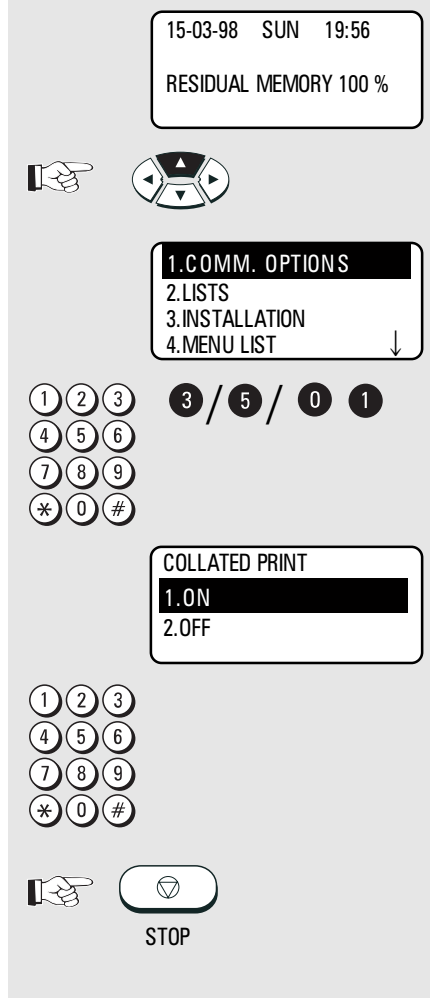

Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item

Make your selection

1. Correct sequence printout ON
2. Correct sequence printout OFF

Select a menu item

Press **STOP**, return to standby mode


Reception of documents

Multiple printout

As your fax machine handles all reception jobs via its memory, it is possible for several copies instead of merely one copy to be printed out (up to 99). This means that the operator does not have to go to the photocopier. Please note that great strain is placed on the memory if you increase the number of copies and if several jobs are received simultaneously.



If you find that the memory is frequently too small, ask your dealer for a memory expansion!

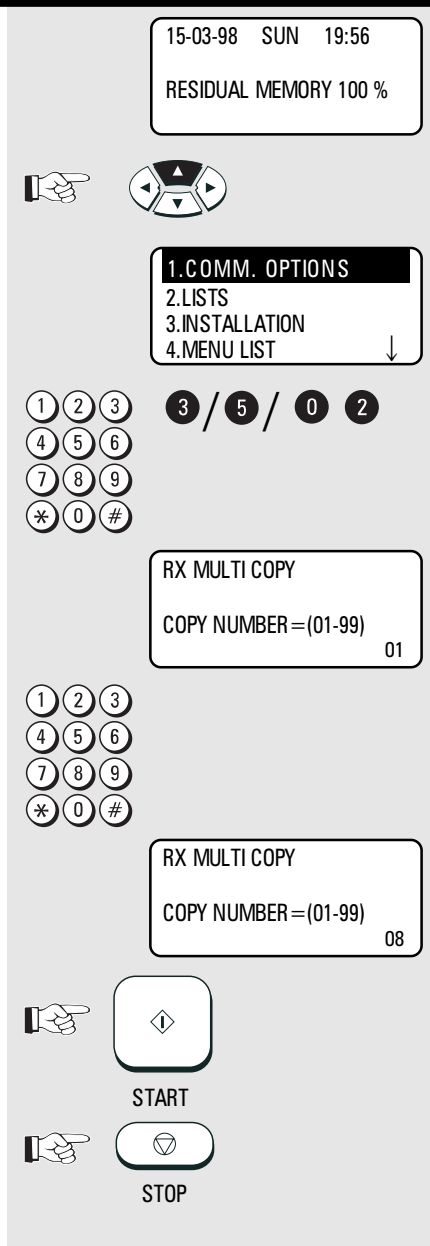

Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item

Make your selection
Number of incoming copies

Select the required quantity

Example: 8 copies


Confirm with START

Press STOP, return to standby mode

Reception of documents

Delete reception

It is not possible to immediately recognise whether your fax machine is transmitting or receiving a document. The LINE lamp does not distinguish between these two modes. You can only identify that a document is being received after you press the JOB STATUS key.

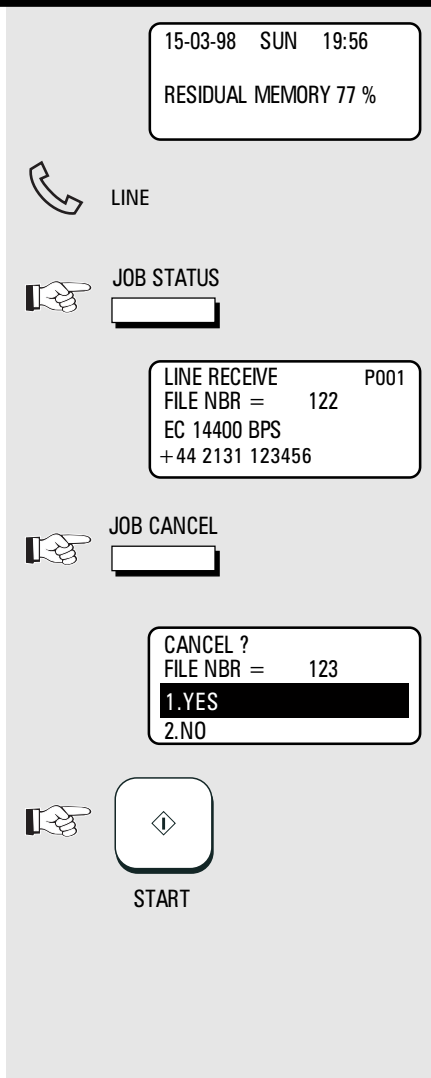

Standby mode

The LINE lamp lights up and indicates activity on the line

Press the JOB STATUS key

The current status is displayed (RECEPTION is displayed)

Press the JOB CANCEL key

Confirmation prompt

Confirm with START

Current reception is terminated

Reception of documents


Reception protection

The process of receiving documents is not subject to any restriction in principle. However, if reception protection is activated, it is only possible for the machine to receive fax documents from partners whose fax number is stored in the fax machine. The transmitted code of the transmitter is compared against the contents of your alphabet dial memory or one-touch dial keys. If the comparison is not successful, the transmission is rejected.



Please note that fax reception is limited when the reception protection facility has been activated.

If you have not stored any fax numbers, no further fax documents can be received!

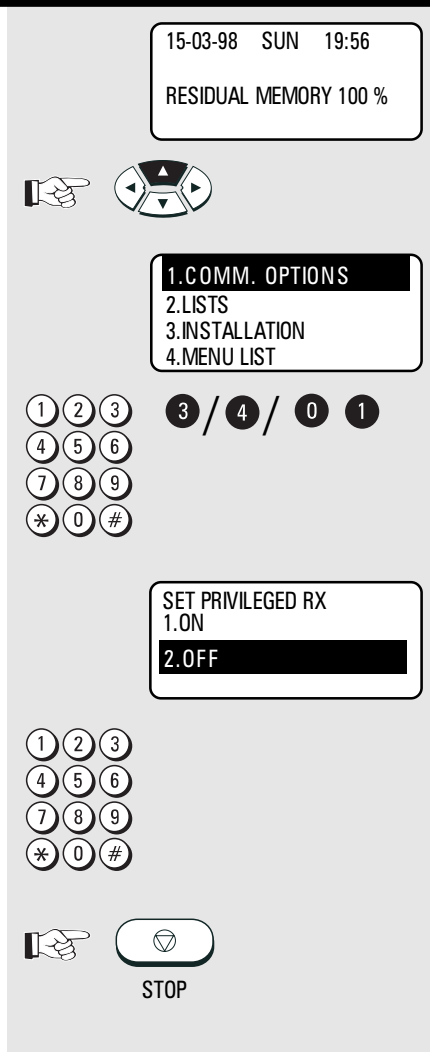

Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item

Make your selection

1. Reception protection ON
2. Reception protection OFF (normal)

Select a menu item


Press STOP, return to standby mode

Reception of documents

Local copy


You can use your fax machine to make one or more copies (up to 99). You can select a sorter function if several copies of various documents are to be made simultaneously. The copies are sorted and reproduced in the sequence in which the original documents were inserted into the document feed.

Sorter function ON

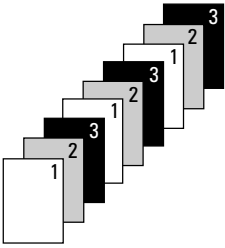

- Copies are sorted automatically.
- Requires adequate memory (if memory is full, the copying process is terminated. If you find that the memory is frequently too small, ask your dealer for a memory expansion!)
- All documents are scanned into the machine, resulting in a longer copying procedure.

Sorter function OFF

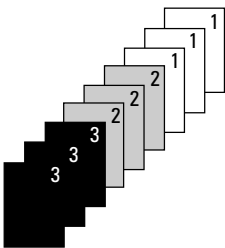

- Copies are sorted manually.
- Not much memory required.
- The copying procedure is shorter.



The copy is also reduced (see page 30).



The copy is always made with "fine" resolution (see page 44).

Depending on the equipping and basic setting (see page 44) on your fax machine, you can set resolution to superfine or ultrafine as required. The halftone mode setting is always possible. A copy cannot be made when the fax machine is receiving a document.

Standby mode

Load original

Remember:
Printed side face down

Document ready

Press COPY key

Make your selection

Activate or deactivate COLLATE


Enter amount of copies

Confirm with START

Reception of documents

Copy reduction

If the document to be copied is 10 mm larger than A4 format, the additional length is automatically printed on a second page. If you wish to prevent a second page from being printed, you can activate the copy reduction facility. In this case, the copy is reduced to max. 90%. If the reduction scale is not sufficient, a second page is automatically printed.

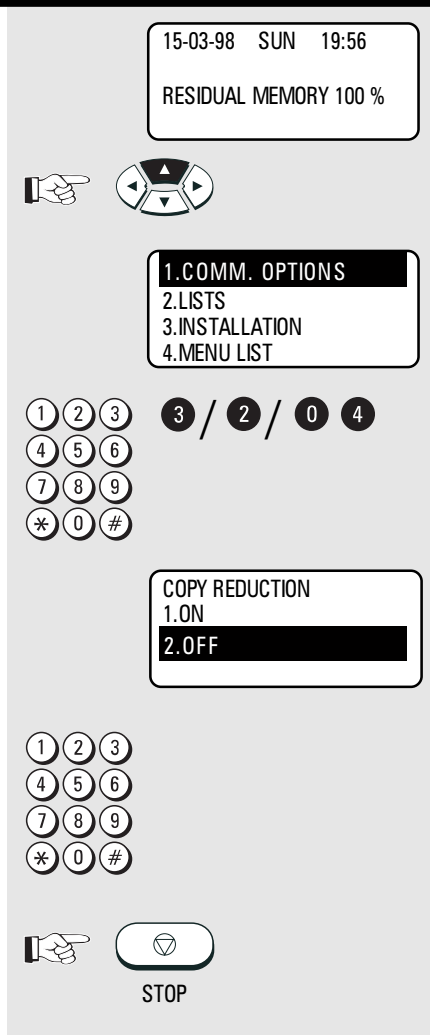

Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item

Make your selection

1. Copy reduction ON
2. Copy reduction OFF

Select a menu item

Press STOP, return to standby mode

Transmit documents

Document format

The following table gives you an idea of the documents your fax machine can handle.

Please note:

- Documents longer than 420 mm can only be loaded manually.
- If you load several sheets at one time, they should all be of the same size and paper quality.

	Single sheet	2 or more sheets
Document size (max)	216 mm (W) x 420 mm (L)	
Document size (min)	148 mm (W) x 100 mm (L)	
Effective scanning width	206 mm	
How many sheets can be loaded at one time?		max. 20 sheets (LEGAL) max. 50 sheets (LETTER)
Thickness of paper	0,05 ~ 0,15 mm	0,065 ~ 0,1 mm
Quality of paper	Uncoated on both sides	

Problem documents ...



May not feed. This applies to

- torn, wrinkled or damp pages
- folded pages or pages with holes
- transparent pages or pages with a smooth, shiny finish
- textile or metallic documents

There are two ways of avoiding this problem:...


...by photocopying or using a carrier sheet.

Your TOSHIBA dealer can supply you with the necessary carrier sheets.

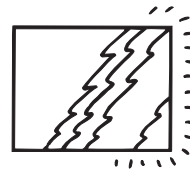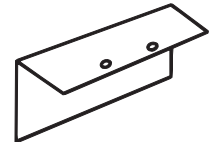

How to use carrier sheets:

Place your document face-up on the carrier sheet under the transparent cover. Carrier sheets can be used like normal documents except for one restriction: only one carrier sheet can be fed at one time.

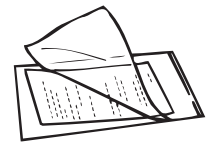


How to load documents correctly

Remove any paper clips, staples and similar objects before transmitting the document. If you intend to load documents which are longer than A4 format, you should pull out the extension of the document support. Push the side paper guide up against the document(s). Now place your document(s) on the document tray - up to 50 at one time - as shown.



All documents must be inserted face down!

Adjust the document guides to the edges of the sheets. After 2 seconds, your document will be automatically pulled in by about 2 cm.

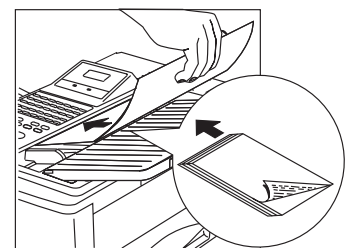

Transmit documents

Automatic fax messages

To send fax messages in the traditional manner: Insert document(s), enter the fax number and the connection is automatically established. The fax machine reads the documents into memory and then transmits them.

The advantage for the user: The document feed is only ever used for a brief period of time; irrespective of whether a fax is being transmitted or not. (please also refer to [page 33](#), **Transmission from memory**).

If you decide to use the listening-in version (see [page 42](#)), you can also acoustically monitor the call establishment process. This is useful whenever you have problems with establishing a connection. The reason is frequently a wrong number, or a fax machine which is not ready to receive.



The free memory display varies depending on the utilisation level of stack memory.

*) If a **transmission error** occurs, an appropriate comment appears in the display. However, this does **not have any effect on the subsequent transmission or reception mode of the fax machine**. To clear this error message from the display, press the STOP key. Please refer to [page 110](#) for troubleshooting.



15-03-98 SUN 19:56
RESIDUAL MEMORY 100 %

15-03-98 SUN 19:56
RESIDUAL MEMORY 100 %
ENTER TEL NUMBER,



COMM. RESERVATION
TEL NUMBER=(MAX128)
021311234567



START

READING INTO MEMORY
FILE NBR = 01
RESIDUAL MEMORY 99 %



LINE

15-03-98 SUN 19:56
RESIDUAL MEMORY 78 %

Standby mode

Load original

Remember:
Printed side face down

Document ready

To remove the document from the document feed, press the STOP key again.

Enter the fax number

The entered fax number is displayed. Any corrections can be made using the ◀-key, or the complete number can be cleared by pressing the STOP key. To remove the documents from the document feed before they are processed, press the STOP key again.

Confirm with START

While the document is being read into the machine:
The machine displays the job number (file number) and current memory capacity.

The LINE lamp lights up as soon as the fax machine connects to the line.

The display indicates normal transmission or reception mode during this process. *)

Transmit documents

Stack mode

A frequently encountered problem with fax machines is that the document tray is blocked while a document is being transmitted; no other documents can be transmitted while the fax machine is transmitting or receiving documents.

This is different with your fax machine:

All documents are read into the memory and are then transmitted from this memory. Incoming documents are also read into the memory before they are printed out. The advantage of this method is that the document tray is virtually always free and that documents can be transmitted almost irrespective of the transmission or receiving status of the fax machine.


Each procedure is known as a job. A job may consist of one or more documents which you can transmit to your partners. A job can also be a multi-address transmission or a delayed transmission. Your fax machine is able to manage 99 such jobs. Each of these jobs is placed on a stack, from where they are processed in sequence. Your fax machine accepts jobs even while it is transmitting or receiving documents; this means that the document tray is always ready.

The fax machine allocates a number to each job, and this number can be viewed via the job list (reservation list) (s. page 88).

The stack memory is protected via an internal battery. This means that no memory loss occurs if the machine is switched off or if there is a power failure. As soon as the fax machine is switched on again or as soon as the power supply is restored, the job is resumed at the point at which it was interrupted. The bridging period depends on the memory status, although it is at least one hour.



The transmission and reception memory is activated in the basic setting of the fax machine. You can change these basic settings to suit your individual requirements (see page 105).

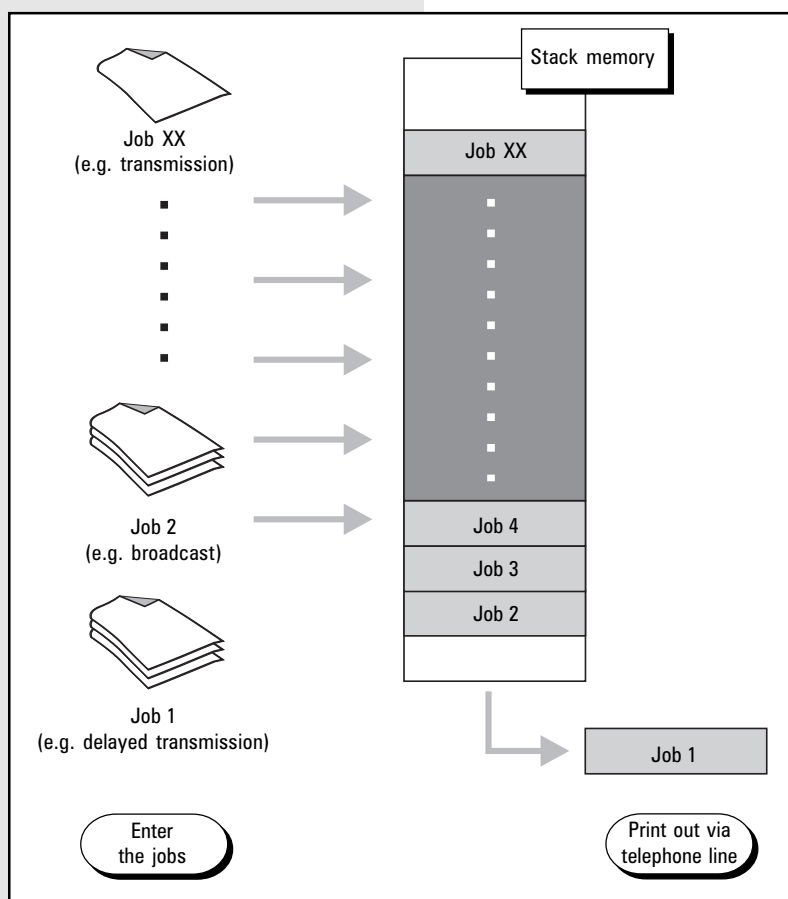

Transmit documents


Useful job management

As the stack memory in your fax machine is so large, it may happen that several jobs have to be transmitted to the same fax number. As a fax connection is used more economically if more data are transmitted, it would make sense to transmit all of these jobs in a single process. Whenever it handles a new job, your fax machine therefore checks the stack to establish whether there are additional jobs with the same fax number. If this is the case, these jobs are handled together irrespective of their position in the stack. The job number of these jobs is retained until stack management encounters the first job of the same fax number.


The process is recorded in the transmission journal (see page 86), with an identical sequential number.



In case of delayed transmission the jobs are sent together if time and fax number are equal.

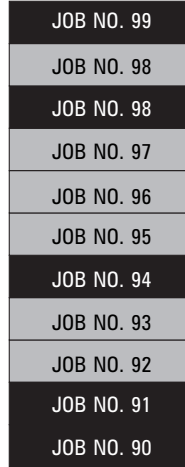

Some jobs of the stack have the same fax number (black).

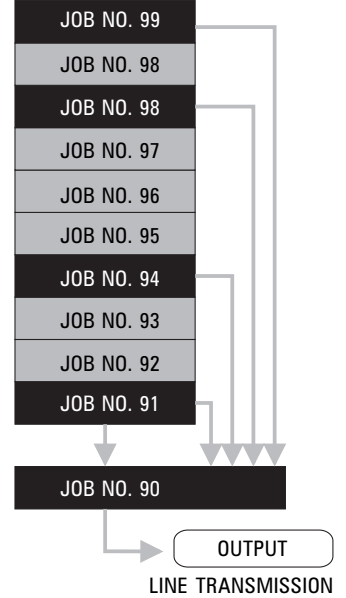


The first job with the same fax number pulls the other jobs together.

Transmit documents

Important transmission

The stack of your fax works according to FIFO (first in - first out). This situation can be compared to a queue: The most recently entered job has to wait the longest. This might be problematical for transmitting a certain document, particularly if stack memory already contains several jobs. The **"important transmission"** function is available for such situations. If this function is selected, the current job is given top priority. This job is carried out immediately after the last action, irrespective of the position in stack memory.

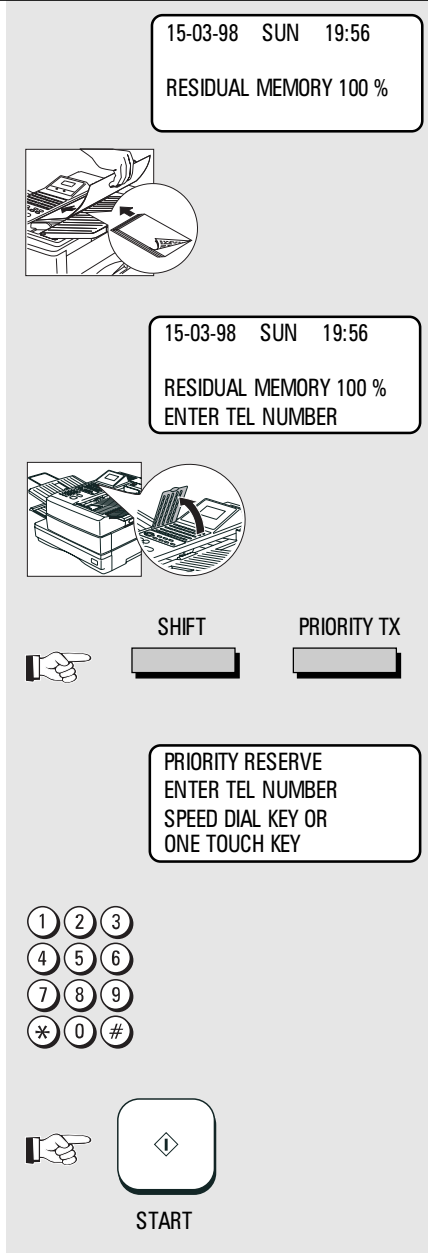

Standby mode

Load original

Remember:
Printed side face down

Document ready

Open the one-touch dial cover

Press the Shift key and then the corresponding function key

Make your selection
for Fax number

Enter the fax number

or
select alphabet dial, one-touch dial or
telephone directory (q.v.)

Confirm with START


Transmit documents

Direct transmission

In the normal transmission mode your fax machine reads all documents into the memory before they are transmitted (see page 33). If the documents are too large for the memory or if you have too many documents, you can also send directly from the document tray without reading the documents into the memory.



If you find that the memory is frequently too small, ask your dealer for a memory expansion!

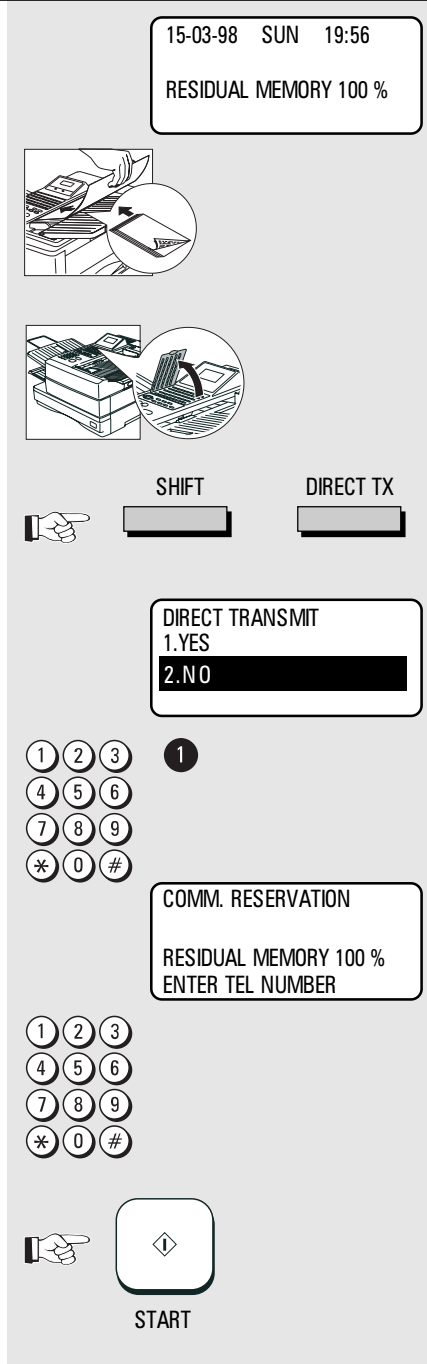

Standby mode

Load original

Remember:
Printed side face down

Document ready

Open the one-touch dial cover

Press the Shift key and then the corresponding function key

Make your selection for direct transmission

Select a menu item

Enter the fax number

or
Select alphabet dial, one-touch dial or telephone directory (q.v.)

Confirm with START

The documents are now transmitted directly via the document feed

Transmit documents

Transmission using alpha dial

The alphabetic dialling facility enables you to enter a brief "address" instead of the (frequently long) fax number of your partner. The real fax number is then permanently stored under this "address". The alphabetic dialling facility thus enables you to save time with frequently used fax numbers.

 


Please refer to [page 69](#) for details of how to save alphabet dialling numbers.



15-03-98 SUN 19:56
RESIDUAL MEMORY 100 %

15-03-98 SUN 19:56
RESIDUAL MEMORY 100 %
ENTER TEL NUMBER



TELEPHONE NBRS LIST
1. ABB. NUMBERS
2. SEARCH LETTER
3. GROUP NUMBERS



COMM. RESERVATION
ABB. NUMBER =(1-999)



COMM. RESERVATION
ABB. NUMBER =(1-999) 1



COMM. RESERVATION
ABB. NBR= 001
Toshiba Europe

Standby mode

Load original

Remember:
Printed side face down

Document ready

Activate the dialling key

Make your selection
for type of dialling

1. Dialling with abb. numbers
2. Dialling with telephone directory
3. Group dialling (using group numbers)

Select a menu item

Make your selection
for the **alphabet dial number**

Enter the alphabet dial number

Example: 1

Confirm with START

The fax machine displays the selected alphabet dial memory and the fax partner allocated to this memory position. The document is read into memory (see [page 32](#))

Transmit documents

Transmission one-touch dial

One-touch dialling provides you with a very easy method of dialling the number of your partner. You can assign any fax numbers to **69** keys *). Simply press a single button to start the dialling procedure.

*) Two numbers can be stored on every one-touch dialling key on your fax machine. A further 34 number places are available as soon as you use the one-touch dialling cover.



Please refer to [page 74](#) for details of how to store one-touch dialling numbers.



15-03-98 SUN 19:56
RESIDUAL MEMORY 100 %

15-03-98 SUN 19:56
RESIDUAL MEMORY 100 %
ENTER TEL NUMBER



01 . . . 69
[] • []
[] • []
[] • []

COMM. RESERVATION
ONE TOUCH= 35
Toshiba Europe

Standby mode

Load original

Remember:
Printed side face down

Document ready

Press the one-touch dial key

Example: one touch 35

The machine displays the selected one-touch dial key and the fax partner assigned to this one-touch dial key.

The document is read into memory ([see page 32](#))

Transmit documents

Faxing with telephone directory

This type of dialling is similar to the process of searching in a telephone directory. If you enter the initial letter of your fax partner, the machine searches for the corresponding fax number in the alphabet dial memory or on a configured one-touch dial key. This procedure is particularly useful when you know the names of specific fax partners.

15-03-98 SUN 19:56
RESIDUAL MEMORY 100 %

15-03-98 SUN 19:56
RESIDUAL MEMORY 100 %
ENTER TEL NUMBER

SPEED DIAL
ABB. DIRECTORY GROUP

TELEPHONE NBRS LIST
1.ABB. NUMBERS
2. SEARCH LETTER
3.GROUP NUMBERS

1 2 3
4 5 6
7 8 9
* 0 #

SEARCH LETTER =

1 2 3
4 5 6
7 8 9
* 0 #

SEARCH LETTER =B
B
BOND
BROWN

START

COMM. RESERVATION
ABB. NBR = 001
BROWN

*)
SEARCH LETTER = X

Standby mode

Load original

Remember:
Printed side face down

Document ready

Activate the dialling key

Make your selection for the dialling mode

1. Dialling with abbreviated numbers
2. Dialling with telephone directory
3. Group dialling (via group numbers)

Select a menu item

Make your selection for the **initial letter**. Please refer to [page 12](#) for entering letters.

Enter the alphabet dial number
Example: "B" *)

use the control keys to select the required name

Confirm with START

The fax machine displays the selected alphabet dial memory and the fax partner allocated to this memory position.


The document is read into memory (see [page 32](#))



This display appears if no name is stored under the selected letter.

Transmit documents

Single multi-address transmission

If you intend to send a document to several fax partners as quickly as possible, this function can be used for defining a **single free group**. The group is cancelled after the procedure is completed. Up to 309 users can be grouped together in this way from one-touch dial memories, alphabet dial memories or user-defined numbers.

 Permanently stored groups (see page 78), can also be integrated into the group in this way.

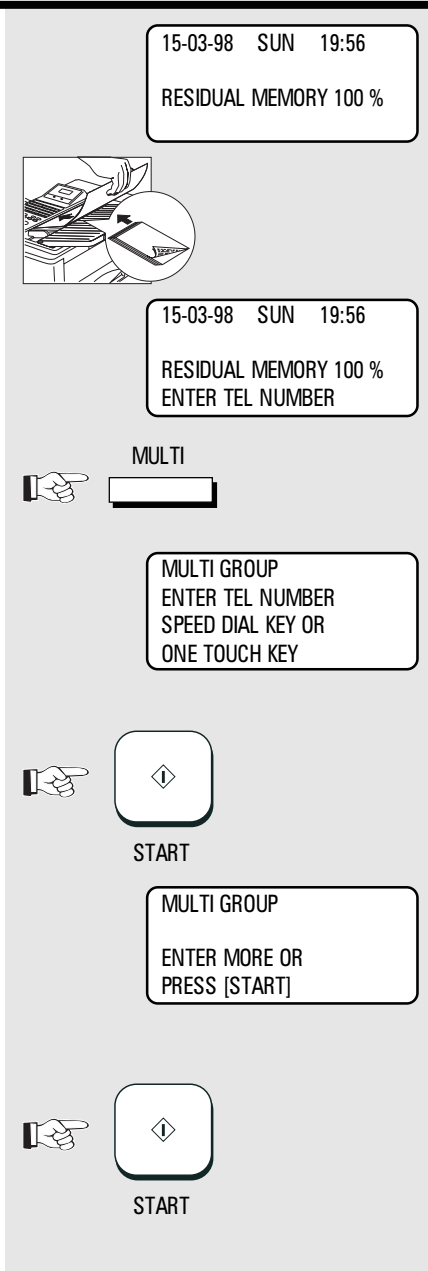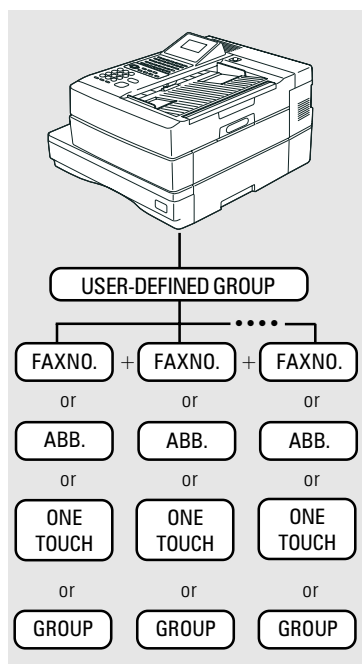

The diagram shows the control panel of the fax machine with the following sequence of steps:

- Display: 15-03-98 SUN 19:56
RESIDUAL MEMORY 100 %
- Icon: A hand loading a document into the tray.
- Display: 15-03-98 SUN 19:56
RESIDUAL MEMORY 100 %
ENTER TEL NUMBER
- Icon: A hand pointing to the MULTI key.
- Display: MULTI GROUP
ENTER TEL NUMBER
SPEED DIAL KEY OR
ONE TOUCH KEY
- Icon: A hand pointing to the START key.
- Display: MULTI GROUP
ENTER MORE OR
PRESS [START]
- Icon: A hand pointing to the START key.

Standby mode

Load original

Remember:
Printed side face down

Document ready

Press the MULTI key

Make your selection for fax number (page 32), alphabet dial (page 70) one-touch dial (page 75) telephone directory (page 39) group (page 78)

Confirm with START
(depending on selected action)

Make your selection for further group elements

- or -


Confirm with START

The document is read into memory (see page 32)

Transmit documents

Stored broadcast


If you have a fixed group of fax partners to whom you frequently have to send broadcast fax messages, the stored broadcast facility is just what you need. You can store 50 different groups of your choice. Additionally you can assign each group to a one-touch dial key. Multi-address transmission is then carried out by pressing the appropriate one-touch dial key.

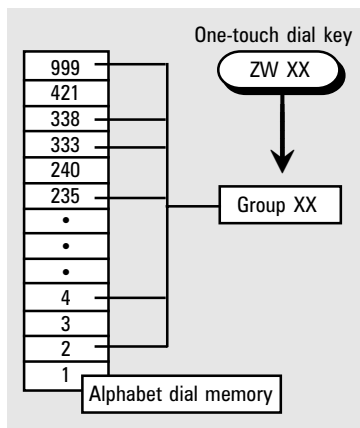

Please refer to [page 77](#) for details of how to program permanent groups.

15-03-98 SUN 19:56

RESIDUAL MEMORY 100 %



15-03-98 SUN 19:56

RESIDUAL MEMORY 100 %

ENTER TEL NUMBER

SPEED DIAL

ABB. DIRECTORY GROUP

TELEPHONE NBRS LIST

1. ABB. NUMBERS

2. SEARCH LETTER

3. GROUP NUMBERS

1 2 3
4 5 6
7 8 9
* 0 #

COMM. RESERVATION

GROUP NBR =(1-1999) ■

1 2 3
4 5 6
7 8 9
* 0 #


COMM. RESERVATION

GROUP NBR =(1-1999) 0007

START

15-03-98 SUN 19:56

RESIDUAL MEMORY 100 %



15-03-98 SUN 19:56

RESIDUAL MEMORY 100 %

ENTER TEL NUMBER

01 . . . 69

□ • □
□ • □
□ • □

Broadcast via group number

Standby mode

Load original

Remember:
Printed side face down

Document ready

Activate the dialling key

Make your selection for the dialling mode

1. Dialling with abbreviated numbers
2. Dialling with telephone directory
3. Group dialling (via group numbers)

Select a menu item

Make your selection for group number

Enter group number

Confirm with START

The document is read into memory (see [page 32](#))

Broadcast via one-touch dial key

Standby mode

Load original

Remember:
Printed side face down

Document ready

Press one-touch dial key under which a group is stored

The document is read into memory (see [page 32](#))


Transmit documents

Monitoring (direkt)

If the operator listens into a fax transmission, the call establishment attempt is played back via the built-in speaker. This provides you with an additional acoustic check of the call establishment procedure. This is a valuable asset whenever a call is not established. The reason is frequently a wrong number or a fax machine which is not ready to receive.



With the listening-in alternative, the document is **not** read into the memory; it is retained on the tray until the receiving fax machine has been contacted.

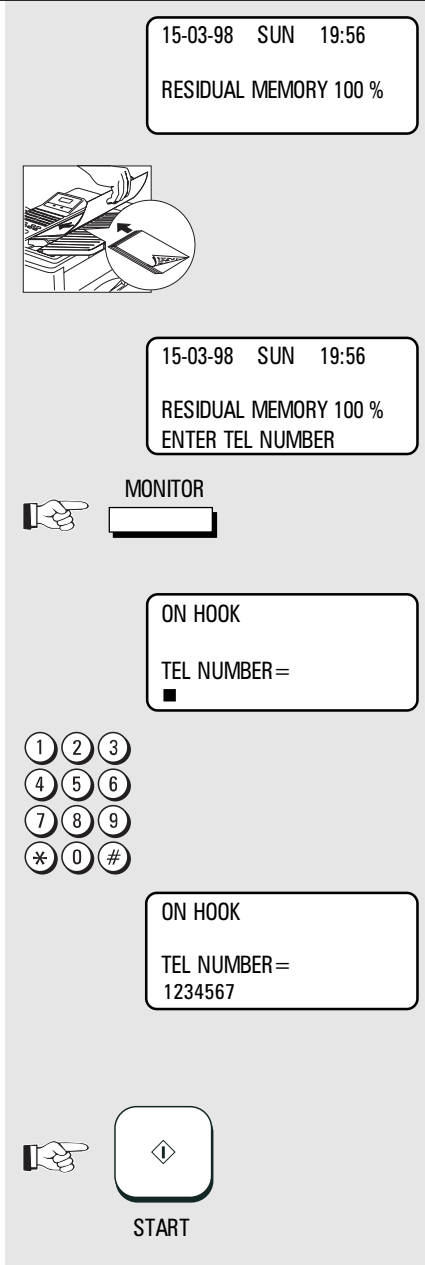

Standby mode

Load original

Remember:
Printed side face down

Document ready

Activate monitoring

Make your selection
for the **fax number**

Enter the fax number

Dialling starts

As soon as you hear the other fax machine (constant whistle)

...confirm with START

The document is transmitted immediately (without being read into memory).

Transmit documents


Monitoring (by job)

If the operator listens into a fax transmission, the call establishment attempt is played back via the built-in speaker. This provides you with an additional acoustic check of the call establishment procedure. This is a valuable asset whenever a call is not established. The reason is frequently a wrong number or a fax machine which is not ready to receive.



With this listening-in version, the document is read into memory. The listening-in facility is linked to the job as an additional option.

Please follow the descriptions of [page 94](#) if **all** outgoing fax transmissions are to be played back via the loudspeaker.

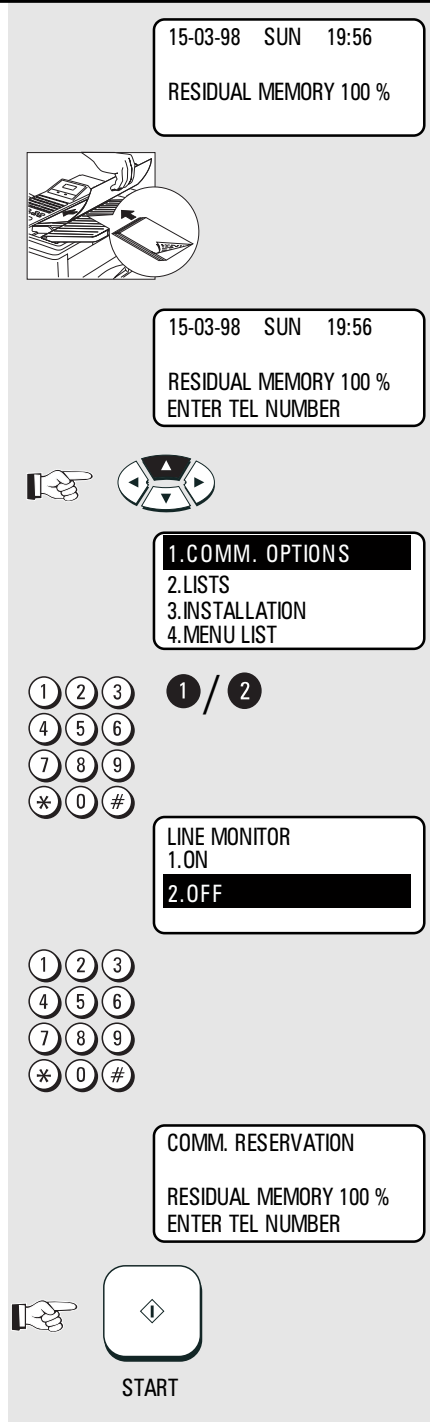

Standby mode

Load original

Remember:
Printed side face down

Document ready

Start the menu

The first 4 menu items are displayed

Select a menu item

Select a menu item

Make your selection
for fax number, alphabet dial, one-touch
dial or telephone directory

Confirm with START

The document is read into memory ([see page 32](#))

Transmit documents

Set resolution

In its basic setting, your fax machine uses high resolution for transmitting or copying your documents. You can also adjust the resolution to suit the particular documents. Use the following as a rough guide:

- STD (basic setting)
For hand-written or typewritten documents
- FINE For documents with small type such as newspapers and diagrams
- U-FINE For documents with very small and detailed diagrams
- GREY 64 grey stages for photographs or colour documents




For the grey stages, you can choose between fine and super-fine (U-FINE)



If the resolution is increased or if the grey stage mode is selected, the transmission time is lengthened (this involves additional costs!), as more lines or more information are transmitted.

*) Please refer to [page 106](#) if you wish to change the **BASIC SETTING** for resolution.

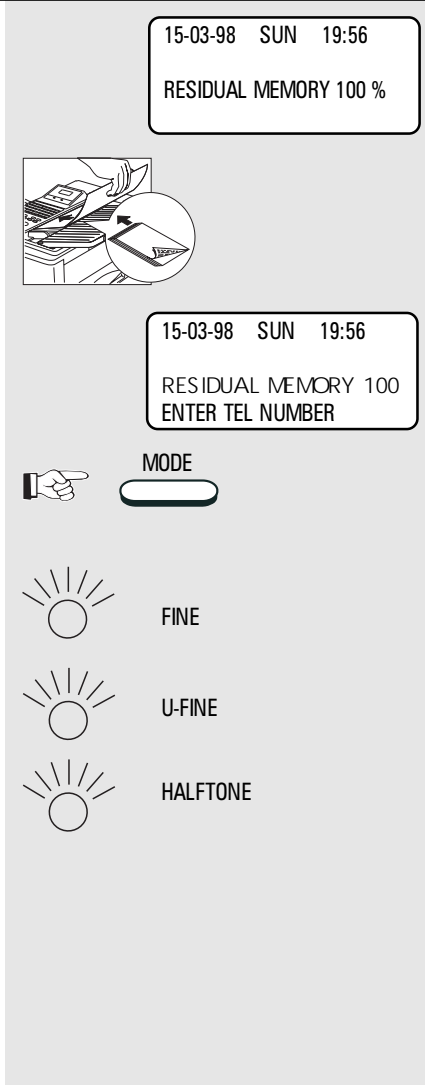

Standby mode

Load original

Remember:
Printed side face down

Document ready

Press „MODE“

Press the RESOLUTION key several times to make the required setting.

The setting selected in this way is only applicable for the current job. When the document has been read in, the resolution is reset to the default value.*

Dialling the fax partners

Transmit documents


Set contrast

Where the print on documents is weak or where colour character sets are used, it is possible that some characters might not be transmitted. In such cases, you should set the contrast to darker.

On the other hand, some documents contain characters in coloured fields. In such cases, you should set the contrast to lighter.

You can judge the effect of this setting - and thus also the quality of your fax transmission - by using the self-copy facility (see page 29).

*) Please refer to page 106 if you wish to change the **basic setting** of the contrast.

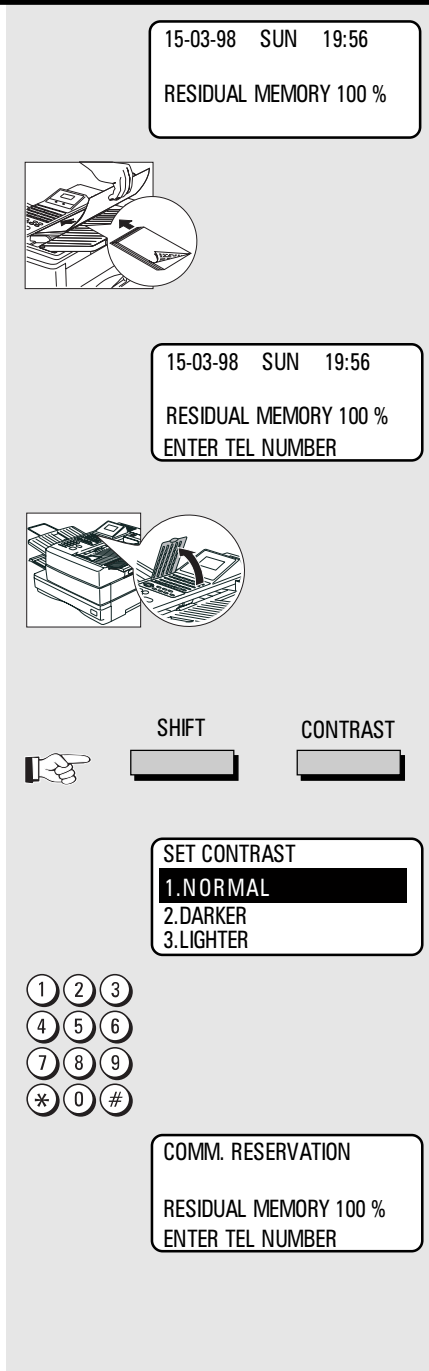

Standby mode

Load original

Remember:
Printed side face down

Document ready

Open the one-touch dial cover

Press the Shift key and then the corresponding function key

Make your selection for the contrast setting

Select a menu item

The setting which has now been selected is applicable only for the current job. When the document has been read in, the contrast is reset to the default value.*

Dialling the fax partner

Transmit documents


Transmission options, ECM on/off

Your fax machine is equipped with an error correction facility (ECM). If your fax partner also has an error correction facility, this permits error-free fax transmission. One effect linked with ECM is that the transmission time increases if there are any problems on the line. This may involve very high costs with overseas calls. For this reason, the error correction facility can be temporarily disabled.



If the error correction mode is **disabled** in the basic setting (see page 107), ECM is temporarily **enabled** using the adjacent method.

*) Please refer to page 107 if you wish to change the **basic setting** of the error correction mode.

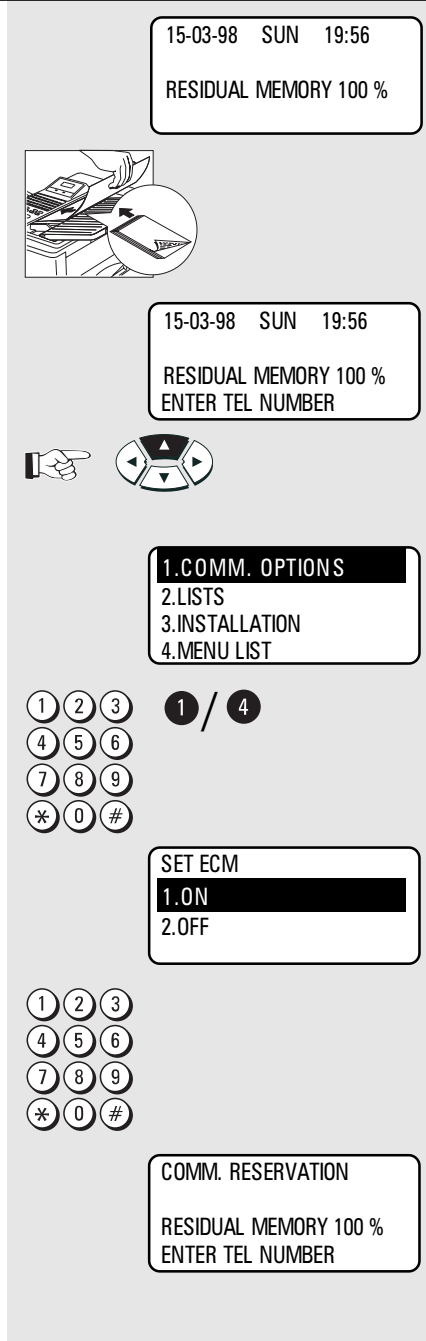

Standby mode

Load original

Remember:
Printed side face down

Document ready

Start the menu

The first 4 menu items are displayed

Select a menu item

The fax machine displays the current setting

Select a menu item

The setting which is now selected is applicable only for the current job. When the document has been read in, the setting is reset to the default value.*


Dialling the fax partner

Transmit documents

Transmission options, number of pages

Enter the number of pages to be transmitted before the transmission procedure commences (in the mode: Direct transmission, [see page 36](#)). Before sending a document, you can use this option to enter the number of pages being sent. The unit will compare the number of pages actually sent with the number you entered.

- Because the ratio of transmitted pages is automatically displayed when a document is transmitted from stack memory, the function represents a **feed check** in this mode. If the specified number of pages is not identical with the actual situation, the following message is displayed "PAGE # MISMATCH".

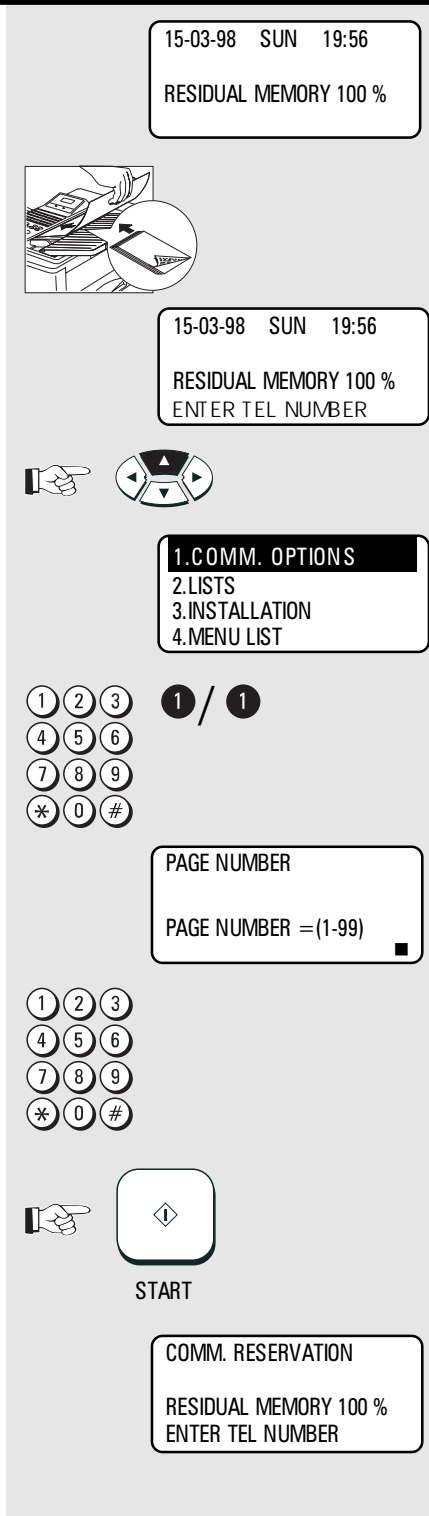

Standby mode

Load original

Remember:
Printed side face down

Document ready

Start the menu

The first 4 menu items are displayed

Select a menu item

Make your selection
for the number of pages

Enter the page number

Confirm with START


Dialling the fax partner

Transmit documents

Transmission options, protected transmission

The transmission of documents is restricted! Documents can only be transmitted to fax machines whose ID is identical to the dialled fax number. This means that you can only fax your documents to specific fax partners.

*) Please refer to [page 107](#) if you wish to change the **basic setting** of transmission protection.

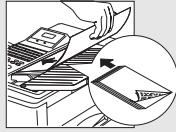

15-03-98 SUN 19:56
RESIDUAL MEMORY 100 %

15-03-98 SUN 19:56
RESIDUAL MEMORY 100 %
ENTER TEL NUMBER



1.COMM. OPTIONS
2.LISTS
3.INSTALLATION
4.MENU LIST



1 / 5

SET SECURITY TX
1.ON
2.OFF



COMM. RESERVATION
RESIDUAL MEMORY 100 %
ENTER TEL NUMBER

Standby mode

Load original

Remember:
Printed side face down

Document ready

Start the menu

The first 4 menu items are displayed

Select a menu item

The fax machine displays the current setting


Select a menu item

The selected setting is applicable only for the current job. When the document has been read in, transmission protection is reset. *

Transmit documents

Transmission options, reduced speed

When documents have to be transmitted overseas or if the error ratio increases, you should reduce the transmission speed in order to avoid errors. As is the case in traffic, speed has to be adapted to meet the specific circumstances!

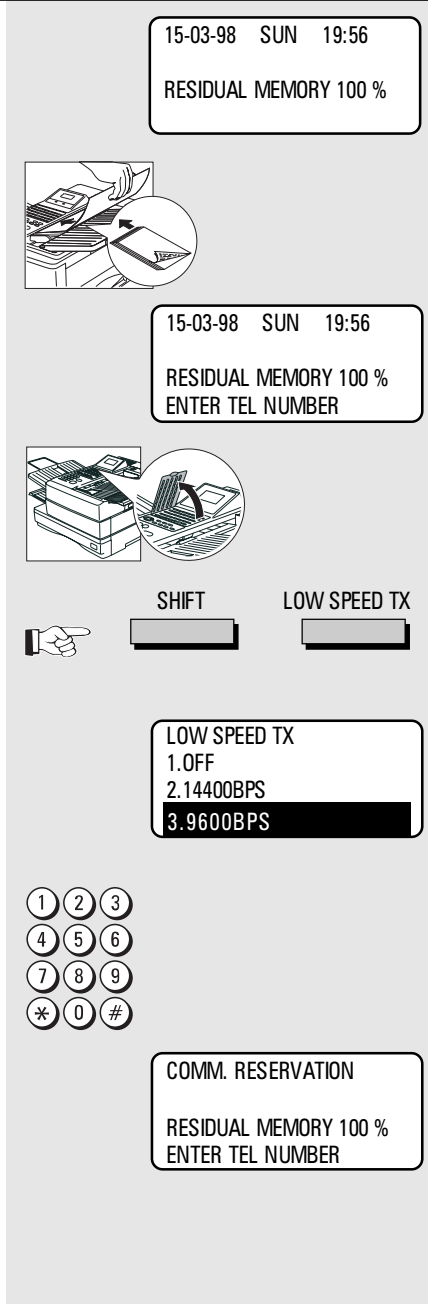

Standby mode

Load original

Remember:
Printed side face down

Document ready

Open the one-touch dial cover

Press the Shift key and then the corresponding function key

Make your selection for transmission speed

1: Maximum speed

Select a menu item

The selected setting is applicable only for the current job.

Dialling the fax partner

Transmit documents

Transmission options, send cover sheet

The cover sheet is a form which is placed in front of your fax transmission. It is used as a tool to enable an incoming fax to be classified more easily.

The information on the cover sheet is entered via the numeric keypad (see page 12).



If you wish to use this option, you must first enable the cover sheet function (see page 102).

Standby mode

Load original

Remember:
Printed side face down

Document ready

Open the one-touch dial cover

Press the Shift key and then the corresponding function key

Make your selection
for sending cover sheet

Select a menu item

Enter the addressee
(refer to page 12 for the procedure)

Confirm with START

Enter the sender
(refer to page 12 for the procedure)

Confirm with START

Dialling the fax partner

Transmit documents


Chain dialing

When dialling unabbreviated numbers, the number can be made up of various parts. You are able to combine all forms with each other:

- One-touch dialling (see page 75)
- Dialling with telephone directory function (see page 39)
- Dialling with alphabet number (see page 69)
- Dialling via the numeric keypad
- Dialling pause (using the PAUSE key)

15-03-98 SUN 19:56

 
RESIDUAL MEMORY 100 %




15-03-98 SUN 19:56

RESIDUAL MEMORY 100 %


ENTER TEL NUMBER

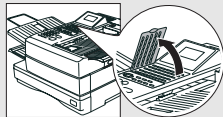

SHIFT



 CHAIN DIAL COMM

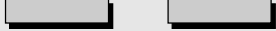

CHAIN DIAL COMM.

ENTER TEL NUMBER


ENTER ABB. NBR OR

ONE TOUCH KEY

1	2	3
4	5	6
7	8	9
*	0	#

or

01 . . . 69



or

SPEED DIAL

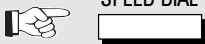 




ABB. DIRECTORY GROUP





START

Standby mode

Load original

Remember:
Printed side face down

Document ready

Open the one-touch dial cover

Press the Shift key and then the corresponding function key

Make your selection
the fax number can be made up of various items of input

Enter the number(s)
when you are ready.

Confirm with START

Dialling the fax partner

Transmit documents

Redial

If it was not possible for your fax message to be sent, this may be due to various reasons (please read [page 114](#)). One reason may be that the other fax machine is busy. In this case, it would make sense to call your partner again at a later time. This is done automatically by your fax; it attempts to send the fax message again approx. every 2 minutes.




You are able to individually set the period between the call redial attempts and also the number of redial attempts (see [page 95](#)).

Manual call redial:

If the memory contains a job which you wish to redial immediately, you can select this job and manually select the redial procedure (see adjacent diagram).

- Manual call redial does not have any influence on the preset number of call redial attempts (see [page 95](#)).

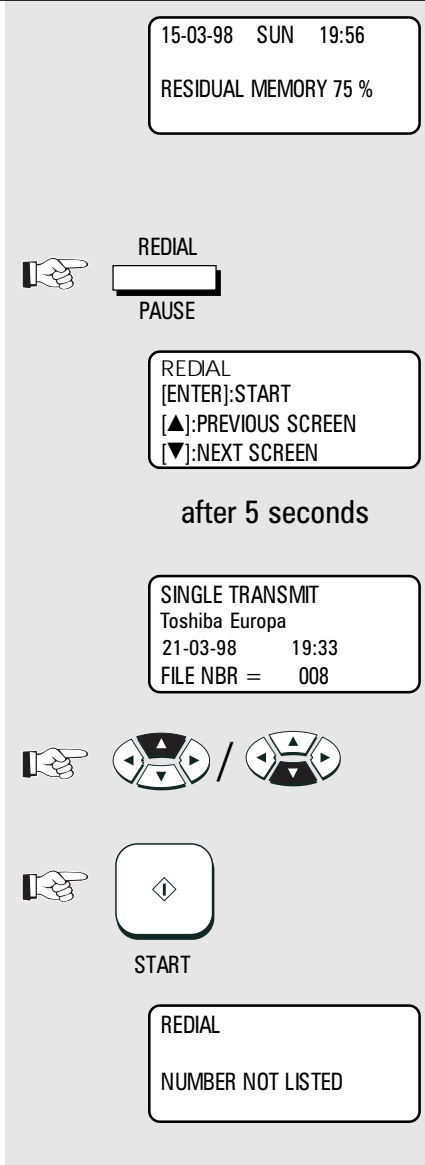

Manual call redial (from memory)

Standby mode

Requirement:

There must be at least one job which has already been dialled and not transmitted.

Press the REDIAL/PAUSE key

Make your selection for selecting the required job

The first available job is displayed. Please refer to [page 55](#) for details of the job format.

Select the job which you want to redial.

Confirm with START


The job is carried out again.

If there is no job available for the redial facility, the machine displays the following message:

Transmit documents

Resend (retained job)

If your fax machine is set to retain a job (see page 103) you can resend this job by the following procedure. The criteria applicable for a "fresh" job are applicable for the newly activated job.

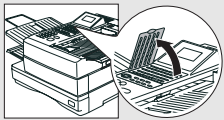

15-03-98 SUN 19:56
RESIDUAL MEMORY 77 %

SHIFT RECOVERY TX

RECOVERY TRANSMIT
[ENTER]:START
[CANCEL]:DELETE
[▲▼]:SEARCH

after 5 seconds

SINGLE TRANSMIT
Toshiba Europa
21-03-98 19:33
FILE NBR = 008

SINGLE TRANSMIT
BOND
21-03-98 19:45
FILE NBR = 007

START

SINGLE TRANSMIT
1.START
2.MODIFY

1 2 3
4 5 6
7 8 9
* 0 #

2

TEL NUMBER=(MAX128)
1234567890

1 2 3
4 5 6
7 8 9
* 0 #

START

NO ENTRY

NOT ALLOWED NOW

Standby mode

Open the one-touch dial cover

Press the Shift key and then the corresponding function key *

Make your selection for selecting the required job

The first available retained job is displayed.

Please refer to page 55 for details of the job format.

Select the job which you wish to activate.

Confirm with START

Make your selection
1: Job is reactivated unchanged
2: Fax number can be changed

Select a menu item
Example: Change the fax number

Current fax number is displayed

Enter new fax number
Confirm with START

The selected job is used again.


*) If no job is retained, the following error message is display:

*) If the "retained job" function is not activated, the following error message is display:

Transmit documents

Cancel a retained job (with retain job)

If your fax machine is set to **retain job** (see page 103), you can use the following steps to cancel the retained job.

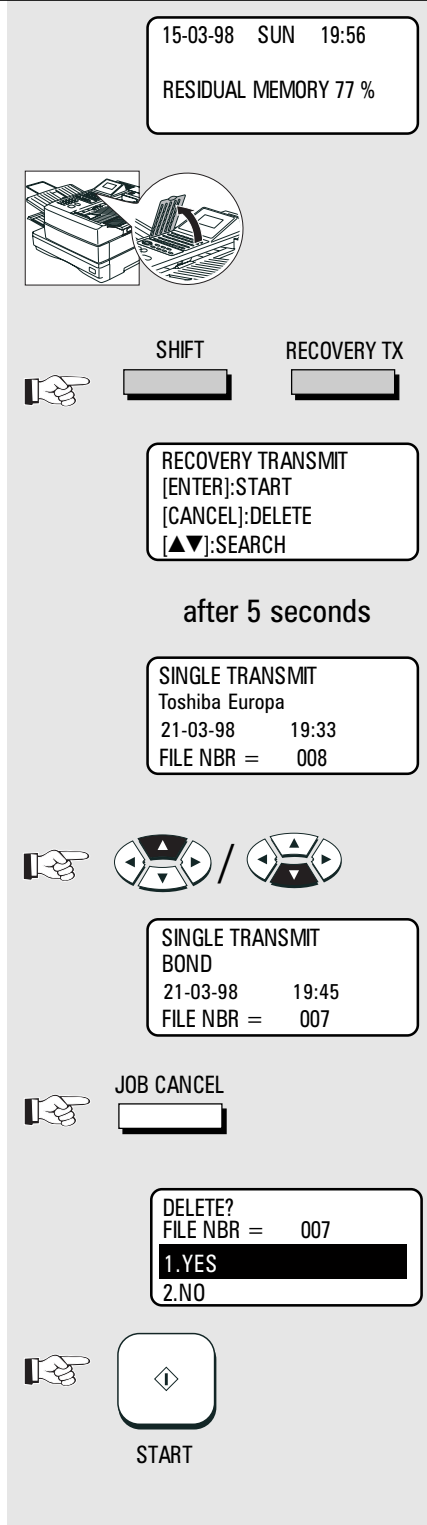

Standby mode

Open the one-touch dial cover

Press the Shift key and then the corresponding function key

Make your selection for selecting the required job

The first available retained job is displayed.

Please refer to page 55 for details of the job format.

Select the job which you want to cancel.

Press the JOB CANCEL key

Confirmation prompt

Confirm with START


Selected job is cancelled

Transmit documents


Cancel transmission

If you enter the wrong fax number or if you have dialled the wrong fax partner, the relevant job has to be cancelled. It is important to distinguish between a job which is read into memory (stack mode, [page 33](#)) or transmitted directly (direct transmission, [page 36](#)).

If the job is read into memory, the current action of the fax machine is not related to the momentary operation of the machine. In order to cancel a specific job, it is necessary to select it specifically from other jobs which are waiting to be handled. This is achieved by "paging" through the job stack.

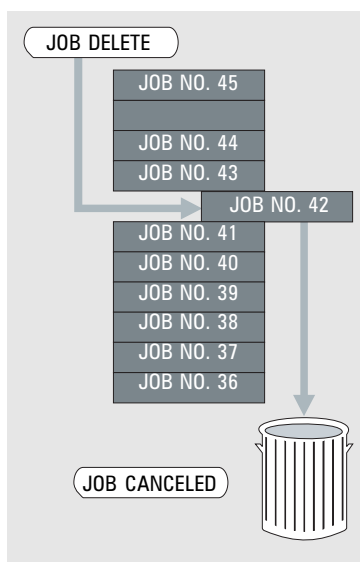

The job is displayed as follows:

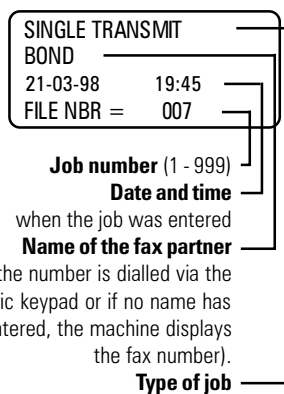

In addition to cancelling a specific job from the stack, you can also cancel the current transmission. For this purpose, please refer to [page 104](#) "query job status".

The sequence shows the initial dialing screen with 'DIAL TYPE' and 'FILE NBR = 008' and the number '123456789'. A hand icon points to a 'STOP' button. The next screen shows a 'CANCEL ?' prompt with two options: '1. 123456789' (highlighted) and '2. NO'.

Cancel job during "direct transmission"

Fax machine is dialled in direct mode (transmission)

Press STOP

Confirmation prompt

Select a menu item

Job is cancelled

The sequence shows the 'JOB CANCEL' process. It starts with a status screen showing '15-03-98 SUN 19:56' and 'RESIDUAL MEMORY 77 %'. A hand icon points to a 'JOB CANCEL' button. The next screen shows the 'JOB CANCEL' menu with options: '1. RECEIVE' (highlighted), '2. TRANSMIT', and '3. DOCUMENT'. A numeric keypad is shown with '2' selected. The next screen shows 'JOB CANCEL' with navigation instructions: '[ENTER]:START', '[UP]:PREVIOUS SCREEN', and '[DOWN]:NEXT SCREEN'. Below this is the text 'after 5 seconds'. The next screen shows 'SINGLE TRANSMIT Toshiba Europa' with '21-03-98 19:33' and 'FILE NBR = 008'. A hand icon points to navigation arrows. The next screen shows 'SINGLE TRANSMIT BOND' with '21-03-98 19:45' and 'FILE NBR = 007'. A hand icon points to a 'JOB CANCEL' button. The next screen shows a 'DELETE?' prompt with 'FILE NBR = 007' and options '1. YES' (highlighted) and '2. NO'. A hand icon points to a 'START' button.

Cancel from stack

Standby mode

Press the JOB CANCEL key

Cancel menu is displayed

Select a menu item

Make your selection for selecting the required job

The first available job is displayed.

Select the job which you wish to cancel.

Press the JOB CANCEL-key

Confirmation prompt

Confirm with START

The selected job is cancelled

Polling

Reserve polling

General:

The polling procedure is used for receiving a document. The difference between polling and "normal" reception is that the call is established by the person wishing to receive the document, and that the call charges are incurred by the person receiving the document.

More and more companies are using the polling facility as "FAX on DEMAND", for instance for providing information such as weather reports, current price lists, stock exchange news, traffic jam predictions, etc.

For the polling facility to be used, it must be **reserved beforehand**.

Reserve polling

Other fax partners can poll information from your fax machine if you set up this facility with this function.


Your document which you reserve for polling is read that into the memory of the machine so that the document tray is not blocked.

There are two types of reservation available:

- **single reservation:**
Your stored document is deleted as soon as the document has been polled.
- **permanent reservation:**
Your stored document is permanently available for polling.



Only one document can be reserved for polling.

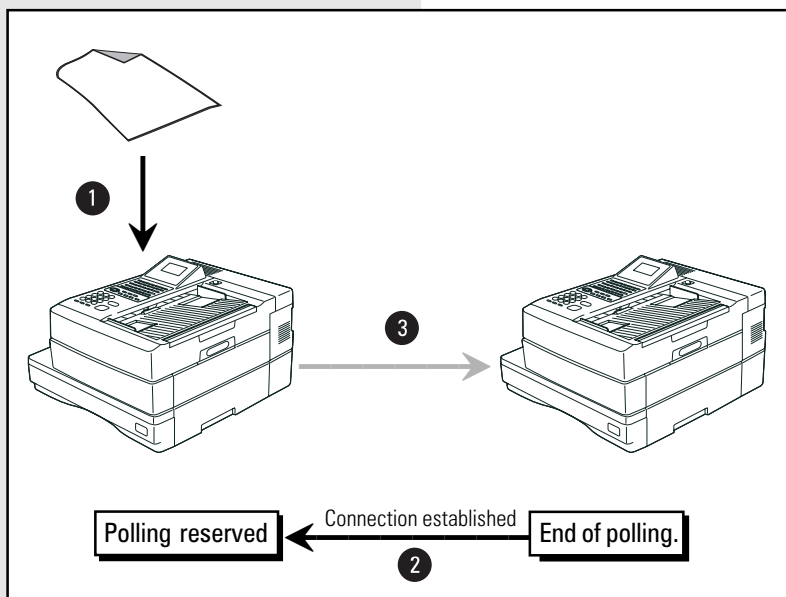

Polling

Polling protection

Polling reserved in this manner is not protected. I.e. every fax machine which has a polling facility is able to poll documents from your machine. The **polling protection** facility is activated in order to prevent unauthorised polling (only possible with single reservation).

Two options are available for polling protection:

- 1. NUMBER:** With this option, you specify the number of the fax machine which is permitted to poll documents from your machine. However, it is essential that the code of the polling fax machine is identical to the number which you enter as polling protection. It is sufficient if you enter the telephone number without the prefix, as the machine only checks as many numbers as you have entered.
- 2. CODE:** If you wish to reserve the polling facility exclusively for TOSHIBA fax machines, you can use the four-digit TOSHIBA code as polling protection. Documents can then only be polled if this code is identical in both fax machines.




Only one form of polling reservation is possible at any time.



Please refer to [page 60](#) for details of how to cancel polling reservation.

- *) In case of memory overflow, your dealer is able to offer a memory upgrade. The choice of resolution (see [page 44](#)) also has an effect on memory behaviour. The higher the resolution, the higher is the strain placed on memory volume.

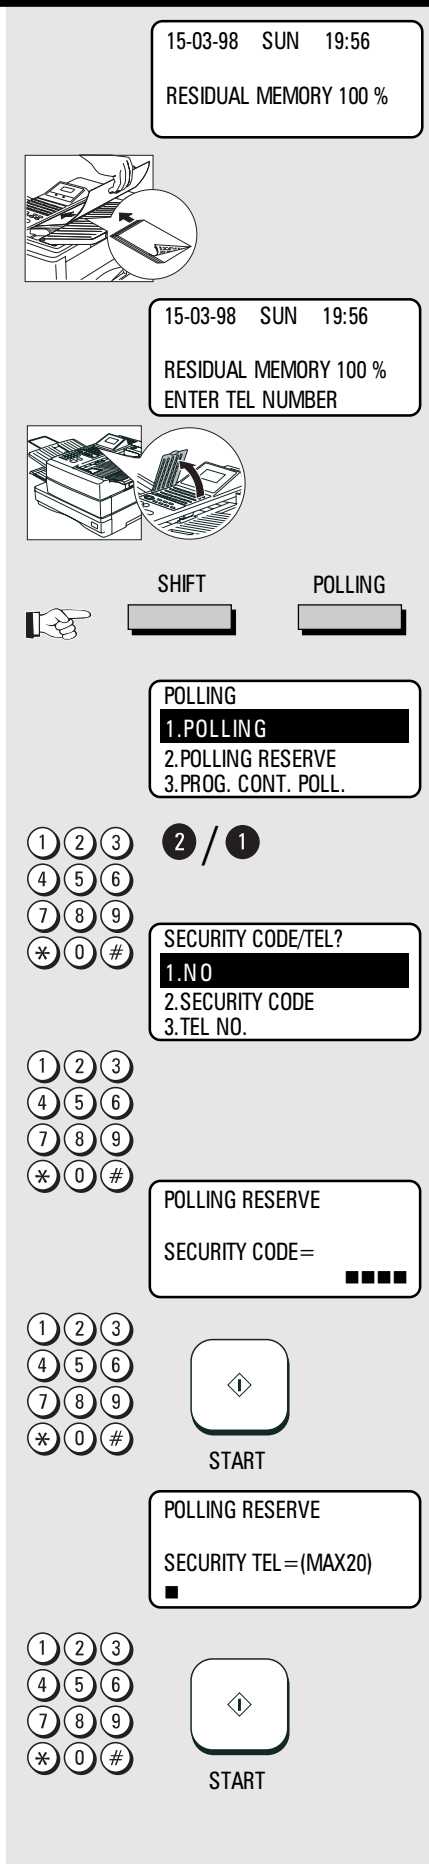

Reserve single polling

Standby mode

Load original

Remember:
Printed side face down

Document ready

Open the one-touch dial cover

Press the Shift key and then the corresponding function key

Make your selection for polling modes

Select a menu item

Polling protection?

1. No polling protection
2. TOSHIBA code
3. Telephone number
4. TOSHIBA code + telephone number (concealed)

Select a menu item

(Example: 4 = Both)

Make your selection for TOSHIBA code

Enter the TOSHIBA code

Confirm with START

Make your selection for the number (code) of the polling fax machine

Enter the number


Confirm with START


The document will be stored in memory*) and is ready for polling.

Polling


Reserve polling, permanent (general infobox)

With permanent polling, the document is retained in the memory of the fax machine so that it can be constantly polled. "FAX on DEMAND" can be configured in this way. Items of information such as weather report, current price lists, stock market news, traffic jam forecasts, etc. can thus be constantly maintained for polling.

 Only one form of polling reservation is possible at any one time.

 Please refer to [page 60](#) for details of how to cancel polling reservation.

*) In case of memory overflow, your dealer is able to offer a memory upgrade.
The choice of resolution ([see page 44](#)) also has an effect on the memory behaviour. The higher the resolution, the greater the strain on the memory volume.

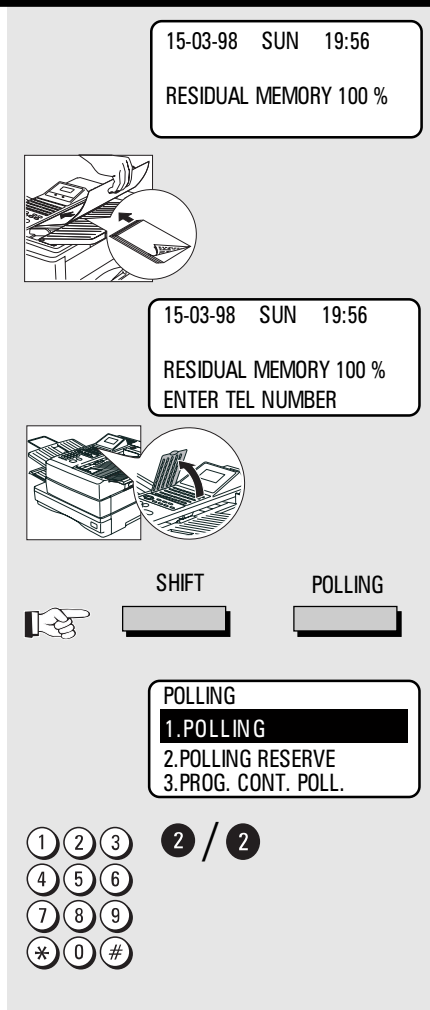

Reserve permanent polling (Infobox)

Standby mode

Load original

Remember:
Printed side face down

Document ready

Open the one-touch dial cover

Press the Shift key and then the corresponding function key

Make your selection
for polling modes

Select a menu item

The document is read into the memory and is kept available for various polling attempts until it is cancelled *)

Polling

Reserve polling, append documents

When a document has already been reserved for polling, you can append additional documents or replace these documents. This means that the operator is able to make additions without previously having to cancel the entire job.

15-03-98 SUN 19:56
RESIDUAL MEMORY 100 %

15-03-98 SUN 19:56
RESIDUAL MEMORY 100 %
ENTER TEL NUMBER

SHIFT POLLING

POLLING
1. POLLING
2. POLLING RESERVE
3. PROG. CONT. POLL.

1 2 3
4 5 6
7 8 9
* 0 #

2

POLLING
1. POLLING
2. PUBLIC FAX M-BOX

1 2 3
4 5 6
7 8 9
* 0 #

ALREADY ASSIGNED
1. CANCEL
2. ADD
3. RETAIN

1 2 3
4 5 6
7 8 9
* 0 #

Add documents

Standby mode

Load original

Remember:
Printed side face down

Document ready

Open the one-touch dial cover

Press the Shift key and then the corresponding function key

Make your selection
for polling modes

Select a menu item

Make your selection
for reservation type

Select a menu item

Documents can be added only if an existing reserved document is selected

Make your selection

1. Replace the existing contents with the new contents
2. Add the new contents to the existing contents
3. Exit the menu without making any changes

Select a menu item

Polling

Cancel polling reservation

If you have reserved a document for polling, you can cancel the reservation as follows:

15-03-98 SUN 19:56
RESIDUAL MEMORY 77 %

JOB CANCEL

JOB CANCEL
1.RECEIVE
2.TRANSMIT
3.DOCUMENT

1 2 3
4 5 6
7 8 9
* 0 #

JOB CANCEL
[ENTER]:START
[▲]:PREVIOUS SCREEN
[▼]:NEXT SCREEN

after 5 seconds

POLLING RESERVE
FILE NBR = xxx

START

DELETE?
FILE NBR = xxx
1.YES
2.NO

JOB CANCELLED

Standby mode

Press the JOB CANCEL key

Make your selection for cancel operation

Select a menu item

Make your selection for selecting the required job

The first available job is displayed. Please refer to [page 55](#) for details of the job format

Select the job which you wish to cancel.

Confirm with START

Confirmation prompt

Select a menu item

The job is cancelled

Polling

Single polling

If your fax partner has reserved a document for polling, you can poll the document using the procedure described in the following.

If you would like to use the **delayed polling facility**, you must first carry out the steps described on [page 92](#) before proceeding as follows.

15-03-98 SUN 19:56
RESIDUAL MEMORY 100 %

1 2 3
4 5 6
7 8 9
* 0 #

START

LOAD DOCUMENT
IF POLLING
PRESS [START]

START

POLLING
SECURITY CODE ?
1.YES
2.NO

1 2 3
4 5 6
7 8 9
* 0 #

WITHOUT PROTECTION WITH TOSHIBA CODE
Go to A **Go to B**

Standby mode

Enter the fax number of the fax machine from which you wish to poll

Confirm with START

Confirm with START

Make your selection for polling protection
1. with TOSHIBA code
2. without polling protection

Select a menu item

without protection (A) with TOSHIBA code (B)

A WITHOUT PROTECTION

The polling procedure is stored as a job and carried out.

B WITH TOSHIBA CODE

POLLING
SECURITY CODE= ■■■■

1 2 3
4 5 6
7 8 9
* 0 #

START

Enter the TOSHIBA code

Confirm with START

The polling procedure is stored as a job and carried out.

Polling

Multiple polling

It is not only possible to poll documents from a *single* fax machine; you are also able to use your fax machine to poll documents from *several* fax machines. You are able to define up to 309 fax partners using any combination of the following:

- User-defined fax numbers
- Alphabet dialling memories
- One-touch dial keys
- Defined groups

If you wish to use the **delayed multiple polling facility** you must first carry out the steps described on [page 92](#) before proceeding as described in the following.

The diagram illustrates the sequence of steps for multiple polling on a fax machine control panel. It shows the display screen, function keys (SHIFT, POLLING, MULTI, START), and the numeric keypad. The steps are as follows:

- Initial display: 15-03-98 SUN 19:56, RESIDUAL MEMORY 100 %
- Press the **SHIFT** key and then the **POLLING** key.
- Display: POLLING menu with options: 1. POLLING, 2. POLLING RESERVE, 3. PROG. CONT. POLL. Press the **1** key.
- Press the **MULTI** key.
- Display: MULTI POLLING ENTER TEL NUMBER, SPEED DIAL KEY OR ONE TOUCH KEY. Press the **START** key.
- Display: MULTI POLLING ENTER MORE OR PRESS [START]. Press the **START** key.
- Display: MULTI POLLING SECURITY CODE ? with options: 1. YES, 2. NO. Press the **1** key.
- Final options: WITHOUT PROTECTION (Go to A) and WITH TOSHIBA CODE (Go to B).

Standby mode

Open the one-touch dial cover

Press the Shift key and then the corresponding function key

Make your selection for polling modes

Select a menu item

Press the MULTI key

Make your selection for fax number ([page 32](#)), Alphabet dialling ([page 70](#)), One-touch dialling ([page 75](#)), Telephone directory ([page 39](#)), Group ([page 78](#))

Confirm with **START** (depending on selected action)

Make your selection for further group elements

- or -

Confirm with **START**

Make your selection for polling protection
1. with TOSHIBA code
2. without polling protection

Select a menu item


without protection (A) with TOSHIBA code (B)

Polling

A WITHOUT PROTECTION

Multiple polling is stored and carried out as a job.

B WITH TOSHIBA CODE

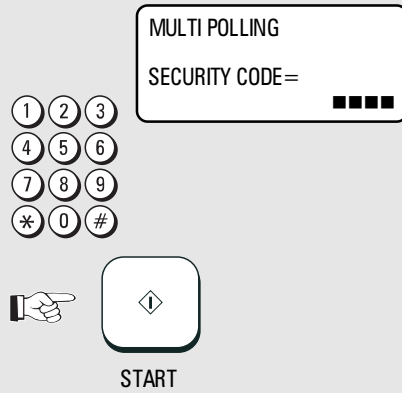

Enter the TOSHIBA code


Confirm with START

Multiple polling is stored and carried out as a job.

Polling

Cancel polling

The process of polling a document is also a job. Proceed as follows if you wish to cancel this polling job:

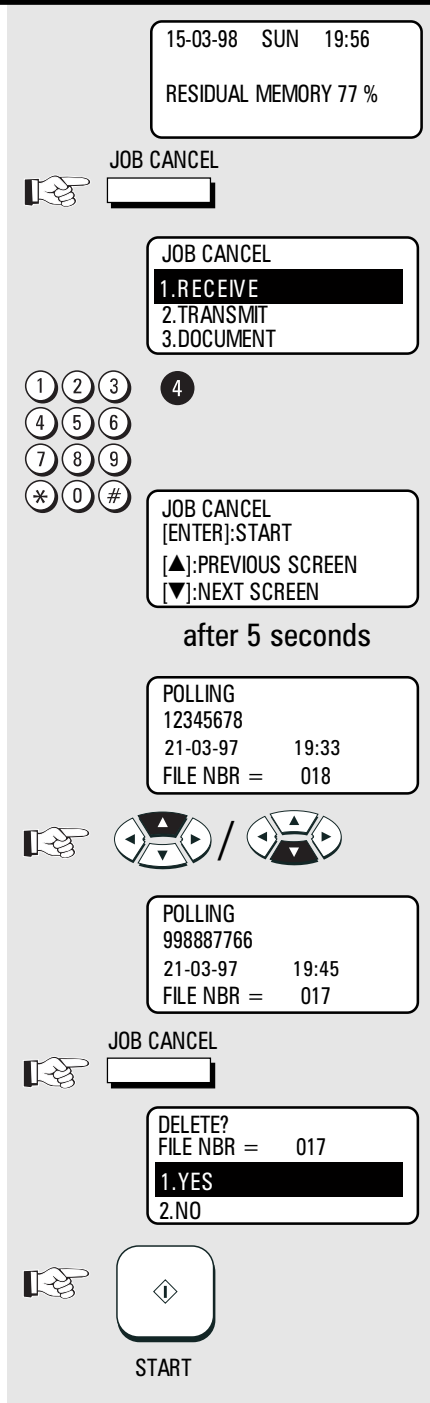

Standby mode

Press the JOB CANCEL key

Cancel menu is displayed

Select a menu item

Make your selection for selecting the required polling job

The first available polling job is displayed.

Select the job which you wish to cancel.

Press the JOB CANCEL key

Confirmation prompt

Confirm with START

Selected polling job is cancelled

Polling

Program Continuous Polling

The polling procedure is automated with the program continuous polling. During a defined period, your fax machine calls one or more stations in order to poll a document from the station. It is also possible for several procedures to be carried out during the day.

The diagram illustrates the following steps:

- Initial Status:** The display shows "15-03-98 SUN 19:56" and "RESIDUAL MEMORY 100 %".
- Menu Selection:** Press **SHIFT** and **POLLING**. The display shows "POLLING" with options: "1.POLLING", "2.POLLING RESERVE", and "3.PROG. CONT. POLL.". Press **3** on the keypad.
- Interval Setting:** The display shows "PROG. CONT. POLL." and "INTERVAL=(10-70)MIN". Press **00** on the keypad.
- Period Setting:** The display shows "PROG. CONT. POLL." and "TIME PERIOD = 08:00 - 17:00". Press the **START** key.
- Schedule Setting:** The display shows "PROG. CONT. POLL. [▲▼] FOR SETTING SCHEDULE = MON-FRI". Press the **START** key.
- Day Selection:** Press the **START** key. The display shows "to" and a numeric keypad. Press **1** for MON, **2** for TUE, **3** for WED, **4** for THU, **5** for FRI, **6** for SAT, **7** for SUN, **0** for ALL, or **#** for NONE.
- Final Confirmation:** Press the **START** key.

Standby mode

Open the one-touch dial cover

Press the Shift key and then the corresponding function key

Make your selection for polling modes

Select a menu item

Make your selection for the period after which the polling attempt is to be repeated (enter data in steps of 10 minutes)

Enter the periods

Confirm with START

Make your selection for the period during which program continuous polling is active. (Move the cursor using the ◀/▶ keys)

Enter the period

Confirm with START

Make your selection for the period of the week in which program continuous polling is active (from-to). Use the ◀/▶ keys to move the from-to cursor. Use the ▲/▼ keys to set the day.

Enter the period of the week

Confirm with START

Continued on next page.

PROG. CONT. POLL.
ENTER TEL NUMBER
SPEED DIAL KEY OR
ONE TOUCH KEY



START

MULTI POLLING
SECURITY CODE ?
1.YES
2.NO

1 2 3
4 5 6
7 8 9
* 0 #

WITHOUT PROTECTION WITH TOSHIBA CODE

Go to A Go to B

Make your selection for the numbers of fax partners to be served with program continuous polling.

Enter...

- User-defined numbers (see page 32)
- Alphabet dialling numbers (see page 70)
- Telephone directory function (see page 39)
- One-touch dial keys (see page 75)

Confirm with START

Make your selection for polling protection

1. with TOSHIBA code
2. without polling protection

Select a menu item

without protection (A) with TOSHIBA code (B)


A WITHOUT PROTECTION

Program continuous polling is stored and carried out as a job.

B WITH TOSHIBA CODE

MULTI POLLING
SECURITY CODE= ■■■■

1 2 3
4 5 6
7 8 9
* 0 #



START

Enter the TOSHIBA code


Confirm with START

Program continuous polling is stored and carried out as a job.

Polling

Reverse direction

With the reverse direction facility, the machine automatically polls another document after having transmitted a document. For this to be effective, a document must have also been reserved for polling on the receiver side.

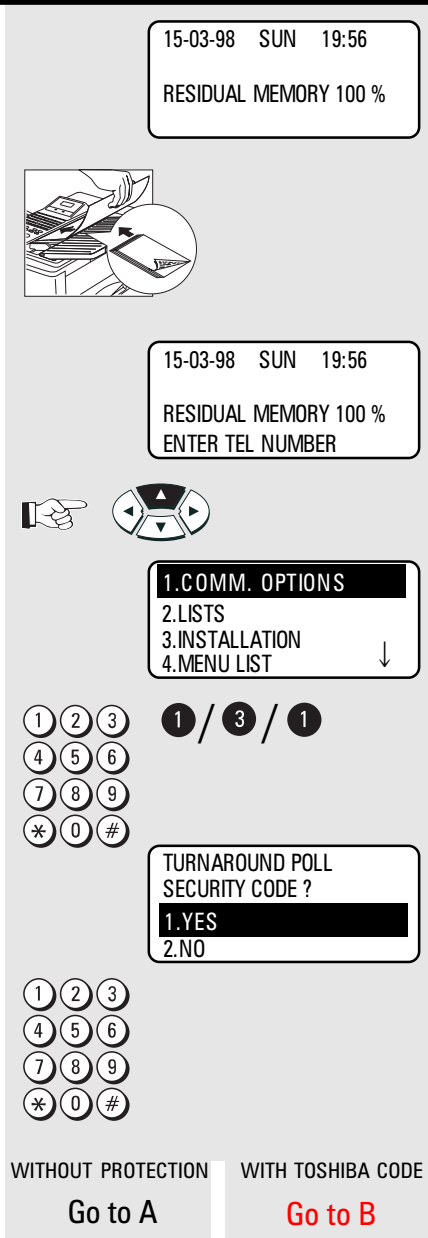

The diagram illustrates the reverse direction polling process through several stages:

- Initial State:** The display shows the date and time (15-03-98 SUN 19:56) and "RESIDUAL MEMORY 100 %". An illustration shows a hand placing a document on the machine.
- Document Ready:** The display shows "15-03-98 SUN 19:56" and "RESIDUAL MEMORY 100 % ENTER TEL NUMBER".
- Menu Selection:** A hand points to the navigation buttons. The display shows a menu: "1.COMM. OPTIONS", "2.LISTS", "3.INSTALLATION", and "4.MENU LIST". Below the menu is a numeric keypad and a display showing "1 / 3 / 1".
- Security Code Selection:** The display asks "TURNAROUND POLL SECURITY CODE ?" with options "1.YES" and "2.NO". Below is a numeric keypad.
- Final Selection:** Two options are shown: "WITHOUT PROTECTION Go to A" and "WITH TOSHIBA CODE Go to B".

Standby mode

Load original

Remember:
Printed side face down

Document ready

Enter the menu

The first 4 menu items are displayed

Select a menu item


Make your selection for polling protection

1. with TOSHIBA code
2. without polling protection

Select a menu item

without protection (A) with TOSHIBA code (B)

A WITHOUT PROTECTION

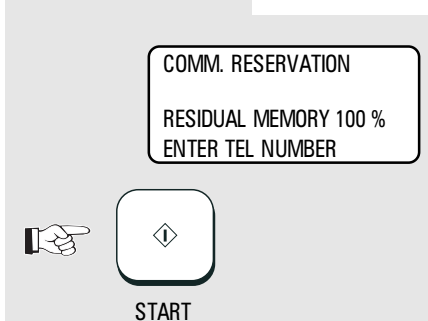

The diagram shows the "WITHOUT PROTECTION" option selected. The display shows "COMM. RESERVATION", "RESIDUAL MEMORY 100 %", and "ENTER TEL NUMBER". A hand points to the "START" button, which is represented by a diamond icon with a downward arrow.

Make your selection


for fax number, alphabet dialling, one-touch dial or telephone directory

Confirm with START

The document is read into memory (see page 32)

When contact is made with the fax partner, the document is transmitted and the document is subsequently polled.

B WITH TOSHIBA CODE

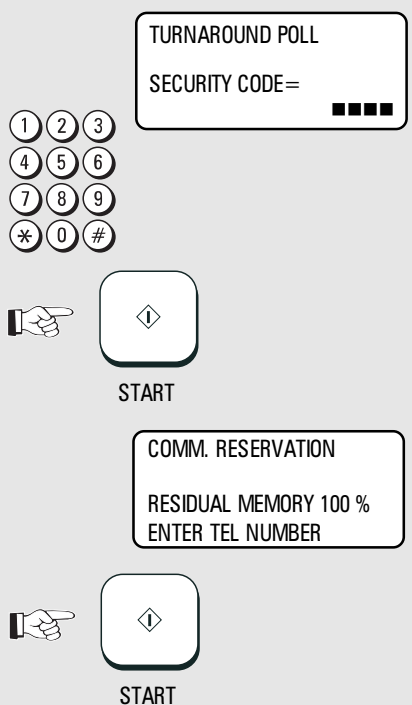

Enter the TOSHIBA codes

Confirm with START

Make your selection for fax number, alphabet dialling, one-touch dial or telephone directory.

Confirm with START

The document is read into memory (see [page 32](#))

When contact is made with the fax partner, the document is transmitted and the other document is then polled.

Store numbers

Alphabet dial memory

The alphabet dial facility enables you to enter a single "address" instead of the fax number of your partner (which is frequently a long number). This "address" can be any number between 1 and 999. The real fax number is stored under this "address". With frequently used fax numbers, the alphabet dial facility enables you to save time.

A further component of the alphabet dial memory is the alternative fax number (second number). It is dialled if no fax connection is established under the normal fax number. It is not essential for the second fax number to be entered. 240 alphabet dial memories are available and the name as well as the number of your partner can be stored in this memory. You can use up to 20 characters of your choice in this memory. (see page 12 enter the user name). It is also not absolutely necessary for this data to be entered. In addition to numbers and names, it is also possible for additional options to be assigned to an alphabet dial memory position (see next page, Alphabet dial options).



Please note that, in order to obtain an outside line (when equipment is connected to a PABX), the "*" key must be saved before the actual fax number.



An error message is displayed if the user attempts to store an identical fax number in the alphabetic dialling memory. This facility prevents identical fax numbers from being stored (not applicable for alternative numbers).

Example: Alphabet dial 421:

999	Fax number (128)
998	1234567890
...	
422	2. Fax number (128)
421	0987654321
420	Name (20)
	BLUME
...	
	Options
5	2. Delayed Comm
4	3. TX REPORT
3	4. LINE MONITOR
2	5. LOW SPEED TX
1	6. SUB ADDRESS
	Alphabet dial memory

15-03-98 SUN 19:56
RESIDUAL MEMORY 100 %

SHIFT TEL LIST ENTRY

DIAL ENTRY
1.ABB. NUMBERS
2.GROUP NUMBERS
3.ONE TOUCH KEYS

ENTER ABB. NUMBER OR PRESS
[BACK]:TO PREVIOUS
[STOP]:TO COMPLETE

ABB. NBR = 007
TEL NUMBER =(MAX128)
1234567890

ABB. NBR = 007
2nd TEL NBR =(MAX128)

Enter alphabet dial number

Standby mode

Open the one-touch dial cover

Press the Shift key and then the corresponding function key

The menu items are displayed.

Select a menu item

Make your selection
Enter alphabet dial number(1-999)

Enter the alphabet dial number

Example: 7
Use the ◀ key to correct data input

Confirm with START

Make your selection
for first fax number

Enter the fax number

For obtaining the outside line
(when equipment is connected to PABXs), please enter the "*" key before the actual number.
Use the ◀ key to correct the entry.

Confirm with START

Make your selection
for alternative fax number

Enter the alternative fax number -and / or- skip with START

Store numbers

ABB. NBR = 007
ID NAME =(MAX20)
■

ABB. NBR = 007
ID NAME =(MAX20)
Toshiba

START

COMM. OPTION?
1.YES
2.NO

ABB. NBR = 007
PRESS ONE TOUCH KEY
TO ENTER OR
[ENTER]:TO SKIP

START

ENTER ABB. NUMBER
OR PRESS
[BACK]:TO PREVIOUS
[STOP]:TO COMPLETE

STOP

Make your selection
for name

Enter the name
(see scheme [page 12](#))
-and / or-
skip with **START**

Confirm with START

Make your selection
for options
YES: See alphabet dial options [page 71](#)
NO: See below

Select a menu item

Assign the alphabet dial number to the
one-touch dial key ([see page 75](#))

For further procedure, see under "one-
touch dial keys"
-or-

Confirm with START

Make your selection
further alphabet dial numbers

-or-

**Press STOP, return to standby
mode**

Store numbers

Alphabet dial options

Apart from numbers and names, it is also possible for additional options to be assigned to an alphabet dial memory position:

Delayed Comm (2)

The fax partner is linked to a specific transmission time with this option, e.g. for fax partners in other time zones; this ensures that the documents always arrive during business hours.

Journal (3)

Irrespective of the basic setting for printing out the transmission report (see page 81), the facility for printing out the transmission report can be activated or deactivated in relation to a specific fax partner.

Listening-in (4)

If the listening-in option is activated for a fax transmission, the call establishment attempt is played back via the built-in speaker. This provides the operator with an additional acoustic check of the call establishment procedure. This is useful whenever a connection is not established. The cause is frequently an incorrect number or a fax machine which is not ready to receive.

Low Speed TX (5)

When sending documents overseas or if an increased error ratio is encountered, you should lower the transmission speed in order to reduce the number of errors. Similar to a situation in traffic where speed is adjusted to the given conditions!



Please note that, when lower transmission speeds are used, the actual transmission time is longer.

Sub Address (6)

This operating mode is used for sending fax documents in PC networks. The fax number (the number of the fax server in the network) and also the subaddress of the workstation in the network must be entered to enable the fax document to be forwarded in the network (for further information, see page 109).



COMM. OPTION?

- 1.YES
- 2.NO

1

FAX OPTIONS

- 1.COMPLETE
- 2.DELAYED COMM.
- 3.TX REPORT

Procedure up to this menu item:

See page 69

Make your selection for options

Select a menu item

Display the first options.



Further options are to be found under the display and can be selected using the ▼ key. The menu items can of course also be selected directly by entering the specific number.


Store numbers

Modify ABB numbers

If you wish to **modify the contents of an alphabet dial number**, all you have to do is simply enter the corresponding alphabet dial number (see under "Alphabet dial number"). If this number has already been used, a further selection option is displayed.

All stored data can be overwritten or skipped with the START key.

(Example: ABB, NBR. 7, name TOSHIBA):

 Error message appears if you try to store the same fax number again in the alphabet dial memory. This is to avoid storing equal numbers.

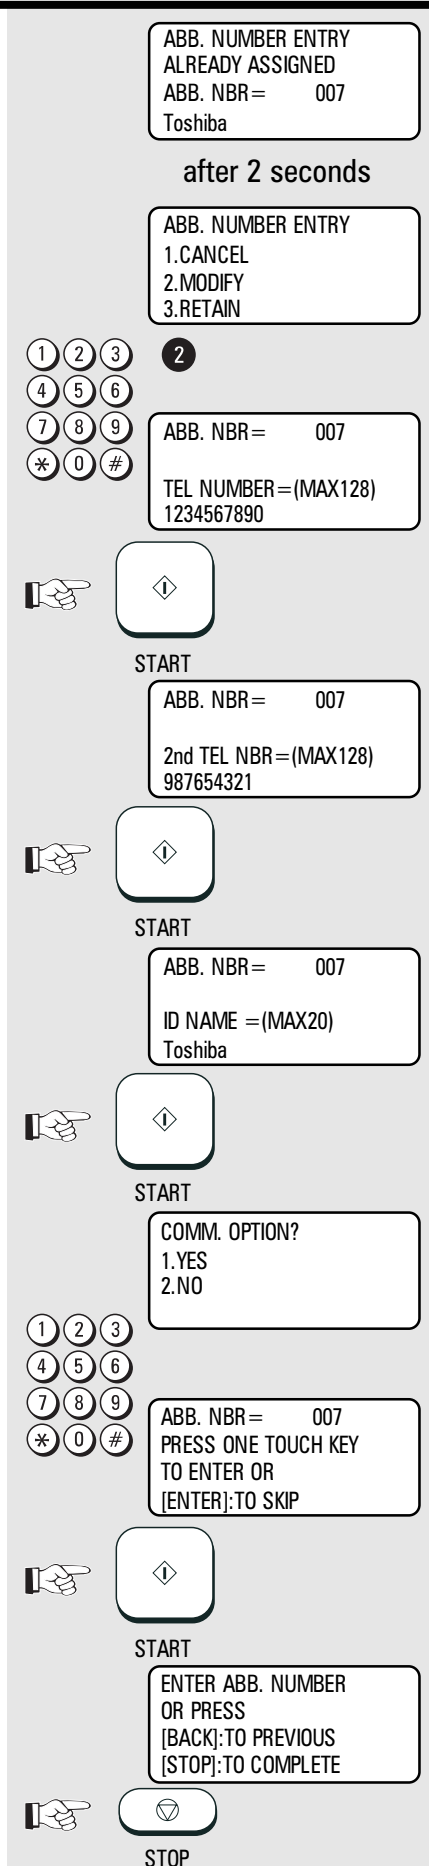


ABB. NUMBER ENTRY
ALREADY ASSIGNED
ABB. NBR = 007
Toshiba

after 2 seconds

ABB. NUMBER ENTRY
1.CANCEL
2.MODIFY
3.RETAIN

ABB. NBR = 007
TEL NUMBER =(MAX128)
1234567890

START

ABB. NBR = 007
2nd TEL. NBR =(MAX128)
987654321

START

ABB. NBR = 007
ID NAME =(MAX20)
Toshiba

START

COMM. OPTION?
1.YES
2.NO

ABB. NBR = 007
PRESS ONE TOUCH KEY
TO ENTER OR
[ENTER]:TO SKIP

START

ENTER ABB. NUMBER
OR PRESS
[BACK]:TO PREVIOUS
[STOP]:TO COMPLETE

STOP

Procedure as described under "Enter alphabet dial number": See page 69

Display message for existing alphabet dial number

Menu displayed when alphabet dial number already exists

Select a menu item

Option for editing the first fax number

-and/or-

Confirm with START

Option for editing the second fax number

-and/or-

Confirm with START

Option for editing the name

-and/or-

Confirm with START

Option for editing
Options
YES: See alphabet dial options
NO: See below

Select a menu item

Assign the alphabet dial number to the one-touch dial key (see page 75)

Confirm with START

Make your selection
for further alphabet dial numbers

-or-

Press STOP, return to standby mode

Store numbers

Delete ABB numbers

If you want to **delete ABB numbers** just enter them.

If it is already assigned, you can select how to proceed (Example: ABB, NBR. 7, name TOSHIBA):

ABB. NUMBER ENTRY
ALREADY ASSIGNED
ABB. NBR = 007
Toshiba

after 2 seconds

ABB. NUMBER ENTRY
1.CANCEL
2.MODIFY
3.RETAIN

1

ABB. NUMBER ENTRY
ABB. NBR = 007
CANCELLED

after 2 seconds

ENTER ABB. NUMBER
OR PRESS
[BACK]:TO PREVIOUS
[STOP]:TO COMPLETE

STOP

Please refer to **page 69** for the procedures as described under "Enter alphabet dial number"

Display message for existing alphabet dial number

Menu displayed with existing alphabet dial number

Select a menu item

Make your selection for further alphabet dial numbers

-or-

Press STOP, return to standby mode

Store numbers


One-touch dial keys


The one-touch dialling facility is a very user-friendly method for dialling the number of your fax partner. You can configure 69 keys *) with fax numbers of your choice. Simply push a button to reach your fax partner.

*) Two numbers can be stored on every one-touch dial key on your fax machine. A further 34 number places are available when you operate the one-touch dialling cover.

Two options are available.


1. Direct configuration of one-touch dial keys

 Apart from numbers and names, it is also possible for additional options to be assigned to a one-touch dial key (see page 71 Alphabet dial options).

 If the operator attempts to save an identical fax number under a one-touch dial key, the system displays an error message. This prevents identical fax numbers from being saved.

Criteria which can be assigned to a one-touch dial key:

- ONE TOUCH xx — Fax number (128)
1234567890
- 2. Fax number (128)
0987654321
- Name (20)
BLUME
- Options
 - 2. DELAYED COMM
 - 3. TX REPORT
 - 4. LINE MONITOR
 - 5. LOW SPEED TX
 - 6. SUB ADDRESS

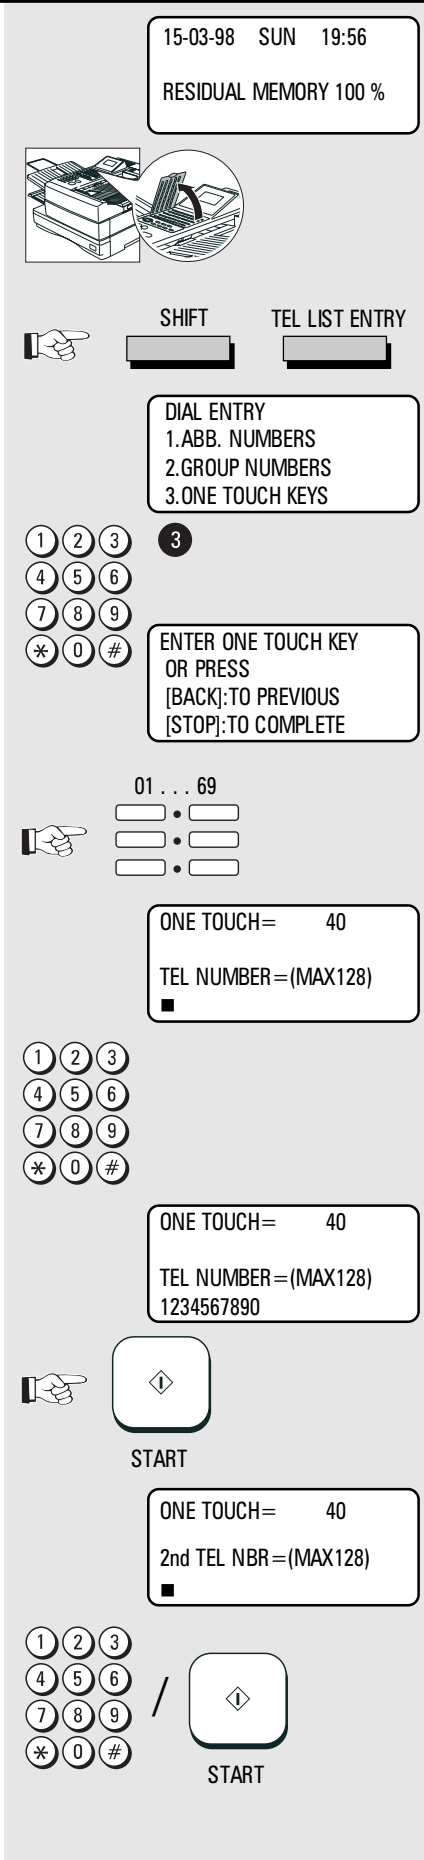

15-03-98 SUN 19:56
RESIDUAL MEMORY 100 %

SHIFT TEL LIST ENTRY

DIAL ENTRY
1.ABB. NUMBERS
2.GROUP NUMBERS
3.ONE TOUCH KEYS

1 2 3
4 5 6
7 8 9
* 0 #

ENTER ONE TOUCH KEY
OR PRESS
[BACK]:TO PREVIOUS
[STOP]:TO COMPLETE

01 . . . 69

ONE TOUCH= 40
TEL NUMBER=(MAX128)

1 2 3
4 5 6
7 8 9
* 0 #

ONE TOUCH= 40
TEL NUMBER=(MAX128)
1234567890

START

ONE TOUCH= 40
2nd TEL NBR=(MAX128)

1 2 3
4 5 6
7 8 9
* 0 #

START

Save fax number directly on one-touch dial key

Standby mode

Open the one-touch dial cover

Press the Shift key and then the corresponding function key

The menu items are displayed.

Select a menu item


Make your selection
press required one-touch dial key:
closed one-touch dial cover
One-touch dial key 1 - 35
open one-touch dial cover:
One-touch dial key 36 - 69

Press the one-touch dial key

Example: 40

Make your selection
for first fax number

Fax number input

 **For obtaining the outside line**
(for equipment connected to PABXs), please enter the "*" key before the actual number. Use the ◀ key to correct the entry.

Confirm with START

Make your selection
for alternative fax number



Enter the alternative fax number
-and / or-
skip with START

Store numbers

2. Assign alphabet dial number to a one-touch dial key

When the fax number has been stored in an alphabet dial memory, it can be **additionally** assigned to a one-touch dial key. This assignation is not subject to any restrictions, i.e. any one-touch dial key can be used (see page 69).

User-defined assignation of alphabet dial memories to one-touch dial keys:

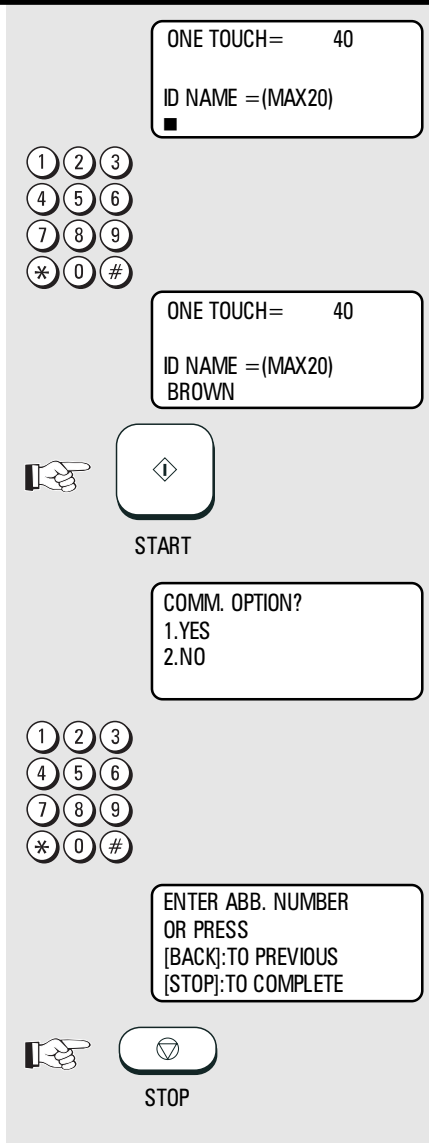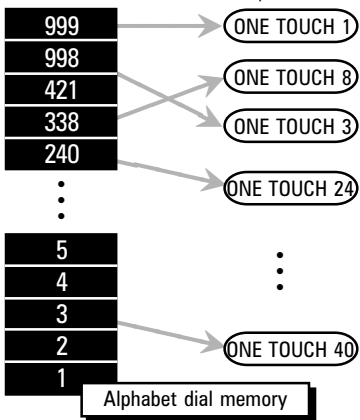

Make your selection for name

Enter the name (refer to [page 12](#) for diagram) -and / or- skip with START

Confirm with START

Make your selection for options

YES: see alphabet dial options [page 71](#)
NO: see below

Select a menu item

Make your selection for further one-touch dial keys

-or-

Press STOP, return to standby mode

Store numbers

Cancel one-touch dial keys

If you wish you cancel the contents of a one-touch dial key, simply enter the corresponding one-touch dial key in the menu (see under one-touch dial keys). If this one-touch dial key is already being used, a further selection option is displayed (example: one-touch dial key 1, name TOSHIBA):

ONE TOUCH= 01
ALREADY ASSIGNED
ONE TOUCH= 01
Toshiba

after 2 seconds

ONE TOUCH KEY ENTRY
1.CANCEL
2.RETAIN

ONE TOUCH KEY ENTRY
ONE TOUCH= 01
CANCELLED

after 2 seconds

ENTER ONE TOUCH KEY
OR PRESS
[BACK]:TO PREVIOUS
[STOP]:TO COMPLETE

STOP

Refer to **page 75** for procedure as described under “One-touch dial keys”

Display message for existing one-touch dial key

Menu displayed if one-touch dial key already exists

Select a menu item

Programming of one-touch dial key is cancelled

Make your selection for further one-touch dial keys

-or-

Press STOP, return to standby mode


Store numbers

Define groups

If you have a fixed number of partner to whom you frequently send broadcast transmissions, the stored broadcast facility is just what you need.


You are permitted to define 50 different groups, whereby each group can be assigned a group number from 1 - 1999 and a name consisting of max. 20 characters.

Each group can contain max. 309 fax partners, and these must be stored either in the alphabet dial memory or under the one-touch dial keys.

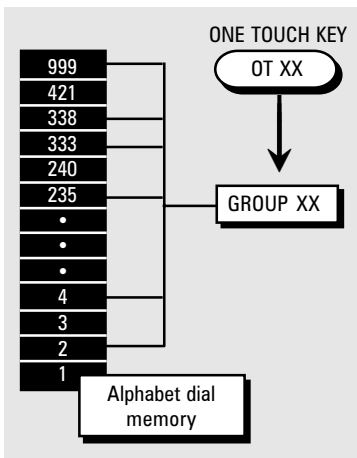


15-03-98 SUN 19:56

RESIDUAL MEMORY 100 %



SHIFT




TEL LIST ENTRY

DIAL ENTRY

1.ABB. NUMBERS

2.GROUP NUMBERS

3.ONE TOUCH KEYS



1 2 3

4 5 6

7 8 9

* 0 #


2

ENTER GROUP NUMBER

OR PRESS

[BACK]:TO PREVIOUS

[STOP]:TO COMPLETE




1 2 3

4 5 6

7 8 9

* 0 #




START

GROUP NBR= 0444

GROUP NAME =(MAX20)

█




1 2 3

4 5 6

7 8 9

* 0 #




START

GROUP NBR= 0444

GROUP NAME =(MAX20)

SUPERGROUP




1 2 3

4 5 6

7 8 9

* 0 #



START

GROUP NBR= 0444

ENTER ABB. NBR OR

[ENTER] TO COMPLETE

Define groups

Standby mode

Open the one-touch dial cover

Press the Shift key and then the corresponding function key

The menu items are displayed.

Select a menu item

Make your selection
Group number (1 - 1999)

Enter group number
Example: 444

Confirm with START











Make your selection
for group name

Enter group name
(see page 12 for diagram)

Confirm with START

Make your selection
for group partner
Alphabet dial number -or-
one-touch dial key

Store numbers

  START	Confirm with START
  START	Make your selection for further group partner -or-
  START	Confirm with START Make your selection for one-touch dial key to which the group is assigned. -or-
  START	Confirm with START Make your selection for further groups -or-
  STOP	Press STOP, return to standby mode

Store numbers

Edit groups

If you wish to **edit the contents of a group**, simply enter the corresponding group number (see under "Define groups"). If this group number already exists, a further selection option is displayed. All stored data can be overwritten or skipped using the START key.
(Example: group number: 444, name: Supergroup)

Refer to page 77 for procedure as described under "Define groups"

Display message for existing group number

Menu displayed if group number already exists

Select a menu item

Make your selection for new group name

-or-

Confirm with START

Make your selection for group partner

If the operator enters existing group partners, they can be cancelled (see following example)

Enter an alphabet dial number

Make your selection

Cancel the selected group partner

1: YES

2: NO

Select a menu item

Make your selection

for further group partners

-and/or-

Confirm with START

Make your selection

for one-touch dial key to which the group is assigned.

-or-

Confirm with START

Make your selection

for further groups

-or-

Press STOP, return to standby mode

Store numbers

Cancel groups

If you wish to **cancel a group**, simply enter the corresponding group number (see under "Define groups"). If this group number already exists, a further selection option is displayed.

(Example: group number: 444, name: Supergroup)

GROUP NBR ENTRY
ALREADY ASSIGNED
GROUP NBR = 0444
SUPERGROUP

after 2 seconds

GROUP NBR ENTRY
1.CANCEL
2.MODIFY
3.RETAIN

after 2 seconds

GROUP NBR = 0444
CANCELLED

ENTER GROUP NUMBER
OR PRESS
[BACK]:TO PREVIOUS
[STOP]:TO COMPLETE

STOP

Refer to **page 77** for procedure as described under "Define groups"

Display message for existing group number

Menu displayed if group number already exists

Select a menu item

Group is cancelled

Make your selection for further groups

-or-

Press STOP, return to standby mode

Report prints

Program selection list

The program selection list provides you with a complete overview of the menu system for your fax machine. It is the only list which can be selected via the main menu item.

Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item

The report is printed.

Transmission reports

The transmission reports provide you with extensive and individual information concerning the various transmission jobs of your fax machine. You can use a special menu to adjust the appearance of these reports to meet your specific requirements.

ALWAYS	The transmission report is always printed after every transmission.
ON ERROR	The transmission report is printed out only if a transmission error occurs.
OFF	The transmission report is never printed out.
PRINT DOCUMENT?	The first page of the document can be printed in reduced form on the transmission report. This means that the transmission report can easily be allocated to the document.

Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item

The options of the first transmission report can be selected.

Select a menu item

Further transmission reports follow automatically for setting.

Report prints

The various transmission reports and related options:

TX REPORT	Transmission report printed out after every transmission in the "direct transmission mode". Setting: <ul style="list-style-type: none"> • Always printed out • Printed out only if transmission is errored
SET MEMORY-TX REPORT	Printed out after every memory transmission. Setting: <ul style="list-style-type: none"> • Always printed out • Printed only if transmission is errored • Printed with/without image of document
SET MULTI-ADD REPORT	Printed out after entire broadcast has been completed. Setting: <ul style="list-style-type: none"> • Always printed out • Printed only if transmission is errored • Printed with/without image of document
SET MULTI POLL REPORT	Printed out after entire multiple polling has been completed. Setting: <ul style="list-style-type: none"> • Always printed out • Printed only if transmission is errored • Never printed out
RELAY TX ORIGINATOR TERMINAL REPORT	This list is generated by the originator as soon as the document has been transmitted to the relay machine. This list contains the settings of the originator. *) <ul style="list-style-type: none"> • Always printed out • Printed out only if transmission is errored
RELAY TX RELAY STATION REPORT	This list is generated by the relay machine as soon as the document has been transmitted to the end machines. This list is equivalent to a group transmission report. *) <ul style="list-style-type: none"> • Always printed out • Printed out only if transmission is errored
RELAY TX END TERMINAL REPORT	This list is a copy of the "Relay transmission list of the distributor machine". If there is a correct correlation between the ID of the originator and the entry in the alphabet dial memory of the relay machine, this list is faxed to the originator after the relay transmission has been completed. *) <ul style="list-style-type: none"> • Always printed out • Printed out only if transmission is errored • Never printed out


*) Further information on this subject is set out in a special TOSHIBA issue "Relays and mailboxes", available from your dealer.

Report prints

Transmission report:

MEMORY TRANSMISSION REPORT	
TIME	: 03.03.97 14:23
TEL NUMBER 1	: +44-1234567890
NAME	: TOSHIBA MARKETING TF631
FILE NUMBER	: 042
DATE	: 03-03 14:23
TO-	: 541
DOCUMENT PAGES	: 01
START TIME	: 03-03 14:23
END TIME	: 03-03 14:30
SENT PAGES	: 01
STATUS	: OK
FILE NUMBER	: 042
*** SUCCESSFUL TX NOTICE ***	

Memory TX report:

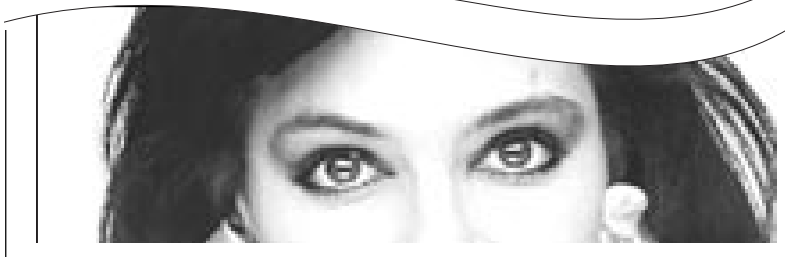


The entries and their meanings:

FILE NUMBER:	Corresponds to the job number. This job number is displayed in the transmission journal (q.v.) and also under the entry "F-xxx" in the transmission header on the inbound copy.
DATE	The date (and the time) when the job was placed in the fax machine.
TO / FROM	Fax number entered on the transmitted fax.
DOCUMENT PAGES	Number of document pages scanned into the machine.
START TIME	Start of connection time.
END TIME	End of connection time.
SEND PAGES	Number of pages actually transmitted.
STATUS	see: error codes page 112 .

Report prints



You can also subsequently request the transmission report for the previous 40 transmissions (first document not illustrated):

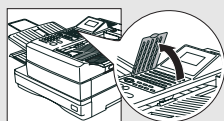

15-03-98 SUN 19:56

RESIDUAL MEMORY 77 %



SHIFT



PREV. TX REP.



PREVIEW TX REPORT
[COPY]:PRINT REPORT
[▲]:PREVIOUS SCREEN
[▼]:NEXT SCREEN

after 5 seconds

FILE NBR = 091
+44-2131-123456
21-03 19:33
OK 01



FILE NBR = 088
+44-2131-123456
21-03 04:25
OK 01



COPY



Standby mode

Open the one-touch dial cover

Press the Shift key and then the corresponding function key

Make your selection for selecting the required entry

The most recent available entry is displayed.

Select the entry which you wish to print.

Press the COPY key
The required transmission report is printed out

Report prints

Multi transmission report

After the successful multi-address transmission your fax will print a list of all fax partys.

MULTI TRANSMISSION REPORT

TIME : 03.03.98 14:23
TEL NUMBER : +44-1234567890
NAME : TOSHIBA MARKETING TF631

FILE NUMBER : 003
DATE: 03-03 13:12
DOCUMENT PAGES: 01
START TIME: 03-03 13:32
END TIME: 03-03 13:59

SUCCESSFUL

ONE TOUCH NUMBER
01 GROUP 0001 ALLE ABB. 001 002 003 004

UNSUCCESSFUL

ONE TOUCH NUMBER PAGES SENT
01 GROUP 0001 ALLE ABB. 005 15 00

Multi polling report

When the multi-polling procedure has been completed, the machine lists the fax partners for whom the polling procedure was successful and the fax partners for whom the polling procedure was not successful. This list is always printed out when the multi-polling procedure has been completed.

MULTI POLLING REPORT

TIME : 03.03.98 14:23
TEL NUMBER : +44-1234567890
NAME : TOSHIBA MARKETING TF631

FILE NUMBER: 003
DATE: 03-03 13:12
START TIME: 03-03 13:32
END TIME: 03-03 13:59

SUCCESSFUL

ONE TOUCH NUMBER
01 GROUP 0001 SUPERGROUP ABB. 013

UNSUCCESSFUL

ONE TOUCH NUMBER
01 GROUP 0001 SUPERGROUP ABB. 005 15 00

Report prints

Transmission and reception journal

Your fax machine will record messages which you transmit or receive in the form of transmission and reception journals. These lists are printed out automatically after every 40 transmissions. You can also manually request the journal at any time. You should file this list as a record of the document jobs; if your fax machine has to be serviced, this list can provide valuable assistance for to cure the problem.

Use the following steps to influence the way in which the journal is printed out in accordance with your requirements:

Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item

The journal options are displayed

- 1: Printed out only if the JOURNAL key* is pressed
- 2: Printed out automatically every 40 jobs

Select a menu item

Manual output of journal:

*) For "manual" output

Output options are displayed

- 1: Output of transmission and reception journal
- 2: Output of transmission journal
- 3: Output of reception journal

Select a menu item

Standby mode

Open the one-touch dial cover

Press the Shift key and then the corresponding function key

Output of journal

Report prints

Additional details relating to the operating data of the fax machine:

Scan count:

Number of scanned documents

Print count:

Total number of printed pages

Drum count:


Number of printed pages (x10), in relation to the current drum unit

TRANSMISSION JOURNAL											
TIME	:	03.03.98	14:23								
TEL NUMBER	:	+44-1234567890									
NAME	:	TOSHIBA MARKETING TF631									
SCAN COUNT	:	150	(00000096)								
PRINT COUNT	:	191	(000000BF)								
DRUM COUNT	:	1480	(000005C8)								
TONER COUNT	:	1	(00000001)								
NBR FILE NBR DATE TIME DURATION PGS TO DEPT NBR ACCOUNT MODE STATUS											
02	252	09.12	14:21	01/48	01	MAX MEIER				EC 310	NG D1
RECEPTION JOURNAL											
TIME	:	03.03.98	14:23								
TEL NUMBER	:	+44-1234567890									
NAME	:	TOSHIBA MARKETING TF631									
SCAN COUNT	:	150	(00000096)								
PRINT COUNT	:	191	(000000BF)								
DRUM COUNT	:	1480	(000005C8)								
TONER COUNT	:	1	(00000001)								
NBR FILE NBR DATE TIME DURATION PGS FROM DEPT NBR ACCOUNT MODE STATUS											
02	252	09.12	14:21	01/48	01	MAX MEIER				EC 310	NG D1

Meaning of the items in the journal:

NBR.	Every job in the transmission and reception journal is given a sequential number (001-999). The number in the transmission journal is displayed under the entry: "T- xxx" in the transmission header on the inbound copy. Where transmission jobs are grouped together (see page 34), these positions are displayed under an identical number.
FILE NBR	Corresponds to the job number. This job number is displayed under the entry: " F- xxx" in the transmission header of the inbound copy.
DATE	Date of the job
TIME	Time of the job
DURATION	Active duration of the job (minutes/seconds)
PGS	Number of transmitted or received pages
TO/FROM	Fax number of the fax partner. A diamond (◆) is displayed in front of the number if an alternative number (see page 69) has been selected
DEPT. NBR	Department code (see page 99), only displayed if journal is printed out under the master code.
ACCOUNT	Cost centre code (see page 98)
MODE	Transmission mode
STATUS	Error codes (see page 112)


Codes used for transmission modes:

HS	TOSHIBA High Speed mode	EX	ECM with abbreviated protocol
G3	Group-3 transmission	P	Polling
EC	ECM error correction		Transmission from PC

Report prints

Reservation list

This list illustrates the status of stack memory (see page 33). It contains all jobs which have not yet been completed.

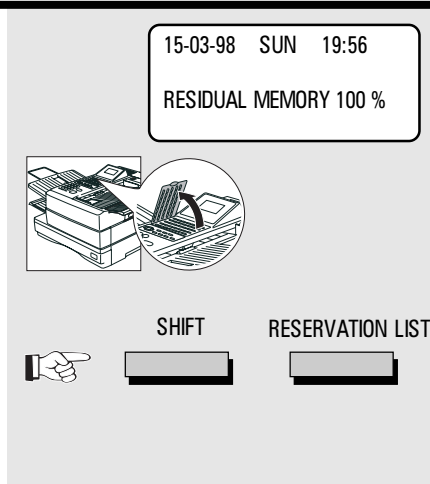

Standby mode

Open the one-touch dial cover


Press the Shift key and then the corresponding function key

The reserve list is printed out

RESERVATION LIST						
TIME	:	03.03.98	14:23			
TEL NUMBER	:	+44-1234567890				
NAME	:	TOSHIBA MARKETING TF631				
TX/RX		FILE NBR	FUNCTION	PGS MAIL	DATE	TIME TO
		003	MULTI TX	01	03-03	13:32 OT NBR01
POLL/FAX MAILBOX		FILE NBR	FUNCTION	PGS	DATE	TIME TO
RECOVERY TX		FILE NBR	FUNCTION	PGS MAIL	DATE	TIME TO

The function list

This list provides information concerning all settings of the fax machine. They correspond with the settings which you have made. Keep this list for any service work which may be necessary.

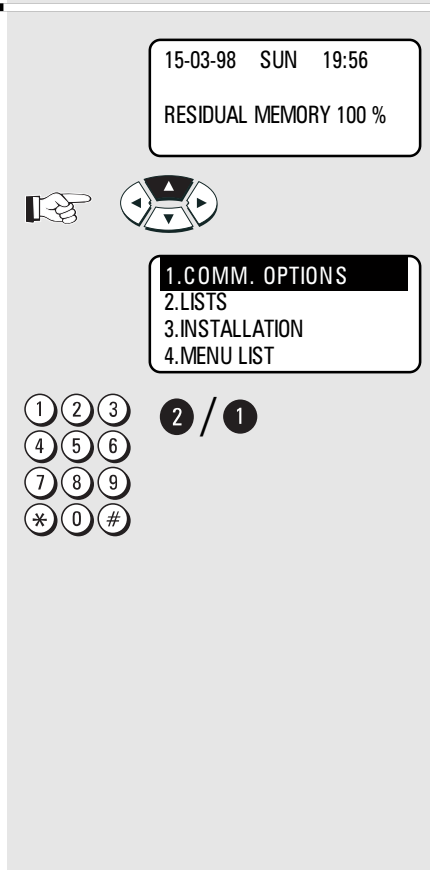

Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item

The function list is printed out

Report prints

FUNCTION LIST

TIME : 03.03.98 14:23
 TEL NUMBER : +44-1234567890
 NAME : TOSHIBA MARKETING TF631

1	AUTO RECEIVE MODE	: AUTO	MEMORY FUNCTION	
2	RING DELAY	: 1	27 REVERSE ORDER PRINT	: OFF
3	DIAL TYPE	: DP	28 RX MULTI COPY	: 1
4	EXCHANGE TYPE	: PSTN	29 RECOVERY TX	: OFF
5	RINGER VOLUME	: 4	30 SECURE RX	: OFF
6	SUPER PWER SAVER	: MANUAL	31 MEMORY OPTION	: 4MB
7	PRINTER POWER SAVER	: ON		
8	START TIME	: 00:00	JOURNAL	
	END TIME	: 00:00	32 MANUAL	: TX&RX
9	ACCOUNT CODE	: AUS	33 AUTO	: ON
10	COVER SHEET	: AUS	34 ERROR CODE	: ON

SCANNER & PRINTER		COMMUNICATION REPORT		
11	DOCUMENT LENGHT	: 1 m	35 DOCUMENT FEEDER TX	: ALWAYS
12	RX REDUCTION	: ON	36 MEMORY TX	: ALWAYS
13	DISCARD OFF	: ON		(IMAGE)
14	COPY REDUCTION	: OFF	37 MULTI ADDRESS TX	: ALWAYS
15	PRINTER RESOLUTION	: FINE		(IMAGE)
			38 MULTI ADDRESS POLL	: ALWAYS
			39 RELAY STATION	: ALWAYS
				(IMAGE)
			40 RELAY-END-STATION	: ALWAYS
				(IMAGE)

HOME POSITION		RECEPTION LIST		
16	RESOLUTION	: STD	41 RELAY STATION	: OFF
17	CONTRAST	: NORMAL	42 LOCAL MAILBOX	: OFF
18	MEMORY TX	: ON	43 REMOTE MAILBOX	: OFF
19	SECURITY TX	: OFF		
			44 REMOTE ACCESS	: ALWAYS OFF

COMMUNICATION		TOTAL PAGE		
20	PRIVILEGED RX	: OFF	45 SCAN	: 151
21	ECM	: ON	46 PRINT	: 200
22	MEMORX RX	: ON		
23	TTI	: INSIDE		
24	RTI	: OFF		
25	REDIAL MODE INTERVAL	: 3MIN		
26	REDIAL MODE COUNTER	: 3		

No.	Function	Page
1	Set reception mode	18
2	Number of rings before fax machine connects to line	18
3	Set dialling method	14
4	Type of telephone connection (for PABXs: type of obtaining outside line / when outside line obtained via a digit: digit for obtaining outside line)	15
5	Call ringing volume	96
6	Setting Super Power Saver	97
7	Setting printer Power Saver	97
8	Time interval for printer Power Saver	97
9	Status of cost centre mode	98
10	Status of cover sheet function	50, 102
11	Max. document length	105
12	Status of receive reduction	19
13	Discard off	19
14	Status of copy reduction	30
15	Setting of max. printer resolution	108
16	Basic setting of scanning resolution	106
17	Basic setting of scanning contrast	106
18	Status of transmission memory	105
19	Status of transmission security	107
20	Status of reception security	28
21	Basic status of error correction	107
22	Status of receive memory	20

No.	Function	Page
23	Position of transmission header	93
24	Status of reception trailer	94
25	Current time interval of call redial	95
26	Number of call redial attempts per fax partner	95
27	Status of reverse order print	25
28	Number of inbound copies	29
29	Status of subsequent transmission	53
30	Status of secure RX	21
31	Size of memory expansion	20
32	Journal output criteria for manual request	86
33	Status of automatic journal output	86
34	Status of error code output in journal	112
35	Status of transmission report for "direct transmission"	82
36	Status of transmission report for "memory transmission"	82
37	Status of group transmission report	82
38	Status of transmission report for "multiple polling"	82
39	Status of relay transmission report	82
40	Status of transmission report to the originator	82
41	Status of reception report for relay reception	82
42	Status of mailbox reception report	82
43	Transmission report for transmission in mailbox	82
44	Reception status for COMLINE	118
45	Number of scanned documents	87
46	Number of total printouts	87


Report prints

The dial number lists

The dial number lists are made up of the following lists:

- Alphabet dial numbers
- Group numbers
- One-touch dial numbers
- Relay numbers

Select a specific list or all lists in order to obtain an overview of the stored numbers.

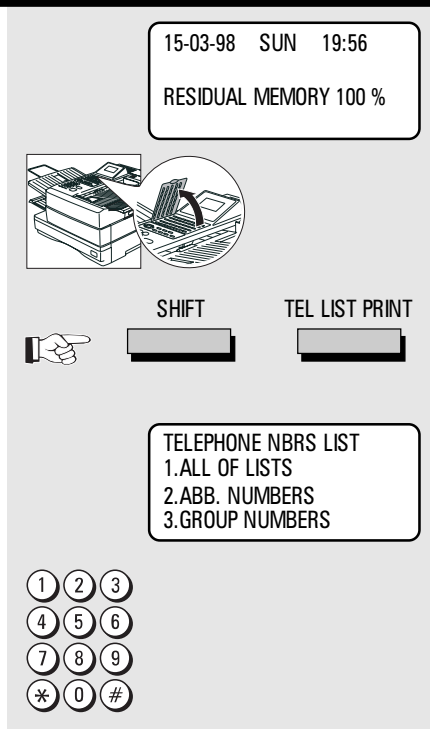

Standby mode

Open the one-touch dial cover

Press the Shift key and then the corresponding function key

Selection menu for various numbers

1. All lists
2. Alphabet dial numbers
3. Group numbers
4. One-touch dial numbers

Select a menu item

The required list(s) are printed out

ONE TOUCH NUMBER INFORMATION

TIME : 03.03.98 14:23
 TEL NUMBER : +44-1234567890
 NAME : TOSHIBA MARKETING TF631

OT NBR.	NAME/FUNCTION	ABB./GROUP/TEL NUMBER	TIME	MON.	BPS	REPORT	LINE	STAMP
01	GROUP.NBR.	0001						
29	ABB. NBR	002						

GROUP NUMBER INFORMATION

TIME : 03.03.98 14:23
 TEL NUMBER : +44-1234567890
 NAME : TOSHIBA MARKETING TF631

GROUP NUMBER NAME	OT/ABB. NUMBER
001 ALL	ABB. 001 002 003 004

ABBREVIATED TEL NUMBER LIST

TIME : 03.03.98 14:23
 TEL NUMBER : +44-1234567890
 NAME : TOSHIBA MARKETING TF631

ABB.NBR.	NAME	TEL NUMBER	TIME	MON.	BPS	REPORT	LINE	STAMP
001	FIRST	11						
002	601	12						

Report prints

Department list

This list is useful for controlling costs per department. If a mastercode is stored and entered, a five-digit department code will appear additionally.

15-03-98 SUN 19:56
 RESIDUAL MEMORY 100 %

1.COMM. OPTIONS
 2.LISTS
 3.INSTALLATION
 4.MENU LIST

1	2	3
4	5	6
7	8	9
*	0	#

2 / 2

Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item

The function list is printed out
 An error message is displayed if no departments are defined.



DEPARTMENT CODE LIST

TIME : 03.03.98 14:23
 TEL NUMBER : +44-1234567890
 NAME : TOSHIBA MARKETING TF861

DEPT NBR	NAME	DEPT CODE	TX PGS	RX PGS	COPY PGS
D01	MASTER	12345	0	0	0
D02					

Mains failure report

This list is printed out if memory is lost due to a lengthy power failure. Memory may be lost approx. one hour after a power failure depending on the charge status of the internal back-up battery and the size of image memory.

POWER FAILURE LIST

TIME : 03.03.98 14:23
 TEL NUMBER : +44-1234567890
 NAME : TOSHIBA MARKETING TF861

TX/RX	<u>FILE NBR</u>	<u>FUNCTION</u>			
	007	SINGLE TX			
POLLING/FAX M-BOX/MAILBOX	<u>FILE NBR</u>	<u>FUNCTION</u>	MAIL	FROM-	<u>DATE/TIME</u>
MEMORY RECEPTION	<u>FILE NBR</u>	<u>FUNCTION</u>	MAIL	FROM-	<u>DATE/TIME</u>
RECOVERY TX	<u>FILE NBR</u>	<u>FUNCTION</u>			

Advanced settings

Delayed fax job


You can define a specific start time for your fax jobs in order to compensate for any differences in time zones or in order to take advantage of low-rate charges. Again, it is particularly advantageous that your document or documents are not read into memory, as the document feed is not blocked.

The delay applicable for sending the fax job is not only limited to 24 hours: You can program the fax job up to 30 days in advance.



The setting of the start time relates to the following fax jobs:

- Single transmission
- Broadcast transmission
- Single polling
- Multiple polling

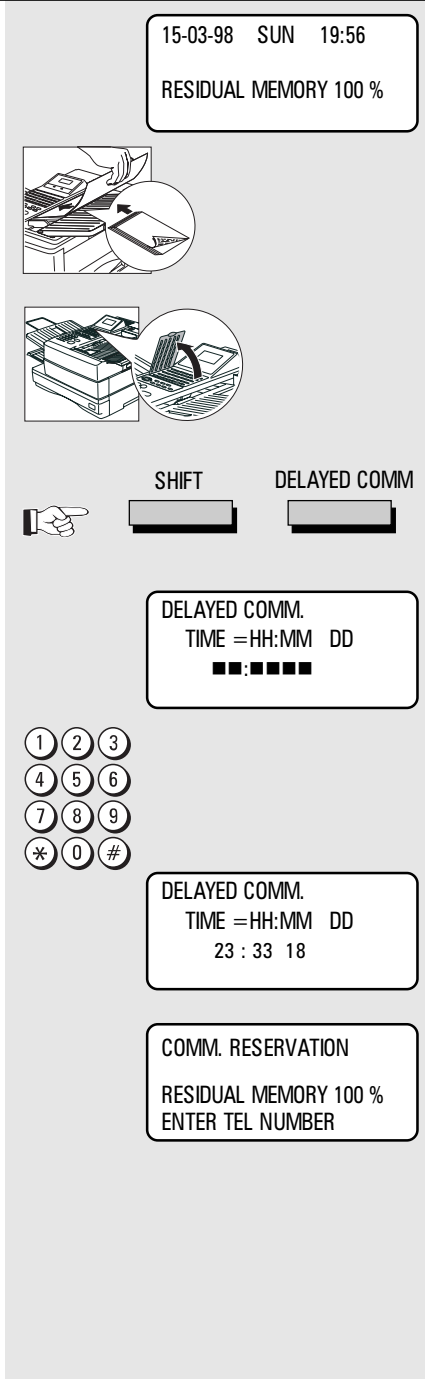

Standby mode

Load original

Remember:
Printed side face down

Document ready

Open the one-touch dial cover

Press the Shift key and then the corresponding function key

Make your selection
for start time (HH:MM) and day (DD)

Enter the start time
Example: 22:33 hours on the 18th



If the delayed fax job is to be carried out on the same day, do not enter any information under "DD".

The following fax job is linked to the start time which has just been set.


Any fax job...

- Single transmission
- Broadcast transmission
- Single polling
- Multiple polling

Advanced settings

Set transmission header position

The transmission header contains the code, the name, time of transmission and the current page number. Normally it appears in the top 5 mm of the incoming copy. If this area contains important information this information is overwritten by the transmission header. In order to prevent this from happening, you are able to displace the transmission header. Accordingly, the transmission header is first printed before the copy is printed. The effect is that the length of the incoming copy is extended by approx. 5 mm.

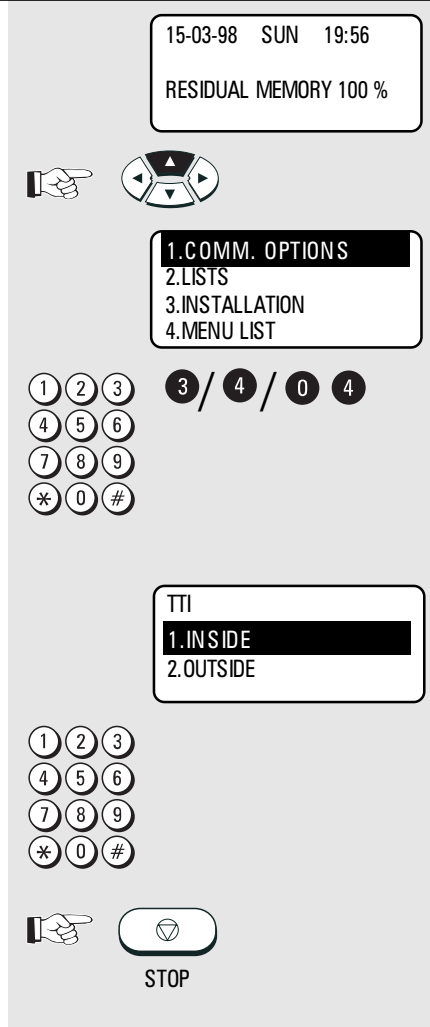

Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item

Make your selection for transmission header position

Select a menu item

Press STOP, return to standby mode


Advanced settings

Reception trailer (RTI)

You can activate the reception trailer facility to ensure that reception of a document is precisely documented. The RTI is printed at the bottom of the incoming copy, and contains the current reception data such as time and date of reception as well as the IDs of the transmitter and receiver.



Please note that, when the reception trailer is activated, the inbound fax is always reduced before being printed out.

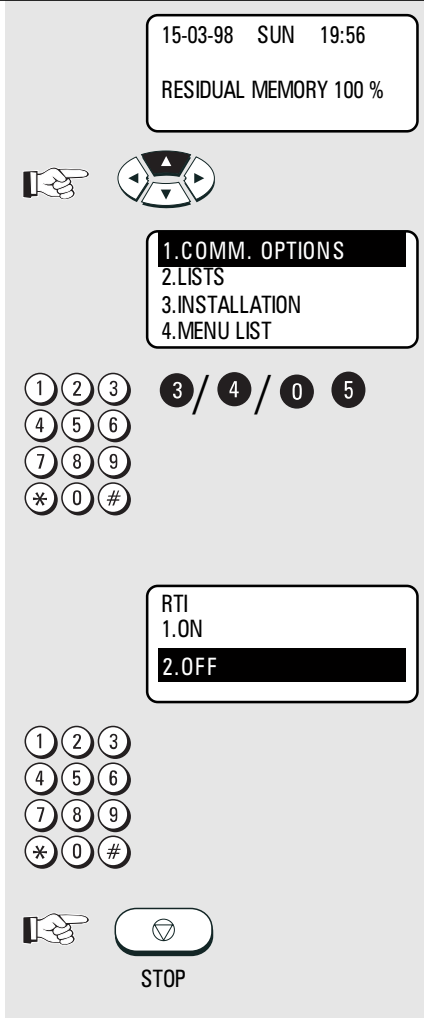

Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item

Make your selection for reception trailer

Select a menu item


Press **STOP**, return to standby mode

Permanent monitoring

When a fax transmission is monitored, the call establishment attempt is played back via the built-in speaker. This means that you have an additional acoustic check for monitoring the call establishment procedure. This facility is useful whenever a connection is not established. This is frequently due to a wrong number or a fax machine that is not ready to receive.



In this setting, **all** transmission procedures are played back via the speaker.

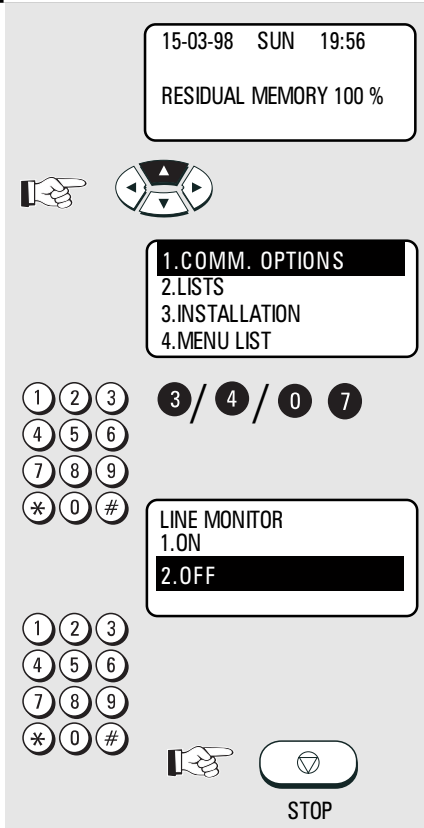

Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item

Make your selection for permanent monitoring
1: ON
2: OFF

Select a menu item

Press **STOP**, return to standby mode

Advanced settings

Call redial

If the machine is not able to transmit a fax job, the job is retained in memory and the machine attempts to send the fax job again at a later date.

You can set two criteria for this call redial facility:

- Period between the call redial attempts
- Number of redial attempts

Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item

Make your selection

Select a menu item

1: see part A
2: see part B

Period between call redial attempts

Make your selection
call redial interval
(default setting: 1 minute)

Enter the required figure

Confirm with START

Press STOP, return to standby mode

Number of call redial attempts

Make your selection
Number of call redial attempts
(default setting: 3 times)


Enter the required figure
confirm with START

Press STOP, return to standby mode

Advanced settings

Set ringer volume

An incoming call sets off the ringer via the speaker. You can adjust the volume of this signal.

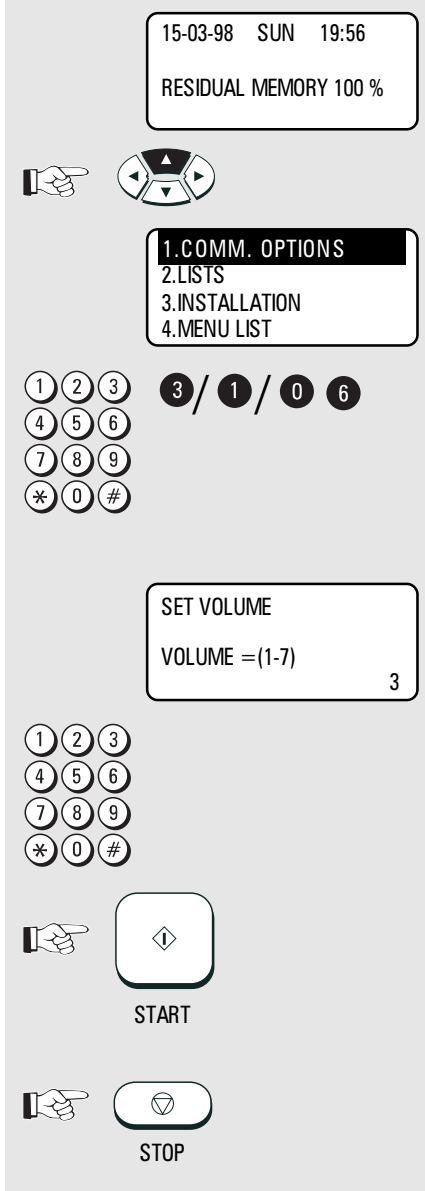

Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item

Make your selection for ringer volume

Enter the required figure

confirm with START

Press STOP, return to standby mode

Advanced settings

Power saver (stand by)

The printer unit of your fax machine requires a heat source of approx. 170° C in order to be able to print out documents immediately. This heat source is heated at specific intervals in order to maintain the temperature at the required level. This consumes electricity, and the fan also has to run constantly. If you wish to save electric current or prevent the fan noise, you are able to deactivate the permanent heating facility. The heater in such cases would only be activated if a fax document is received or printed out. There is a delay of around 1 minute before documents can be printed out.

Two alternatives are available:

Super Power Saver:

In this alternative, all components which are not required are switched off (almost the entire electronics) and the display is therefore also switched off. These measures reduce the entire power consumption of the fax machine to below 2 VA (Watt). The fax machine resumes its functions as soon as a call is made or as soon as a document is inserted. The Super Power Saver mode is set either with a delay (which can be adjusted between 1 and 60 minutes) after the last action, or it can be activated by the SUPER POWER SAVER key.

- The Super Power Saver mode cannot be activated when the memory is full (memory display < 100%) and when a fault lamp is lit.

Printer Power Saver:

The printer Power Save mode only switches off the heating facility for the fixing roller and the fan. All other functions are retained. The power consumption in this mode is approx. 15 VA (Watt).

You can use a menu for specifying the period during which the printer Power Saver mode is activated.

15-03-98 SUN 19:56

RESIDUAL MEMORY 100 %

1.COMM. OPTIONS
2.LISTS
3.INSTALLATION
4.MENU LIST

1

2

3

4

5

6

7

8

9

*

0

#

3

/

1

/

0

7

POWER SAVER
01. SUPER P. S.
02. PRINTER P. S.

Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item

Make your selection for Power Saver mode
01: see part A
02: see part B

A Super P. S.

POWER SAVER
1.AUTOMATIC
2.MANUAL
3.OFF

1

2

3

4

5

6

7

8

9

*

0

#

1

STARTTIME

TIME (01-60)MIN

03

START

STOP

Make your selection for mode

- Active after preset delay
- Active after the SUPER POWER SAVER key is pressed
- Cannot be activated

Select a menu item

Example: Automatic

Make your selection for the delay time

Enter the delay time

Confirm with START

Press STOP, return to standby mode

B Printer P. S.

SET POWER SAVER
1.ON
2.OFF

1

2

3

4

5

6

7

8

9

*

0

#

1

SET POWER SAVER

TIME PERIOD =

00:00 - 00:00

START

STOP

Make your selection for power saver

- Power saver on
- Power saver off

Select a menu item

Make your selection period for power saver time
Enter 00:00-00:00 to permanently activate the power saver facility (24 hours)


Enter the period

Advanced settings

Cost centre management

Transmission jobs can be assigned to any 4-digit number. The number can be used to find the specified job within the transmission report (see page 86). In this way, special transmission jobs can be linked to specific cost centres. If this function has been activated, you are able to enter the cost centre number before every transmission.

Press the START key to skip entry of the cost centre number.

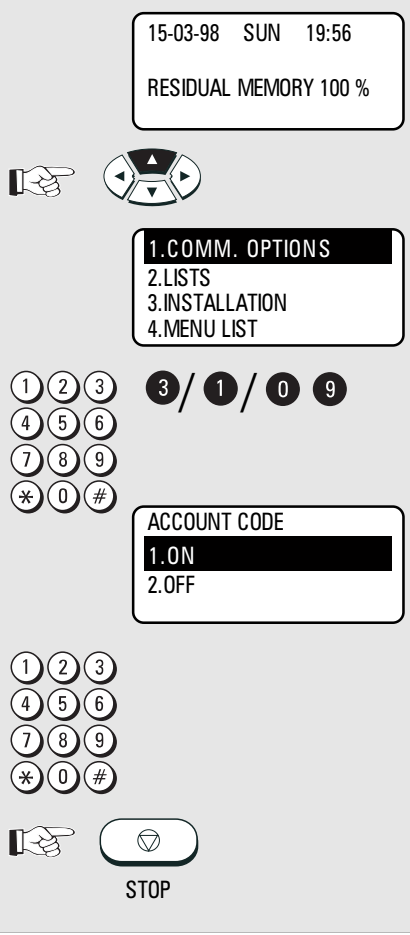

Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item



Make your selection for ACCOUNT CODE
1: Activate cost centre management
2: Deactivate mode

Select a menu item

Press STOP, return to standby mode

Divider sheet

A divider sheet is automatically added after every transmission in order to enable the individual fax documents received to be distinguished more easily.

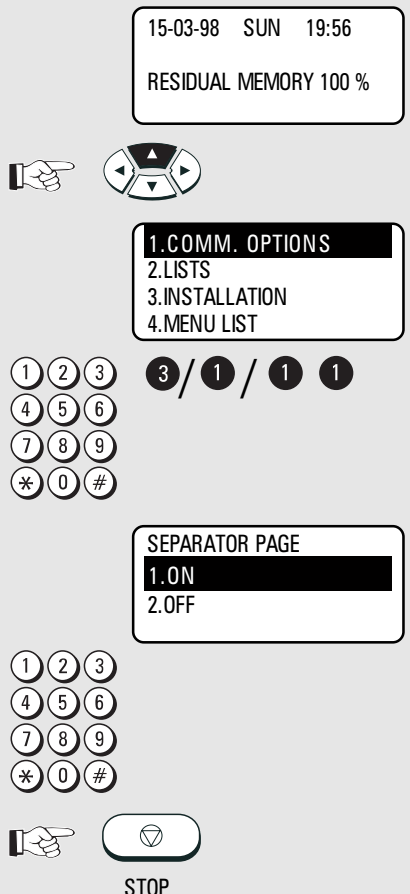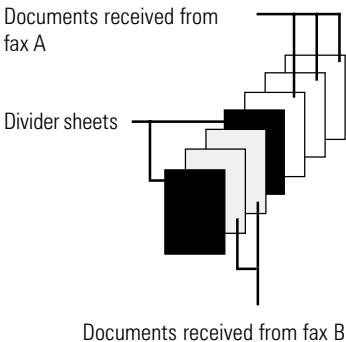

Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item

Make your selection for divider sheet

Select a menu item

Press STOP, return to standby mode

Advanced settings

Department code

In order to prevent your fax machine from being used by unauthorised persons, you can lock it using a 5-digit code. 50 such codes are possible, and a separate journal is assigned to each of these codes. It is conceivable that this code can be used for setting up a cost centre management system. The fax machine can now only be enabled by entering the relevant department code. The five-digit code is entered and confirmed with the START key.



If a fax is transmitted after being released by the department code, the name of the corresponding department is displayed in the transmission header of the fax partner.



The code for department number 01 is the master code. This code must be entered for creating further department codes or cancelling existing department codes.



If the fax machine has been enabled by a department code and if no further action takes place, the code must be entered again after a further approx. 1.5 minutes.

15-03-98 SUN 19:56
RESIDUAL MEMORY 100 %

START

1.COMM. OPTIONS
2.LISTS
3.INSTALLATION
4.MENU LIST

3 / 1 / 0 8

DEPT CODE ENTRY
1.YES
2.NO

1

MASTER CODE ENTRY
DEPT NBR = 01
DEPT NAME=(MAX20)

MASTER CODE ENTRY
DEPT NBR = 01
DEPT NAME=(MAX20)
Ghostbusters

START

MASTER CODE ENTRY
DEPT NBR = 01
MASTER CODE= ■■■■

START

DEPT CODE ENTRY
DEPT NUMBER=(1-40) ■

STOP

Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item

Make your selection

for the department code

1: Enter department code

2: Clear and cancel department codes

Select a menu item

Make your selection

for the department name (this name appears in the transmission header of the fax partner)

(see page 12 for diagram)

Enter the department name

confirm with START

Make your selection

for department code

(use master code when first entered)

confirm with START

Make your selection

for further departments (2 - 50)

-or-

Press STOP, return to standby mode

Advanced settings

Modify or delete a department



Can only be accessed via master code.

15-03-98 SUN 19:56
RESIDUAL MEMORY 100 %
DEPT CODE ENTRY

1 2 3
4 5 6
7 8 9
* 0 #

START

1. COMM. OPTIONS
2. LISTS
3. INSTALLATION
4. MENU LIST

3 / 1 / 0 8

DEPT CODE ENTRY
1. YES
2. NO

1

DEPT CODE ENTRY
DEPT NUMBER = (1-40)

START

DEPT CODE ENTRY
ALREADY ASSIGNED
DEPT NBR = xx
Fanny Bones

after 2 seconds

DEPT CODE ENTRY
1. CANCEL
2. MODIFY
3. RETAIN

1 2 3
4 5 6
7 8 9
* 0 #

STOP

Standby mode

Enter (!) master code

confirm with START

Start the menu

The first 4 menu items are displayed.

Select a menu item

Make your selection for the department code (this menu is available only if the master code is entered)

Select a menu item

Make your selection for required department

Enter the department number

confirm with START

Make your selection



Department 1 cannot be cancelled as it is permanently linked to the master code.

Select a menu item


Proceed as indicated in the menu

Press STOP, return to standby mode

Advanced settings

Disable department code

If the department code is disabled, the previously entered departments **cannot** be accessed by entering the master code again.

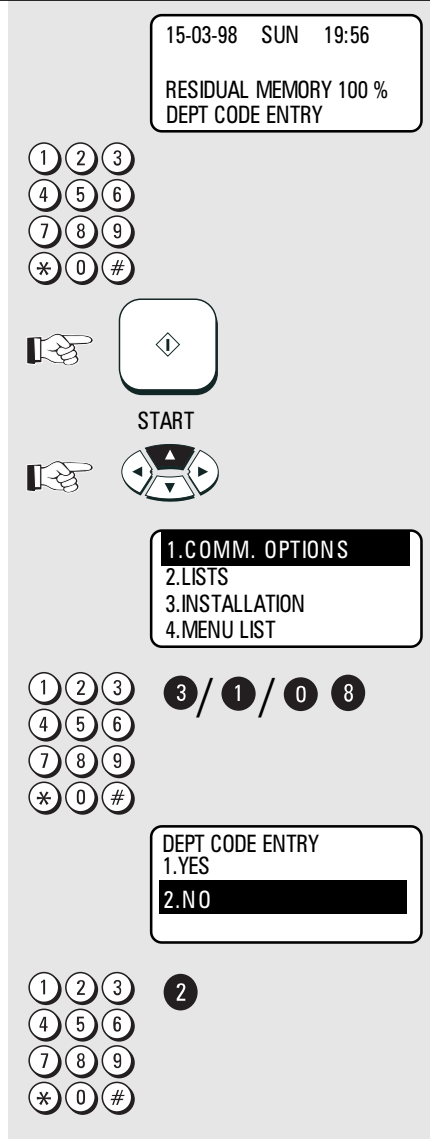

Standby mode

Enter (!) master code

confirm with START

Start the menu

The first 4 menu items are displayed.

Select a menu item

Make your selection



for the department code
(this menu can only be
accessed by entering the mas-
ter code)

Select a menu item

The fax machine is permanently enabled

Advanced settings

Cover sheet


The cover sheet is a form which is placed at the head of your fax transmission. It is a tool to enable the operator to classify an incoming fax more easily.

You are able to choose between a "normal" cover sheet which sets out the information in text form and a "personal" cover sheet.

With the personal cover sheet, you can add a diagram to the "normal" information. This diagram is scanned into the machine in the same way as a document and is retained in memory as the cover sheet diagram.

The following diagram illustrates the relevant area of the document which is subsequently displaced on the cover sheet. All white areas are omitted.

Cover sheet:

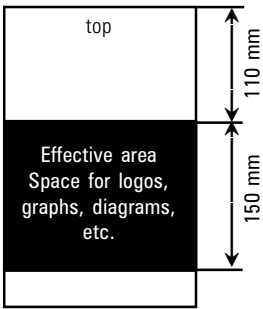

Please refer to [page 50](#) for details of how to send the cover sheet.

Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item

Make your selection for cover sheet function

1. Cover sheet is activated
2. Cover sheet is cancelled

Select a menu item

Make your selection for cover sheet character

1. Cover sheet with diagram and text
2. Cover sheet only with text (Example: cover sheet with diagram)

Select a menu item

Insert required cover sheet document

confirm with **START**

The document is saved as the cover sheet diagram

Advanced settings

Retain jobs

If a job cannot be transmitted because for instance the partner fax is busy, your fax machine attempts to redial the number at regular intervals of approx. 2 minutes*. After the XXth* redialing, the job will be automatically deleted from the stack and a transmission report (see page 83) will be printed out. To prevent the deletion of such a job use this procedure. Each job will then be available for a certain time (1-24hours). If this job can not be successfully sent during this period it will be deleted automatically from the memory. Every time you retain a job in memory your fax prints out a transmission report (see page 83) to inform you how long this job will be retained in memory. To send retained jobs see page 53.

*) Depending on setting (see page 95)



If too many documents are retained in memory, the fax memory will become full since every retained job requires memory.



If you find that the memory is frequently too small, ask your dealer for a memory expansion!

15-03-98 SUN 19:56
RESIDUAL MEMORY 100 %

1.COMM. OPTIONS
2.LISTS
3.INSTALLATION
4.MENU LIST

3 / 5 / 0 3

RECOVERY TRANSMIT
1.ON
2.OFF

RECOVERY TRANSMIT
STORED TIME =(01-24) 06

START

STOP

Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item

Make your selection for retain job

Select a menu item

Make your selection for retaining time (preset retaining time is displayed)

Input retaining time -and/or-

confirm with START

Press STOP, return to standby mode

Advanced settings

Query job status

The LINE status lamp enables you to recognise whether your fax machine is currently active. If you require more precise information concerning this activity, you can query the current status of the machine. This status query also enables you to cancel the current job.

The status display is made up as follows:

Line 1	TRANSMIT P 001	Indication of activity (transmission, reception, polling, etc.) Indication of current number of pages (P xxx)
Line 2	FILE NBR= 123	Indication of job number
Line 3	EC 14400 BPS	Indication of transmission type (ECM, G3, High Speed) Indication of transmission speed (14400 BPS etc)
Line 4	+44 2131 123456	Indication of the ID of your partner fax

15-03-98 SUN 19:56

RESIDUAL MEMORY 77 %



LINE

Standby mode

The LINE lamp lights up and indicates activity on the line



JOB STATUS



Press the JOB STATUS key

The current status is displayed

TRANSMIT P001
FILE NBR = 123
EC 14400 BPS
+44-2131-123456

Do you wish to cancel the current status?

TRANSMIT P001
FILE NBR = 123
EC 14400 BPS
+44-2131-123456



JOB CANCEL



Cancel current status

The current status is displayed

Press the JOB CANCEL key

Confirmation prompt

CANCEL ?
FILE NBR = 123
1. YES
2. NO

confirm with START



START

The current job is interrupted and the job is cancelled

Advanced settings

Basic setting, document length

In the basic setting of your fax machine, the document length is limited to one meter. If the document is longer than one meter, the machine displays the error message "document jam" after one meter is exceeded, and the transmitted is interrupted. You are able to disable this restriction to prevent this from happening.

The diagram illustrates the process of changing the document length setting on a fax machine. It shows the following steps:

- The machine is in standby mode, displaying the date and time (15-03-98 SUN 19:56) and the residual memory status (RESIDUAL MEMORY 100 %).
- The user presses the **START** button (indicated by a hand icon) to enter the menu.
- The menu displays the first four options: 1.COMM. OPTIONS, 2.LISTS, 3.INSTALLATION, and 4.MENU LIST. The user presses the **3** key to select "INSTALLATION".
- The screen displays the basic setting for document length: 1.1m and 2.UNLIMITED. The user presses the **2** key to select "UNLIMITED".
- The user presses the **STOP** button (indicated by a hand icon) to return to standby mode.

Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item

Display the basic setting

Select a menu item

Press **STOP**, return to standby mode

Basic setting, transmission memory

The transmission memory is activated in the basic setting of your fax machine. This enables transmission jobs to be stacked as jobs in this memory (see page 33). If you disable the transmission memory, the document is retained in the document feed until the transmission procedure is completed.

The diagram illustrates the process of changing the transmission memory setting on a fax machine. It shows the following steps:

- The machine is in standby mode, displaying the date and time (15-03-98 SUN 19:56) and the residual memory status (RESIDUAL MEMORY 100 %).
- The user presses the **START** button (indicated by a hand icon) to enter the menu.
- The menu displays the first four options: 1.COMM. OPTIONS, 2.LISTS, 3.INSTALLATION, and 4.MENU LIST. The user presses the **3** key to select "INSTALLATION".
- The screen displays the basic setting for transmission memory: 1.ON and 2.OFF. The user presses the **2** key to select "OFF".
- The user presses the **STOP** button (indicated by a hand icon) to return to standby mode.

Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item

Display the basic setting


Select a menu item

Press **STOP**, return to standby mode

Advanced settings

Basic setting, resolution and contrast

The basic setting of contrast and resolution can be changed. Please read [pages 44 et seq.](#) for information concerning contrast and resolution.

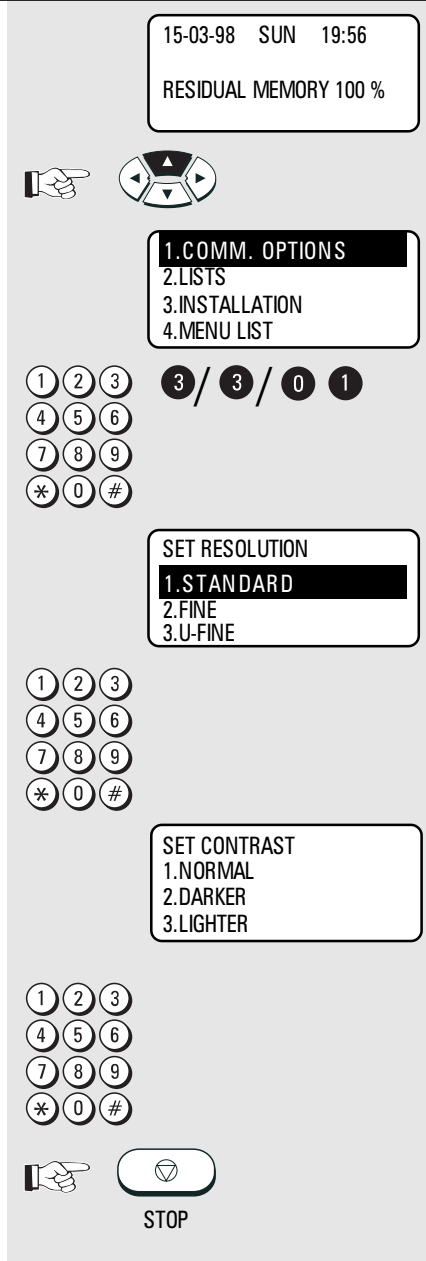

Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item

Display the basic setting for resolution

Select a menu item

Display the basic setting for contrast

- 1: for normal documents
- 2: for mainly light documents
- 3: for mainly dark documents

Select a menu item

Press STOP, return to standby mode

Advanced settings

Basic setting, ECM (error correction mode)

Your fax machine is equipped with an error correction facility (ECM). If your fax partner also has an error correction facility, this permits error-free fax transmission. One effect linked with ECM is that the transmission time increases if there are any problems on the line. This may involve very high costs with overseas calls. For this reason, you can completely deactivate the ECM facility.

The diagram shows the control panel of a fax machine. At the top, a display shows the date and time: 15-03-98 SUN 19:56, and the status: RESIDUAL MEMORY 100%. Below this is a navigation pad with a hand icon pointing to it. A menu is displayed on the screen with the following items: 1.COMM. OPTIONS (highlighted), 2.LISTS, 3.INSTALLATION, and 4.MENU LIST. Below the screen is a numeric keypad. The sequence of button presses is shown as 3 / 4 / 0 / 2. Below the keypad, the screen displays 'SET ECM' with two options: 1.ON and 2.OFF (highlighted). Below this is another numeric keypad. At the bottom, a hand icon points to a 'STOP' button.

Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item

Display the basic setting

Select a menu item

Press STOP, return to standby mode

Basic setting, protected transmission

The transmission of documents is restricted. You can now only send documents to fax machines whose ID is identical to the dialled fax number. You can thus only fax your documents to specific fax partners.



Any changes to this basic setting have far-reaching consequences!

The diagram shows the control panel of a fax machine. At the top, a display shows the date and time: 15-03-98 SUN 19:56, and the status: RESIDUAL MEMORY 100%. Below this is a navigation pad with a hand icon pointing to it. A menu is displayed on the screen with the following items: 1.COMM. OPTIONS (highlighted), 2.LISTS, 3.INSTALLATION, and 4.MENU LIST. Below the screen is a numeric keypad. The sequence of button presses is shown as 3 / 3 / 0 / 3. Below the keypad, the screen displays 'SET SECURITY TX' with two options: 1.ON and 2.OFF (highlighted). Below this is another numeric keypad. At the bottom, a hand icon points to a 'STOP' button.

Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item

Display the basic setting

Select a menu item

Press STOP, return to standby mode

Advanced settings

Basic setting, superfine reception (only with memory expansion)


If a memory expansion is not used, the maximum possible reception resolution is "Fine".

If a memory expansion has been installed (see page 10), you can decide whether your fax machine can also receive documents with superfine or ultrafine resolution. The higher resolutions place a certain amount of strain on the reception memory. Under unfavourable conditions, reception of documents may be incomplete if these resolutions are used and if the memory capacity is exhausted.

If you also use your fax machine as a printer, the settings correspond to the maximum possible printer resolution.



The maximum printer resolution also determines the maximum copy resolution which can be chosen.

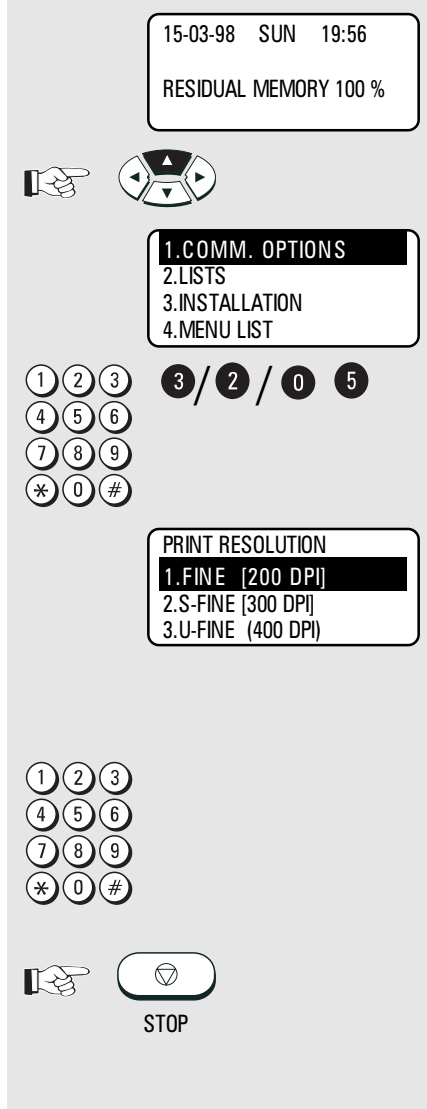

Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item

Display the basic setting

- 1: Reception with max. fine (= 200 dpi resolution)
- 2: Reception with max. superfine (= 300 dpi resolution)
- 3: Reception with max. ultrafine (= 400 dpi resolution)

Select a menu item

Press STOP, return to standby mode

Advanced settings

Additional features (SUB, SEP, PWD)

Because of the high level of innovation pressure in the telecommunications industry, fax technology is also being continuously improved. The ITU-T (formerly CCITT) operates as an international body and is responsible for ensuring standardisation of new telecommunication options. This ensures that non-proprietary compatibility is guaranteed.

All additional features described at this point are related to **fax networks**, and are added as additional information (digits) to the telefax numbers. Please note that the partner fax machine must also support these features. These functions would otherwise not be carried out.

SUB:

(Sub-Addressing) This mode is used for faxing documents in PC networks. The fax number (the number of the fax server in the network) and also the sub-address of the workstation in the network must be entered to enable the fax to be forwarded in the network.

The sub-address is entered in the form of a number with max. 20 digits.

SEP:


(Separation Polling) This mode is used for polling from a PC network. The fax number (the number of the fax server in the network) as well as the polling address of the workstation in the network from which a fax document is to be polled must be entered.

The polling address is entered in the form of a number with max. 20 digits.

PWD:

(Password) The password is used as additional security for actions in the PC network. This enables transmission and polling procedures in PC networks to be protected. Facilities such as "electronic signature" as well as PIN number mode are also possible.

The password is entered in the form of a number with max. 20 digits.

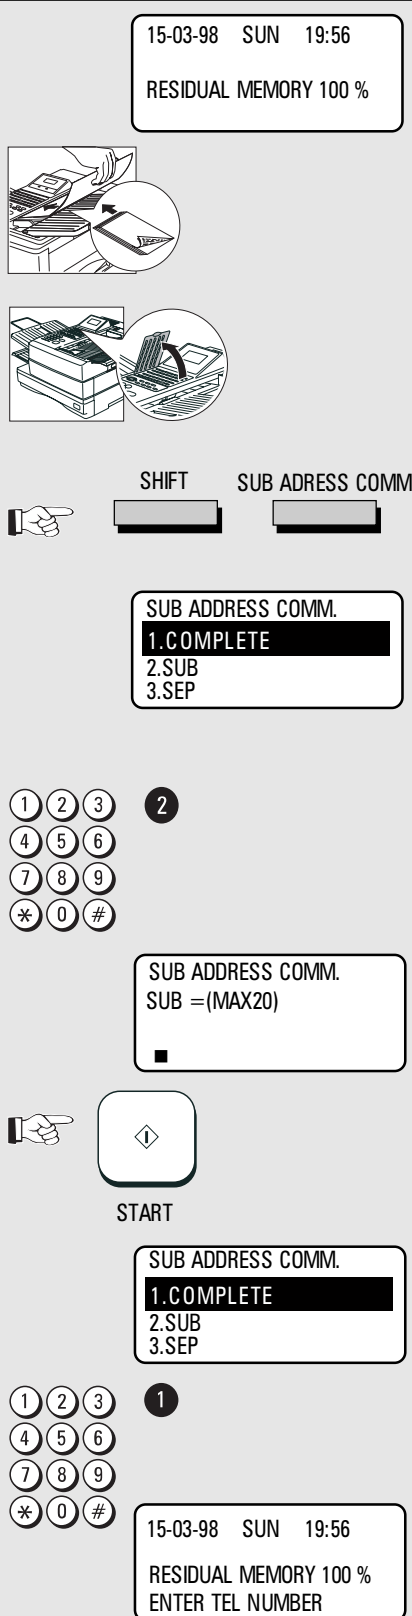

Standby mode

Load original

Remember:
Printed side face down

Document ready

Open the one-touch dial cover

Press the Shift key and then the corresponding function key

Make your selection for additional parameters
1: complete
2: SUB
3: SEP
4: PWD

Selection of required menu item
Example: Sub-address (SUB)

Entry prompt for the sub-address

confirm with START

when all data have been entered:
end with "1"

Entry prompt for the fax number

Additional paper cassettes (optional)

If the 250 sheet paper cassette is not adequate, you are able to install up to two additional paper cassettes (each holding 250 sheets). Please contact your TOSHIBA dealer for details.

Possible problems

Error messages in the display

Your fax machine indicates operating errors or does not carry out a function in accordance with your requirements. Before you contact customer service, consider a moment and identify the error message in the following list. You will probably then be able to remedy the fault yourself.

General procedure to be followed for error messages in the display

1. Analyse error message.
2. Rectify cause of error.
3. Press STOP key to cancel error message in display.
4. If necessary, switch off fax machine for 10 seconds and press STOP key again.



All error messages are retained in the display until they are acknowledged with the STOP key. If this error message does not disappear, the cause of the error has still not been rectified.

Display	Cause	How to correct
BROKEN REGISTRATION PRESS [STOP] CONFIRM DIAL LIST	Alphabet memory and internal settings have been lost due to a lengthy power failure	Press the STOP key. If the error message does not disappear, activate the installation procedure (see page 11) and confirm all settings.
POWER FAILURE	Contents of the image memory have been lost following a power failure.	The mains error report (see page 91) is printed out in order to provide you with a list of lost criteria.
TX COVER OPEN	The cover on which the keypad is located has not snapped into position.	Allow this cover to snap carefully into position.
RX COVER OPEN	The upper part of your fax machine housing has not snapped into position.	Close the housing cover carefully.
MEMORY FULL	The transmission / reception memory is full.	Send your document(s) with a lower resolution, or send them using the direct mode (see page 36). If this error persists, please contact your dealer for a memory expansion.
DOCUMENT JAM	Documents have jammed in the document feeder.	Follow the instructions on page 116 to rectify the document jam.
UPPER PAPER EMPTY	(Only in conjunction with additional paper cassettes) No more paper in the upper cassette.	Load new recording paper (see page 9).
MIDDLE PAPER EMPTY	(Only in conjunction with additional paper cassettes) No more paper in the middle cassette.	Load new recording paper (see page 9).
LOWER PAPER EMPTY	(Only in conjunction with additional paper cassettes) No more paper in the bottom cassette.	Load new recording paper (see page 9).
PAPER EMPTY	The recording paper is empty	Load new recording paper (see page 9).
TONER LOW	The toner is almost out. Only enough toner for approx. 100 more copies.	Install a new cartridge (see page 6).
TONER EMPTY	There is not enough toner for printing.	Install a new cartridge (see page 6).
DRUM LIFE WARNING	The printer unit is almost spent. About 100 sheets can be printed after this is displayed.	Please contact your TOSHIBA dealer for ordering a new printer unit.

Possible problems

Display	Cause	How to correct
REPLACE DRUM	The printer unit is spent.	Replace the process unit (see page 5).
CONFIRM PROCESS-UNIT	The printer unit is missing or has not been installed correctly.	Install the process unit correctly. Activate the lock facility.
PRINTER DISORDER	Indicates a fault in the printer unit.	Contact your TOSHIBA dealer and notify him of the code in the display message.
LOAD DOCUMENT	No document	The action requires a document.
COMMUNICATION ERROR	A transmission error occurs while a document is being transmitted.	Consult the transmission report (see page 81) and try to establish the cause of the error with the following pages.
SORRY NOT POSSIBLE	Selected function not possible at present.	Read the operating instructions for any restrictions concerning your selected action.
LINE BUSY	Other party was busy.	Test the connection using the listening-in option (see page 42). Have you pressed "*" on the extension for obtaining an outside line (see page 15)?
PAGE# MISMATCH	Page counter and actual documents are different (see page 47).	Ask the other party to identify which page has not been transmitted.
POLLING ERROR	A polling attempt has been made, and resulted in an error.	Polling was not reserved, or the password was incorrect, or polling protection did not meet the specified criteria (see page 58).
NOT ALLOWED NOW	You have tried to start a function which is blocked.	Wait until the current action of the fax machine has been terminated.

Possible problems

Error codes in journal		
Code	Cause	How to correct
	If "TRANSMISSION ERROR" appears in the display of your fax machine, the error code describes the specific error. The same code is shown also in the journal and transmission report.	
10	No recording paper	Put more paper in the paper cassette.
11	Paper jam	Remove the jammed paper (see page 116).
12	Documents have jammed in the document feed.	Remove the document jam as described on page 116.
13	Open the upper covers	Allow these covers to snap carefully into position.
14	Toner empty	Replace the toner. (see page 6)
20	Power failure	A power failure has occurred.
21/E0/E6	Printer fault/Pix-Mem error	Try to remedy the printer fault yourself, otherwise contact the customer service of your TOSHIBA dealer.
22	Memory error	If this error occurs frequently, please notify the customer service of your TOSHIBA dealer.
23	Internal fault	If this error occurs frequently, please notify the customer service of your TOSHIBA dealer.
30	Transmission interrupted by the transmitter/receiver.	Start the transmission process again or request your fax partner to repeat the transmission process.
32	Page error	A specific number of pages has been set, but a different number of pages has been sent (see page 47).
33	Polling error	Polling was not reserved, or the password was incorrect, or polling protection did not meet the specified criteria (see page 58).
42	Memory overflow	Use a lower resolution for your documents or send these documents in the direct mode (see page 36). If this error occurs frequently, please contact your dealer for a memory extension.
50	Line busy	Test the connection using the listening-in option (see page 42). Have you pressed "*" on the extension for obtaining an outside line (see page 15)?

Possible problems

Code	Cause	How to correct
53	Wrong codeword	A document has been retrieved with the wrong codeword (see page 57).
60	Line busy	Send the document again.
80/B0-B5/C0-C4/ D0-D2/F0, F1	Communication error	Bad line. The document has probably not been transmitted. You should transmit your document again to be safe.
81/B1/B9	Compatibility error	A function which is not a TOSHIBA feature or an ITU-T standard feature is used during a transmission procedure.
82	Training error	Bad line. Before the documents are transmitted, the fax machines check the line quality with test signals. If this error occurs, the document is not transmitted.
83/84/85	Image error	No images were transmitted after handshaking between the fax machines. If this error occurs, the document is not transmitted.
86	Line error	Various lines have not been detected during the transmission procedure. Call the other party to establish whether the document is legible.
87	Image cannot be saved	Memory overflow on the other machine. Transmit your document again later.

Possible problems

Transmission problems	Your fax machine reports an operating error or fails to perform the required function. Before you make an unnecessary call on your service	technician, take your time and see if you can help yourself. This checklist will help you recognise and eliminate errors.
Problem	Possible causes and solutions
Your document is not automatically pulled into the feeder.	<p>Your machine displays an error.</p> <p>The display is blank.</p> <p>Document size or thickness of paper are not acceptable.</p> <p>The operator control panel is not firmly locked.</p>	<p>If the display gives an error message, clear the fault and delete the display with STOP.</p> <p>Check there is power on the machine. The machine must be switched on (see page 8).</p> <p>Use acceptable documents only (see page 31).</p> <p>Close the cover. It should be firmly locked in place on both sides.</p>
The text "transmission" is not displayed when you press the START key.	You replaced the receiver before pressing START.	Try again. Replace the receiver only when you have pressed START.
The document is damaged during sending or copying.	<p>Document format or paper thickness not as specified.</p> <p>The document guides are not properly adjusted to the paper size.</p>	<p>Use acceptable documents only (see page 31).</p> <p>Adjust the document guides accordingly.</p>
Your fax machine performed transmission correctly but the message was not received by the receiver.	The other machine is out of paper.	Ask the receiver to put paper in his machine.
The receiver received a blank sheet instead of the document sent.	You loaded your document in the machine with the image face-up.	Send your document again: the image must be face-down on your document feeder.
The receiver reports: The document transmitted is difficult to read.	<p>Your machine's document reader is dirty or damaged.</p> <p>RESOLUTION and CONTRAST are not set correctly.</p> <p>The telephone connection is poor.</p>	<p>Make a copy of your document on your fax machine (see page 29). If your copy is also difficult to read, clean the document reader.</p> <p>Make a copy on your fax machine (see page 29) and adjust the settings to your document. You can also improve document quality: By making the print on the photocopy darker, enlarging or reducing. (see page 44/45). Then send again.</p> <p>Redial. You may get a better connection.</p>
Abbreviated or one-touch dialling do not work.	Abbreviated or one-touch dialling number is not correctly stored.	Check and correct stored numbers (see page 70/75).
No dial tone is heard when handset is off-hook.	<p>The telephone is not correctly connected.</p> <p>The fax machine is not correctly connected.</p>	<p>Check that your telephone is connected correctly to the socket (see page 8).</p> <p>Plug the connecting cable of your fax machine into the socket (see page 8).</p>
Your call does not arrive although you have dialled the correct number.	<p>Your fax machine has been set to the wrong dialling mode.</p> <p>If you are connected to a PABX: You have set the wrong line type.</p> <p>Your fax machine is not connected to the PSTN.</p>	<p>Switch to the correct dialling procedure: DTMF or pulse-dialling (see page 14).</p> <p>Set the line types to EXTENSION (see page 15).</p> <p>Plug the connecting cable of your fax machine into the socket (see page 8).</p>

Possible problems

Receiving problems

Problem	Possible causes and solutions
You press START to receive an document. But you receive nothing.	Your fax machine reports an operating error or fails to perform the required function. Before you make an unnecessary call on your service technician, take your time and see if you can help yourself. This checklist will help you recognise and eliminate errors.	
	Your have an error displayed.	If the display shows an error message, eliminate the fault and delete the display with STOP.
	The fax machine is not correctly connected.	Check the wiring. See page 8.
	The display is blank.	Check there is power to the machine. The machine must be switched on (see page 8).
	There is still a document in the feeder.	Press STOP and remove the document.
	Your fax machine is set in manual receiving mode and you replaced the handset before pressing START.	When receiving the next fax, be sure to replace the handset only after you have pressed START.
Your recording paper is not fed out.	The operator control panel is not closed.	Close the cover. Both sides of the cover must be firmly locked in place.
	The recording paper in your machine is jammed.	Remove the jammed paper (see page 117).
The document received is difficult to read.	Document quality is poor.	Ask the sender to reset the resolution and contrast or improve the quality of the document e.g. by making the print on the photocopy darker, enlarging or reducing. Then have it send again.
	The telephone connection is poor.	Ask the sender to transmit the document again (see page 31).
You receive a completely blank document.	The sender made a mistake when loading the document.	Check whether the sender loaded in the correct manner.
The document received is partially printed.	The operator control panel of your fax machine is not closed properly on both sides.	Close the cover. Both sides of the cover must be firmly locked in place.
You can send fax messages without any problem, although you cannot receive any.	Receiving protection is activated.	Switch off receiving protection (see page 28).

Possible problems


Cleaning document scanner

Never use abrasive materials to clean your fax machine - they could cause damage. If documents transmitted are difficult to read, the document scanner must be cleaned. You can easily tell when: Make a test copy of the document on your fax machine and compare the copy with the original.

Before you open
the operator control panel as shown ...
... print out any data which may be stored.




Then switch off your fax machine.

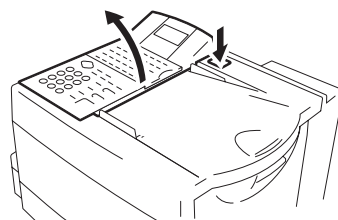

Using a soft cloth,
wipe the movable white roller and the glass
pane underneath.




If these parts are very dirty, you can
also use a slightly moist cloth and
then wipe off with a dry cloth.

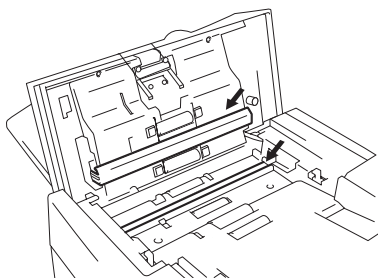

Before closing
the operator control panel, return the white
roller to its former position.

Switch your fax machine on again.

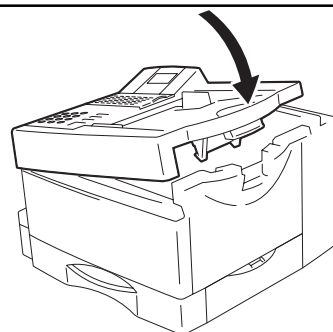


Document jam

How to clear a document jam

Press the release button
to open the control panel cover.



Keep the power ON.

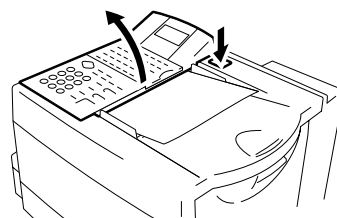


The jammed document

can be carefully removed.




Do not try to send the jammed
document again. Use a carrier sheet
or make a photocopy and transmit
this instead.

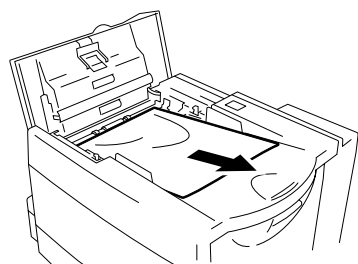

Close the control panel

Take care that the cover locks firmly into place.
Now by pressing STOP delete the error
message.


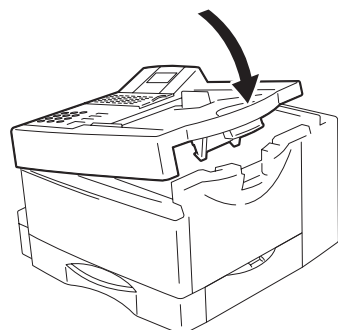


Possible problems

How to clear a recording paper jam

After opening

the upper cover and side cover of the housing, you will see the possible locations where the paper may be jammed: Remove the paper from here without applying force...

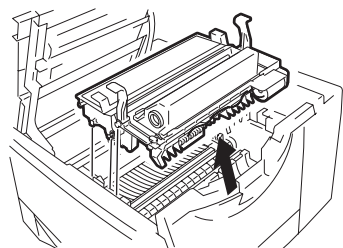
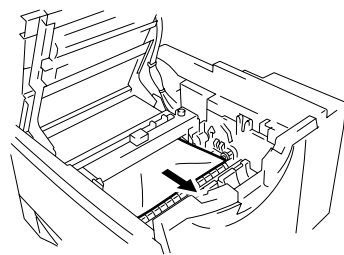


... or from underneath the process unit.




Do not touch any parts inside the machine other than those described here. The heater cover may be very hot - even when the machine is switched off. When paper is jammed, never open the recording paper cassette.

If necessary, pull up the fixer unit and carefully pull out the jammed paper.

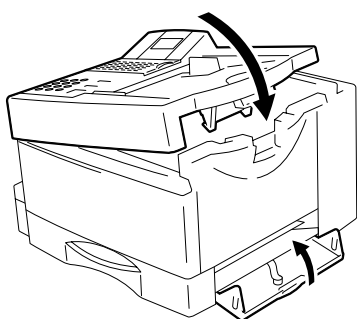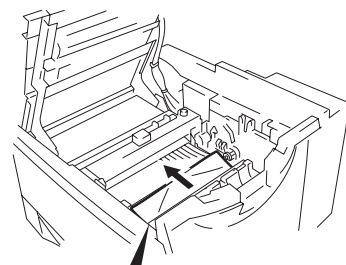



After you have replaced the process unit, close the covers by pressing down lightly until they lock into place. Now delete the error message by pressing STOP.

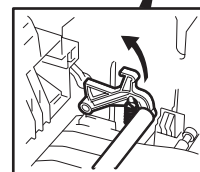

Cleaning the corona

If toner inadvertently enters the interior of the fax machine, it may be necessary for the charge corona to be cleaned. The charge corona consists of a very thin wire which stretches along the entire length of the image drum in a metal cage.

 
The supplied special tool enables you to clean the charge corona without any danger.

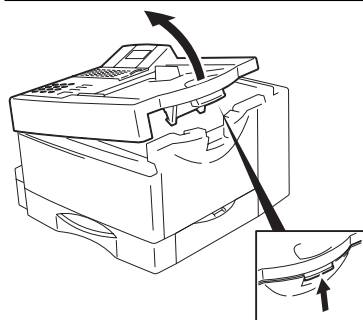

- Switch of the fax machine
- Pull the release button to open the fax machine (see page 5)

- Place the cleaning tool carefully on the metal cage (as illustrated in the drawing) and then slide it backwards and forwards several times along the entire length of the corona wire.


The other parts of the cleaning kit are reserved for a service call-out. Please store these objects in a safe place.

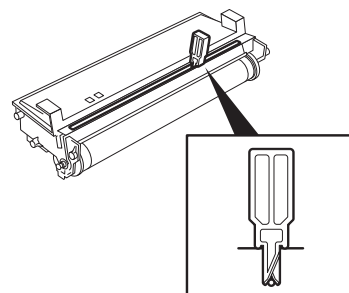

Possible problems

Remote maintenance (COMLINE)

Your fax machine enables remote diagnosis to be carried out. This means that internal settings can be read and changed via the telephone line. In order to ensure that all requirements of data protection are observed, COMLINE is possible only if you temporarily enable your fax machine for this facility.

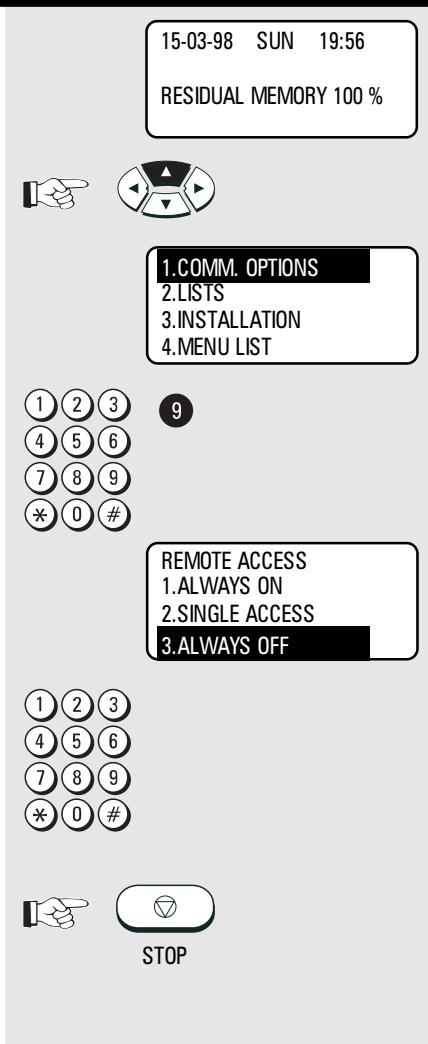

Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item

Make your selection
1: REMOTE ACCESS always possible
2: Temporarily enable REMOTE ACCESS
3: REMOTE ACCESS not possible

Select a menu item

Press STOP, return to standby mode

Connection to PABX

If your fax machine is connected to a PABX, additional sources of errors are possible. In the event of any problems, you should work through the following items and compare them against the current installation of your fax machine. Where necessary consult the person who installed your PABX.

- Does the PABX have public line capability?
- Does the PABX have DDI capability?
- Have you entered the „*“ key before the actual fax number?
- How is the public line obtained (earth key, flash, number)?
- What dialling method is used (pulse-dialling, DTMF dialling)?

UK Connection information

This TOSHIBA Facsimile Transceiver is intended for connection to public telecommunication services as follows:

By using the cable described as TEL LINE CABLE in the packaging list of the instruction manual. This cable plugs into the socket on the left hand side of the TF 851 which is marked LINE and the other end into the standard PSTN analogue socket found in the UK.

This terminal equipment complies with the following requirements:

- Group 3 fax modem
- Automatic call initiation
- Storage of telephone numbers for retrieval by a predetermined code
- Automatic dialling
- Automatic repeat attempts
- Call progress monitor
- Series connection facility
- LD or MF dialling
- Operation with or without dial tone being present.

Any other usage will invalidate the approval of the apparatus if as a result, it then ceases to conform to the standards against which approval was granted.

We declare, that TOSHIBA is using
CE mark in compliance with
EN 50 082-1, EN 55 022/B and
EN 60 950

EPA ENERGY STAR



Addendum to the TF631 Operator's Manual

The United States Environmental Protection Agency (EPA) has introduced a voluntary program, the ENERGY STAR Program, to encourage the widespread and voluntary use of energy-efficient technologies that enhance the workplace, improve product performance, prevent pollution, and reduce your energy costs. As an ENERGY STAR Partner, Toshiba Europa (I.G.) GmbH has determined that this facsimile model meets the ENERGY STAR guidelines for energy efficiency. ENERGY STAR guidelines require that all ENERGY STAR facsimiles maintain very low power consumption during idle state or have a „Power Saver“ feature that will automatically stand-down to an idle state after a period of inactivity.

For more information on the ENERGY STAR Program, please contact:

ENERGY STAR Printers/Fax Machines
US EPA (62021)
Washington, DC 20460

ENERGY STAR is an U.S. registered mark.

Index

- Abbreviated dialling 37
Abbreviated dialling memory 69
Alternative fax number 69
- Broadcast 40, 41
- Chain dialling 51
Change toner 6
Cleaning, scanning 116
COMLINE 118
Contrast 45, 106
Copy 29
Corona 117
Correct sequence printout 25
Cost centres 98
Cover sheet 50, 102
- Date 17
Delayed fax job 92
Delete ABB numbers 73
Delete one-touch dialling keys 76
Delete, groups 80
Delete, transmission 55
Department code 99
Developer assembly 5
Dialling method 14
Digital PABX 15, 118
Divider sheet 98
Document jam 116
Document length 105
Documents 31
Drum unit 5, 8
Dual-tone multi-frequency dialling 14
- Earth key 15
ECM 46, 107
Edit groups 79
Error codes 112
Error messages 110, 111
Extension 118
- FINE 44
Flash key 15
- GREY 44
Group dialling 40
Group, free 40
Groups 77
- ID 13
Infobox 58
- Job 33, 103
Job management 34
Job status 104
Journal 86, 112
- Language 16
Last number redial 52, 95
List, departments 91
List, functions 88
List, numbers 90
List, reservations 88
Listening-in 42, 43, 71
- Main line 15
Mains failure report 91
Memory 36
Memory card 10
Memory, transmit from 33
Memory, transmit memory 105
Menu 11
Modify ABB numbers 72
Multiple printout 26
- Number of calls 18
- Obtaining a public line 15
One-touch dialling 38
One-touch dialling keys 74
- PABX 15
Paper jam 117
Polling protection 57
Polling, cancel 60, 64
Polling, continuous 65
Polling, multiple 62
Polling, single polling 61
Power Saver 97
Printer unit 5
Problems, with reception 115
Problems, with transmission 114
Program selection list 81
Protected transmission 107
Pulse dialling method 14
PWD 109
- Reception protection 28
Reception trailer 94
Reception, automatic 18
Reception, delete 27
Reception, manual 18
Reception, memory 20
Recording paper 9
Reduction, copies 30
Reduction, reception 19
Remote maintenance 118
Report, memory transmission 82
Report, multi-polling 82, 85
Report, multi-transmission 82, 85
Report, transmission 82
Resend 53
Reserve polling 56, 58
Resolution, printer resolution 108
Resolution, superfine 108
Ringer volume 96
RTI 94
- Secure RX 21
SEP 109
Separator Page 98
Stack memory 33
Stand-by 97
STD 44
SUB 109
Sub-addressing 71
SUPERFINE 44
- Telephone directory function 39
Telephone network, connection to 8
Time 74
Toner 7
TOSHIBA code 57
Transmission header 93
Transmission report 71, 83, 112
Transmission reports 81
Transmission speed 49, 71
Transmission, delayed 71
Transmission, delete 55
Transmission, important 35
Transmission, protected 48, 107
TTI 93
- U-FINE 44
User name 12
- Warning lamps 2