

morphy richards

# Digital Stereo CD Clock Radio

(with remote control)




**29000** OPERATING INSTRUCTIONS

# Contents


Illustration .....	2-3
Location of remote controls for CD functions .....	3
Electrical requirements .....	4
Battery back-up .....	4
Switching on and setting the clock time .....	5
Setting the clock alarm time .....	5-6
Setting the alarm to wake to radio .....	6
Setting the alarm to wake to buzzer .....	6
Setting the alarm to wake to CD .....	7
Setting favourite CD wake up track .....	7
Cancelling the alarm .....	8
Snooze function .....	8
Sleep function .....	8-9
Listening to CD .....	9
CD functions .....	10
Listening to radio .....	11
Maintenance .....	12
Technical specification .....	12
Guarantee .....	13
Warning labels .....	14

# Illustration

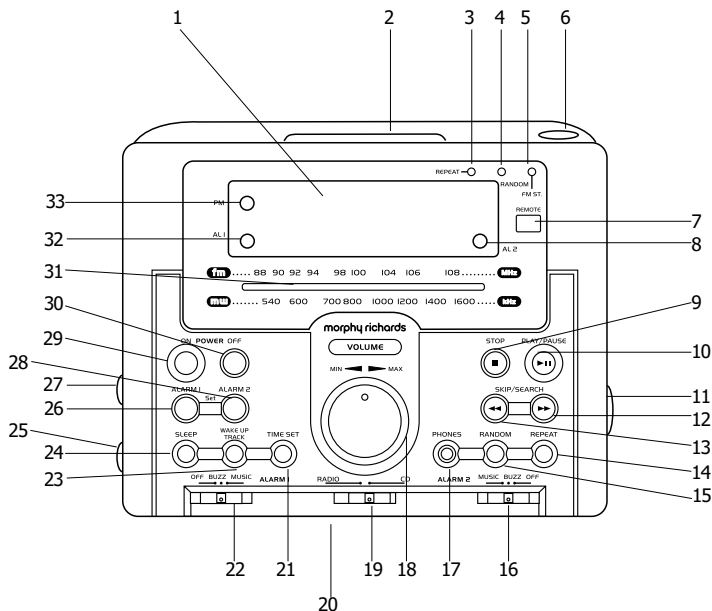

- |                                      |                                       |
|--------------------------------------|---------------------------------------|
| <b>1</b> Led clock display           | <b>18</b> Volume control              |
| <b>2</b> Snooze/Snooze set button    | <b>19</b> Function selector switch    |
| <b>3</b> Repeat indicator            | <b>20</b> Battery compartment         |
| <b>4</b> Random indicator            | <b>21</b> Time set button             |
| <b>5</b> FM Stereo Indicator         | <b>22</b> Alarm 1 selector switch     |
| <b>6</b> CD open button              | <b>23</b> Wake up track set button    |
| <b>7</b> Remote sensor               | <b>24</b> Sleep button                |
| <b>8</b> Alarm 2 indicator           | <b>25</b> Mono/stereo selector switch |
| <b>9</b> CD Stop button              | <b>26</b> Alarm 1 set button          |
| <b>10</b> CD Play/Pause button       | <b>27</b> Band selector switch        |
| <b>11</b> Tuning control             | <b>28</b> Alarm 2 set button          |
| <b>12</b> Skip/search forward button | <b>29</b> Power on button             |
| <b>13</b> Skip/search reverse button | <b>30</b> Power off button            |
| <b>14</b> CD Repeat button           | <b>31</b> Dial scale                  |
| <b>15</b> CD Random button           | <b>32</b> Alarm 1 indicator           |
| <b>16</b> Alarm 2 selector switch    | <b>33</b> PM indicator                |
| <b>17</b> Phone jack                 |                                       |

## Illustration remote control

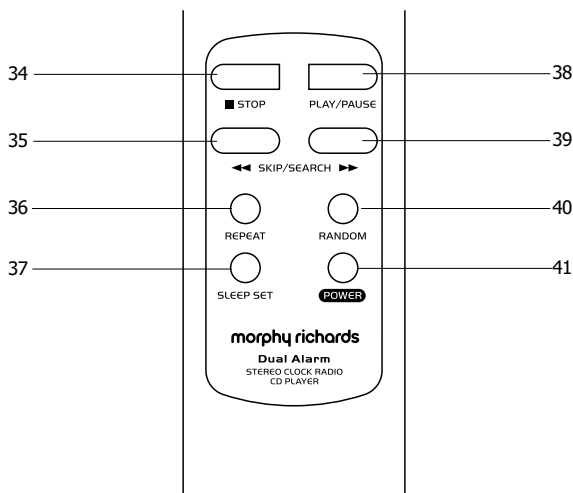

## Location of remote controls for CD functions

To use, point the remote control at the remote sensor **(7)**.

- 34** Stop button
- 35** Skip search reverse button
- 36** Repeat button
- 37** Sleep set button (Use the skip/search forward or skip/search reverse button with the sleep button to set the sleep time).
- 38** Play/pause button
- 39** Skip search forward button
- 40** Random button
- 41** Power on button

## Batteries for remote control

- 1 Slide the battery compartment cover off.
- 2 Insert 2 x AA batteries. (Ensure batteries are inserted correctly).
- 3 Replace the battery compartment cover.

## Electrical requirements

Check the voltage on the rating plate of your CD player corresponds with your house electricity supply which must be A.C. (Alternating current).

### For CD players with a fitted plug

If the socket outlets in your home are not suitable for the plug supplied with this appliance the plug should be removed and the appropriate one fitted.

**IMPORTANT : THE PLUG REMOVED FROM THE MAINS LEAD, IF SEVERED, MUST BE DESTROYED AS A PLUG WITH A BARED FLEXIBLE CORD IS HAZARDOUS IF ENGAGED INTO A LIVE SOCKET OUTLET.**

Should the fuse in the 13 amp plug require changing a 3 amp BS1362 fuse must be fitted.

If in doubt, consult a qualified electrician.

## **Battery back-up facility** (will operate without a battery fitted)

Your CD player is equipped with a battery back-up facility.

- 1 Remove the battery compartment cover **(20)** (located underneath the unit) by sliding in the direction of the arrow.
- 2 Insert a battery size 9 volts PP3/6LR61 (Ensure the battery is inserted correctly)
- 3 Replace the battery compartment cover.

Should a power interruption occur the clock will continue to run, however, time keeping will not be accurate. The display will be extinguished to conserve battery life but the memory will retain details of the clock time and alarm settings.

Battery back-up is designed to operate for a short period only.

If the unit is not to be used for a prolonged period, remove the battery to avoid battery leakage.

In the interests of environmental safety: dispose of batteries safely.

## Switching on, and setting the clock time

Before any alarm functions can be used on your CD alarm clock radio you must first set the clock to the correct time.

- 1 Place the unit on a flat surface. Plug the mains plug into the wall socket and switch on the wall socket.
- 2 The LED clock display **(1)** will flash.
- 3 Press and hold the TIME SET button **(21)** and simultaneously hold down the SKIP SEARCH FORWARD button **(12)**. The LED clock display **(1)** will advance the minutes and hour segments. Release all buttons when the correct time is set.
- 4 Press and hold the TIME SET button **(21)** and simultaneously hold down the SKIP SEARCH REVERSE button **(13)** will adjust the clock time in the reverse direction.
- 5 The PM indicator **(33)** will illuminate to indicate 12.00 midday has been reached.

## Power On/Off

The unit must be switched on before the radio or CD functions can operate.

- 1 Switch the unit on by pressing the power ON button **(29)**.
- 2 Switch the unit off by pressing the power OFF button **(30)**.

## Setting the clock alarm time

The alarm function can be set to operate on the following functions: wake to radio, wake to buzzer alarm or wake to any CD programmed track.

- 1 Press and hold the ALARM 1 SET button **(26)** and simultaneously hold down the SKIP SEARCH FORWARD button **(12)**. The clock display **(1)** will advance the minutes and hour segments. Release all buttons when the correct alarm time is reached.
- 2 Press and hold the ALARM 1 SET button **(26)** and simultaneously hold down the SKIP SEARCH REVERSE button **(13)** alarm time will adjust in the reverse direction.

To set alarm 2 follow the above procedure using the ALARM 2 set button.

- Slide the Alarm 1 selector switch **(22)** or Alarm 2 selector switch **(16)** to select your wake up mode:
  - To MUSIC position for Radio or CD alarm mode.
  - To BUZZ position for alarm buzzer sound.
  - To OFF position to turn alarm function off.
- Once the Alarm switch has been activated the ALARM indicator **(32)** or **(8)** will illuminate.

## Setting the alarm to wake to radio

- Set the required alarm time by pressing and holding the ALARM 1 SET button **(26)** or ALARM 2 SET button **(28)** and simultaneously the SKIP SEARCH FORWARD button **(12)** to fast forward or the SKIP SEARCH REVERSE button **(13)** to reverse.
- Slide the function selector switch **(19)** to the RADIO position.
- Select the required waveband by sliding the BAND selector switch **(27)** to either FM or MW and turning the TUNING control **(11)** to the station you wish to use for the alarm.
- Set the VOLUME control **(18)** to the desired level.
- Slide the ALARM selector switch **(22)** or **(16)** to the MUSIC position. (The ALARM indicator **(32)** or **(8)** will illuminate.
- To stop listening to the radio press the power OFF button **(30)**.

Ensure the radio station will be transmitting at the preset alarm time.

## Setting the alarm to wake to buzzer

- Set the alarm time as described (1) above.

At the desired wake up time the buzzer can be set to operate. If you do not switch off the buzzer it will sound for a set period and then automatically switch off. If you press the power OFF button **(30)** the alarm will operate again 24 hours later.

- Set ALARM 1 selector switch **(22)** or the ALARM 2 selector switch **(16)** to the buzz position. Alarm indicator **(32)** or **(8)** will illuminate.

Alarm buzz will operate at the preset alarm time.

## Setting the alarm to wake to CD

- 1 Push the CD OPEN button down and place a CD into the compartment. Ensure the CD is pressed firmly into position then close the door correctly.
- 2 Set the required alarm time as per setting alarm procedure.
- 3 Switch the function selector switch **(19)** to CD.
- 4 Slide the ALARM selector switch **(22)** or **(16)** to the MUSIC position. (ALARM indicator **(32)** or **(8)** will illuminate).
- 5 Using the wake up track system below you may set the CD track of your choice.

At the wake up time, the CD will play until the end of the disc unless the REPEAT function is activated, then it will play continuously for approximately 2 hours.

- 6 Press the STOP button **(9)** or the power Off button **(30)** if you wish to stop the CD playing at any time.

If you fail to insert a CD into the CD player the alarm will automatically default to the buzzer alarm.

## To wake up to your favourite cd track

The unit may be set to play any preselected CD track of your choice.

- 1 Press and hold the wake up track set button **(23)** and simultaneously hold down the SKIP SEARCH FOWARD button **(12)** to select the track number. The display will indicate the selected track.
- 2 Press and hold the wake up track set button **(23)** and simultaneously hold down the SKIP SEARCH REVERSE button **(13)** will adjust the tracks in the reverse direction.

It is only possible to set the same track for both alarm settings.



## Canceling the alarm

The alarm is programmed to run for 1 hour and 59 minutes.

- 1 To cancel the alarm press the power OFF button **(30)**.  
(The alarm will automatically activate 24 hours later).
- 2 If the alarm is no longer required slide the alarm selector switch **(22)** or **(16)** to the OFF position. (The alarm indicator will switch off).

## Snooze function

You can press the SNOOZE/SNOOZE SET button **(2)** after the alarm has sounded which allows 9 minutes of snooze time. After 9 minutes the alarm will sound again. The snooze time can be varied between 1-30 minutes if required.

- 1 When the alarm, buzzer or CD sounds press the SNOOZE/SNOOZE SET button **(2)**. (The snooze default is set for 9 minutes.)
- 2 To set your own snooze time, press the SNOOZE/SNOOZE SET button **(2)** together with the SKIP SEARCH FORWARD **(12)** button to advance the minutes.  
Press and hold the SNOOZE/SNOOZE SET button **(2)** and simultaneously hold the SKIP SEARCH REVERSE button **(13)** to adjust the minutes in the reverse direction.
- 3 Release the buttons when the required snooze time is reached.

The snooze function will cease to operate after a set period.

## Sleep function

The sleep function sets the unit to play the radio or CD whilst you go to sleep and will switch off after a set time.

- 1 Slide the function selector switch **(19)** to CD or RADIO.
- 2 To use the sleep facility press the SLEEP button **(24)**.  
(The sleep default is set for 59 minutes after which the unit will automatically switch off).

- 3 The sleep time can be varied between 1 minute to 1 hour 59 minutes.
- 4 To set your own sleep time, press the SLEEP button **(24)** together with the SKIP SEARCH FORWARD **(12)** button to advance the minute and hour segments. Press and hold the SLEEP button **(24)** and simultaneously hold down the SKIP SEARCH REVERSE button **(13)** will adjust the minute and hour segments in the reverse direction.
- 5 Release the buttons when the required sleep time is reached.
- 6 If you want to turn off the music before the end of the programme press the power OFF button **(30)** or the SNOOZE/SNOOZE SET button **(2)**.

If the CD play time is shorter than the selected sleep time, the music will stop unless the repeat button has been pressed.

When the sleep time has expired the radio or CD will switch off.

## Listening to CD

- 1 Push the CD OPEN button **(6)** downwards and Insert the CD.
- 2 Set the function selector switch **(19)** to the CD position and press the power ON button **(29)**. (The LED display **(1)** will show 'cd'.
- 3 Press the PLAY/PAUSE button **(10)** and the unit will play the first track. (The LED display **(1)** will show the number of the CD track for a few seconds and then will revert to the clock setting.)

If a CD has not been placed into the player the LED display **(1)** will show 'nd'.

- 4 Pressing the PLAY/PAUSE button **(10)** will pause the CD, the track number will show on the LED display **(1)**.
- 5 Pressing the PLAY/PAUSE button **(10)** again will resume play.
- 6 Press the STOP button **(9)** and the CD will stop playing.

## CD functions

### SKIP SEARCH FORWARD button **(12)**

- 1 To search to the next CD track press the SKIP/SEARCH FORWARD button or press repeatedly to skip forwards several tracks.
- 2 To fast forward through the current track press and hold the SKIP/SEARCH SET button.

### SKIP/SEARCH SET REVERSE button **(13)**

- 1 To return to the beginning of the playing track press the SKIP SEARCH REVERSE button or press repeatedly to skip backwards several tracks.
- 2 To search backwards through the current track press and hold the SKIP SEARCH REVERSE button.

### REPEAT button **(14)**

- 1 Press the repeat button to repeat the whole CD.
- 2 The CD repeat indicator **(3)** will illuminate. (The unit will continuously repeat the whole CD)
- 3 Press the repeat button again to switch off the repeat function.

'nd' showing on the Display

'nd' on the LED display indicates that the disc compartment is empty or that the disc has been loaded incorrectly or that the disc is damaged and cannot be read by the CD player.

### RANDOM button **(15)**

- 1 Press the RANDOM button **(15)** the indicator **(4)** will light.
- 2 The cd player will select tracks at random to be played.
- 3 To deselect press the RANDOM button.

## Listening to the radio

- 1 Press the power ON button **(29)**.
- 2 Slide the function selector switch **(19)** to the RADIO position, switch the BAND selector switch **(27)** and switch to mono or stereo using the selector switch **(25)**.
- 3 Turn the tuning control **(11)** and tune to the desired station.
- 4 Adjust the volume control **(18)** to the desired level.  
(If the FM station is being received in stereo the STEREO indicator **(5)** will light).
- 5 Press the power OFF button **(30)** to turn the radio off.

To obtain the maximum reception fully extend the wire FM aerial (which is located at the rear of the unit) and alter the direction of the wire for best results.

The aerial for the MW waveband is located inside the unit. To obtain the maximum MW reception rotate your CD clock radio.

## Maintenance

Do not expose your CD alarm clock radio to extremes of temperature. The product should be kept in a warm environment free from dust and damp. For external cleaning use only a soft, clean, damp cloth. Use of detergents may damage the finish.

### Notes regarding Compact Disc Players

If there is a scratch, dirt or finger prints on the CD, it may cause tracking errors.

Before playing, clean the CD with a clean cloth. Wipe the CD from the centre outwards.

After playing, store the disc in its CD case.

## Technical specification

Power supply	:	230v ~ 50Hz
Battery back-up	:	9V DC type 6LR61/PP3
Radio	:	FM 88Mhz - 108Mhz
	:	MW 540Khz - 1600Khz

### Earphones

Stereo earphone jack socket.

## Caution

This unit uses a laser beam. To prevent an accident occurring the unit should only be opened by a qualified engineer.

If the door interlocks become defective the laser may cause invisible radiation. Avoid exposure to the beam.

## **Guarantee**

Morphy Richards products are manufactured to internationally accepted quality standards. In addition to your statutory rights, Morphy Richards guarantee your product to be free from manufacturing and component defects for a period of TWO YEARS from date of purchase.

If your product proves to be defective within 28 days of purchase, your Morphy Richards dealer from whom the product was purchased will be pleased to replace it free of charge.

Should your product develop a defect within the guarantee period but after the replacement period, please return the product to the following address, together with the proof of purchase, brief details of the symptoms and your own name and address.

Morphy Richards Limited  
Talbot Road  
Mexborough  
South Yorkshire  
S64 8AJ

Your post office will provide a certificate of posting. The product will be repaired and returned to you promptly.

If you need any further advice, please call our Helpline  
(UK local rate) on: 08450 777700 (Mon-Fri)

## Warning labels



**ATTENTION:** To reduce the risk of electric shock, do not remove the cover. There are no user serviceable parts inside the unit. Refer any servicing to qualified personnel.



The lightning flash with arrowhead symbol within the triangle is a warning sign alerting the user of 'dangerous voltage' inside the unit.



The exclamation point within the triangle is a warning sign alerting the user of important instructions accompanying the product.



**CAUTION:** Invisible laser radiation when open and interlocks defective. Avoid exposure to the beam.

**WARNING:** to reduce the risk of electric shock, do not expose this appliance to rain or moisture.

446/8001/50 Rev OI



Imported by : Morphy Richards Ltd, Talbot Road, Mexborough, S64 8AJ