



DEALER SET-UP INSTRUCTIONS for SNAPPER SINGLE STAGE SNOW THROWERS

These machines are shipped with the upper handle folded forward, providing compact shipping. These machines are designed for quick set-up. The checklist on the last page should be filled out by the dealer as the items are checked off and/or performed and the Consumer/Operator Product Registration card filled out and sent to the Customer Service department at SNAPPER when completed. No special tools are needed to set up these units.

STEP 1: Remove machine from shipping carton. Machine is shipped in carton with handles folded. Remove and discard cardboard from between all handles. Raise upper handle until the lower ends seat into concave area of lower handle. Securely tighten upper handle with knobs and curved head bolts on both sides. See Figure 1.

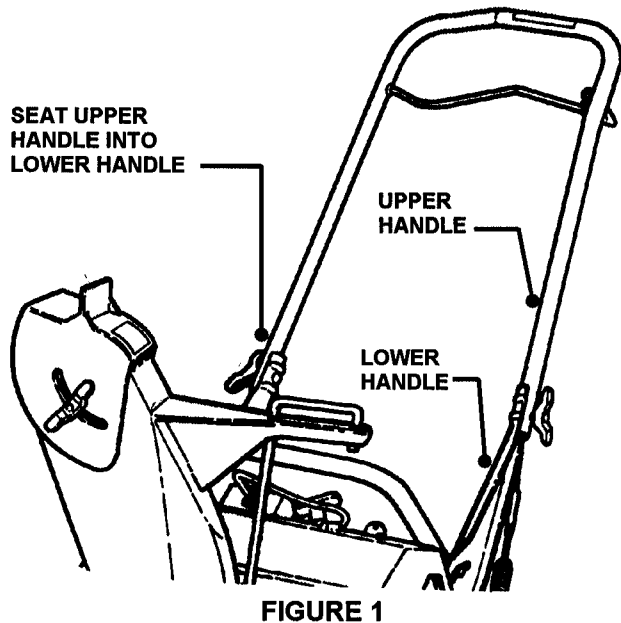

STEP 2: Measure auger clutch control cable extension from a relaxed position to full extended position. Proper extension should be between 3/8" minimum to 1/2" maximum extension. NOTE: Measure from the top of spring (The top is in relation to where spring hooks into auger clutch control). Loosen jam nut at the upper end of cable. Hold threaded end of cable and then turn cable clockwise until correct extension is achieved. Retighten jam nut. **IMPORTANT:** DO NOT rotate cable beyond the point to where all of slack out of cable. Cable has to have a certain amount of slack for the auger brake to stop auger when auger clutch control is released. See Figure 2.

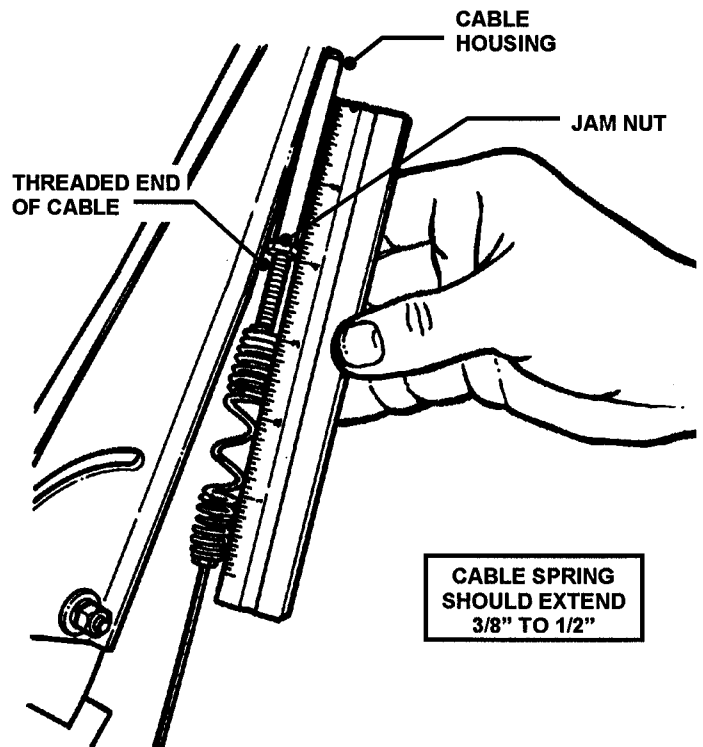

DEALER PRE-SALE CHECKLIST for SNAPPER SINGLE STAGE SNOW THROWERS

The following must be achieved upon the purchase of the snow thrower. It is very important that the Dealer performs and accomplishes the set-up and the operational tests as listed below.

SET-UP (Details on Page 1 of this Instruction)

UPPER HANDLE & LOWER HANDLE secured in place and hardware tightened securely.

LUBRICATION

ENGINE OIL added to bring level up to full mark on 4-cycle engines (Refer to Engine Manual).

OIL mixed with FUEL in specified ratio (2 Cycle Engines Only). (Refer to Engine Manual).

OPERATIONAL TEST

AUGER checked to insure stopping within 5 seconds after clutch control is released.

ENGINE started, engine control settings checked and adjusted as needed.

FUEL SYSTEM checked for leaks around tank and connections.

DISCHARGE CHUTE checked for free rotation with handle depressed and locks in place when handle is released.

AUGER CONTROL CABLE adjusted per instructions in the Operator's Manual supplied with machine.

CHOKE CONTROL checked for proper operation during start up.

CPSC (Consumer Product Safety Commission) COMPLIANCE TEST

AUGER CLUTCH CONTROL stops auger when released.

DEALER'S RECORDS & FINAL CHECK

PERSONALLY HANDED Operator's Manual & Snow Thrower Safety Booklet to purchaser.

INSTRUCTED purchaser to read and follow instructions in Operator's Manual.

DEMONSTRATED proper starting procedure and operation of snow thrower to purchaser.

INSTRUCTED purchaser how to service air cleaner, maintain oil level (4-cycle), or mix oil (2-cycle).

ASSISTED purchaser in completing Product Registration Card.

CONSUMER/OPERATOR PRODUCT REGISTRATION CARD

Purchase Date _____ Model _____ Serial No. _____

Retailers Name _____ Signature _____

Address _____ City _____ State _____ Zip _____

MACHINE WILL BE USED COMMERCIALY? YES NO

Purchaser's Name _____ Signature _____

Address _____ City _____ State _____ Zip _____

IMPORTANT: This form is to be retained by the Dealer for future reference regarding Warranty, proof of purchase, traceability for product recall or service, etc. Complete the Product Registration Card and Mail to Customer Service Department at SNAPPER, P.O. BOX 1379, McDonough, Georgia, 30253.