



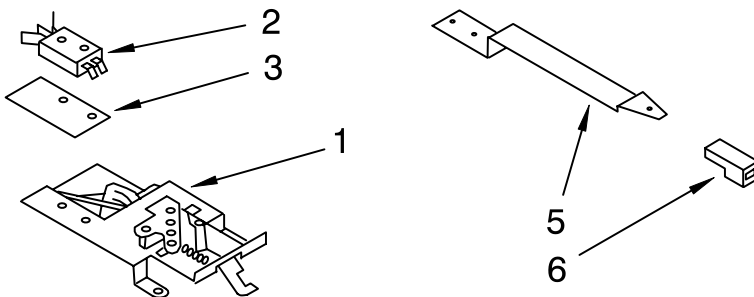

COOKTOP PARTS

For Model: RF356BXDW0
(White)

30" ELECTRONIC RANGE
FREESTANDING
Self-Clean Oven
Full Width Ceramic Cooktop

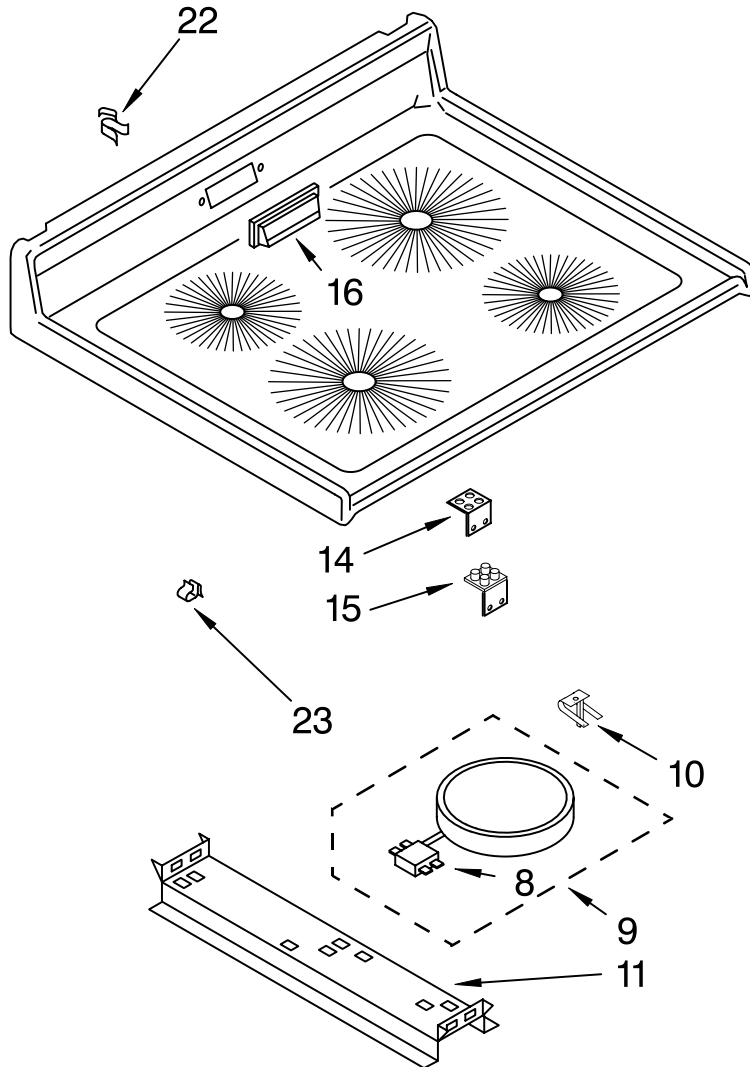

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	3148668	Latch Lock Mech.
	343641	Screw (2)
2	3169497	Safety Switch
	3169547	Screw (2)
3	3169498	Insulator, Switch
5	3169081	Handle, Latch
	308422	Screw (2)
6	3148684	Knob, Latch
	155023	Screw
8		Limiter, Temp.
	3169552	1400W, LR
	3169553	1700W, RF
	3169554	2100W, RR
	3169555	2400W, LF
9		Element, Surface (Includes #8)
	3169543	1400W, LR
	3169544	1700W, RF
	3169545	2100W, RR
	3169546	2400W, LF
10	3149191	Spring (8)
	246119	Screw (8)
11	3148809	Bracket, Element Support
	3149333	Screw (4)
13	3176530	Cooktop
	3367670	Screw, (2)
14	3149032	Bracket, Indicator Light Mounting
15	3169395	Light, Indicator (Hot Surface)
16	3149011	Cover, Vent
22	3149190	Clip, Mounting (2) (Vent Cover)
23	311311	Clip, Wire

LITERATURE PARTS

- LIT3189985 Instructions, Installation
- LIT3190502 Use and Care Guide
- LIT3169513 Wiring Diagram
- LIT3150400 Installation Instr (Templet)

Following May Be Purchased


DO-IT-YOURSELF REPAIR MANUALS

- LIT677973 Manual, Range

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Model: RF356BXDW0
(White)

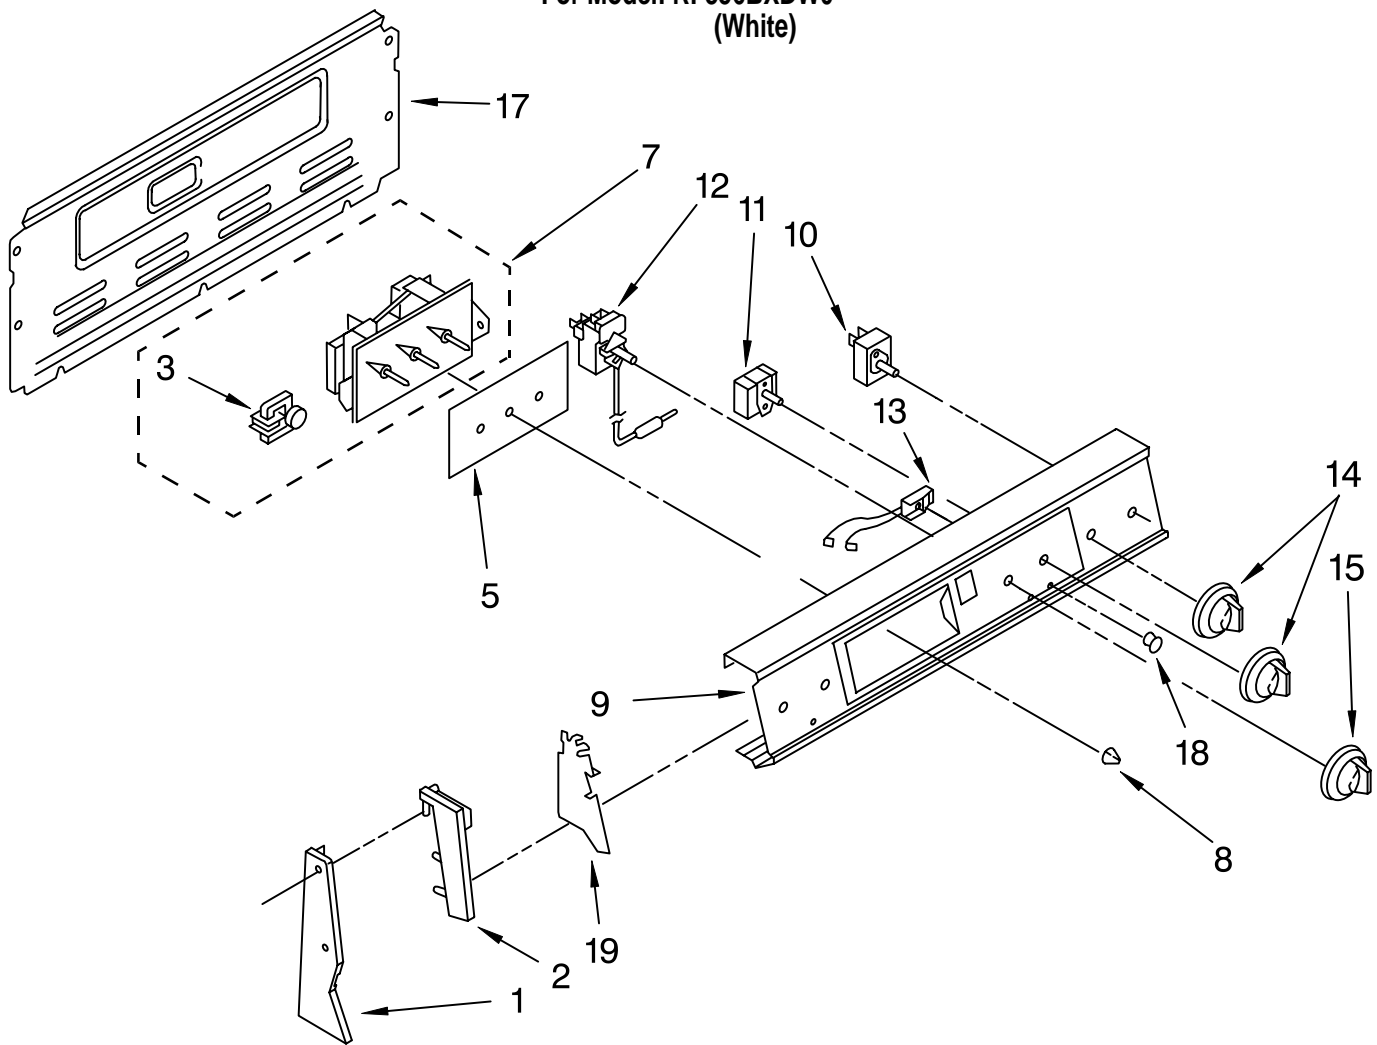


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.			7	661458	Timer, Control	13		Indicator Light
1	3187671	End Trim R.H.		3185647	Screw (2)		314031	Oven on
	3187672	End Trim L.H.	8	3169182	Knob, (3) Timer		3169457	Surface Unit On
	343641	Screw, 10-16 x 1/2 (4)	9	3188678	Panel, Control	14	3188721	Knob, Control (5) (Inf. & Selector)
2	3187791	End Cap R.H.		246132	Screw (4)	15	3188724	Knob, Control (Thermostat)
	3187792	End Cap L.H.	10	3148952	Switch, Infinite LR & RF	17	3187332	Rear Cover Control Panel
	3150344	Screw, 8BT x 1/4 (4)		3148955	Switch, Selector (5 Position)		343641	Screw, 10-16 x 1/2 (8)
3	309822	Motor, Timer	11	3169311	Switch, Selector (5 Position)	18	313101	Lens, Amber (3)
5	3169549	Glass, Timer		308119	Screw (2)	19	313608	Shield, Glass (2)
			12	3169526	Thermostat, Oven		246132	Screw, 8A x 3/8 (2)
				311932	Screw, 6-32 x 1/4 (2)			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Model: RF356BXDW0
(White)

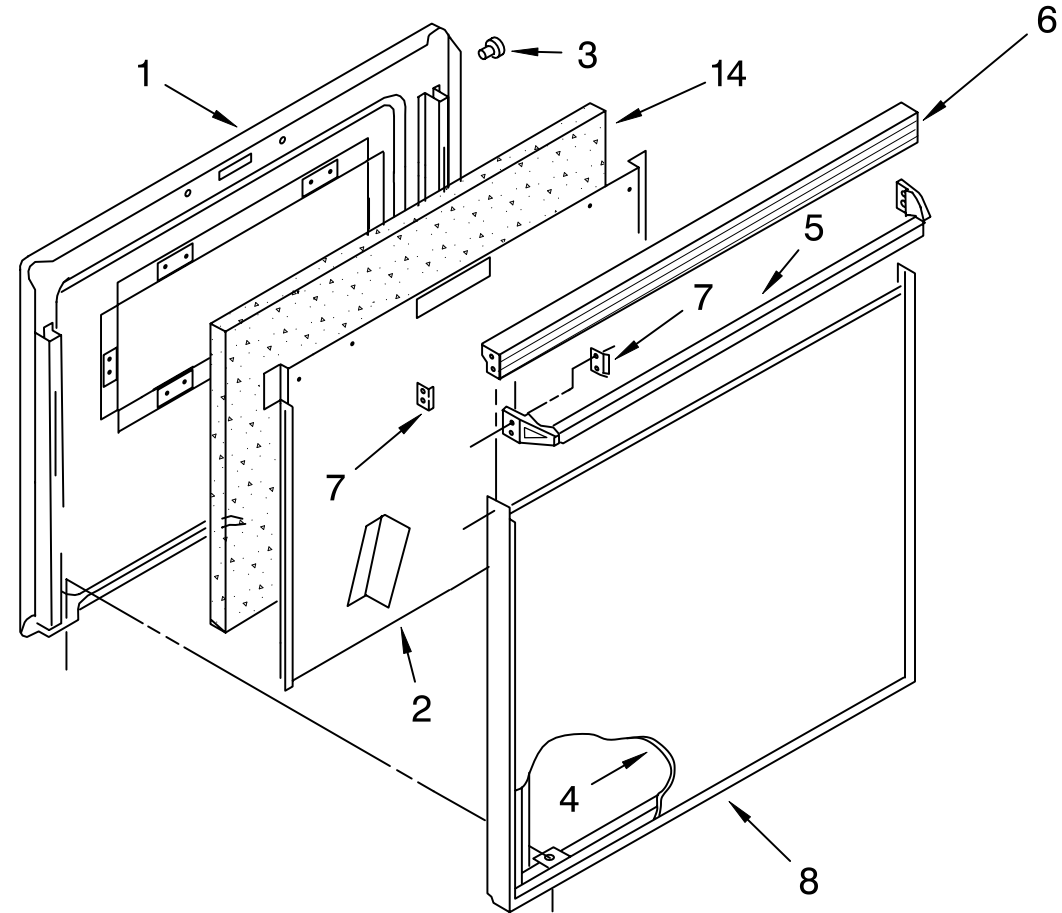

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	3172219	Liner, Oven Door
2	3148160	Retainer, Insulation
	3185647	Screw (4) 8-18 x 3/8
3	3148182	Bumper, Door (4)
4	3148186	Panel, Glass
5	3184128	Handle, Door
	3169090	Pal-Nut (2)
6	3169515	Door Top, vent
	3149333	Screw (2)
7	3148282	Clip, Handle (2)
	307748	Screw (4)
8	3188997	Frame, Door
	3149333	Screw (3)
	3149253	Screw (4)
14	3147951	Insulation

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Model: RF356BXDW0
(White)

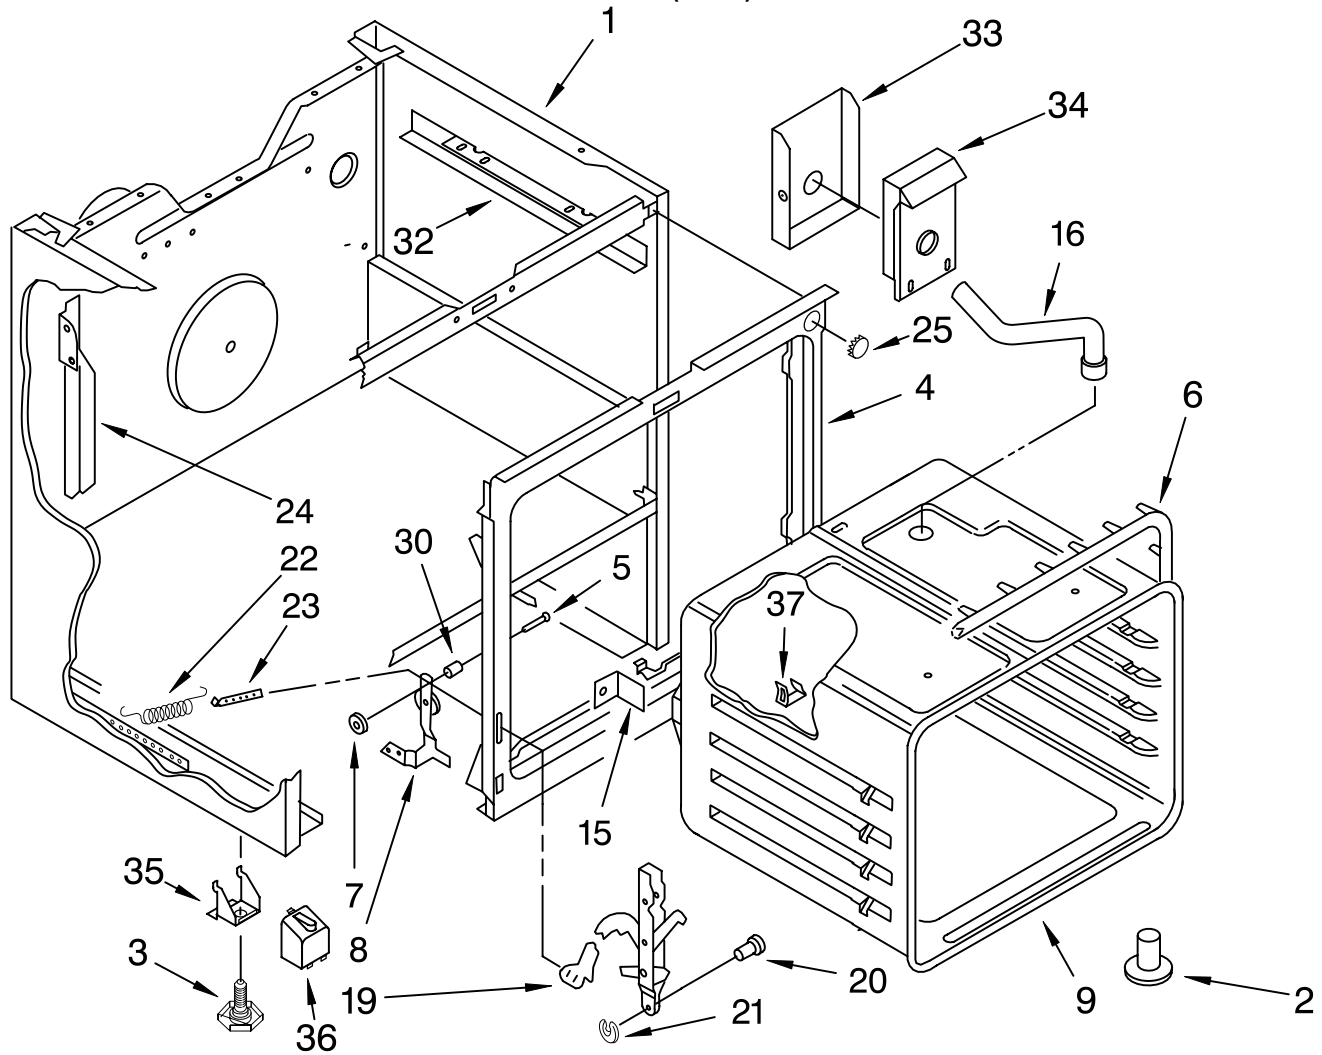

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	330086	Main Chassis
	690989	Screw, 10-32 x 1/2
2	3169109	Tube, Vent
	307748	Screw (8)
3	3169499	Leg Leveling (4)
4	3176718	Frame, Front
	311056	Screw (2)
	3150537	Screw (1)
5	307985	Pin, Hinge (2)
6	3169251	Seal, Door
7	308306	Pushnut (2)
8	3176710	Hinge, R.H.
	3176711	Hinge, L.H.
	343641	Screw, 10-16 x 1/2 (4)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

9	3176612	Oven (30" Pyro)
	311056	Screw (3)
15	311220	Bracket, Oven Mounting
	343641	Screw, 10-16 x 1/2 (4)
16	3169365	Vent, Tube (Extension)
	307748	Screw, 10A x 1/2 (2)
19	3176709	Channel, Arm (2)
20	307986	Hinge Pin (2)
21	307594	Ring, Retainer (2)
22	308127	Spring, Oven Door (2)
23	308125	Anchor, Spring (2)
24	313196	Support, L.H. Post
	313197	Support, R.H. Post
	343641	Screw, 10-16 x 1/2 (4)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

25	308535	Plug, Button
30	309111	Snubber, Door (2)
32	3147646	Support, Chassis
	309112	Screw (4)
33	3149006	Shield, Box
	98520	Screw (3)
34	3169278	Vent, Box
	313349	Screw (2)
35	3169418	Support, Foot (2)
	343641	Screw (2)
36	3169448	Cover, Foot (2)
37	313382	Clip, Therm. Bulb

Following Parts Not Illustrated


3169093	Insulation, Wrapper
3169094	Insulation, Oven Back

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

UNIT PARTS

For Model: RF356BXDW0

(White)

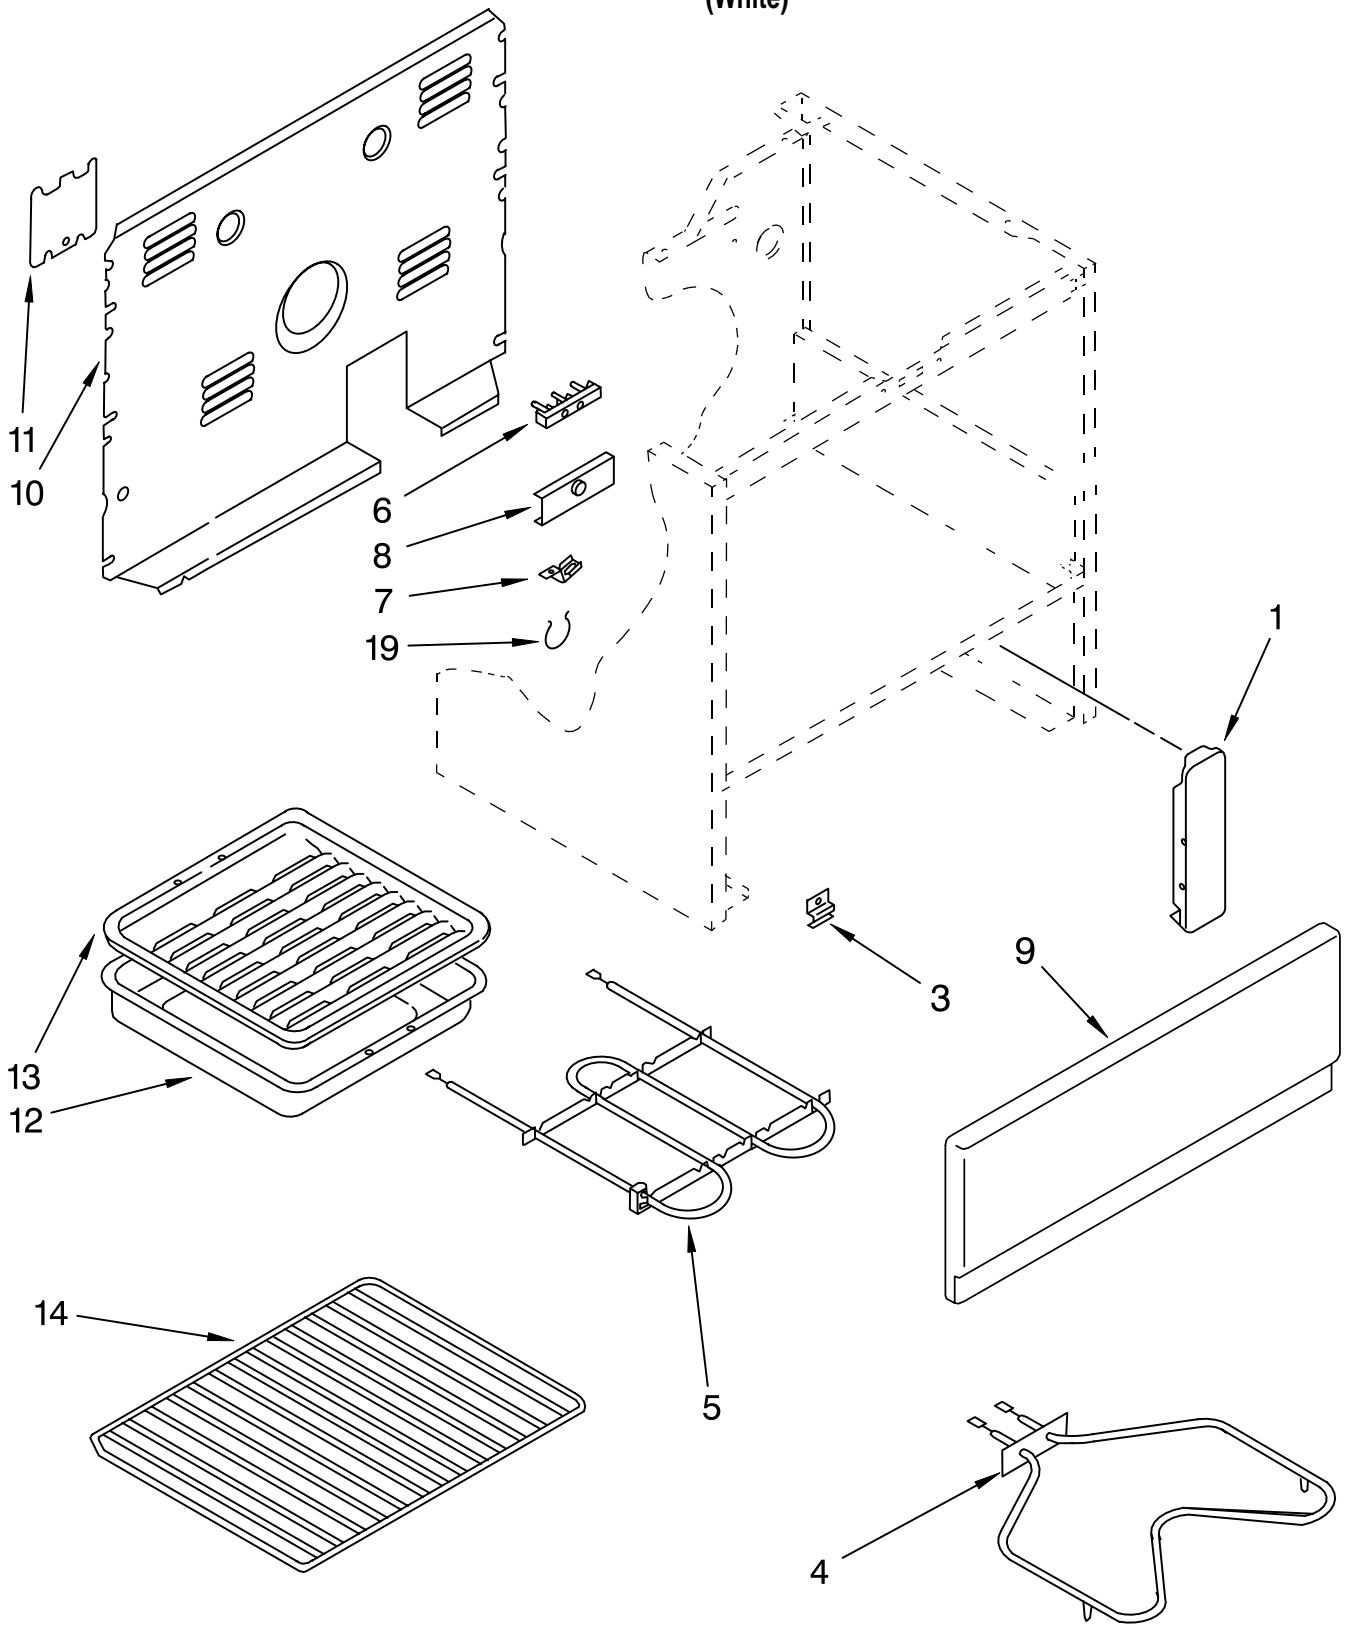

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

UNIT PARTS

For Model: RF356BXDW0
(White)

Illus.	Part	
No.	No.	DESCRIPTION

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	3169420	Bracket, Mounting (2)
3	3169548	Bracket, Mounting
	343641	Screw, 10-16 x 1/2
4	661170	Unit, Bake (240V) 308180 (Alt.) 313827 (Alt.)
	3150532	Screw, 10-32 x 7/16 (2)
5	660579	Unit, Broil (240V) 311714 (Alt.) 311713 (Alt.)
	3150532	Screw, 10-32 x 7/16 (2)
6	258076	Terminal Block
	98884	Screw, 10-16 x 1 (2)
	112432	Nut (6)
7	3169573	Ground Strap
	313660	Clip
	690989	Screw, 10-32 x 1/2
8	3150190	Bracket, Service
	343641	Screw, 10-16 x 1/2 (2)
9	3169422	Panel, Drawer (Dummy)
	313349	Screw, 8-18 x 1/2
10	3148975	Cover, Rear
	343641	Screw, 10-16 x 1/2 (7)
11	307972	Cover, Service
	343641	Screw, 10-16 x 1/2 (2)
12	3169076	Pan, Broiler
13	3147563	Rack, Broiler
14	308173	Rack, Oven (2) (Straight)
19	313438	Clip, Harness (2)





Following Parts Not Illustrated

814091	Anti-Tip Kit (Floor Mount)
3184477	Glass Cleaner
3183488	Window Scrapper

WIRING HARNESS PARTS

For Model: RF356BXDW0
(White)

Illus. No.	Part No.	DESCRIPTION
1	3169506	Harness, (Oven)
2	3169450	Harness, (Lock Switch)
3	3169551	Harness, (Cooktop)
5	311227	Wire, Ground (2)
6	311311	Clip, Wire
7	3169449	Clamp, Wire

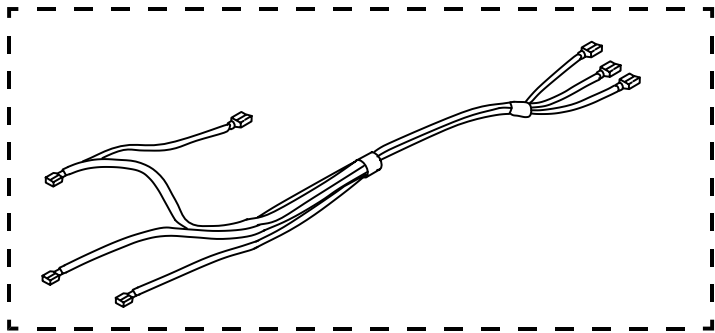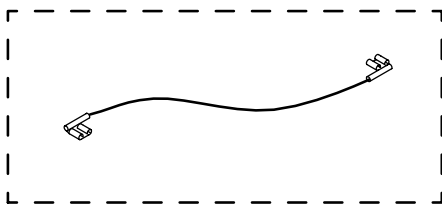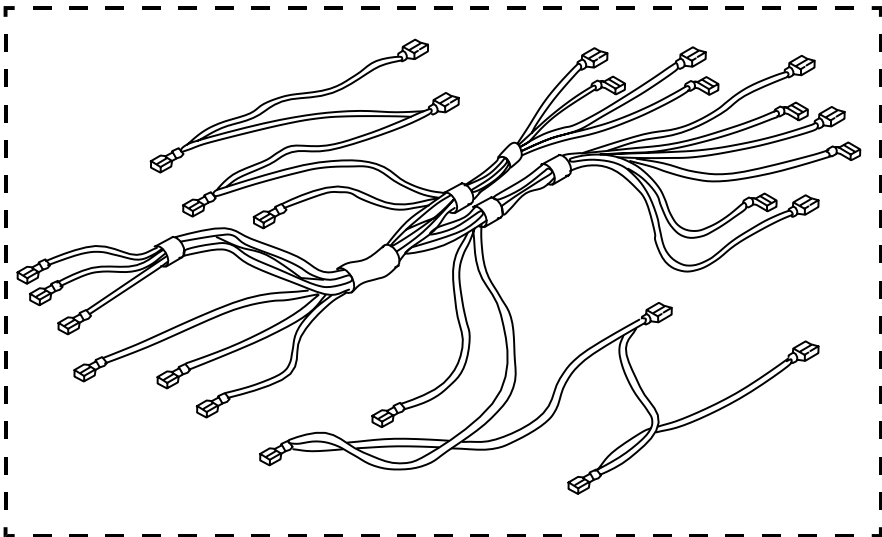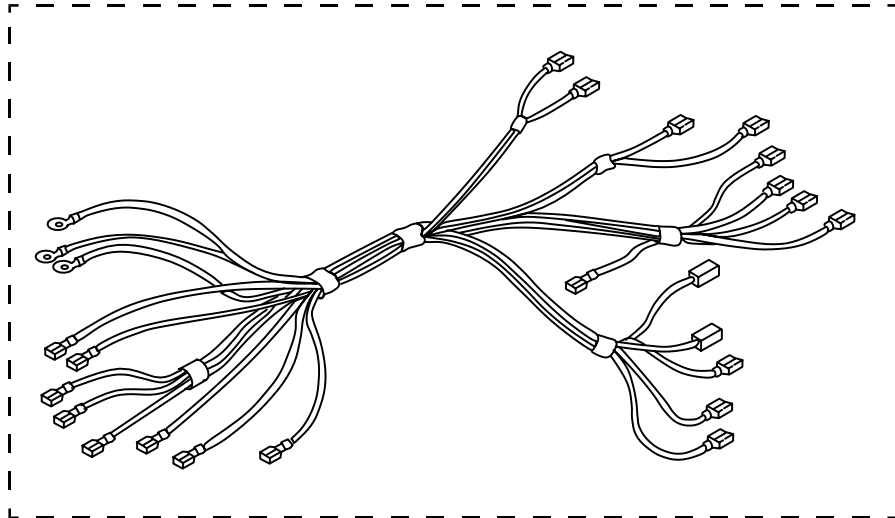

1

5

3

2

6
7

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MISCELLANEOUS PARTS

For Model: RF356BXDW0
(White)

Illus. No.	Part No.	DESCRIPTION
<u>SPLICING WIRES--25FT.</u>		
<u>LENGTH</u>		
		12 Ga. 150°c
242820		Wire, Black 14 Ga. 150°c
242821		Wire, Blue 14 Ga. 150°c
242822		Wire, Brown 14 Ga. 150°c
242830		Wire, Brown 14 Ga. 200°c
242823		Wire, Green 14 Ga. 150°c
242824		Wire, Orange 14 Ga. 150°c
242829		Wire, Red 12 Ga. 150°c
242825		Wire, Red 14 Ga. 150°c
242831		Wire, Red 14 Ga. 200°c
242826		Wire, White 14 Ga. 150°c
242827		Wire, Yellow 14 Ga. 150°c
242832		Wire, Yellow 14 Ga. 200°c

Illus. No.	Part No.	DESCRIPTION
<u>PAINT, TOUCH-UP (1/2oz.)</u>		
	72017	White
	72107	Almond
	72109	New Avocado
	72108	Coffee
	72110	Harvest Gold
	72112	Toast
	72113	Platinum
	**511873	White Porcelain (2 Oz.)
<u>PAINT, PRESSURIZED SPRAY (13 oz.)</u>		
	350930	White
	350956	Almond
	261888	New Avocado
	261886	Coffee
	261890	Harvest Gold
	285365	Toast
	285366	Platinum
	285006	Superior Black
<u>PAINT, BULK (1 qt.)</u>		
	799344	White (Uncut)
	978883	Almond (Uncut)
	261891	Harvest Gold (Uncut)
	285367	Toast (Uncut)
	285368	Platinum (Uncut)

Illus. No.	Part No.	DESCRIPTION
<u>REFINISHING MATERIAL</u>		
	799832	Kit, Porcelain Repair (White)
	242756	Touch-Up Self-Clean (1/2 Pt.)
	261582	Grease
	814009	Glass Cleaner
<u>Following May Be Purchased</u>		
<u>DO-IT-YOURSELF REPAIR MANUALS</u>		
	LIT677973	Manual, Range
<u>INSULATION</u>		
	261514	Insulation, Fiberglass (1-1/2" x 24" x 120")
	240132	Insulation, Fiberglass (2-1/2" x 22" x 120")
	241430	Foil, Aluminum Oven (18" x 25')
<u>ANTI-TIP KIT</u>		
	814234	Anti-Tip Kit (Wall Mount)
**Note: Cooktop Surface is Porcelain; All Other Panels are Painted Surfaces.		