



# 5.6 INCH DIGITAL PHOTO FRAME

*See Things Differently™*



USER'S MANUAL  
N5-105



**Warning :**

**Please turn off the power when inserting or removing any memory card or USB device.**

**Otherwise, it may cause damage to the card / USB and the unit.**

**Safety precaution**

- 1) Use only the supplied the adaptor with Input 100-240V, Output 12V.
- 2) Turn off power before cleaning .Use only a soft cloth to clean the unit.  
Do not use liquid cleaners.
- 3) Avoid exposing the unit to extreme heat.
- 4) Do not disassemble the Digital Photo Frame, otherwise it may result in electric shock and void your warranty

# Content

Introduction.....	3
Feature.....	3
Packaging Check List .....	4
Specifications.....	4
Product Diagram.....	5
Using Your Frame.....	6
Troubleshooting.....	7

## Introduction

- ✧ Your new digital picture frame lets you view digital pictures from memory cards easily and quickly.
- ✧ No computer or printer is needed.
- ✧ Includes convenient slide show mode, which starts automatically when the frame is turned on.
- ✧ Supports many popular memory card types .
- ✧ Easy to take with you to share photos with family and friends anywhere.
- ✧ A step beyond the traditional photo frame . View tens or even hundreds of digital photos without the need to pay for printing.

### 1、Features:

- 5.6 inch TFT LCD
- Supports Secure Digital (SD) , Multimedia Card (MMC) Memory Stick (MS) memory card formats
- View the pictures from memory cards directly
- Resolution : 320×234 pixels
- Supports high resolution photos
- Automatic start of slide show
- Removable stand allows frame to be displayed vertically or horizontally

## 2、Packaging Check List


- Digital Picture Frame 1piece
- Stand 1piece
- User Manual 1piece
- Power Adapter 1piece

## 3、Specifications

Panel Size	5.6 inches
Resolution	320×234
Brightness	150 cd/m <sup>2</sup>
Contrast	250
Viewing Angle	65/65/45/65 (CR>10,B/L ON)
Response Time	30ms Ton
Screen Size Mode	4:3
File Format Type	JPEG
Max. Photo Size	10 megapixels
Power Requirement	12 V DC
Power Consumption	< 6 W
Operating Temperature	- 10~70 degrees centigrade
Storage Temperature	- 20~80 degrees centigrade

## Product Diagram

### A Top View

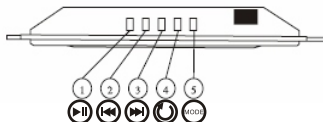


- 1 . Play /Pause and On/Off
2. Previous
3. Next
- 4.Rotate/Slide Show Interval
5. Mode

## Product Diagram

### b. side view


The removable stand can be connected to use your Digital Picture Frame

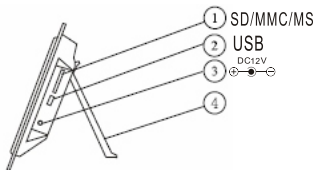


1. Memory card slot
2. USB host
3. Power input jack
4. Stand



## Using Your Digital Picture Frame

Install the stand for tabletop display. Connect the AC adapter.

Insert a memory card in the digital picture frame ( with the card's electrical contacts towards the back of the unit.) If the power is off, press the **PLAY/PAUSE**  button to turn the frame on. A slide show will begin automatically .

To turn the frame off ,press and hold the **PLAY/PAUSE** button for about three seconds.

To pause the slide show, press the **PLAY/PAUSE**  button briefly. The word Pause will appear on the screen briefly and the slide show will be stopped. The current photo will remain on the screen until another button is pressed ,at which time the slide show will resume.

To display the next or previous picture , press the Next button  or  the Previous button.

## Using Your Digital Picture Frame

The Rotate button  allows photos to be turned proper viewing. Press and hold the Rotate  button to set picture changing time of 5s/15s /30s/1m/5m/30m/45m/1h and never. ( The interval time may vary depending on the size of the loading photo)

## Viewing Modes

Press this button to select display mode FILL, ORIGINAL, HEIGHT FIT, AUTO FIT and PAN SCAN.

## **File Saving**

Photos must be saved in the JPG format in order to be viewed on the digital picture frame. Nearly all digital cameras will save in this format by default. Photos that have been saved with certain image editing programs can fail to display properly.

## **Technical Notes:**

1. Your digital picture frames is a sophisticated electronic device. Do not drop or subject the unit to jarring or strong vibrations.
2. Avoid placing the digital photo frame in areas of high humidity or where it might be subjected to splashing.
3. The LCD panel is made of plastic and can be easily damaged. Avoid sharp objects.
4. Use only a soft dry cloth to clean the screen

## **Question/Troubleshooting Guide**

This chapter presents some troubleshooting problems you may encounter while using the device. Even if the following guide fails to solve your problem, please do not disassemble the device, but leave the problems to professional staff.

**1. Question:** What kind of photos does this devices supports?

**Answer :** The frame will display digital photos that are stored in the JPEG format, which is the standard format for nearly all digital cameras. Some cameras allow images to be stored as TIFF or with the frame. Photos of up to 10 million pixels can be displayed.



RAW files as well as JPEG. Only the JPEG format is compatible

**2. Question:** What should I do if the system does not respond when the power is turned on ?

**Answer:** Please make sure the unit is properly connected to a power source. Then turn it off, re-connect the power and turn it on again.

**3. Question:** Why is the memory card not recognized?

**Answer:** The memory card might be inserted backwards or is not pushed in far enough. After inserting the memory card in the right direction , if the card still cannot be read, please turn off the unit and then power it again

Nextar may find it necessary to modify, amend or otherwise change or update this manual.

We may reserve the right to do this at any time, without any prior notice.

All specifications and features are subject to change without notice.

[www.nextar.com](http://www.nextar.com)

Or write us at:

Nextar Inc.

1661 Fairplex Dr.

La Verne, CA 91750

USA