 


Networking Setup Guide

Guide de configuration réseau

Guía de configuración de red

Guia de configuração de rede

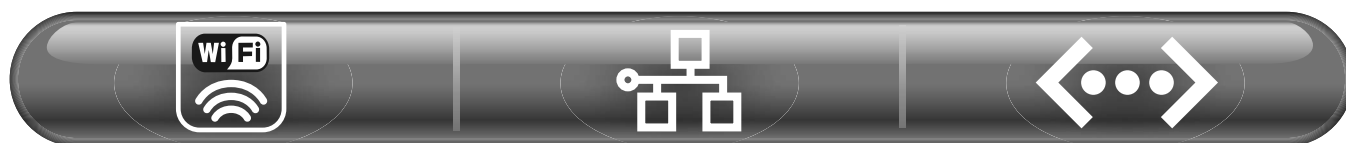

# Kodak ESP

All-in-One Printers • Imprimantes tout-en-un

Impresoras multifunción • Impressoras Multifuncionais

# Choosing a Connection Type

Make sure you completed the steps in the Start Here Guide. Then choose one of the following connection types for your printer, and see the corresponding chapter for instructions.

 
NOTE:

- You can change your connection type later. See the chapter *Configuring Your Printer* in the Extended User Guide.
- For additional networking information or troubleshooting, go to [www.kodak.com/go/inkjetnetworking](http://www.kodak.com/go/inkjetnetworking).

## Wireless (Wi-Fi) connection




To connect your printer to a wireless network, see *Setting Up the Wireless (Wi-Fi) Connection*, page 2.

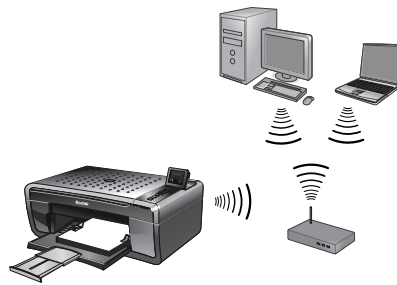

## Ethernet connection



 To connect your printer to a wired network using an Ethernet cable, see *Setting Up the Ethernet Connection*, page 4.

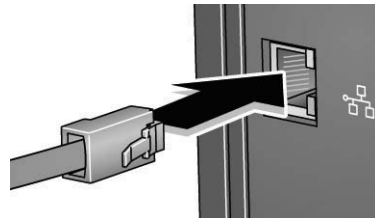

## 2

# Setting Up the Wireless (Wi-Fi) Connection

## Before you connect

You need to:

- Have a functional 802.11 wireless network. Kodak recommends that you use a wireless access point, most commonly a router, that uses Dynamic Host Configuration Protocol (DHCP).
- Determine whether your wireless router supports Wi-Fi Protected Setup (WPS).
- Temporarily disable your firewall until the printer is successfully installed and communicating.

**IMPORTANT:** *If you are unsure of how your network is configured, contact your Internet service provider or your network administrator for assistance.*

## Using the LCD keyboard

On the printer, press ▲, ▼, ◀ or ▶ to select the letters and numbers, using the correct uppercase and lowercase letters. Press **OK** after each character. When you are done, select **DONE**, then press **OK**.

- To erase a character, select **BKSP** (backspace), then press **OK**.
- To change from uppercase to lowercase, select **abc/123**, then press **OK**.
- To change from lowercase to uppercase, select **ABC/123**, then press **OK**.
- To enter punctuation or symbols, select **!@#**, then press **OK**.

## Connecting to a non-WPS wireless router

To connect your printer to your wireless network, you need to know the network name, which is also called the Service Set Identifier (SSID). You can obtain your network name from the wireless router. See the manufacturer's documentation for more information.

If your network has security enabled, you also need to know the security string, which may be a Wired Equivalent Privacy (WEP) key or a Wi-Fi Protected Access (WPA/WPA2) passphrase.

Record your network information in the spaces below, using the correct uppercase and lowercase letters.

Network Name (SSID): \_\_\_\_\_

Security String: \_\_\_\_\_

1. Press **Home**.
2. Press ▼ to select **Network Settings**, then press **OK**.
3. With **WiFi Setup Wizard** selected, press **OK**.

NOTE: The Wi-Fi radio turns on automatically when you select WiFi Setup Wizard.

The printer searches for available wireless networks within range, then displays the list in order of signal strength. If there are more networks than can be shown on the LCD, a ▼ (page down) symbol appears in the bottom right of the display. If you don't see your network in the list, or if you want to change your network, select **Rescan for Wireless Networks**, then press **OK**.

4. If the name of your network is:

Listed	Not Listed
Press ▼ to select your network, then press <b>OK</b> .	Make sure your wireless router is turned on and within range. If your wireless router does not broadcast its SSID: <ol style="list-style-type: none"> <li>Press ▼ to select <b>Unlisted network</b>, then press <b>OK</b>.</li> <li>Use the LCD keyboard to enter your network name.</li> <li>Select <b>WEP</b> or <b>WPA/WPA2</b> as required for your network's security setup, then press <b>OK</b>.</li> </ol>

5. If your network has security enabled, use the LCD keyboard to enter your security string.
6. When the confirmation message appears, press **OK**.  
 If the printer is successfully connected, the Wi-Fi status light should be on.  
 If you are unable to connect your printer, go to [www.kodak.com/go/inkjetnetworking](http://www.kodak.com/go/inkjetnetworking).
7. When the printer is successfully connected, install the KODAK All-in-One Printer Software on your computer. Follow the on-screen instructions to complete your setup.

## Connecting to a WPS wireless router

- Press **Home**.
- Press ▼ to select **Network Settings**, then press **OK**.
- With **WiFi Setup Wizard** selected, press **OK**.  
 NOTE: The Wi-Fi radio turns on automatically when you select Wi-Fi Setup Wizard.
- With **WPS Connect** selected, press **OK**.
- Select one of these two methods of connecting:  
 IMPORTANT: *Before you press **OK** on the printer, make sure you know where the router's button is, or where to enter the generated PIN. If necessary, consult your Internet service provider or router manufacturer's documentation for more information.*

Pressing a Button	Entering a PIN
<ol style="list-style-type: none"> <li>With <b>Push Button Configuration</b> selected, press <b>OK</b>.</li> <li>Press or select the WPS button for your wireless router.                              NOTE: You will have two minutes to press or select the WPS button. It may be a button on the device or a virtual button in the device's software.</li> </ol>	<ol style="list-style-type: none"> <li>Press ▼ to select <b>Generate WPS PIN</b>, then press <b>OK</b>.</li> <li>In your wireless router's software, locate the PIN screen.</li> <li>Enter the PIN you received from the LCD into the PIN screen.</li> </ol>

6. When the confirmation message appears, press **OK**.  
 If the printer is successfully connected, the Wi-Fi status light should be on.  
 If you are unable to connect your printer, go to [www.kodak.com/go/inkjetnetworking](http://www.kodak.com/go/inkjetnetworking).
7. When the printer is successfully connected, install the KODAK All-in-One Printer Software on your computer. Follow the on-screen instructions to complete your setup.

# 3

## Setting Up the Ethernet Connection

 
### Before you connect

You need to:

- Have a functional Ethernet network that includes a router, switch, or hub with an Ethernet port.
- Have a Category 5 (or higher) Ethernet cable.
- Temporarily disable your firewall until the printer is successfully installed and communicating.

### Connecting to an Ethernet network

1. Connect the Ethernet cable into the Ethernet port on the back of the printer.

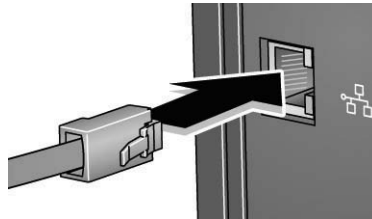

2. Connect the other end of the Ethernet cable into an available Ethernet port on your router, switch, or hub.
3. Install the KODAK All-in-One Printer Software on your computer. Follow the on-screen instructions to complete your setup.

# Kodak

Eastman Kodak Company  
Rochester, NY 14650

© Eastman Kodak Company, 2009



1K5857

Kodak is a trademark of Eastman Kodak Company.  
Specifications subject to change without notice.

P/N 1K5857  
October 2009

Printed in