

# **LWU420**

## **User Manual-Technical Guide**

020-000320-01

**CHRISTIE®**



# LWU420 User Manual-Technical Guide

## User's Manual – Operating Guide Technical

### Example of computer signal



Resolution (H x V)	H. frequency (kHz)	V. frequency (Hz)	Rating	Signal mode
720 x 400	37.9	85.0	VESA	TEXT
640 x 480	31.5	59.9	VESA	VGA (60Hz)
640 x 480	37.9	72.8	VESA	VGA (72Hz)
640 x 480	37.5	75.0	VESA	VGA (75Hz)
640 x 480	43.3	85.0	VESA	VGA (85Hz)
800 x 600	35.2	56.3	VESA	SVGA (56Hz)
800 x 600	37.9	60.3	VESA	SVGA (60Hz)
800 x 600	48.1	72.2	VESA	SVGA (72Hz)
800 x 600	46.9	75.0	VESA	SVGA (75Hz)
800 x 600	53.7	85.1	VESA	SVGA (85Hz)
832 x 624	49.7	74.5		Mac 16" mode
1024 x 768	48.4	60.0	VESA	XGA (60Hz)
1024 x 768	56.5	70.1	VESA	XGA (70Hz)
1024 x 768	60.0	75.0	VESA	XGA (75Hz)
1024 x 768	68.7	85.0	VESA	XGA (85Hz)
1152 x 864	67.5	75.0	VESA	1152 x 864 (75Hz)
1280 x 960	60.0	60.0	VESA	1280 x 960 (60Hz)
1280 x 1024	64.0	60.0	VESA	SXGA (60Hz)
1280 x 1024	80.0	75.0	VESA	SXGA (75Hz)
*1280 x 1024	91.1	85.0	VESA	SXGA (85Hz)
*1600 x 1200	75.0	60.0	VESA	UXGA (60Hz)
1280 x 768	47.7	60.0	VESA	W-XGA (60Hz)
1400 x 1050	65.2	60.0	VESA	SXGA+(60Hz)
1280 x 800	83.5	60.0	VESA	1280 x 800 (60Hz)
1920 x 1200	74.0	60.0	VESA	W-UXGA(60Hz) Reduced Blanking

- NOTE** • Be sure to check jack type, signal level, timing and resolution before connecting this projector to a computer.
- Some computers may have multiple display screen modes. Use of some of these modes will not be possible with this projector.
  - Depending on the input signal, full-size display may not be possible in some cases. Refer to the number of display pixels above.
  - Although the projector can display signals with resolution up to WUXGA (1920x1200), the signal will be converted to the projector's panel resolution before being displayed. The best display performance will be achieved if the resolutions of the input signal and projector panel are identical.
  - Automatic adjustment may not function correctly with some input signals.
  - The image may not be displayed correctly when the input sync signal is a composite sync or a sync on G.
  - The HDMI input does not support the signals marked with \*.

## Initial set signals

### Initial set signals


The following signals are used for the initial settings. The signal timing of some computer models may be different. In such case, adjust the items V POSITION and H POSITION in the IMAGE menu.

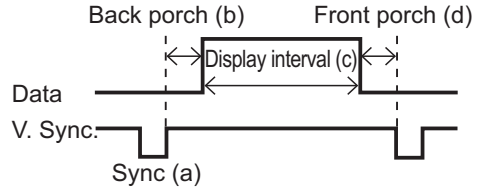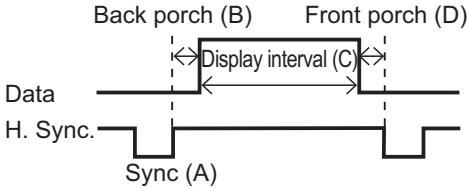

Computer/ Signal	Horizontal signal timing ( $\mu$ s)			
	(A)	(B)	(C)	(D)
TEXT	2.0	3.0	20.3	1.0
VGA (60Hz)	3.8	1.9	25.4	0.6
VGA (72Hz)	1.3	4.1	20.3	0.8
VGA (75Hz)	2.0	3.8	20.3	0.5
VGA (85Hz)	1.6	2.2	17.8	1.6
SVGA (56Hz)	2.0	3.6	22.2	0.7
SVGA (60Hz)	3.2	2.2	20.0	1.0
SVGA (72Hz)	2.4	1.3	16.0	1.1
SVGA (75Hz)	1.6	3.2	16.2	0.3
SVGA (85Hz)	1.1	2.7	14.2	0.6
Mac 16" mode	1.1	3.9	14.5	0.6
XGA (60Hz)	2.1	2.5	15.8	0.4
XGA (70Hz)	1.8	1.9	13.7	0.3
XGA (75Hz)	1.2	2.2	13.0	0.2
XGA (85Hz)	1.0	2.2	10.8	0.5
1152 x 864 (75Hz)	1.2	2.4	10.7	0.6
1280 x 960 (60Hz)	1.0	2.9	11.9	0.9
SXGA (60Hz)	1.0	2.3	11.9	0.4
SXGA (75Hz)	1.1	1.8	9.5	0.1
SXGA (85Hz)	1.0	1.4	8.1	0.4
UXGA (60Hz)	1.2	1.9	9.9	0.4
W-XGA (60Hz)	1.7	2.5	16.0	0.8
SXGA+(60Hz)	1.2	2.0	11.4	0.7
1280 x 800(60Hz)	1.6	2.4	15.3	0.8
W-UXGA(60Hz) Reduced Blanking	0.208	0.519	12.47	0.312

Computer/ Signal	Vertical signal timing (lines)			
	(a)	(b)	(c)	(d)
TEXT	3	42	400	1
VGA (60Hz)	2	33	480	10
VGA (72Hz)	3	28	480	9
VGA (75Hz)	3	16	480	1
VGA (85Hz)	3	25	480	1
SVGA (56Hz)	2	22	600	1
SVGA (60Hz)	4	23	600	1
SVGA (72Hz)	6	23	600	37
SVGA (75Hz)	3	21	600	1
SVGA (85Hz)	3	27	600	1
Mac 16" mode	3	39	624	1
XGA (60Hz)	6	29	768	3
XGA (70Hz)	6	29	768	3
XGA (75Hz)	3	28	768	1
XGA (85Hz)	3	36	768	1
1152 x 864 (75Hz)	3	32	864	1
1280 x 960 (60Hz)	3	36	960	1
SXGA(60Hz)	3	38	1024	1
SXGA (75Hz)	3	38	1024	1
SXGA (85Hz)	3	44	1024	1
UXGA (60Hz)	3	46	1200	1
W-XGA (60Hz)	3	23	768	1
SXGA+(60Hz)	3	33	1050	1
1280 x 800(60Hz)	3	24	800	1
W-UXGA(60Hz) Reduced Blanking	6	26	1200	3


Connection to the ports

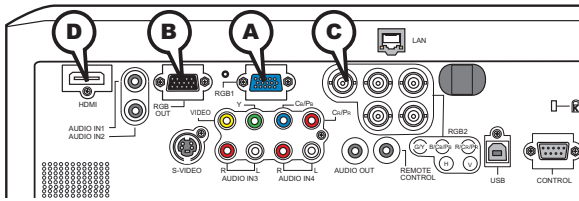

**A) RGB 1, B) RGB OUT**

D-sub 15pin mini shrink jack

 - Video signal: RGB separate, Analog, 0.7Vp-p, 75Ω terminated (positive)
- H/V. sync. signal: TTL level (positive/negative)
- Composite sync. signal: TTL level



At RGB signal


Pin	Signal	Pin	Signal
1	Video Red	9	(No connection)
2	Video Green	10	Ground
3	Video Blue	11	(No connection)
4	(No connection)	12	<b>A</b> : SDA (DDC data), <b>B</b> : (No connection)
5	Ground	13	H. sync / Composite sync.
6	Ground Red	14	V. sync.
7	Ground Green	15	<b>A</b> : SCL (DDC clock), <b>B</b> : (No connection)
8	Ground Blue		

**C) RGB 2(G/Y, B/Cb/Pb, R/Cr/Pr, H, V)**

 - BNC jack x 5
- Video : Analog 0.7Vp-p, 75Ω terminator
- H/V, sync. : TTL level (positive/negative)
- Composite sync. : TTL level


**D) HDMI**

- Type : Digital audio/video connector
- Audio signal : Linear PCM (Sampling rate; 32/44.1/48 kHz)



Pin	Signal	Pin	Signal	Pin	Signal
1	T.M.D.S. Data2 +	8	T.M.D.S. Data0 Shield	15	SCL
2	T.M.D.S. Data2 Shield	9	T.M.D.S. Data0 -	16	SDA
3	T.M.D.S. Data2 -	10	T.M.D.S. Clock +	17	DDC/CEC Ground
4	T.M.D.S. Data1 +	11	T.M.D.S. Clock Shield	18	+5V Power
5	T.M.D.S. Data1 Shield	12	T.M.D.S. Clock -	19	Hot Plug Detect
6	T.M.D.S. Data1 -	13	CEC		
7	T.M.D.S. Data0 +	14	Reserved(N.C. on device)		

**Connection to the ports (continued)**

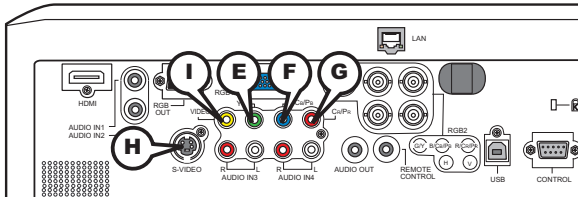

**COMPONENT VIDEO (E), (F) C<sub>B</sub>/P<sub>B</sub>, (G) C<sub>R</sub>/P<sub>R</sub>**

RCA jack x3

- System: 480i@60, 480p@60, 576i@50, 720p@50/60, 1080i@50/60, 1080p@50/60

Port	Signal
Y	Component video Y, 1.0±0.1Vp-p, 75Ω terminator with composite sync
C <sub>B</sub> /P <sub>B</sub>	Component video C <sub>B</sub> /P <sub>B</sub> , 0.7±0.1Vp-p, 75Ω terminator
C <sub>R</sub> /P <sub>R</sub>	Component video C <sub>R</sub> /P <sub>R</sub> , 0.7±0.1Vp-p, 75Ω terminator

**(H) S-VIDEO**

Mini DIN 4pin jack




- System: NTSC, PAL, SECAM, PAL-M, PAL-N, NTSC4.43, PAL(60Hz)

Pin	Signal
1	Color signal 0.286Vp-p (NTSC, burst), 75Ω terminator Color signal 0.300Vp-p (PAL/SECAM, burst) 75Ω terminator
2	Brightness signal, 1.0Vp-p, 75Ω terminator
3	Ground
4	Ground

**(I) VIDEO**

RCA jack

- System: NTSC, PAL, SECAM, PAL-M, PAL-N, NTSC4.43, PAL(60Hz)
- 1.0±0.1Vp-p, 75Ω terminator

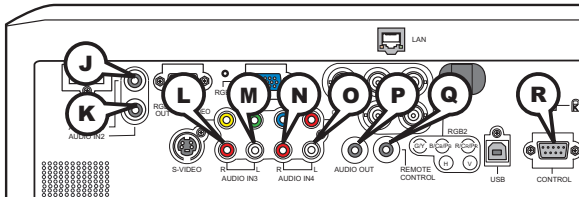

**J AUDIO IN 1, K AUDIO IN 2**

Ø3.5 stereo mini jack

- 500 mVrms 47kΩ terminator

**AUDIO IN 3 L R, M L, AUDIO IN 4 N R, O L**

RCA jack x2

- 500 mVrms 47kΩ terminator

**P AUDIO OUT**

Ø3.5 stereo mini jack

- 500 mVrms 1kΩ output impedance

 
**Q REMOTE CONTROL**

Ø3.5 stereo mini jack

- To be connected with the remote control that came with the projector.

**R CONTROL**


D-sub 9pin plug



• About the details of RS-232C communication, please refer to the following RS-232C Communication in this manual.

Pin	Signal	Pin	Signal	Pin	Signal
1	(No connection)	4	(No connection)	7	RTS
2	RD	5	Ground	8	CTS
3	TD	6	(No connection)	9	(No connection)

**Connection to the ports (continued)**

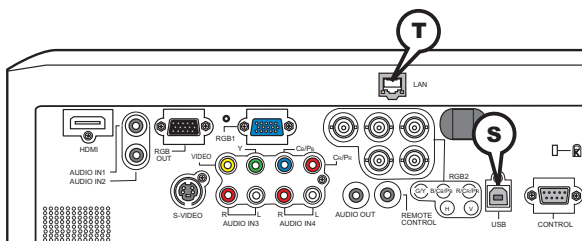

**Ⓢ USB**


USB B type jack



Pin	Signal
1	+5V
2	- Data
3	+ Data
4	Ground

**Ⓣ LAN**


RJ-45 jack

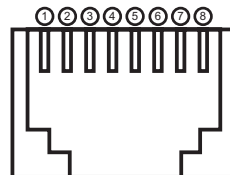

Pin	Signal	Pin	Signal	Pin	Signal
1	TX+	4	-	7	-
2	TX-	5	-	8	-
3	RX+	6	RX-		



**RS-232C Communication**

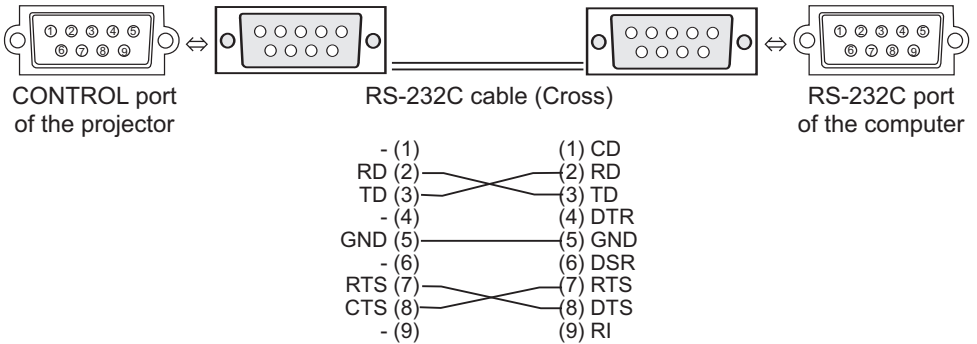

**Connecting the cable**

1. Turn off the projector and the computer.
2. Connect the CONTROL port of the projector with a RS-232C port of the computer by a RS-232C cable (cross). Use the cable that fulfills the specification shown in the previous page.
3. Turn the computer on, and after the computer has started up turn the projector on.

**Communications setting**

19200bps, 8N1

**1. Protocol**

Consist of header (7 bytes) + command data (6 bytes).

**2. Header**

BE + EF + 03 + 06 + 00 + CRC\_low + CRC\_high

CRC\_low : Lower byte of CRC flag for command data

CRC\_high : Upper byte of CRC flag for command data

**3. Command data**

Command data chart

byte_0	byte_1	byte_2	byte_3	byte_4	byte_5
Action		Type		Setting code	
low	high	low	high	low	high

Action (byte\_0 - 1)

Action	Classification	Content
1	SET	Change setting to desired value.
2	GET	Read projector internal setup value.
4	INCREMENT	Increment setup value by 1.
5	DECREMENT	Decrement setup value by 1.
6	EXECUTE	Run a command.

**Requesting projector status (Get command)**

- (1) Send the request code Header + Command data ('02H'+ '00H'+ type (2 bytes)+'00H' + '00H') from the computer to the projector.
- (2) The projector returns the response code '1DH'+ data (2 bytes) to the computer.

**Changing the projector settings (Set command)**

- (1) Send the setting code Header + Command data ('01H'+ '00H'+ type (2 bytes) + setting code (2 bytes)) from the computer to the projector.
- (2) The projector changes the setting based on the above setting code.
- (3) The projector returns the response code '06H' to the computer.

**Using the projector default settings (Reset Command)**

- (1) The computer sends the default setting code Header + Command data ('06H'+ '00H' + type (2 bytes) + '00H'+ '00H') to the projector.
- (2) The projector changes the specified setting to the default value.
- (3) The projector returns the response code '06H' to the computer.

**Increasing the projector setting value (Increment command)**

- (1) The computer sends the increment code Header + Command data ('04H'+ '00H'+ type (2 bytes) + '00H'+ '00H') to the projector.
- (2) The projector increases the setting value on the above setting code.
- (3) The projector returns the response code '06H' to the computer.

**Decreasing the projector setting value (Decrement command)**

- (1) The computer sends the decrement code Header + Command data ('05H'+ '00H'+ type (2 bytes) + '00H' + '00H') to the projector.
- (2) The projector decreases the setting value on the above setting code.
- (3) The projector returns the response code '06H' to the computer.

**When the projector cannot understand the received command**

When the projector cannot understand the received command, the error code '15H' is sent back to the computer.

Sometimes the projector cannot properly receive the command. In such a case, the command is not executed and the error code '15H' is sent back to the computer. If this error code is returned, send the same command again.

**When the projector cannot execute the received command.**

When the projector cannot execute the received command, the error code '1CH' + 'xxxxH' is sent back to the computer. When the data length is greater than indicated by the data length code, the projector ignore the excess data code.

Conversely when the data length is shorter than indicated by the data length code, an error code will be returned to the computer.

**NOTE** • Operation cannot be guaranteed when the projector receives an undefined command or data.

- Provide an interval of at least 40ms between the response code and any other code.
- The projector outputs test data when the power supply is switched ON, and when the lamp is lit. Ignore this data.
- Commands are not accepted during warm-up.

**Command Control via the Network**

**Communication Port**

The following two ports are assigned for the command control.

- TCP #23
- TCP #9715

**Command Control Settings**

Configure the following items from a web browser when command control is used.

Port Settings		
<b>Network Control Port1 (Port: 23)</b>	Port open	Click the <b>[Enable]</b> check box to open <b>[Network Control Port1 (Port: 23)]</b> to use TCP #23. Default setting is "Enable".
	Authentication	Click the <b>[Enable]</b> check box for the <b>[Authentication]</b> setting when authentication is required. Default setting is "Disable".
<b>Network Control Port2 (Port: 9715)</b>	Port open	Click the <b>[Enable]</b> check box to open <b>[Network Control Port2 (Port: 9715)]</b> to use TCP #9715. Default setting is "Enable".
	Authentication	Click the <b>[Enable]</b> check box for the <b>[Authentication]</b> setting when authentication is required. Default setting is "Enable".

When the authentication setting is enabled, the following settings are required.

Security Settings		
<b>Network Control</b>	Authentication Password	Enter the desired authentication password. This setting will be the same for <b>[Network Control Port1 (Port: 23)]</b> and <b>[Network Control Port2 (Port: 9715)]</b> . Default setting is blank.
	Re-enter Authentication Password	

## Command Format

### [TCP #23]

#### 1. Protocol

Consist of header (7 bytes) + command data (6 bytes)

#### 2. Header

BE + EF + 03 + 06 + 00 + CRC\_low + CRC\_high

CRC\_low: Lower byte of CRC flag for command data

CRC\_high: Upper byte of CRC flag for command data

#### 3. Command data

Command data chart

byte_0	byte_1	byte_2	byte_3	byte_4	byte_5
Action		Type		Setting code	
low	high	low	high	low	high

Action (byte\_0 - 1)

Action	Classification	Content
1	Set	Change setting to desired value.
2	Get	Read projector internal setup value.
4	Increment	Increment setup value by 1.
5	Decrement	Decrement setup value by 1.
6	Execute	Run a command.

#### Requesting projector status (Get command)

- (1) Send the following request code from the PC to the projector.  
*Header + Command data ('02H' + '00H' + type (2 bytes) + '00H' + '00H')*
- (2) The projector returns the response code '1DH' + data (2 bytes) to the PC.

#### Changing the projector settings (Set command)

- (1) Send the following setting code from the PC to the projector.  
*Header + Command data ('01H' + '00H' + type (2 bytes) + setting code (2 bytes))*
- (2) The projector changes the setting based on the above setting code.
- (3) The projector returns the response code '06H' to the PC.

#### Using the projector default settings (Reset Command)

- (1) The PC sends the following default setting code to the projector.  
*Header + Command data ('06H' + '00H' + type (2 bytes) + '00H' + '00H')*
- (2) The projector changes the specified setting to the default value.
- (3) The projector returns the response code '06H' to the PC.

#### Increasing the projector setting value (Increment command)

- (1) The PC sends the following increment code to the projector.  
*Header + Command data ('04H' + '00H' + type (2 bytes) + '00H' + '00H')*
- (2) The projector increases the setting value on the above setting code.
- (3) The projector returns the response code '06H' to the PC.

**Decreasing the projector setting value (Decrement command)**

- (1) The PC sends the following decrement code to the projector.  
*Header + Command data ('05H' + '00H' + type (2 bytes) + '00H' + '00H')*
- (2) The projector decreases the setting value on the above setting code.
- (3) The projector returns the response code '06H' to the PC.

**When the projector cannot understand the received command**

When the projector cannot understand the received command, the error code '15H' is sent back to the PC.

Sometimes the projector cannot properly receive the command. In such a case, the command is not executed and the error code '15H' is sent back to the PC. If this error code is returned, send the same command again.

**When the projector cannot execute the received command.**

When the projector cannot execute the received command, the error code '1CH' + 'xxxxH' is sent back to the PC.

When the data length is greater than indicated by the data length code, the projector ignore the excess data code. Conversely when the data length is shorter than indicated by the data length code, an error code will be returned to the PC.

**When authentication error occurred.**

When authentication error occurred, the error code the '1FH' + '0400H' is sent back to the PC.

**NOTE** • Operation cannot be guaranteed when the projector receives an undefined command or data.

- Provide an interval of at least 40ms between the response code and any other code.
- Commands are not accepted during warm-up.

**[TCP #9715]**

**1. Protocol**

Consist of header (1 byte) + data length (1 byte) + command data (13 bytes) + check sum (1 bytes) + connection ID (1 byte).

**2. Header**

02, Fixed

**3. Data Length**

Network control commands byte length (0D, Fixed)

**4. Command data**

Network control commands that start with BE EF (13bytes).

**5. Check Sum**

This is the value to make zero on the addition of the lower 8 bits from the header to the checksum.

**6. Connection ID**

Random value from 0 to 255 (This value is attached to the reply data).

## 7. Reply Data

The connection ID (the data is same as the connection ID data on the sending data format) is attached to the Network control commands reply data.

ACK reply: '06H' + 'xxH'

NAK reply: '15H' + 'xxH'

Error reply: '1CH' + 'xxxxH' + 'xxH'

Data reply: '1DH' + 'xxxxH' + 'xxH'

Projector busy reply: '1FH' + 'xxxxH' + 'xxH'

Authentication error reply: '1FH' + '0400H' + 'xxH'

('xxH' : connection ID)

## Automatic Connection Break

The TCP connection will be automatically disconnected after there is no communication for 30 seconds after being established.

## Authentication

The projector does not accept commands without authentication success when authentication is enabled. The projector uses a challenge response type authentication with an MD5 (Message Digest 5) algorithm. When the projector is using a LAN, a random 8 bytes will be returned if authentication is enabled. Bind this received 8 bytes and the authentication password and digest this data with the MD5 algorithm and add this in front of the commands to send.

Following is a sample if the authentication password is set to "password" and the random 8 bytes are "a572f60c".

- 1) Select the projector.
- 2) Receive the random 8 bytes "a572f60c" from the projector.
- 3) Bind the random 8 bytes "a572f60c" and the authentication password "password" and it becomes "a572f60cpassword".
- 4) Digest this bind "a572f60cpassword" with MD5 algorithm.  
It will be "e3d97429adffa11bce1f7275813d4bde".
- 5) Add this "e3d97429adffa11bce1f7275813d4bde" in front of the commands and send the data.  
Send "e3d97429adffa11bce1f7275813d4bde"+command.
- 6) When the sending data is correct, the command will be performed and the reply data will be returned. Otherwise, an authentication error will be returned.

**NOTE** • As for the transmission of the second or subsequent commands, the authentication data can be omitted when the same connection.

**RS-232C Communication / Network command table**

Names	Operation Type	Header				Command Data				
						CRC	Action	Type	Setting Code	
Power	Set	TURN OFF	BE EF	03 06 00	2A D3	01 00	00 60	00 00		
		TURN ON	BE EF	03 06 00	BA D2	01 00	00 60	01 00		
	Get		BE EF	03 06 00	19 D3	02 00	00 60	00 00		
		(Example Return)	00 00	01 00	02 00	(Off)	(On)	(Cool Down)		
Input Source	Set	HDMI	BE EF	03 06 00	0E D2	01 00	00 20	03 00		
		RGB1	BE EF	03 06 00	FE D2	01 00	00 20	00 00		
		RGB2	BE EF	03 06 00	3E D0	01 00	00 20	04 00		
		VIDEO	BE EF	03 06 00	6E D3	01 00	00 20	01 00		
		S-VIDEO	BE EF	03 06 00	9E D3	01 00	00 20	02 00		
		COMPONENT	BE EF	03 06 00	AE D1	01 00	00 20	05 00		
	Get	BE EF	03 06 00	CD D2	02 00	00 20	00 00			
Error Status	Get		BE EF	03 06 00	D9 D8	02 00	20 60	00 00		
		(Example Return)	00 00	01 00	02 00	03 00	(Normal)	(Cover error)	(Fan error)	(Lamp error)
		04 00	05 00	06 00	07 00	(Temp error)	(Air flow error)	(Lamp time error)	(Cold error)	
		08 00	(Filter error)							
BRIGHTNESS	Get	BE EF	03 06 00	89 D2	02 00	03 20	00 00			
	Increment	BE EF	03 06 00	EF D2	04 00	03 20	00 00			
	Decrement	BE EF	03 06 00	3E D3	05 00	03 20	00 00			
BRIGHTNESS Reset	Execute	BE EF	03 06 00	58 D3	06 00	00 70	00 00			
CONTRAST	Get	BE EF	03 06 00	FD D3	02 00	04 20	00 00			
	Increment	BE EF	03 06 00	9B D3	04 00	04 20	00 00			
	Decrement	BE EF	03 06 00	4A D2	05 00	04 20	00 00			
CONTRAST Reset	Execute	BE EF	03 06 00	A4 D2	06 00	01 70	00 00			
PICTURE MODE	Set	NORMAL	BE EF	03 06 00	23 F6	01 00	BA 30	00 00		
		CINEMA	BE EF	03 06 00	B3 F7	01 00	BA 30	01 00		
		DYNAMIC	BE EF	03 06 00	E3 F4	01 00	BA 30	04 00		
		BOARD (BLACK)	BE EF	03 06 00	E3 EF	01 00	BA 30	20 00		
		BOARD (GREEN)	BE EF	03 06 00	73 EE	01 00	BA 30	21 00		
		WHITE BOARD	BE EF	03 06 00	83 EE	01 00	BA 30	22 00		
		DAY TIME	BE EF	03 06 00	E3 C7	01 00	BA 30	40 00		
	Get	BE EF	03 06 00	10 F6	02 00	BA 30	00 00			
	(Example Return)	00 00	01 00	04 00	10 00	(Normal)	(CINEMA)	(DYNAMIC)	(CUSTOM)	
20 00	21 00	22 00	40 00	(BOARD(BLACK))	(BOARD(GREEN))	(WHITEBOARD)	(DAY TIME)			

## RS-232C Communication / Network command table

Names	Operation Type	Header				Command Data			
						CRC	Action	Type	Setting Code
GAMMA	Set	#1 DEFAULT	BE EF	03	06 00	07 E9	01 00	A1 30	20 00
		#2 DEFAULT	BE EF	03	06 00	97 E8	01 00	A1 30	21 00
		#3 DEFAULT	BE EF	03	06 00	67 E8	01 00	A1 30	22 00
		#4 DEFAULT	BE EF	03	06 00	F7 E9	01 00	A1 30	23 00
		#5 DEFAULT	BE EF	03	06 00	C7 EB	01 00	A1 30	24 00
		#6 DEFAULT	BE EF	03	06 00	57 EA	01 00	A1 30	25 00
		#1 CUSTOM	BE EF	03	06 00	07 FD	01 00	A1 30	10 00
		#2 CUSTOM	BE EF	03	06 00	97 FC	01 00	A1 30	11 00
		#3 CUSTOM	BE EF	03	06 00	67 FC	01 00	A1 30	12 00
		#4 CUSTOM	BE EF	03	06 00	F7 FD	01 00	A1 30	13 00
		#5 CUSTOM	BE EF	03	06 00	C7 FF	01 00	A1 30	14 00
		#6 CUSTOM	BE EF	03	06 00	57 FE	01 00	A1 30	15 00
			Get	BE EF	03	06 00	F4 F0	02 00	A1 30
User Gamma Pattern	Set	Off	BE EF	03	06 00	FB FA	01 00	80 30	00 00
		9step Gray Scale	BE EF	03	06 00	6B FB	01 00	80 30	01 00
		15step Gray Scale	BE EF	03	06 00	9B FB	01 00	80 30	02 00
		Ramp	BE EF	03	06 00	0B FA	01 00	80 30	03 00
	Get	BE EF	03	06 00	C8 FA	02 00	80 30	00 00	
User Gamma Point 1	Get	BE EF	03	06 00	08 FE	02 00	90 30	00 00	
	Increment	BE EF	03	06 00	6E FE	04 00	90 30	00 00	
	Decrement	BE EF	03	06 00	BF FE	05 00	90 30	00 00	
User Gamma Point 2	Get	BE EF	03	06 00	F4 FF	02 00	91 30	00 00	
	Increment	BE EF	03	06 00	92 FF	04 00	91 30	00 00	
	Decrement	BE EF	03	06 00	43 FE	05 00	91 30	00 00	
User Gamma Point 3	Get	BE EF	03	06 00	B0 FF	02 00	92 30	00 00	
	Increment	BE EF	03	06 00	D6 FF	04 00	92 30	00 00	
	Decrement	BE EF	03	06 00	07 FE	05 00	92 30	00 00	
User Gamma Point 4	Get	BE EF	03	06 00	4C FE	02 00	93 30	00 00	
	Increment	BE EF	03	06 00	2A FE	04 00	93 30	00 00	
	Decrement	BE EF	03	06 00	FB FF	05 00	93 30	00 00	
User Gamma Point 5	Get	BE EF	03	06 00	38 FF	02 00	94 30	00 00	
	Increment	BE EF	03	06 00	5E FF	04 00	94 30	00 00	
	Decrement	BE EF	03	06 00	8F FE	05 00	94 30	00 00	
User Gamma Point 6	Get	BE EF	03	06 00	C4 FE	02 00	95 30	00 00	
	Increment	BE EF	03	06 00	A2 FE	04 00	95 30	00 00	
	Decrement	BE EF	03	06 00	73 FF	05 00	95 30	00 00	
User Gamma Point 7	Get	BE EF	03	06 00	80 FE	02 00	96 30	00 00	
	Increment	BE EF	03	06 00	E6 FE	04 00	96 30	00 00	
	Decrement	BE EF	03	06 00	37 FF	05 00	96 30	00 00	
User Gamma Point 8	Get	BE EF	03	06 00	7C FF	02 00	97 30	00 00	
	Increment	BE EF	03	06 00	1A FF	04 00	97 30	00 00	
	Decrement	BE EF	03	06 00	CB FE	05 00	97 30	00 00	



Names	Operation Type	Header				Command Data			
						CRC	Action	Type	Setting Code
COLOR TEMP	Set	#1 HIGH	BE EF	03	06 00	0B F5	01 00	B0 30	03 00
		#2 MID	BE EF	03	06 00	9B F4	01 00	B0 30	02 00
		#3 LOW	BE EF	03	06 00	6B F4	01 00	B0 30	01 00
		#4 Hi-BRIGHT-1	BE EF	03	06 00	3B F2	01 00	B0 30	08 00
		#5 Hi-BRIGHT-2	BE EF	03	06 00	AB F3	01 00	B0 30	09 00
		#6 Hi-BRIGHT-3	BE EF	03	06 00	5B F3	01 00	B0 30	0A 00
		#1 CUSTOM (HIGH)	BE EF	03	06 00	CB F8	01 00	B0 30	13 00
		#2 CUSTOM (MID)	BE EF	03	06 00	5B F9	01 00	B0 30	12 00
		#3 CUSTOM (LOW)	BE EF	03	06 00	AB F9	01 00	B0 30	11 00
		#4 CUSTOM (Hi-BRIGHT-1)	BE EF	03	06 00	FB FF	01 00	B0 30	18 00
		#5 CUSTOM (Hi-BRIGHT-2)	BE EF	03	06 00	6B FE	01 00	B0 30	19 00
#6 CUSTOM (Hi-BRIGHT-3)	BE EF	03	06 00	9B FE	01 00	B0 30	1A 00		
	Get	BE EF	03	06 00	C8 F5	02 00	B0 30	00 00	
COLOR TEMP GAIN R	Get	BE EF	03	06 00	34 F4	02 00	B1 30	00 00	
	Increment	BE EF	03	06 00	52 F4	04 00	B1 30	00 00	
	Decrement	BE EF	03	06 00	83 F5	05 00	B1 30	00 00	
COLOR TEMP GAIN G	Get	BE EF	03	06 00	70 F4	02 00	B2 30	00 00	
	Increment	BE EF	03	06 00	16 F4	04 00	B2 30	00 00	
	Decrement	BE EF	03	06 00	C7 F5	05 00	B2 30	00 00	
COLOR TEMP GAIN B	Get	BE EF	03	06 00	8C F5	02 00	B3 30	00 00	
	Increment	BE EF	03	06 00	EA F5	04 00	B3 30	00 00	
	Decrement	BE EF	03	06 00	3B F4	05 00	B3 30	00 00	
COLOR TEMP OFFSET R	Get	BE EF	03	06 00	04 F5	02 00	B5 30	00 00	
	Increment	BE EF	03	06 00	62 F5	04 00	B5 30	00 00	
	Decrement	BE EF	03	06 00	B3 F4	05 00	B5 30	00 00	
COLOR TEMP OFFSET G	Get	BE EF	03	06 00	40 F5	02 00	B6 30	00 00	
	Increment	BE EF	03	06 00	26 F5	04 00	B6 30	00 00	
	Decrement	BE EF	03	06 00	F7 F4	05 00	B6 30	00 00	
COLOR TEMP OFFSET B	Get	BE EF	03	06 00	BC F4	02 00	B7 30	00 00	
	Increment	BE EF	03	06 00	DA F4	04 00	B7 30	00 00	
	Decrement	BE EF	03	06 00	0B F5	05 00	B7 30	00 00	
COLOR	Get	BE EF	03	06 00	B5 72	02 00	02 22	00 00	
	Increment	BE EF	03	06 00	D3 72	04 00	02 22	00 00	
	Decrement	BE EF	03	06 00	02 73	05 00	02 22	00 00	
COLOR Reset	Execute	BE EF	03	06 00	80 D0	06 00	0A 70	00 00	
TINT	Get	BE EF	03	06 00	49 73	02 00	03 22	00 00	
	Increment	BE EF	03	06 00	2F 73	04 00	03 22	00 00	
	Decrement	BE EF	03	06 00	FE 72	05 00	03 22	00 00	
TINT Reset	Execute	BE EF	03	06 00	7C D1	06 00	0B 70	00 00	
SHARPNESS	Get	BE EF	03	06 00	F1 72	02 00	01 22	00 00	
	Increment	BE EF	03	06 00	97 72	04 00	01 22	00 00	
	Decrement	BE EF	03	06 00	46 73	05 00	01 22	00 00	
SHARPNESS Reset	Execute	BE EF	03	06 00	C4 D0	06 00	09 70	00 00	

**RS-232C Communication / Network command table**

Names	Operation Type	Header					Command Data		
						CRC	Action	Type	Setting Code
MY MEMORY Load	Set	1	BE EF	03	06 00	0E D7	01 00	14 20	00 00
		2	BE EF	03	06 00	9E D6	01 00	14 20	01 00
		3	BE EF	03	06 00	6E D6	01 00	14 20	02 00
		4	BE EF	03	06 00	FE D7	01 00	14 20	03 00
MY MEMORY Save	Set	1	BE EF	03	06 00	F2 D6	01 00	15 20	00 00
		2	BE EF	03	06 00	62 D7	01 00	15 20	01 00
		3	BE EF	03	06 00	92 D7	01 00	15 20	02 00
		4	BE EF	03	06 00	02 D6	01 00	15 20	03 00
PROGRESSIVE	Set	TURN OFF	BE EF	03	06 00	4A 72	01 00	07 22	00 00
		TV	BE EF	03	06 00	DA 73	01 00	07 22	01 00
		FILM	BE EF	03	06 00	2A 73	01 00	07 22	02 00
	Get	BE EF	03	06 00	79 72	02 00	07 22	00 00	
3D-YCS	Set	TURN OFF	BE EF	03	06 00	E6 70	01 00	0A 22	00 00
		MOVIE	BE EF	03	06 00	76 71	01 00	0A 22	01 00
		STILL IMAGE	BE EF	03	06 00	86 71	01 00	0A 22	02 00
	Get	BE EF	03	06 00	D5 70	02 00	0A 22	00 00	
VIDEO NR	Set	LOW	BE EF	03	06 00	26 72	01 00	06 22	01 00
		MIDDLE	BE EF	03	06 00	D6 72	01 00	06 22	02 00
		HIGH	BE EF	03	06 00	46 73	01 00	06 22	03 00
	Get	BE EF	03	06 00	85 73	02 00	06 22	00 00	
ASPECT	Set	4:3	BE EF	03	06 00	9E D0	01 00	08 20	00 00
		16:9	BE EF	03	06 00	0E D1	01 00	08 20	01 00
		REAL	BE EF	03	06 00	5E D7	01 00	08 20	08 00
		14:9	BE EF	03	06 00	CE D6	01 00	08 20	09 00
		16:10	BE EF	03	06 00	3E D6	01 00	08 20	0A 00
	NORMAL	BE EF	03	06 00	5E DD	01 00	08 20	10 00	
Get	BE EF	03	06 00	AD D0	02 00	08 20	00 00		
OVER SCAN	Get	BE EF	03	06 00	91 70	02 00	09 22	00 00	
	Increment	BE EF	03	06 00	F7 70	04 00	09 22	00 00	
	Decrement	BE EF	03	06 00	26 71	05 00	09 22	00 00	
OVER SCAN Reset	Execute	BE EF	03	06 00	EC D9	06 00	27 70	00 00	
V POSITION	Get	BE EF	03	06 00	0D 83	02 00	00 21	00 00	
	Increment	BE EF	03	06 00	6B 83	04 00	00 21	00 00	
	Decrement	BE EF	03	06 00	BA 82	05 00	00 21	00 00	
V POSITION Reset	Execute	BE EF	03	06 00	E0 D2	06 00	02 70	00 00	
H POSITION	Get	BE EF	03	06 00	F1 82	02 00	01 21	00 00	
	Increment	BE EF	03	06 00	97 82	04 00	01 21	00 00	
	Decrement	BE EF	03	06 00	46 83	05 00	01 21	00 00	
H POSITION Reset	Execute	BE EF	03	06 00	1C D3	06 00	03 70	00 00	
H PHASE	Get	BE EF	03	06 00	49 83	02 00	03 21	00 00	
	Increment	BE EF	03	06 00	2F 83	04 00	03 21	00 00	
	Decrement	BE EF	03	06 00	FE 82	05 00	03 21	00 00	
H SIZE	Get	BE EF	03	06 00	B5 82	02 00	02 21	00 00	
	Increment	BE EF	03	06 00	D3 82	04 00	02 21	00 00	
	Decrement	BE EF	03	06 00	02 83	05 00	02 21	00 00	
H SIZE Reset	Execute	BE EF	03	06 00	68 D2	06 00	04 70	00 00	
AUTO ADJUST	Execute	BE EF	03	06 00	91 D0	06 00	0A 20	00 00	

Names	Operation Type	Header				Command Data			
						CRC	Action	Type	Setting Code
COLOR SPACE	Set	AUTO	BE EF	03 06 00	0E 72	01 00	04 22	00 00	
		RGB	BE EF	03 06 00	9E 73	01 00	04 22	01 00	
		SMPTE240	BE EF	03 06 00	6E 73	01 00	04 22	02 00	
		REC709	BE EF	03 06 00	FE 72	01 00	04 22	03 00	
		REC601	BE EF	03 06 00	CE 70	01 00	04 22	04 00	
	Get	BE EF	03 06 00	3D 72	02 00	04 22	00 00		
COMPONENT	Set	COMPONENT	BE EF	03 06 00	4A D7	01 00	17 20	00 00	
		SCART RGB	BE EF	03 06 00	DA D6	01 00	17 20	01 00	
	Get	BE EF	03 06 00	79 D7	02 00	17 20	00 00		
C-VIDEO FORMAT	Set	AUTO	BE EF	03 06 00	A2 70	01 00	11 22	0A 00	
		NTSC	BE EF	03 06 00	C2 74	01 00	11 22	04 00	
		PAL	BE EF	03 06 00	52 75	01 00	11 22	05 00	
		SECAM	BE EF	03 06 00	52 70	01 00	11 22	09 00	
		NTSC4.43	BE EF	03 06 00	62 77	01 00	11 22	02 00	
		M-PAL	BE EF	03 06 00	C2 71	01 00	11 22	08 00	
	N-PAL	BE EF	03 06 00	32 74	01 00	11 22	07 00		
Get	BE EF	03 06 00	31 76	02 00	11 22	00 00			
S-VIDEO FORMAT	Set	AUTO	BE EF	03 06 00	E6 70	01 00	12 22	0A 00	
		NTSC	BE EF	03 06 00	86 74	01 00	12 22	04 00	
		PAL	BE EF	03 06 00	16 75	01 00	12 22	05 00	
		SECAM	BE EF	03 06 00	16 70	01 00	12 22	09 00	
		NTSC4.43	BE EF	03 06 00	26 77	01 00	12 22	02 00	
		M-PAL	BE EF	03 06 00	86 71	01 00	12 22	08 00	
	N-PAL	BE EF	03 06 00	76 74	01 00	12 22	07 00		
Get	BE EF	03 06 00	75 76	02 00	12 22	00 00			
HDMI	Set	AUTO	BE EF	03 06 00	86 D8	01 00	22 20	00 00	
		NORMAL	BE EF	03 06 00	16 D9	01 00	22 20	01 00	
		ENHANCED	BE EF	03 06 00	E6 D9	01 00	22 20	02 00	
	Get	BE EF	03 06 00	B5 D8	02 00	22 20	00 00		
RGB IN1	Set	SYNC ON G OFF	BE EF	03 06 00	5E D7	01 00	10 20	02 00	
		AUTO	BE EF	03 06 00	CE D6	01 00	10 20	03 00	
	Get	BE EF	03 06 00	0D D6	02 00	10 20	00 00		
RGB IN2	Set	SYNC ON G OFF	BE EF	03 06 00	A2 D6	01 00	11 20	02 00	
		AUTO	BE EF	03 06 00	32 D7	01 00	11 20	03 00	
	Get	BE EF	03 06 00	F1 D7	02 00	11 20	00 00		
FRAME LOCK - RGB1	Set	TURN OFF	BE EF	03 06 00	3B C2	01 00	50 30	00 00	
		TURN ON	BE EF	03 06 00	AB C3	01 00	50 30	01 00	
	Get	BE EF	03 06 00	08 C2	02 00	50 30	00 00		
FRAME LOCK - RGB2	Set	TURN OFF	BE EF	03 06 00	0B C3	01 00	54 30	00 00	
		TURN ON	BE EF	03 06 00	9B C2	01 00	54 30	01 00	
	Get	BE EF	03 06 00	38 C3	02 00	54 30	00 00		
FRAME LOCK - HDMI	Set	TURN OFF	BE EF	03 06 00	7F C2	01 00	53 30	00 00	
		TURN ON	BE EF	03 06 00	EF C3	01 00	53 30	01 00	
	Get	BE EF	03 06 00	4C C2	02 00	53 30	00 00		
KEYSTONE V	Get	BE EF	03 06 00	B9 D3	02 00	07 20	00 00		
	Increment	BE EF	03 06 00	DF D3	04 00	07 20	00 00		
	Decrement	BE EF	03 06 00	0E D2	05 00	07 20	00 00		
KEYSTONE V Reset	Execute	BE EF	03 06 00	08 D0	06 00	0C 70	00 00		

## RS-232C Communication / Network command table

Names	Operation Type		Header				Command Data		
							Action	Type	Setting Code
AUTO KEYSTONE V EXECUTE	Execute		BE EF	03	06 00	E5 D1	06 00	0D 20	00 00
AUTO KEYSTONE V	Set	TURN OFF	BE EF	03	06 00	EAD1	01 00	0F 20	00 00
		TURN ON	BE EF	03	06 00	7A D0	01 00	0F 20	01 00
	Get	BE EF	03	06 00	D9 D1	02 00	0F 20	00 00	
KEYSTONE H	Get		BE EF	03	06 00	E9 D0	02 00	0B 20	00 00
	Increment		BE EF	03	06 00	8F D0	04 00	0B 20	00 00
	Decrement		BE EF	03	06 00	5E D1	05 00	0B 20	00 00
KEYSTONE H Reset	Execute		BE EF	03	06 00	98 D8	06 00	20 70	00 00
PERFECT FIT	Set	Disable	BE EF	03	06 00	FE 88	01 00	20 21	00 00
		Enable	BE EF	03	06 00	6E 89	01 00	20 21	01 00
	Get	BE EF	03	06 00	CD 88	02 00	20 21	00 00	
PERFECT FIT Left Top corner -H	Get		BE EF	03	06 00	31 89	02 00	21 21	00 00
	Increment		BE EF	03	06 00	57 89	04 00	21 21	00 00
	Decrement		BE EF	03	06 00	86 88	05 00	21 21	00 00
PERFECT FIT Left Top corner -V	Get		BE EF	03	06 00	75 89	02 00	22 21	00 00
	Increment		BE EF	03	06 00	13 89	04 00	22 21	00 00
	Decrement		BE EF	03	06 00	C2 88	05 00	22 21	00 00
PERFECT FIT Right Top corner -H	Get		BE EF	03	06 00	89 88	02 00	23 21	00 00
	Increment		BE EF	03	06 00	EF 88	04 00	23 21	00 00
	Decrement		BE EF	03	06 00	3E 89	05 00	23 21	00 00
PERFECT FIT Right Top corner -V	Get		BE EF	03	06 00	FD 89	02 00	24 21	00 00
	Increment		BE EF	03	06 00	9B 89	04 00	24 21	00 00
	Decrement		BE EF	03	06 00	4A 88	05 00	24 21	00 00
PERFECT FIT Left Bottom corner -H	Get		BE EF	03	06 00	01 88	02 00	25 21	00 00
	Increment		BE EF	03	06 00	67 88	04 00	25 21	00 00
	Decrement		BE EF	03	06 00	B6 89	05 00	25 21	00 00
PERFECT FIT Left Bottom corner -V	Get		BE EF	03	06 00	45 88	02 00	26 21	00 00
	Increment		BE EF	03	06 00	23 88	04 00	26 21	00 00
	Decrement		BE EF	03	06 00	F2 89	05 00	26 21	00 00
PERFECT FIT Right Bottom corner -H	Get		BE EF	03	06 00	B9 89	02 00	27 21	00 00
	Increment		BE EF	03	06 00	DF 89	04 00	27 21	00 00
	Decrement		BE EF	03	06 00	0E 88	05 00	27 21	00 00
PERFECT FIT Right Bottom corner -V	Get		BE EF	03	06 00	AD 8A	02 00	28 21	00 00
	Increment		BE EF	03	06 00	CB 8A	04 00	28 21	00 00
	Decrement		BE EF	03	06 00	1A 8B	05 00	28 21	00 00
PERFECT FIT all corners Reset	Execute		BE EF	03	06 00	D5 8A	06 00	29 21	00 00

Names	Operation Type	Header				Command Data			
						CRC	Action	Type	Setting Code
ACTIVE IRIS	Set	TURN OFF	BE EF	03 06 00	0B 2F	01 00	04 33	00 00	
		THEATER	BE EF	03 06 00	CB 2F	01 00	04 33	10 00	
		PRESENTATION	BE EF	03 06 00	5B 2E	01 00	04 33	11 00	
	Get	BE EF	03 06 00	38 22	02 00	04 33	00 00		
WHISPER	Set	NORMAL	BE EF	03 06 00	3B 23	01 00	00 33	00 00	
		WHISPER	BE EF	03 06 00	AB 22	01 00	00 33	01 00	
	Get	BE EF	03 06 00	08 23	02 00	00 33	00 00		
MIRROR	Set	NORMAL	BE EF	03 06 00	C7 D2	01 00	01 30	00 00	
		H:INVERT	BE EF	03 06 00	57 D3	01 00	01 30	01 00	
		V:INVERT	BE EF	03 06 00	A7 D3	01 00	01 30	02 00	
	H&V:INVERT	BE EF	03 06 00	37 D2	01 00	01 30	03 00		
Get	BE EF	03 06 00	F4 D2	02 00	01 30	00 00			
MONITOR OUT - RGB1	Set	RGB1	BE EF	03 06 00	3E F4	01 00	B0 20	00 00	
		RGB2	BE EF	03 06 00	FE F6	01 00	B0 20	04 00	
		TURN OFF	BE EF	03 06 00	CE B5	01 00	B0 20	FF 00	
	Get	BE EF	03 06 00	0D F4	02 00	B0 20	00 00		
MONITOR OUT - RGB2	Set	RGB1	BE EF	03 06 00	0E F5	01 00	B4 20	00 00	
		RGB2	BE EF	03 06 00	CE F7	01 00	B4 20	04 00	
		TURN OFF	BE EF	03 06 00	FE B4	01 00	B4 20	FF 00	
	Get	BE EF	03 06 00	3D F5	02 00	B4 20	00 00		
MONITOR OUT - HDMI	Set	RGB1	BE EF	03 06 00	7A F4	01 00	B3 20	00 00	
		RGB2	BE EF	03 06 00	BA F6	01 00	B3 20	04 00	
		TURN OFF	BE EF	03 06 00	8A B5	01 00	B3 20	FF 00	
	Get	BE EF	03 06 00	49 F4	02 00	B3 20	00 00		
MONITOR OUT - COMPONENT	Set	RGB1	BE EF	03 06 00	F2 F4	01 00	B5 20	00 00	
		RGB2	BE EF	03 06 00	32 F6	01 00	B5 20	04 00	
		TURN OFF	BE EF	03 06 00	02 B5	01 00	B5 20	FF 00	
	Get	BE EF	03 06 00	C1 F4	02 00	B5 20	00 00		
MONITOR OUT - S-VIDEO	Set	RGB1	BE EF	03 06 00	86 F5	01 00	B2 20	00 00	
		RGB2	BE EF	03 06 00	46 F7	01 00	B2 20	04 00	
		TURN OFF	BE EF	03 06 00	76 B4	01 00	B2 20	FF 00	
	Get	BE EF	03 06 00	B5 F5	02 00	B2 20	00 00		
MONITOR OUT - VIDEO	Set	RGB1	BE EF	03 06 00	C2 F5	01 00	B1 20	00 00	
		RGB2	BE EF	03 06 00	02 F7	01 00	B1 20	04 00	
		TURN OFF	BE EF	03 06 00	32 B4	01 00	B1 20	FF 00	
	Get	BE EF	03 06 00	F1 F5	02 00	B1 20	00 00		

## RS-232C Communication / Network command table

Names	Operation Type	Header				Command Data		
						CRC	Action	Type
MONITOR OUT - STANDBY	Set	RGB1	BE EF	03 06 00	2A F7	01 00	BF 20	00 00
		RGB2	BE EF	03 06 00	EA F5	01 00	BF 20	04 00
		TURN OFF	BE EF	03 06 00	DAB6	01 00	BF 20	FF 00
		Get	BE EF	03 06 00	19 F7	02 00	BF 20	00 00
VOLUME - RGB1	Get	BE EF	03 06 00	CD CC	02 00	60 20	00 00	
	Increment	BE EF	03 06 00	AB CC	04 00	60 20	00 00	
	Decrement	BE EF	03 06 00	7A CD	05 00	60 20	00 00	
VOLUME - RGB2	Get	BE EF	03 06 00	FD CD	02 00	64 20	00 00	
	Increment	BE EF	03 06 00	9B CD	04 00	64 20	00 00	
	Decrement	BE EF	03 06 00	4A CC	05 00	64 20	00 00	
VOLUME - HDMI	Get	BE EF	03 06 00	89 CC	02 00	63 20	00 00	
	Increment	BE EF	03 06 00	EF CC	04 00	63 20	00 00	
	Decrement	BE EF	03 06 00	3E CD	05 00	63 20	00 00	
VOLUME - COMPONENT	Get	BE EF	03 06 00	01 CC	02 00	65 20	00 00	
	Increment	BE EF	03 06 00	67 CC	04 00	65 20	00 00	
	Decrement	BE EF	03 06 00	B6 CD	05 00	65 20	00 00	
VOLUME - S-VIDEO	Get	BE EF	03 06 00	75 CD	02 00	62 20	00 00	
	Increment	BE EF	03 06 00	13 CD	04 00	62 20	00 00	
	Decrement	BE EF	03 06 00	C2 CC	05 00	62 20	00 00	
VOLUME - VIDEO	Get	BE EF	03 06 00	31 CD	02 00	61 20	00 00	
	Increment	BE EF	03 06 00	57 CD	04 00	61 20	00 00	
	Decrement	BE EF	03 06 00	86 CC	05 00	61 20	00 00	
VOLUME - AUDIO OUT STANDBY	Get	BE EF	03 06 00	D9 CF	02 00	6F 20	00 00	
	Increment	BE EF	03 06 00	BF CF	04 00	6F 20	00 00	
	Decrement	BE EF	03 06 00	6E CE	05 00	6F 20	00 00	
TREBLE - RGB1	Get	BE EF	03 06 00	0D C8	02 00	70 20	00 00	
	Increment	BE EF	03 06 00	6B C8	04 00	70 20	00 00	
	Decrement	BE EF	03 06 00	BA C9	05 00	70 20	00 00	
TREBLE -RGB2	Get	BE EF	03 06 00	3D C9	02 00	74 20	00 00	
	Increment	BE EF	03 06 00	5B C9	04 00	74 20	00 00	
	Decrement	BE EF	03 06 00	8A C8	05 00	74 20	00 00	
TREBLE - HDMI	Get	BE EF	03 06 00	49 C8	02 00	73 20	00 00	
	Increment	BE EF	03 06 00	2F C8	04 00	73 20	00 00	
	Decrement	BE EF	03 06 00	FE C9	05 00	73 20	00 00	
TREBLE - COMPONENT	Get	BE EF	03 06 00	C1 C8	02 00	75 20	00 00	
	Increment	BE EF	03 06 00	A7 C8	04 00	75 20	00 00	
	Decrement	BE EF	03 06 00	76 C9	05 00	75 20	00 00	
TREBLE - S-VIDEO	Get	BE EF	03 06 00	B5 C9	02 00	72 20	00 00	
	Increment	BE EF	03 06 00	D3 C9	04 00	72 20	00 00	
	Decrement	BE EF	03 06 00	02 C8	05 00	72 20	00 00	
TREBLE - VIDEO	Get	BE EF	03 06 00	F1 C9	02 00	71 20	00 00	
	Increment	BE EF	03 06 00	97 C9	04 00	71 20	00 00	
	Decrement	BE EF	03 06 00	46 C8	05 00	71 20	00 00	
TREBLE - AUDIO OUT STANDBY	Get	BE EF	03 06 00	19 CB	02 00	7F 20	00 00	
	Increment	BE EF	03 06 00	7F CB	04 00	7F 20	00 00	
	Decrement	BE EF	03 06 00	AE CA	05 00	7F 20	00 00	

Names	Operation Type	Header				Command Data			
						CRC	Action	Type	Setting Code
BASS - RGB1	Get	BE EF	03	06 00	0D FB	02 00	80 20	00 00	
	Increment	BE EF	03	06 00	6B FA	04 00	80 20	00 00	
	Decrement	BE EF	03	06 00	BA FA	05 00	80 20	00 00	
BASS - RGB2	Get	BE EF	03	06 00	3D FA	02 00	84 20	00 00	
	Increment	BE EF	03	06 00	5B FA	04 00	84 20	00 00	
	Decrement	BE EF	03	06 00	8A FA	05 00	84 20	00 00	
BASS - HDMI	Get	BE EF	03	06 00	49 FB	02 00	83 20	00 00	
	Increment	BE EF	03	06 00	2F FB	04 00	83 20	00 00	
	Decrement	BE EF	03	06 00	FE FA	05 00	83 20	00 00	
BASS - COMPONENT	Get	BE EF	03	06 00	C1 FB	02 00	85 20	00 00	
	Increment	BE EF	03	06 00	A7 FB	04 00	85 20	00 00	
	Decrement	BE EF	03	06 00	76 FA	05 00	85 20	00 00	
BASS - S-VIDEO	Get	BE EF	03	06 00	B5 FA	02 00	82 20	00 00	
	Increment	BE EF	03	06 00	D3 FA	04 00	82 20	00 00	
	Decrement	BE EF	03	06 00	02 FB	05 00	82 20	00 00	
BASS - VIDEO	Get	BE EF	03	06 00	F1 FA	02 00	81 20	00 00	
	Increment	BE EF	03	06 00	97 FA	04 00	81 20	00 00	
	Decrement	BE EF	03	06 00	46 FB	05 00	81 20	00 00	
BASS - AUDIO OUT STANDBY	Get	BE EF	03	06 00	19 F8	02 00	8F 20	00 00	
	Increment	BE EF	03	06 00	7F F8	04 00	8F 20	00 00	
	Decrement	BE EF	03	06 00	AE F9	05 00	8F 20	00 00	
MUTE	Set	TURN OFF	BE EF	03	06 00	46 D3	01 00	02 20	00 00
		TURN ON	BE EF	03	06 00	D6 D2	01 00	02 20	01 00
	Get	BE EF	03	06 00	75 D3	02 00	02 20	00 00	
SPEAKER	Set	TURN OFF	BE EF	03	06 00	6E D5	01 00	1C 20	00 00
		TURN ON	BE EF	03	06 00	FE D4	01 00	1C 20	01 00
	Get	BE EF	03	06 00	5D D5	02 00	1C 20	00 00	
AUDIO - RGB1	Set	TURN OFF	BE EF	03	06 00	FE DD	01 00	30 20	00 00
		AUDIO1	BE EF	03	06 00	6E DC	01 00	30 20	01 00
		AUDIO2	BE EF	03	06 00	9E DC	01 00	30 20	02 00
		AUDIO3	BE EF	03	06 00	0E DD	01 00	30 20	03 00
	Get	BE EF	03	06 00	3E DF	01 00	30 20	04 00	
AUDIO - RGB2	Set	TURN OFF	BE EF	03	06 00	CE DC	01 00	34 20	00 00
		AUDIO1	BE EF	03	06 00	5E DD	01 00	34 20	01 00
		AUDIO2	BE EF	03	06 00	AE DC	01 00	34 20	02 00
		AUDIO3	BE EF	03	06 00	3E DC	01 00	34 20	03 00
	Get	BE EF	03	06 00	0E DE	01 00	34 20	04 00	
AUDIO - HDMI	Set	TURN OFF	BE EF	03	06 00	BA DD	01 00	33 20	00 00
		AUDIO1	BE EF	03	06 00	2A DC	01 00	33 20	01 00
		AUDIO2	BE EF	03	06 00	DA DC	01 00	33 20	02 00
		AUDIO3	BE EF	03	06 00	4A DD	01 00	33 20	03 00
		AUDIO4	BE EF	03	06 00	7A DF	01 00	33 20	04 00
	AUDIO_HDMI	BE EF	03	06 00	7A C4	01 00	33 20	20 00	
Get	BE EF	03	06 00	89 DD	02 00	33 20	00 00		

**RS-232C Communication / Network command table**

Names	Operation Type	Header				Command Data			
						CRC	Action	Type	Setting Code
AUDIO - COMPONENT	Set	TURN OFF	BE EF	03	06 00	32 DD	01 00	35 20	00 00
		AUDIO1	BE EF	03	06 00	A2 DC	01 00	35 20	01 00
		AUDIO2	BE EF	03	06 00	52 DC	01 00	35 20	02 00
		AUDIO3	BE EF	03	06 00	C2 DD	01 00	35 20	03 00
		AUDIO4	BE EF	03	06 00	F2 DF	01 00	35 20	04 00
	Get	BE EF	03	06 00	01 DD	02 00	35 20	00 00	
AUDIO - S-VIDEO	Set	TURN OFF	BE EF	03	06 00	46 DC	01 00	32 20	00 00
		AUDIO1	BE EF	03	06 00	D6 DD	01 00	32 20	01 00
		AUDIO2	BE EF	03	06 00	26 DD	01 00	32 20	02 00
		AUDIO3	BE EF	03	06 00	B6 DC	01 00	32 20	03 00
		AUDIO4	BE EF	03	06 00	86 DE	01 00	32 20	04 00
	Get	BE EF	03	06 00	75 DC	02 00	32 20	00 00	
AUDIO - VIDEO	Set	TURN OFF	BE EF	03	06 00	02 DC	01 00	31 20	00 00
		AUDIO1	BE EF	03	06 00	92 DD	01 00	31 20	01 00
		AUDIO2	BE EF	03	06 00	62 DD	01 00	31 20	02 00
		AUDIO3	BE EF	03	06 00	F2 DC	01 00	31 20	03 00
		AUDIO4	BE EF	03	06 00	C2 DE	01 00	31 20	04 00
	Get	BE EF	03	06 00	31 DC	02 00	31 20	00 00	
AUDIO OUT STANDBY	Set	TURN OFF	BE EF	03	06 00	EA DE	01 00	3F 20	00 00
		AUDIO1	BE EF	03	06 00	7A DF	01 00	3F 20	01 00
		AUDIO2	BE EF	03	06 00	8A DF	01 00	3F 20	02 00
		AUDIO3	BE EF	03	06 00	1A DE	01 00	3F 20	03 00
		AUDIO4	BE EF	03	06 00	2A DC	01 00	3F 20	04 00
	Get	BE EF	03	06 00	D9 DE	02 00	3F 20	00 00	
HDMI AUDIO	Set	1	BE EF	03	06 00	AE C6	01 00	40 20	01 00
		2	BE EF	03	06 00	5E C6	01 00	40 20	02 00
	Get	BE EF	03	06 00	0D C7	02 00	40 20	00 00	
REMOTE FRONT	Set	Off	BE EF	03	06 00	FF 32	01 00	00 26	00 00
		On	BE EF	03	06 00	6F 33	01 00	00 26	01 00
	Get	BE EF	03	06 00	CC 32	02 00	00 26	00 00	
REMOTE REAR	Set	Off	BE EF	03	06 00	03 33	01 00	01 26	00 00
		On	BE EF	03	06 00	93 32	01 00	01 26	01 00
	Get	BE EF	03	06 00	30 33	02 00	01 26	00 00	
REMOTE TOP	Set	Off	BE EF	03	06 00	47 33	01 00	02 26	00 00
		On	BE EF	03	06 00	D7 32	01 00	02 26	01 00
	Get	BE EF	03	06 00	74 33	02 00	02 26	00 00	
REMOTE FREQUENCY NORMAL	Set	Disable	BE EF	03	06 00	FF 3D	01 00	30 26	00 00
		Enable	BE EF	03	06 00	6F 3C	01 00	30 26	01 00
	Get	BE EF	03	06 00	CC 3D	02 00	30 26	00 00	
REMOTE FREQUENCY HIGH	Set	Disable	BE EF	03	06 00	03 3C	01 00	31 26	00 00
		Enable	BE EF	03	06 00	93 3D	01 00	31 26	01 00
	Get	BE EF	03	06 00	30 3C	02 00	31 26	00 00	



Names	Operation Type	Header				Command Data			
						CRC	Action	Type	Setting Code
LANGUAGE	Set	ENGLISH	BE EF	03 06 00	F7 D3	01 00	05 30	00 00	
		FRANCAIS	BE EF	03 06 00	67 D2	01 00	05 30	01 00	
		DEUTSCH	BE EF	03 06 00	97 D2	01 00	05 30	02 00	
		ESPAÑOL	BE EF	03 06 00	07 D3	01 00	05 30	03 00	
		ITALIANO	BE EF	03 06 00	37 D1	01 00	05 30	04 00	
		NORSK	BE EF	03 06 00	A7 D0	01 00	05 30	05 00	
		NEDERLANDS	BE EF	03 06 00	57 D0	01 00	05 30	06 00	
		PORTUGUESE	BE EF	03 06 00	C7 D1	01 00	05 30	07 00	
		日本語	BE EF	03 06 00	37 D4	01 00	05 30	08 00	
		简体中文	BE EF	03 06 00	A7 D5	01 00	05 30	09 00	
		繁體中文	BE EF	03 06 00	37 DE	01 00	05 30	10 00	
		한글	BE EF	03 06 00	57 D5	01 00	05 30	0A 00	
		SVENSKA	BE EF	03 06 00	C7 D4	01 00	05 30	0B 00	
		PYCKNN	BE EF	03 06 00	F7 D6	01 00	05 30	0C 00	
		SUOMI	BE EF	03 06 00	67 D7	01 00	05 30	0D 00	
POLSKI	BE EF	03 06 00	97 D7	01 00	05 30	0E 00			
TÜRKÇE	BE EF	03 06 00	07 D6	01 00	05 30	0F 00			
	Get	BE EF	03 06 00	C4 D3	02 00	05 30	00 00		
MENU POSITION V	Get	BE EF	03 06 00	40 D7	02 00	16 30	00 00		
	Increment	BE EF	03 06 00	26 D7	04 00	16 30	00 00		
	Decrement	BE EF	03 06 00	F7 D6	05 00	16 30	00 00		
MENU POSITION V Reset	Execute	BE EF	03 06 00	A8 C7	06 00	44 70	00 00		
MENU POSITION H	Get	BE EF	03 06 00	04 D7	02 00	15 30	00 00		
	Increment	BE EF	03 06 00	62 D7	04 00	15 30	00 00		
	Decrement	BE EF	03 06 00	B3 D6	05 00	15 30	00 00		
MENU POSITION H Reset	Execute	BE EF	03 06 00	DC C6	06 00	43 70	00 00		
BLANK	Set	MyScreen	BE EF	03 06 00	FB CA	01 00	00 30	20 00	
		ORIGINAL	BE EF	03 06 00	FB E2	01 00	00 30	40 00	
		BLUE	BE EF	03 06 00	CB D3	01 00	00 30	03 00	
		WHITE	BE EF	03 06 00	6B D0	01 00	00 30	05 00	
		BLACK	BE EF	03 06 00	9B D0	01 00	00 30	06 00	
	Get	BE EF	03 06 00	08 D3	02 00	00 30	00 00		
BLANK On/Off	Set	TURN OFF	BE EF	03 06 00	FB D8	01 00	20 30	00 00	
		TURN ON	BE EF	03 06 00	6B D9	01 00	20 30	01 00	
	Get	BE EF	03 06 00	C8 D8	02 00	20 30	00 00		
START UP	Set	MyScreen	BE EF	03 06 00	CB CB	01 00	04 30	20 00	
		ORIGINAL	BE EF	03 06 00	0B D2	01 00	04 30	00 00	
		TURN OFF	BE EF	03 06 00	9B D3	01 00	04 30	01 00	
	Get	BE EF	03 06 00	38 D2	02 00	04 30	00 00		
MyScreen LOCK	Set	TURN OFF	BE EF	03 06 00	3B EF	01 00	C0 30	00 00	
		TURN ON	BE EF	03 06 00	AB EE	01 00	C0 30	01 00	
	Get	BE EF	03 06 00	08 EF	02 00	C0 30	00 00		
MESSAGE	Set	TURN OFF	BE EF	03 06 00	8F D6	01 00	17 30	00 00	
		TURN ON	BE EF	03 06 00	1F D7	01 00	17 30	01 00	
	Get	BE EF	03 06 00	BC D6	02 00	17 30	00 00		

## RS-232C Communication / Network command table

Names	Operation Type	Header					Command Data		
						CRC	Action	Type	Setting Code
TEMPLATE	Set	TEST PATTERN	BE EF	03	06 00	43 D9	01 00	22 30	00 00
		DOT-LINE1	BE EF	03	06 00	D3 D8	01 00	22 30	01 00
		DOT-LINE2	BE EF	03	06 00	23 D8	01 00	22 30	02 00
		DOT-LINE3	BE EF	03	06 00	B3 D9	01 00	22 30	03 00
	Get	BE EF	03	06 00	83 DB	01 00	22 30	04 00	
TEMPLATE on/off	Set	TURN OFF	BE EF	03	06 00	BF D8	01 00	23 30	00 00
		TURN ON	BE EF	03	06 00	2F D9	01 00	23 30	01 00
	Get	BE EF	03	06 00	8C D8	02 00	23 30	00 00	
PbyP	Set	TURN OFF	BE EF	03	06 00	3E 26	01 00	10 23	00 00
		TURN ON	BE EF	03	06 00	AE 27	01 00	10 23	01 00
	Get	BE EF	03	06 00	0D 26	02 00	10 23	00 00	
PbyP RIGHT SOURCE	Set	RGB1	BE EF	03	06 00	86 27	01 00	12 23	00 00
		RGB2	BE EF	03	06 00	46 25	01 00	12 23	04 00
		HDMI	BE EF	03	06 00	76 27	01 00	12 23	03 00
		COMPONENT	BE EF	03	06 00	D6 24	01 00	12 23	05 00
		S-VIDEO	BE EF	03	06 00	E6 26	01 00	12 23	02 00
	VIDEO	BE EF	03	06 00	16 26	01 00	12 23	01 00	
Get	BE EF	03	06 00	B5 27	02 00	12 23	00 00		
PbyP MAIN AREA	Set	LEFT	BE EF	03	06 00	7A 26	01 00	13 23	00 00
		RIGHT	BE EF	03	06 00	EA 27	01 00	13 23	01 00
	Get	BE EF	03	06 00	49 26	02 00	13 23	00 00	
PbyP LEFT SOURCE	Set	RGB1	BE EF	03	06 00	F2 26	01 00	15 23	00 00
		RGB2	BE EF	03	06 00	32 24	01 00	15 23	04 00
		HDMI	BE EF	03	06 00	02 26	01 00	15 23	03 00
		COMPONENT	BE EF	03	06 00	A2 25	01 00	15 23	05 00
		S-VIDEO	BE EF	03	06 00	92 27	01 00	15 23	02 00
	VIDEO	BE EF	03	06 00	62 27	01 00	15 23	01 00	
Get	BE EF	03	06 00	C1 26	02 00	15 23	00 00		
PbyP SWAP	Execute	BE EF	03	06 00	01 27	06 00	16 23	00 00	
AUTO SEARCH	Set	TURN OFF	BE EF	03	06 00	B6 D6	01 00	16 20	00 00
		TURN ON	BE EF	03	06 00	26 D7	01 00	16 20	01 00
	Get	BE EF	03	06 00	85 D6	02 00	16 20	00 00	
AUTO OFF	Get	BE EF	03	06 00	08 86	02 00	10 31	00 00	
	Increment	BE EF	03	06 00	6E 86	04 00	10 31	00 00	
	Decrement	BE EF	03	06 00	BF 87	05 00	10 31	00 00	
AUTO ON	Set	TURN OFF	BE EF	03	06 00	3B 89	01 00	20 31	00 00
		TURN ON	BE EF	03	06 00	AB 88	01 00	20 31	01 00
	Get	BE EF	03	06 00	08 89	02 00	20 31	00 00	
LAMP TIME	Get	BE EF	03	06 00	C2 FF	02 00	90 10	00 00	
LAMP TIME Reset	Execute	BE EF	03	06 00	58 DC	06 00	30 70	00 00	
TOTAL LAMP TIME	Get	BE EF	03	06 00	4A FF	02 00	96 10	00 00	
FILTER TIME	Get	BE EF	03	06 00	C2 F0	02 00	A0 10	00 00	
FILTER TIME Reset	Execute	BE EF	03	06 00	98 C6	06 00	40 70	00 00	

Names	Operation Type	Header				Command Data			
						CRC	Action	Type	Setting Code
MY BUTTON-1	Set	RGB1	BE EF	03	06 00	3A 33	01 00	00 36	00 00
		RGB2	BE EF	03	06 00	FA 31	01 00	00 36	04 00
		HDMI	BE EF	03	06 00	CA 33	01 00	00 36	03 00
		COMPONENT	BE EF	03	06 00	6A 30	01 00	00 36	05 00
		S-VIDEO	BE EF	03	06 00	5A 32	01 00	00 36	02 00
		VIDEO	BE EF	03	06 00	AA 32	01 00	00 36	01 00
		INFORMATION	BE EF	03	06 00	FA 3E	01 00	00 36	10 00
		AUTO KEYSTONE EXECUTE	BE EF	03	06 00	6A 3F	01 00	00 36	11 00
		MY MEMORY	BE EF	03	06 00	9A 3F	01 00	00 36	12 00
		PICTURE MODE	BE EF	03	06 00	0A 3E	01 00	00 36	13 00
		FILTER RESET	BE EF	03	06 00	3A 3C	01 00	00 36	14 00
		ACTIVE IRIS	BE EF	03	06 00	AA 3D	01 00	00 36	15 00
		MY IMAGE	BE EF	03	06 00	5A 3D	01 00	00 36	16 00
		AV MUTE	BE EF	03	06 00	AA 38	01 00	00 36	19 00
PbyP SWAP	BE EF	03	06 00	5A 38	01 00	00 36	1A 00		
TEMPLATE	BE EF	03	06 00	CA 39	01 00	00 36	1B 00		
	Get	BE EF	03	06 00	09 33	02 00	00 36	00 00	
MY BUTTON-2	Set	RGB1	BE EF	03	06 00	C6 32	01 00	01 36	00 00
		RGB2	BE EF	03	06 00	06 30	01 00	01 36	04 00
		HDMI	BE EF	03	06 00	36 32	01 00	01 36	03 00
		COMPONENT	BE EF	03	06 00	96 31	01 00	01 36	05 00
		S-VIDEO	BE EF	03	06 00	A6 33	01 00	01 36	02 00
		VIDEO	BE EF	03	06 00	56 33	01 00	01 36	01 00
		INFORMATION	BE EF	03	06 00	06 3F	01 00	01 36	10 00
		AUTO KEYSTONE EXECUTE	BE EF	03	06 00	96 3E	01 00	01 36	11 00
		MY MEMORY	BE EF	03	06 00	66 3E	01 00	01 36	12 00
		PICTURE MODE	BE EF	03	06 00	F6 3F	01 00	01 36	13 00
		FILTER RESET	BE EF	03	06 00	C6 3D	01 00	01 36	14 00
		ACTIVE IRIS	BE EF	03	06 00	56 3C	01 00	01 36	15 00
		MY IMAGE	BE EF	03	06 00	A6 3C	01 00	01 36	16 00
		AV MUTE	BE EF	03	06 00	56 39	01 00	01 36	19 00
PbyP SWAP	BE EF	03	06 00	A6 39	01 00	01 36	1A 00		
TEMPLATE	BE EF	03	06 00	36 38	01 00	01 36	1B 00		
	Get	BE EF	03	06 00	F5 32	02 00	01 36	00 00	
MY SOURCE	Set	RGB1	BE EF	03	06 00	FA 38	01 00	20 36	00 00
		RGB2	BE EF	03	06 00	3A 3A	01 00	20 36	04 00
		HDMI	BE EF	03	06 00	0A 38	01 00	20 36	03 00
		COMPONENT	BE EF	03	06 00	AA 3B	01 00	20 36	05 00
		S-VIDEO	BE EF	03	06 00	9A 39	01 00	20 36	02 00
		VIDEO	BE EF	03	06 00	6A 39	01 00	20 36	01 00
	Get	BE EF	03	06 00	C9 38	02 00	20 36	00 00	
MAGNIFY		Get	BE EF	03	06 00	7C D2	02 00	07 30	00 00
		Increment	BE EF	03	06 00	1A D2	04 00	07 30	00 00
		Decrement	BE EF	03	06 00	CB D3	05 00	07 30	00 00
FREEZE	Set	NORMAL	BE EF	03	06 00	83 D2	01 00	02 30	00 00
		FREEZE	BE EF	03	06 00	13 D3	01 00	02 30	01 00
		Get	BE EF	03	06 00	B0 D2	02 00	02 30	00 00

**RS-232C Communication / Network command table**

Names	Operation Type	Header				Command Data			
						CRC	Action	Type	Setting Code
CLOSED CAPTION DISPLAY	Set	TURN OFF	BE EF	03	06 00	FA 62	01 00	00 37	00 00
		TURN ON	BE EF	03	06 00	6A 63	01 00	00 37	01 00
		AUTO	BE EF	03	06 00	9A 63	01 00	00 37	02 00
	Get	BE EF	03	06 00	C9 62	02 00	00 37	00 00	
CLOSED CAPTION MODE	Set	CAPTIONS	BE EF	03	06 00	06 63	01 00	01 37	00 00
		TEXT	BE EF	03	06 00	96 62	01 00	01 37	01 00
	Get	BE EF	03	06 00	35 63	02 00	01 37	00 00	
CLOSED CAPTION CHANNEL	Set	1	BE EF	03	06 00	D2 62	01 00	02 37	01 00
		2	BE EF	03	06 00	22 62	01 00	02 37	02 00
		3	BE EF	03	06 00	B2 63	01 00	02 37	03 00
		4	BE EF	03	06 00	82 61	01 00	02 37	04 00
	Get	BE EF	03	06 00	71 63	02 00	02 37	00 00	
MY IMAGE	Set	OFF	BE EF	03	06 00	3A C3	01 00	00 35	00 00
		IMAGE-1	BE EF	03	06 00	AA C2	01 00	00 35	01 00
		IMAGE-2	BE EF	03	06 00	5A C2	01 00	00 35	02 00
		IMAGE-3	BE EF	03	06 00	CA C3	01 00	00 35	03 00
		IMAGE-4	BE EF	03	06 00	FA C1	01 00	00 35	04 00
	Get	BE EF	03	06 00	09 C3	02 00	00 35	00 00	
MY IMAGE IMAGE-1 Delete	Execute	BE EF	03	06 00	71 C3	06 00	01 35	00 00	
MY IMAGE IMAGE-2 Delete	Execute	BE EF	03	06 00	35 C3	06 00	02 35	00 00	
MY IMAGE IMAGE-3 Delete	Execute	BE EF	03	06 00	C9 C2	06 00	03 35	00 00	
MY IMAGE IMAGE-4 Delete	Execute	BE EF	03	06 00	BD C3	06 00	04 35	00 00	

## Corporate offices

USA – Cypress  
ph: 714-236-8610  
Canada – Kitchener  
ph: 519-744-8005

## Worldwide offices

United Kingdom  
ph: +44 118 977 8000  
Germany  
ph: +49 2161 664540  
France  
ph: +33 (0) 1 41 21 44 04

Hungary/Eastern Europe  
ph: +36 (0) 1 47 48 100  
Singapore  
ph: +65 6877 8737  
Shanghai  
ph: +86 21 6278 7708

Beijing  
ph: +86 10 6561 0240  
Korea  
ph: +82 2 702 1601  
Japan  
ph: +81 3 3599 7481

