

# Owner's Manual



# PPG250A Guitar Amplifier



- Power Switch: Switches amplifier on/off.
- 2) Power LED: Illuminates when power is switched on.
- **3) Input Jack:** Connect your instrument to this jack.
- **4)** Volume: This sets the volume gain level.
- **5)** Bass: This control adjusts the low frequency level.
- **6)** Treble: This control adjusts the high frequency level.
- 7) Phones Jack: This is your headphone connection. Inserting the headphones disables the internal speaker (great for practicing).



- 1) Voltage Selector: 110/220 Volt Selectable Switch.
- 2) Power Cord: Connect the included power cord here.

## **Troubleshooting**

#### Distorted Sound:

- ✓ Check if the amplifier is overdriven. If it is, you will have to turn the level down.
- ✓ Check signal source.

#### Signal sounds "discolored":

- ✓ Check and adjust the EQ settings.
- ✓ Ensure you are using quality cables.
- ✓ Check signal source.

#### No Sound:

- ✓ Check connections.
- ✓ Try a different cable.
- ✓ Check level on amplifier.
- ✓ Confirm amplifier is getting a signal.
- Make sure nothing is plugged into the Phones jack.

#### Intermittent Output:

- ✓ Check connections.
- ✓ Try a different cable.

### **Specifications**

Model	Driver	RMS	Peak	Dimensions	Weight
PPG250	6" High Definition Speaker	20W	80W	W = 11" D = 6" H = 11"	9 lb.