



user guide

## User Guide for the Kyocera K132 Phone

This manual is based on the production version of the Kyocera K132 phone. Software changes may have occurred after this printing. Kyocera reserves the right to make changes in technical and product specifications without prior notice. The products and equipment described in this documentation are manufactured under license from QUALCOMM Incorporated under one or more of the following U.S. patents:

4,901,307 5,056,109 5,101,501 5,109,390 5,228,054  
5,267,261 5,267,262 5,337,338 5,414,796 5,416,797  
5,490,165 5,504,773 5,506,865 5,511,073 5,535,239  
5,544,196 5,568,483 5,600,754 5,657,420 5,659,569  
5,710,784 5,778,338

Other patents pending.

The Kyocera Wireless Corp. ("KWC") products described in this manual may include copyrighted KWC and third party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for KWC and third party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the KWC products may not be modified, reverse engineered, distributed or reproduced in any manner not permitted by law. Furthermore, the purchase of the KWC products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of KWC or any third party software provider, except for the normal, non-exclusive royalty-free license to use that arises by operation of law in the sale of a product.

Kyocera is a registered trademark of Kyocera Corporation. Brick Attack, Doodler, and Race 21 are trademarks of Kyocera Wireless Corp. QUALCOMM is a registered trademark, and BREW and BREW shop are trademarks of QUALCOMM, Inc.

Openwave is a trademark of Openwave Systems Incorporated. eZiText is a registered trademark of Zi Corporation. Java is a trademark of Sun Microsystems, Inc. All other trademarks are the property of their respective owners.

Copyright © 2006 Kyocera Wireless Corp.  
All rights reserved.

Ringer Tones Copyright © 2000-2002  
Kyocera Wireless Corp.

82-G1710-2EN, Rev. 001

## FCC Notice

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. To maintain compliance with FCC RF exposure guidelines, if you wear a handset on your body, use the Kyocera Wireless Corp. (KWC) supplied and approved universal pouch CV90-61344-02(03) or case CV90-M2834-01.

Other accessories used with this device for body-worn operations must not contain any metallic components and must provide at least 15mm separation distance including the antenna and the user's body.

## THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population.

The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg.\* Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands.

Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network.

In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The body-worn SAR values were obtained by using Kyocera Wireless Corp. [KWC] supplied and approved universal pouch CV90-61344-02(03) or case CV90-M2834-01.

Body-worn measurements differ among phone models, depending upon availability of accessories and FCC requirements.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section <http://www.fcc.gov/oet/fccid> after searching on the FCC ID: OVFKWC-K27.

Additional information on SAR can be found on the Cellular Telecommunications and Internet Association (CTIA) web-site at <http://www.wow-com.com>.

\* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

### **Caution**

The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the warranty and user's authority to operate the equipment.

### **Optimize your phone's performance**

Use the guidelines on page 2 to learn how to optimize the performance and life of your phone and battery.

### **Air bags**

If you have an air bag, DO NOT place installed or portable phone equipment or other objects over the air bag or in the air bag deployment area. If equipment is not properly installed, you and your passengers risk serious injury.

### **Medical devices**

**Pacemakers**—Warning to pacemaker wearers: Wireless phones, when in the 'on' position, have been shown to interfere with pacemakers. The phone should be kept at least six (6) inches away from the pacemaker to reduce risk.

The Health Industry Manufacturers Association and the wireless technology research community recommend that you follow these guidelines to minimize the potential for interference.

- Always keep the phone at least six inches (15 centimeters) away from your pacemaker when the phone is turned on.
- Do not carry your phone near your heart.
- Use the ear opposite the pacemaker.
- If you have any reason to suspect that interference is taking place, turn off your phone immediately.

**Hearing aids**—Some digital wireless phones may interfere with hearing aids. In the event of such interference, you may want to consult your service provider or call the customer service line to discuss alternatives.

**Other medical devices**—If you use any other personal medical device, consult the manufacturer of the device to determine if it is adequately shielded from external RF energy. Your physician may be able to help you obtain this information.

**In health care facilities**—Turn your phone off in health care facilities when instructed. Hospitals and health care facilities may be using equipment that is sensitive to external RF energy.

### **Potentially unsafe areas**

**Posted facilities**—Turn your phone off in any facility when posted notices require you to do so.

**Aircraft**—FCC regulations prohibit using your phone on a plane that is in the air. Turn your phone off or switch it to Airplane Mode before boarding aircraft.

**Vehicles**—RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer of the device to determine if it is adequately shielded from external RF energy. Your physician may be able to help you obtain this information.

**Blasting areas**—Turn off your phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

**Potentially explosive atmospheres**—Turn off your phone when you are in any area with a potentially explosive atmosphere. Obey all signs and instructions. Sparks in such areas could cause an explosion or fire, resulting in bodily injury or death. Areas with a potentially explosive atmosphere are often, but not always, clearly marked.

They include:

- fueling areas such as gas stations
- below deck on boats
- transfer or storage facilities for fuel or chemicals
- vehicles using liquefied petroleum gas, such as propane or butane
- areas where the air contains chemicals or particles such as grain, dust, or metal powders
- any other area where you would normally be advised to turn off your vehicle engine

### **Use with care**

Use only in normal position (to ear). Avoid dropping, hitting, bending, or sitting on the phone.

### **Keep phone dry**

If the phone gets wet, turn the power off immediately and contact your dealer. Water damage may not be covered under warranty.

### **Resetting the phone**

If the screen seems frozen and the keypad does not respond to keypresses, reset the phone by completing the following steps:

1. Remove the battery door.
2. Remove and replace the battery.

If the problem persists, return the phone to the dealer for service.

## Accessories

Use only Kyocera-approved accessories with Kyocera phones. Use of any unauthorized accessories may be dangerous and will invalidate the phone warranty if said accessories cause damage or a defect to the phone.

To shop online for phone accessories, visit [www.kyocera-wireless.com/store](http://www.kyocera-wireless.com/store).

To order by phone, call 800-349-4188 (U.S.A. only) or 858-882-1410.

## Radio Frequency (RF) energy

Your telephone is a radio transmitter and receiver. When it is on, it receives and sends out RF energy. Your service provider's network controls the power of the RF signal. This power level can range from 0.006 to 0.6 watts.

In August 1996, the U.S. Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. These guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies in the following reports:

- ANSI C95.1 (American National Standards Institute, 1992)
- NCRP Report 86 (National Council on Radiation Protection and Measurements, 1986)
- ICNIRP (International Commission on Non-Ionizing Radiation Protection, 1996)

Your phone complies with the standards set by these reports and the FCC guidelines.

## E911 mandates

Where service is available, this handset complies with the Phase I and Phase II E911 Mandates issued by the FCC.

## Hearing Aid Compatibility (HAC) with Mobile Phones

Some mobile phones and hearing devices (hearing aids and cochlear implants), when used together, result in buzzing, humming, or whining noises detected by the user. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated.

Phones that are rated have the rating on their box or a label on the box. The ratings are not guarantees and results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

**M-Ratings**— Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

**T-Ratings**— Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices have telecoils in them.)

Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you choose the proper rating for your mobile phone. The more immune your hearing aid is, the less likely you are to experience interference noise from mobile phones.

For more information about hearing aid compatibility, visit the FCC's Consumer & Governmental Affairs Bureau Web site at [www.fcc.gov/cgb/dro](http://www.fcc.gov/cgb/dro).

Hearing Aid Compatibility (HAC) Rating: M3

#### **Battery and charger specifications**

<b>Travel Charger</b>	<b>Input</b>	<b>Output</b>
CE90-R2231-01	100-240 VAC / 50/60 Hz	4.5 V 1.2 A
CV90-G2588-01	120 VAC / 60Hz	5.2 V 400 mA
CV90-G2589-01	85-264 VAC / 50/60 Hz	4.5 V 1.2 A
<b>Vehicle Charger</b>	<b>Input</b>	<b>Output</b>
CV90-G2959-01	100-240 VAC / 50 / 60 Hz	4.5 V 1.2 A
CV90-K0278-01	120 VAC / 60Hz	5.2 V 400 mA
<b>Standard Battery</b> CV90-N3344-01, 3.7V / 850mAh		

#### **Kyocera Wireless Corp.**

10300 Campus Point Drive, San Diego, CA 92121  
U.S.A.

Visit us at [www.kyocera-wireless.com](http://www.kyocera-wireless.com)

To purchase accessories, visit

[www.kyocera-wireless.com/store](http://www.kyocera-wireless.com/store)

# TABLE OF CONTENTS

---

<b>1</b>	<b>Getting Started</b> . . . . .	<b>1</b>	Personalizing the screen . . . . .	<b>32</b>	
	Installing the battery . . . . .	1	Creating a secure environment . . . . .	34	
	Getting to know your phone . . . . .	3	Network settings . . . . .	35	
<b>2</b>	<b>Making and Answering Calls</b> . . . . .	<b>7</b>	Accessory Settings . . . . .	36	
	Making a call . . . . .	7	<b>7</b>	<b>Using Voice Recognition</b> . . . . .	<b>37</b>
	Using the speakerphone . . . . .	8	Setting up voice dialing . . . . .	37	
	Speed dialing . . . . .	10	Calling using voice tags . . . . .	37	
	Setting up voicemail . . . . .	10	Calling using digit dialing . . . . .	38	
	Calling emergency services . . . . .	11	Training voice recognition . . . . .	40	
	Understanding roaming . . . . .	12	<b>8</b>	<b>Using Media Gallery</b> . . . . .	<b>41</b>
<b>3</b>	<b>Entering Letters, Numbers, and Symbols</b> . . . . .	<b>14</b>	Accessing files . . . . .	41	
<b>4</b>	<b>Storing Contacts</b> . . . . .	<b>17</b>	Creating free space . . . . .	42	
	Creating a new contact . . . . .	17	<b>9</b>	<b>Using Tools and Games</b> . . . . .	<b>43</b>
	Adding a code or extension . . . . .	17	Voice Memo . . . . .	43	
	Customizing your contacts . . . . .	17	Scheduler . . . . .	43	
	Editing a contact . . . . .	18	Alarm Clock . . . . .	44	
	Erasing a contact . . . . .	19	Tip Calculator . . . . .	45	
	Customizing a phone number . . . . .	19	Calculator . . . . .	45	
	Finding contact information . . . . .	19	Timer . . . . .	46	
	Using caller groups . . . . .	20	Stopwatch . . . . .	46	
<b>5</b>	<b>Sending and Receiving Text Messages</b> . . . . .	<b>22</b>	World Clock . . . . .	46	
	Sending text messages . . . . .	22	Games . . . . .	47	
	Retrieving text messages . . . . .	25	<b>10</b>	<b>Connecting to the Internet</b> . . . . .	<b>49</b>
	Creating and editing prewritten messages (QuickText) . . . . .	27	Using the Mobile Web . . . . .	49	
<b>6</b>	<b>Customizing Your Phone</b> . . . . .	<b>28</b>	<b>11</b>	<b>Getting Help</b> . . . . .	<b>51</b>
	Silencing all sounds . . . . .	29	<b>Index</b> . . . . .	<b>53</b>	
	Choosing ringers . . . . .	29			
	Setting sounds for your phone . . . . .	30			
	Adjusting volume . . . . .	30			
	Setting message alerts . . . . .	31			
	Using shortcuts . . . . .	31			





# 1 GETTING STARTED

---

 
 
## Installing the battery

Your Kyocera K132 phone comes with a removable lithium ion (LiIon) battery.

**Fully charge the battery before using the phone.**

To install the battery:

1. Hold the phone face down.
2. Toward the bottom of the phone there is a recess to aid you in opening the battery door. Use your fingernail to pull the battery door away.
3. Place the battery in the phone casing with the metal contacts toward the bottom of the phone.
4. Place the battery door tab in the openings near the top of the phone.
5. Press the battery door until it clicks into place.

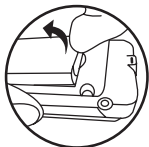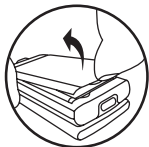


**Note:** Before you remove the battery, make sure the phone is powered off.

## Charging the battery



 You must have at least a partial charge in the battery to make or receive calls.

To charge the battery:

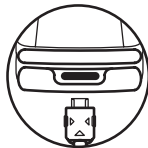1. Connect the AC adapter to the jack on the bottom of the phone.
2. Plug the adapter into a wall outlet.



The battery icon in the upper-right corner of the screen tells you whether the phone is:

- Charging (the icon is animated)
- Partially charged 
- Fully charged 

**Note:** The battery will not charge if you use the phone while it is connected to an AC adapter.

**Note:** If you are using a 400 mA charger with any of the following part numbers: CV90-G2968-01; CV90-G2610-02; or CV90-60859-1, please be aware that this power unit is intended to be correctly oriented in a vertical or floor mount position.

## Recharging the battery

You can safely recharge the battery at any time, even if it has a partial charge.

## Caring for the battery


### General safety guidelines


- Do not take apart, puncture, or short-circuit the battery.
- If you have not used the battery for more than a month, recharge it before using your phone.
- Avoid exposing the battery to extreme temperatures, direct sunlight, or high humidity.
- Never dispose of any battery in or near a fire. It could explode.


### Common causes of battery drain


- Playing games or using the Web.
- Keeping backlighting on.
- Operating in analog (A) mode. Your phone switches between modes to find the best signal. To set your phone to operate in a single mode, select **Menu** → **Settings** → **Network** → **Digital/Analog**.
- Operating in digital mode when far away from a base station or cell site.
- Using data cables or accessories.
- Operating when no service is available, or service is available intermittently.
- High earpiece and ringer volume settings.
- Repeating sound, vibration, or lighted alerts.


## Performing basic functions

**Turn the phone on and off:** Press and hold  until the phone beeps or plays a tone.

**Make a call:** Enter the number and press .

**End a call:** Press .

**Answer a call:** Open the flip and press .



**Access voicemail:** Press and hold  and follow the system prompts.


**Verify your phone number:** Select **Menu** → **Settings** → **Phone Info**.

**Silence the ringer on an incoming call:**


Press  then  to answer.


-OR-


Press the side volume key  up or down then  to answer.

**Silent Mode shortcut:** Press and hold .


**Record a voice memo:** Press and hold  right.

 
**Access Recent Calls list:**  
Press and  hold down.


**Launch the Browser:**  
Press and  hold left.

**Access your custom menu:** Press and hold  up. (see “Creating and updating your custom menu” on page 32 for instructions on setting up your custom menu).


# Getting to know your phone


- 1 **Home screen.**
- 2 **Left softkey** accesses menus and functions.
- 3 **Navigation key** scrolls through lists and text entry fields and accesses shortcuts from the home screen.
- 4 **Send/Talk key** starts or answers calls. Press once to activate voice dialing, twice to display the Recent Calls list, and three times to redial the last dialed number.
- 5 **Back key** erases characters in text entry and returns to the previous screen.
- 6 **Keypad** for entering numbers, letters, or symbols.
- 7 \* **Shift key** changes the text mode in text entry.
- 8 **Right softkey** accesses the Contacts directory and other menu options.
- 9 **OK key** selects a menu item or option.
- 10 **End/Power key** turns the phone on and off, ends a call or browser session, and returns you to the home screen from other menus.
- 11 **Speakerphone key** activates the speakerphone and answers incoming calls.
- 12 **# Space key** enters a space during text entry. Activates Silent mode.
- 13 **0 Next key** cycles through word choices during text entry.
- 14 **Jack for AC adapter** (included) .

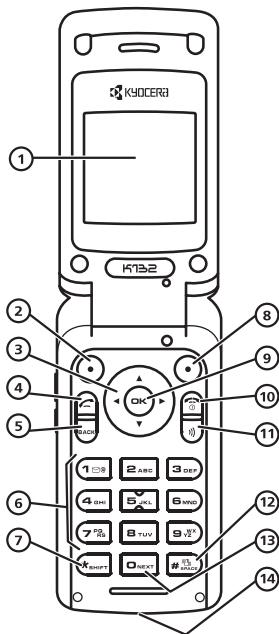

 **Warning:** Inserting an accessory into the incorrect jack will damage the phone.

 - ⑮ **Antenna** (does not extend)
- ⑯ **Jack** for hands-free headset and data cable (sold separately) ⚠.
- ⑰ **Volume key** to raise or lower speaker volume.
- ⑱ **External speaker** for speakerphone and alerts.

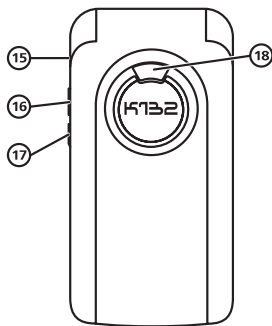

 **Warning:** Inserting an accessory into the incorrect jack will damage the phone.

## Using menus

The contents of the main menu are as follows:

### Recent Calls

All Calls  
Incoming Calls  
Outgoing Calls  
Missed Calls  
Erase Call Lists  
Recent Calls Timer  
All Calls Timer  
Home Calls Timer\*  
Roam Calls Timer\*

### Contacts

View All  
Add New  
View Groups  
Speed Dial List  
Voice Dial List\*  
Information

### Messages

New Text Msg  
Voicemail  
InBox  
Browser Alerts  
Sent  
OutBox  
Saved  
Drafts  
Msg Settings  
Erase Messages

### Media Gallery

Images  
Sounds

### Settings

Silent Mode  
Sounds  
Display  
Convenience  
Voice Features  
Messaging  
Security  
Network  
Accessories

### Tools & Games

Brick Attack™\*  
Race 21™\*  
Voice Memo  
Scheduler  
Alarm Clock  
Tip Calculator  
Calculator  
Timer  
Stopwatch  
World Clock

### Web Browser


 



Connects to Internet

### Phone Info

Platform  
Your Number  
SW Version  
PRL Version  
Factory Config  
ESN  
Technology  
SID  
Browser Info  
Icon Key  
**BREW Apps\***  
Mobile Shop\*  
Settings  
Help

\*These features may not be available on your phone or may have different names. Contact your service provider for more information.

## Navigating through menus

- Press the left soft key  to select **Menu**.
- Press  left, right, up, or down to view menus and options.
- Press  to select a menu item.
- Press  to back up a menu level.
- Press  to return to the home screen.



























In this guide, an arrow → tells you to select an option from a menu.

For example, **Menu** → **Settings** means select **Menu** then select the **Settings** option.

**Note:** To change the way the menus appear, see “Choosing a menu view” on page 32 for details.

## Understanding screen icons


These icons may appear on your phone's home screen.

- |  |  |   |   |
|--|--|---|---|
|   | The phone is operating in IS2000 (1X) digital mode.  |  | (blinking) The phone is sending high-speed data.  |
|   | The phone is operating in IS95 digital mode.   |  | (blinking) The phone is receiving high-speed data.  |
|   | The phone is operating in Analog (FM) mode.  |  | High-speed data service is available, but the phone is dormant.   |
|   | The phone is receiving a signal. You can make and receive calls. Fewer bars indicate a weaker signal.                  |  | The phone is at the home screen. To access <b>Menu</b> , press the left soft key  .      |
|   | A call is in progress.   |  | The phone is at the home screen. To access <b>Contacts</b> , press the right soft key  . |
|   | The phone is not receiving a signal. You cannot make or receive calls.   |  | The phone is set to light up instead of ring.   |
|   | The phone is roaming outside of its home service area.   |  | The phone is set to vibrate or to vibrate and then ring.  |
|   | You have a voice message.  |  | Position location is set to your service provider and to emergency services.  |
|  | The battery is fully charged. The more black bars, the greater the charge.   |  | Position location is set to emergency services only.  |
|   | The alarm clock is set.  |  | DRM protected.  |
|   | The phone is in privacy mode or is accessing a secure Web site.  |  | Auto-Answer is on.  |
|   | High-speed (3G) data service is available and active on your phone. Check with your service provider for availability. |  | Speakerphone is on.   |



## 2 MAKING AND ANSWERING CALLS

---


### Making a call

Make sure you are in an area where a signal can be received. Look for  on the home screen.

**Note:** The more bars you see in this symbol, the stronger the signal. If there are no bars, move to where the signal strength is better.



1. Open the flip.
2. Enter the phone number and press .
3. Press  or close the flip to end the call.

### Redialing a number

- Press  three times to redial the last number called.

### Calling a saved number



Use your Contacts directory to quickly find a saved number.

1. Press the right soft key  to select **Contacts**.
2. Scroll down the list to find the contact you want to call.
3. Highlight the name and press  to dial the number.


### Answering a call

When a call comes in, the phone rings, vibrates, or lights up, depending on your settings.

The phone number of the caller appears on the home screen if the flip is open. If the number is stored in your Contacts directory, the contact name also appears.





1. Open the flip.
2. Press  to answer the incoming call.  
- or -  
Press  to answer the incoming call and turn on the speakerphone simultaneously.

### Setting Open to Answer

The default setting of your phone requires you to press  to answer an incoming call. You can set the phone to answer immediately when you open the flip.



- Select **Menu** → **Settings** → **Convenience** → **Open to Answer** → **Enabled**.
  - Select **Disabled** to have the phone continue ringing when you open the flip.

## Silencing an incoming call

- Press  or  to silence the call.  
**Note:** In the absence of voicemail, this feature drops the call.  
- or -
- Press  to silence the call then press  to answer it.

Either action silences only the current call. The next call will ring according to your settings.


 

## Adjusting the volume during a call


- To adjust the earpiece volume during a call, press  or  up or down.

## Using the speakerphone

Your Kyocera K132 phone has a built-in speakerphone that you can use during a call when the flip is open.

**Note:** This function works only for the current call. Once the call is ended, the speakerphone turns off and the earpiece volume returns to normal.


1. Open the flip.
2. Press  to answer the call and turn on the speakerphone simultaneously. “ Speaker is ON” displays on the screen.  
- or -  
Press  to turn on the speakerphone at any time during a call.

To turn off the speakerphone, press .

## Setting the phone to hold calls

The Hold Call feature allows you to place incoming calls on hold until you are ready to answer them.

**Note:** This feature will not work if “Open to Answer” is enabled. See “Setting Open to Answer” on page 7.


1. Select **Menu** → **Settings** → **Convenience** → **Hold Call** → **Enabled**.
2. If you have not recorded a hold message, you will be prompted to record one, such as “Please hold. I’ll answer in a minute.”
  - a. Press the left soft key  to select **Record**.
  - b. Record the message and select **Save**.
  - c. Select **OK** to record the message again.
  - d. Select **Save** or **Options (Play, Re-Record, or Exit)**.

The next time a call comes in, you will have the option of placing it on hold.

## Placing a call on hold

You can place a call on hold once you have enabled this feature.

**Note:** If you are already on a call and you receive another call, you cannot place the incoming call on hold. It will go to voicemail.

1. When a call comes in, press the right soft key  to select **Hold Call**. The caller will be



placed on hold and will hear your recorded hold message.





- To speak to the caller, select **Answer**.  
- or -  
To hang up without speaking to the caller, select **End Call**.

## Changing the hold message

- Select **Menu** → **Settings** → **Convenience** → **Hold Call** → **Re-Record Msg** and follow the prompts.
- Record the message twice.
- Select **Save** or **Options**  
(**Play**, **Re-Record**, or **Exit**).


## Dealing with missed calls

When you have missed a call, “Missed Call” appears on your screen unless the caller leaves a voicemail.

- To clear the screen, open the flip and press the left soft key  to select **OK**.
- To view details of the call, press the right soft key  to select **Calls**. Highlight the missed call number and press the left soft key  to select **Details**.
- To return the call, highlight the number and press .

 
## Setting missed call alerts

You can set an alert to beep every five minutes after you have missed a call.


- Select **Menu** → **Settings** → **Sounds** → **Missed Call Alert**
- Highlight an option and press .

## Viewing recent call details

Details on the last 30 calls you made, received, or missed are stored in the Recent Calls list and are identified by the following icons:





## Viewing recent calls


- Select **Menu** → **Recent Calls**.
- Select a list: **All Calls**, **Incoming Calls**, **Outgoing Calls**, or **Missed Calls**.
- Highlight a recent call and press the right soft key  to select **Options**:
  - Save** adds the phone number to the Contacts list.
  - Send Msg** allows you to send a text message to the phone number.
  - Erase** erases the selected call record.

**Note:** If the phone number has been classified as “secret,” you must enter your four-digit lock code to view or edit it. For information on the lock code, see “Changing your lock code” on page 34. To classify a phone number as secret, see “Creating a new contact” on page 17.

## Calling recent calls

1. Open the flip.
2. Press and hold  down.
3. Highlight a number to call and press .

## Erasing recent calls

1. Select **Menu** → **Recent Calls** → **Erase Call Lists**.
2. Select an option: **All Calls**, **Incoming Calls**, **Outgoing Calls**, or **Missed Calls**.
3. Press the left soft key  to select **Yes**.


## Speed dialing

Before you can use speed dialing, you must save a phone number as a contact and assign a speed dial location to it.

- To add a speed dial location to a saved or new contact, see “Customizing a phone number” on page 19.

## Using speed dialing

To call a contact that has a speed dial location:

- From the home screen, enter the one- or two-digit speed dialing location and press .

## 1-Touch dialing

1-Touch dialing is the fastest way to call a saved contact.



**Note:** You must (1) enable 1-Touch dialing on your phone and (2) have a speed dial location assigned to a contact.

## Enabling 1-Touch dialing

- Select **Menu** → **Settings** → **Convenience** → **1-Touch Dialing** → **Enabled**.


## Using 1-Touch dialing

To call a contact that has a speed dial location:

- From the home screen, press and hold the speed dialing number. If it is a two-digit number, press the first digit briefly, then press and hold the second digit. For example, if the speed dialing location is 15, press  briefly then press and hold .


## Setting up voicemail

Before your phone can receive voicemail messages, you must set up a password and record a personal greeting with your service provider. All unanswered calls to your phone are then automatically transferred to voicemail, even if your phone is in use or turned off.



1. From the home screen, press and hold .
2. Follow the system prompts to create a password and record a greeting.

**Note:** If you have trouble accessing your voicemail, contact your service provider.


## Checking voicemail messages

When a voice message is received, your screen displays “New Messages” along with the  symbol at the top of your screen. The symbol flashes if the message is urgent.


### If you see “New Messages” on your screen

1. Press the left soft key  to select **Call** and call your voicemail number.
2. Press  when you hear your greeting.
3. Follow the prompts to retrieve the message.

**To clear the screen without checking messages:**

- Press the right soft key  to select **Ignore**.


### If you see only the symbol

1. Press and hold  to call to your voicemail number.
2. Follow the prompts to retrieve the message.

**Note:** You can set the phone to beep or vibrate every five minutes to remind you that you have a voicemail message. See “Setting message alerts” on page 31.

## Calling emergency services



Regardless of your 3-digit emergency code (911, 111, 999, 000, etc.), your phone operates as described below.

- Dial your 3-digit emergency code and press .

You can call the code even if your phone is locked, has no balance, or your account is restricted. When you call, your phone enters **Emergency mode**. This enables the emergency service exclusive access to your phone to call you back, if necessary. To make or receive regular calls after dialing the code, you must exit this mode.

## To exit Emergency mode

When you have completed the emergency call:

1. Press the left soft key  to select **Exit**.
2. Press the left soft key  again to confirm your choice.

**Note:** To determine who has access to your location, see “Setting position location” on page 36.



## Using your phone in an airplane

While in an airplane, it is normally required that you turn off your mobile phone because it emits RF signals that interfere with air traffic control.

In Airplane mode, however, your phone will not emit RF signals. You cannot make or receive calls, send text messages, or use the Web, but you can play games, use the Scheduler, set the clock, and make emergency calls to designated emergency numbers.



**Note:** Please check with uniformed personnel before operating your phone in Airplane mode.


## Setting Airplane mode

1. Select **Menu** → **Settings** → **Convenience** → **Airplane Mode**.
2. Press the left soft key  to select **OK** after reading the message.
3. Select **Enabled** or **Disabled**.
4. Select **Yes** or **No** to set the date and time.
5. Press the left soft key  to select **Done**.

## Tracking calls

You can track the number and duration of calls made and received on your phone.

1. Select **Menu** → **Recent Calls**.
2. Select a timer:
  - **Recent Calls Timer** tracks all calls you have made and received since you last reset this timer. To reset this timer, press the left soft key  to select **Reset**.
  - **All Calls Timer** tracks all calls you have made and received. This timer cannot be reset.
  - **Home Calls Timer** tracks all calls you have made while your phone is not roaming. To reset this timer, press the left soft key  to select **Reset**. This will reset both the Home Calls and the Roam Calls Timer.

- **Roam Calls Timer** tracks all the roam calls you have made. To reset this timer, press the left soft key  to select **Reset**. This will reset both the Home Calls and the Roam Calls Timer.

## Timing your calls


You can set your phone to beep 10 seconds before each minute passes when you are on a call.

- Select **Menu** → **Settings** → **Sounds** → **Minute Alert** → **Enabled**.

## Understanding roaming

### Setting an alert for roaming

The phone can alert you when you roam outside of your home service area.

1. Select **Menu** → **Settings** → **Network** → **Roam/Svc Alert**.
2. Select an option and press .
  - **When no svc** alerts you with three tones decreasing in pitch when service is lost and three tones increasing in pitch when service is acquired again.
  - **On roam change** alerts you with two decreasing tones when roaming service is acquired and three increasing tones when home area service is acquired again.

- On any change alerts you with three increasing tones if there is a change in roaming service or three decreasing tones if the phone loses service.


## Setting the roam ringer

You can set a ringer to indicate when an incoming call will be subject to roaming charges.

- Select **Menu** → **Settings** → **Sounds** → **Roam Ringer** → **Enabled**. You will hear the ringer.

## Setting Call Guard


You can set the phone to warn you before you answer or place a call while roaming.

- Select **Menu** → **Settings** → **Convenience** → **Call Guard** → **Call Prompt**.
  - The phone now emits a distinctive roam ring to indicate when you are roaming during calls.
  - To accept or place a call while roaming, you must press .

**Note:** Call Prompt is disabled when the phone is in emergency mode.


## Setting digital or analog mode

Depending on services available from your service provider, you may set the phone to either digital or analog mode. This is useful if you are in an area that borders on digital service and the automatic feature is causing the phone to keep switching between modes.

1. Select **Menu** → **Settings** → **Network** → **Digital/Analog**.
2. Select an option and press .
  - **Automatic** automatically switches the phone between digital and analog.
  - **Digital only** sets the phone to work in digital mode only.

## Turning roaming on or off

This setting allows you to control the phone's roaming feature by specifying which signals the phone will accept.

1. Select **Menu** → **Settings** → **Network** → **Roam Option**.
2. Select an option and press .
  - **Automatic** (recommended setting) accepts any system the phone service provides.
  - **No roaming** prevents you from making or receiving calls outside of your home service area.

 
**Note:** If your phone has more than one setting for Automatic, contact your service provider to determine which one to use.

## 3 ENTERING LETTERS, NUMBERS, AND SYMBOLS

You can enter letters, numbers, and symbols in contacts, text messages, and your banner.

### Understanding text entry screens

The current text entry mode (and capitalization setting, when applicable) is indicated by an icon.

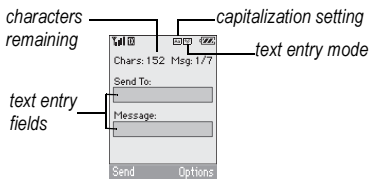

### Text entry modes

There are six text entry modes:

A	Case change	123	Numbers only
a <sub>b</sub> c	Normal alpha	eZi	Rapid Entry
&?! &?!	Add Symbol	☺	Add Smiley


**Note:** The mode you start in depends on the task you are performing. For example, when entering a phone number, you're in number mode. When entering a name for a contact, you're in normal text mode. See "Changing modes" on page 15.

### 123 Entering numbers

- To enter a number while in 123 mode, press a number key once.
- To enter a number while in a<sub>b</sub>c or eZi mode, press and hold a number key until the number appears on the screen.






### a<sub>b</sub>c Entering words letter by letter

1. Press a key once for the first letter, twice for the second letter, and so on. If your phone is set to Spanish, French, or Portuguese, accented letters are available.
2. Wait for the cursor to move right, then enter the next letter.


**Note:** To enter a space, press .

### eZi Entering words quickly

When you press a series of keys using eZi mode, eZi checks its dictionary of common words and guesses at the word you are trying to spell.


1. For each letter of the word you want, press the key once. For example, to enter the word "any" press  →  → .
2. If the word doesn't match what you want, press  to look at other word matches.
3. When you see the word you want, press .

## &?! Entering symbols



While entering text, you can enter symbols by pressing  until you see the symbol you want. Using this method, you have access to the following symbols:

. @ ? ! - , & : ' 1

To access the full set of symbols:

1. From the text entry screen, select **Options**.
2. Select **&?! Add Symbol**.
3. Press  down to view the list of symbols.
4. Press the number key corresponding to the symbol you want.

## Entering smileys

1. From the text entry screen, select **Options**.
2. Select  **Add Smiley**.
3. Press  down to view the list of smileys.
4. Press the number key that corresponds to the smiley you want.

## Switching default text entry modes


You can change the default text entry mode when creating a text message. This setting applies only to the message body screen, not the “To” screen.

1. Select **Menu** → **Messages** → **Msg Settings** → **Default Text**.
2. Select **Normal Alpha** or **Rapid Mode**.


## Changing modes

Sometimes you need to change modes. For example, to enter numbers in an email address while in <sup>a</sup>b<sup>c</sup> mode, you must change to 123 mode, enter the numbers, and then change back to <sup>a</sup>b<sup>c</sup> mode to complete the address.

**To change text entry modes:**




 



 

 

 


- Press and hold  until the icon for the mode you want appears.  
-or-
- Select **Options**, then select a different mode.

## Capitalization settings

You can change your capitalization setting at any time while entering text. Press  to choose upper or lower case while in <sup>a</sup>b<sup>c</sup> Normal Alpha mode.

## Quick reference to text entry

This table gives general instructions for entering letters, numbers, and symbols.

To...	Do this...
Enter a letter	Use  mode and press a key until you see the letter you want. For more information, see page 14.
Enter a number	Use  mode and press a key once to enter its number. For more options, see page 14.
Enter a symbol	Press  until you find the symbol you want. See page 15.
Enter a smiley	Use  mode and press a key once to enter its number. For more options, see page 15.
Enter a space	Press  .
Erase a character	Press  .
Erase a word	Press and hold  .
Move the cursor right or left	Press  right or left.
Move the cursor up or down	Press  up or down.
Change text entry modes	Press and hold  .
Capitalize any letter	In  mode, press  . Choose <b>A</b> .
Lowercase any letter	In  mode, press  . Choose <b>a</b> .
Select soft options on the screen	Press the appropriate key, left  or right  .
Highlight an option at the bottom of the screen	Press  right or left.





 


## 4 STORING CONTACTS

---





Use your phone's Contacts directory to store information about a person or company. Each contact entry can have up to six phone numbers, two email addresses, two Web addresses, two street addresses, and a space for notes.

### Creating a new contact

1. From the home screen, enter the phone number you want to save, including the area code.
2. Press the left soft key  to select **Save**.
3. Press  to select **Save New Contact**.
4. Enter a name for the contact.
  - If you need to learn how to enter letters, see “Understanding text entry screens” on page 14.
  - To add a symbol or smiley to the contact name, or to change the text entry mode, press the right soft key  to select **Options**.
5. Either save now or add more contact information.
  - To save now, press the left soft key  to select **Save**.
  - To enter additional phone numbers, email and Web addresses, or notes, press  down repeatedly. For help switching between numbers and letters for email or Web addresses, see “Changing modes” on page 15.

### Adding a code or extension

 



When you save the phone number of an automated service, you may include a pause to stop dialing, such as when waiting to dial an extension.

1. From the home screen, enter the first portion of the phone number.
2. Press the right soft key  to select **Options**.
3. Select a type of pause:
  -  **Time Pause**
  -  **Hard Pause**
4. Enter the remaining numbers.
5. Press the left soft key  to select **Save**.




### Customizing your contacts

You can customize each contact in your Contacts directory by assigning ringers, pictures, and number types, or by classifying your contacts as Personal or Business.


### Assigning ringers

1. Press the right soft key  to select **Contacts**.
2. Highlight a contact and press .
3. Highlight the contact name and press the right soft key  to select **Options**.
4. Select **Ringer** → **Assign Ringer**.
5. Scroll down the list to hear the different ringers and press  to select one.





## Assigning pictures

1. Press the right soft key  to select **Contacts**.
2. Highlight a contact and press .
3. Highlight the contact name and press the right soft key  to select **Options**.
4. Select **Picture** → **Assign Picture** → **Images**.
5. Select **Saved Images** or **Caller IDs**.

**Note:** With Kyocera Mobile PhoneTools, you can transfer digital pictures to your phone. To purchase MPT or other accessories, visit [www.kyocera-wireless.com/store](http://www.kyocera-wireless.com/store).

6. Scroll through the list to view your options and press  to assign it to your contact.







## Classifying contacts as Personal or Business

1. Press the right soft key  to select **Contacts**.
2. Highlight a contact and press .
3. Highlight the contact name and press the right soft key  to select **Options**.
4. Select **Classify**.
5. Select **Personal** or **Business** and press .

**Note:** To assign Personal or Business ringers, see “Assigning business and personal ringers” on page 29.

## Assigning number types

When you assign a number type, an icon is placed in front of a contact number to specify the type of number, such as work, home, or mobile.

1. Press the right soft key  to select **Contacts**.
2. Highlight a contact and press .
3. Highlight the contact number and press the left soft key  to select **Edit**.
4. Press  down once and press .
5. Highlight an option to designate the number as **General**, **Work**, **Home**, **Mobile**, **Pager**, or **Fax** and press . The associated icon will appear next to the number in your Contacts directory and Recent Calls list.



General



Work



Home



Mobile







Pager







Fax

6. Press the left soft key  to select **Save**.



 


## Editing a contact

1. Press the right soft key  to select **Contacts**.
2. Highlight a contact and press .
3. Highlight the contact name or number and press the left soft key  to select **Edit**.
4. Enter your changes and press the left soft key  to select **Save**.

## Erasing a contact

1. Press the right soft key  to select **Contacts**.
2. Highlight the contact to erase and press .
3. Select **Options**.
4. Highlight **Erase Contact** and press .
5. Press the left soft key  to confirm.

## Customizing a phone number

1. Press the right soft key  to select **Contacts**.
2. Highlight the contact to edit and press .
3. Press  down to highlight the number.
4. Press the right soft key  to select **Options**.
5. Highlight an option and press :
  - **Call** to call the contact.
  - **Send Text Msg** brings you to the text messaging screen.
  - **Add Speed Dial** assigns or removes the speed dial location.
  - **View Number** to see the selected phone number.
  - **Erase Number** erases the number from the contact.
  - **Secret** makes the number secret so that it will not appear on the screen until the lock code is entered. Secret numbers can be called without a lock code. (For more information, see “Limiting calls” on page 35.)

- **Primary Number** makes this number the first one that shows up when you open the contact.
  - **Add to Group...** allows you to add the contact to a caller group that you have defined. For more information on caller groups, see “Using caller groups” on page 20.
  - **Add Voice Dial** to record a voice tag so you can call a contact using voice recognition (VR). For more information, see page 37.
  - **Erase Voice Dial** erases the voice tag associated with the number.
  - **Edit Voice Dial** records a new voice tag.
6. Enter the new information and follow the prompts.
  7. Select **Save**, if necessary.

## Finding contact information

To find a phone number or contact, you can (1) check the Frequent list, (2) search the Contacts directory, or (3) use Fast Find.



### Checking the Frequent List

From the home screen, select **Contacts**. The last 15 of your most frequently called contacts appear when the Frequent List is enabled. Scroll past the double line to view the All Contacts list.

## To enable the Frequent List setting

- Select **Menu** → **Settings** → **Convenience** → **Frequent List** → **Enabled**.

## Searching the Contacts directory

1. Select **Contacts** for a list of all contacts.  
To quickly get down the list, enter the first letter of the contact. The menu skips to that letter of the alphabet.  
- or -  
Select **Menu** → **Contacts**.
2. Select a search method:
  - **View All** lists all saved contacts.
  - **View Groups, Speed Dial List, Voice Dial List** selects a contact from the specified list.
3. Highlight a contact and press .
  - To call the contact, highlight the number and press .



## Setting Fast Find

With Fast Find, you press one or two keys to view close matches of the number you are looking for.

- Select **Menu** → **Settings** → **Convenience** → **Fast Find** → **Enabled**.

## Using Fast Find

1. From the home screen, press the keys corresponding to the letters of the name you want to find. A matching contact or speed dial entry appears.





 
2. Press  down to scroll through matching entries.
3. Highlight the name you want then press  to call the number.


## Using caller groups

Caller groups are a way to organize your contacts into groups that can then share a common ring tone or graphic.


**Note:** Your phone comes with two groups already defined, **Business** and **Personal**.

## Creating a caller group



1. Select **Menu** → **Contacts** → **View Groups**.
2. Press the left option button  to select **New**.
3. Enter a name for the group.
  - If you need to learn how to enter letters, see “Understanding text entry screens” on page 14.
  - To add a symbol or smiley to the contact name, or to change the text entry mode, press the right option button  to select **Options**.
4. Press the left option button  to select **Next**.
5. Press  down to scroll through your saved contacts. Press the left option button  to **Add** a contact to the group. A check mark appears next to the name.

**Note:** To remove a checked contact from the group, press the left option button  again to select **Remove**.





**Note:** If a contact you are trying to add already belongs to another group, an alert dialog appears. To continue adding the contact to the new group, select **Yes**. To abort, select **No**.

6. Press the right option button  to select **Done** and save the group.

## Editing a caller group

1. Select **Menu** → **Contacts** → **View Groups**.
2. Press  down to scroll through the list of groups. When you come to the group you wish to edit, press the right option button  to select **Options** → **Edit**.
3. Follow Steps 3 through 6 under “Creating a caller group” on page 20 to edit the group.

## Assigning a ring tone to a caller group

1. Select **Menu** → **Contacts** → **View Groups**.
2. Press  down to scroll through the list of groups. When you come to the group you wish to assign a ring tone to, press .
3. Select **Options** → **Ringer** → **Assign ringer**.
4. Press  up and down to scroll through the list of available ring tones. When you come to the desired ring tone, press .

**Note:** You can assign ringtones to the **Business** or **Personal** caller group by selecting **Menu** → **Settings** → **Sounds** → **Business ringtones** or **Personal ringtones**.

## 5 SENDING AND RECEIVING TEXT MESSAGES

---




This chapter describes how to send, receive, and erase text messages from your phone. For information on voicemail messages, see “Setting up voicemail” on page 10.


**Important:** The features and menus described in this chapter may vary depending on services available in your area. Check with your service provider for details and possible usage charges.

### Sending text messages



You can only send text messages to phones that are capable of receiving them or to email addresses.

### Creating a text message

1. Select **Menu** → **Messages** → **New Text Msg.**
2. Enter a recipient's phone number or email address:
  - Select **Options** to access your **Recent List**, **Contacts**, or **Group Lists** and press . Select a contact and press . Highlight the number field and press . For more about group lists, see “Creating a caller group” on page 20.
  - or -
  - Enter a **New Address** manually. (To learn how to enter text, see “Understanding text entry screens” on page 14.)



3. Add another recipient if desired:
  - Press the right soft key  to select **Options** then select **Recent List**, **Contacts**, or **Group Lists**.
  - or -
  - Enter a space or comma after the first number then enter another recipient manually.

**Note:** You can send a message to up to 10 contacts at once. The messages will be sent one at a time, once to each addressee.

4. When you are done entering addresses, press  twice.
5. Enter the message. To learn how to enter text, see “Understanding text entry screens” on page 14.
  - or -
  - Add QuickText, symbols, or emoticons in your message. See “Including prewritten text and symbols” for information.
6. Press the left soft key  to select **Send**. See “Setting sending options” for information about how and when you want the message to be received.






### Including prewritten text and symbols

During text entry, you can add QuickText, symbols, or emoticons in your message.

1. From the text entry screen, select **Options**.
2. Select an option and press 
  - **Insert QuickText**: Scroll through the list of options and press  to select one.
  - **Add Symbol**: Scroll through the list and press the corresponding number key to select it.
  - **Add Smiley**: Scroll through the list and press the corresponding number key to select it.
3. When you have finished your message, select **Send**. See “Setting sending options” for information about how and when you want the message to be received.

## Setting sending options

When you are ready to send a message, you have several options for how and when you want the message to be received.

1. Once you have completed the message, select **Options**:
  - **Add Address** returns to the “Send To” screen to add another recipient without losing the message. Select **Options** to access your **Recent List**, **Contacts**, or **Group Lists** and press . Select a contact and press . Highlight the number field and press .
  - **Save Message** saves the message in your **Drafts** folder. This prevents the message from being deleted if you have activated AutoErase and enables you to send the message to others.
2. When you have finished setting options, press the right soft key  to return to the message window.
3. Press the left soft key  to select **Send**.

## Adding a signature

The signature you create is included at the end of all outgoing messages and is counted as characters in your messages; however, it does not appear in the message creation screen.

To create a signature:

 
1. Select **Menu** → **Settings** → **Messaging** → **Signature**.
2. Enter your signature in the text field.
3. Select **OK** to save the setting.

**Note:** The characters in the signature are included in the total character count of the message. See the note under step 5 in “Creating a text message” on page 22.

## If you cannot send messages

You may not be able to send or receive messages if your phone’s memory is nearly full, or if digital service is not available at the time. To free up memory, erase old messages. See “Erasing messages” on page 27.

## Understanding appended messages

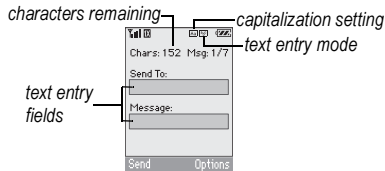

If you go over the character limit for a single message, the phone may automatically append an empty segment to your message to make space.

**Important:** Your service provider will charge you for each message segment.

When you start a message, the maximum character limit appears once you are in the message entry field. This number counts down as you enter characters, until it reaches 0. If you continue to enter text after this counter reaches 0, a message segment may be appended. When you reach the message size limit, you are prompted to edit the message or alerted that the message is being appended.

## Receiving incoming calls while creating messages

- If you don’t wish to answer the call, press the right soft key to select **Ignore**. The phone returns to the message screen.
- To answer the call, press . Your message is saved to the Drafts folder. To return to the message, select **Menu** → **Messages** → **Drafts** → **Resume**.

## Viewing your sent messages


To save your outgoing messages, you must first enable Save to Sent.

1. Select **Menu** → **Messages** → **Msg Settings** → **Save to Sent**.
2. Select an option and press .
  - **Disabled** is the default setting. Outgoing messages are not saved.
  - **Prompt** allows you to choose whether or not to save your message when you send it.




- **Enabled** automatically saves all successfully sent messages in the Sent folder.


To view successfully sent messages:

1. Select **Menu** → **Messages** → **Sent**.
2. Press  up or down through the list of messages. One of the following symbols appears next to each message:


---

 The scheduled message will be sent at the scheduled time. You cannot cancel delivery of the message.


---

 The scheduled message has been sent and will be delivered as scheduled. You cannot cancel delivery of the message.


---

 The message has been received.


---

 The message has been received and opened. (This symbol may not be available. Check with your service provider.)

---

 The message has been sent to more than one recipient.

---


 The message has never been sent or has not been sent since it was last modified. You can cancel delivery of the message.

---


## Viewing failed or pending messages

Failed or pending messages are stored in your OutBox.


To view your OutBox:

1. Select **Menu** → **Messages** → **OutBox**. A list of all failed or pending messages appears.
2. Scroll through the list of messages and press  to read one. One of the following symbols appears next to each message:

---


 The message is pending and will be sent when possible. You can cancel delivery of the message.

---




 The message cannot be sent because service is not available. An alert appears on your phone if the message cannot be sent.

---

## Retrieving text messages

When a text message is received, your screen displays “New Messages” with the  symbol at the top of your screen. The symbol flashes if the message is urgent.



### If you see the “New Messages” note

- To view the message, press the left soft key  to select **InBox**, highlight the message, and press the left soft key  to select **View**.
- To **Ignore** the message, press the right soft key .

**Note:** If you receive a new message while you are reading a message, the one you are reading will be replaced by the new one. You can find the older message in the InBox:


- Select **Menu** → **Messages** → **InBox**.

### If you see the symbol

1. Select **Menu** → **Messages** → **InBox**. A list of all your received messages appears.
  -  indicates an “Urgent” message.
2. Scroll through the list of messages and press  to read one.

## Reading the message

The options available to you may vary. Check with your service provider.

1. If the text message is long, press  down to view the entire message.
2. When you are finished, you can **Reply** to the sender, **Erase** the message, **Save** the message to your Saved folder, or set additional **Options** for the message:
  - **Erase** the message.
  - **Lock Msg** to protect the message from being accidentally deleted.
  - **Forward** the message.
  - **Reply with Copy** to reply to the message with a copy of the original attached.
  - **Save Message** to save the message.

- **Save as QuickText** to save the text from the message as QuickText, which you can insert into other messages. Graphics and sound are not saved as part of QuickText. (For more about QuickText, see page 27.)
- View **Sender** information.

3. Select **Done**.

## Setting message alerts

You can set your phone to alert you of incoming text messages or pages. For more information, see “Setting message alerts” on page 31.

## Blocking unwanted messages

You can block messages from particular senders by adding their addresses to a “block list.”



1. Select **Menu** → **Settings** → **Messaging** → **Block Msgs**.
2. Do one of the following:
  - To block an address, select **Block Address** and enter the address into the provided field.
  - To unblock an address, select **Unblock Address** and enter the address into the provided field.
  - To see a list of blocked addresses, select **Get List**.

## Erasing messages

It is a good idea to erase old messages to free up memory in your phone.

You have the option of erasing text messages and pages as you send or read them, erasing them one at a time from the list in the OutBox or InBox, or erasing them all at once.

### Erasing single messages

1. Select **Menu** → **Messages**.
2. Select the type of text message you want to erase and press : **InBox**, **OutBox**, **Sent**, or **Saved**.
3. Highlight the message to erase and press .
4. Select **Options**.
5. Select **Erase** to erase the message. A notification appears: "Erase this message?"
6. Select **Yes** to erase the message.

**Note:** You can erase a scheduled message from the **OutBox**, but you cannot cancel delivery of the message.

### Erasing all messages

1. Select **Menu** → **Messages** → **Erase Messages**.
2. Select a folder from which to erase all messages: **InBox**, **Sent**, **OutBox**, **Saved Folder**, **Drafts Folder**, or **All Messages**. To erase messages from all folders, select **All Messages**.
3. A message appears: "Erase all messages?" Select **Yes** to erase messages or **No** to cancel.


## Erasing messages automatically

Use this setting to have old messages automatically erased from the **InBox**, **Sent Msgs** folder, or both when memory is low.

- Select **Menu** → **Messages** → **Msg Settings** → **Auto-Erase** → **Old InBox Msgs/Sent Msgs/Both**. Older messages will be erased as new messages are received.

## Creating and editing prewritten messages (QuickText)

Your phone comes with prewritten (QuickText) messages, such as "Please call me," which you can insert into the body of a text message. You can edit these messages and create new ones.

1. Select **Menu** → **Messages** → **Msg Settings** → **Edit QuickText**.
2. To create a new pre-written message, select **New Msg**.  
- or -  
To edit an existing pre-written message, highlight the message and select **Edit**.
3. Enter or edit the text and press the left soft key  to select **Done**. For help entering text, see "Understanding text entry screens" on page 14.

**Note:** You can also save a message you have written or received as QuickText. See "Setting sending options" on page 23 or "Reading the message" on page 26.

## 6 CUSTOMIZING YOUR PHONE

---

The contents of the **Settings** menu are as follows.

### **Silent Mode**

Vibrate Only  
Vibe then Ring  
Lights Only  
Normal Sounds

### **Sounds**

Ringer Volume  
Ringer Type  
Business Ringer  
Personal Ringer  
Roam Ringer  
Flip Open  
Flip Closed  
Pwr On/Off Sound  
Key Volume  
Key Length  
Key Sound  
Alerts  
Smart Sound  
Minute Alert  
DTFM Tone  
Earpiece Volume  
Spkrphone Volume

### **Display**

My Banner  
Main Menu View  
Color Themes  
Wallpaper  
Screen Saver  
Backlighting  
Auto-Hyphen  
Language  
Time/Date Format  
Contrast  
Brightness

### **Convenience**

Airplane Mode  
Open to Answer  
Fast Find  
Frequent List  
Hold Call  
1-Touch Dialing  
Web Prompt  
Call Guard

### **Voice Features**

Add Voice Dial  
Erase Voice Dial  
Voice Training  
Voice Wake-Up  
Voice Answer  
Expert Mode

### **Messaging**

Alerts  
Signature  
Edit QuickText  
Callback Number  
Text Msg Receipt  
Block Msgs  
Save to Sent  
Auto-Erase  
Default Text  
Voicemail Number

### **Security**

Lock Phone  
Limit Calls  
New Lock Code  
Erase Contacts  
Emergency Numbers

### **Network**

Privacy Alert  
Set Phone Line  
Roam/Svc Alert  
Roam Option  
Digital/Analog  
Location





### **Accessories**

Pwr Backlighting  
Headset Sounds  
Auto-Answer  
TTY Device  
Hearing Aid

## Silencing all sounds


Your phone is set to make sounds when you receive calls, press keys, navigate through menus, and receive alerts (such as new messages). You can silence all sounds and set the phone to vibrate or light up when you receive calls and alerts.

### Setting the phone to vibrate or light up


1. Select **Menu** → **Settings** → **Silent Mode**.
2. Choose an option and press :
  - **Vibrate Only:** The phone vibrates for the duration of the incoming call or other alert.  appears on the home screen.
  - **Vibe then Ring:** The phone vibrates for the first 10 seconds and then rings for the remainder of the incoming call alert.  appears on the home screen.
  - **Lights Only:** The phone lights up for the duration of the incoming call or other alert.  appears on the home screen.
  - **Normal Sounds:** The phone rings for the incoming call or alert (in effect, returns phone to a non-silent mode).

**Note:** The phone will ring when it is attached to an external power source (such as a charger), even if all sounds have been silenced.

### Shortcut to Vibrate Only mode


- Press and hold .

## Turning sounds back on

- Select **Menu** → **Settings** → **Silent Mode** → **Normal Sounds**.
  - or -
  - Press and hold .

## Choosing ringers

Your Kyocera K132 phone has pre-programmed ringers you can choose to use for incoming calls.



1. Select **Menu** → **Settings** → **Sounds** → **Ringer Type**.
2. Scroll down the list to hear the different ringers and press  to select one.

**Note:** Downloaded ringers are added to the end of the standard list of ringers.

## Assigning business and personal ringers

You can assign ringers to contacts classified as Business or Personal in your Contacts directory.

**Note:** To classify a contact as Business or Personal, see “Classifying contacts as Personal or Business” on page 18.

1. Select **Menu** → **Settings** → **Sounds**.
2. Highlight **Business Ringer** or **Personal Ringer** and press .
3. Select a ringer and press .


## Importing ringers

You can download additional ringers to your phone using the Kyocera Mobile PhoneTools software, if available (sold separately). To purchase this software and other accessories, visit [www.kyocera-wireless.com/store](http://www.kyocera-wireless.com/store).


## Setting sounds for your phone

You can set your phone to sound tones when you open and close the flip and when you turn the phone on and off. Sounds will not occur during an incoming call, if you are on a call, or if a headset or car kit is attached to your phone.

### Set sound when flip opens

1. Select **Menu** → **Settings** → **Sounds** → **Flip Open**.
2. Scroll through the list to hear the sounds and press  to select one.

### Set sound when flip closes

1. Select **Menu** → **Settings** → **Sounds** → **Flip Closed**.
2. Scroll through the list to hear the sounds and press  to select one.


### Set sound when phone powers on or off

- Select **Menu** → **Settings** → **Sounds** → **Pwr On/Off Sound** → **Enabled**.
  - To deselect this sound, select **Disabled**.


## Adjusting volume

You can adjust the earpiece, speakerphone, and ringer volume as well as key tones.

### Adjusting the earpiece volume

To adjust the earpiece volume manually during a call, press the  key up or down.

To set the earpiece volume:


1. Select **Menu** → **Settings** → **Sounds** → **Earpiece Volume**.
2. Press  right to increase the volume or left to decrease the volume and select **Save**.

### Using smart sound

You can set a baseline volume that the phone uses to automatically adjust the earpiece volume when there is a change in the amount of noise around you or the caller's voice.


- Select **Menu** → **Settings** → **Sounds** → **Smart Sound** → **Enabled**.

### Adjusting the ringer volume

1. Select **Menu** → **Settings** → **Sounds** → **Ringer Volume**.
2. Press  right to increase the volume or left to decrease the volume and select **Save**.


### Adjusting speakerphone volume

1. Select **Menu** → **Settings** → **Sounds** → **Spkrphone Volume**.

2. Press  right to increase the volume or left to decrease the volume and select **Save**.


## Adjusting key tone volume

You can change the volume of the tones the phone makes when you press the keys.

1. Select **Menu** → **Settings** → **Sounds** → **Key Volume**.
2. Press  right to increase the volume, or left to decrease the volume and select **Save**.


## Setting key length

You can change duration of the tones the phone makes when you press the keys.

1. Select **Menu** → **Settings** → **Sounds** → **Key Length**.
2. Choose **Normal** or **Long** and press .


## Setting key sound

You can choose the sound the phone makes when you press the keys.

1. Select **Menu** → **Settings** → **Sounds** → **Key Sound**.
2. Choose **Tone**, **Click**, or **Off** and press .



## Setting DTFM tone

You can turn on or off the ability for your phone to make DTFM tones.


1. Select **Menu** → **Settings** → **Sounds** → **DTMF Tone**.
2. Choose **On** or **Off** and press .

## Setting message alerts

You can choose how you want be alerted of incoming voicemail, pages, or text messages.


1. Select **Menu** → **Settings** → **Messaging** → **Alerts**.
2. Select the type of alert and press : **Message Alert**, **Page Alert**, or **Voicemail Alert**.
3. Select an option:
  - **Vibrate**, **Beep**, **Freeway!**, **Gamel**, **Bloop**, **Winner!**, and **Zilofon!** sets the phone to vibrate, beep, or play a tune once when a new message is received.
  - Options with **Remind** set the phone to notify you once when a new message is received and then notify you again every five minutes. To stop a reminder alert, press the right soft key  to select **Ignore**.
  - **Disabled** turns off message alerts.



## Using shortcuts

From the home screen, press  in one of four directions to access three shortcuts and one custom menu.

<b>Up</b>	Access your Custom Menu
<b>Down</b>	Access Recent Calls
<b>Left</b>	Access Messaging
<b>Right</b>	Record voice memo


## Creating and updating your custom menu

You can create a custom menu that contains your favorite features. After you set up your menu, simply press and hold  up to access it.

1. Press and hold  up to launch **Custom Menu**.
2. Select **Manage List**.
3. Scroll through the available options and press  to select or deselect options.  
You may select more than one feature. Items appear in alphabetical order in the menu.
4. Select **Save changes**.

## Choosing a different language


Your phone may display alternative languages.

1. Select **Menu** → **Settings** → **Display** → **Language**.
2. Select a language and press .

## Personalizing the screen

### Changing your banner



Your personal banner appears on the home screen above the time and date and can be up to 14 characters long.

1. Select **Menu** → **Settings** → **Display** → **My Banner**.
2. Select **Edit**.
3. Press  to clear the screen.

4. Enter your new text. See “Understanding text entry screens” on page 14.
5. Select **Save**.


## Choosing a menu view

You can change the appearance of your phone’s menus:

1. Select **Menu** → **Settings** → **Display** → **Main Menu View**.
2. Select an option and press :
  - **Graphic** displays icons of each menu item, with its name at the bottom of the screen.
  - **List** displays a list of each menu item.
3. Press  to return to the home screen. The next time you select **Menu**, you will see the menu view you selected.

## Adjusting the backlighting

Your screen lights up while you are in a call or when you press a key on the keypad. However, you can set the duration and brightness of backlighting.

1. Select **Menu** → **Settings** → **Display** → **Backlighting** → **Duration**.
2. Select an option and press :
  - **7 seconds**, **15 seconds**, or **30 seconds** turns backlighting on for 7, 15, or 30 seconds after your last keypress.



- 7 sec. & in call, 15 sec. & in call, or 30 sec. & in call turns backlighting on for the duration of a call and for 7, 15, or 30 seconds after your last keypress.

**Note:** The “in call” settings drain the battery more quickly.

## Using Power Save Mode

You can conserve battery life by activating Power Save mode. The backlighting appears for the selected duration, but is less bright than with Power Save off.

- Select **Menu** → **Settings** → **Display** → **Backlighting** → **Pwr Save Mode** → **On**.

## Setting power backlighting


You can set backlighting to remain on when an external power source, such as the AC adapter, is used with the phone.

**Note:** Power backlighting may not be available with the optional desktop charger or other accessories.


- Select **Menu** → **Settings** → **Accessories** → **Pwr Backlighting** → **Always On**.
  - To disable this feature, select **Normal**.

**Note:** The battery charges more slowly when power backlighting is on.

## Changing the display contrast

1. Select **Menu** → **Settings** → **Display** → **Contrast**.
2. Press  left or right to adjust the contrast and select **Save**.

## Changing the display brightness

1. Select **Menu** → **Settings** → **Display** → **Brightness**.
2. Press  left or right to adjust the brightness and select **Save**.

## Setting numbers to auto-hyphenate




Auto-hyphenation (when enabled) automatically inserts hyphens into your phone numbers to be consistent with the U.S. dialing plan.

For example, 1-222-333-4444.

- Select **Menu** → **Settings** → **Display** → **Auto-Hyphen** → **Enabled**.

## Selecting a screen saver


Screen savers appear on the home screen when the flip is open and are activated 10 seconds after the last keypress. Incoming calls and alerts override screen savers.

1. Select **Menu** → **Settings** → **Display** → **Screen Saver**.
2. Highlight a screen saver and press . The image appears.
3. Press  to assign the screen saver.
4. Press  to return to the home screen and wait 10 seconds to view the selected screen saver.

**Note:** Downloaded screen savers are added to the end of the list.


## Selecting wallpaper

Wallpaper appears as background on the home screen.


1. Select **Menu** → **Settings** → **Display** → **Wallpaper**.
2. Highlight a wallpaper design and press .
3. Select **Assign** to save your selection.

## Selecting a color theme

You can select a color theme for the display background of your phone.

1. Select **Menu** → **Settings** → **Display** → **Color Themes**.
2. Scroll through the options to view the color themes and press  to select one.

## Choosing a different time/date format

1. Select **Menu** → **Settings** → **Display** → **Time/Date Format**.
2. Highlight an option press .

## Creating a secure environment

This section describes all the features involved in securing your phone and preventing access to personal information. All security features are shielded by a four-digit lock code.


## Changing your lock code

The lock code is typically 0000 or the last 4 digits of your phone number.


1. Select **Menu** → **Settings** → **Security**.
2. Enter your four-digit lock code.
3. Select **New Lock Code**. A message appears: “Change Code?”
4. Select **Yes** and enter a new four-digit code.
5. Enter your new lock code again.

## Locking your phone

When your phone is locked, you can call only emergency numbers or your service provider's number. You can still receive incoming calls.

1. Select **Menu** → **Settings** → **Security**.
2. Enter your four-digit lock code.
3. Select **Lock Phone**.
4. Highlight an option and press :
  - **Never** does not lock the phone.
  - **On power up** locks the phone every time you turn it on.
  - **Now** locks the phone immediately.

## Unlocking the phone

1. From the home screen, press the left soft key  to select **Unlock**.
2. Enter your four-digit lock code.

## Designating emergency numbers

The emergency numbers feature allows you to specify three personal phone numbers that can be called when the phone is locked.

1. Select **Menu** → **Settings** → **Security**.


2. Enter your four-digit lock code.
3. Select **Emergency Numbers**.
4. Select an **Unassigned** slot.
5. Enter the phone number, including the area code. Do not enter 1 before the area code.
6. Select **Done**.

#### Notes:

- You can view these numbers only when they are being entered for the first time.
- To make a call to an emergency number from a locked phone, you must dial the number (including area code) exactly as it was stored in Emergency Numbers.

## Limiting calls

You can limit the calls that can be made from your phone to emergency numbers, your contacts, and service provider numbers.

1. Select **Menu** → **Settings** → **Security**.
2. Enter your four-digit lock code.
3. Select **Limit Calls**.
4. Choose an option and press :
  - **No Limit** limits no calls.
  - **Limit Outgoing** calls only. Incoming calls can still be received and answered.
  - **Limit All** limits both incoming and outgoing calls.

## Erasing all contacts

You can erase all entries in your Contacts directory.

1. Select **Menu** → **Settings** → **Security**.
2. Enter your four-digit lock code.
3. Select **Erase Contacts**.
4. Select **Yes** to erase all contacts. A message appears: “Erase ALL Contacts?”
5. Select **Yes** again to erase all contacts.

## Network settings

### Switching between phone lines


Your phone can have two service accounts, or phone lines, associated with it. If you have two phone lines, each line will have a different phone number.

Only one phone line can be used at a time.


Incoming calls made to the other line will go to voice mail.

All contacts and settings are shared for both lines.

**Note:** You must first establish a second phone line with your service provider. Once established, a second phone number becomes available in the menu for selection.

1. Select **Menu** → **Settings** → **Network** → **Set Phone Line**.
2. Select one of the two lines and press .

## Ensuring Call Privacy

You can set your phone to sound an alert if enhanced CDMA voice privacy is lost or regained (check with your service provider to see if CDMA voice privacy is enabled in your area). When voice privacy is activated during a call, you will see a message and  on your screen.

To set this alert:

- Select **Menu** → **Settings** → **Network** → **Privacy Alert** → **Enabled**.

## Setting position location

This setting allows you to share your location information with network services other than emergency services (911, 111, 999, 000, etc.) in markets where service has been implemented.

**Note:** This feature works only when your phone is in digital mode. You do not have the option of turning off the locator to emergency services.








1. Select **Menu** → **Settings** → **Network** → **Location**.
2. Select **911 Only** or **Location On**.
  - **911 Only** (default) shares your position information only with emergency services when you call your 3-digit emergency code (911, 000, 111, etc.).
  - **Location On** shares your position information with your service provider's network in addition to emergency services.

## Accessory Settings

### Connecting to a TTY/TDD device

You can connect the phone to a TTY device for the hearing impaired.


**Note:** Enable TTY only when using the phone with a TTY device.

1. Connect the TTY device to the phone.
2. Enter      from your keypad.
3. Select the TTY option.
4. Press  to clear the message.
5. Highlight an option and press .

**Note:** TTY/TDD service may not be available. Check with your service provider for more information.

### Using a Hearing Aid device


You can reduce interference while using the phone with a hearing aid device by activating the phone's T-Coil HAC feature. **Note:** Enable this feature only when using the phone with a hearing aid device.

1. Select **Menu** → **Settings** → **Call Settings** → **Hearing Aid**.
2. Select **On** and then press .

## 7 USING VOICE RECOGNITION

---



Voice recognition allows you to make and answer calls by speaking commands into the phone.

**Note:** You cannot use voice recognition to end a call; you must press  or close the flip.

### Setting up voice dialing

To make or receive calls using voice dialing, contacts must be saved with associated voice tags.


#### Creating a voice tag for a contact

1. Select **Menu** → **Settings** → **Voice Features** → **Add Voice Dial**.
2. Follow the voice prompts to record a name for the contact.
3. Highlight an option and press :
  - **Add New** saves a new contact to go with the voice tag.
  - **Add to existing** adds the voice tag to a saved contact. Select the contact, highlight the phone number, and press the left soft key  to **Select**.


#### Viewing entries with voice tags


- Select **Menu** → **Contacts** → **Voice Dial List**. A list of all contacts with assigned voice tags appears.

#### Editing a voice tag

1. Select **Menu** → **Contacts** → **Voice Dial List**.
2. Highlight the contact you want to edit and press .
3. Highlight the phone number and select **Options**.
4. Select **Add Voice Dial**, **Erase Voice Dial**, or **Edit Voice Dial**.
5. Follow the prompts.

#### Calling using voice tags

1. If you haven't already done so, record a voice tag for the person you wish to call.
2. From the home screen, press . The phone responds: "Say a name" or "Say 'dial.'"
3. Say the name of the person you want to call.
4. If the name you said matches a contact in the Voice Dial List, the phone responds: "Calling (Name)." Remain silent to make the call, or say **No** to cancel.
5. If the phone finds multiple voice tags that sound like the name you stated, you will be asked to verify which name you want to call. Say **Yes** when you hear the correct name. Say **No** when you hear an incorrect name.

6. When you are finished with the call, press . You cannot end the call with a voice command.


## Erasing all voice tags

1. Select **Menu** → **Settings** → **Voice Features** → **Erase Voice Dial**.
2. Select **Yes**.
3. Select **Yes** again at the confirmation.

## Calling using digit dialing

You can speak the digits of a phone number to dial it.

**Note:** You cannot speak a string of digits. You must speak one digit at a time and wait for the prompt.

1. From the home screen, press . The phone responds: “Say a name or say Dial.”
2. Say “Dial.” The phone responds: “Speak a digit.”
3. Speak the first digit of the phone number you want to call. Once the phone repeats the digit, you can speak the next digit.

If you pause, the phone prompts you with the following five options. After the prompt, speak an option.

- Say “**Clear**” to erase the last digit entered. The phone responds: “Digit cleared.” To clear the entire phone number, say “Clear” again. When the phone prompts you with “Clear entire phone number?”, say “Yes” to clear or “No” to cancel.
- Say “**Call**” to dial the number.
- Say “**Verify**” to hear the set of spoken digits.
- Say “**Cancel**” to exit voice recognizer and return to the home screen.
- **Speak a digit** to enter the next digit. Once the phone repeats the digit, you can speak the next digit or pause to hear the prompt.

## Using voice features with hands-free car kits

You can use voice commands to make a phone call or to answer the phone only if your phone is connected to a portable hands-free car kit (sold separately).

**Note:** The following features apply only to portable hands-free car kits unless noted.

To shop for these accessories, visit [www.kyocera-wireless.com/store](http://www.kyocera-wireless.com/store) or call 800-349-4188 (U.S.A. only) or 858-882-1410.

## Waking up the phone

If your phone is connected to a portable hands-free car kit, you can use a voice command to activate the phone to make a call.

**Note:** Voice Wake-up does not work with Keyguard active. To disable Keyguard, see “Locking your phone” on page 34.

To activate the Voice Wake-up setting:

- Select **Menu** → **Settings** → **Voice Features** → **Voice Wake-Up** → **With accessory**.

To wake up the phone:

1. Say **Wake Up** and listen for a tone.
2. Say **Wake Up** again until you hear two tones.

If the phone does not recognize your “Wake up” command, see “Training voice recognition” on page 40.

## Answering the phone

You can set the portable hands-free car kit to either (1) answer automatically or (2) answer using a voice command.

### Answering automatically

- Select **Menu** → **Settings** → **Accessories** → **Auto-Answer** → **After 5 seconds**.

**Note:** This setting also works with the portable hands-free car kit.

## Answering using voice commands

If Auto-Answer is turned off, you can use a voice command to answer an incoming call using the installed Kyocera hands-free car kit.

To turn off Auto-Answer:


- Select **Menu** → **Settings** → **Accessories** → **Auto-Answer** → **Disabled**.

To activate the Voice Answer setting:

1. Select **Menu** → **Settings** → **Voice Features** → **Voice Answer** → **Enabled**.
2. Select **Menu** → **Settings** → **Silent Mode** → **Normal Sounds**.


To answer a call:

When you receive an incoming call, the phone responds: “Incoming call, answer?” or “Incoming roam call, answer?” If the caller is recognized as a saved contact entry, then the phone says “Incoming call from (Name), answer?”

- Say **Yes** or press any key except .

### Ignoring an incoming call

To ignore an incoming call, do one of the following:

- Say **No** and press  to silence the alert.
- Remain silent. The voice alert repeats twice and the phone rings once, then returns to the home screen.

## Using Expert Mode

Expert Mode allows you to use voice recognition at a faster pace by reducing the number of voice instructions and replacing them with tones.

Simply speak a command after the tone.

- Select **Menu** → **Settings** → **Voice Features** → **Expert Mode** → **Expert**.

## Training voice recognition

If your phone is having trouble recognizing your voice, you can train it with commands, such as **Yes**, **No**, and **Wake up**.

1. Select **Menu** → **Settings** → **Voice Features**.
2. Select **Voice Training**.
3. Read the message and select **OK** to continue or **Cancel** to return to the previous screen.
4. Select **Train All** or the item you want to train.
5. Follow the prompts for each word until training is complete.




## 8 USING MEDIA GALLERY

---


The media gallery stores and displays all the image and sound files in the phone.




### Accessing files

1. Select **Menu** → **Media Gallery**.
2. Highlight an option and press :
  - **Images** displays a list of categories that contain preloaded, downloaded, saved, or created files, such as wallpapers, screen savers, or caller IDs.
  - **Sounds** displays a list of categories that contain saved or downloaded sounds, such as ringers and voice memos.

### Browsing images


The Images menu allows you to assign your files to various applications.




1. Select **Menu** → **Media Gallery** → **Images**.
2. Highlight an option and press :
  - **Saved Images** displays available images.
  - **Wallpapers** displays wallpaper selections.
  - **Screen Savers** displays available screen savers.
  - **Caller IDs** displays pictures and images that can be assigned to saved contacts.

3. Highlight an image and select **Options**.  
**Note:** Options vary according to phone menu selection.
4. Highlight an option and press :
  - **Erase** the image (image must not be locked).
  - **Set As Default** sets as default setting.
  - **Assign** an image as a caller ID, wallpaper, or screen saver.
  - **Rename** an image.
  - **Details** gives you the file size of the image.
  - **Erase All** erases all stored images (images must not be locked).
5. Select  or  when done.

### Browsing sounds

The Sounds menu allows you to view and listen to all sound files stored on your phone.

1. Select **Menu** → **Media Gallery** → **Sounds**.
2. Highlight an option and press :
  - **Saved Sounds** contains sounds saved on your phone.
  - **Ringers** contains ringers saved on your phone.
  - **Voice Memos** contains recorded voice memos.
3. Highlight a sound file and select **Options**.

4. Highlight an option and press :
  - **Erase** the sound.
  - **Assign** a sound as a ringer.
  - **Rename** a ringer.
  - **Details** gives you the file size of the sound.
  - **Erase All** stored sounds.
5. Select  or  when done.

## Creating free space

If your phone does not have enough memory to store a file, a dialog appears and asks you if you want to create space.

- Select **Yes** to display the file browser (categories) with the memory needed and available memory.
- Select **No** to return to the previous screen. No files are saved or downloaded.

The actions are limited to the following:

- **Erase** the selected file (you cannot erase locked files).
- **Done** re-attempts the download or save.



## 9 USING TOOLS AND GAMES

---

### Voice Memo



The Voice Memo tool allows you to record and play back audio memos.

#### Recording a voice memo

1. Select **Menu** → **Tools & Games** → **Voice Memo** → **Record New**.  
-or-  
Press and hold  right.
2. Say your memo and press the left soft key  to select **Stop**.
3. Select **Save** to save your memo.

**Note:** If an incoming call is received while you're recording a memo, the memo is saved and the incoming call screen appears.

#### Playing or reviewing a voice memo


1. Select **Menu** → **Tools & Games** → **Voice Memo** → **Recorded Memos**.
2. Highlight the voice memo to review and select **Play**.
3. Press  right and left to select a function and press  to perform it:

Play 

Stop 

Pause 

#### Naming a saved voice memo

1. Select **Menu** → **Tools & Games** → **Voice Memo** → **Recorded Memos**.
2. Highlight the memo and select **Options**.
3. Select **Rename**.
4. Press and hold  to clear the default name.
5. Use the keypad to enter a name for the memo.
6. Select **Save**.


#### Erasing a saved voice memo

1. Select **Menu** → **Tools & Games** → **Voice Memo** → **Recorded Memos**.
2. Highlight the memo and select **Options**.
3. Select **Erase**. The prompt “Erase file?” appears.
4. Select **Yes** or **No**.

### Scheduler

The Scheduler allows you to schedule events and set reminder alerts.

#### Creating an event

1. Select **Menu** → **Tools & Games** → **Scheduler** → **Add New Event**.
2. Enter a name for the event and press  down. For help entering text, see page 14.

3. Select **Options** and classify the type of event and press : **Meeting, Phone Call, Birthday, Anniversary, Vacation, Medical, or Other**.
4. Press to change the date of the event (the current date is the default date of the event).
  - Press left or right to move between the month, day, and year fields.
  - Press up or down to change the month, day, or year.
  - Press to save your changes.
5. Press to set the time of the event.
  - Press left or right to move between the hour, minute, and AM/PM fields.
  - Press up or down to change the hour, minute, or AM/PM.
  - Press to save your changes.
6. Press to set the duration of the event.
  - Press left or right to move between the hour and minute fields.
  - Press up or down to change the hour and minute.
  - Press to save your changes.
7. Press to set a reminder of the event.
  - Select an option and press .
8. Press to set the reminder sound.
  - Select an option and press .
9. Press to select a Silent Mode setting
  - Select **No** or **During Event** and press .

10. Press to select whether or not this is a recurring event.
  - Select an option and press : **No, Daily, Weekly, Monthly, or Annually**.
11. Select **Save**.

## Editing, erasing, or sending an event

1. Select **Menu** → **Tools & Games** → **Scheduler** → **View Month**.
2. Press up, down, left or right to highlight the day with the event to view, edit, or erase and press .
3. Press up or down to highlight the event and press .
4. Press the right soft key to select **Options**.
5. Select **Edit, Erase, or Send** and press
  - For more information about editing the event, see “Scheduler” on page 43.
  - To erase the event, highlight **Erase** and press . Press the left soft key to confirm.
  - For more information about sending the event, see “Sending and Receiving Text Messages” on page 22.











## Alarm Clock

You can set up to four alerts with your phone's three alarm clocks and one quick alarm.

**Note:** The alert occurs only if the phone is on.


## Setting an alarm clock

1. Select **Menu** → **Tools & Games** → **Alarm Clock**.
2. Highlight one of the alarms and select **Set**.
3. Use the phone keypad to enter numbers and  to switch between AM and PM.
  - Press  left or right to move between hours, minutes, and AM/PM fields.
  - Press  up or down to change the hours, minutes, and AM/PM options.
  - Press  to set the time of the alarm.
4. Select **Options** to set the alarm sound.
5. Highlight an option and press .
6. Select **Options** to set the recurring time.
7. Highlight an option and press .
8. Enter a note for the alarm and press .
9. Press the left soft key  to select **Save** and set the alarm(s).
10. When the alarm rings, select **Off** to turn off the alarm or **Snooze** to silence the alarm for 10 minutes.

**Note:** Opening the flip turns off the alarm.

## Setting the QuickAlarm

 



1. Select **Menu** → **Tools & Games** → **Alarm Clock**.
2. Highlight **QuickAlarm** and select **Set**.

3. Select an option and press : **5 minutes**, **15 minutes** (default), **30 minutes**, or **60 minutes**. A message appears telling you the QuickAlarm is on.
4. When the alarm rings, select **Off** to turn off the alarm or **Reset** to set the QuickAlarm again.



## Tip Calculator

The Tip Calculator helps you calculate how much tip to include with a bill.

1. Select **Menu** → **Tools & Games** → **Tip Calculator**.
2. Enter the amount of your bill.
3. Select **Next**.
4. Select the amount you want to include as a tip (10%, 15%, 18%, 20%, Other) and press .
5. To split the bill, press the right soft key  to select **Split**.
6. Press  to clear the default of 2 guests.
7. Enter the number of guests and press the left soft key  to select **Next**. The amount each guest pays is calculated.
8. Select **Done**.



## Calculator

Use the calculator for basic mathematical equations.

1. Select **Menu** → **Tools & Games** → **Calculator**.

- Use the keypad to enter numbers.
- Use to select mathematical operations:  
**Left**  $\times$  (multiply)    **Up**  $+$  (add)  
**Right**  $\div$  (divide)    **Down**  $-$  (subtract)
- Press to calculate the result.  
**Example:** Enter 5, press left to select **X**, enter 2, then press to obtain the result of 10.
- Press to return to the home screen.  
 - or -  
 Press to clear the screen.

#### Options

- M+** Adds displayed digit to the value stored in memory.
- MR** Displays currently stored value on screen.
- MC** Clears value currently stored in memory.

## Timer

This timer counts down for a specified amount of time. It beeps when that amount of time has elapsed.

- Select **Menu**  $\rightarrow$  **Tools & Games**  $\rightarrow$  **Timer**.
- Select **Set**.
  - Press to move the cursor left or right.
  - Press up or down to set the hours, minutes, and seconds.

- Select **Start** to begin the countdown. Select **Stop** to pause the countdown. Select **Reset** to clear the timer.
- Select **Sound** to set the alarm sound and press .
- Press or the right soft key to silence the alarm.


## Stopwatch

- Select **Menu**  $\rightarrow$  **Tools & Games**  $\rightarrow$  **Stopwatch**.
- Select **Start** to begin counting. Select **Stop** to stop counting. Select **Reset** to clear the counter.





 
 
## World Clock

The World Clock lets you check times in cities around the world in relation to local time.



- Select **Menu**  $\rightarrow$  **Tools & Games**  $\rightarrow$  **World Clock**.  
 The World Clock menu is displayed. Your local time and date is on the first line, followed by your selected world city and that city's time and date.  
 When you first access World Clock, you are prompted to select a city.
- Press to select **Cities**. The Cities menu is displayed, showing 85 world cities in alphabetical order.
- Press up or down to scroll through the cities list. You can also use the number keys (2-9) to alphabetically tab through the list.

4. Press  to select a city, like Athens.  
The World Clock menu is displayed again, with Athens' time and date.

From the World Clock menu, you can also select **Edit** to search by city or country.

1. Select **Edit** from the World Clock menu.  
The Edit City menu is displayed.
2. Select your type of search.
  - Press  search **By City**.
  - Press  down, then press  to search **By Country**.
3. If you search by City, the Search screen is displayed.
  - a. Use your number keys (2-9) to enter the letter(s) by which you want to search. For example, press **2** once to enter the letter **A**.
  - b. Press **OK**.
  - c. Cities beginning with A are displayed, like Anchorage, Athens, and Atlanta.
  - d. Use  to move through the list, press the right soft key  to view information on the city you highlighted
  - e. Press  to select a city.
4. If you search by Country, the Find Country screen is displayed.
  - a. Use your number keys (2-9) to enter the letter(s) by which you want to search. For example, press **2** once to enter the letter **A**.

- b. Press **Search**.
- c. Countries beginning with A are displayed, like Afghanistan, Algeria, and Australia.

Use  to move through the list, then press  to select a country.






## Games


The games in this section may not be available on your phone. Check with your service provider for availability.

If you receive an **incoming call alert** while you are playing a game, the game is paused and exited. You can return to play once the call alert ends. Games do not remain paused if the phone is turned off or loses power.

### **Brick Attack**


The goal of this game is to eliminate bricks arranged in levels. You send a moving ball upward using a paddle at the bottom of the screen.


1. Select **Menu** → **Tools & Games** → **Brick Attack**.
2. Press the left soft key  to select **Yes** at the prompt, "Turn off backlight to conserve battery?"
3. Press the left soft key  to select **New**.
  - To pause the game, press , then press  to **Resume**.
  - To move the paddle, press  left or right.


- To exit the game, highlight **Exit** and press .


## **Race 21**


This game is a timed variation of Black Jack. Each game comprises three 90-second rounds. To score points, add cards in each of the four columns, trying to reach but not exceed 21 in each column within during the course of the game.



1. Select **Menu** → **Tools & Games** → **Race 21**.
2. Press  to select **Yes** at the prompt, “Turn off backlight to conserve battery?”
3. Select **New Game**. The first card to be placed is shown at the top left of the screen. Press a key to add a card to the row as follows:

 Add cards to the first row


 Add cards to the second row






 Add cards to the third row

 Add cards to the fourth row

**Shortcut:** Press  left or right to choose arrows at the bottom of the screen then press  to add cards to corresponding rows.

**Note:** Each time you place a card, a new card appears for placement.

4. Continue placing cards until you are satisfied with your selections.
  - You can pause or end the game at any time by pressing .

- You lose points each time you exceed 21 in a column.
  - Select **Skip** to skip one card per round.
5. Press  to select  to get your score and advance to the next round.
  6. Select an option and press  to select it.
    - **New Game** initiates game play. To pause the game, press . From here you can choose **Resume**, **New** or **Quit**.
    - **Resume Game** returns you to the game you were last playing.
    - **Scoreboard** provides you with the top five scores.
    - **Music** plays music with this game. Select from **Music Always**, **Sound Effects**, **Instructions**, **Credits**, **During Title**, or **No Music**.
  7. Press  to end all games.



## 10 CONNECTING TO THE INTERNET

---

### Using the Mobile Web


You can use your K132 phone to browse the Internet if you have obtained phone Internet services from your service provider and if over-the-air Internet access is available in your area.

**Note:** You cannot receive incoming calls while you are using the Web Browser.

### Starting the Web Browser

1. Select **Menu** → **Web Browser**.


- or -






Press and hold  left to launch the browser.

**Note:** A message about airtime fees appears every time you start the browser. To cancel the message, see “Changing the Web prompt” on page 50. For more information about how airtime is charged, contact your service provider.

2. Press  to continue.

If this is the first time you have connected to the Internet, a message informs you that security is not yet enabled for your Web Browser.

3. Press the left soft key  to select **Yes** to enable security. When you are connected, a browser home page appears. It has a list of bookmarks and some Web menu options at the bottom of the screen.

- A  appears in a secure session.
  - An underline and an arrow indicate that there is more text. Press  down to view more text. Press  to return to the previous screen.
  - To choose a site, highlight it and press the left soft key  to select **Go**.
4. When you have finished using the Internet, press  to exit the browser.

### Using the Web menu options

The following options may appear on your screen:



- **Home** returns you to the main Web Browser window or home page.
- **Mark Site** saves the current location as a bookmark for easy access.
- **Bookmarks** displays a list of your saved Web sites.
- **Setup** gives you options for changing how information is displayed.
  - **Show URL** displays the entire URL.
  - **About Openwave** displays information about your Web Browser version.
  - **Encryption** should not be used unless you are instructed to do so by your service provider.

- **UP.Link** selects a different browser server. You can use this option if you have more than one Web Browser account.
- **Restart** restarts the Web Browser.
- **At Start** confirms that airtime fees will be applied when you use the browser.
- **At End** verifies you want to exit the browser.
- **Both** prompts you when you start and exit the browser.
- **No Prompts** does not use any prompts.

## Searching for a Web site


How you search for a Web site depends on your service provider. For more information, contact your service provider.

## Going to a bookmarked site


1. Select **Menu** → **Web Browser**. If you see a message prompt, press  to continue.
2. From your Web home page, select **Bookmarks**. A list of bookmarks appears.
3. Enter the number corresponding to the bookmark you want and press .

## Checking Browser alerts

Alerts received from a Web site are sent to your **Browser Alerts** inbox.

1. Select **Menu** → **Messages** → **Browser Alerts**. This action launches the browser inbox.
2. Press  to accept browser fees.
3. Select an alert and follow the prompts.

## Changing the Web prompt

1. Select **Menu** → **Settings** → **Convenience** → **Web Prompt**.
2. Highlight an option and press .

## Customer support

Your service provider's customer support department may be accessible directly from your phone when you dial a number such as \*611 (check with your service provider). They can answer questions about your phone, phone bill, call coverage area, and specific features available to you, such as call forwarding or voicemail.

For questions about the phone features, refer to the materials provided with your phone, or visit [www.kyocera-wireless.com](http://www.kyocera-wireless.com).

For additional questions, you may contact the Kyocera Wireless Corp. Customer Care Center in any of the following ways:

- Web site: [www.kyocera-wireless.com](http://www.kyocera-wireless.com)
- Email: [phone-help@kyocera-wireless.com](mailto:phone-help@kyocera-wireless.com)
- Phone: 1-800-349-4478 (U.S. and Canada) or 1-858-882-1401. Customer support phone numbers are also available in the following countries.

Argentina: 0-800-666-0052

Australia: 1-800-507-000

Brazil: 0-800-55-2362

Chile: 800-43-1212

Colombia: 01-800-700-1546

India: Toll free:1-600-121214  
Toll: 0124-284-5000

Mexico: 001-866-650-5103

New Zealand: 0-800-990-100

Panama: 001-800-201-1984

Peru: 0-800-51-934

Puerto Rico: 1-866-664-6443

Venezuela: 0-800-100-2640

Before requesting support, please try to reproduce and isolate the problem. When you contact the Customer Care Center, be ready to provide the following information:

- The name of your service provider.
- The actual error message or problem you are experiencing.
- The steps you took to reproduce the problem.
- The phone's electronic serial number (ESN).

**Note:** To locate the ESN select **Menu** → **Phone Info** and scroll down to ESN: for the 11-digit number.

## Qualified service

If the problem with your phone persists, return the phone with all accessories and packaging to the dealer for qualified service.

## **Phone accessories**

To shop for K132 phone accessories, visit [www.kyocera-wireless.com/store](http://www.kyocera-wireless.com/store). You may also call us at 800-349-4188 (U.S.A. only) or 858-882-1410.

## **Become a product evaluator**

To participate in the testing and evaluation of Kyocera Wireless Corp. products, including cellular or PCS phones, visit [beta.kyocera-wireless.com](http://beta.kyocera-wireless.com).

# INDEX

---

## Numerics

1-touch dialing, 10

## A

accessories, v, 52

alarm clock, 6, 44

alerts

browser, 50

for messages, 31

for missed calls, 9

minute alert, 12

roaming, 12

analog mode, 6, 13

auto-hyphenation, 33

## B

banner, 32

battery, 1

blocking outgoing calls, 35

Brick Attack, 47

browser, 49

## C

calculator, 45

callback number, 23

caller groups, 20

calls

answering, 7

ending, 7

missed, 9

tracking, 12

color themes, 34

contacts

groups, 20

contacts directory, 17

contrast, 33

countdown timer, 46

custom menu, 32

updating, 32

## D

digital mode, 6, 13

display contrast, 33

## E

emergency

calls, 11

emergency mode, 11

exit emergency mode, 11

position location, 6, 36

erasing

all contacts, 35

contact entries, 19

phone numbers, 19

text messages, 27

expert mode, 40

## F

fast find, 20

finding contact information, 19

frequent contacts, 19

## G

games

Brick Attack, 47

Race 21, 48

## H

hands-free car kit

answering using voice, 39

purchasing, v, 52

hands-free headset

purchasing, v, 52

hard pause, 17

## I

icons, 6

messages, 25

recent calls, 9

InBox, 26

Internet, 49

## L

language, 32

lights

lights-only mode, 6, 29

limiting calls, 35

lock code, 34

locking

phone, 34

## M

memory

creating free space, 42

saving, 27

menu view, 32

## N

Network settings, 13

Digital/Analog, 13

number mode, 14

## O

OutBox, 25

## P

phone numbers

erasing, 19

verifying your own, 2

phone, unlocking, 34

position location, 6, 36

## Q

QuickAlarm, 45  
QuickText, 23, 27

## R

Race 21, 48  
resetting the phone, iv  
ringers

- business and personal, 29
- for contacts, 17
- for roaming calls, 13
- general, 29
- silencing, 2
- volume, 30

roaming, 6, 12

- alerts, 12
- ringer, 13

## S

scheduler, 43  
screen contrast, 33  
screen icons, 6, 14, 25, 29  
screen savers, 33, 41  
secret contacts, 9, 19  
security, 34  
sent messages, 24  
shortcuts, 31  
silent mode, 6, 29  
smart sound, 30  
smiley mode, 15  
speakerphone, 8  
speed dialing, 10, 19  
stopwatch, 46  
symbol mode, 15

## T

technical support, 51  
text entry, 14  
    quick reference, 16

text messages, 22  
time format, 34  
timer, 46  
timing calls, 12  
tip calculator, 45  
TTY/TDD, 36

## U

unlocking the phone, 34

## V

vibrate, 6, 29  
voice answer, 39  
voice dialing, 37  
voice memo, 41

- erasing, 43
- naming, 43
- recording, 2, 43

voicemail, 10, 11

- setting up, 2

volume

- earpiece, 8, 30
- key beep, 31
- ringer, 30

## W

wallpaper, 34, 41  
web browser, 49  
world clock, 46





Kyocera Wireless Corp.  
10300 Campus Point Drive  
San Diego, California 92121 USA  
[www.kyocera-wireless.com](http://www.kyocera-wireless.com)

82-G1710-2EN, Rev. 001