
## HANNSpree Quick Start Guide

## DT02-10C1 9.6" Liquid Crystal Display TV


This guide is designed as a reference to help you start using your LCD TV quickly. Please refer to the User's Manual for more detailed installation and safety instructions.

**Rear View** 

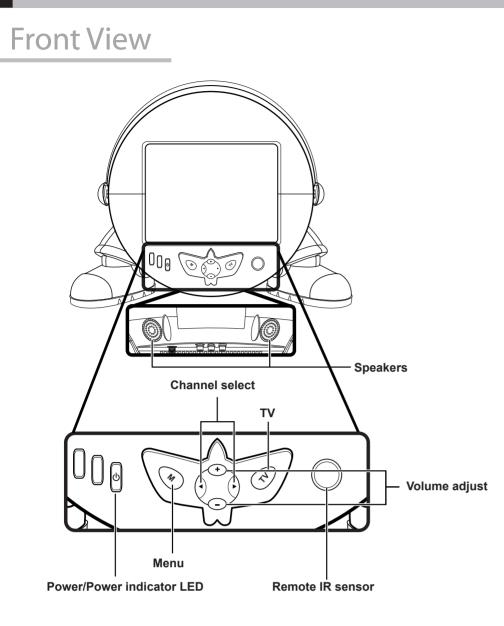


## **Making Connections**


### **Connecting to Antenna/Cable TV**

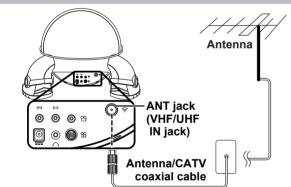



- 1. Connect one end of the VHF/UHF (Antenna) or CATV cable to ANT Jack (VHF/UHF IN Jack) on the back of the TV.
- 2. Connect the other end of the VHF/UHF (Antenna) or CATV cable to the Antenna or CATV socket.

### Connecting to a VCR, VCD, DVD Player, or Video Game Console

 

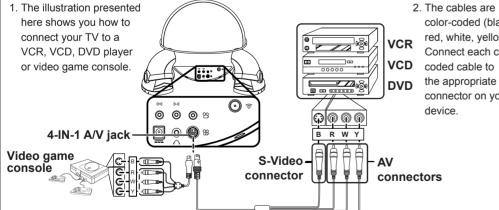

 

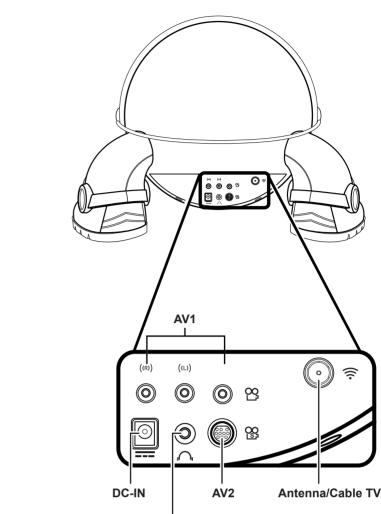



Headphone jack

# A/V and Channel Setup


### **Selecting A/V Sources**

- 1. Make sure your TV is turned on and a device such as a DVD player is connected.
- 2. Press the SOURCE button on the control panel to select different source signals. TV channel number, AV1, AV2 or AV2s appear on the screen.

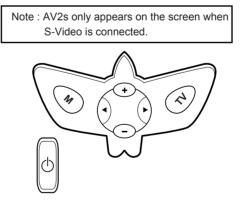

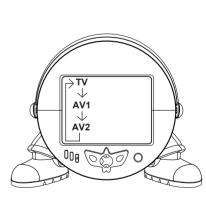

### **Connecting the Power Adapter**

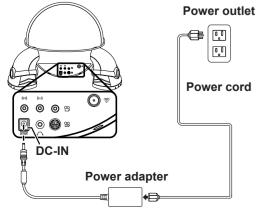

- 1. Connect the power cord to the power adapter as illustrated.
- 2. Plug the power adapter connector into the DC-IN input jack on the rear panel of the TV.
- 3. Insert the three-pronged plug at the other end of the power cord into a power outlet.

Note Images are for illustration only and may vary by model or region.

#### Auto Channel Setup

Please follow the instructions by using the control panel.

1. Press the **MENU** button to enter the OSD menu.


2. Use the CH button to select "TV".

3. Press the VOL + button to enter the TV setting.

5. Press the VOL + button to begin "Auto Program".

6. Your television will begin automatically memorizing the available channels.

### **Auto Program**

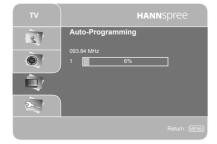

© Copyright 2005, Hannspree, Inc. All rights reserved.