

**LF Cross-Trainer**  
**General Assembly**

**X30-0000-01**

**120V Dom. Eng/Eng**

CONSOLE ASSEMBLY  
REX2AXQ  
GERMAN CONSOLE ASSEMBLY  
REX2CTB

CONSOLE DECAL  
REX2AV7  
OVERLAY  
REX2AXM

ACCESSORY TRAY: REX2AYF  
HARDWARE BAG: REX2AZ8  
TOUCH UP PAINT: 7967401  
RECEIVER: REX21PV  
TRANSMITTER: REX2B95  
OPER. MANUAL: 7953401

ENDCAP  
REX21MV  
ENDCAP SCREWS  
REX0KC6

MODEL BADGE  
REX2AVN

WATER BOTTLE  
REX2B96  
WATER BOTTLE HOLDER  
REX21CV  
SCREWS  
REX0K4R

FRONT  
COMPONENTS

REAR  
COMPONENTS


CLEVIS COVERS  
FRONT  
REX2AQU  
REAR  
REX2AQT


LF LOGO LABEL  
REX2ARH


MOVEMENT ARMS  
& HARDWARE

BLOCK  
DIAGRAM

CABLES

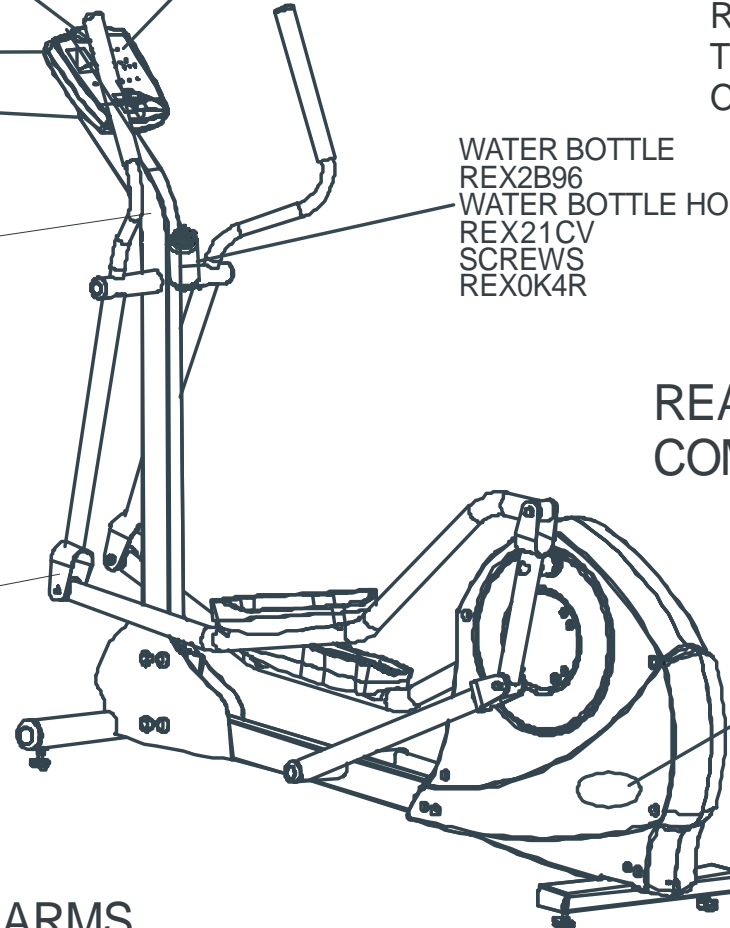

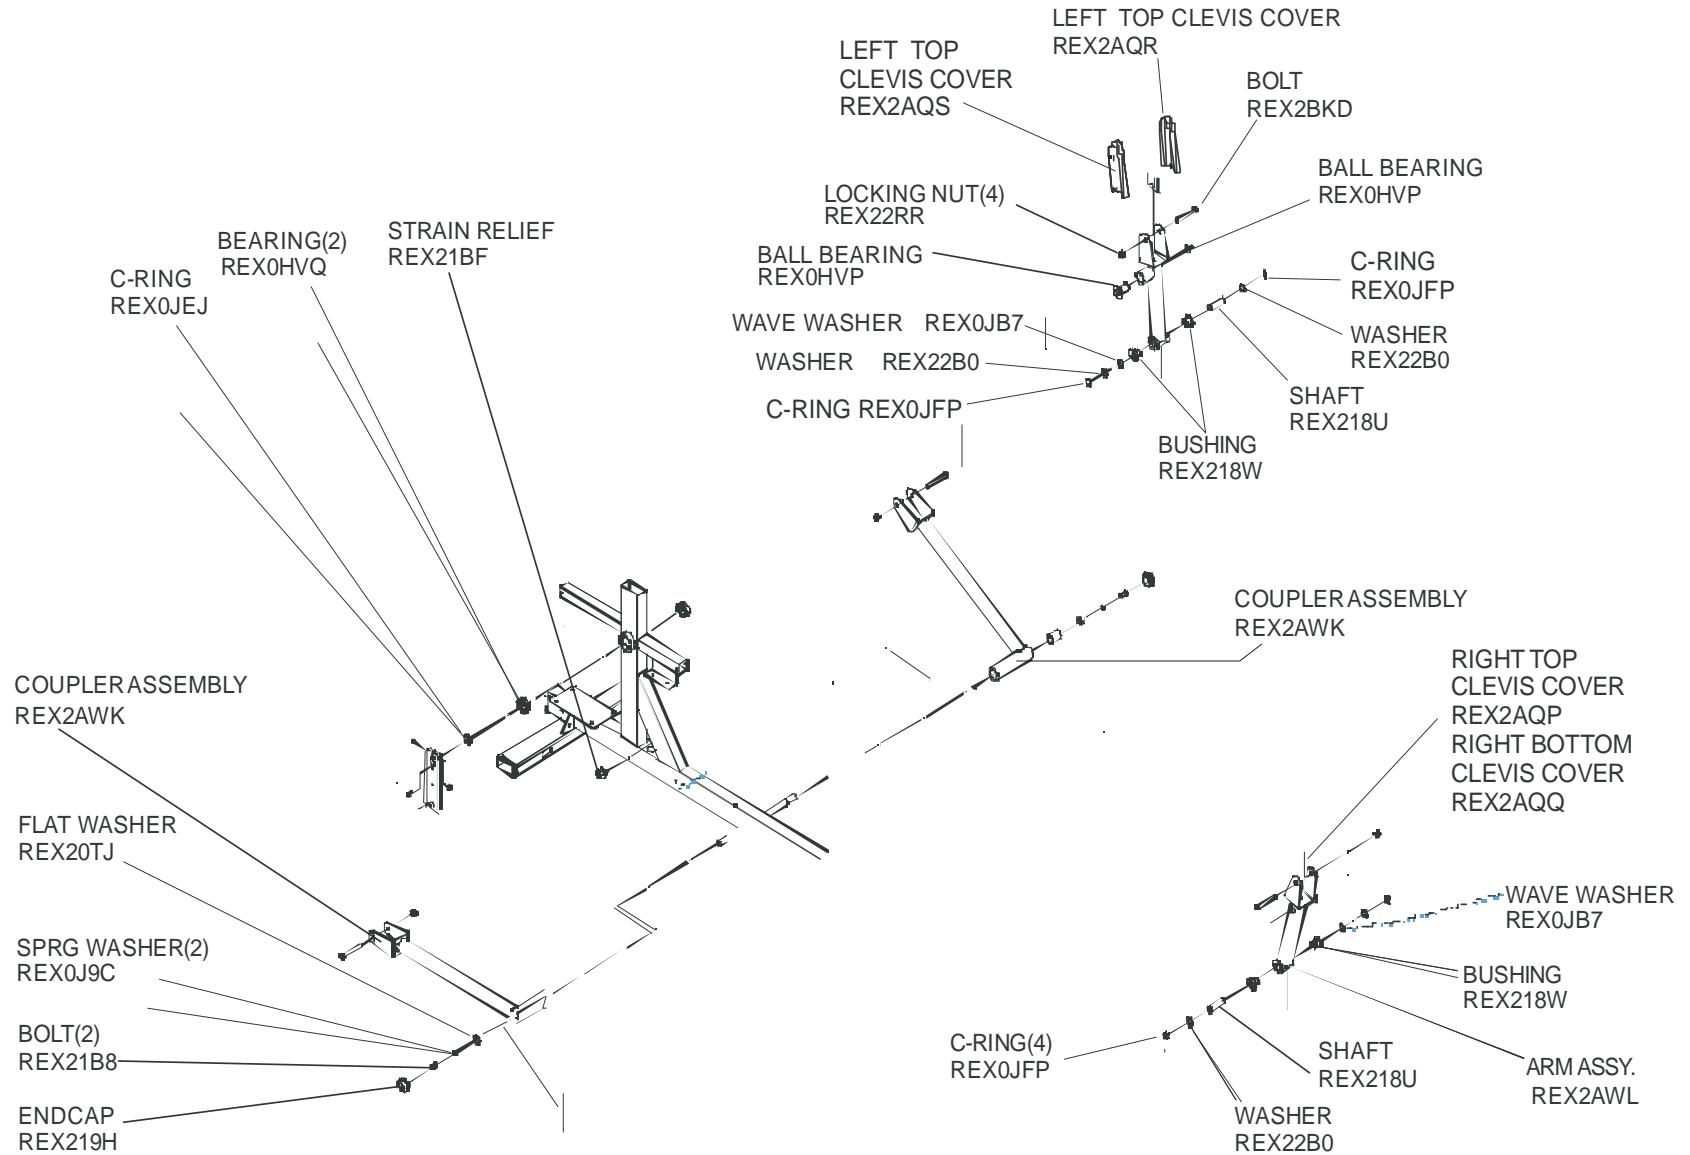


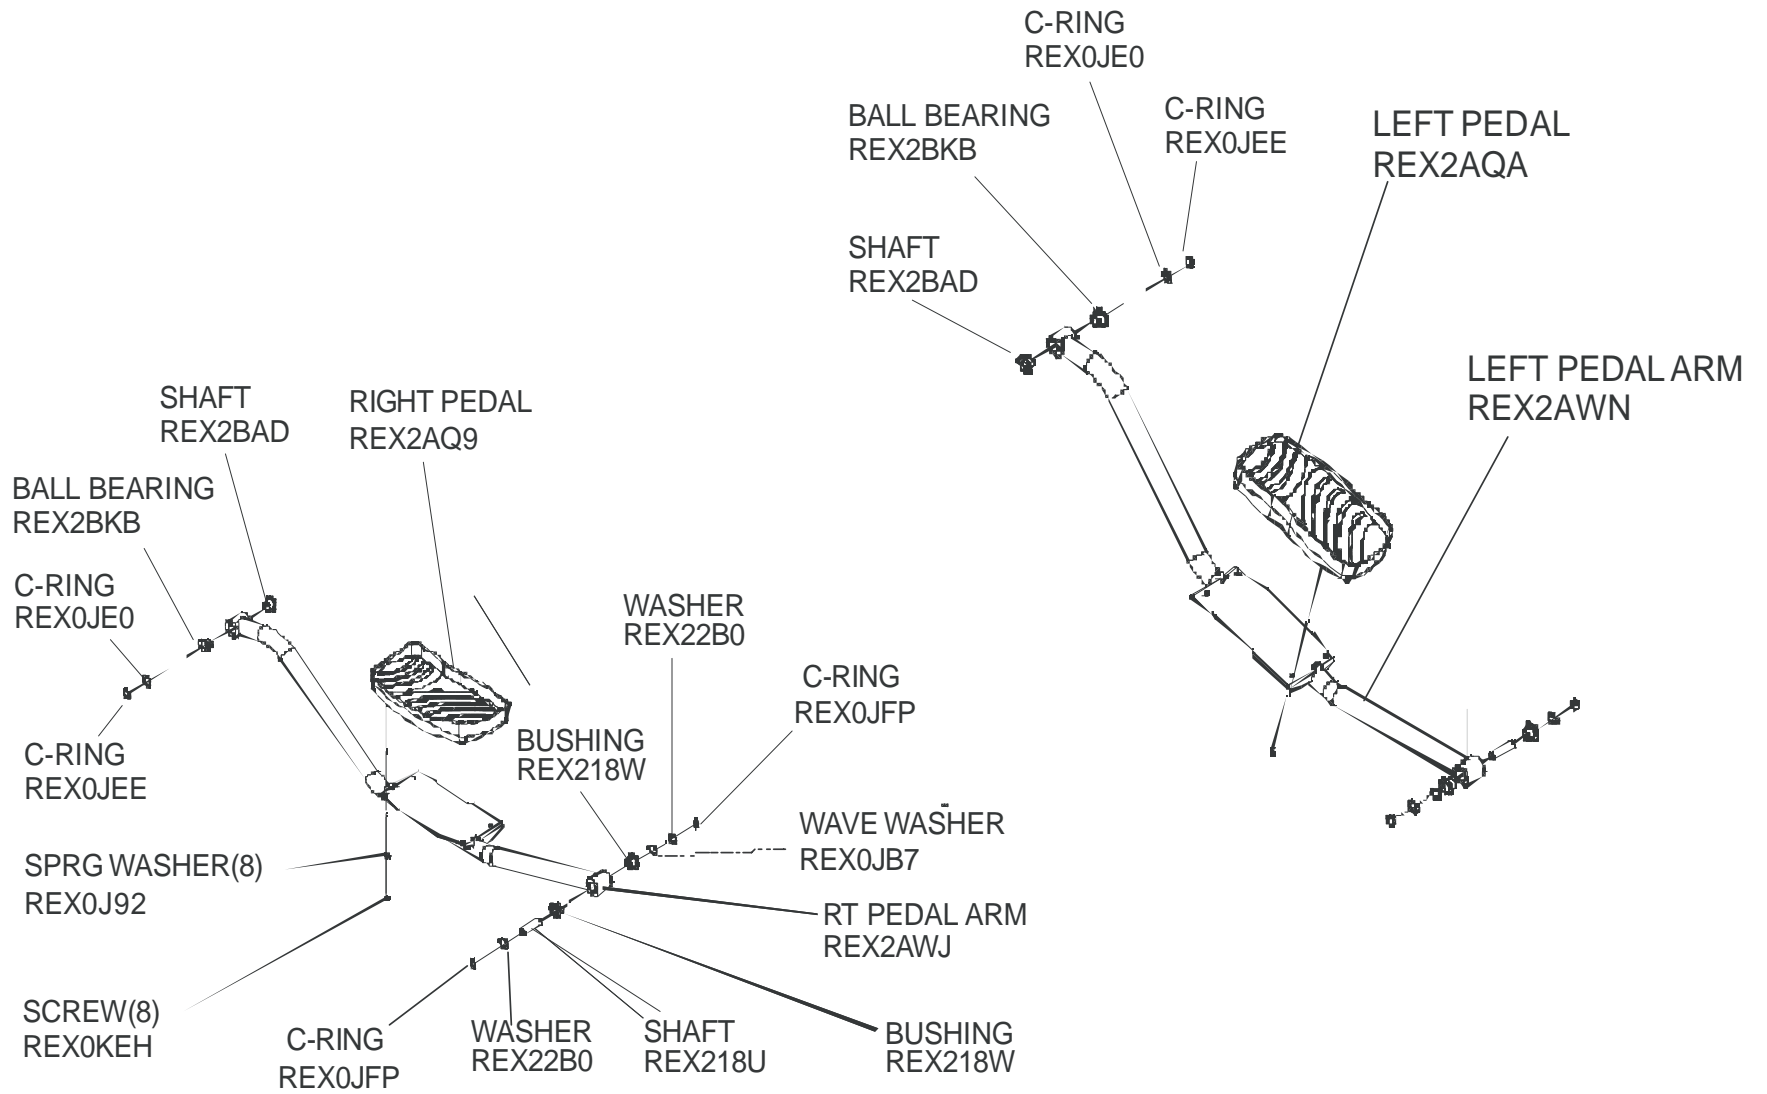


**LF Cross-Trainer**  
**Rear Components**

**X30-0000-01**

**120V Dom. Eng/Eng**

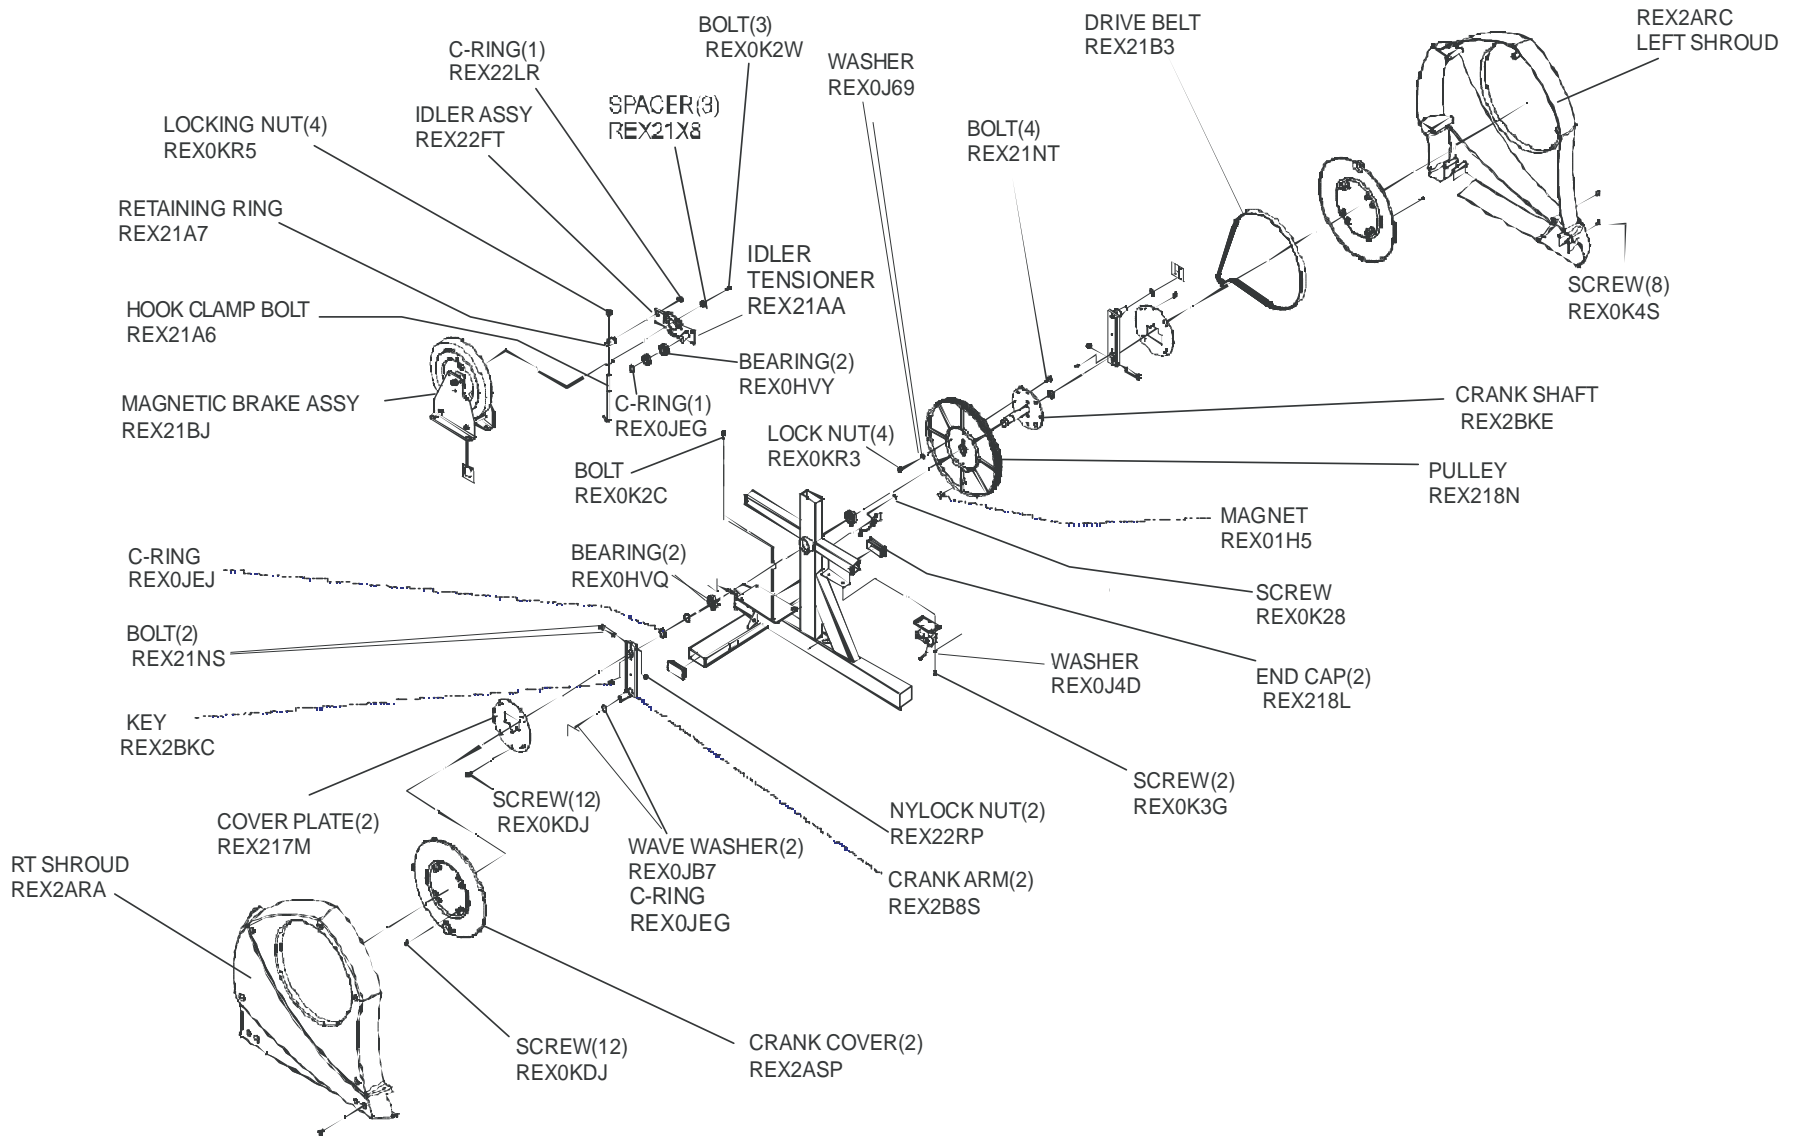


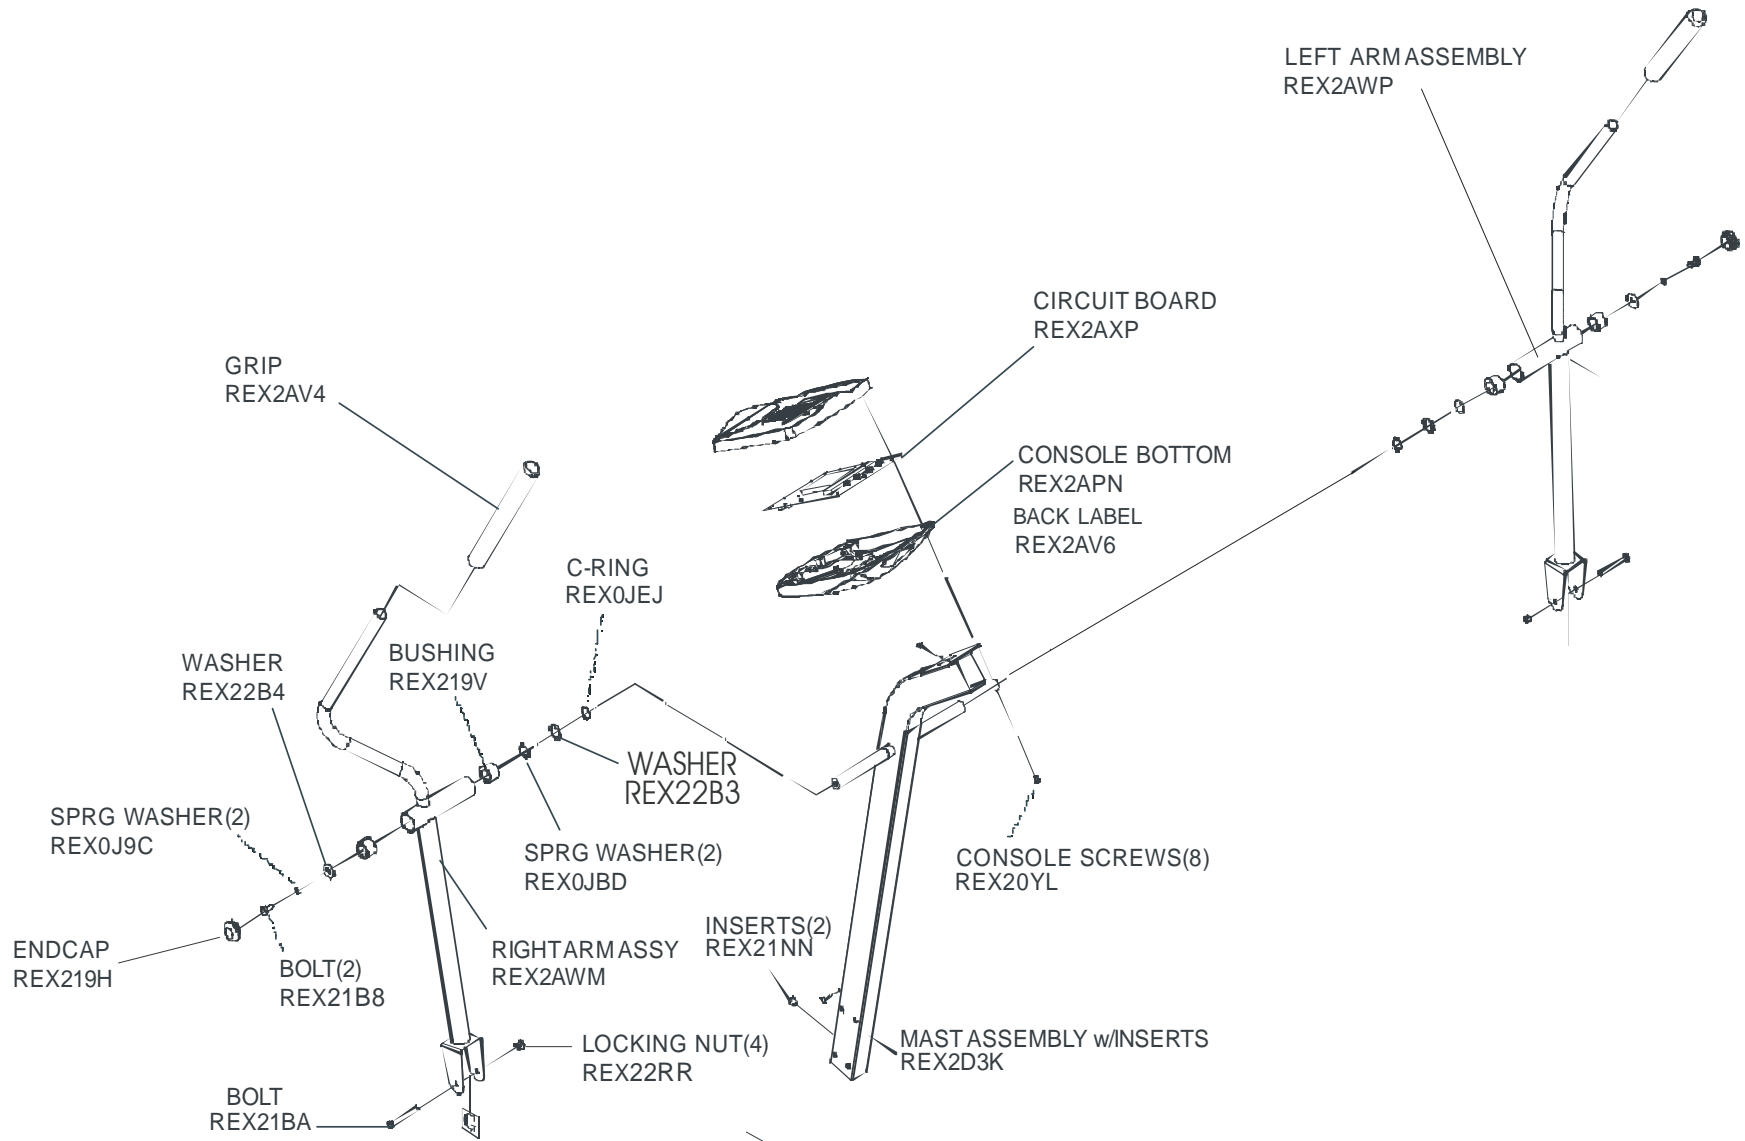


RIGHT FRONT COVER (NOT SHOWN)  
REX2AQ1

LEFT FRONT COVER (NOT SHOWN)  
REX2AQ6

MAST COVER SCREWS (3 PER COVER)  
REX0K4S

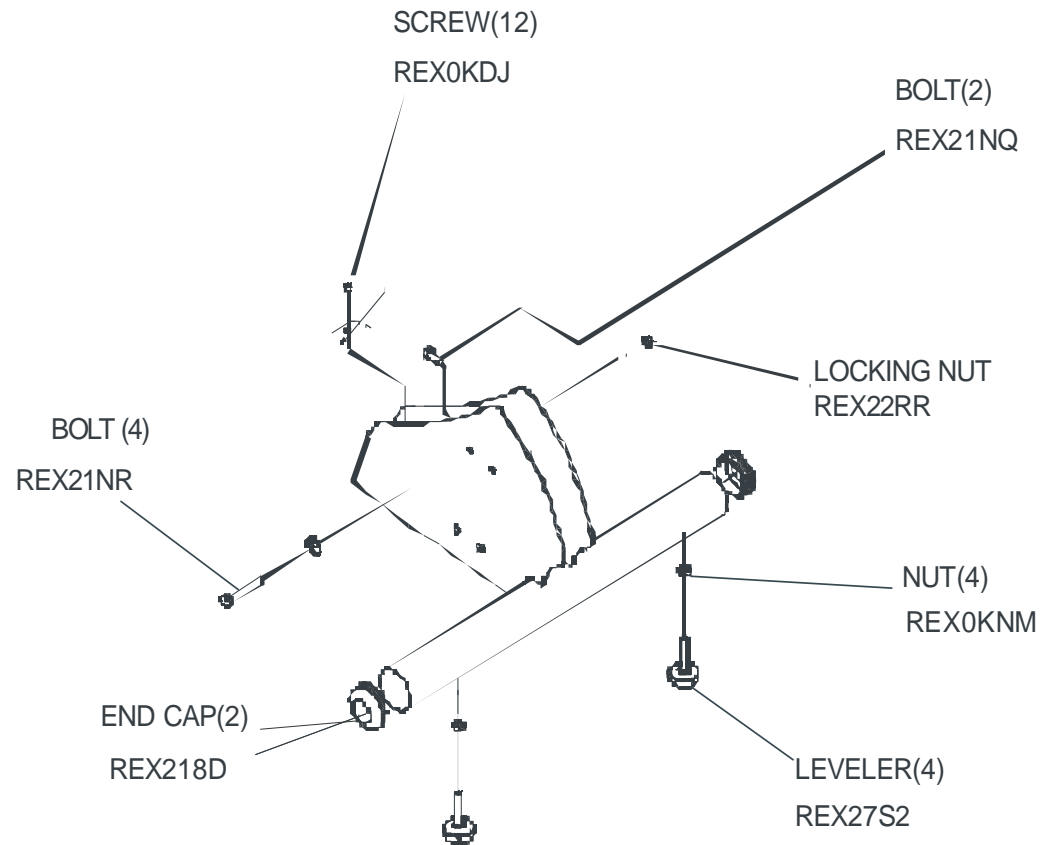

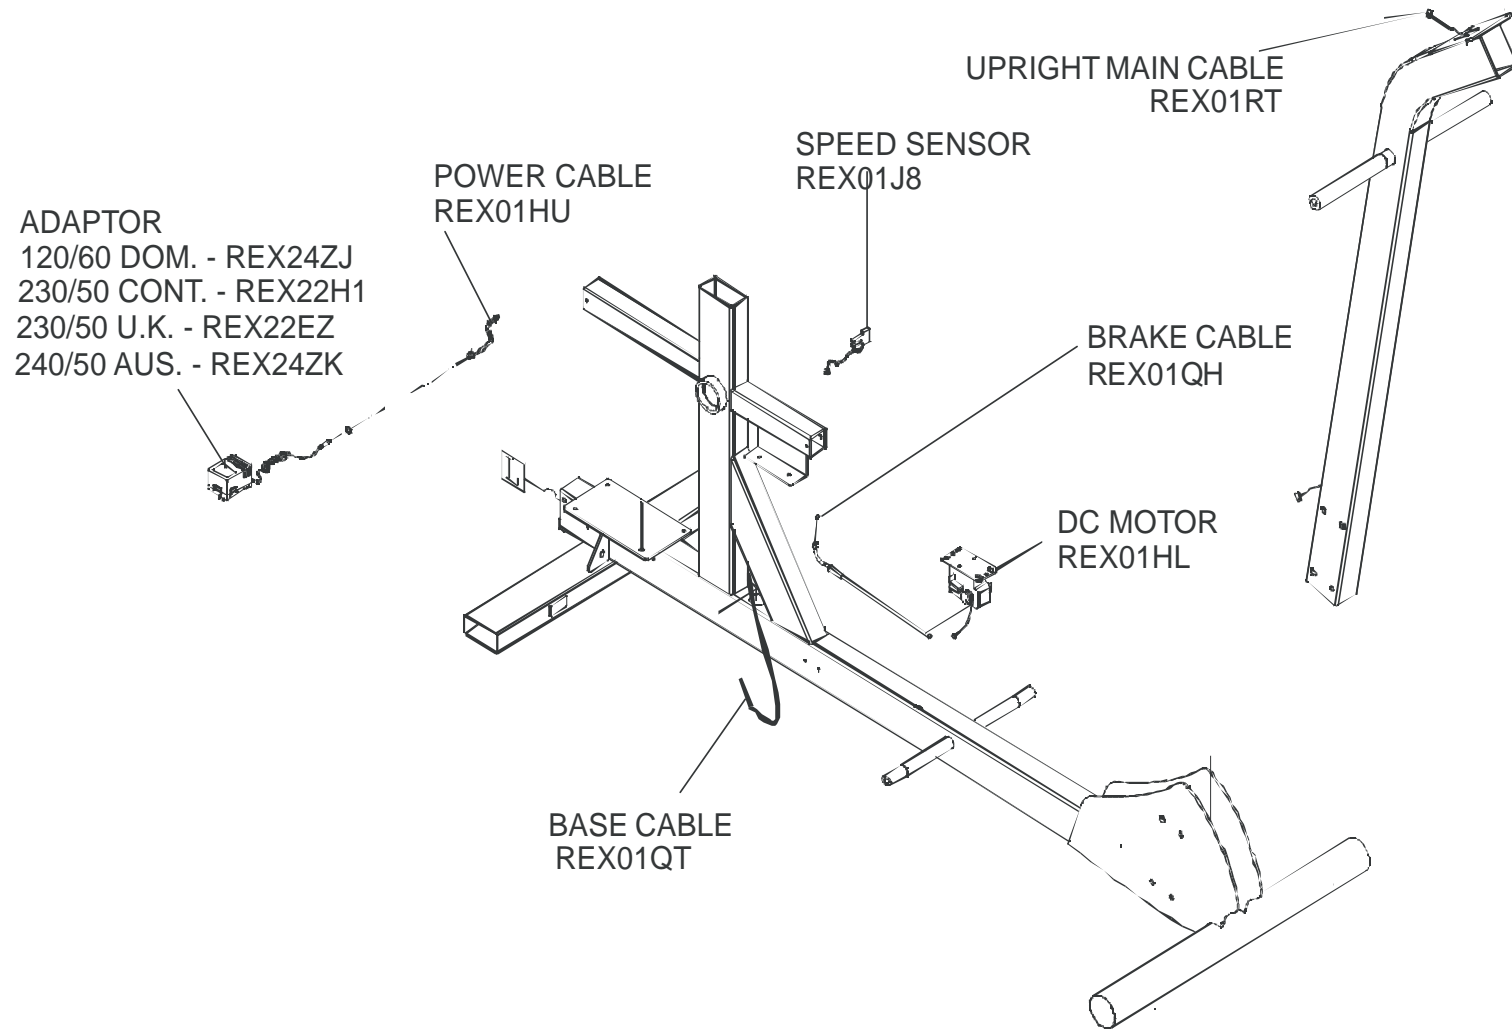

**LF Cross-Trainer  
Block Diagram**

**X30-0000-01**

**120V Dom. Eng/Eng**

