
WIRING CONNECTION

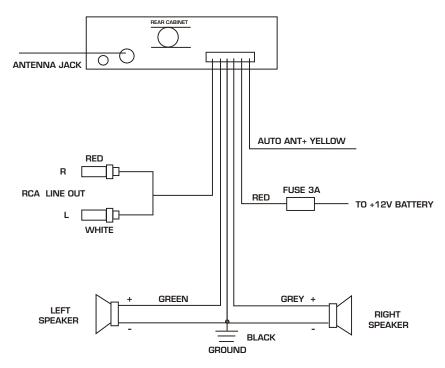

SPECIFICATION

GENERAL

Power Supply Requirements	DC 12Volts. Negative Ground
Power Output	40W + 40W MAX
Chassis Dimensions	

FM SECTION


AM SECTION

Frequency Range......530KHz - 1700KHz

WWW.pyramidcaraudio.com


PYRAMID

INSTRUCTION MANUAL

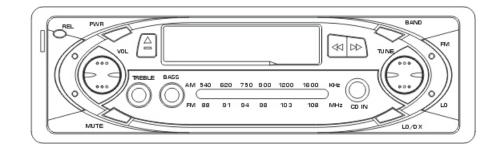

ANTI-THEFT FULL DETACHABLE CAR CASSETTE PLAYER WITH AM/FM TUNING RADIO

MODEL:2702D

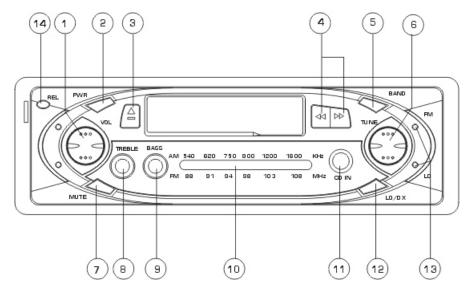

LOCATION AND FUNCTION OF CONTROL

1.VOL BUTTON

Rotate it to adjust the volume level.

2.POWER BUTTON

Press it to turn on or off the unit.

3.EJECT BUTTON

Press it to eject the tape.

4.FAST FORWARD/REWIND PROGRAM BUTTON.

5.BAND BUTTON

Press it to get your desired radio band.

6.TUNE BUTTON

Rotate it to get your desired broadcasting station.

7.MUTE BUTTON

Press it to reduce the volume level immediately.

8.TREBLE BUTTON

Rotate it to adjust the treble effect.

9.BASS BUTTON

Rotate it to adjust the bass effect.

10.FREQUENCY DISPLAY SCALE

11.CD IN JACK

12.LO/DX BUTTON

Press it for distance reception when you are located at weak signal location. Depress it for stronger signal.

13.LED INDICATOR

14.REL BUTTON

Press it to release the front panel from the unit.

INSTALLATION

