Tanaka


Parts Catalog

Power Blower

Model: TBL-300


All Units Before Ser. # E068190

FIG.1 MAIN BODY

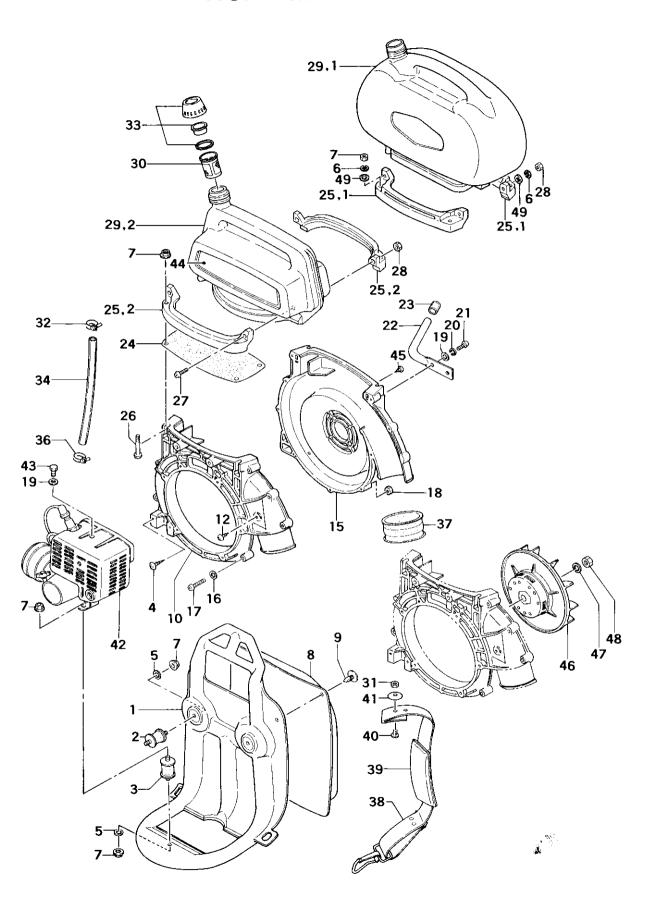

		<u></u>	//		
	HER PROUCTON P	AK		QUANTITY SERIAL N	WAER
	REACE PRODUCTION P	PARTNAME		QUANTITY SERIAL N	UMBER SPAREPART
REFE	IMP PROLIME	PART		QUART SERIF	SPARIMB
		BODY			
1-001 1-002	020-31305-210	KNAPSACK FRAME BUFFER	1 2	1	020 0041 3 030 0040 7
1-003 1-004	031-31305-200 993-11050-081	BUFFER TAPPING SCREW 5X8	1 2		031 0380 1 993 1009 7
1-005 1-006		WASHER 6.5X18X1T	3	-B134613	027 0070 4 992 1019 7
1-007	029-31307-200	-		-0134013	
1-008	021-31305-210	CUSHION PAD/ORANGE	8		029 0110 9 021 0051 7
1-009 1-010	024-31305-200 010-31305-200		1	-0090990	024 0090 7
1-010 1-012	010-31305-210	FAN CASE E TAPPING SCREW 5X8	1 3	D090991-	010 0201 8
1-015				000000	993 1001 5
1-015	011-31305-200 011-31305-210	FAN CASE S	1	-0090990 0090991-	011 0050 5
1-016 1-017	992-01050-001 990-11050-351		10		992 0034 7
1-018	991-01050-011 992-01050-001	HEX. NUT 5	8		991 0015 5
			11		992 0034 7
1-020 1-021	992-10050-012 990-11050-151		8		992 1012 4
1-022 1-023		LEVER BRACKET VINYL PIPE 15x19x25L	1		015 0171 9 700 2240 9
1-024	593-31305-200	DIL SEAT GASKET	1		593 0290 2
1-025+1		TANK BRACKET /ORANGE	2	-0090990	592 0930 4
1-025 , 2		TANK BRACKET /ORANGE BOLT: 6X50X30	2	D090991-	592 0931 3 992 0073 6
1-027 1-028	990-11060-351 991-01060-012		2		990 1149 7
1-029•1	591-31305-210	FUEL TANK	2	-0090990	991 0023 4 591 1371 5
1-029,2	591-31307-220	FUEL TANK	1	0090991-	591 1472 7
1-030 1-031	603-31305-200 991-01060-011	FUEL STRAINER	1 2		603 0300 6
1-032	607-31407-200	WIRE CLAMP 17	2	D090991-	991 0022 5
1-033 1-034	700-09012-370	TANK CAP ASS!Y VINYL PIPE BX12X37OL	1		600 0210 9 700 1430 9
1-036	607-31305-200	WIRE CLAMP 12	Ž	-0090990	607 0470 6
1-036 1-037	607-31305-200 100-31305-200	WIRE CLAMP 12	1	D090991-	607 0470 6
1-038	022-31305-210	KNAPSACK BAND	1 2		100 0370 9 022 0041 7
1-039 1-040	023-31305-210 025-31305-200	SHOULDER PAD /ORANGE S.BOLT	2 2		023 0041 4 025 0030 2
1-041		WASHER 6X23X1.6T	2		026 0030 9
1-042	738-31305-210	MUFFLER PROTECTOR	1		738 0921 2
1-043 1-044	992-02005-121 929-05008-201	SYMBOL MARK	1	-8134613	992 0077 2 929 0060 0
1-044 1-045	929-05008-210	SYMBOL MARK TAPPING SCREW 5X8	1	B134614-	929 0061 9
1-046	155-20737-801		2 1	8134613	993 1009 7 155 0390 3
1~047	992-10100-012		1	-B134613	992 1031 9
1-048 1-049	991-11100-011 992-01060-011		1 4	-B134613 -B134613	991 1008 4 992 0040 8
				1	<u> </u>

FIG.2 ENGINE

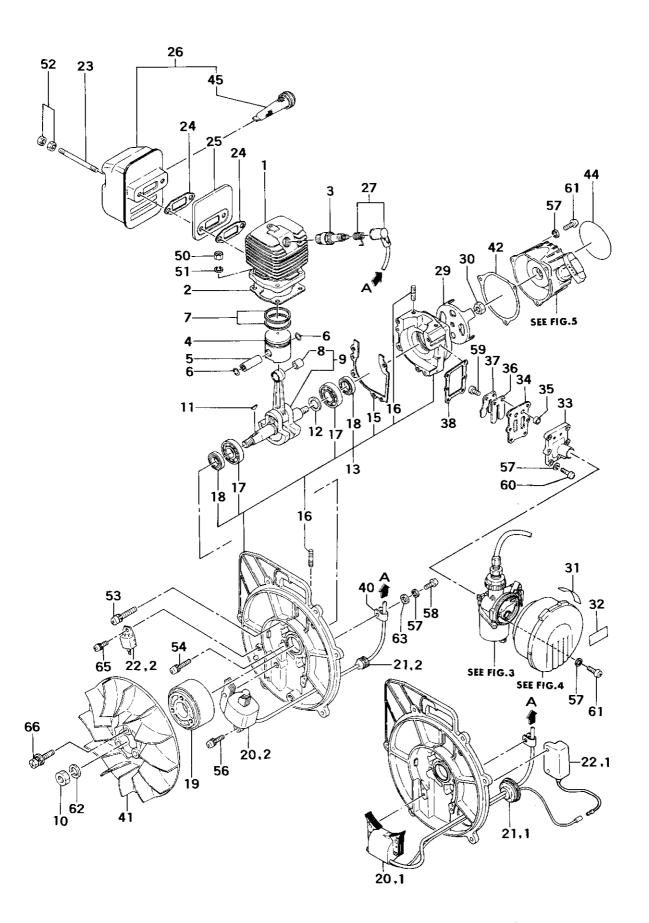


		7.				_
	HERE PRODUCTION E	ART		QUANTITY SERIAL N	BER	
	HERE PRODUCTION OF	PART WAME		154 4	IMBE SPATIMETA	
150	MEE. 200 MEE.	aRT M		QUANTITY SERIAL N	CAREMBE	
No Mi	b, 40	/ Pr		100/50	STAD	\Box
	FIG.2 ENGI			İ		
2-001	002-01225-203	CYLINDER	1		002 0200 0	
2-002 2-003	i	CYLINDER GASKET SPARK PLUG B-7S	1		017 0030 3 018 0240 3	
2-004	031-01400-204	PISTON 36	1		031 0083 9	1
2-005 2-006	037-01400-200	PISTON PIN PISTON PIN CIRCLIP	1 2		037 0030 9	
2-007	041-01000-201	PISTON RING	2		041 0020 3	
2-008	999-62091-325	NEEDLE BEARING F-910	1		999 6207 2	
2-009		CRANK SHAFT COMP.	1	-B134613 B134614-	046 0241 7 046 0250 5	
2-010	991-11100-011		1	8134614-	991 1008 4	Ì
2-011	068-02000-200	WOOD-RUFF KEY 3X13X5	1		068 0040 2	Į
Z-012 2-013		CRANK SHAFT SHIM 0.05 CRANK CASE ASS*Y	V 1	-B134613	071 0040 6 072 0330 5	l
2-013	072-01225-910	CRANK CASE ASSTY	i	B134614-	072 0331 4	
2-015 2-016		CRANK CASE GASKET	1 4		090 0040 5 100 0110 1	
2-017		BALL BEARING #6202	2		999 6139 8	
2-018		OIL SEAL VE 15X25X7	2		999 6624 1	i
2-019 2-020•1		MAGNET ROTOR COMP.	1	B134614- -B134613	155 0650 4 167 0521 6	ĺ
2-020+2	167-21801-800	IGNITION COIL COMP.	1	B134614~	167 0650 1	
2-021+1 2-021+2		SECONDARY CORD GROMMET SECONDARY CORD GROMMET	1	-B134613 B134614-	202 0040 4 202 0060 8	
2-022+1		IGNITOR TTI-40	‡ 1	B1 3461 3	159 0401 0	
2-022+2	159-21800-800 100-12119-200	I.C. UNIT STUD BOLT 6X70	1 2	B134614-	159 0450 6	
2-024	737-01225-210	MUFFLER GASKET	2		737 0111 4	
2-025 2-026	133-01225-202 705-01238-900	MUFFLER ASS'Y	1		133 0101 3 705 1040 9	
2-027	157-04000-900	SPARK PLUG CAP ASSTY	1		157 0050 0	
2-029 2-030	774-01225-200 991-11080-013	STARTER PULLEY	1		774 0070 5 991 1005 7	
2-031	908-02005-200	CHOKE MARK	1		908 0030 6	
2-032 2-033	907-02506-200 390-01225-200		1		907 0110 8 390 0160 5	
2-034	397-01202-201	REED VALVE SEAT	1		397 0040 7	
2-035	399-01000-200	REED VALVE COLLAR AS-3	2	1	399 0020 7	
2-035 2-035	399-01000-210 399-01000-220	REED VALVE COLLAR BS-3 REED VALVE COLLAR CS-3	2		399 0021 6 399 0022 5	- [
2-035	399-01000-230	REED VALVE COLLAR DS-3	2		399 0023 4	ı
2-036	394-01202-201		1		394 0020 2	
2-037 2-038	395-01225-200 398-01000-202	REED HOLDER REED VALVE SEAT GASKET	1		395 0030 6 398 0010 3	
2-040	105-10700-691	CORD CLAMP	1		198 0050 9	- [
2-041 2-042	127-01235-200 810-01225-201	FAN RECOIL STARTER GASKET A	1	8134614-	127 0000 6 810 0010 8	
2-044	906-01227-201		ì	-8134613	906 0450 8	
2-044		NAME PLATE TBL-300	1	B134614-	906 0461 4	
2-045 2-050	991-01060-013	SPARK ARRESTER COMP. USA NUT 6	1 4	D090991-	732 0080 6	
2-051	992-10060-012	S.WASHER 6	4		992 1019 7	
2-052 2-053	991-01060-013 990-14060-401		4		991 0024 3 990 1203 8	
		L.,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,			1	

									
/	RETCE LIMBER PRODUCTOR	PART	PART MANE			JANTITY SERIAL	NUMBER	SPARERA	at a
REFE	IMBL PROUMBLE		PART		6	JAN'I SERIAL		SPAREME	
	FIG.2 ENG	INE							
2-054 2-056 2-057 2-058 2-059 2-060 2-061 2-062 2-063 2-065 2-066	990-14060-30 990-14050-25 992-10040-01 990-11040-12 990-11040-16 990-11040-12 992-10100-01 992-01040-01 990-14040-10	SCREW 6X 1 SCREW 5X 2 S.WASHER 1 SCREW 4X 1 SCREW 4X 1 SCREW 4X 2 S.WASHER 1 WASHER 4X 1 SCREW 4X	(25/S (4 (12 (10 (16 (12 (1 10 (10/S		2 12 1 2 6 5 1 1 1	B134614-	990 990 992 990 990 990 990 992 992 992	1204 7 1205 6 1007 2 1033 3 1016 6 1040 3 1033 3 1031 9 0031 0 1199 2 2006 6	

					··				
*									
	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,								
**					***************************************				

						•			
***************************************			**********************	·····			•••		
			•••••						
						•••••			
*****						····	•	·····	
***************************************	****	····	****	······································					
		·			**-**-				
•••••	***************************************	•••••••••••••							
									•••••
			·						


FIG.3 CARBURETOR

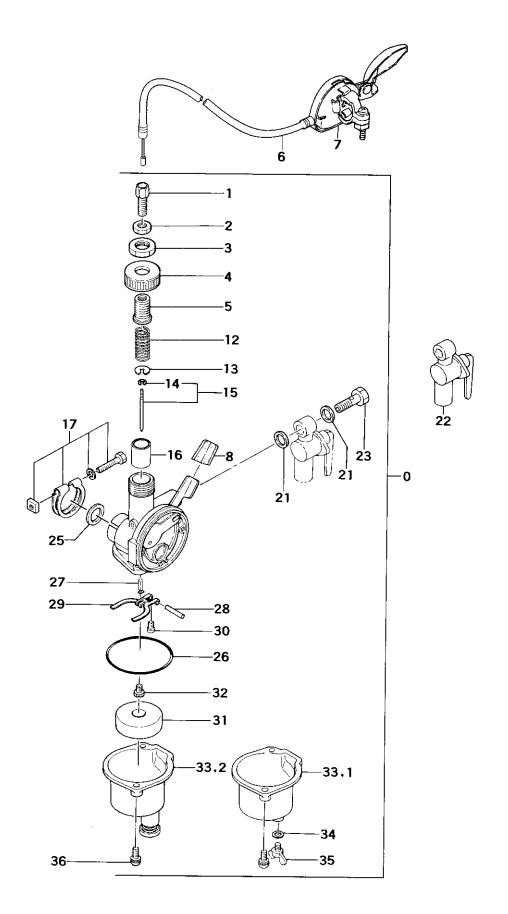

THE STON PART	NUMBER
REFERENCE PRODUCTOR PART WAVE	QUANTITY SERIAL NUMBER
FIG.3 CARBURETOR	


	FIG.3 CARE	BURETOR		·			
3-000 3-001	894-01226-200	CARBURETOR ASS*Y THROTTLE WIRE ADJUSTER	1			1655 1 0000 3	
3-002	991-01060-013		1		991	0024 3	
3-004	595-22901-200		1			1009 3 0430 0	
3-005	468-22901-202		i		1	0000 B	
3-006	885-01226-901	THROTTLE WIRE ASSTY	1		885	0881 6	
3-007 3-008	870-01228-900	THROTTLE LEVER ASS*Y	1		870	0240 3	
3-012		CHOKE LEVER CAP	1			0020 2	
3-012	594-22602-200	THROTTLE VALVE SPRING THROTTLE SPRING RECEIVER	1	1		0150 8] .
3-014	593-22902-200	JET NEEDLE CLIP	1			0170 4	
			1		593	0260 1	
3-015	592-22901-200		1	-B134613	592	0820 4	
3-015	592-22905-200		1		592	0960 5	1
3-016		THROTTLE VALVE	1		591	1230 5	1
3-017		BODY BAND ASSTY	1		561	2 0710	
3-021 3-022		FUFL INLET GASKET PET-COCK ASS*Y	2			0410 4	
3-022			1		592 (0060 8	
3-023	501-22900-200	FUEL INLET BOLT	1		501 (070 1	
3-025		CARBURETOR GASKET	1		570	0030 7	1 1
3-026		CHAMBER GASKET	1		607 (1440 5	
3-027	603-22900-800		1		603 (250 8	ļ I
3-02B		FLOAT ARM PIN	1		605 (190 7	1 1
3-029	628-22900-200	FLOAT ARM	1		628 (570 2	
3-030	990-11040-061		1		990	1025 4	
3-031	604-22900-200		1			200 0	1 1
3-032	599-22908-200	MAIN JET	1			590 3	1 1
		FLOAT CHAMBER				300 7	
3-034	629-22900-200	FLOAT CHAMBER ASSTY	1	8134614-		340 5	
			1	-B134613	629 (270 0	
3-035	990-60004-061	WING BOLT 4x6	1	-B134613	990 6	000 0	
3-036	994-34040-121	SCREW 4X12/S	2			034 8	1 I
							1 1
]				1 1

FIG.4 AIR CLEANER

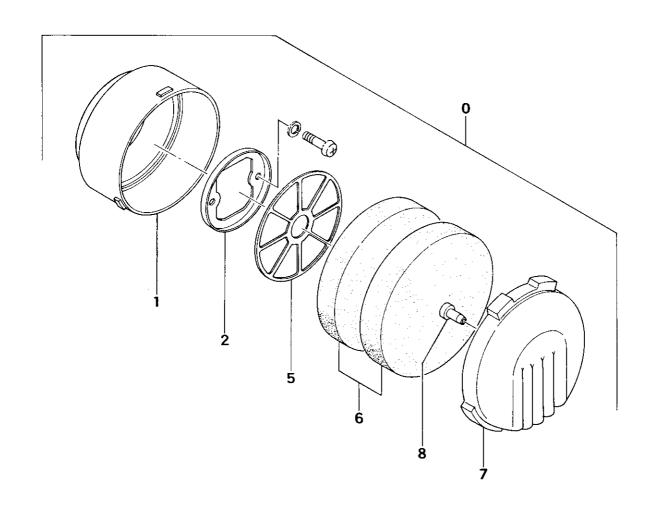

DE L	RENCE PRODUCTION PART INNEE PRODUCTION PART	AME	QUANTITY SERIAL NUMBER SPARKE PART
	FIG.4 AIR CLEANER		
4-000	1410-01225-910 AIR CLEANER AS	SS*Y 1	410 0261 4
4-001	423-01201-201 CLEANER BODY	1	423 0121 7
4-002	425-03000-200 CLEANER HOLDER	t A I	425 0100 B
4-005	426-01225-201 CLEANER RETAIN	IER B	426 0060 4
4-006	444-01225-200 ELEMENT A	2	444 0050 9
4-007	424-01202-210 CLEANER CAP	1	424 0131 1
4-008	203-01225-201 GROMMET	ı	203 0021 6
	1		

FIG.5 RECOIL STARTER

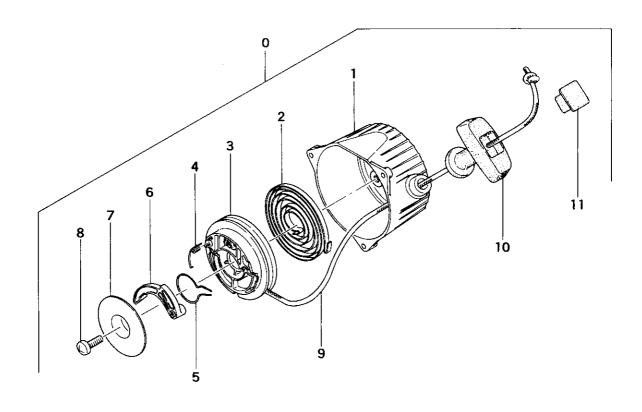

REFE	RENCE PRODUCTON P	ART PART MANE	QUANTI	SERIAL MUMBER SPARE PART
	FIG.5 RECO	L STARTER		
5-000	1756-01250-902	RECOIL STARTER ASS*Y	$ _{1}$	756 0262 0
5-001	772-01250-201	RECOIL STARTER BODY	1	772 0321 4
5-002	779-01250-200	RECOIL SPRING	1	779 0050 6
5-003	769-01250-200	STARTER ROPE REEL	1	769 0000 8
5-004	832-01250-200	RETURN SPRING	1	832 0000 1
5-005	836-01250-200	FRICTION SPRING	l [836 0000 9
5-006	788-01250-200	STARTER PAWL	1	788 0030 8
5-007	837-01250-200	FRICTION PLATE	1	837 0000 6
5-008	990-15050-121	SCREW 5X12	1	990 1200 1
5-009	783-01250-200	ROPE	1	783 0040 0
5-010	785-01250-201	STARTER HANDLE	1	785 0041 3
5~011	835~01250~201	HANDLE CAP	1	835 0000 2

FIG.6 ACCESSORIES

