

Sungale



CA703C

*Digital Photo Frame
User's Manual*



7

For ongoing product improvement, this manual is subject to modification without prior notice.

Contents

User Notice

As this product has met electronic emission standards in registration for use at home, it can be safely used in all areas, including residential.



Chapter 1 Introduction

Product Introduction	3
Safety Precautions	4
Components	6
Part Names	7

Chapter 2 Connection

Connection	12
Memory Card Selection	15

Chapter 3 Usage

Photo	17
Movie	19
Music	21
Additional Functions	24

Chapter 4 Settings&Editing

Settings	27
Editing	35
Favourite	38

Chapter 5 Customer Management

Question&Answer	40
Troubleshooting	41
Product Specifications	42



Chapter 1

Introduction

Product introduction	3
Safety Precautions	4
Power Related	4
Product Related	5
Components	6
Basic components	6
Part Names	7
Electronic Frame	7
Remote Control	9

Digital photo Frame

Product introduction

Digital Photo Frame is a convenient image album that keeps fun and cherished memories at your fingertips.

With its bright and vivid LCD screen, the Digital Photo Frame eliminates the need for tedious photo printing and injects a new level of convenience into your life.

With its diverse storage functions, the Digital Photo Frame allows you to relive wonderful memories anytime.

You can use the Digital Photo Frame to enjoy memories present them with refined images and music.

Digital photo Frame

Safety Precautions

 
Make sure to review the precautions to ensure user safety.

Power Related


⚠ WARNING: indicates information that, if neglected, could result in serious injury and/or death to the user.

⚠ CAUTION: indicates information that, if neglected, could result injury to the user and/or material damage.


01. Use only the authorized power supply product. Failure to do so could result in product malfunction.



 
02. When connecting the power source, make sure that your hands are free of moisture. Failure to do so could result in electrical shock.

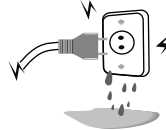

 
03. Make sure that the power supply is firmly plugged in and not loose. Failure to do so could result in electrical shock.



 
04. Do not let the power cord get overly entangled and do not place any heavy objects on the cord. Failure to do so could result in electrical shock.



 05. Do not connect the power supply to an electrical power strip with other various connections. Failure to do so could result in fire.

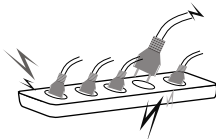

 06. Disconnect the power supply during inclement weather conditions that include thunder and lightning. Failure to do so could result in fire.

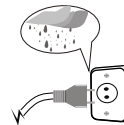


Digital photo Frame

Safety Precautions

Make sure to review the precautions to ensure user safety.

Product Related

 
01. Dropping the product or subjecting it to a significant impact can cause critical damage.

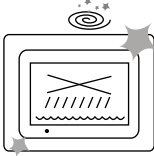


02. Spilling water or any other liquid on the product can cause critical damage.



 
03. Striking or scratching the LCD screen can cause critical damage.

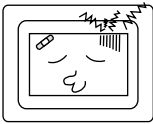

 
04. When cleaning the LCD screen, avoid damage by turning off the power and then wiping gently with a soft cloth.

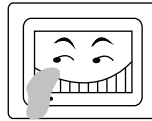

 05. Subjecting the product to severe humidity and/or heat can cause damage.

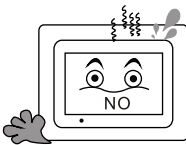

 06. Make sure to turn the power off before connecting or disconnecting the power supply.

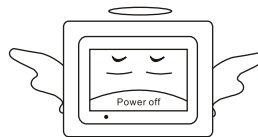





Digital photo Frame

Components

For the improvement of product performance and/or quality, the basic components may be modified without prior notice.
The components may differ slightly in appearance with the provided images.

Basic Components

    The components are provided upon product purchase.

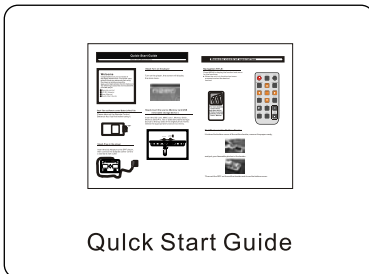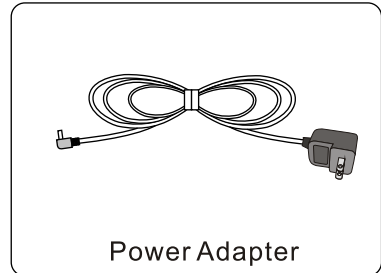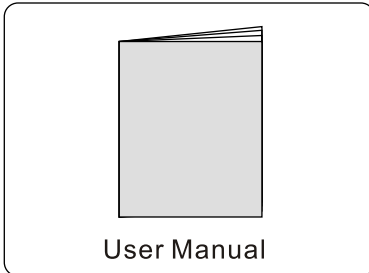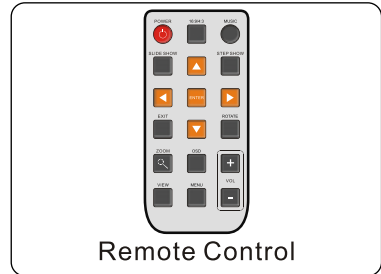


Digital photo Frame

Part Names

The components may differ slightly in appearance with the provided images.

 Electronic Frame

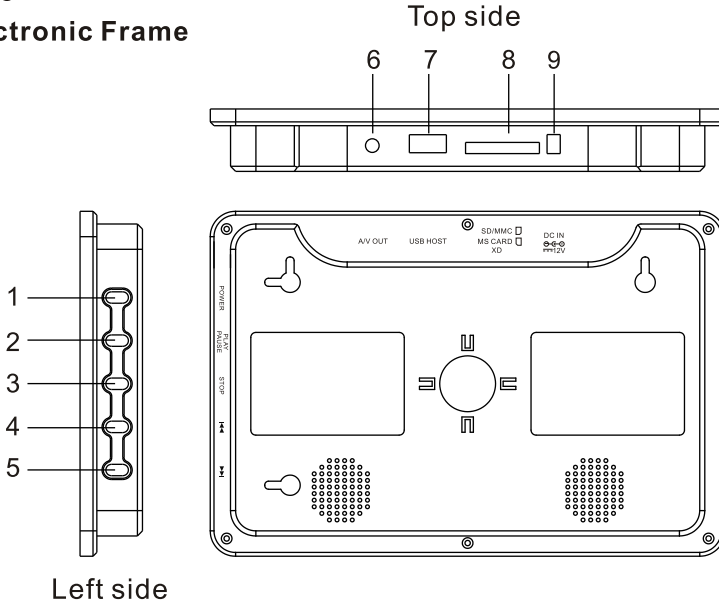

Left Side

1. **POWER:** Press to turn on/off the player.
2. **PLAY/PAUSE:** Press to play or pause .
3. **STOP:** Press to stop playing .
4. **⏮ :** Press to skip to the previous title /chapter/track/picture.
5. **⏭ :** Press to skip to the next title/chapter/track/picture.

Top side

6. **AV OUT:** Audio and Video output.
7. **USB HOST:** Connect the USB cable frame the DPF player.
8. **MS CARD/SD/MMC/XD:** Insert MS/SD/MMC/XD card.
9. **DCIN:** Insert the DC power adaptor to the DPF player.

Digital photo Frame

Part Names

 
The components may differ slightly in appearance with the provided images.

Rear side

10. Wall Mountable.

11. Stand: Using the stand provided you can stand the body with horizontal view and vertical view.

12. Speaker: Stereo speakers built-in.

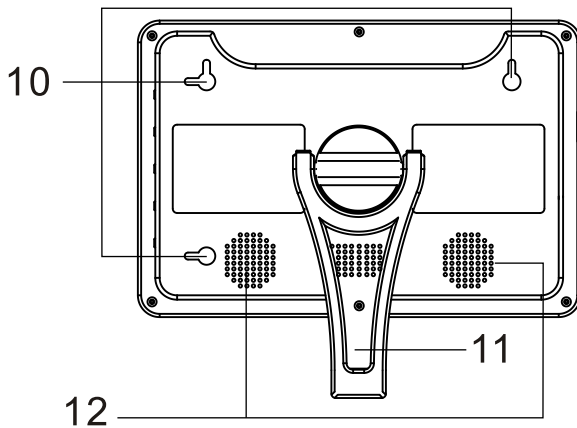

Rear side

Digital photo Frame

Part Names

The components may differ slightly in appearance with the provided images.

Remote Control



Power:

Press **POWER** to turn the player on and off.

16:9/4:3

Press this button to switch the ratio picture between original and optimal.

Music:

press **MUSIC** to play songs.

Slide Show:

Press **SLIDE SHOW** to continually cycle through all of the pictures in the device.

Step Show:

Press **STEP SHOW** to display a single picture; each press will advance one picture at a time.

Note: The SLIDE SHOW and STEP SHOW keys will only be valid when a memory card insert in the DPF.

Note: Remove Red Tab to activate battery.

Digital photo Frame

Part Names

Navigation Buttons:

Press the arrow keys to move the cursor to the desired icon.

Enter:

press **ENTER** to enter/confirm.

EXIT:

Press **EXIT** to stop the current action and return to the previous menu.

ROTATE:

Press **ROTATE** to rotate the picture. These operations is available when a picture is playing normally.

ZOOM:

Press **ZOOM** repeatedly to zoom out /in the picture.

OSD:

Press **OSD** to display the state of the playing file.

VIEW:

Press **VIEW** to view the photos in thumbnail mode. Use the up /down/left/right buttons to select the picture and press enter to confirm .

MENU:

Press **MENU** to return to the main menu.

VOL+/-:

Press the **VOLUME** button to adjust the player's volume.



Chapter 2

Connection

Connection

Power Connection	12
Connect to USB Port	12
Memory Card Insertion	13
Memory Card Extraction	14
	15

Digital photo Frame

Connection

Power Connection



1. Connect the power adapter to the DC 5V jack at the left side of the product.
2. Plug in the power cable.
3. Slide the Power switch to power on, then the product will turn on.

 
Note: When the product is on, this frame can only recognize one of the external device.

Digital photo Frame

Connection

Connect to USB Port

USB: Insert various USB portable flash driver as an extra source.

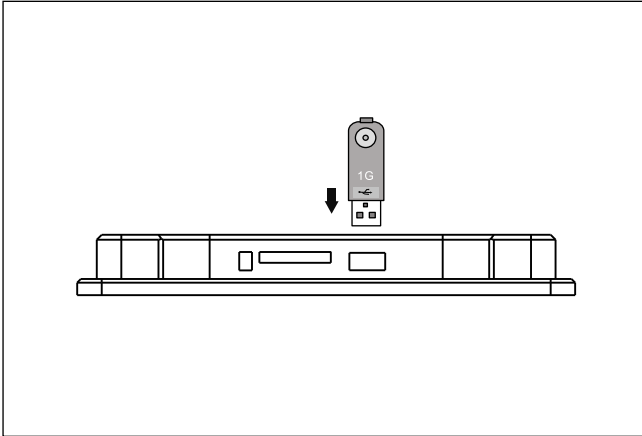


Digital photo Frame

Connection

Memory Card insertion

When inserting a memory card into the product, refer to the image to make sure that both the memory card and product are aligned correctly. (The side of the memory card on which the sticker is affixed should face to the front)

 Aligning the memory card upside down or to the reverse side may cause damage that is the sole responsibility of the user. (Use SD, Memory Stick, MMC cards, XD card enabled)

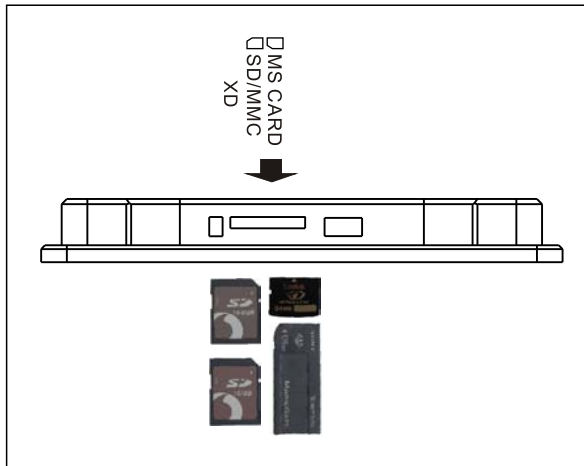


- Note:**
1. MS Duo isn't compatible alone. But it can be supported with the help of MS Duo adapter.
 2. It is recommended that a full format be performed before using a memory card for the first time.
 3. It is recommended that you do not insert a memory card and extra USB memory together at the same time. Otherwise, the device will read USB first, and will not recognise the card .

Digital photo Frame

Connection

Memory Card Extraction

 When extracting a memory card, refer to the image and follow directions in extracting the memory card in the direction shown.

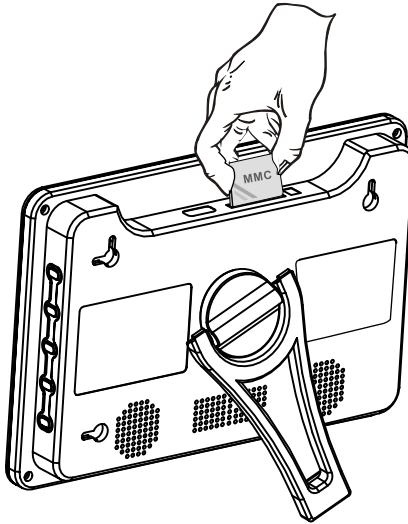

Note: The product will default to the images stored in internal memory when no extra memory card is present, or the product will default to the images stored on the inserted memory card. Press MENU button to return to the main menu.



Chapter 3

Usage

Photo	17
Movie	19
Music	21
Additional Functions	24

Digital photo Frame


Photo

Select a photograph to view in full size on the frame from the selection of thumbnail images.


Enter into the Photo List

Press MENU to enter the main menu ,select PHOTO to enter into Thumbnail Mode.


 
Note: please set up the photo browser on Thumbnail mode first. Then enter into thumbnail mode when pressing the photo button.

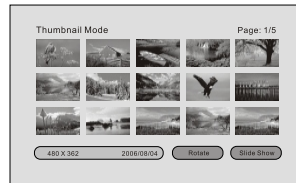

Selecting a Photo

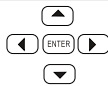 


  Use the directional keys to select the desired photo.

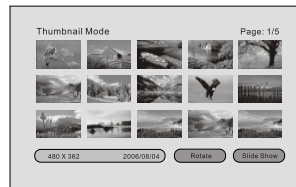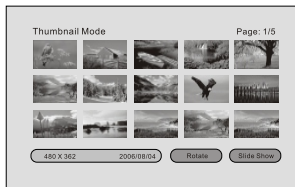

Viewing a Photo in Full Screen

 After selecting the desired photo, press ENTER button .

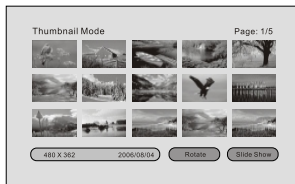


Digital photo Frame

Photo

Rotating a Photo

 During photo playing mode , press the **ROTATE** button to rotate(clockwise) the photo to the desired position.

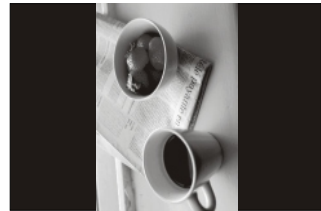


Digital photo Frame

Movie

A variety of movies including digital camera videos, music albums, etc. can be played.



Moving to the Video file list

 Select MOVIE in the main menu to enter into the file list.

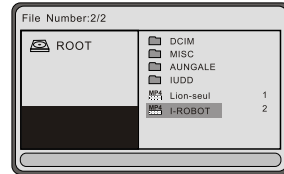



Selecting a Movie

  Use the directional keys to select the desired movie.

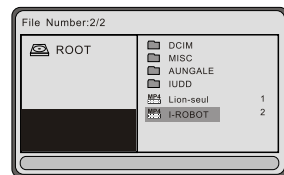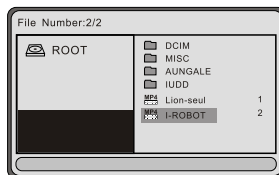

Playing a movie

  After selecting the desired movie, press ENTER to play the movie.

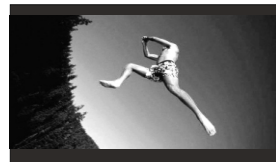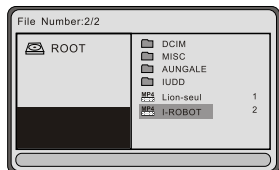

Digital photo Frame

Movie

Adjusting the Volume

During playback ,use the (+) VOL (-) buttons to adjust the volume.

Muting the Sound

During playback, press the MUSIC button to mute the sound.



NOTE: This frame supports the following video file types for direct playback:

- 1.MPEG-1,MPEG-4 Simple Profile (480*234) format file
- 2.Videos recorded on mostly digital cameras.

Digital photo Frame

Music

Moving to the Music list

Press MENU button to enter into the main menu, then select music to enter the music list .

Selecting a Music File



Use the directional keys to select the desired music file.



Digital photo Frame

Music

Playing a music

After selecting the desired music file ,
press ENTER or the PLAY/PAUSE
button on the right side of the panel.

Pausing Music (PLAY/PAUSE)

During playback, press the PLAY/PAUSE
button on the right side of the panel.



Digital photo Frame

Music

Adjusting the volume

During playback, use the Vol+ or Vol- buttons to adjust the volume.

Muting the Sound

During playback, press the MUSIC button to mute the sound.

 
 


Digital photo Frame

Additional Functions

Zoom

During photo playback, Press ZOOM button to magnify the image as follows:

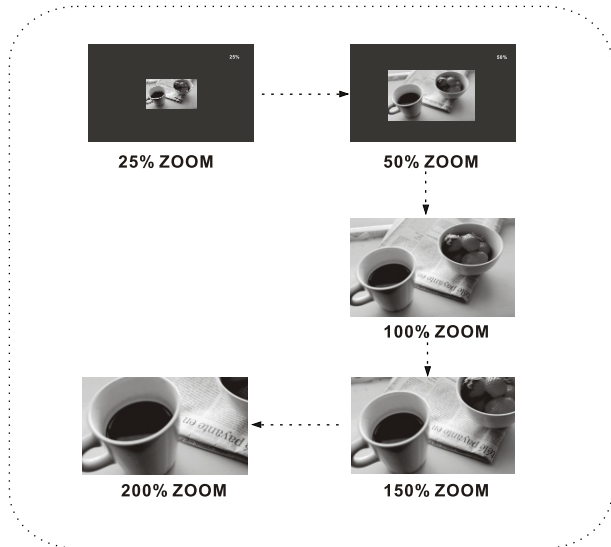

Digital photo Frame

Additional Functions

Back music

Press MENU to enter the main menu screen, select Photo+Music to start playing the photos in a musical slide show mode .

Setup

Setup :Refer to page 27~34 for setting instructions.



Slide Show

In any state ,press the SLIDE SHOW button repeatedly to select Slide On/ Off to play the photos automatically / manually.



Chapter 4

Settings&Editting

Settings	27
Operations in Settings Menu	27
Photo Setting	29
Auto-play	31
Display Setup	32
Custom Setup	33
Exit	34
Editing	35
Favourite	38

Digital photo Frame

Settings

 


Operations in Setup Menu

 
01 Enter SETUP menu

Press the **SET UP** button to enter the setup menu directly.
Or select the Setup item in the main menu .






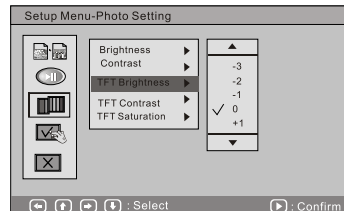 
02 Moving to Desired Settings item

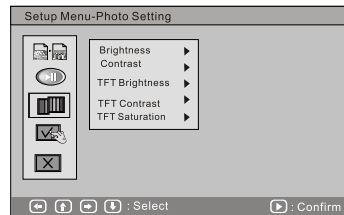Press the navigation    to move the yellow icon to select desired setting item, press **ENTER** button to confirm.



03 Changing Settings

Press the navigation button    to select desired values to change the settings, then press **ENTER** button to confirm.



 
Digital photo Frame

Operation in Settings Window

04 Saving Changed Settings

Press the EXIT button to exit the Settings mode.

The changed setting values will be saved automatically.

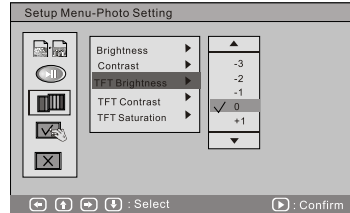

Digital photo Frame



Settings

Setup Menu-Photo Setting

Interval Time

Press **SETUP** button to enter into setup menu, select **Setup Menu -Photo Setting**. Then select **Interval Time** item to set the desired time.



Set the time the image remains on the screen in slide show mode. The interval time can be set to 5 seconds/10 seconds/15 seconds .

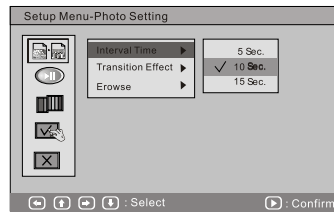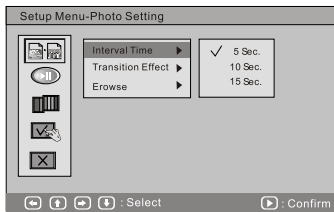  

Transition Effect

Press **SETUP** button to enter into setup menu, select **Setup Menu-Photo Setting**, then select **Transition Effect** item to set the desired effect.

You can directly set the picture display effect (Cover up/down/left/right, Uncover up/down/left/right, Wipe up/down/left/right, Push up/down/left/right, random)

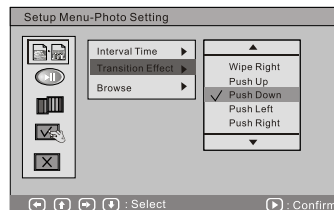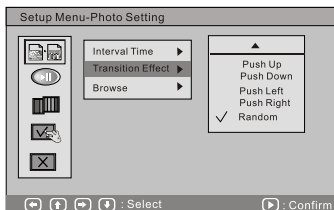  




Digital photo Frame

Settings


Browse

Press **SETUP** button to enter into setup menu, select **Setup Menu - Photo - Setting**, then select **Browse** item to set the desired mode.

   Set the Browse (Thumbnail / File manager) mode to pre-view photos in different mode.

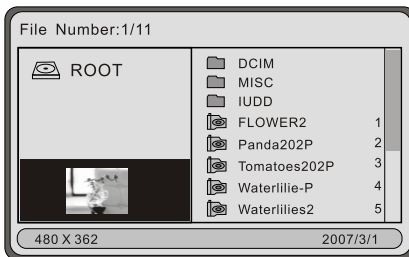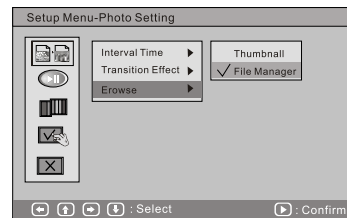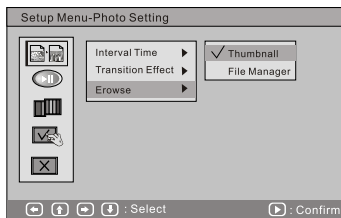

(File manager mode)

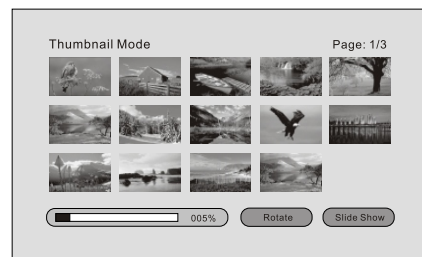 

(Thumbnail mode)

Digital photo Frame

Settings

 
 
Setup Menu- Auto - Play

Photo

Press **SETUP** button to enter into setup menu, select **Setup Menu - Auto - Play**, then select **Photo** item to select on/off.

Set the photo playback auto or manual.

1. Set the photo auto play to ON: It will auto display the photos in picture playback mode.
2. Set the photo auto play to OFF: For manual play.

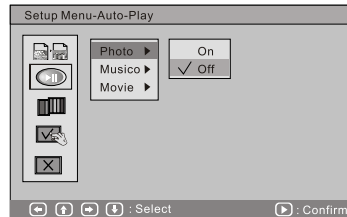
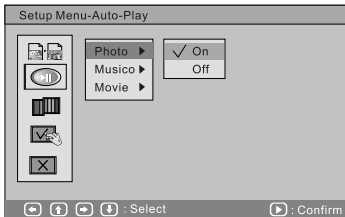


Music

Press **SETUP** button to enter into setup menu, select **Setup Menu - Auto - Play**, then select **Music** item to select on/off.

Set the music playback auto or manual.

  1. Set the music auto play to ON: it will play the music in music playback mode.
2. Set the music auto play to off: For manual play.

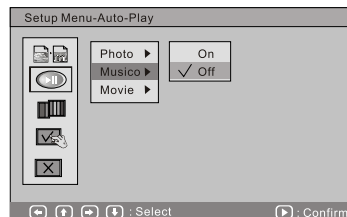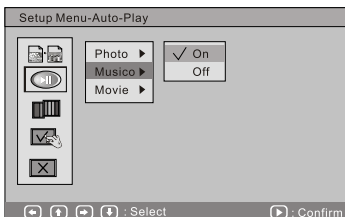

Digital photo Frame

Settings

 
 
Setup Menu- Auto - Play

Movie

Press **SETUP** button to enter into setup menu, Choose in **Setup Menu - Auto - Play**. Then select **Movie** item to select on/off.

Set the movie (on/off) playback auto or manual.

1. Set the movie auto play to ON: it will auto play the movie in movie playback mode.
2. Set the movie auto play to OFF: For manual play.

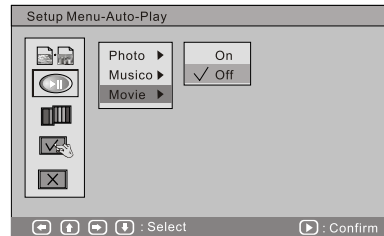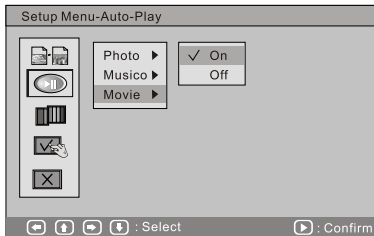

Setup Menu- Display Setup

Brightness

Press **SETUP** button to enter into setup menu,select **Setup Menu - Display Setup**. Then select **Brightness** item, and adjust the brightness by using directional keys.

Select the Normal / Bright / Soft to adjust display

Digital photo Frame

Settings

Contrast

Press **SETUP** button to enter into setup menu, select **Setup Menu - Display Setup**, then select **Contrast** item and move the yellow icon to change the contrast setting.

Select the **contrast** setting to adjust the desired display.

TFT Brightness

Press **SETUP** button to enter into setup menu, select **Setup Menu - Display Setup**. Then select **TFT Brightness** item and move the yellow icon to change the brightness setting.

Select the **Brightness** setting to adjust the desired display.

TFT Contrast

Press **SETUP** button to enter into setup menu, select **Setup Menu-Display Setup**, then select **TFT Contrast** item to change the contrast setting.

Setup Menu - Custom Setup

OSD Language

Press **SETUP** button to enter into setup menu, select **Setup Menu - Custom Setup**, then select **OSD Language** item to select different language.

Set the different language(English/French/Spanish) to change the interface display language.

Digital photo Frame

Settings

Style

Press **SETUP** button to enter into setup menu, select **Setup Menu - Custom Setup**, then select **Style** item to select different style mode.

Set the different style mode (Style1/Style2/Style3/Style4) to change the Setup Menu interface colour

Repeat mode

Press **SETUP** button to enter into setup menu, select **Setup Menu - Custom Setup**, then select **Repeat Mode** item to select different repeat mode.

Select One to repeat current track.
Select Folder to repeat current folder
Select All to repeat current memory card/disk
Select Off to cancel the repeat mode.

Default

Press **SETUP** button to enter into setup menu, select **Setup Menu - Custom Setup**, then select **Default** item, press the right key to select **Read** item, then press **ENTER** button to confirm.

Select the **Default** item to reset the unit to factory default.

Setup Menu - Exit

Exit

Press **SETUP** button to enter into setup menu, select **Setup Menu - Exit** item, and press **ENTER** button to finish the setup menu to go back to the main menu.

Digital photo Frame

Editing

Edit: Adding the pictures from external memory to the DPF, or deleting the pictures stored in the DPF.

Editing the pictures

Press directional keys to select EDIT item in main menu, and press ENTER button to enter into Edit mode.



Selecting Edit mode

Press directional keys to select Copy item and press ENTER button to enter into file list

 


Digital photo Frame

Editing

Adding the picture to the DPF


Using directional keys to select the picture you want, and press ENTER button to confirm.

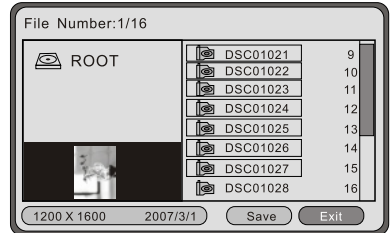

Note: there is a remark on the file name that is selected. The DPF only can store 15 pictures. If you exceed 15 pictures, the selected picture will not be remarked.

Transferring the picture

 After selecting, use directional keys to select Save item, and press ENTER button to start transfer the pictures. After saving, you can select Exit item to return to main menu.

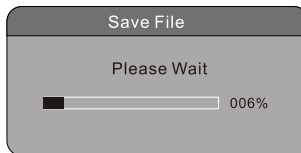

Delete

Note: Pictures deleted cannot be recovered. Thinking over carefully before you confirm to delete.

Using directional keys to select EDIT item in main menu, and press ENTER button to enter into edit mode. Then using directional keys to Delete item in Edit Dialog, and press ENTER button to enter into file list.

 
 


Digital photo Frame

Editing

Deleting the picture

Using directional keys to select the Delete item, and press ENTER button; then use directional keys to select the picture that you want to delete. If you want to delete all pictures in the frame, you can select “Delete All” item.

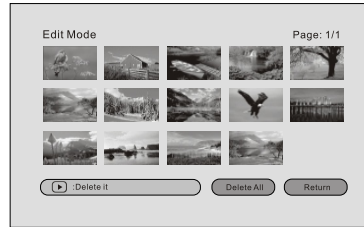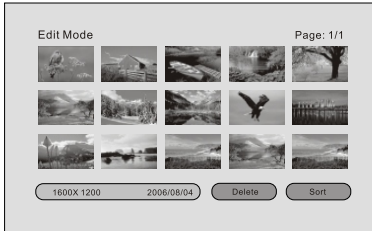


Exit

After deleting, press directional keys to select Return item and press ENTER button to exit the edit mode.

Sort

 In the edit mode, select the Sort item, press ENTER to enter the photo browse screen, then press the directional key to move the photo and sort its sequence, press ENTER to confirm.

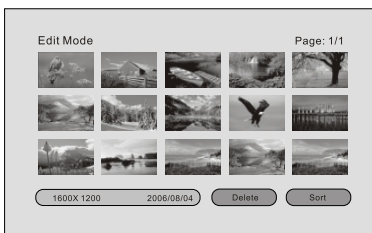

Digital photo Frame

Favourite

Favourite

Playing the pictures

Using the directional keys to select Favourite item and press ENTER button, the pictures will start to play.





Chapter 5

Customer Management

Question & Answer	40
Troubleshooting	42
Product Specifications	43

Digital photo Frame

Question & Answer

Q&A

This chapter will attempt to troubleshoot common problems that one may experience with the Multimedia DPF. If this guide does not solve your problem, do not dismantle the machine yourself.

Question	Answer
What memory cards are compatible with the digital frame?	Secure Digital Card (SD)/MultiMedia Card (MMC)/XD/ Memory Stick.
Dose Multimedia Digital Photo Frame have built-in memory?	Yes. The player has an internal memory to store media file. You can store 15 pictures at most.
What is the best picture resolution displayed on the screen?	The player's best resolution is 480 X 234.
Can I rotate a picture on the screen?	Yes. Use the ROTATE button on the remote control to rotate a picture. Note: The rotated picture will return to its original orientation after you power off the digital frame.
Can I adjust the colors of the picture?	No. All color settings are preset at the factory. You can only adjust the brightness and contrast of the screen.
Why Digital picture Frame does not advance to next picture?	1. There is only one picture in the frame. 2. You are viewing high-resolution pictures on the card, High-resolution pictures can take some to display. 3. You are in single picture display. 4. The next picture is damaged.
Why is only 15 pictures displayed?	Use the NEXT button to see next 15 pictures thumbnail.
Why picture display seems slow?	You are viewing high-resolution pictures, high-resolution pictures can take some time to display.
Why Digital Picture Frame doesn't display any pictures?	Make sure your memory card is inserted properly and that the pictures on it are in JPEG format. Pictures may be saved in a DCIM folder. Make sure that you have selected the "PHOTO" icon in main menu.
Why the video out is abnormal?	Make sure AV-out cable is plugged ok . Make sure the TV mode of AV-output is the same as TV's.
Can't I see the file list?	You are in thumbnail mode. Please set setup Menu-Photo Setting. Browse item to File Manger.
Can't the product read the card?	Make sure you have inserted the USB portable flash driver.

Digital photo Frame

Troubleshooting

If you have any questions, please consult the troubleshooting guide below. Some simple checks or a minor adjustment on your part may eliminate the problem and quickly resolved .

No power

Ensure the power button is on
Ensure the power cord is not damaged
Ensure the power plug is connected firmly to the outlet

can not read WMA music

this unit only supports WMA with a bit rate: 32Kbps - 192 bps,

Could not read the card

1. Please copy the content in your card to your PC, then format your card, then past your photos/mosaic/movies in your card again, then insert the card to DPF to read it.
2. Ensure the card is not damaged
3. Ensure the card is connected to the DPF correctly
4. Ensure the card has content(photo/music/movie), if no content in card, the screen will display "no playable file"
5. Do not insert your card and USB together at same time. Otherwise one of device can not be recognized

Could not read the USB portable flash driver

Do not insert your card and USB together at same time. Otherwise one of device can not be recognized

Remote control not working

1. Ensure the batteries are inserted
2. Ensure the batteries "protective plastic" is pulled out.

Digital photo Frame

Product Specifications

Specifications can be changed without prior notice in the interest of improving product performance.

Product Specifications

Item		Details
LCD Display	Size	7 Inch (Diagonal)
	Resolution	480(Horizontal)*234(Vertical)
Memory		Store up to 15 photos
	Compatible Memory Cards	SD / MMC / Memory Stick/XD
Support Media Formats	Images	JPG
	Video	MPEG-1(mpg/dat/vob), AVI
	Audio	Mp3, WMA
Internal Speaker	Stereo	1W*2, 400HZ~20KHZ
Power	Adapter	Input: 100~240V AC, Output: 5V, 1A DC
	Electricity Consumption	5W (Operating)
Weight	Kg	1.2
USB Connection	USB	USB 2.0

Digital photo Frame

FCC and Safety Information

(please copy and past these texts. Wording is mostly okay, but punctuation is wrong. If these words were obtained from a legal document please check the spots where I have changed the text, as there were errors, but i do not want to mis-handle legal information)

FCC Part 15.19

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cuase harmful interference, and (2) this device must accept any interface received, including interference that may cause undesired operation.

FCC part 15.21

Warning: Changes or modifications to this unit not expressly described in this manual could make the product unusable, and void the user's authority to operate the equipment.

FCC part 15.105

Notes: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on circuit different form that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

Digital photo Frame

LIMITED WARRANTY

The limited warranty set forth below is given by Sungale Group Inc. ("SGI") with respect to Sungale brand DPF players and other consumer electronics products purchased and used in the United States of America. SGI warrants this product against defects in material or workmanship as follows:

LABOR: For a period of ninety (90) days from the date of purchase, if this Product is defective, SGI will repair or replace the Product, at its option, at no charge. After this ninety (90) days period up to one year, a labor charge of US\$30.00 will be charged for each service.

PARTS: For a period of one year from the date of purchase, SGI will supply, at no charge, new or rebuilt replacement parts in exchange for defective parts. After this one year period, SGI will charge the new or replacement parts.

This warranty does not cover: (1) customer instruction, installation or set up; (2) cosmetic damage or damage due to accident, misuse, abuse, or negligence; (3) commercial use of the Product; (4) modification of any part of the Product; (5) damage due to improper operation, improper maintenance, or connection to an improper voltage supply; (6) damage due to an attempted repair of the Product by anyone other than a facility authorized by SGI to service the Product; (7) consumables (such as fuses and batteries). This warranty is valid only in the United States.

The product must be accompanied by a copy of the original retail purchase receipt. If no proof of purchase is attached, the warranty will not be honored and repair cost will be charged.

This warranty is valid with attach written documentation detailing the complaint to the outside or inside of the carton.

This warranty is invalid if the factory applied serial number has been altered or removed from the Product.

SGI reserves the right to modify any design of this product without prior notice.

To obtain warranty service, you must deliver the product freight prepaid, in either its original packaging or packaging affording an equal degree of protection, plus proof of purchase, to:

Service Center
13358 Monte Vista Avenue,
Chino, CA 91710
Tel: **800-473-5156**

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. SGI SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

Digital Photo Frame

Sungale