

# JVC



## CD RECEIVER

## KD-R400

ENGLISH

## RECEPTOR CON CD

## KD-R400

ESPAÑOL

## RÉCEPTEUR CD

## KD-R400

FRANÇAIS



For canceling the display demonstration, see page 7.

Para cancelar la demostración en pantalla, consulte la página 7.

Pour annuler la démonstration des affichages, référez-vous à la page 7.

For installation and connections, refer to the separate manual.

Para la instalación y las conexiones, refiérase al manual separado.

Pour l'installation et les raccordements, se référer au manuel séparé.

### For customer Use:

Enter below the Model No. and Serial No. which are located on the top or bottom of the cabinet. Retain this information for future reference.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

# INSTRUCTIONS

MANUAL DE INSTRUCCIONES  
MANUEL D'INSTRUCTIONS

GET0576-001A

[J]

Thank you for purchasing a JVC product.

Please read all instructions carefully before operation, to ensure your complete understanding and to obtain the best possible performance from the unit.

## **INFORMATION (For U.S.A.)**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **Caution:**

Changes or modifications not approved by JVC could void the user's authority to operate the equipment.

### **IMPORTANT FOR LASER PRODUCTS**

1. CLASS 1 LASER PRODUCT
2. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel.
3. **CAUTION:** (For U.S.A.) Visible and/or invisible class II laser radiation when open. Do not stare into beam.  
(For Canada) Visible and/or invisible class 1M laser radiation when open. Do not view directly with optical instruments.
4. REPRODUCTION OF LABEL: CAUTION LABEL, PLACED OUTSIDE THE UNIT.

CAUTION VISIBLE AND/OR INVISIBLE CLASS 1M LASER RADIATION WHEN OPEN. DO NOT VIEW DIRECTLY WITH OPTICAL INSTRUMENTS. IEC60825-1:2001 (ENG)	ATTENTION RAYONNEMENT LASER VISIBLE ET/OU INVISIBLE DE CLASSE 1M UNE FOIS OUVERT NE PAS REGARDER DIRECTEMENT AVEC DES INSTRUMENTS OPTIQUES. (FRA)	AVISO RADIACIÓN LÁSER VISIBLE Y/O INVISIBLE DE CLASE 1M CUANDO ESTA ABIERTO. NO MIRAR DIRECTAMENTE CON INSTRUMENTOS ÓPTICOS. (ESP)	VARNING SYNLIG OCH/ELLER SYNLIG LASERSTRÄLLNING, KLASS 1M, NÅR DENNA DEL ÄR ÖPPNAD. BETRÄKTA EJ STRÄLEN MED OPTISKA INSTRUMENT. (SWE)	注意 ここに見えくと可視 及び/または不可視 のクラス 1M レーザー放射が あります。 レーザー放射が あります。 見学する際は 光学機器で直接 見てはいけません。 (JPN)	CAUTION VISIBLE AND/OR INVISIBLE CLASS II LASER RADIATION WHEN OPEN. DO NOT STARE INTO BEAM. FDA 21 CFR (ENG)
---	--	---	---	--	---



[European Union only]

### **For safety...**

- Do not raise the volume level too much, as this will block outside sounds, making driving dangerous.
- Stop the car before performing any complicated operations.


### **Warning:**

If you need to operate the unit while driving, be sure to look around carefully or you may be involved in a traffic accident.


### **Temperature inside the car...**

If you have parked the car for a long time in hot or cold weather, wait until the temperature in the car becomes normal before operating the unit.


## ■ Detaching the control panel

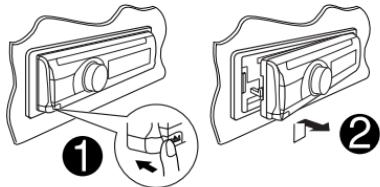

## ■ Attaching the control panel

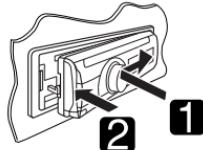


## ■ How to reset your unit

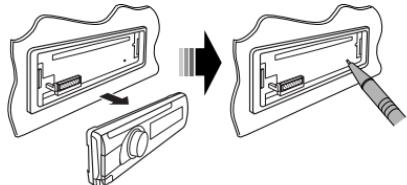

- Your preset adjustments will also be erased.

## ■ How to forcibly eject a disc

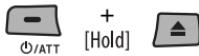

- You can forcibly eject the loaded disc even if the disc is locked. To lock/unlock the disc, see page 9.
- Be careful not to drop the disc when it ejects.
- If this does not work, reset your unit.

### Caution on volume setting:

Digital devices (CD/USB) produce very little noise compared with other sources. Lower the volume before playing these digital sources to avoid damaging the speakers by sudden increase of the output level.

# CONTENTS

Detaching the control panel.....	3
Attaching the control panel .....	3
How to reset your unit .....	3
How to forcibly eject a disc.....	3

## OPERATIONS

Basic operations.....	4
• Using the control panel.....	4
• Using the remote controller (RM-RK50).....	6
Preparation .....	7
Listening to the radio.....	8
Disc operations.....	9
Listening to the USB device.....	10

## EXTERNAL DEVICES

Listening to the other external components.....	11
---	----

## SETTINGS

Selecting a preset sound mode .....	12
Title assignment .....	13
Menu operations.....	14
Color settings .....	17

## REFERENCES

More about this unit .....	18
Troubleshooting.....	21
Maintenance.....	23
Specifications.....	24


This mark is used to indicate...



Turn the control dial to make a selection, then press to confirm the selection.

# Basic operations

## Using the control panel

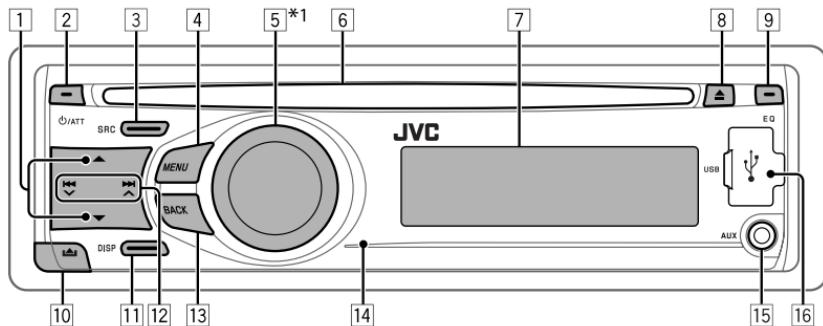

- [1]** • **FM/AM**: Select preset station.
- **CD/USB**: Select folder.
- [2]** • Turn on the power.
- Attenuate the sound (if the power is on).
- Turn off the power [Hold].
- [3]** Select the source.  
**FM → AM<sup>\*2</sup> → CD<sup>\*3</sup> → USB → AUX IN<sup>\*2</sup> →**  
(back to the beginning)
- [4]** • Enter list operations.
- Enter Menu setting [Hold].
- [5]** • Control the volume<sup>\*4</sup> or select items [Turn].
- Confirm the selection [Press].
- **FM**: Enter SSM preset mode [Hold].
- **CD/USB**: Enter playback mode [Hold].  
Pause/resume playback<sup>\*4</sup> [Press].
- [6]** Loading slot
- [7]** Display window
- [8]** Eject disc.

- [9]** Select the sound mode.
- [10]** Detach the panel.
- [11]** Change the display information.
- [12]** • **FM/AM**: Search for station.
- **CD/USB**: Select track.
- [13]** Return to the previous menu.
- [14]** Remote sensor
- [15]** AUX (auxiliary) input jack
- [16]** USB (Universal Serial Bus) input jack

**\*1** Also known as "Control dial" in this manual.


**\*2** You cannot select these sources if they were disabled in the Menu (see "SRC SELECT" in "Menu operations" on page 16).

**\*3** You cannot select "CD" as the playback source if no disc is in the unit.

**\*4** You can still adjust the volume during pause when the selected source is CD/USB.

Before resume playback, check to be sure that you have not raise the volume level too much.


You can change the display and button illumination (see "COLOR" on page 15).

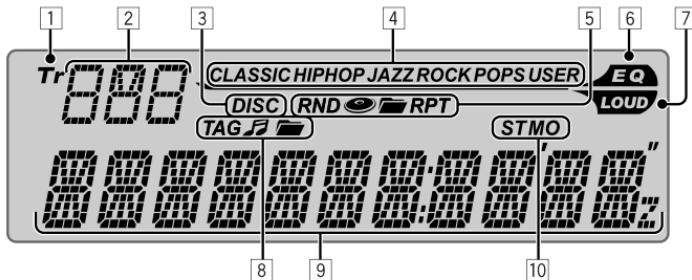**Display window**

- |  |  |
|--|--|
| [1] Tr (track) indicator   | [6] EQ (equalizer) indicator                               |
| [2] Source display / Track number / Folder number / Time countdown indicator     | [7] LOUD (loudness) indicator                              |
| [3] DISC indicator   | [8] Disc information indicators—                           |
| [4] Sound mode indicators—CLASSIC, HIP HOP, JAZZ, ROCK, POPS, USER               | TAG (Tag information), (track/file), (folder)              |
| [5] Playback mode / item indicators—RND (random), (disc), (folder), RPT (repeat) | [9] Main display   |
|  | [10] Tuner reception indicators—ST (stereo), MO (monaural) |

# Using the remote controller (RM-RK50)


## Installing the lithium coin battery (CR2025)

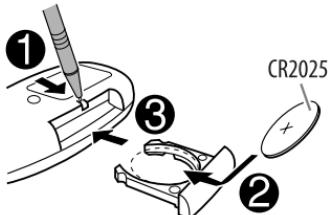

For USA-California Only:

This product contains a CR Coin Cell Lithium Battery which contains Perchlorate Material—special handling may apply.

See [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate)

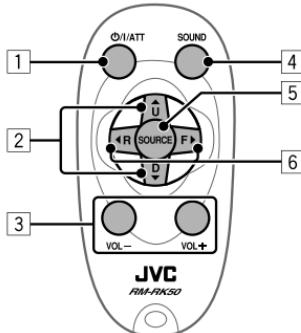


### **Caution:**

- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Battery shall not be exposed to excessive heat such as sunshine, fire, or the like.

**If the effectiveness of the remote controller decreases, replace the battery.**

### **Before using the remote controller:**

- Aim the remote controller directly at the remote sensor on the unit.
- DO NOT expose the remote sensor to bright light (direct sunlight or artificial lighting).

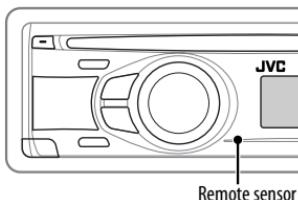

This unit is equipped with the steering wheel remote control function.

- See the Installation/Connection Manual (separate volume) for connection.

- ① • Turns the power on if pressed briefly or attenuates the sound when the power is on.
- ② • Turns the power off if pressed and held.
- ③ • Changes the preset stations.
- ④ • Changes the folder of the MP3/WMA.
- ⑤ • Adjusts the volume level.
- ⑥ • Selects the sound mode.
- ⑦ • Selects the source.
- ⑧ • Searches for stations if pressed briefly.
- Fast-forwards or reverses the track if pressed and held.
- Changes the tracks if pressed briefly.

### **Warning (to prevent accidents and damage):**

- Do not install any battery other than CR2025 or its equivalent.
- Do not leave the remote controller in a place (such as dashboards) exposed to direct sunlight for a long time.
- Store the battery in a place where children cannot reach.
- Do not recharge, short, disassemble, heat the battery, or dispose of it in a fire.
- Do not leave the battery with other metallic materials.
- Do not poke the battery with tweezers or similar tools.
- Wrap the battery with tape and insulate when throwing away or saving it.

# Preparation

## ■ Canceling the display demonstration and setting the clock

- See also page 14.

1	 $\odot$ /ATT	<b>Turn on the power.</b>
2	 $\downarrow$  [Hold] Press and hold until the main menu is called up.  [Turn] → [Press] • Repeat this procedure.	<b>Cancel the display demonstrations</b> Select "DEMO," then "DEMO OFF."  <b>Set the clock</b> Select "CLOCK" → "CLOCK SET." Adjust the hour, then press control dial once to proceed to adjust the minute.  • To return to the previous menu, press BACK.

## Changing the display information



When the power is turned off: The current clock time is displayed if "CLOCK DISP" is set to "CLOCK OFF," (see page 14).

When the power is turned on: The display information of the current source changes as follows:

FM/AM	Frequency → Clock → Station name* <sup>1</sup> → (back to the beginning)
CD	Audio CD/CD Text: Disc title/performer* <sup>2</sup> → Track title* <sup>2</sup> → Current track number with the elapsed playing time → Current track number with the clock time → (back to the beginning)
CD/USB	MP3/WMA: Album name/performer (folder name)* <sup>3</sup> → Track title (file name)* <sup>3</sup> → Current track number with the elapsed playing time → Current track number with the clock time → (back to the beginning)

\*<sup>1</sup> If no title is assigned to a station, "NO NAME" appears. To assign a title to a station, see page 13.

\*<sup>2</sup> If the current disc is an audio CD, "NO NAME" appears.

\*<sup>3</sup> If an MP3/WMA file does not have Tag information or "TAG DISPLAY" is set to "TAG OFF" (see page 14), folder name and file name appear.


# Listening to the radio

<b>1</b> 	<b>Select “FM” or “AM.”</b>
<b>2</b> 	<b>Search for a station to listen—Auto Search.</b> When a station is tuned in, searching stops. To stop searching, press the same button again. <ul style="list-style-type: none"> <li>• You can also search for a station manually—Manual Search. Hold either one of the buttons until “M” flashes on the display, then press it repeatedly.</li> <li>• When receiving an FM stereo broadcast with sufficient signal strength, the ST indicator lights up on the display.</li> </ul>

## Improving the FM reception

When an FM stereo broadcast is hard to receive, activate monaural mode for better reception.

- See also page 15.

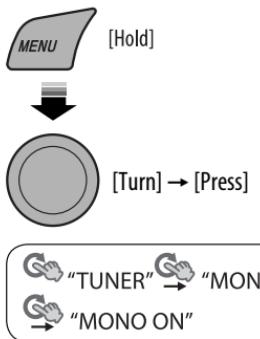

Reception improves, but stereo effect will be lost.

- The MO indicator lights up on the display.

**To restore the stereo effect,** repeat the same procedure to select “MONO OFF.” The MO indicator goes off.

## Storing stations in memory

### Automatic presetting (FM)—SSM (Strong-station Sequential Memory)

You can preset up to 18 stations for FM.

#### 1 While listening to a station...



#### 2 Select the preset number range you want to store.



SSM 01–06 ←→ SSM 07–12 ←→ SSM 13–18

#### 3



Local FM stations with the strongest signals are searched and stored automatically.

- **To stop searching,** press  $\blacktriangleleft\blacktriangleright\blacktriangledown\blacktriangleright\blacktriangleleft$ .

**To preset other 6 stations,** repeat from step 1 again.

**Manual presetting (FM/AM)**

You can preset up to 18 stations for FM and 6 stations for AM.

Ex.: Storing FM station of 92.50 MHz into preset number "04."

**1****2 Select preset number "04."****3**

[Hold]

**Selecting preset station**

or



[Turn] → [Press]

**Disc operations**

<b>1</b>		<b>Turn on the power.</b>
<b>2</b>		<b>Insert a disc.</b> All tracks will be played repeatedly until you change the source or eject the disc.

**Stop playing and ejecting the disc**


- "NO DISC" appears. Press SRC to listen to another playback source.

**Prohibiting disc ejection**

+ [Hold]



To cancel the prohibition, repeat the same procedure.

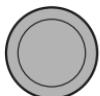**Selecting a track/folder**

[Turn] → [Press]

- For MP3/WMA discs, select the desired folder, then the desired track by repeating the control dial procedures.
- To return to the previous menu, press BACK.




*Continued on the next page*

Pressing (or holding) the following buttons allows you to...

	[Press]Pause/resume playback.
	MP3/WMA: Select folder
	[Press]Select track [Hold] Reverse/fast-forward track

## ■ Selecting the playback modes

You can use only one of the following playback modes at a time.

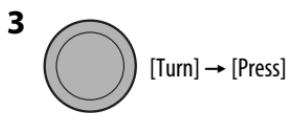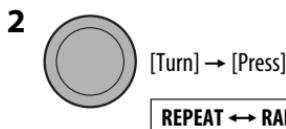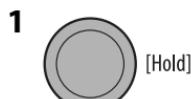

### REPEAT

**TRACK RPT** : Repeats current track  
**FOLDER RPT** : MP3/WMA: Repeats current folder

### RANDOM


**FOLDER RND** : MP3/WMA: Randomly plays all tracks of current folder, then tracks of next folders  
**ALL RND** : Randomly plays all tracks

- To cancel repeat play or random play, select “RPT OFF” or “RND OFF.”
- To return to the previous menu, press BACK.

## Listening to the USB device

This unit can play MP3/WMA tracks stored in a USB device.

All tracks will be played repeatedly until you change the source or detach the USB device.

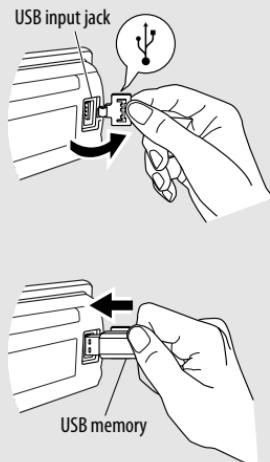

### If a USB device has been attached...



Playback starts from where it has been stopped previously.

- If a different USB device is currently attached, playback starts from the beginning.

## To stop play and detach the USB device

Straightly pull it out from the unit.

- Press SRC to listen to another playback source.

You can operate the USB device in the same way you operate the files on a disc. (See pages 9 and 10.)

### Cautions:

- Avoid using the USB device if it might hinder your safety driving.
- Do not pull out and attach the USB device repeatedly while "READING" is shown on the display.
- Do not start the car engine if a USB device is connected.

- This unit may not be able to play the files depending on the type of USB device.
- Operation and power supply may not work as intended for some USB devices.
- You cannot connect a computer to the USB input terminal of the unit.
- Make sure all important data has been backed up to avoid losing the data.
- Do not leave a USB device in the car, expose to direct sunlight, or high temperature to avoid deformation or cause damages to the device.
- Some USB devices may not work immediately after you turn on the power.
- For more details about USB operations, see pages 19 and 20.


## Listening to the other external components

You can connect an external component to AUX (auxiliary) input jack on the control panel.

**Preparation:** Make sure "AUX ON" is selected in the "SRC SELECT" → "AUX IN" setting, see page 16.

1		Select "AUX IN."
2	—	Turn on the connected component and start playing the source.
3	[Turn]	Adjust the volume.
4	—	Adjust the sound as you want (see pages 12 and 13).

### Connecting an external component to the AUX input jack

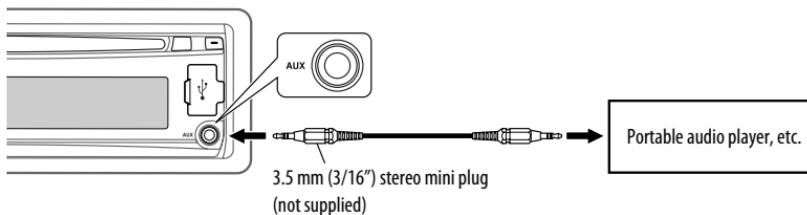

# Selecting a preset sound mode

You can select a preset sound mode suitable to the music genre.

- See also page 14.



Selecting from Menu.

or



[Hold]



[Turn] → [Press]



"USER/ROCK/CLASSIC  
/POPS/HIP HOP/JAZZ"

- See below and page 13 for "USER" settings.

## Preset value setting for each sound mode

Sound mode	Preset value									
	BASS			MIDDLE			TREBLE			LOUD (loudness)
	Freq.	Level	Q	Freq.	Level	Q	Freq.	Level	Q	
USER	60 Hz	00	Q1.25	1.0 kHz	00	Q1.0	10.0 kHz	00	—	OFF
ROCK	100 Hz	+03	Q1.0	1.0 kHz	00	Q1.25	10.0 kHz	+02	—	
CLASSIC	80 Hz	+01	Q1.25	1.0 kHz	00	Q1.25	10.0 kHz	+03	—	
POPS	100 Hz	+02	Q1.25	1.0 kHz	+01	Q1.25	10.0 kHz	+02	—	
HIP HOP	60 Hz	+04	Q1.0	1.0 kHz	-02	Q1.0	10.0 kHz	+01	—	
JAZZ	80 Hz	+03	Q1.25	1.0 kHz	00	Q1.25	10.0 kHz	+03	—	

Freq.: Frequency Q: Q-slope

## ■ Storing your own sound mode

You can store your own adjustments in memory.

### 1 Select "USER" for "EQ."




[Hold]


### 2 While "USER" is shown on the display...



[Hold]

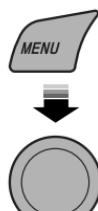

[Turn] → [Press]

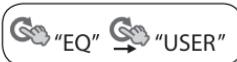

"EQ"

"USER"

**3 Select a tone.**

[Turn] → [Press]

→ BASS ← MIDDLE ← TREBLE ←

**4 Adjust the sound elements of the selected tone.**

[Turn] → [Press]

- ① Adjust the frequency.
- ② Adjust the level.
- ③ Adjust the Q-slope.

Sound elements	Range/selectable items		
	BASS	MIDDLE	TREBLE
Frequency	60 Hz	0.5 kHz	10.0 kHz
	80 Hz	1.0 kHz	12.5 kHz
	100 Hz	1.5 kHz	15.0 kHz
	200 Hz	2.5 kHz	17.5 kHz
Level	-06 to +06	-06 to +06	-06 to +06
Q	Q1.0 Q1.25 Q1.5 Q2.0	Q0.75 Q1.0 Q1.25	Fixed

**5 Repeat steps 3 and 4 to adjust other sound characteristics.**


The adjustment made will be stored automatically.

**Title assignment**


You can assign titles to 30 station frequencies (FM and AM) using 8 characters (maximum) for each title.

**1 Select "FM" or "AM."**

SRC

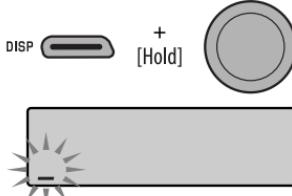**2 Show the title entry screen.****3 Assign a title.**

## ① Select a character.

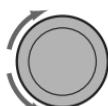

[Turn]

A	B	C	D	E	F	G
H	I	J	K	L	M	N
O	P	Q	R	S	T	U
V	W	X	Y	Z	0	1
2	3	4	5	6	7	8
9	-	/	<	>	space	

## ② Move to the next (or previous) character position.



## ③ Repeat steps ① and ② until you finish entering the title.

**4 Finish the procedure.**

[Press]

**To erase the entire title**

In step 2 above...

DISP [Hold]


# Menu operations

**1 Call up the menu.**



[Hold]

**2 Select the desired item.**

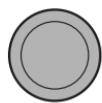

[Turn] → [Press]

**3 Repeat step 2 if necessary.**

- To return to the previous menu, press BACK.
- To exit from the menu, press DISP or MENU.

Initial: Underlined

Category	Menu items	Selectable settings, [reference page]
DEMO	<b>DEMO</b> Display demonstration	<ul style="list-style-type: none"> <li>• <b>DEMO ON</b> : Display demonstration will be activated automatically if no operation is done for about 20 seconds, [7].</li> <li>• <b>DEMO OFF</b> : Cancels.</li> </ul>
CLOCK	<b>CLOCK DISP*</b> <sup>1</sup> Clock display	<ul style="list-style-type: none"> <li>• <b>CLOCK ON</b> : Clock time is shown on the display at all times when the power is turned off.</li> <li>• <b>CLOCK OFF</b> : Cancels; pressing DISP will show the clock time for about 5 seconds when the power is turned off, [7].</li> </ul>
	<b>CLOCK SET</b> Clock setting	: Adjust the hour, then the minute, [7]. (Initial: 1:00)
EQ	<b>EQ</b> Equalizer	: Select a preset sound mode suitable to the music genre. <b>USER, ROCK, CLASSIC, POPS, HIP HOP, JAZZ</b>
DISPLAY	<b>DIMMER</b> Dimmer	<ul style="list-style-type: none"> <li>• <b>DIMMER ON</b> : Dims the display and button illumination.</li> <li>• <b>DIMMER OFF</b> : Cancels.</li> </ul>
	<b>SCROLL*</b> <sup>2</sup> Scroll	<ul style="list-style-type: none"> <li>• <b>SCROLL ONCE</b> : Scrolls the displayed information once.</li> <li>• <b>SCROLL AUTO</b> : Repeats scrolling (at 5-second intervals).</li> <li>• <b>SCROLL OFF</b> : Cancels.</li> </ul> <p>Pressing DISP for more than one second can scroll the display regardless of the setting.</p>
	<b>TAG DISPLAY</b> Tag display	<ul style="list-style-type: none"> <li>• <b>TAG ON</b> : Shows the Tag information while playing MP3/WMA tracks.</li> <li>• <b>TAG OFF</b> : Cancels.</li> </ul>

\*1 If the power supply is not interrupted by turning off the ignition key of your car, it is recommended to select "CLOCK OFF" to save the car's battery.

\*2 Some characters or symbols will not be shown correctly (or will be blanked) on the display.

Category	Menu items	Selectable settings, [reference page]	
TUNER	<b>AREA</b> Tuner channel interval	<ul style="list-style-type: none"> <li>• <b>AREA US</b> : When using in North/Central/South America. AM/FM intervals are set to 10 kHz/200 kHz.</li> <li>• <b>AREA EU</b> : When using in any other areas. AM/FM intervals are set to 9 kHz/50 kHz (100 kHz during auto search).</li> <li>• <b>AREA SA</b> : When using in South American countries where FM interval is 100 kHz. AM interval is set to 10 kHz.</li> </ul>	
	<b>MONO *3</b> Monaural mode	<ul style="list-style-type: none"> <li>• <b>MONO ON</b> : Activate monaural mode to improve FM reception, but stereo effect will be lost, [8].</li> <li>• <b>MONO OFF</b> : Restore the stereo effect.</li> </ul>	
	<b>IF BAND</b> Intermediate frequency band	<ul style="list-style-type: none"> <li>• <b>AUTO</b> : Increases the tuner selectivity to reduce interference noises between adjacent stations. (Stereo effect may be lost.)</li> <li>• <b>WIDE</b> : Subject to interference noises from adjacent stations, but sound quality will not be degraded and the stereo effect will remain.</li> </ul>	
COLOR	<b>COLOR 01</b> – <b>COLOR 29</b> , <b>USER</b>	: Select one of the preset or user color for display and button (except <b>EQ/Φ/ATT /▲</b> ) illumination. (For customize color settings, “USER,” see page 17.)	
MENU COLOR	<b>MENU COLOR</b> Menu color	<ul style="list-style-type: none"> <li>• <b>OFF</b> : Cancels.</li> <li>• <b>ON</b> : Changes the display and button (except <b>EQ/Φ/ATT/▲</b>) illumination during menu, list search and playback mode operations.</li> </ul>	
AUDIO	<b>FADER *4,*5</b> Fader	<b>R06 – F06</b> : Adjust the front and rear speaker output balance. (Initial: 00)	
	<b>BALANCE *5</b> Balance	<b>L06 – R06</b> : Adjust the left and right speaker output balance. (Initial: 00)	
	<b>LOUD</b> Loudness	<ul style="list-style-type: none"> <li>• <b>LOUD OFF</b> : Cancels.</li> <li>• <b>LOUD ON</b> : Boost low and high frequencies to produce a well-balanced sound at a low volume level.</li> </ul>	

\*3 Displayed only when the source is “FM.”

\*4 If you are using a two-speaker system, set the fader level to “00.”

\*5 This adjustment will not affect the subwoofer output.

Continued on the next page

Category	Menu items	Selectable settings, [reference page]	
AUDIO	<b>VOL ADJUST</b> Volume adjust	<b>VOL ADJ -05</b>	: Preset the volume adjustment level of each source (except FM), compared to the FM volume level. The volume level will automatically increase or decrease when you change the source.
		— <b>VOL ADJ +05</b> (Initial: VOL ADJ 00)	<ul style="list-style-type: none"> <li>Before making an adjustment, select the source you want to adjust.</li> <li>"VOL ADJ FIX" appears on the display if "FM" is selected as the source.</li> </ul>
	<b>L/O MODE</b> Line output mode	• <b>SUB.W</b>	: Select if the REAR LINE OUT terminals are used for connecting a subwoofer (through an external amplifier).
		• <b>REAR</b>	: Select if the REAR LINE OUT terminals are used for connecting the speakers (through an external amplifier).
	<b>SUB.W FREQ*6</b> Subwoofer cutoff frequency	• <b>LOW</b>	: Frequencies lower than 72 Hz are sent to the subwoofer.
		• <b>MID</b>	: Frequencies lower than 111 Hz are sent to the subwoofer.
		• <b>HIGH</b>	: Frequencies lower than 157 Hz are sent to the subwoofer.
	<b>SUB.W LEVEL*6</b> Subwoofer level	<b>SUB.W 00</b>	: Adjust the subwoofer output level.
		— <b>SUB.W 08</b>	(Initial: SUB.W 04)
SRCSELECT	<b>BEEP</b> Key touch tone	• <b>BEEP OFF</b>	: Deactivates the key touch tone.
		• <b>BEEP ON</b>	: Activates the key touch tone.
	<b>AMP GAIN*7</b> Amplifier gain control	• <b>LOW POWER</b>	: VOLUME 00 – VOLUME 30 (Select if the maximum power of each speaker is less than 50 W to prevent damaging the speaker.)
		• <b>HIGH POWER</b>	: VOLUME 00 – VOLUME 50
	<b>AM*8</b> AM station	• <b>AM OFF</b>	: Disable "AM" in source selection.
		• <b>AM ON</b>	: Enable "AM" in source selection, [4].
	<b>AUX IN*9</b> Auxiliary input	• <b>AUX OFF</b>	: Disable "AUX IN" in source selection.
		• <b>AUX ON</b>	: Enable "AUX IN" in source selection, [4].

\*6 Displayed only when "L/O MODE" is set to "SUB.W."

\*7 The volume level automatically changes to "VOLUME 30" if you change to "LOW POWER" with the volume level set higher than "VOLUME 30."

\*8 Displayed only when any source other than "AM" is selected.

\*9 Displayed only when any source other than "AUX IN" is selected.

# Color settings

## ■ Creating your own color —USER Color


You can create your own colors—"DAY COLOR" or "NIGHT COLOR."

DAY COLOR: Used when "DIMMER" is set to "DIMMER OFF."

NIGHT COLOR: Used when "DIMMER" is set to "DIMMER ON."



**2 Select "COLOR" → "USER."**

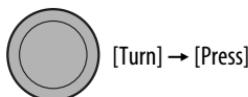

**3 While "USER" is shown on the display...**



DAY COLOR ↔ NIGHT COLOR

**5 Select a primary color.**



[Turn] → [Press]

→ RED ← GREEN ← BLUE ←

**6 Adjust the level (00 to 31) of the selected primary color.**



[Turn] → [Press]

If "00" is selected for all the primary colors, nothing appear on the display.

**7 Repeat steps 5 and 6 to adjust other primary colors.**

**8 Exit from the setting.**



- If no operation is done for about 30 seconds, the operation will be canceled.

# More about this unit

## ■ Basic operations

### Turning on the power

- By pressing SRC button on the unit, you can also turn on the power. If the source is ready, playback also starts.

### Turning off the power

- If you turn off the power while listening to a track, playback will start from where it had been stopped previously next time you turn on the power.

## General

- If you change the source while listening to a disc, playback stops.

Next time you select "CD" as the playback source, playback will start from where it had been stopped previously.

- If no operation is done for about 30 seconds after pressing MENU button, the operation will be canceled.

## ■ Tuner operations

### Storing stations in memory

- During SSM search...
  - All previously stored stations are erased and the stations are stored anew.
  - When SSM is over, the station stored in the lowest preset number will be automatically tuned in.
- When storing a station manually, the previously preset station is erased when a new station is stored in the same preset number.

## ■ Disc operations

### Caution for DualDisc playback

- The Non-DVD side of a "DualDisc" does not comply with the "Compact Disc Digital Audio" standard. Therefore, the use of Non-DVD side of a DualDisc on this product may not be recommended.

## General

- This unit has been designed to reproduce CDs/CD Texts, and CD-Rs (Recordable)/CD-RWs (Rewritable) in audio CD (CD-DA), MP3/WMA formats.
- When a disc is inserted upside down, "PLEASE" and "EJECT" appear alternately on the display. Press ▲ to eject the disc.
- MP3 and WMA "tracks" (words "file" and "track" are used interchangeably) are recorded in "folders."
- While fast-forwarding or reversing on an MP3 or WMA disc, you can only hear intermittent sounds.

## Playing a CD-R or CD-RW

- Use only "finalized" CD-Rs or CD-RWs.
- This unit can only play back files of the same type as those detected first if a disc includes both audio CD (CD-DA) files and MP3/WMA files.
- This unit can play back multi-session discs; however, unclosed sessions will be skipped while playing.
- Some CD-Rs or CD-RWs may not play back on this unit because of their disc characteristics, or for the following reasons:
  - Discs are dirty or scratched.
  - Moisture condensation has occurred on the lens inside the unit.
  - The pickup lens inside the unit is dirty.
  - The files on the CD-R/CD-RW are written using the "Packet Write" method.
  - There are improper recording conditions (missing data, etc.) or media conditions (stained, scratched, warped, etc.).

- CD-RWs may require a longer readout time since the reflectance of CD-RWs is lower than that of regular CDs.
  - Do not use the following CD-Rs or CD-RWs:
    - Discs with stickers, labels, or a protective seal stuck to the surface.
    - Discs on which labels can be directly printed by an ink jet printer.
- Using these discs under high temperature or high humidity may cause malfunctions or damage to the unit.

### **Playing an MP3/WMA disc**

- This unit can play back MP3/WMA files with the extension code <.mp3> or <.wma> (regardless of the letter case—upper/lower).
- This unit can show the names of albums, artists (performer), and Tag (Version 1.0, 1.1, 2.2, 2.3, or 2.4) for MP3 files and for WMA files.
- This unit can display only one-byte characters. No other characters can be correctly displayed.
- This unit can play back MP3/WMA files meeting the conditions below:
  - Bit rate of MP3: 32 kbps — 320 kbps
  - Sampling frequency of MP3:  
32 kHz, 44.1 kHz, 48 kHz (for MPEG-1)  
16 kHz, 22.05 kHz, 24 kHz (for MPEG-2)
  - Bit rate of WMA: 32 kbps — 320 kbps
  - Sampling frequency of WMA: 22.05 kHz, 32 kHz,  
44.1 kHz, 48 kHz
  - Disc format: ISO 9660 Level 1/Level 2, Romeo,  
Joliet, Windows extension.
- The maximum number of characters for file/folder names vary depending on the disc format used (includes 4 extension characters—<.mp3> or <.wma>).
  - ISO 9660 Level 1: up to 12 characters
  - ISO 9660 Level 2: up to 31 characters
  - Romeo: up to 64 characters
  - Joliet: up to 32 characters
  - Windows extension: up to 64 characters

- This unit can recognize a total of 512 files, 255 folders, and 8 hierarchical levels.
- This unit can play back files recorded in VBR (variable bit rate).  
Files recorded in VBR have a discrepancy in the elapsed time display, and do not show the actual elapsed time. In particular, this difference becomes noticeable after performing the search function.
- This unit cannot play back the following files:
  - MP3 files encoded in MP3i and MP3 PRO format.
  - MP3 files encoded in an inappropriate format.
  - MP3 files encoded with Layer 1/2.
  - WMA files encoded in lossless, professional, and voice format.
  - WMA files which are not based upon Windows Media® Audio.
  - WMA files copy-protected with DRM.
  - Files which have data such as AIFF, ATRAC3, etc.
- The search function works but search speed is not constant.

### **Playing MP3/WMA tracks from a USB device**

- While playing from a USB device, the playback order may differ from other players.
- This unit may be unable to play back some USB devices or some files due to their characteristics or recording conditions.
- Depending on the shape of the USB devices and connection ports, some USB devices may not be attached properly or the connection might be loose.
- Connect one USB mass storage class device to the unit at a time. Do not use a USB hub.
- If the connected USB device does not have the correct files, "CANNOT PLAY" appears.
- This unit can show Tag (Version 1.0, 1.1, 2.2, 2.3, or 2.4) for MP3 files and for WMA files.

*Continued on the next page*

- This unit can play back MP3/WMA files meeting the conditions below:
  - Bit rate of MP3: 32 kbps — 320 kbps
  - Sampling frequency of MP3:
    - 32 kHz, 44.1 kHz, 48 kHz (for MPEG-1)
    - 16 kHz, 22.05 kHz, 24 kHz (for MPEG-2)
  - Bit rate of WMA: 32 kbps — 320 kbps
  - Sampling frequency of WMA: 22.05 kHz, 32 kHz, 44.1 kHz, 48 kHz
- This unit can play back MP3 files recorded in VBR (variable bit rate).
- The maximum number of characters for:
  - Folder names : 32 characters
  - File names : 32 characters
  - MP3 Tag : 64 characters
  - WMA Tag : 32 characters
- This unit can recognize a total of 5 000 files, 255 folders (255 files per folder including folder without unsupported files), and of 8 hierarchies.
- This unit does not support SD card reader.
- This unit cannot recognize a USB device whose rating is other than 5 V and exceeds 500 mA.
- USB devices equipped with special functions such as data security functions cannot be used with the unit.
- Do not use a USB device with 2 or more partitions.
- This unit may not recognize a USB device connected through a USB card reader.
- This unit may not play back files in a USB device properly when using a USB extension cord.
- This unit cannot play back the following files:
  - MP3 files encoded with MP3i and MP3 PRO format.
  - MP3 files encoded in an inappropriate format.
  - MP3 files encoded with Layer 1/2.
  - WMA files encoded in lossless, professional, and voice format.
  - WMA files not based on Windows Media® Audio.

## **Ejecting a disc or removing a USB device**

- If the ejected disc is not removed within 15 seconds, it is automatically inserted into the loading slot again to protect it from dust.
- After ejecting a disc or removing a USB device, “NO DISC” or “NO USB” appears and you cannot operate some of the buttons. Insert another disc, reattach a USB device, or press SRC to select another playback source.

## **Title assignment**

- If you try to assign titles to more than 30 station frequencies, “NAME FULL” appears. Delete unwanted titles before assignment.

## **Menu operations**

- If you change the “AMP GAIN” setting from “HIGH POWER” to “LOW POWER” while the volume level is set higher than “VOLUME 30,” the unit automatically changes the volume level to “VOLUME 30.”

# Troubleshooting

What appears to be trouble is not always serious. Check the following points before calling a service center.

	Symptoms	Remedies/Causes
General	<ul style="list-style-type: none"> <li>• Sound cannot be heard from the speakers.</li> </ul>	<ul style="list-style-type: none"> <li>• Adjust the volume to the optimum level.</li> <li>• Check the cords and connections.</li> </ul>
	<ul style="list-style-type: none"> <li>• The unit does not work at all.</li> </ul>	Reset the unit (see page 3).
	<ul style="list-style-type: none"> <li>• "AUX IN" cannot be selected.</li> </ul>	Check the "SRC SELECT" → "AUX IN" setting (see page 16).
	<ul style="list-style-type: none"> <li>• Nothing appear on the display.</li> </ul>	Check the USER Color settings (see page 17)
FM/AM	<ul style="list-style-type: none"> <li>• SSM automatic presetting does not work.</li> </ul>	Store stations manually.
	<ul style="list-style-type: none"> <li>• Static noise while listening to the radio.</li> </ul>	Connect the antenna firmly.
	<ul style="list-style-type: none"> <li>• "AM" cannot be selected.</li> </ul>	Check the "SRC SELECT" → "AM" setting (see page 16).
Discs in general	<ul style="list-style-type: none"> <li>• Disc cannot be played back.</li> </ul>	Insert the disc correctly.
	<ul style="list-style-type: none"> <li>• CD-R/CD-RW cannot be played back.</li> </ul>	<ul style="list-style-type: none"> <li>• Insert a finalized CD-R/CD-RW.</li> </ul>
	<ul style="list-style-type: none"> <li>• Tracks on the CD-R/CD-RW cannot be skipped.</li> </ul>	<ul style="list-style-type: none"> <li>• Finalize the CD-R/CD-RW with the component which you used for recording.</li> </ul>
	<ul style="list-style-type: none"> <li>• Disc can neither be played back nor ejected.</li> </ul>	<ul style="list-style-type: none"> <li>• Unlock the disc (see page 9).</li> <li>• Eject the disc forcibly (see page 3).</li> </ul>
	<ul style="list-style-type: none"> <li>• Disc sound is sometimes interrupted.</li> </ul>	<ul style="list-style-type: none"> <li>• Stop playback while driving on rough roads.</li> <li>• Change the disc.</li> <li>• Check the cords and connections.</li> </ul>
	<ul style="list-style-type: none"> <li>• "NO DISC" appears on the display.</li> </ul>	Insert a playable disc into the loading slot.
	<ul style="list-style-type: none"> <li>• "PLEASE" and "EJECT" appear alternately on the display.</li> </ul>	Press <b>▲</b> , then insert a disc correctly.
	<ul style="list-style-type: none"> <li>• Disc cannot be played back.</li> </ul>	<ul style="list-style-type: none"> <li>• Use a disc with MP3/WMA tracks recorded in a format compliant with ISO 9660 Level 1, Level 2, Romeo, or Joliet.</li> <li>• Add the extension code &lt;.mp3&gt; or &lt;.wma&gt; to the file names.</li> </ul>
MP3/WMA playback	<ul style="list-style-type: none"> <li>• Noise is generated.</li> </ul>	Skip to another track or change the disc. (Do not add the extension code <.mp3> or <.wma> to non-MP3 or WMA tracks.)

*Continued on the next page*


Symptoms	Remedies/Causes
<ul style="list-style-type: none"> <li>A longer readout time is required ("READING" keeps flashing on the display).</li> </ul>	Do not use too many hierarchical levels and folders.
<ul style="list-style-type: none"> <li>Tracks do not play back in the order you have intended them to play.</li> </ul>	The playback order is determined when the files are recorded.
<ul style="list-style-type: none"> <li>The elapsed playing time is not correct.</li> </ul>	This sometimes occurs during playback. This is caused by how the tracks are recorded on the disc.
<ul style="list-style-type: none"> <li>"NO FILE" appears on the display.</li> </ul>	<p>Selected folder is an empty folder*. Select another folder that contains MP3/WMA tracks.</p> <p>* <i>Folder that is physically empty or folder that contains data but does not contain valid MP3/WMA track.</i></p>
<ul style="list-style-type: none"> <li>The correct characters are not displayed (e.g. album name).</li> </ul>	This unit can only display letters (upper case), numbers, and a limited number of symbols.
<ul style="list-style-type: none"> <li>Noise is generated.</li> </ul>	The track played back is not an MP3/WMA track. Skip to another file. (Do not add the extension code <.mp3> or <.wma> to non-MP3 or WMA tracks.)
<ul style="list-style-type: none"> <li>"READING" keeps flashing on the display.</li> </ul>	<ul style="list-style-type: none"> <li>Readout time varies depending on the USB device.</li> <li>Do not use too many hierarchy or folders.</li> <li>Turn off the power then on again.</li> <li>Reattach the USB device again.</li> </ul>
<ul style="list-style-type: none"> <li>"NO FILE" appears on the display.</li> </ul>	<p>Selected folder is an empty folder*. Select another folder that contains MP3/WMA tracks.</p> <p>* <i>Folder that is physically empty or folder that contains data but does not contain valid MP3/WMA track.</i></p>
<ul style="list-style-type: none"> <li>Tracks/folders are not played back in the order you have intended.</li> </ul>	The playback order is determined by the write-in time stamp. The first track/folder written into the USB device will be the first track/folder for playback.
<ul style="list-style-type: none"> <li>"CANNOT PLAY" flashes on the display.</li> <li>"NO USB" appears on the display.</li> <li>The unit cannot detect the USB device.</li> </ul>	<ul style="list-style-type: none"> <li>Attach a USB device that contains tracks encoded in an appropriate format.</li> <li>Reattach the USB device again.</li> </ul>
<ul style="list-style-type: none"> <li>Correct characters are not displayed (e.g. album name).</li> </ul>	This unit can only display letters (upper case), numbers, and a limited number of symbols.
<ul style="list-style-type: none"> <li>While playing a track, sound is sometimes interrupted.</li> </ul>	The MP3/WMA tracks have not been properly copied into the USB device. Copy MP3/WMA tracks again into the USB device, and try again.

- Microsoft and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

# Maintenance

## ■ How to clean the connectors

Frequent detachment will deteriorate the connectors. To minimize this possibility, periodically wipe the connectors with a cotton swab or cloth moistened with alcohol, being careful not to damage the connectors.

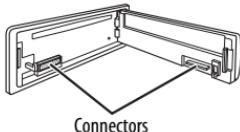

Connectors

## ■ Moisture condensation

Moisture may condense on the lens inside the unit in the following cases:

- After starting the heater in the car.
- If it becomes very humid inside the car.

Should this occur, the unit may malfunction. In this case, eject the disc and leave the unit turned on for a few hours until the moisture has evaporated.

## ■ How to handle discs

**When removing a disc from its case,** press down the center holder of the case and lift the disc out, holding it by the edges.



- Always hold the disc by the edges. Do not touch its recording surface.

**When storing a disc in its case,** gently insert the disc around the center holder (with the printed surface facing up).

- Make sure to store discs in cases after use.

## ■ To keep discs clean

A dirty disc may not play correctly.

If a disc does become dirty, wipe it with a soft cloth in a straight line from center to edge.



- Do not use any solvents (for example, conventional record cleaner, spray, thinner, benzine, etc.) to clean discs.

## ■ To play new discs

New discs may have some rough spots around the inner and outer edges. If such a disc is used, this unit may reject the disc.



**To remove these rough spots,** rub the edges with a pencil or ball-point pen, etc.

### Do not use the following discs:

Single CD

—8 cm (3-3/16") disc



Warped disc



Sticker and sticker residue



Stick-on label



Unusual shape



C-thru Disc (semi-transparent disc)



Transparent or semi-transparent parts on its recording area



# Specifications

AUDIO AMPLIFIER SECTION		
<b>Power Output:</b>	<b>20 W RMS × 4 Channels at 4 Ω and ≤ 1% THD+N</b>	
<b>Signal-to-Noise Ratio:</b>	80 dBA (reference: 1 W into 4 Ω)	
<b>Load Impedance:</b>		4 Ω (4 Ω to 8 Ω allowance)
<b>Tone Control Range:</b>	<b>Bass:</b>	±12 dB (60 Hz, 80 Hz, 100 Hz, 200 Hz) Q1.0, Q1.25, Q1.5, Q2.0
	<b>Middle:</b>	±12 dB (0.5 kHz, 1.0 kHz, 1.5 kHz, 2.5 kHz) Q0.75, Q1.0, Q1.25
	<b>Treble:</b>	±12 dB (10.0 kHz, 12.5 kHz, 15.0 kHz, 17.5 kHz) Q = Fixed
<b>Frequency Response:</b>		40 Hz to 20 000 Hz
<b>Line-Out Level/Impedance:</b>		2.5 V/20 kΩ load (full scale)
<b>Subwoofer-Out Level/Impedance:</b>		2.5 V/20 kΩ load (full scale)
<b>Output Impedance:</b>		1 kΩ
<b>Other Terminal:</b>		USB input jack, AUX (auxiliary) input jack, Steering wheel remote input

TUNER SECTION		
<b>Frequency Range:</b>	<b>FM:</b>	with channel interval set to 100 kHz or 200 kHz
		87.5 MHz to 107.9 MHz
		with channel interval set to 50 kHz
		87.5 MHz to 108.0 MHz
<b>AM:</b>	with channel interval set to 10 kHz	530 kHz to 1 710 kHz
	with channel interval set to 9 kHz	531 kHz to 1 602 kHz
<b>FM Tuner</b>	<b>Usable Sensitivity:</b>	11.3 dBf (1.0 µV/75 Ω)
	<b>50 dB Quieting Sensitivity:</b>	16.3 dBf (1.8 µV/75 Ω)
	<b>Alternate Channel Selectivity (400 kHz):</b>	65 dB
	<b>Frequency Response:</b>	40 Hz to 15 000 Hz
	<b>Stereo Separation:</b>	35 dB
<b>AM Tuner</b>	<b>Sensitivity:</b>	20 µV
	<b>Selectivity:</b>	35 dB

**CD PLAYER SECTION**

Type:	Compact disc player
Signal Detection System:	Non-contact optical pickup (semiconductor laser)
Number of Channels:	2 channels (stereo)
Frequency Response:	5 Hz to 20 000 Hz
Dynamic Range:	96 dB
Signal-to-Noise Ratio:	98 dB
Wow and Flutter:	Less than measurable limit
MP3 Decoding Format: (MPEG1/2 Audio Layer 3)	Max. Bit Rate: 320 kbps
WMA (Windows Media® Audio) Decoding Format:	Max. Bit Rate: 320 kbps

**USB SECTION**

USB Standard:	USB 1.1, USB 2.0
Data Transfer Rate (Full Speed):	Max. 12 Mbps
Compatible Device:	Mass storage class
Compatible File System:	FAT 32/16/12
Playable Audio Format:	MP3/WMA
Max. Current:	DC 5 V --- 500 mA

**GENERAL**

Power Requirement:	Operating Voltage:	DC 14.4 V (11 V to 16 V allowance)
Grounding System:	Negative ground	
Allowable Operating Temperature:	0°C to +40°C (32°F to 104°F)	
Dimensions (W × H × D): (approx.)	Installation Size:	182 mm × 52 mm × 160 mm (7-3/16" × 2-1/16" × 6-5/16")
	Panel Size:	188 mm × 58 mm × 6 mm (7-7/16" × 2-5/16" × 1/4")
Mass:	1.3 kg (2.9 lbs) (excluding accessories)	

*Design and specifications are subject to change without notice.*

If a kit is necessary for your car, consult your telephone directory for the nearest car audio speciality shop.

**Having TROUBLE with operation?**

**Please reset your unit**

Refer to page of How to reset your unit

**Still having trouble??**

**USA ONLY**

**Call 1-800-252-5722**

**<http://www.jvc.com>**

**We can help you!**


**JVC**



**EN, SP, FR**

© 2008 Victor Company of Japan, Limited

1008DTSMĐTJEIN

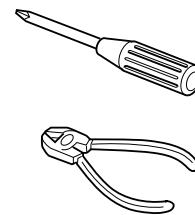

### ENGLISH

This unit is designed to operate on **12 V DC, NEGATIVE ground electrical systems**. If your vehicle does not have this system, a voltage inverter is required, which can be purchased at JVC car audio dealers.

### WARNINGS

To prevent short circuits, we recommend that you disconnect the battery's negative terminal and make all electrical connections before installing the unit.

- Be sure to ground this unit to the car's chassis again after installation.**

#### Notes:

- Replace the fuse with one of the specified rating. If the fuse blows frequently, consult your JVC car audio dealer.
- It is recommended to connect speakers with a maximum power of more than 50 W (both at the rear and at the front, with an impedance of **4 Ω to 8 Ω**). If the maximum power is less than 50 W, change "AMP GAIN" setting to prevent the speakers from being damaged (see page 16 of the INSTRUCTIONS).
- To prevent short circuits, cover the terminals of the UNUSED leads with insulating tape.
- The heat sink becomes very hot after use. Be careful not to touch it when removing this unit.

### ESPAÑOL

Esta unidad está diseñada para funcionar con **12 V de CC, con sistemas eléctricos de masa NEGATIVA**. Si su vehículo no posee este sistema, será necesario un inversor de tensión, que puede ser adquirido en los concesionarios de JVC de equipos de audio para automóviles.


### ADVERTENCIAS

Para evitar cortocircuitos, recomendamos que desconecte el terminal negativo de la batería y que efectúe todas las conexiones eléctricas antes de instalar la unidad.

- Asegúrese de volver a conectar a masa esta unidad al chasis del automóvil después de la instalación.**

#### Notas:

- Reemplace el fusible por uno con la corriente especificada. Si el fusible se quemase frecuentemente consulte con su concesionario de JVC de equipos de audio para automóviles.
- Se recomienda conectar altavoces que tengan una potencia máxima de más de 50 W (tanto en las partes delantera como trasera, con una impedancia de **4 Ω a 8 Ω**). Si la potencia máxima es de menos de 50 W, cambie "AMP GAIN" para evitar daños en los altavoces (consulte la página 16 del MANUAL DE INSTRUCCIONES).
- Para evitar cortocircuitos, cubra los terminales de los conductores NO UTILIZADOS con cinta aislante.
- El sumidero térmico estará muy caliente después del uso. Asegúrese de no tocarlo al desmontar esta unidad.

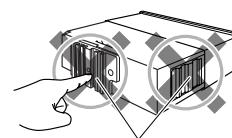

Heat sink / Sumidero térmico / Dissipateur de chaleur

### FRANÇAIS

Cet appareil est conçu pour fonctionner sur des sources de courant continu de 12 V à masse NEGATIVE. Si votre véhicule n'offre pas ce type d'alimentation, il vous faut un convertisseur de tension, que vous pouvez acheter chez un revendeur d'autoradios JVC.

### AVERTISSEMENTS

Pour éviter tout court-circuit, nous vous recommandons de débrancher la borne négative de la batterie et d'effectuer tous les raccordements électriques avant d'installer l'appareil.


- Assurez-vous de raccorder de nouveau la mise à la masse de cet appareil au châssis de la voiture après l'installation.**

#### Remarques:

- Remplacer le fusible par un de la valeur précisée. Si le fusible saute souvent, consulter votre revendeur d'autoradios JVC.
- Il est recommandé de connecter des enceintes avec une puissance maximum de plus de 50 W (à l'arrière et à l'avant et avec une impédance de **4 Ω à 8 Ω**). Si la puissance maximum est inférieure à 50 W, changez "AMP GAIN" pour éviter d'endommager vos enceintes (voir page 16 du MANUEL D'INSTRUCTIONS).
- Pour éviter les courts-circuits, recouvrez les extrémités des fils INUTILISÉS avec une bande isolante.
- Le dissipateur de chaleur devient très chaud après usage. Faire attention de ne pas le toucher en retirant cet appareil.

### Parts list for installation and connection


The following parts are provided for this unit. If any item is missing, consult your JVC car audio dealer immediately.

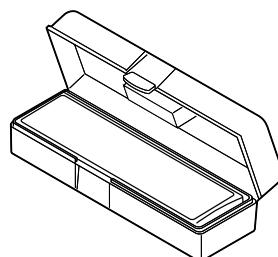


**A / B**  
Hard case/Control panel  
Estuche duro/Panel de control  
Etui de transport/Panneau de commande

### Lista de piezas para instalación y conexión


Con esta unidad se suministran las siguientes piezas. Si hay algún elemento faltante, consulte inmediatamente con su concesionario de JVC de equipos de audio para automóviles.

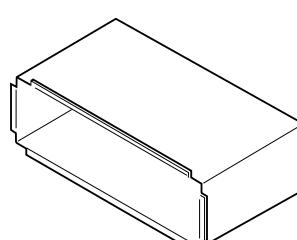

**C**  
Sleeve  
Cubierta  
Manchon

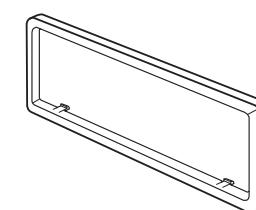

**D**  
Trim plate  
Placa de garnición  
Plaque d'assemblage

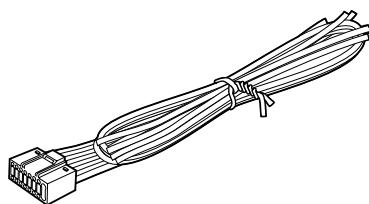

**E**  
Power cord  
Cordón de alimentación  
Cordon d'alimentation




**F**  
Washer (ø5)  
Arandela (ø5)  
Rondelle (ø5)




**G**  
Lock nut (M5)  
Tuerca de seguridad (M5)  
Ecrou d'arrêt (M5)



**H**  
Mounting bolt—M4 × 5 mm (M4 × 1/4");  
M5 × 12.5 mm (M5 × 1/2")  
Perno de montaje—M4 × 5 mm (M4 × 1/4 pulgada);  
M5 × 12.5 mm (M5 × 1/2 pulgada)  
Boulon de montage—M4 × 5 mm (M4 × 1/4 pouces);  
M5 × 12.5 mm (M5 × 1/2 pouces)

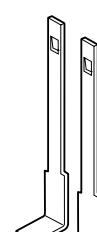

**I**  
Handles  
Manijas  
Poignées

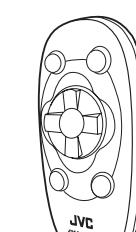

**K**  
Remote controller  
Control remoto  
Télécommande



**L**  
Battery  
Pila  
Pile



**J**  
Rubber cushion  
Cojín de goma  
Amortisseur en caoutchouc



**M**  
CR2025

## INSTALLATION (IN-DASH MOUNTING)


The following illustration shows a typical installation. If you have any questions or require information regarding installation kits, consult your JVC car audio dealer or a company supplying kits.

- If you are not sure how to install this unit correctly, have it installed by a qualified technician.

## INSTALACION (MONTAJE EN EL TABLERO DE INSTRUMENTOS)

La siguiente ilustración muestra una instalación típica. Si tiene alguna pregunta o necesita información acerca de las herramientas para instalación, consulte con su concesionario de JVC de equipos de audio para automóviles o a una compañía que suministra tales herramientas.

- Si usted no está seguro de cómo instalar correctamente la unidad, hágala instalar por un técnico cualificado.

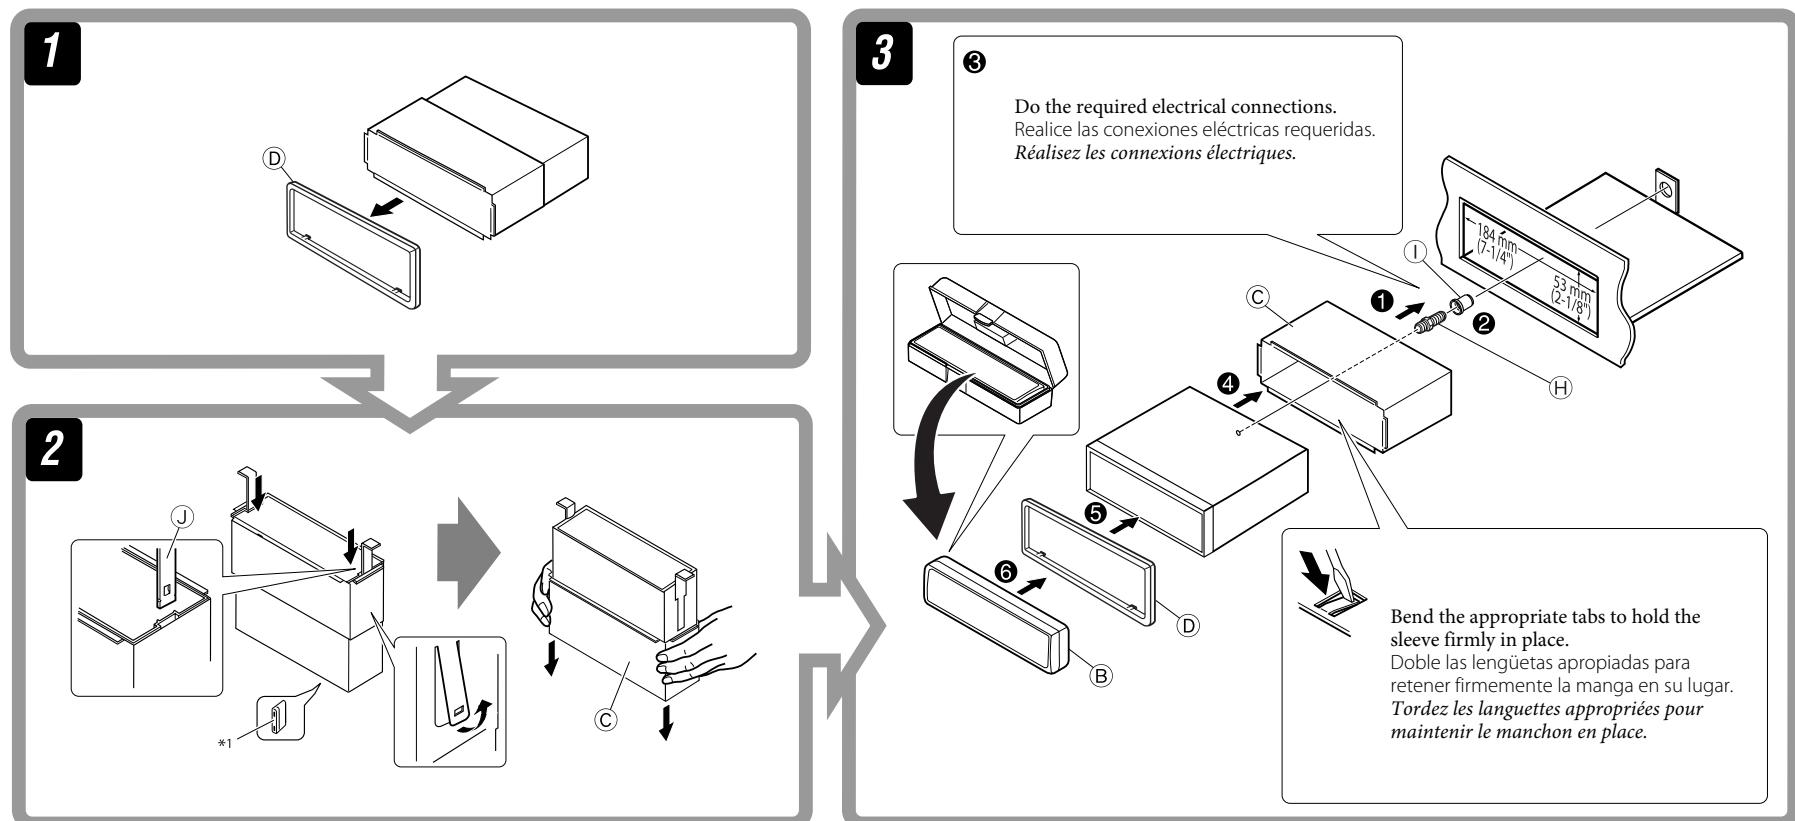

### Removing the unit


Before removing the unit, release the rear section.

### Extracción de la unidad


Antes de extraer la unidad, libere la sección trasera.

### Retrait de l'appareil

Avant de retirer l'appareil, libérez la section arrière.

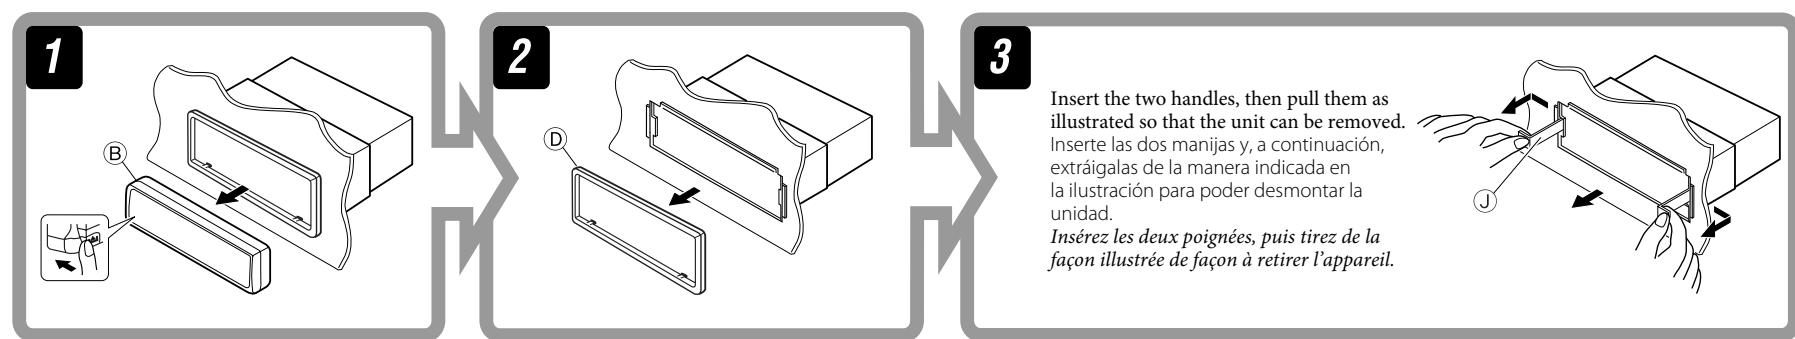

### When using the optional stay / Cuando emplea un soporte opcional / Lors de l'utilisation du hauban en option

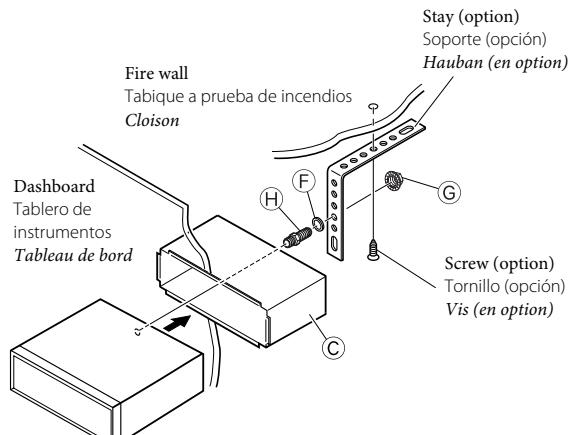

Install the unit at an angle of less than 30°.  
Instale la unidad a un ángulo de menos de 30°.  
Installez l'appareil avec un angle de moins de 30°.


### When installing the unit without using the sleeve / Instalación de la unidad sin utilizar la cubierta / Lors de l'installation de l'appareil sans utiliser de manchon

In a Toyota car for example, first remove the car radio and install the unit in its place.

En un automóvil Toyota, por ejemplo, en primer lugar desmonte el autoradio e instale la unidad en su lugar.

Dans une voiture Toyota, par exemple, retirez d'abord l'autoradio et installez l'appareil à sa place.

Flat head screws—M5 × 8 mm (M5 × 3/8")\*2  
Tornillos de cabeza plana—M5 × 8 mm (M5 × 3/8 pulgada)\*2  
Vis à tête plate—M5 × 8 mm (M5 × 3/8 pouces)\*2

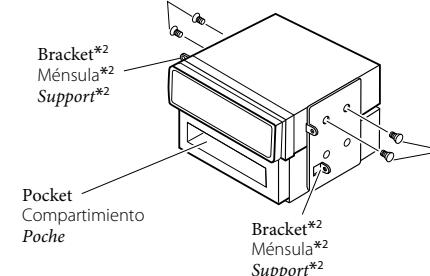

Flat head screws—M5 × 8 mm (M5 × 3/8")\*2  
Tornillos de cabeza plana—M5 × 8 mm (M5 × 3/8 pulgada)\*2  
Vis à tête plate—M5 × 8 mm (M5 × 3/8 pouces)\*2

**Note** : When installing the unit on the mounting bracket, make sure to use the 8 mm (3/8") -long screws. If longer screws are used, they could damage the unit.

**Nota** : Cuando instala la unidad en la ménsula de montaje, asegúrese de utilizar los tornillos de 8 mm (3/8 pulgada) de longitud. Si se utilizan tornillos más largos, éstos pueden dañar la unidad.

**Remarque** : Lors de l'installation de l'appareil sur le support de montage, s'assurer d'utiliser des vis d'une longueur de 8 mm (3/8 pouces). Si des vis plus longues sont utilisées, elles peuvent endommager l'appareil.

\*1 When you stand the unit, be careful not to damage the fuse on the rear.

\*2 Not supplied for this unit.

\*1 Al poner la unidad vertical, tenga cuidado de no dañar el fusible provisto en la parte posterior.

\*2 No suministrado con esta unidad.


## INSTALLATION (MONTAGE DANS LE TABLEAU DE BORD)

L'illustration suivante est un exemple d'installation typique. Si vous avez des questions ou avez besoin d'information sur des kits d'installation, consulter votre revendeur d'autoradios JVC ou une compagnie d'approvisionnement.


- Si l'on n'est pas sûr de pouvoir installer correctement cet appareil, le faire installer par un technicien qualifié.

**ELECTRICAL CONNECTIONS****PRECAUTIONS on power supply and speaker connections:**


- DO NOT connect the speaker leads of the power cord to the car battery; otherwise, the unit will be seriously damaged.**
- BEFORE connecting the speaker leads of the power cord to the speakers, check the speaker wiring in your car.

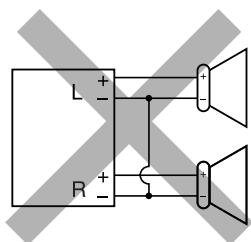**PRECAUCIONES sobre las conexiones de la fuente de alimentación y de los altavoces:**

- NO conecte los conductores de altavoz del cable de alimentación a la batería de automóvil, pues podrían producirse graves daños en la unidad.**
- ANTES de conectar a los altavoces los conductores de altavoz del cable de alimentación, verifique el conexionado de altavoz de su automóvil.

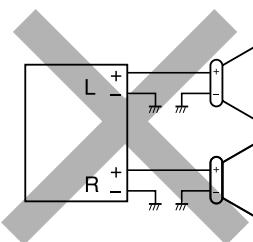**PRECAUTIONS sur l'alimentation et la connexion des enceintes:**

- NE CONNECTEZ PAS les fils d'enceintes du cordon d'alimentation à la batterie; sinon, l'appareil serait sérieusement endommagé.**
- AVANT de connecter les fils d'enceintes du cordon d'alimentation aux enceintes, vérifiez le câblage des enceintes de votre voiture.

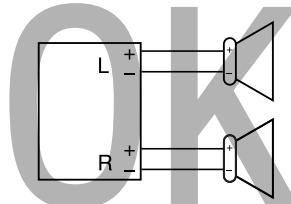**A Typical connections / Conexiones tipicas / Raccordements typiques**

**Before connecting:** Check the wiring in the vehicle carefully. Incorrect connection may cause serious damage to this unit. The leads of the power cord and those of the connector from the car body may be different in color.


- 1 Connect the colored leads of the power cord in the order specified in the illustration below.
- 2 Connect the antenna cord.
- 3 Finally connect the wiring harness to the unit.

**Antes de la conexión:** Verifique atentamente el conexionado del vehículo. Una conexión incorrecta podría producir daños graves en la unidad. Los cordones del cable de alimentación y los del conector procedentes de la carrocería del automóvil podrían ser de diferentes en color.

- 1 Conecte los conductores de color del cable de alimentación en el orden especificado en la ilustración de abajo.
- 2 Conecte el cable de antena.
- 3 Por último, conecte el cable de alimentación a la unidad.

**Avant de commencer la connexion:** Vérifiez attentivement le câblage du véhicule. Une connexion incorrecte peut endommager sérieusement l'appareil. Le fil du cordon d'alimentation et ceux des connecteurs du châssis de la voiture peuvent être différents en couleur.

- 1 Connectez les fils colorés du cordon d'alimentation dans l'ordre spécifié sur l'illustration ci-dessous.
- 2 Connectez le cordon d'antenne.
- 3 Finalement, connectez le faisceau de fils à l'appareil.

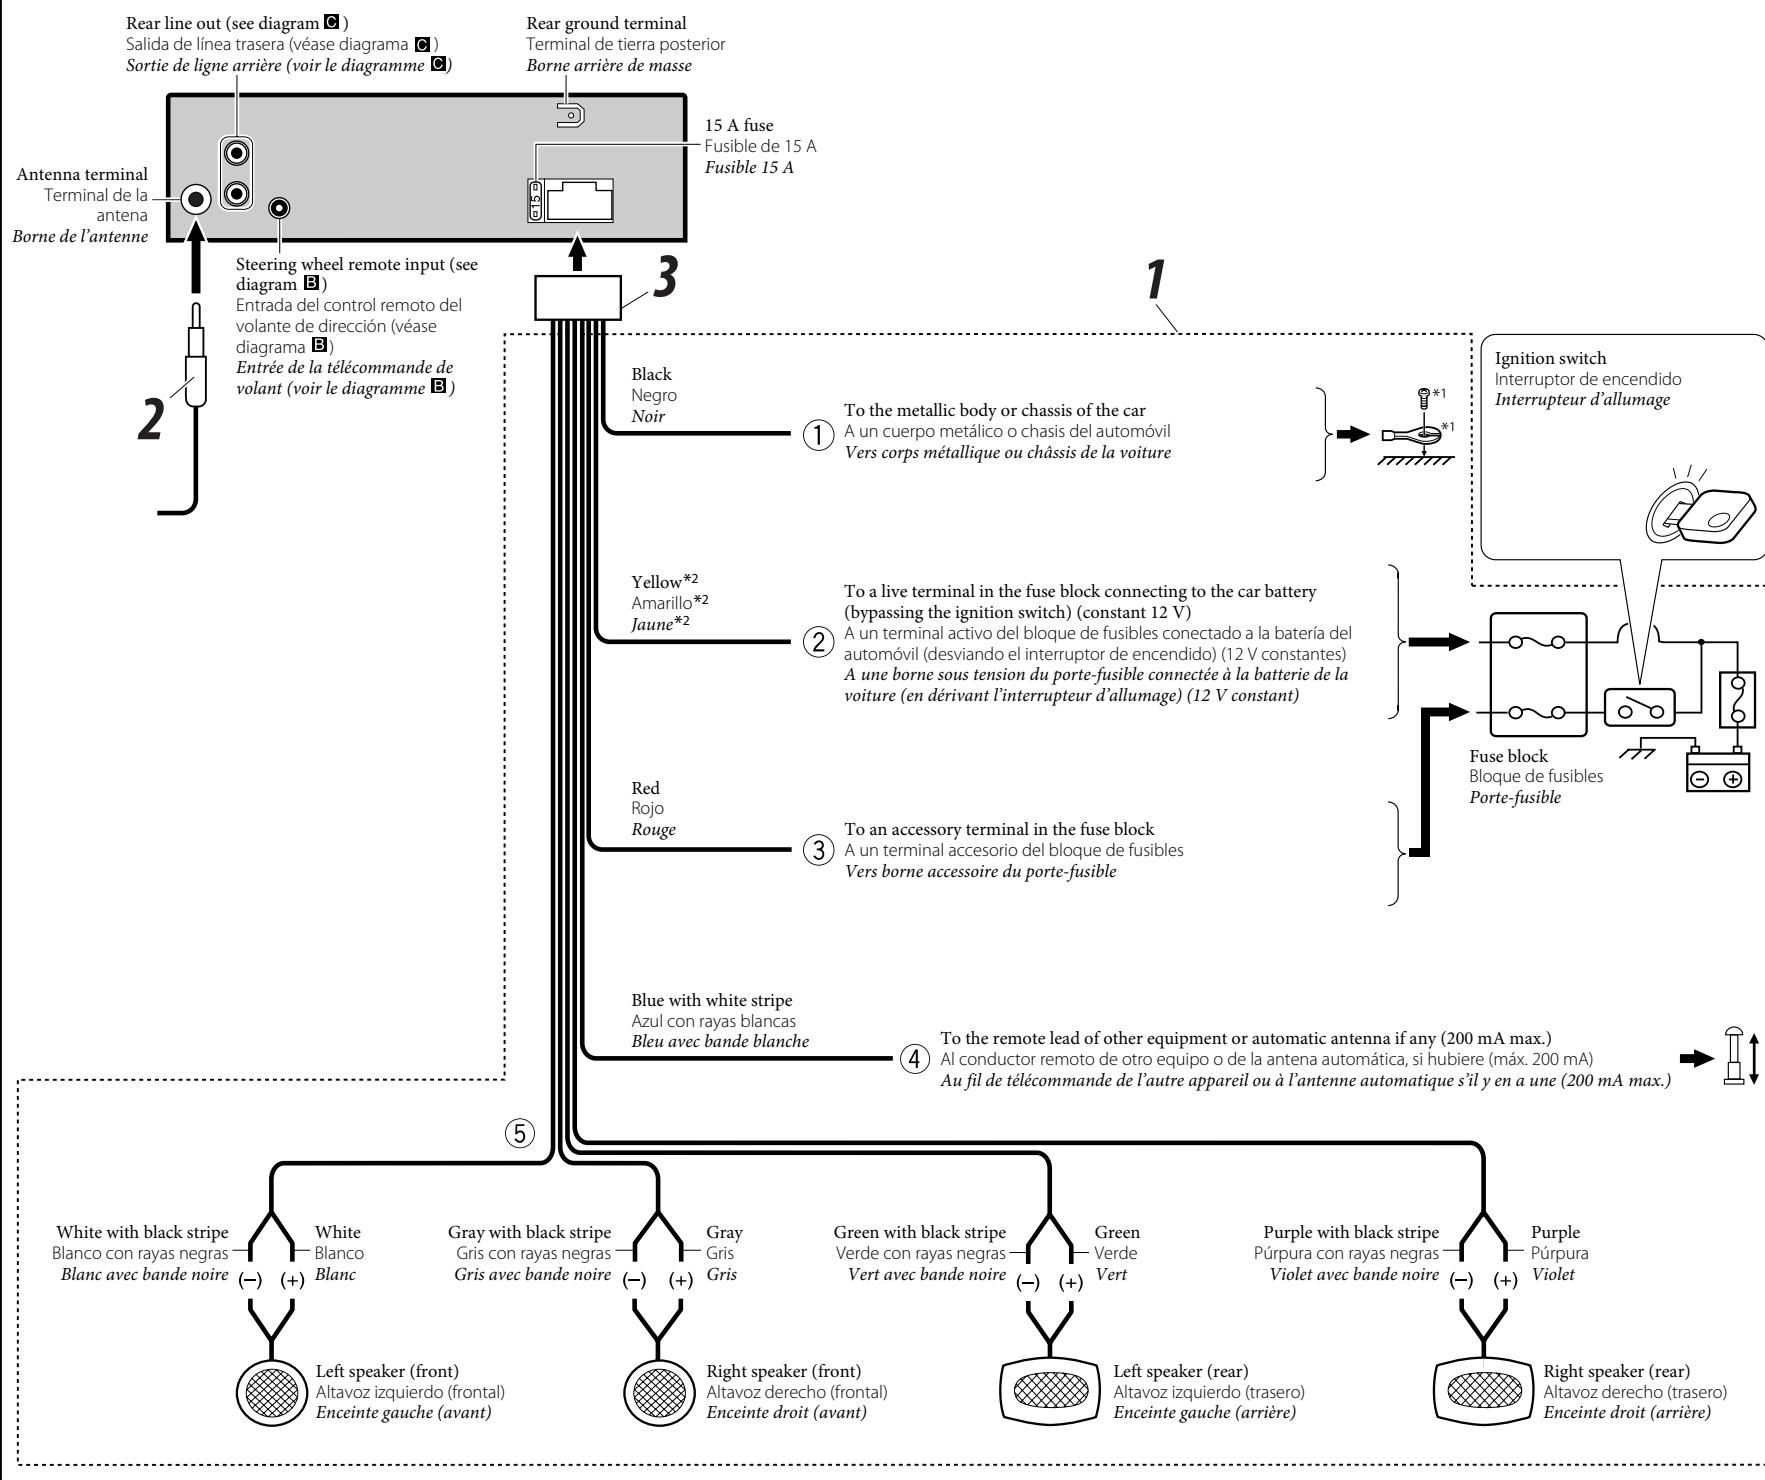

\*1 Not supplied for this unit.

\*2 Before checking the operation of this unit prior to installation, this lead must be connected; otherwise, the power cannot be turned on.

\*1 No suministrado con esta unidad.

\*2 Antes de comprobar el funcionamiento de esta unidad previa a de la instalación, es necesario conectar este cable, de lo contrario no se podrá conectar la alimentación.

\*1 Non fourni avec cet appareil.


\*2 Pour vérifier le fonctionnement de cet appareil avant installation, ce fil doit être raccordé, sinon l'appareil ne peut pas être mis sous tension.

## B Connecting to the steering wheel remote controller / Conexión al control remoto del volante de dirección / Connexion de la télécommande de volant

If your car is equipped with the steering wheel remote controller, you can operate this unit using the controller. For connection, an exclusive remote adapter (not supplied) which matches your car is required. For details, consult the same car audio dealer as where the unit is purchased.

Si su automóvil está equipado con control remoto en el volante de dirección, podrá controlar este receptor utilizando el control remoto. Para la conexión, se requiere un adaptador remoto exclusivo (no suministrado) que sea adecuado para su automóvil. Para los detalles, consulte con el concesionario car audio donde compró el receptor.

Si votre voiture est équipée d'une télécommande de volant, vous pouvez commander cet autoradio en utilisant cette télécommande. Pour la connexion, vous avez besoin d'un adaptateur de télécommande spécialisé (non fourni) correspondant à votre voiture. Pour en savoir plus, consultez le revendeur autoradio où vous avez acheté votre autoradio.

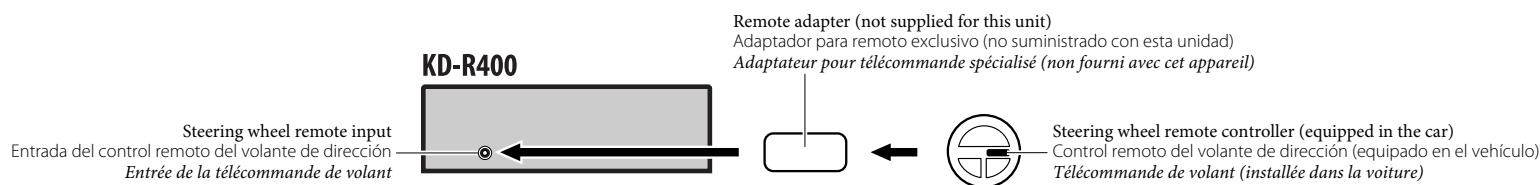

## C Connecting the external amplifier or subwoofer / Conexión de los amplificadores o subwoofer externos / Connexion d'amplificateurs extérieurs ou d'un caisson de grave

You can connect an amplifier to upgrade your car stereo system.

- Connect the remote lead (blue with white stripe) to the remote lead of the other equipment so that it can be controlled through this unit.
- **Disconnect the speakers from this unit, connect them to the amplifier. Leave the speaker leads of this unit unused.**


Usted podrá conectar un amplificador para mejorar el sistema estéreo de su automóvil.

- Conecte el conductor remoto (azul con rayas blancas) al conductor remoto del otro equipo para poderlo controlar a través de esta unidad.
- **Desconecte los altavoces de esta unidad y conéctelos al amplificador. Los cables de los altavoces de esta unidad quedan sin usar.**


Vous pouvez connecter un amplificateur pour améliorer votre système autoradio.

- Connectez le fil de commande à distance (bleu avec bande blanche) au fil de commande à distance de l'autre appareil de façon qu'il puisse être commandé via cet appareil.
- **Déconnectez les enceintes de cet appareil et connectez-les à l'amplificateur. Laissez les fils d'enceintes de cet appareil inutilisés.**

Set "L/O MODE" to "REAR" (See page 16 of the INSTRUCTIONS.)  
Ajuste "L/O MODE" a "REAR" (Consulte la página 16 del MANUAL DE INSTRUCCIONES.)  
Réglez "L/O MODE" sur "REAR" (Voir page 16 du MANUEL D'INSTRUCTIONS.)

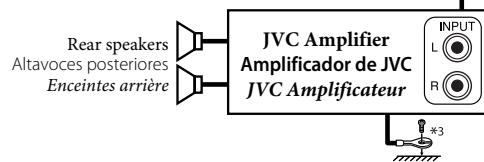

Set "L/O MODE" to "SUB.W" (See page 16 of the INSTRUCTIONS.)  
Ajuste "L/O MODE" a "SUB.W" (Consulte la página 16 del MANUAL DE INSTRUCCIONES.)  
Réglez "L/O MODE" sur "SUB.W" (Voir page 16 du MANUEL D'INSTRUCTIONS.)

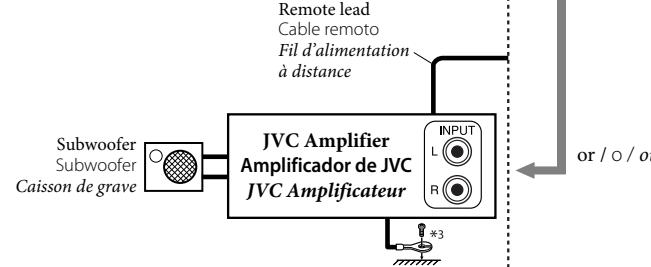

Signal cord (not supplied for this unit)  
Cable de señal (no suministrado con esta unidad)  
Cordon de signal (non fourni avec cet appareil)

To the remote lead of other equipment or automatic antenna if any  
Al conductor remoto de otro equipo o de la antena automática, si hubiere  
Au fil de télécommande de l'autre appareil ou à l'antenne automatique s'il y en a une

Remote lead (blue with white stripe)  
Cable remoto (azul con rayas blancas)  
Fil d'alimentation à distance (bleu avec bande blanche)

Y-connector (not supplied for this unit)  
Conector en Y (no suministrado con esta unidad)  
Connecteur Y (non fourni avec cet appareil)

Front speakers  
Altavoces delanteros  
Enceintes avant

\*3 Firmly attach the ground wire to the metallic body or to the chassis of the car—to the place uncoated with paint (if coated with paint, remove the paint before attaching the wire). Failure to do so may cause damage to the unit.

\*3 Fije firmemente el cable de tierra a la carrocería metálica o al chasis—a un lugar no cubierto con pintura (si está cubierto con pintura, quitela antes de fijar el cable). De lo contrario, se podrían producir daños en la unidad.

\*3 Attachez solidement le fil de mise à la masse au châssis métallique de la voiture—à un endroit qui n'est pas recouvert de peinture (s'il est recouvert de peinture, enlevez d'abord la peinture avant d'attacher le fil). L'appareil peut être endommagé si cela n'est pas fait correctement.

## TROUBLESHOOTING

## LOCALIZACION DE AVERIAS

- **The fuse blows.**  
\* Are the red and black leads connected correctly?
- **Power cannot be turned on.**  
\* Is the yellow lead connected?
- **No sound from the speakers.**  
\* Is the speaker output lead short-circuited?
- **Sound is distorted.**  
\* Is the speaker output lead grounded?  
\* Are the “-” terminals of L and R speakers grounded in common?
- **Noise interferes with sounds.**  
\* Is the rear ground terminal connected to the car's chassis using shorter and thicker cords?
- **This unit becomes hot.**  
\* Is the speaker output lead grounded?  
\* Are the “-” terminals of L and R speakers grounded in common?
- **This unit does not work at all.**  
\* Have you reset your unit?
- **El fusible se quema.**  
\* ¿Están los conductores rojo y negro correctamente conectados?
- **No es posible conectar la alimentación.**  
\* ¿Está el cable amarillo conectado?
- **No sale sonido de los altavoces.**  
\* ¿Está el cable de salida del altavoz cortocircuitado?
- **El sonido presenta distorsión.**  
\* ¿Está el cable de salida del altavoz conectado a masa?  
\* ¿Están los terminales “-” de los altavoces L y R conectados a una masa común?
- **Perturbación de ruido.**  
\* ¿El terminal de tierra trasero está conectado al chasis del automóvil utilizando los cordones más corto y más grueso?
- **Esta unidad se calienta.**  
\* ¿Está el cable de salida del altavoz conectado a masa?  
\* ¿Están los terminales “-” de los altavoces L y R conectados a una masa común?
- **Esta unidad no funciona en absoluto.**  
\* ¿Reinicializó la unidad?

## EN CAS DE DIFFICULTES

- **Le fusible saute.**  
\* Les fils rouge et noir sont-ils raccordés correctement?
- **L'appareil ne peut pas être misé sous tension.**  
\* Le fil jaune est-elle raccordée?
- **Pas de son des enceintes.**  
\* Le fil de sortie d'enceinte est-il court-circuité?
- **Le son est déformé.**  
\* Le fil de sortie d'enceinte est-il à la masse?  
\* Les bornes “-” des enceintes gauche et droit sont-elles mises ensemble à la masse?
- **Interférence avec les sons.**  
\* La prise arrière de mise à la terre est-elle connectée au châssis de la voiture avec un cordon court et épais?
- **Cet appareil devient chaud.**  
\* Le fil de sortie d'enceinte est-il à la masse?  
\* Les bornes “-” des enceintes gauche et droit sont-elles mises ensemble à la masse?
- **Cet appareil ne fonctionne pas du tout.**  
\* Avez-vous réinitialisé votre appareil?



## CD RECEIVER

## CD-RECEIVER

РЕСИВЕР С ПРОИГРЫВАТЕЛЕМ КОМПАКТ-ДИСКОВ

ДЕКΤΗΣ ΜΕ CD

# KD-R501/KD-R402/KD-R401

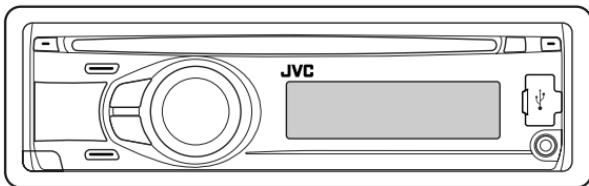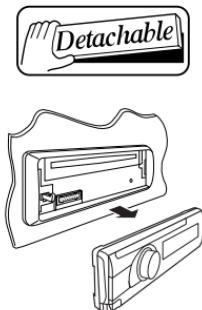

*Radio Data System*



MP3  
WMA

For canceling the display demonstration, see page 6.

Zum Abbrechen der Displaydemonstration siehe Seite 6.

Информацию об отмене демонстрации функций дисплея см. на стр. 6.

Για να ακυρώσετε την επίδειξη λειτουργίας στην οθόνη, βλ. σελίδα 6.

For installation and connections, refer to the separate manual.

Für den Einbau und die Anschlüsse siehe das eigenständige Handbuch.

Указания по установке и выполнению соединений приводятся в отдельной инструкции.

Για πληροφορίες σχετικά με την εγκατάσταση και τις συνδέσεις, ανατρέξτε στο αντίστοιχο ξεχωριστό εγχειρίδιο.

## INSTRUCTIONS

BEDIENUNGSANLEITUNG  
ИНСТРУКЦИИ ПО ЭКСПЛУАТАЦИИ  
ΟΔΗΓΙΕΣ

GET0574-006A  
[EY]

• • •

Thank you for purchasing a JVC product.

Please read all instructions carefully before operation, to ensure your complete understanding and to obtain the best possible performance from the unit.

## **IMPORTANT FOR LASER PRODUCTS**

1. CLASS 1 LASER PRODUCT
2. CAUTION: Do not open the top cover. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel.
3. CAUTION: Visible and/or invisible class 1M laser radiation when open. Do not view directly with optical instruments.
4. REPRODUCTION OF LABEL: CAUTION LABEL, PLACED OUTSIDE THE UNIT.

<b>CAUTION</b> VISIBLE AND / OR INVISIBLE CLASS 1M LASER RADIATION WHEN OPEN. DO NOT VIEW DIRECTLY WITH OPTICAL INSTRUMENTS IEC60825-1:2001 (ENG)	<b>ATTENTION</b> RAYONNEMENT LASER VISIBLE ET / OU INVISIBLE CLASSE 1M LORSQUE L'APPAREIL EST OUVERT. NE PAS REGARDER DIRECTEMENT AVEC DES INSTRUMENTS OPTIQUES. (FRA)	<b>AVISO</b> RADICACIÓN LÁSER VISIBLE DE CLASE 1M CUANDO ESTA ABIERTO. NO MIRAR DIRECTAMENTE CON INSTRUMENTOS ÓPTICOS. (ESP)	<b>VARNING</b> SYNLIG OCH / ELLER SYNLIG OCH INVISIBLE KLASS 1M, NÅR DENNA DEL ÄR ÖPPNAD. BETRÄKTA EJ STRÄLEN MED OPTISKA INSTRUMENT. (SWE)	<b>注意</b> ここを聞くと可視 及び不可視は不可視 レーザー輻射が 出ます。 光学機器で直接 見ないでください。 (JPN)	<b>CAUTION</b> VISIBLE AND / OR INVISIBLE CLASS II LASER RADIATION WHEN OPEN. DO NOT STARE INTO BEAM. FDA 21 CFR (ENG)
---	---	--	---	--	--



**Products**

**Battery**

### **Information for Users on Disposal of Old Equipment and Batteries**

**[European Union only]**

These symbols indicate that the product and the battery with this symbol should not be disposed as general household waste at its end-of-life.

If you wish to dispose of this product and the battery, please do so in accordance with applicable national legislation or other rules in your country and municipality.

By disposing of this product correctly, you will help to conserve natural resources and will help prevent potential negative effects on the environment and human health.

### **Notice:**

The sign Pb below the symbol for batteries indicates that this battery contains lead.

### **Warning:**

If you need to operate the unit while driving, be sure to look around carefully or you may be involved in a traffic accident.

### **Caution on volume setting:**

Digital devices (CD/USB) produce very little noise compared with other sources. Lower the volume before playing these digital sources to avoid damaging the speakers by sudden increase of the output level.


### **For safety...**

- Do not raise the volume level too much, as this will block outside sounds, making driving dangerous.
- Stop the car before performing any complicated operations.


### **Temperature inside the car...**

If you have parked the car for a long time in hot or cold weather, wait until the temperature in the car becomes normal before operating the unit.


## ■ Detaching the control panel

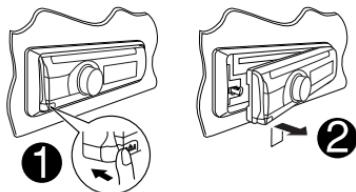

## ■ Attaching the control panel

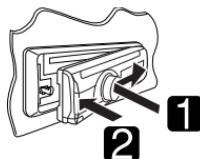

## ■ How to reset your unit

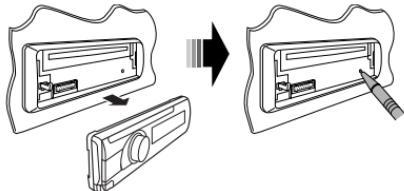

- Your preset adjustments will also be erased.

## ■ How to forcibly eject a disc



- You can forcibly eject the loaded disc even if the disc is locked. To lock/unlock the disc, see page 10.
- Be careful not to drop the disc when it ejects.
- If this does not work, reset your unit.

# CONTENTS

Detaching the control panel.....	3
Attaching the control panel .....	3
How to reset your unit .....	3
How to forcibly eject a disc.....	3

## OPERATIONS

Basic operations.....	4
Preparation .....	6
Listening to the radio.....	7
Disc operations.....	10
Listening to the USB device.....	11

## EXTERNAL DEVICES

Listening to the other external components.....	12
Using the remote controller—RM-RK50 .....	13

## SETTINGS

Selecting a preset sound mode .....	14
Menu operations .....	16
Color settings (for KD-R501) .....	19

## REFERENCES


More about this unit .....	20
Troubleshooting.....	23
Maintenance.....	25
Specifications .....	26

This mark is used to indicate...




Turn the control dial to make a selection, then press to confirm the selection.

# Basic operations

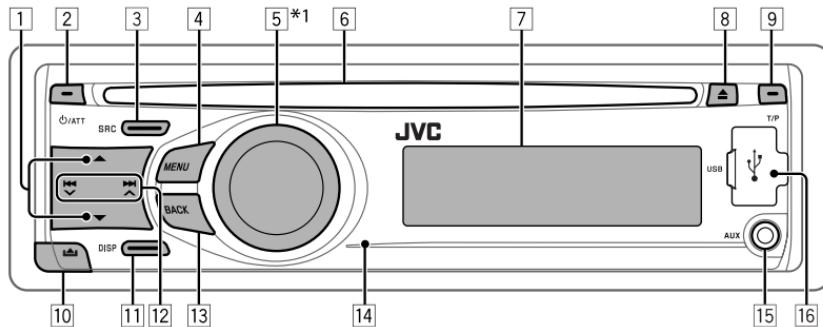

- [1]** • **FM/AM:** Select preset station.  
• **CD/USB:** Select folder.
  - [2]** • Turn on the power.  
• Attenuate the sound (if the power is on).  
• Turn off the power [Hold].
  - [3]** Select the source.  
**FM → CD\***<sup>2</sup> → **USB → AUX IN**<sup>\*3</sup> → **AM**<sup>\*3</sup> →  
(back to the beginning)
  - [4]** • Enter list operations.  
• Enter Menu setting [Hold].
  - [5]** • Control the volume<sup>\*4</sup> or select items [Turn].  
• Confirm the selection [Press].  
• **FM:** Enter SSM preset mode [Hold].  
• **CD/USB:** Enter playback mode [Hold].  
    Pause/resume playback<sup>\*4</sup> [Press].
  - [6]** Loading slot
  - [7]** Display window
  - [8]** Eject disc.
  - [9]** • Activate/deactivate TA Standby Reception.  
• Enter PTY Searching mode [Hold].
  - [10]** Detach the panel.
  - [11]** Change the display information.
  - [12]** • **FM/AM:** Search for station.  
• **CD/USB:** Select track.
  - [13]** Return to the previous menu.
  - [14]** Remote sensor  
• You can control this unit with an optionally purchased remote controller. For details, see page 13.
  - [15]** AUX (auxiliary) input jack
  - [16]** USB (Universal Serial Bus) input jack
- \*<sup>1</sup> Also known as "Control dial" in this manual.  
\*<sup>2</sup> You cannot select "CD" as the playback source if no disc is in the unit.  
\*<sup>3</sup> You cannot select these sources if they were disabled in the Menu (see "SRC SELECT" in "Menu operations" on page 19).  
\*<sup>4</sup> You can still adjust the volume during pause when the selected source is CD/USB.  
Before resume playback, check to be sure that you have not raise the volume level too much.

KD-R501: You can change the display and button illumination (see "COLOR" on page 17).

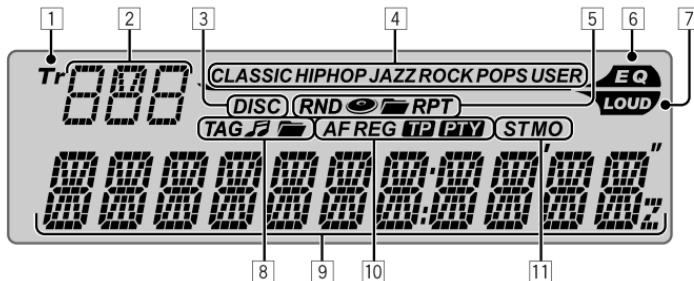**Display window**

# Preparation

## Canceling the display demonstration and setting the clock

- See also page 16.

1		<b>Turn on the power.</b>
2	<p>[Hold] Press and hold until the main menu is called up.  [Turn] → [Press] • Repeat this procedure.</p>	<b>Cancel the display demonstrations</b> Select "DEMO," then "DEMO OFF." <b>Set the clock</b> Select "CLOCK" → "CLOCK SET." Adjust the hour, then press control dial once to proceed to adjust the minute. Select "24H/12H," then "24 HOUR" or "12 HOUR." • To return to the previous menu, press BACK.

## Changing the display information



When the power is turned off: The current clock time is displayed if "CLOCK DISP" is set to "CLOCK OFF," (see page 16).

When the power is turned on: The display information of the current source changes as follows:

<b>FM/AM</b>	Station Frequency → Clock → (back to the beginning)
<b>FM Radio Data System</b>	Station name (PS) → Station Frequency → Programme type (PTY) → Clock → (back to the beginning)
<b>CD</b>	Audio CD/CD Text: Disc title/performer*1 → Track title*1 → Current track number with the elapsed playing time → Current track number with the clock time → (back to the beginning)
<b>CD/USB</b>	MP3/WMA: Album name/performer (folder name)*2 → Track title (file name)*2 → Current track number with the elapsed playing time → Current track number with the clock time → (back to the beginning)

\*1 If the current disc is an audio CD, "NO NAME" appears.

\*2 If an MP3/WMA file does not have Tag information or "TAG DISPLAY" is set to "TAG OFF" (see page 16), folder name and file name appear.


# Listening to the radio

1		<b>Select “FM” or “AM.”</b>
2		<b>Search for a station to listen—Auto Search.</b> When a station is tuned in, searching stops. To stop searching, press the same button again. <ul style="list-style-type: none"> <li>• You can also search for a station manually—Manual Search. Hold either one of the buttons until “M” flashes on the display, then press it repeatedly.</li> <li>• When receiving an FM stereo broadcast with sufficient signal strength, the ST indicator lights up on the display.</li> </ul>

## Improving the FM reception

When an FM stereo broadcast is hard to receive, activate monaural mode for better reception.

- See also page 17.

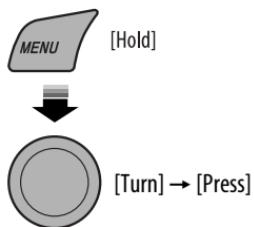

Reception improves, but stereo effect will be lost.

- The MO indicator lights up on the display.

**To restore the stereo effect,** repeat the same procedure to select “MONO OFF.” The MO indicator goes off.

## Storing stations in memory

### Automatic presetting (FM)—SSM (Strong-station Sequential Memory)

You can preset up to 18 stations for FM.

#### 1 While listening to a station...



#### 2 Select the preset number range you want to store.



SSM 01–06 ←→ SSM 07–12 ←→ SSM 13–18

#### 3



Local FM stations with the strongest signals are searched and stored automatically.

- **To stop searching,** press  $\blacktriangleleft\blacktriangleright\blacktriangledown\blacktriangleright\blacktriangleleft$ .

**To preset other 6 stations,** repeat from step 1 again.

*Continued on the next page*

## Manual presetting (FM/AM)

You can preset up to 18 stations for FM and 6 stations for AM.

Ex.: Storing FM station of 92.50 MHz into preset number "04."


**1**




**2 Select preset number "04."**




**3**

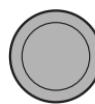

## **Selecting preset station**

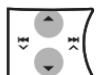

or

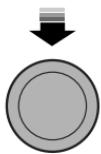

[Turn] → [Press]

The following features are available only for FM Radio Data System stations.

## **■ Searching for FM Radio Data System programme—PTY Search**

You can tune in to a station broadcasting your favorite programme by searching for a PTY code.

**1**




The last selected PTY code appears.

**2 Select one of your favorite programme types or a PTY code.**



[Turn]

**3 Start searching for your favorite programme.**

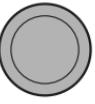

[Press]

If a station is broadcasting a programme of the same PTY code as you have selected, that station is tuned in.

## **■ Using the standby receptions**

### **TA Standby Reception**

TA Standby Reception allows the unit to switch temporarily to Traffic Announcement (TA) from any source other than AM.

The volume changes to the preset TA volume level if the current level is lower than the preset level (see page 17).

## To activate TA Standby Reception



The TP (Traffic Programme) indicator either lights up or flashes.

- If the TP indicator lights up,** TA Standby Reception is activated.
- If the TP indicator flashes,** TA Standby Reception is not yet activated. (This occurs when you are listening to an FM station without the Radio Data System signals required for TA Standby Reception.)

To activate the reception, tune in to another station providing these signals. The TP indicator will stop flashing and remain lit.

## To deactivate the TA Standby Reception



The TP indicator goes off.

## PTY Standby Reception

PTY Standby Reception allows the unit to switch temporarily to your favorite PTY programme from any source other than AM.

## To activate and select your favorite PTY code for PTY Standby Reception, see page 17.

The PTY indicator either lights up or flashes.

- If the PTY indicator lights up,** PTY Standby Reception is activated.
- If the PTY indicator flashes,** PTY Standby Reception is not yet activated.

To activate the reception, tune in to another station providing these signals. The PTY indicator will stop flashing and remain lit.

## To deactivate the PTY Standby Reception, select "PTY OFF" for the PTY code (see page 17). The PTY indicator goes off.


## ■ Tracing the same programme—Network-Tracking Reception

When driving in an area where FM reception is not sufficient enough, this unit automatically tunes in to another FM Radio Data System station of the same network, possibly broadcasting the same programme with stronger signals (see the illustration below).

When shipped from the factory, Network-Tracking Reception is activated.

## To change the Network-Tracking Reception setting, see "AF-REG" on page 17.

Programme A broadcasting on different frequency areas (01 – 05)

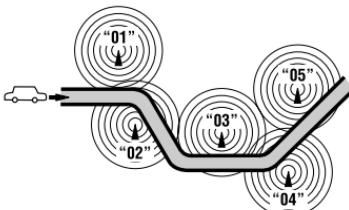

## ■ Automatic station selection—Programme Search

Usually when you select a preset number, the station preset in that number is tuned in.


If the signals from the FM Radio Data System preset station are not sufficient for good reception, this unit, using the AF data, tunes in to another frequency possibly broadcasting the same programme as the original preset station is broadcasting.

- The unit takes some time to tune in to another station using programme search.
- See also page 17.

### PTY codes

NEWS, AFFAIRS, INFO, SPORT, EDUCATE, DRAMA, CULTURE, SCIENCE, VARIED, POP M (music), ROCK M (music), EASY M (music), LIGHT M (music), CLASSICS, OTHER M (music), WEATHER, FINANCE, CHILDREN, SOCIAL, RELIGION, PHONE IN, TRAVEL, LEISURE, JAZZ, COUNTRY, NATION M (music), OLDIES, FOLK M (music), DOCUMENT

# Disc operations
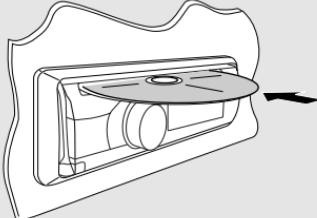
<p><b>1</b></p>  <p><b>2</b></p> 	<p><b>Turn on the power.</b></p>
	<p><b>Insert a disc.</b> All tracks will be played repeatedly until you change the source or eject the disc.</p>

## Stop playing and ejecting the disc




- “NO DISC” appears. Press SRC to listen to another playback source.

## Prohibiting disc ejection



**To cancel the prohibition,** repeat the same procedure.

## Selecting a track/folder

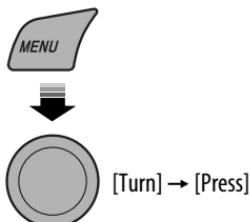

- For MP3/WMA discs, select the desired folder, then the desired track by repeating the control dial procedures.
- To return to the previous menu, press BACK.

Pressing (or holding) the following buttons allows you to...



[Press]Pause/resume playback.




MP3/WMA: Select folder



[Press]Select track  
[Hold] Reverse/fast-forward track

## Selecting the playback modes

You can use only one of the following playback modes at a time.

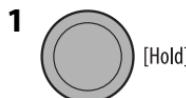

**REPEAT ↔ RANDOM**



### REPEAT

**TRACK RPT** : Repeats current track

**FOLDER RPT** : MP3/WMA: Repeats current folder

### RANDOM

**FOLDER RND** : MP3/WMA: Randomly plays all tracks of current folder, then tracks of next folders



**ALL RND** : Randomly plays all tracks

- To cancel repeat play or random play, select “**RPT OFF**” or “**RND OFF**.”
- To return to the previous menu, press **BACK**.

## Listening to the USB device

This unit can play MP3/WMA tracks stored in a USB device.

All tracks will be played repeatedly until you change the source or detach the USB device.

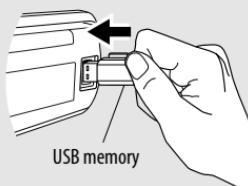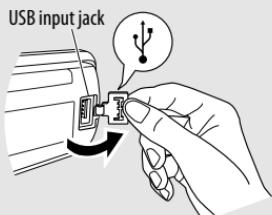

### If a USB device has been attached...



Playback starts from where it has been stopped previously.

- If a different USB device is currently attached, playback starts from the beginning.

### To stop play and detach the USB device

Straightly pull it out from the unit.

- Press **SRC** to listen to another playback source.

You can operate the USB device in the same way you operate the files on a disc. (See pages 10 and 11.)

*Continued on the next page*

**Cautions:**

- Avoid using the USB device if it might hinder your safety driving.
- Do not pull out and attach the USB device repeatedly while "READING" is shown on the display.
- Do not start the car engine if a USB device is connected.
- This unit may not be able to play the files depending on the type of USB device.
- Operation and power supply may not work as intended for some USB devices.

- You cannot connect a computer to the USB input terminal of the unit.
- Make sure all important data has been backed up to avoid losing the data.
- Do not leave a USB device in the car, expose to direct sunlight, or high temperature to avoid deformation or cause damages to the device.
- Some USB devices may not work immediately after you turn on the power.
- For more details about USB operations, see page 22.


## Listening to the other external components

You can connect an external component to AUX (auxiliary) input jack on the control panel.

**Preparation:** Make sure "AUX ON" is selected in the "SRC SELECT" → "AUX IN" setting, see page 19.

<b>1</b>		Select "AUX IN."
<b>2</b>	—	Turn on the connected component and start playing the source.
<b>3</b>		Adjust the volume.
<b>4</b>	—	Adjust the sound as you want (see pages 14 and 15).


### Connecting an external component to the AUX input jack

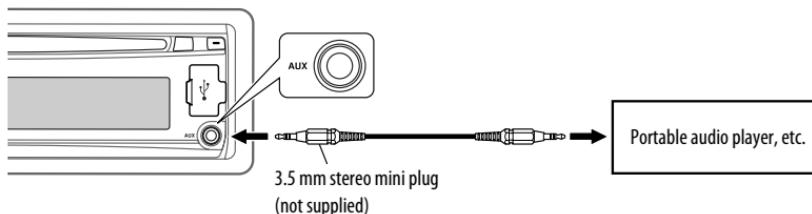

# Using the remote controller — RM-RK50

This unit can be remotely controlled as instructed here (with an optionally purchased remote controller). We recommend that you use remote controller RM-RK50 with your unit.

## Installing the lithium coin battery (CR2025)

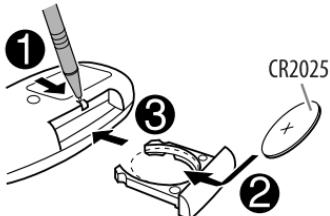



### **Caution:**

- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Battery shall not be exposed to excessive heat such as sunshine, fire, or the like.

### **If the effectiveness of the remote controller decreases, replace the battery.**

#### **Before using the remote controller:**

- Aim the remote controller directly at the remote sensor on the unit.
- DO NOT expose the remote sensor to bright light (direct sunlight or artificial lighting).

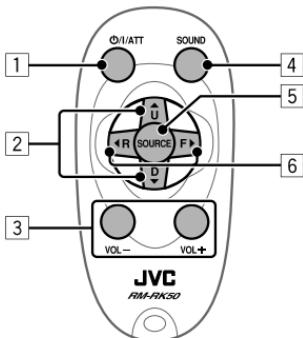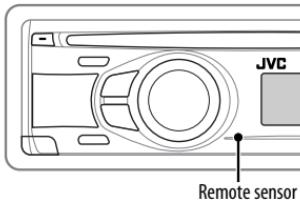

- [1] • Turns the power on if pressed briefly or attenuates the sound when the power is on.  
• Turns the power off if pressed and held.
- [2] • Changes the preset stations.  
• Changes the folder of the MP3/WMA.
- [3] Adjusts the volume level.
- [4] Selects the sound mode.
- [5] Selects the source.
- [6] • Searches for stations if pressed briefly.  
• Fast-forwards or reverses the track if pressed and held.  
• Changes the tracks if pressed briefly.

### **Warning (to prevent accidents and damage):**

- Do not install any battery other than CR2025 or its equivalent.
- Do not leave the remote controller in a place (such as dashboards) exposed to direct sunlight for a long time.
- Store the battery in a place where children cannot reach.
- Do not recharge, short, disassemble, heat the battery, or dispose of it in a fire.
- Do not leave the battery with other metallic materials.
- Do not poke the battery with tweezers or similar tools.
- Wrap the battery with tape and insulate when throwing away or saving it.

# Selecting a preset sound mode

You can select a preset sound mode suitable to the music genre.

- See also page 16.



[Hold]



[Turn] → [Press]



“EQ”



“USER/ROCK/CLASSIC/POPS/HIP HOP/JAZZ”

- See page 15 for “USER” settings.

## Preset value setting for each sound mode

Sound mode	Preset value										LOUD (loudness) OFF	
	BASS			MIDDLE			TREBLE					
	Freq.	Level	Q	Freq.	Level	Q	Freq.	Level	Q			
USER	60 Hz	00	Q1.25	1.0 kHz	00	Q1.0	10.0 kHz	00	—			
ROCK	100 Hz	+03	Q1.0	1.0 kHz	00	Q1.25	10.0 kHz	+02	—			
CLASSIC	80 Hz	+01	Q1.25	1.0 kHz	00	Q1.25	10.0 kHz	+03	—			
POPS	100 Hz	+02	Q1.25	1.0 kHz	+01	Q1.25	10.0 kHz	+02	—			
HIP HOP	60 Hz	+04	Q1.0	1.0 kHz	-02	Q1.0	10.0 kHz	+01	—			
JAZZ	80 Hz	+03	Q1.25	1.0 kHz	00	Q1.25	10.0 kHz	+03	—			

Freq.: Frequency Q: Q-slope


## ■ Storing your own sound mode

You can store your own adjustments in memory.


### 1 Select “USER” for “EQ.”



[Hold]

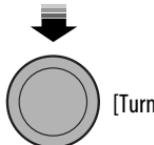

[Turn] → [Press]

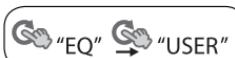

### 2 While “USER” is shown on the display...



[Hold]

### 3 Select a tone.



[Turn] → [Press]



### 4 Adjust the sound elements of the selected tone.



[Turn] → [Press]

- 1 Adjust the frequency.
- 2 Adjust the level.
- 3 Adjust the Q-slope.

Sound elements	Range/selectable items		
	BASS	MIDDLE	TREBLE
Frequency	60 Hz	0.5 kHz	10.0 kHz
	80 Hz	1.0 kHz	12.5 kHz
	100 Hz	1.5 kHz	15.0 kHz
	200 Hz	2.5 kHz	17.5 kHz
Level	-06 to +06	-06 to +06	-06 to +06
Q	Q1.0	Q0.75	Fixed
	Q1.25	Q1.0	
	Q1.5	Q1.25	
	Q2.0		

### 5 Repeat steps 3 and 4 to adjust other sound characteristics.

The adjustment made will be stored automatically.

# Menu operations

**1 Call up the menu.**



**2 Select the desired item.**



**3 Repeat step 2 if necessary.**

- To return to the previous menu, press BACK.
- To exit from the menu, press DISP or MENU.

Initial: Underlined

Category	Menu items	Selectable settings, [reference page]
DEMO	DEMO Display demonstration	<ul style="list-style-type: none"> <li>• <b>DEMO ON</b> : Display demonstration will be activated automatically if no operation is done for about 20 seconds, [6].</li> <li>• <b>DEMO OFF</b> : Cancels.</li> </ul>
CLOCK	CLOCK DISP* <sup>1</sup> Clock display	<ul style="list-style-type: none"> <li>• <b>CLOCK ON</b> : Clock time is shown on the display at all times when the power is turned off.</li> <li>• <b>CLOCK OFF</b> : Cancels; pressing DISP will show the clock time for about 5 seconds when the power is turned off, [6].</li> </ul>
	CLOCK SET Clock setting	: Adjust the hour, then the minute, [6]. (Initial: 0:00)
	24H/12H Time display mode	<ul style="list-style-type: none"> <li>• <b>24 HOUR</b> : See also page 6 for setting.</li> <li>• <b>12 HOUR</b></li> </ul>
	CLOCK ADJ* <sup>2</sup> Clock adjustment	<ul style="list-style-type: none"> <li>• <b>AUTO</b> : The built-in clock is automatically adjusted using the CT (clock time) data in the Radio Data System signal.</li> <li>• <b>OFF</b> : Cancels.</li> </ul>
EQ	EQ Equalizer	: Select a preset sound mode suitable to the music genre. <b>USER, ROCK, CLASSIC, POPS, HIP HOP, JAZZ</b>
DISPLAY	DIMMER Dimmer	<ul style="list-style-type: none"> <li>• <b>DIMMER ON</b> : Dims the display and button illumination.</li> <li>• <b>DIMMER OFF</b> : Cancels.</li> </ul>
	SCROLL* <sup>3</sup> Scroll	<ul style="list-style-type: none"> <li>• <b>SCROLL ONCE</b> : Scrolls the displayed information once.</li> <li>• <b>SCROLL AUTO</b> : Repeats scrolling (at 5-second intervals).</li> <li>• <b>SCROLL OFF</b> : Cancels.</li> </ul> <p>Pressing DISP for more than one second can scroll the display regardless of the setting.</p>
	TAG DISPLAY Tag display	<ul style="list-style-type: none"> <li>• <b>TAG ON</b> : Shows the Tag information while playing MP3/WMA tracks.</li> <li>• <b>TAG OFF</b> : Cancels.</li> </ul>

\*1 If the power supply is not interrupted by turning off the ignition key of your car, it is recommended to select "CLOCK OFF" to save the car's battery.

\*2 Takes effect only when CT data is received.

\*3 Some characters or symbols will not be shown correctly (or will be blanked) on the display.

Category	Menu items	Selectable settings, [reference page]	
TUNER	<b>AF-REG</b> * <sup>4</sup> Alternative frequency/ regionalization reception	<ul style="list-style-type: none"> <li>• <b>AF ON</b> : When the currently received signals become weak, the unit switches to another station (the programme may differ from the one currently received), [9]. • The AF indicator lights up.</li> <li>• <b>AF-REG ON</b> : When the currently received signals become weak, the unit switches to another station broadcasting the same programme. • The AF and REG indicators light up.</li> <li>• <b>OFF</b> : Cancels.</li> </ul>	
	<b>PTY-STANDBY</b> * <sup>4</sup> PTY standby	<b>PTY OFF, PTY codes</b> : Activates PTY Standby Reception with one of the PTY codes, [9].	
	<b>TA VOLUME</b> * <sup>4</sup> Traffic announcement volume	<b>VOLUME 00</b> – <b>VOLUME 50</b> (or <b>VOLUME 00</b> – <b>VOLUME 30</b> ) <sup>5</sup>	: (Initial: VOLUME 15)
	<b>P-SEARCH</b> * <sup>4</sup> Programme search	<ul style="list-style-type: none"> <li>• <b>SEARCH ON</b> : Activates Programme Search, [9].</li> <li>• <b>SEARCH OFF</b> : Cancels.</li> </ul>	
	<b>MONO</b> * <sup>6</sup> Monaural mode	<ul style="list-style-type: none"> <li>• <b>MONO ON</b> : Activate monaural mode to improve FM reception, but stereo effect will be lost, [7].</li> <li>• <b>MONO OFF</b> : Restore the stereo effect.</li> </ul>	
	<b>IF BAND</b> Intermediate frequency band	<ul style="list-style-type: none"> <li>• <b>AUTO</b> : Increases the tuner selectivity to reduce interference noises between adjacent stations. (Stereo effect may be lost.)</li> <li>• <b>WIDE</b> : Subject to interference noises from adjacent stations, but sound quality will not be degraded and the stereo effect will remain.</li> </ul>	
COLOR  COLOR (for KD-R501)	<b>COLOR 01</b> – <b>COLOR 29</b> , <b>USER</b>	: Select one of the preset or user color for display and button (except <b>T/P</b> / <b>Φ/ATT/▲</b> ) illumination. (For customize color settings, "USER," see page 19.)	
MENU COLOR  MENU COLOR (for KD-R501)	<b>MENU COLOR</b> Menu color	<ul style="list-style-type: none"> <li>• <b>OFF</b> : Cancels.</li> <li>• <b>ON</b> : Changes the display and button (except <b>T/P</b>/<b>Φ/ATT/▲</b>) illumination during menu, list search and playback mode operations.</li> </ul>	

<sup>4</sup> Only for FM Radio Data System stations.<sup>5</sup> Depends on the amplifier gain control.<sup>6</sup> Displayed only when the source is "FM."

Continued on the next page

Category	Menu items	Selectable settings, [reference page]
AUDIO	<b>FADER*</b> <sup>7,*8</sup> Fader	<b>R06 – F06</b> : Adjust the front and rear speaker output balance. (Initial: 00)
	<b>BALANCE*</b> <sup>8</sup> Balance	<b>L06 – R06</b> : Adjust the left and right speaker output balance. (Initial: 00)
	<b>LOUD</b> Loudness	<ul style="list-style-type: none"> <li>• <b>LOUD OFF</b> : Cancels.</li> <li>• <b>LOUD ON</b> : Boost low and high frequencies to produce a well-balanced sound at a low volume level.</li> </ul>
	<b>VOL ADJUST</b> Volume adjust	<b>VOL ADJ –05</b> : Preset the volume adjustment level of each source (except FM), compared to the FM volume level. The volume level will automatically increase or decrease when you change the source. <ul style="list-style-type: none"> <li>—</li> <li><b>VOL ADJ +05</b> (Initial: VOL ADJ 00) : Before making an adjustment, select the source you want to adjust.</li> <li>• “VOL ADJ FIX” appears on the display if “FM” is selected as the source.</li> </ul>
	<b>L/O MODE</b> Line output mode	<ul style="list-style-type: none"> <li>• <b>SUB.W</b> : Select if the REAR LINE OUT terminals are used for connecting a subwoofer (through an external amplifier).</li> <li>• <b>REAR</b> : Select if the REAR LINE OUT terminals are used for connecting the speakers (through an external amplifier).</li> </ul>
	<b>SUB.W FREQ*</b> <sup>9</sup> Subwoofer cutoff frequency	<ul style="list-style-type: none"> <li>• <b>LOW</b> : Frequencies lower than 72 Hz are sent to the subwoofer.</li> <li>• <b>MID</b> : Frequencies lower than 111 Hz are sent to the subwoofer.</li> <li>• <b>HIGH</b> : Frequencies lower than 157 Hz are sent to the subwoofer.</li> </ul>
	<b>SUB.W LEVEL*</b> <sup>9</sup> Subwoofer level	<b>SUB.W 00</b> : Adjust the subwoofer output level. — <b>SUB.W 08</b> (Initial: SUB.W 04)
	<b>BEEP</b> Key touch tone	<ul style="list-style-type: none"> <li>• <b>BEEP OFF</b> : Deactivates the key touch tone.</li> <li>• <b>BEEP ON</b> : Activates the key touch tone.</li> </ul>
	<b>TEL MUTING</b> Telephone muting	<ul style="list-style-type: none"> <li>• <b>MUTING 1/</b> <b>MUTING 2</b> : Select either one which mutes the sounds while using a cellular phone.</li> <li>• <b>MUTING OFF</b> : Cancels.</li> </ul>
	<b>AMP GAIN*</b> <sup>10</sup> Amplifier gain control	<ul style="list-style-type: none"> <li>• <b>LOW POWER</b> : VOLUME 00 – VOLUME 30 (Select if the maximum power of each speaker is less than 50 W to prevent damaging the speaker.)</li> <li>• <b>HIGH POWER</b> : VOLUME 00 – VOLUME 50</li> </ul>

\*7 If you are using a two-speaker system, set the fader level to “00.”

\*8 This adjustment will not affect the subwoofer output.

\*9 Displayed only when “L/O MODE” is set to “SUB.W.”

\*10 The volume level automatically changes to “VOLUME 30” if you change to “LOW POWER” with the volume level set higher than “VOLUME 30.”

Category	Menu items	Selectable settings, [reference page]
SRC SELECT	AM* <sup>11</sup> AM station	<ul style="list-style-type: none"> <li>• <b>AM OFF</b> : Disable "AM" in source selection.</li> <li>• <b>AM ON</b> : Enable "AM" in source selection, [4].</li> </ul>
	AUX IN* <sup>12</sup> Auxiliary input	<ul style="list-style-type: none"> <li>• <b>AUX OFF</b> : Disable "AUX IN" in source selection.</li> <li>• <b>AUX ON</b> : Enable "AUX IN" in source selection, [4].</li> </ul>

\*<sup>11</sup> Displayed only when any source other than "AM" is selected.

\*<sup>12</sup> Displayed only when any source other than "AUX IN" is selected.

## Color settings (for KD-R501)

### ■ Creating your own color —USER Color

You can create your own colors—"DAY COLOR" or "NIGHT COLOR."


DAY COLOR: Used when "DIMMER" is set to "DIMMER OFF."

NIGHT COLOR: Used when "DIMMER" is set to "DIMMER ON."




[Hold]

### 2 Select "COLOR" → "USER."

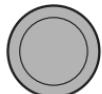

[Turn] → [Press]

### 3 While "USER" is shown on the display...

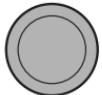

[Hold]



[Turn] → [Press]

DAY COLOR ↔ NIGHT COLOR

### 5 Select a primary color.



[Turn] → [Press]

→ RED ← GREEN ← BLUE ←

### 6 Adjust the level (00 to 31) of the selected primary color.



[Turn] → [Press]

If "00" is selected for all the primary colors, nothing appear on the display.

### 7 Repeat steps 5 and 6 to adjust other primary colors.

### 8 Exit from the setting.



- If no operation is done for about 30 seconds, the operation will be canceled.

# More about this unit

## ■ Basic operations

### Turning on the power

- By pressing SRC button on the unit, you can also turn on the power. If the source is ready, playback also starts.

### Turning off the power

- If you turn off the power while listening to a track, playback will start from where it had been stopped previously next time you turn on the power.

## General

- If you change the source while listening to a disc, playback stops.

Next time you select "CD" as the playback source, playback will start from where it had been stopped previously.

- If no operation is done for about 30 seconds after pressing MENU button, the operation will be canceled.

## ■ Tuner operations

### Storing stations in memory

- During SSM search...
  - All previously stored stations are erased and the stations are stored anew.
  - When SSM is over, the station stored in the lowest preset number will be automatically tuned in.
- When storing a station manually, the previously preset station is erased when a new station is stored in the same preset number.

## FM Radio Data System operations

- Network-Tracking Reception requires two types of Radio Data System signals—PI (Programme Identification) and AF (Alternative Frequency) to work correctly. Without receiving these data correctly, Network-Tracking Reception will not operate correctly.
- If a Traffic Announcement is received by TA Standby Reception, the volume level automatically changes to the preset level (TA VOL) if the current level is lower than the preset level.
- When Alternative Frequency Reception is activated (with AF selected), Network-Tracking Reception is also activated automatically.

## ■ Disc operations

### Caution for DualDisc playback

- The Non-DVD side of a "DualDisc" does not comply with the "Compact Disc Digital Audio" standard. Therefore, the use of Non-DVD side of a DualDisc on this product may not be recommended.

## General

- This unit has been designed to reproduce CDs/CD Texts, and CD-Rs (Recordable)/CD-RWs (Rewritable) in audio CD (CD-DA), MP3/WMA formats.
- When a disc is inserted upside down, "PLEASE" and "EJECT" appear alternately on the display. Press ▲ to eject the disc.
- MP3 and WMA "tracks" (words "file" and "track" are used interchangeably) are recorded in "folders."
- While fast-forwarding or reversing on an MP3 or WMA disc, you can only hear intermittent sounds.

## **Playing a CD-R or CD-RW**

- Use only “finalized” CD-Rs or CD-RWs.
- This unit can only play back files of the same type as those detected first if a disc includes both audio CD (CD-DA) files and MP3/WMA files.
- This unit can play back multi-session discs; however, unclosed sessions will be skipped while playing.
- Some CD-Rs or CD-RWs may not play back on this unit because of their disc characteristics, or for the following reasons:
  - Discs are dirty or scratched.
  - Moisture condensation has occurred on the lens inside the unit.
  - The pickup lens inside the unit is dirty.
  - The files on the CD-R/CD-RW are written using the “Packet Write” method.
  - There are improper recording conditions (missing data, etc.) or media conditions (stained, scratched, warped, etc.).
- CD-RWs may require a longer readout time since the reflectance of CD-RWs is lower than that of regular CDs.
- Do not use the following CD-Rs or CD-RWs:
  - Discs with stickers, labels, or a protective seal stuck to the surface.
  - Discs on which labels can be directly printed by an ink jet printer.

Using these discs under high temperature or high humidity may cause malfunctions or damage to the unit.

## **Playing an MP3/WMA disc**

- This unit can play back MP3/WMA files with the extension code <.mp3> or <.wma> (regardless of the letter case—upper/lower).
- This unit can show the names of albums, artists (performer), and Tag (Version 1.0, 1.1, 2.2, 2.3, or 2.4) for MP3 files and for WMA files.
- This unit can display only one-byte characters. No other characters can be correctly displayed.

- This unit can play back MP3/WMA files meeting the conditions below:
  - Bit rate of MP3: 32 kbps — 320 kbps
  - Sampling frequency of MP3:  
32 kHz, 44.1 kHz, 48 kHz (for MPEG-1)  
16 kHz, 22.05 kHz, 24 kHz (for MPEG-2)
  - Bit rate of WMA: 32 kbps — 320 kbps
  - Sampling frequency of WMA: 22.05 kHz, 32 kHz,  
44.1 kHz, 48 kHz
  - Disc format: ISO 9660 Level 1/Level 2, Romeo,  
Joliet, Windows extension.
- The maximum number of characters for file/folder names vary depending on the disc format used (includes 4 extension characters—<.mp3> or <.wma>).
  - ISO 9660 Level 1: up to 12 characters
  - ISO 9660 Level 2: up to 31 characters
  - Romeo: up to 64 characters
  - Joliet: up to 32 characters
  - Windows extension: up to 64 characters
- This unit can recognize a total of 512 files, 255 folders, and 8 hierarchical levels.
- This unit can play back files recorded in VBR (variable bit rate).  

Files recorded in VBR have a discrepancy in the elapsed time display, and do not show the actual elapsed time. In particular, this difference becomes noticeable after performing the search function.
- This unit cannot play back the following files:
  - MP3 files encoded in MP3i and MP3 PRO format.
  - MP3 files encoded in an inappropriate format.
  - MP3 files encoded with Layer 1/2.
  - WMA files encoded in lossless, professional, and voice format.
  - WMA files which are not based upon Windows Media® Audio.
  - WMA files copy-protected with DRM.
  - Files which have data such as AIFF, ATRAC3, etc.
- The search function works but search speed is not constant.

*Continued on the next page*

## Playing MP3/WMA tracks from a USB device

- While playing from a USB device, the playback order may differ from other players.
- This unit may be unable to play back some USB devices or some files due to their characteristics or recording conditions.
- Depending on the shape of the USB devices and connection ports, some USB devices may not be attached properly or the connection might be loose.
- Connect one USB mass storage class device to the unit at a time. Do not use a USB hub.
- If the connected USB device does not have the correct files, "CANNOT PLAY" appears.
- This unit can show Tag (Version 1.0, 1.1, 2.2, 2.3, or 2.4) for MP3 files and for WMA files.
- This unit can play back MP3/WMA files meeting the conditions below:
  - Bit rate of MP3: 32 kbps — 320 kbps
  - Sampling frequency of MP3:
    - 32 kHz, 44.1 kHz, 48 kHz (for MPEG-1)
    - 16 kHz, 22.05 kHz, 24 kHz (for MPEG-2)
  - Bit rate of WMA: 32 kbps — 320 kbps
  - Sampling frequency of WMA: 22.05 kHz, 32 kHz, 44.1 kHz, 48 kHz
- This unit can play back MP3 files recorded in VBR (variable bit rate).
- The maximum number of characters for:
  - Folder names : 32 characters
  - File names : 32 characters
  - MP3 Tag : 64 characters
  - WMA Tag : 32 characters
- This unit can recognize a total of 5 000 files, 255 folders (255 files per folder including folder without unsupported files), and of 8 hierarchies.
- This unit does not support SD card reader.

- This unit cannot recognize a USB device whose rating is other than 5 V and exceeds 500 mA.
- USB devices equipped with special functions such as data security functions cannot be used with the unit.
- Do not use a USB device with 2 or more partitions.
- This unit may not recognize a USB device connected through a USB card reader.
- This unit may not play back files in a USB device properly when using a USB extension cord.
- This unit cannot play back the following files:
  - MP3 files encoded with MP3i and MP3 PRO format.
  - MP3 files encoded in an inappropriate format.
  - MP3 files encoded with Layer 1/2.
  - WMA files encoded in lossless, professional, and voice format.
  - WMA files not based on Windows Media® Audio.

## Ejecting a disc or removing a USB device

- If the ejected disc is not removed within 15 seconds, it is automatically inserted into the loading slot again to protect it from dust.
- After ejecting a disc or removing a USB device, "NO DISC" or "NO USB" appears and you cannot operate some of the buttons. Insert another disc, reattach a USB device, or press SRC to select another playback source.

## ■ Menu operations

- If you change the "AMP GAIN" setting from "HIGH POWER" to "LOW POWER" while the volume level is set higher than "VOLUME 30," the unit automatically changes the volume level to "VOLUME 30."

# Troubleshooting

What appears to be trouble is not always serious. Check the following points before calling a service center.

	<b>Symptoms</b>	<b>Remedies/Causes</b>
<b>General</b>	• Sound cannot be heard from the speakers.	• Adjust the volume to the optimum level. • Check the cords and connections.
	• The unit does not work at all.	Reset the unit (see page 3).
	• "AUX IN" cannot be selected.	Check the "SRC SELECT" → "AUX IN" setting (see page 19).
	• KD-R501: Nothing appear on the display.	KD-R501: Check the USER Color settings (see page 19)
<b>FM/AM</b>	• SSM automatic presetting does not work.	Store stations manually.
	• Static noise while listening to the radio.	Connect the aerial firmly.
	• "AM" cannot be selected.	Check the "SRC SELECT" → "AM" setting (see page 19).
<b>Discs in general</b>	• Disc cannot be played back.	Insert the disc correctly.
	• CD-R/CD-RW cannot be played back.	• Insert a finalized CD-R/CD-RW.
	• Tracks on the CD-R/CD-RW cannot be skipped.	• Finalize the CD-R/CD-RW with the component which you used for recording.
	• Disc can neither be played back nor ejected.	• Unlock the disc (see page 10). • Eject the disc forcibly (see page 3).
	• Disc sound is sometimes interrupted.	• Stop playback while driving on rough roads. • Change the disc. • Check the cords and connections.
	• "NO DISC" appears on the display.	Insert a playable disc into the loading slot.
	• "PLEASE" and "EJECT" appear alternately on the display.	Press <b>▲</b> , then insert a disc correctly.
	• Disc cannot be played back.	• Use a disc with MP3/WMA tracks recorded in a format compliant with ISO 9660 Level 1, Level 2, Romeo, or Joliet. • Add the extension code <.mp3> or <.wma> to the file names.
<b>MP3/WMA playback</b>		

*Continued on the next page*


Symptoms	Remedies/Causes
<ul style="list-style-type: none"> <li>• Noise is generated.</li> </ul>	<p>Skip to another track or change the disc. (Do not add the extension code &lt;.mp3&gt; or &lt;.wma&gt; to non-MP3 or WMA tracks.)</p>
<ul style="list-style-type: none"> <li>• A longer readout time is required ("READING" keeps flashing on the display).</li> </ul>	<p>Do not use too many hierarchical levels and folders.</p>
<ul style="list-style-type: none"> <li>• Tracks do not play back in the order you have intended them to play.</li> </ul>	<p>The playback order is determined when the files are recorded.</p>
<ul style="list-style-type: none"> <li>• The elapsed playing time is not correct.</li> </ul>	<p>This sometimes occurs during playback. This is caused by how the tracks are recorded on the disc.</p>
<ul style="list-style-type: none"> <li>• "NO FILE" appears on the display.</li> </ul>	<p>Selected folder is an empty folder*. Select another folder that contains MP3/WMA tracks.</p> <p>* <i>Folder that is physically empty or folder that contains data but does not contain valid MP3/WMA track.</i></p>
<ul style="list-style-type: none"> <li>• The correct characters are not displayed (e.g. album name).</li> </ul>	<p>This unit can only display letters (upper case), numbers, and a limited number of symbols.</p>
<ul style="list-style-type: none"> <li>• Noise is generated.</li> </ul>	<p>The track played back is not an MP3/WMA track. Skip to another file. (Do not add the extension code &lt;.mp3&gt; or &lt;.wma&gt; to non-MP3 or WMA tracks.)</p>
<ul style="list-style-type: none"> <li>• "READING" keeps flashing on the display.</li> </ul>	<ul style="list-style-type: none"> <li>• Readout time varies depending on the USB device.</li> <li>• Do not use too many hierarchy or folders.</li> <li>• Turn off the power then on again.</li> <li>• Reattach the USB device again.</li> </ul>
<ul style="list-style-type: none"> <li>• "NO FILE" appears on the display.</li> </ul>	<p>Selected folder is an empty folder*. Select another folder that contains MP3/WMA tracks.</p> <p>* <i>Folder that is physically empty or folder that contains data but does not contain valid MP3/WMA track.</i></p>
<ul style="list-style-type: none"> <li>• Tracks/folders are not played back in the order you have intended.</li> </ul>	<p>The playback order is determined by the write-in time stamp. The first track/folder written into the USB device will be the first track/folder for playback.</p>
<ul style="list-style-type: none"> <li>• "CANNOT PLAY" flashes on the display.</li> <li>• "NO USB" appears on the display.</li> <li>• The unit cannot detect the USB device.</li> </ul>	<ul style="list-style-type: none"> <li>• Attach a USB device that contains tracks encoded in an appropriate format.</li> <li>• Reattach the USB device again.</li> </ul>
<ul style="list-style-type: none"> <li>• Correct characters are not displayed (e.g. album name).</li> </ul>	<p>This unit can only display alphabets (upper case), numbers, and a limited number of symbols.</p>
<ul style="list-style-type: none"> <li>• While playing a track, sound is sometimes interrupted.</li> </ul>	<p>The MP3/WMA tracks have not been properly copied into the USB device. Copy MP3/WMA tracks again into the USB device, and try again.</p>

- Microsoft and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

# Maintenance

## How to clean the connectors

Frequent detachment will deteriorate the connectors. To minimize this possibility, periodically wipe the connectors with a cotton swab or cloth moistened with alcohol, being careful not to damage the connectors.

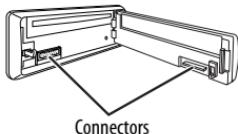

Connectors

## Moisture condensation

Moisture may condense on the lens inside the unit in the following cases:

- After starting the heater in the car.
- If it becomes very humid inside the car.

Should this occur, the unit may malfunction. In this case, eject the disc and leave the unit turned on for a few hours until the moisture has evaporated.

## How to handle discs

### When removing a disc from its case

case, press down the center holder of the case and lift the disc out, holding it by the edges.



- Always hold the disc by the edges. Do not touch its recording surface.

**When storing a disc in its case**, gently insert the disc around the center holder (with the printed surface facing up).

- Make sure to store discs in cases after use.

## To keep discs clean

A dirty disc may not play correctly.

If a disc does become dirty, wipe it with a soft cloth in a straight line from center to edge.

- Do not use any solvents (for example, conventional record cleaner, spray, thinner, benzine, etc.) to clean discs.



## To play new discs

New discs may have some rough spots around the inner and outer edges. If such a disc is used, this unit may reject the disc.



**To remove these rough spots**, rub the edges with a pencil or ball-point pen, etc.

### Do not use the following discs:

Single CD (8 cm disc)



Warped disc



Sticker and sticker residue



Stick-on label



Unusual shape



C-thru Disc (semi-transparent disc)



Transparent or semi-transparent parts on its recording area



# Specifications

<b>AUDIO AMPLIFIER SECTION</b>		
Maximum Power Output:	Front/Rear:	50 W per channel
Continuous Power Output (RMS):	Front/Rear:	19 W per channel into 4 Ω, 40 Hz to 20 000 Hz at no more than 0.8% total harmonic distortion.
Load Impedance:		4 Ω (4 Ω to 8 Ω allowance)
Tone Control Range:	Bass:	±12 dB (60 Hz, 80 Hz, 100 Hz, 200 Hz) Q1.0, Q1.25, Q1.5, Q2.0
	Middle:	±12 dB (0.5 kHz, 1.0 kHz, 1.5 kHz, 2.5 kHz) Q0.75, Q1.0, Q1.25
	Treble:	±12 dB (10.0 kHz, 12.5 kHz, 15.0 kHz, 17.5 kHz) Q = Fixed
Frequency Response:		40 Hz to 20 000 Hz
Signal-to-Noise Ratio:		70 dB
Line-Out Level/Impedance:		2.5 V/20 kΩ load (full scale)
Output Impedance:		1 kΩ
Subwoofer-Out Level/Impedance:		2.5 V/20 kΩ load (full scale)
Other Terminal:		USB input jack, AUX (auxiliary) input jack

<b>TUNER SECTION</b>		
Frequency Range:	FM:	87.5 MHz to 108.0 MHz
	AM:	MW: 522 kHz to 1 620 kHz LW: 144 kHz to 279 kHz
FM Tuner	Usable Sensitivity:	11.3 dBf (1.0 µV/75 Ω)
	50 dB Quieting Sensitivity:	16.3 dBf (1.8 µV/75 Ω)
	Alternate Channel Selectivity (400 kHz):	65 dB
	Frequency Response:	40 Hz to 15 000 Hz
	Stereo Separation:	30 dB
MW Tuner	Sensitivity:	20 µV
	Selectivity:	35 dB
LW Tuner	Sensitivity:	50 µV

**CD PLAYER SECTION**

Type:	Compact disc player
Signal Detection System:	Non-contact optical pickup (semiconductor laser)
Number of Channels:	2 channels (stereo)
Frequency Response:	5 Hz to 20 000 Hz
Dynamic Range:	96 dB
Signal-to-Noise Ratio:	98 dB
Wow and Flutter:	Less than measurable limit
MP3 Decoding Format: (MPEG1/2 Audio Layer 3)	Max. Bit Rate: 320 kbps
WMA (Windows Media® Audio) Decoding Format:	Max. Bit Rate: 320 kbps

**USB SECTION**

USB Standard:	USB 1.1, USB 2.0
Data Transfer Rate (Full Speed):	Max. 12 Mbps
Compatible Device:	Mass storage class
Compatible File System:	FAT 32/16/12
Playable Audio Format:	MP3/WMA
Max. Current:	DC 5 V --- 500 mA

**GENERAL**

Power Requirement:	Operating Voltage:	DC 14.4 V (11 V to 16 V allowance)
Grounding System:	Negative ground	
Allowable Operating Temperature:	0°C to +40°C	
Dimensions (W × H × D): (approx.)	Installation Size:	182 mm × 52 mm × 160 mm
	Panel Size:	188 mm × 58 mm × 12 mm
Mass:	1.3 kg (excluding accessories)	

*Design and specifications are subject to change without notice.*

**Having TROUBLE with operation?  
Please reset your unit**  
Refer to page of How to reset your unit

**Haben Sie PROBLEME mit dem Betrieb?  
Bitte setzen Sie Ihr Gerät zurück  
Siehe Seite Zurücksetzen des Geräts**

**Затруднения при эксплуатации?**

**Пожалуйста, перезагрузите Ваше устройство**

Для получения информации о перезагрузке Вашего устройства обратитесь на соответствующую страницу

**Αντιμετωπίζετε ΠΡΟΒΛΗΜΑΤΑ λειτουργίας;  
Εκτελέστε επαναφορά της μονάδας  
Ανατρέξτε στην ενότητα “Επαναφορά της μονάδας”**

Dear Customer,

This apparatus is in conformance with the valid European directives and standards regarding electromagnetic compatibility and electrical safety.

European representative of Victor Company of Japan, Limited is:

JVC Technical Services Europe GmbH  
Postfach 10 05 04  
61145 Friedberg  
Germany

Sehr geehrter Kunde, sehr geehrte Kundin,  
dieses Gerät stimmt mit den gültigen europäischen Richtlinien  
und Normen bezüglich elektromagnetischer Verträglichkeit  
und elektrischer Sicherheit überein.

Die europäische Vertretung für die Victor Company of Japan,  
Limited ist:

JVC Technical Services Europe GmbH  
Postfach 10 05 04  
61145 Friedberg  
Deutschland

Уважаемый клиент.

Данное устройство соответствует действительным  
Европейским директивам и стандартам по электромагнитной  
совместимости и электрической безопасности.

Представительство компании Victor Company of Japan,  
Limited в Европе:

JVC Technical Services Europe GmbH  
Postfach 10 05 04  
61145 Friedberg  
Германия

Αγαπητέ πελάτη,  
η συσκευή αυτή συμφωνεί με τις ισχύουσες Ευρωπαϊκές  
Οδηγίες και πρότυπα σχετικά με την ηλεκτρομαγνητική  
συμβατότητα και την ασφάλεια από ηλεκτρισμό.

Ο Ευρωπαϊκός αντιπρόσωπος της Victor Company of Japan,  
Limited είναι:

JVC Technical Services Europe GmbH  
Postfach 10 05 04  
61145 Friedberg  
Γερμανία

**JVC**



EN, GE, RU, GR

© 2008 Victor Company of Japan, Limited


1008DTSMĐTJEIN



# KD-R501/KD-R402/KD-R401

## Installation/Connection Manual Einbau/Anschlußanleitung Руководство по установке/подключению Εγχειρίδιο εγκατάστασης/συνδέσεων

GET0574-013A  
[EY]

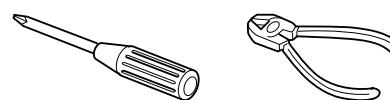

1008DTSMĐTJEIN  
EN, GE, RU, GR

© 2008 Victor Company of Japan, Limited

### ENGLISH

This unit is designed to operate on **12 V DC**, **NEGATIVE ground electrical systems**. If your vehicle does not have this system, a voltage inverter is required, which can be purchased at JVC IN-CAR ENTERTAINMENT dealers.


### WARNINGS

To prevent short circuits, we recommend that you disconnect the battery's negative terminal and make all electrical connections before installing the unit.

- Be sure to ground this unit to the car's chassis again after installation.**

#### Notes:

- Replace the fuse with one of the specified rating. If the fuse blows frequently, consult your JVC IN-CAR ENTERTAINMENT dealer.
- It is recommended to connect to the speakers with maximum power of more than 50 W (both at the rear and at the front, with an impedance of **4 Ω to 8 Ω**). If the maximum power is less than 50 W, change "AMP GAIN" setting to prevent the speakers from being damaged (see page 18 of the INSTRUCTIONS).
- To prevent short-circuit, cover the terminals of the UNUSED leads with insulating tape.
- The heat sink becomes very hot after use. Be careful not to touch it when removing this unit.

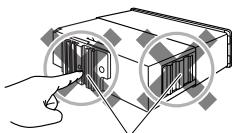

Heat sink / Abstrahlblech  
Радиатор / Ψύκτρα

### DEUTSCH

Dieses Gerät ist für einen Betrieb in elektrischen Anlagen mit **12 V Gleichstrom und (-) Erdung ausgelegt**. Verfügt Ihr Fahrzeug nicht über diese Anlage, ist ein Spannungsinverter erforderlich, der bei JVC Autoradiohändler erworben werden kann.

### WARNUNGEN

Zur Vermeidung von Kurzschlüssen empfehlen wir, daß Sie den negativen Batterieanschluß abtrennen und alle elektrischen Anschlüsse herstellen, bevor das Gerät eingebaut wird.

- Sicherstellen, daß das Gerät nach dem Einbau a Chassis des Fahrzeugs geerdet wird.**

#### Hinweise:

- Die Sicherung mit einer der entsprechenden Nennleistung ersetzen. Brennt die Sicherung häufig durch, wenden Sie sich an Ihren JVC Autoradiohändler.
- Es wird empfohlen, Lautsprecher mit einer Maximalleistung von mehr als 50 W anzuschließen (sowohl hinten als auch vorne, mit einer Impedanz von **4 Ω bis 8 Ω**). Wenn die Maximalleistung weniger als 50 W beträgt, stellen Sie „AMP GAIN“ anders ein, um Schäden an den Lautsprechern zu vermeiden (siehe Seite 18 der BEDIENUNGSANLEITUNG).
- Zur Vermeidung eines Kurzschlusses die Anschlußklemmen der NICHT VERWENDETEN Leitungen mit Isolierklebeband umwickeln.
- Das Abstrahlblech wird nach dem Gebrauch sehr heiß. Beim Ausbau des Geräts darauf achten, das Abstrahlblech nicht zu berühren.

### РУССКИЙ

Это устройство разработано для эксплуатации на **12 В постоянного напряжения с минусом на массе**. Если Ваш автомобиль не имеет этой системы, требуется инвертор напряжения, который может быть приобретен у дилера автомобилного специалиста JVC.

### ПРЕДУПРЕЖДЕНИЯ

Для предотвращения коротких замыканий мы рекомендуем Вам отсоединить отрицательный разъем аккумулятора и осуществить все подключения перед установкой устройства.

- После установки обязательно заземлите данное устройство на шасси автомобиля.**

#### Примечания:

- Заменяйте предохранитель другим предохранителем указанного класса. Если предохранитель сгорает слишком часто, обратитесь к дилеру автомобилного специалиста JVC.
- Рекомендуется подключать динамики с максимальной мощностью более 50 Вт (к задней и передней панели устройства, с полным сопротивлением от **4 Ω до 8 Ω**). Если максимальная мощность динамиков менее 50 Вт, перейдите в режим "AMP GAIN", чтобы предотвратить их повреждение (см. ИНСТРУКЦИИ ПО ЭКСПЛУАТАЦИИ на стр. 18).
- Для предотвращения короткого замыкания заклейте НЕИСПОЛЬЗУЕМЫЕ концы изолирующей лентой.
- Радиатор во время использования сильно нагревается. Страйтесь его не трогать во время удаления устройства.

### ΕΛΛΗΝΙΚΑ

Η συσκευή αυτή είναι σχεδιασμένη να λειτουργεί σε ηλεκτρικά συστήματα οχημάτων στα **12 V DC**, με **ΑΡΝΗΤΙΚΗ γειωση**. Εάν το όχημα σας δεν ανήκει στην κατηγορία αυτή, θα χρειαστείτε ένα μετατρόπετρά τάσης, τον οποίο μπορείτε να προμηθευτείτε από τους αντιπροσώπους συστημάτων ψυχαγωγίας οχημάτων της JVC.

### ΠΡΟΦΥΛΑΞΙΣ

Για την αποτροπή τυχόν βραχυκυλωμάτων, συνιστούμε να αποσυνδέσετε τον αρνητικό πόλο της μπαταρίας και να κάνετε όλες τις ηλεκτρικές συνδέσεις πριν από την εγκατάσταση της συσκευής.

- Βεβαιωθείτε ότι θα γειώσετε τη συσκευή αυτή στο αράχωμα του οχήματος ξανά μετά την εγκατάσταση.**

#### Σημειώσεις:



- Εάν καίει η ασφάλεια, αντικαταστήστε την με καινούργια των ίδιων ονομαστικών χαρακτηριστικών. Εάν η ασφάλεια καίγεται συχνά, συμβουλευθείτε τον αντιπρόσωπο συστημάτων ψυχαγωγίας οχημάτων της JVC.
- Συνιστάται να συνδέσετε ηχεία μέγιστης ισχύος πάνω από 50 W (τόσο πίσω όσο και μπροστά, με σύνθετη αντίσταση **4 Ω έως 8 Ω**). Εάν η μέγιστη ισχύς των ηχείων είναι μικρότερη από 50 W, αλλάζετε τη ρύθμιση "AMP GAIN" (Απολαβή ενισχυτή) για να αποτρέψετε ενδεχόμενη καταστροφή τους (βλ. σελίδα 18 στις ΟΔΗΓΙΕΣ).
- Για να αποτρέψετε τυχόν βραχυκυλώματα, καλύπτετε τους ακροδέκτες των καλωδίων ΠΟΥ ΔΕ ΧΡΗΣΙΜΟΠΟΙΕΙΤΕ με μονωτική ταινία.
- Η ψυκτρά ζεσταίνεται πολύ κατά τη χρήση. Σταράτες εγκατάστασης την αγγίξετε καθώς αφαιρείτε τη συσκευή.

### PRECAUTIONS on power supply and speaker connections:

- DO NOT connect the speaker leads of the power cord to the car battery; otherwise, the unit will be seriously damaged.**
- BEFORE connecting the speaker leads of the power cord to the speakers, check the speaker wiring in your car.

### VORSICHTSMASSREGELN beim Anschließen der Stromversorgung und Lautsprecher:


- Die Lautsprecherleitungen des Netzkabels NICHT an der Autobatterie anschließen, da sonst das Gerät schwer beschädigt wird.
- VOR dem Anschließen der Lautsprecherleitungen des Spannungsversorgungskabels an die Lautsprecher, die Lautsprecherverdrahtung in Ihrem Auto überprüfen.

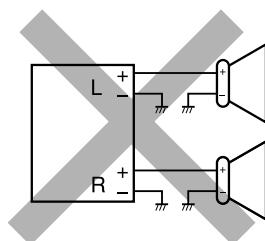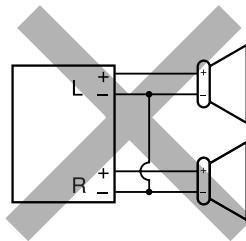


### Parts list for installation and connection

The following parts are provided for this unit. If any item is missing, consult your JVC IN-CAR ENTERTAINMENT dealer immediately.

Ⓐ Control panel  
Schaltnetz  
Панель управления  
Πρόσωπο

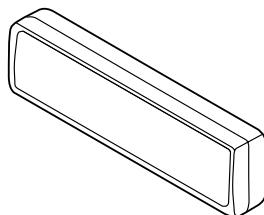

Ⓑ Power cord  
Stromkabel  
Кабель питания  
Δέσμη καλωδίων ρεύματος

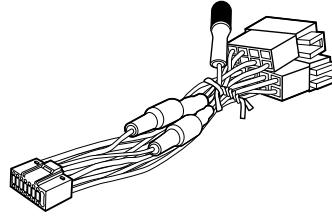


Ⓒ Mounting bolt (M4 x 5 mm; M5 x 12,5 mm)  
Befestigungsschraube (M4 x 5 mm; M5 x 12,5 mm)  
Крепежный болт (M4 x 5 mm; M5 x 12,5 mm)  
Βίδα στερέωσης (M4 x 5 mm; M5 x 12,5 mm)



### Teileliste für den Einbau und Anschluß

Die folgenden Teile werden zusammen mit diesem Gerät geliefert. Falls ein Artikel fehlt, wenden Sie sich sofort an Ihren JVC-Autoradiohändler.

Ⓑ Sleeve  
Halterung  
Муфта  
Βάση

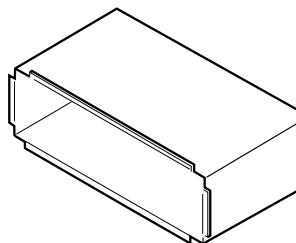

Ⓔ Washer (ø5)  
Unterlegscheibe (ø5)  
Шайба (ø5)  
Ροδέλα (ø5)




Ⓗ Rubber cushion  
Gummipuffer  
Резиновый чехол  
Ελαστικό παρέμβυσμα




Ⓓ Handles  
Griffe  
Рычаги  
Κλειδιά

### ΠΡΟΦΥΛΑΞΙΣ κατά τις συνδέσεις τροφοδοσίας ρεύματος και ηχείων:

- ΜΗ συνδέστε τα καλώδια ηχείων της συσκευής με την μπαταρία του οχήματος, διότι ενδέχεται να προκληθεί σοβαρή ζημιά στη συσκευή.
- ΠΡΟΤΟΥ συνδέσετε τα καλώδια ηχείων της συσκευής με τα ηχεία, ελέγχετε την καλωδίωση των ηχείων του οχήματος.

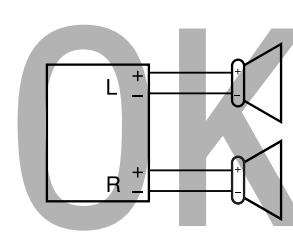


Ⓔ Trim plate  
Frontrahmen  
Декоративная панель  
Διακοσμητικό πλαίσιο

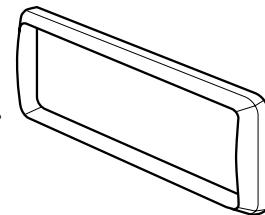

Ⓕ Lock nut (M5)  
Sicherungsmutter (M5)  
Фиксирующая гайка (M5)  
Ασφαλιστική παξιμάδι (M5)



Ⓖ Handles  
Griffe  
Рычаги  
Κλειδιά

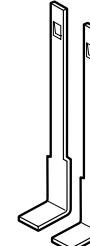

## INSTALLATION (IN-DASH MOUNTING)

The following illustration shows a typical installation. If you have any questions or require information regarding installation kits, consult your JVC IN-CAR ENTERTAINMENT dealer or a company supplying kits.

- If you are not sure how to install this unit correctly, have it installed by a qualified technician.

## EINBAU (IM ARMATURENBRETT)

Die folgende Abbildung zeigt einen typischen Einbau. Bei irgendwelchen Fragen oder wenn Sie Informationen hinsichtlich des Einbausatzes brauchen, wenden Sie sich an ihren JVC Autoradiohändler oder ein Unternehmen das diese Einbausätze vertreibt.

- Sind Sie sich über den richtigen Einbau des Geräts nicht sicher, lassen Sie es von einem qualifizierten Techniker einbauen.

## УСТАНОВКА (УСТАНОВКА В ПРИБОРНУЮ ПАНЕЛЬ)


На следующих иллюстрациях показана типовая установка. Если у Вас есть какие-либо вопросы, касающиеся установки, обратитесь к Вашему дилеру автомобильного специалиста JVC или в компанию, поставляющую соответствующие принадлежности.

- Если Вы не знаете точно, как следует устанавливать это устройство, обратитесь к квалифицированному специалисту.

## ΕΓΚΑΤΑΣΤΑΣΗ (ΤΟΠΟΘΕΤΗΣΗ ΣΤΟ ΤΑΜΠΛΩ)

Η εικόνα που ακολουθεί απεικονίζει μια τυπική εγκατάσταση. Για οποιαδήποτε απορία σας ή για περισσότερες πληροφορίες σχετικά με κιτ εγκατάστασης, απευθυνθείτε στον αντιπρόσωπο συστημάτων ψυχαγωγίας οχημάτων της JVC ή σε εταιρίες που παρέχουν τέτοια κιτ.

- Εάν έχετε αμφιβολίες σχετικά με τη σωστή εγκατάσταση της συσκευής αυτής, αναθέστε την εγκατάστασή της σε κατάλληλη εκπαιδευμένο τεχνικό.

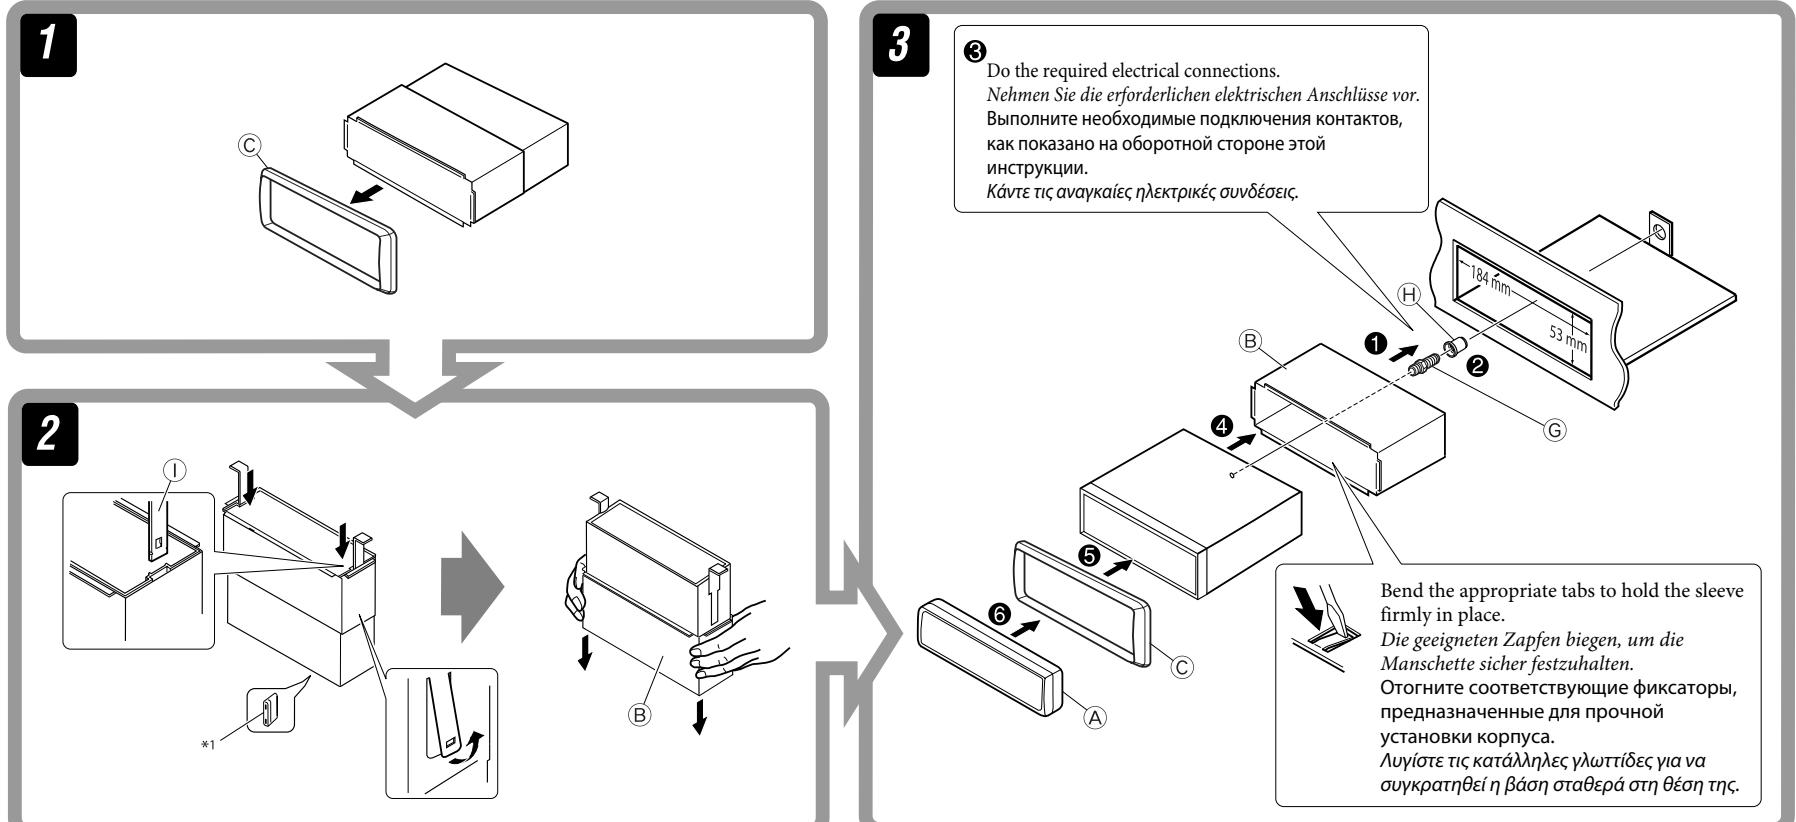

### Removing the unit

Before removing the unit, release the rear section.

### Ausbau des Geräts


Vor dem Ausbau des Geräts den hinteren Teil freigeben.

### Удаление устройства


Перед удалением устройства освободите заднюю часть.

### Αφαίρεση της συσκευής

Προτύ αφαίρεστε τη συσκευή, απασφαλίστε το πίσω μέρος.

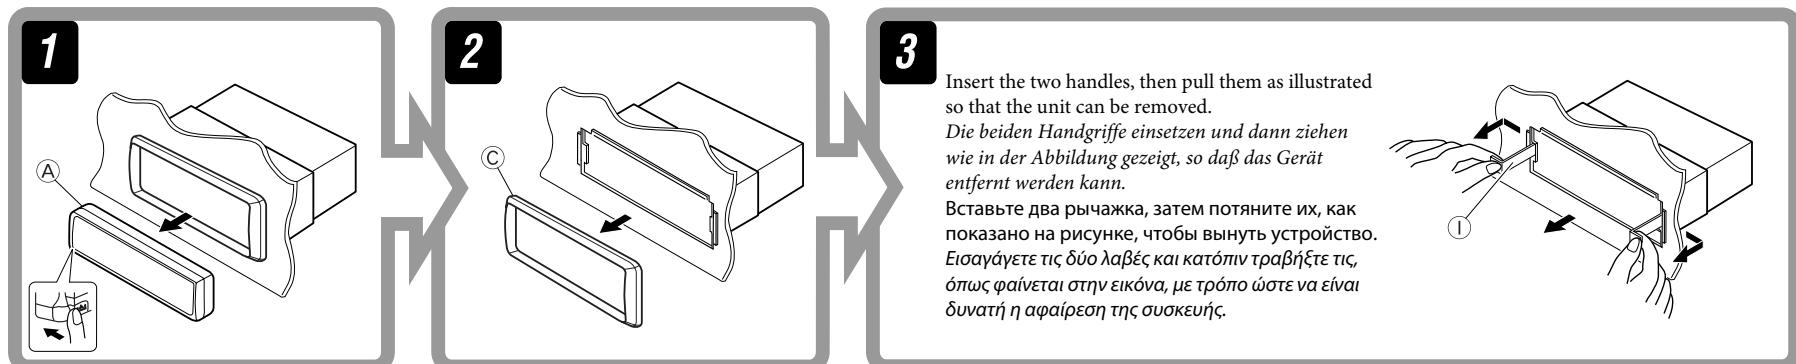

### When using the optional stay / Beim Verwenden der Anker-Option / При использовании дополнительной стойки / Όταν χρησιμοποιείτε το προαιρετικό στήριγμα

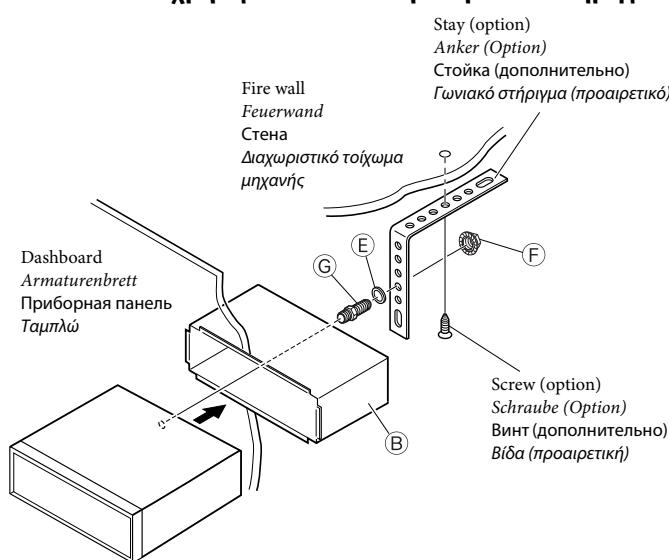


Install the unit at an angle of less than 30°.  
Stellen Sie das Gerät mit einem Winkel von weniger als 30° auf.  
Установите устройство под углом менее 30°.  
Τοποθετήστε τη μονάδα υπό γωνία μικρότερη των 30°.

### When installing the unit without using the sleeve / Beim Einbau des Geräts ohne Halterung / При установке устройства без использования муфты / Όταν τοποθετείτε τη συσκευή χωρίς χρήση της βάσης

In a Toyota car for example, first remove the car radio and install the unit in its place.  
Zum Beispiel in einem Toyota zuerst das Autoradio ausbauen und dann das Gerät an seinem Platz einbauen.  
В автомобиле Тойота, например, сначала извлеките автомобильный радиоприемник и установите устройство на место.  
Στα οχήματα της Toyota, για παράδειγμα, πρώτα πρέπει να αφαίρεστε το ραδιόφωνο και κατόπιν να τοποθετήσετε τη συσκευή στη θέση του.

Flat type screws (M5 × 8 mm)\*2  
Senkkopfschrauben (M5 × 8 mm)\*2  
Крепежные винты (M5 × 8 мм)\*2  
Πλακέ βίδες (M5 × 8 mm)\*2

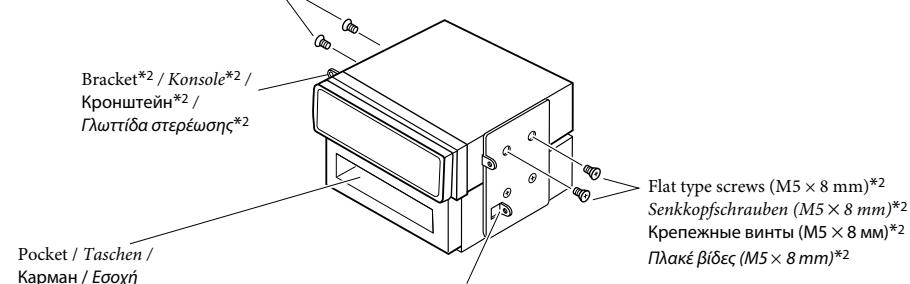

#### Note

When installing the unit on the mounting bracket, make sure to use the 8 mm-long screws. If longer screws are used, they could damage the unit.

#### Hinweis

Beim Anbringen des Geräts an der Konsole sicherstellen, daß 8 mm lange Schrauben verwendet werden. Werden längere Schrauben verwendet, können sie das Gerät beschädigen.

#### Примечание :

При установке устройства на крепежный кронштейн, используйте только винты длиной 8 мм.

#### Σημείωση

При использовании более длинных винтов можно повредить устройство.

Όταν τοποθετείτε τη συσκευή στο στήριγμα στερέωσης, βεβαιωθείτε ότι θα χρησιμοποιήσετε τις βίδες μήκους 8 mm. Εάν χρησιμοποιήσετε μακρύτερες βίδες, ενδέχεται να προκαλέσετε ζημιά στη συσκευή.

\*1 When you stand the unit, be careful not to damage the fuse on the rear.

\*2 Not supplied for this unit.

\*1 Beim Aufstellen des Geräts darauf achten, daß die Sicherung auf der Rückseite nicht beschädigt wird.

\*2 Wird nicht mit Gerät mitgeliefert.

\*1 Установливайте устройство таким образом, чтобы не повредить предохранитель, расположенный сзади.

\*2 Не входит в комплект поставки.

\*1 Όταν τοποθετείτε τη συσκευή σε όρθια θέση, προσέχετε να μην προκαλέσετε ζημιά στην ασφάλεια που βρίσκεται στο πίσω μέρος της συσκευής.

\*2 Δε συμπεριλαμβάνονται στη συσκευασία της συσκευής αυτής.


## ELECTRICAL CONNECTIONS

## ELEKTRISCHE ANSCHLÜSSE

## ЭЛЕКТРИЧЕСКИЕ ПОДКЛЮЧЕНИЯ ΗΛΕΚΤΡΙΚΕΣ ΣΥΝΔΕΣΕΙΣ

**A** If your car is equipped with the ISO connector / Wenn Ihr Fahrzeug mit dem ISO-Steckverbinder ausgestattet ist / Если автомобиль оснащен разъемом ISO / Εάν το όχημά σας διαθέτει σύνδεσμο ISO

- Connect the ISO connectors as illustrated.
- Schließen Sie die ISO-Steckverbinder an, wie in der Abbildung gezeigt.
- Подключите разъемы ISO, как показано на рисунке.
- Συνδέστε τους συνδέσμους ISO σύμφωνα με την εικόνα.

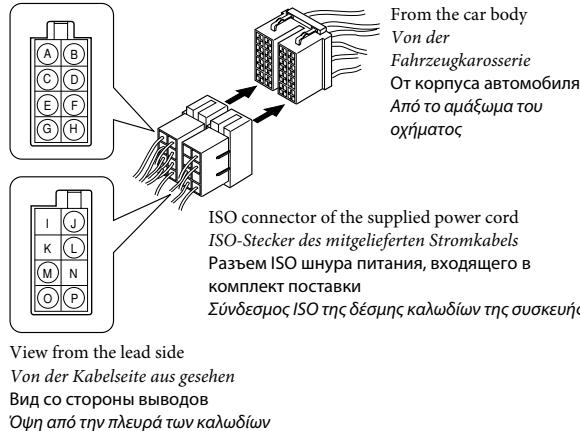


For some VW/Audi or Opel (Vauxhall) automobiles / Bei bestimmten VW-/Audi- oder Opel-(Vauxhall)-Fahrzeugen / Для некоторых автомобилей VW/Audi или Opel (Vauxhall) / Για ορισμένα αυτοκίνητα VW/Audi ή Opel (Vauxhall)


You may need to modify the wiring of the supplied power cord as illustrated.

- Contact your authorized car dealer before installing this unit.
- Es kann erforderlich sein, die Verdrahtung des mitgelieferten Stromkabels zu modifizieren, wie in der Abbildung gezeigt.
- Wenden Sie sich vor dem Einbau dieses Receivers an Ihre Auto-Fachwerkstatt.
- Возможно, потребуется изменить схему соединений для прилагаемого шнура питания, как показано на рисунке.
- Перед установкой приемника обратитесь к авторизованному агенту по продажам автомобильных систем.
- Ενδέχεται να χρειαστεί να τροποποιήσετε την καλωδίωση της παρεχόμενης δέσμης καλωδίων ρεύματος, σύμφωνα με την εικόνα.
- Προτού εγκαταστήσετε τη συσκευή αυτή, απευθυνθείτε στον εξουσιοδοτημένο αντιπρόσωπο του οχήματός σας.

Original wiring / Original verdrahtung / Исходная схема соединений / Αρχική καλωδίωση

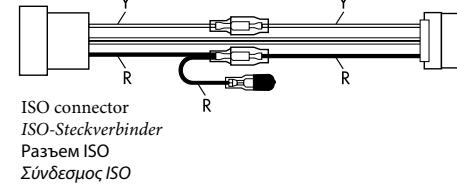


Modified wiring ① / Modifizierte Verdrahtung ① / Преобразованная схема соединений ① / Τροποποιημένη καλωδίωση ①

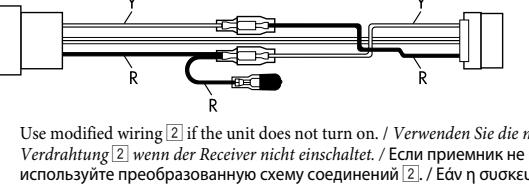

Use modified wiring ② if the unit does not turn on. / Verwenden Sie die modifizierte Verdrahtung ② wenn der Receiver nicht einschaltet. / Если приемник не включается, используйте преобразованную схему соединений ②. / Εάν η συσκευή δεν τίθεται σε λειτουργία, χρησιμοποιήστε την τροποποιημένη καλωδίωση ②.

Modified wiring ② / Modifizierte Verdrahtung ② / Преобразованная схема соединений ② / Τροποποιημένη καλωδίωση ②

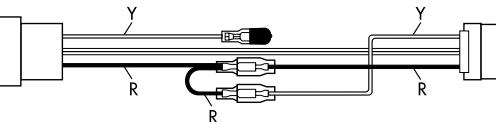

**B** Connections without using the ISO connector / Anschlüsse ohne Verwendung des ISO-Steckverbinder / Подключение без использования разъема ISO / Συνδέσεις χωρίς τη χρήση των συνδέσμων ISO

**Before connecting:** Check the wiring in the vehicle carefully. Incorrect connection may cause serious damage to this unit.

The leads of the power cord and those of the connector from the car body may be different in color.

- Cut the ISO connector.
- Connect the colored leads of the power cord in the order specified in the illustration below.
- Connect the aerial cord.
- Finally connect the wiring harness to the unit.

**Vor dem Anschließen:** Die Verdrahtung im Fahrzeug sorgfältig überprüfen. Falsche Anschlüsse können ernsthafte Schäden am Gerät hervorrufen.

Die Leiter des Stromkabels und die Leiter des Anschlusses im Fahrzeug können sich farblich unterscheiden.

- Schneiden Sie den ISO-Steckverbinder auf.
- Die farbigen Adern des Stromkabels in der Reihenfolge anschließen, wie in der Abbildung unten gezeigt.
- Das Antennenkabel anschließen.
- Die Kabelbäume am Gerät anschließen.


**Перед началом подключения:** Тщательно проверьте проводку в автомобиле. Неправильное подключение может привести к серьезному повреждению устройства.

Жилы силового кабеля и жилы соединителя от кузова автомобиля могут быть разного цвета.

- Обрежьте разъем ISO.
- Подсоедините цветные провода шнура питания в указанном ниже порядке.
- Подключите кабель антенны.
- В последнюю очередь подключите электропроводку к устройству.

**Πριν από τη σύνδεση:** Ελέγχετε προσεκτικά την καλωδίωση του οχήματος. Η τυχόν εσφαλμένη σύνδεση είναι δυνατό να προκαλέσει σοβαρή ζημιά στη συσκευή. Τα καλώδια της δέσμης καλωδίων ρεύματος της συσκευής ενδέχεται να μην έχουν το ίδιο χρώμα με τα καλώδια του συνδέσμου του οχήματος.

- Κόψτε τον συνδετήρα ISO.
- Συνδέστε τα χρωματιστά καλώδια της δέσμης καλωδίων ρεύματος, με τη σειρά που καθορίζεται στην εικόνα ανωτέρω.
- Συνδέστε το ομαδονικό καλώδιο της κεραίας.
- Τέλος, συνδέστε το βύσμα της δέσμης καλωδίων ρεύματος στη συσκευή.

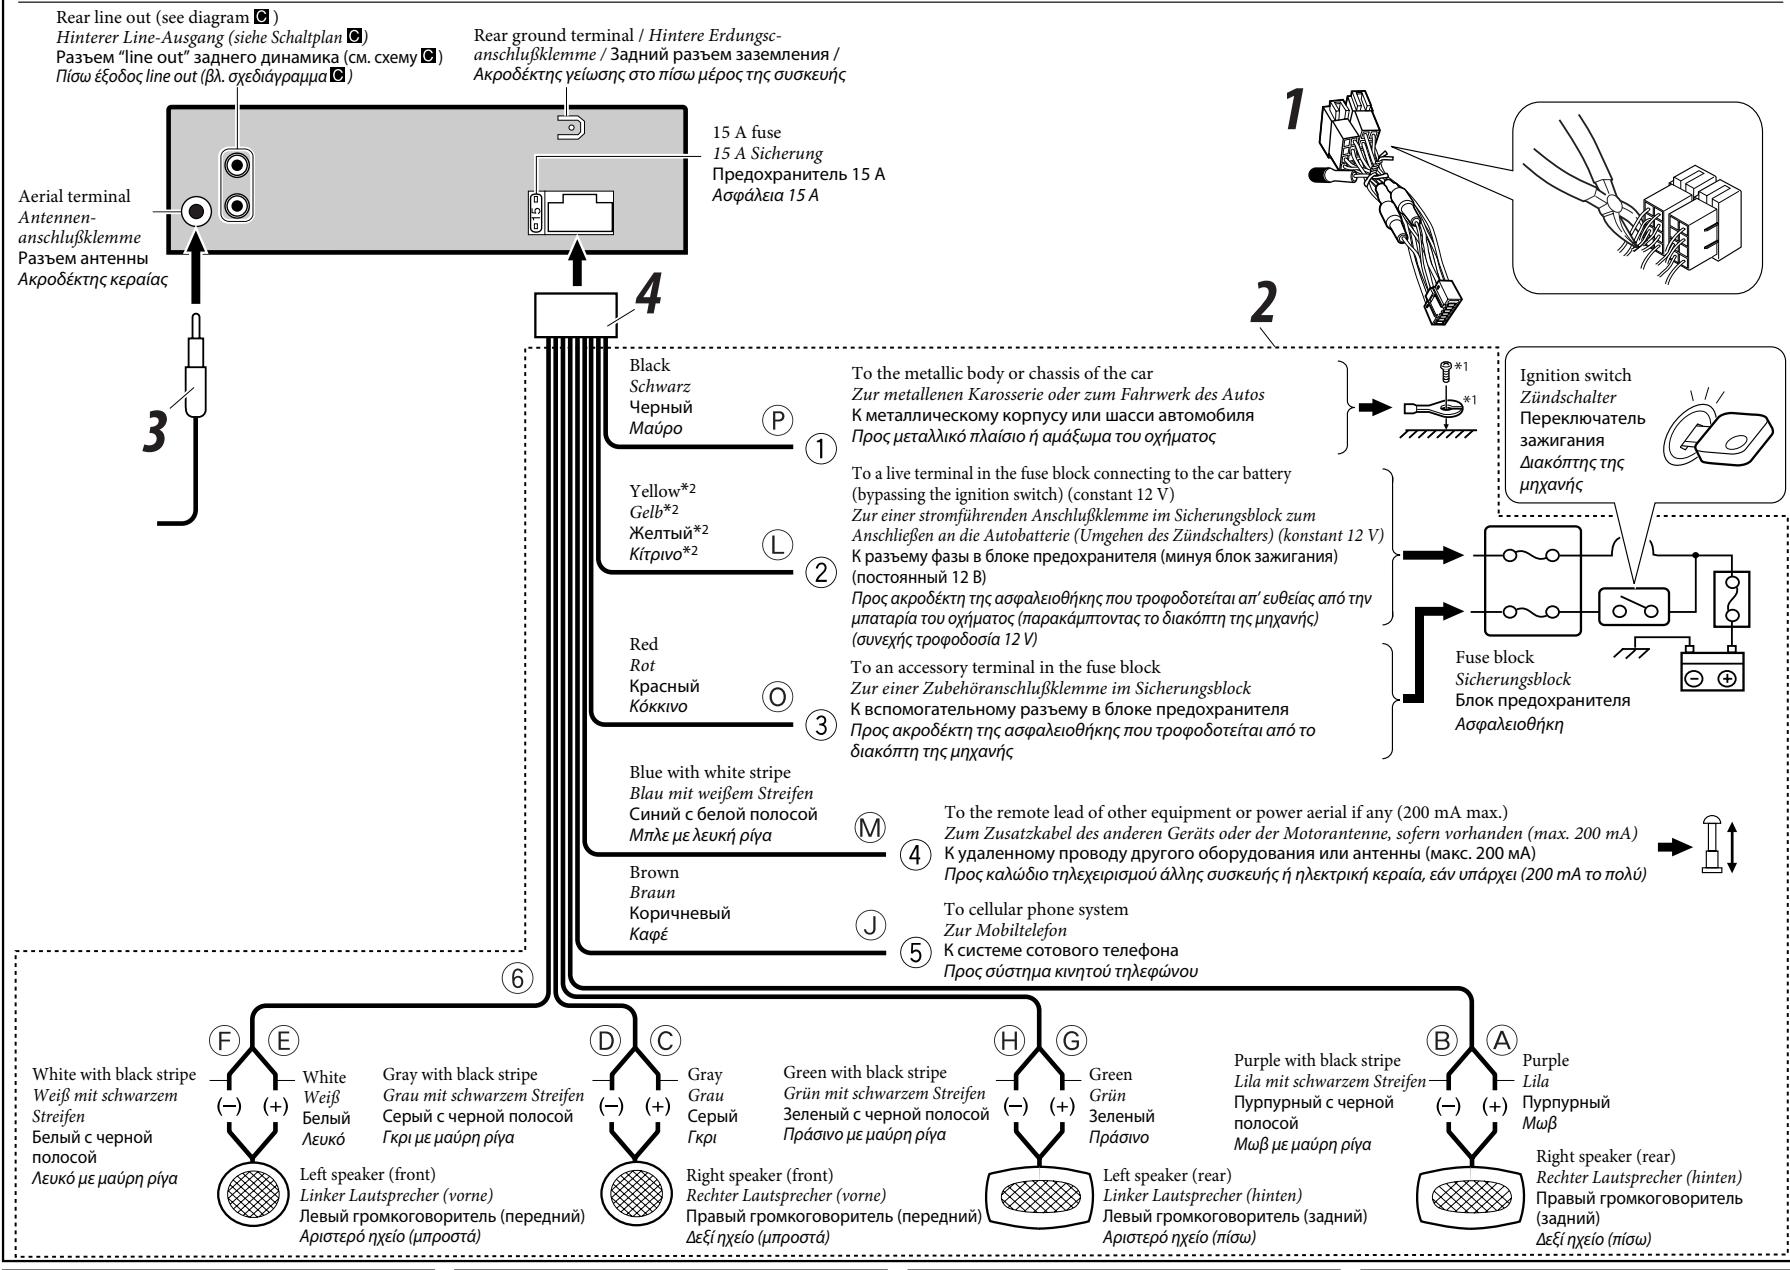

\*1 Not supplied for this unit.

\*2 Before checking the operation of this unit prior to installation, this lead must be connected; otherwise, the power cannot be turned on.

\*1 Wird nicht mit Gerät geliefert.

\*2 Vor der Überprüfung der Funktionsfähigkeit des Geräts vor dem Einbau, muss diese Leitung angeschlossen werden, da sonst die Stromversorgung nicht eingeschaltet werden kann.

\*1 Не входит в комплект поставки.

\*2 Перед проверкой работы устройства подключите этот провод, иначе питание не включится.

\*1 Δε συμπεριλαμβάνονται στη συσκευασία της συσκευής αυτής.

\*2 Προτού ελέγχετε τη λειτουργία της συσκευής, πριν από την εγκατάστασή της, θα πρέπει να συνδέσετε το καλώδιο αυτό, διαφορετικά η συσκευή δε θα τεθεί σε λειτουργία.

## C Connecting the external amplifier or subwoofer / Anschließen des externen Verstärkers oder Subwoofers / Подключение внешнего усилителя или низкочастотного динамика / Σύνδεση του εξωτερικού ενισχυτή ή υπογούφερ

You can connect an amplifier to upgrade your car stereo system.

- Connect the remote lead (blue with white stripe) to the remote lead of the other equipment so that it can be controlled through this unit.
- **Disconnect the speakers from this unit, connect them to the amplifier. Leave the speaker leads of this unit unused.**

Sie können einen Verstärker anschließen, um Ihre Autostereoanlage zu erweitern.

- Schließen Sie das Fernbedienungskabel (blau mit weißem Streifen) an das Fernbedienungskabel des anderen Geräts an, so dass es über dieses Gerät gesteuert werden kann.
- **Die Lautsprecher von diesem Gerät abtrennen und am Verstärker anschließen. Die Lautsprecherleitungen dieses Geräts unbenutzt lassen.**

Можно подключить усилитель для обновления автомобильной стереосистемы.

- Подсоедините провод внешнего устройства (синий с белой полосой) к проводу внешнего устройства другого оборудования так, чтобы им можно было управлять с этого устройства.
- **Отсоедините громкоговорители от данного устройства, подключите их к усилителю. Оставьте провода громкоговорителей данного устройства неиспользованными.**


Μπορείτε να συνδέσετε έναν ενισχυτή για να αναβαθμίσετε το στερεοφωνικό σύστημα του αυτοκινήτου σας.

- Συνδέστε το καλώδιο τηλεχειρισμού (μπλε με λευκή ρίγα) με το καλώδιο τηλεχειρισμού της άλλης συσκευής, για να μπορείτε να ελέγχετε τη δεύτερη μέσω της πρώτης.
- **Αποσυνδέστε τη ηχεία από τη συσκευή αυτή και συνδέστε τα με τον ενισχυτή. Αφήστε τα καλώδια ηχείων της συσκευής αυτής ασύνδετα.**

**Set "L/O MODE" to "REAR"**  
(See page 18 of the INSTRUCTIONS.)  
Stellen Sie „L/O MODE“ auf „REAR“ (siehe Seite 18 der BEDIENUNGSANLEITUNG).

Для параметра "L/O MODE" установите значение "REAR" (см. ИНСТРУКЦИИ ПО ЭКСПЛУАТАЦИИ на стр. 18).


Руθμίστε το "L/O MODE" (Κατάσταση λειτουργίας εξόδου Line) στο "REAR" (Απολαβή ενισχυτή) για να αποτρέψετε ενδεχόμενη καταστροφή τους (βλ. σελίδα 18 στις ΟΔΗΓΙΕΣ.)

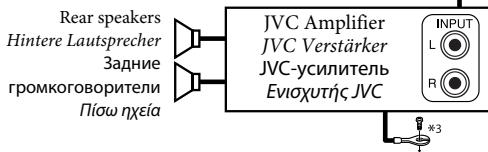

**Set "L/O MODE" to "SUB.W"**  
(See page 18 of the INSTRUCTIONS.)  
Stellen Sie „L/O MODE“ auf „SUB.W“ (siehe Seite 18 der BEDIENUNGSANLEITUNG).

Для параметра "L/O MODE" установите значение "SUB.W" (см. ИНСТРУКЦИИ ПО ЭКСПЛУАТАЦИИ на стр. 18).


Руθμίστε το "L/O MODE" (Κατάσταση λειτουργίας εξόδου Line) στο "SUB.W" (Гούφερ) (Απολαβή ενισχυτή) για να αποτρέψετε ενδεχόμενη καταστροφή τους (βλ. σελίδα 18 στις ΟΔΗΓΙΕΣ.)

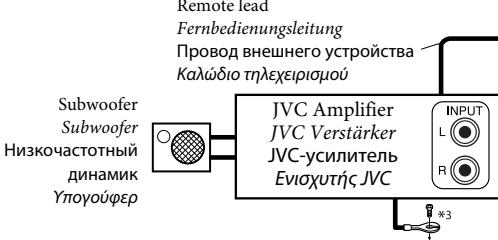

Signal cord (not supplied for this unit)  
Einzelleitung (wird nicht mit Gerät mitgeliefert)  
Кабель сигнала (не входит в комплект поставки)  
Καλώδιο σήματος (δε συμπεριλαμβάνονται στη συσκευασία της συσκευής αυτής)

To the remote lead of other equipment or power aerial if any  
Zum Zusatzkabel des anderen Geräts oder der Motorantenne, sofern vorhanden  
К удаленному проводу другого оборудования или антенны  
Προς καλώδιο τηλεχειρισμού άλλης συσκευής ή λεκτρική κεραία, εάν υπάρχει

KD-R501/KD-R402/KD-R401

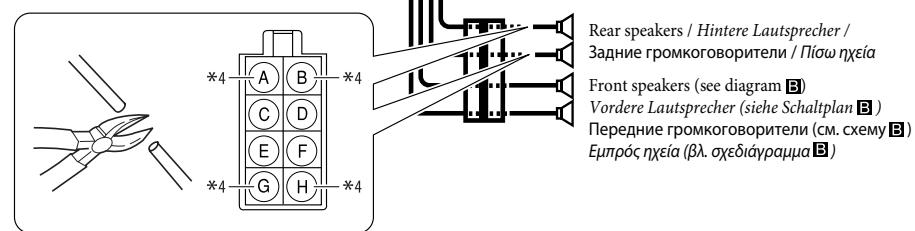

\*3 Firmly attach the ground wire to the metallic body or to the chassis of the car—to the place uncoated with paint (if coated with paint, remove the paint before attaching the wire). Failure to do so may cause damage to the unit.

\*4 Cut the rear speaker leads of the car's ISO connector and connect them to the amplifier.

\*3 Verbinden Sie den Erdungsleiter mit der Karosserie oder dem Rahmen des Fahrzeugs. Die Kontaktstelle darf nicht lackiert sein (sollte die Kontaktstelle lackiert sein, entfernen Sie den Lack der Kontaktstelle, bevor Sie den Leiter befestigen). Wenn der Erdungsleiter nicht ordnungsgemäß angeschlossen wird, kann dieses Gerät beschädigt werden.

\*4 Schneiden Sie die hinteren Lautsprecherkabel des ISO-Steckverbinder des Fahrzeugs ab, und schließen diese an den Verstärker an.

\*3 Плотно прикрепите заземляющий провод к металлическому кузову или шасси автомобиля—в месте, не покрытом краской (если оно покрыто краской, удалите краску перед тем, как прикреплять провод). Невыполнение этого требования может привести к повреждению данного устройства.

\*4 Отрежьте провода задних громкоговорителей разъема ISO и подсоедините их к усилителю.

\*3 Στερεώστε γερά το καλώδιο γείωσης στο μεταλλικό πλαίσιο ή το αμάξωμα του οχήματος σημείο που δεν είναι βαμμένο (σε αντίθετη περίπτωση, ένστε τη βαφή προτού συνδέσετε το καλώδιο). Αν δεν το κάνετε αυτό, είναι δύνατο να προκληθεί ζημιά στη συσκευή.

\*4 Κόψτε τα καλώδια των πίσω ηχείων από το σύνδεσμο ISO του οχήματος και συνδέστε τα στον ενισχυτή.

## TROUBLESHOOTING

- **The fuse blows.**  
\* Are the red and black leads connected correctly?
- **Power cannot be turned on.**  
\* Is the yellow lead connected?
- **No sound from the speakers.**  
\* Is the speaker output lead short-circuited?
- **Sound is distorted.**  
\* Is the speaker output lead grounded?
- **Noise interfere with sounds.**  
\* Is the rear ground terminal connected to the car's chassis using shorter and thicker cords?
- **This unit becomes hot.**  
\* Is the speaker output lead grounded?
- **Are the “-” terminals of L and R speakers grounded in common?**
- **This unit does not work at all.**  
\* Have you reset your unit?

## FEHLERSUCHE

- **Die Sicherung brennt durch.**  
\* Sind die roten und schwarzen Leitungen richtig angeschlossen?
- **Stromversorgung kann nicht eingeschaltet werden.**  
\* Ist die gelbe Leitung angeschlossen?
- **Kein Ton aus den Lautsprechern.**  
\* Ist die Lautsprecherausgangsleitung kurzgeschlossen?
- **Ton verzerrt.**  
\* Ist die Lautsprecherausgangsleitung geerdet?
- **Störgeräusche im Klang.**  
\* Ist die hintere Erdungsklemme mit kürzeren und dickeren Kabeln an das Fahrzeugchassis angeschlossen?
- **Gerät wird heiß.**  
\* Ist die Lautsprecherausgangsleitung geerdet?
- **Dieser Receiver funktioniert überhaupt nicht.**  
\* Haben Sie einen Reset am Receiver vorgenommen?

## ВЫЯВЛЕНИЕ НЕИСПРАВНОСТЕЙ

- **Сработал предохранитель.**  
\* Правильно ли подключены черный и красный провода?
- **Питание не включается.**  
\* Подключен ли желтый провод?
- **Звук не выводится через громкоговорители.**  
\* Нет ли короткого замыкания на кабеле выхода громкоговорителей?
- **Звук искажен.**  
\* Заземлен ли провод выхода громкоговорителей?
- **Заземлены ли разъемы “-” правого (R) и левого (L) громкоговорителей?**
- **Шум мешает звучанию.**  
\* Соединен ли находящийся сзади зажим заземления с шасси автомобиля с помощью более короткого и тонкого шнуров?
- **Устройство нагревается.**  
\* Заземлен ли провод выхода громкоговорителей?
- **Заземлены ли разъемы “-” правого (R) и левого (L) громкоговорителей?**
- **Приемник не работает.**  
\* Выполнена ли перенастройка приемника?

## ANTIMΕΤΩΠΙΣΗ ΠΡΟΒΛΗΜΑΤΩΝ


- **Η ασφάλεια καίγεται.**  
\* Είναι το κόκκινο και το μαύρο καλώδιο σωστά συνδεδέμένα;
- **Η συσκευή δεν τίθεται σε λειτουργία.**  
\* Είναι το κίτρινο καλώδιο συνδεδέμενό;
- **Δεν παράγεται ήχος στα ηχεία.**  
\* Μήπως το καλώδιο εξόδου προς τα ηχεία είναι βραχικυκλωμένο;
- **Ο ήχος παράγεται με παραμόρφωση.**  
\* Μήπως το καλώδιο εξόδου προς τα ηχεία είναι γειωμένο;
- **Ο ήχος παράγεται παρεμβολές στους παραγόμενους ήχους.**  
\* Είναι ο πίσω ακροδέκτης γείωσης συνδεδέμενός με το αμάξωμα του αυτοκινήτου με κοντύτερο και παχύτερο καλώδιο;
- **Η συσκευή ζεσταίνεται πολύ.**  
\* Μήπως το καλώδιο εξόδου προς τα ηχεία είναι γειωμένο;
- **Ο δέκτης αυτός δεν λειτουργεί καθόλου.**  
\* Έχετε επαναφέρει το δέκτη;

# JVC

## CD RECEIVER

РЕСИВЕР С ПРОИГРЫВАТЕЛЕМ КОМПАКТ-ДИСКОВ  
ПРИЙМАЧ З ПРОГРАВАЧЕМ КОМПАКТ-ДИСКІВ

## KD-R407

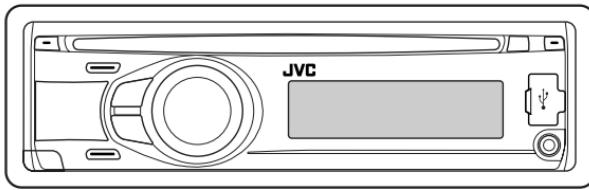

**Radio Data System**

COMPACT  
disc  
DIGITAL AUDIO  
TEXT

MP3  
WMA

В соответствии с Законом Российской Федерации "О защите прав потребителей" срок службы (годности) данного товара "по истечении которого он может представлять опасность для жизни, здоровья потребителя, причинять вред его имуществу или окружающей среде" составляет семь (7) лет со дня производства. Этот срок является временем, в течение которого потребитель данного товара может безопасно им пользоваться при условии соблюдения инструкции по эксплуатации данного товара, проводя необходимое обслуживание, включающее замену расходных материалов и/или соответствующее ремонтное обеспечение в специализированном сервисном центре.

Дополнительные косметические материалы к данному товару, поставляемые вместе с ним, могут храниться в течение двух (2) лет со дня его производства.

Срок службы (годности), кроме срока хранения дополнительных косметических материалов, упомянутых в предыдущих двух пунктах, не затрагивает никаких других прав потребителя, в частности, гарантийного свидетельства JVC, которое он может получить в соответствии с законом о правах потребителя или других законов, связанных с ним.

For canceling the display demonstration, see page 6.

Информацию об отмене демонстрации функций дисплея см. на стр. 6.

Інформацію щодо відміни демонстрації функцій дисплею див. на стор. 6.

For installation and connections, refer to the separate manual.

Указания по установке и выполнению соединений приводятся в отдельной инструкции.

Вказівки по встановленню та виконанню підключені наведені у окремій інструкції.

## **INSTRUCTIONS**

ИНСТРУКЦИИ ПО ЭКСПЛУАТАЦИИ  
ІНСТРУКЦІЇ



GET0575-001A  
[EE]

ENGLISH

РУССКИЙ

УКРАЇНА

Thank you for purchasing a JVC product.

Please read all instructions carefully before operation, to ensure your complete understanding and to obtain the best possible performance from the unit.

## **IMPORTANT FOR LASER PRODUCTS**

1. CLASS 1 LASER PRODUCT
2. CAUTION: Do not open the top cover. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel.
3. CAUTION: Visible and/or invisible class 1M laser radiation when open. Do not view directly with optical instruments.
4. REPRODUCTION OF LABEL: CAUTION LABEL, PLACED OUTSIDE THE UNIT.

<b>CAUTION</b> VISIBLE AND/OR INVISIBLE CLASS 1M LASER RADIATION WHEN OPEN. DO NOT VIEW DIRECTLY WITH OPTICAL INSTRUMENTS IEC60825-1:2001 (ENG)	<b>ATTENTION</b> RAYONNEMENT LASER VISIBLE ET OU INVISIBLE DE CLASSE 1M UNE FOIS OUVERT. NE PAS REGARDER DIRECTEMENT AVEC DES INSTRUMENTS OPTIQUES. (FRA)	<b>AVISO</b> RADIANTE LASER VISIBLE Y/O INVISIBLE DE CLASE 1M CUANDO ESTA ABIERTO, NO MIRE DIRECTAMENTE CON INSTRUMENTO OPTICO. (ESP)	<b>WARNING</b> SYNLIG OCH ELLER INVISIBLE VIO INVISIBLE KLASS 1M, NAR DENNA DEL AR ÖPPNAD. BETRÄKTA EJ STRÅLEN MED OPTISKA INSTRUMENT. (SWE)	<b>注意</b> ここに表示する可視 不可視のレーザー光子の出 力がクラス1Mです。 開いたままでは、レーザー光 子が直接見えて危険 です。光学機器で直接 見ないでください。 (JPN)	<b>CAUTION</b> VISIBLE AND/OR INVISIBLE CLASS II LASER RADIATION WHEN OPEN. DO NOT STARE INTO BEAM. FDA 21 CFR (ENG)
---	--	--	---	--	--



[European Union only]

## **Available characters on the display**

- Available characters
- Display indications

А	Б	В	Г	Д	Е	Ж	З	И	Й	К	Л	М
А	Б	В	Г	Д	Е	Ж	З	И	Й	К	Л	М
Н	О	П	Р	С	Т	У	Ф	Х	Ц	Ч	Ш	Щ
Н	О	П	Р	С	Т	У	Ф	Х	Ц	Ч	Ш	Щ
ъ	ы	ъ	ы	ъ	ъ	ъ	ъ	ъ	ъ	ъ	ъ	ъ
ъ	ы	ъ	ы	ъ	ъ	ъ	ъ	ъ	ъ	ъ	ъ	ъ
Г	Н	І	Ј	К	Л	М	Н	О	Р	Q	Р	С
Г	Н	І	Ј	К	Л	М	Н	О	Р	Q	Р	С
Т	У	В	W	Х	Y	Z	0	1	2	3	4	5
Т	У	В	W	Х	Y	Z	0	1	2	3	4	5
6	7	8	9	-	/	<	>	space				
6	7	8	9	-	/	{	}					

## **Warning:**

If you need to operate the unit while driving, be sure to look around carefully or you may be involved in a traffic accident.

## **Caution on volume setting:**

Digital devices (CD/USB) produce very little noise compared with other sources. Lower the volume before playing these digital sources to avoid damaging the speakers by sudden increase of the output level.


## **For safety...**

- Do not raise the volume level too much, as this will block outside sounds, making driving dangerous.
- Stop the car before performing any complicated operations.


## **Temperature inside the car...**

If you have parked the car for a long time in hot or cold weather, wait until the temperature in the car becomes normal before operating the unit.


## ■ Detaching the control panel

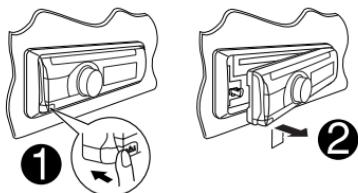

## ■ Attaching the control panel

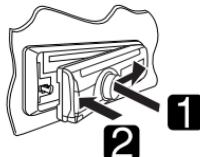

## ■ How to reset your unit

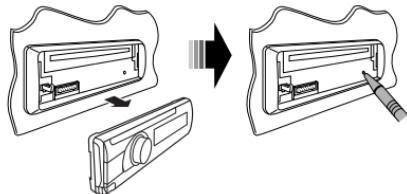

- Your preset adjustments will also be erased.

## ■ How to forcibly eject a disc



- You can forcibly eject the loaded disc even if the disc is locked. To lock/unlock the disc, see page 10.
- Be careful not to drop the disc when it ejects.
- If this does not work, reset your unit.

**This mark is used to indicate...**



Turn the control dial to make a selection, then press to confirm the selection.

# CONTENTS

Detaching the control panel.....	3
Attaching the control panel.....	3
How to reset your unit .....	3
How to forcibly eject a disc.....	3

## OPERATIONS

Basic operations.....	4
Preparation.....	6
Listening to the radio.....	7
Disc operations.....	10
Listening to the USB device.....	11

## EXTERNAL DEVICES

Listening to the other external components.....	12
---	----


## SETTINGS

Selecting a preset sound mode .....	13
Menu operations.....	15

## REFERENCES

More about this unit .....	18
Troubleshooting.....	21
Maintenance .....	23
Specifications.....	24

# Basic operations

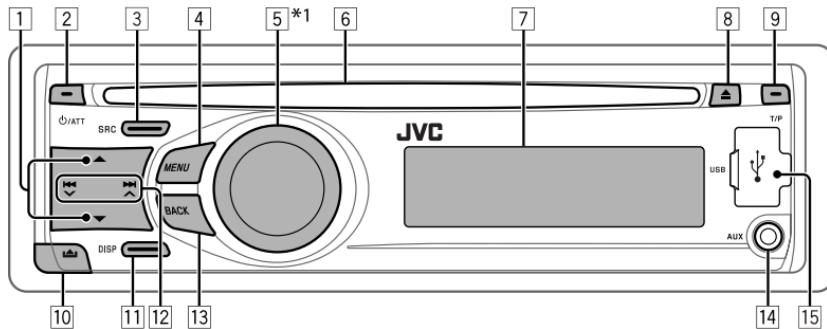

- [1]** • **FM/AM:** Select preset station.  
• **CD/USB:** Select folder.
- [2]** • Turn on the power.  
• Attenuate the sound (if the power is on).  
• Turn off the power [Hold].
- [3]** Select the source.  
**FM → CD\*2 → USB → AUX IN\*3 → AM\*3 → FM-LO** → (back to the beginning)
- [4]** • Enter list operations.  
• Enter Menu setting [Hold].
- [5]** • Control the volume\*4 or select items [Turn].  
• Confirm the selection [Press].  
• **FM:** Enter SSM preset mode [Hold].  
• **CD/USB:** Enter playback mode [Hold].  
    Pause/resume playback\*4 [Press].
- [6]** Loading slot
- [7]** Display window
- [8]** Eject disc.
- [9]** • Activate/deactivate TA Standby Reception.  
• Enter PTY Searching mode [Hold].

- [10]** Detach the panel.
- [11]** Change the display information.
- [12]** • **FM/AM:** Search for station.  
• **CD/USB:** Select track.
- [13]** Return to the previous menu.
- [14]** AUX (auxiliary) input jack
- [15]** USB (Universal Serial Bus) input jack

\*1 Also known as "Control dial" in this manual.


\*2 You cannot select "CD" as the playback source if no disc is in the unit.

\*3 You cannot select these sources if they were disabled in the Menu (see "SRC SELECT" in "Menu operations" on page 17).

\*4 You can still adjust the volume during pause when the selected source is CD/USB.

Before resume playback, check to be sure that you have not raise the volume level too much.

## Display window

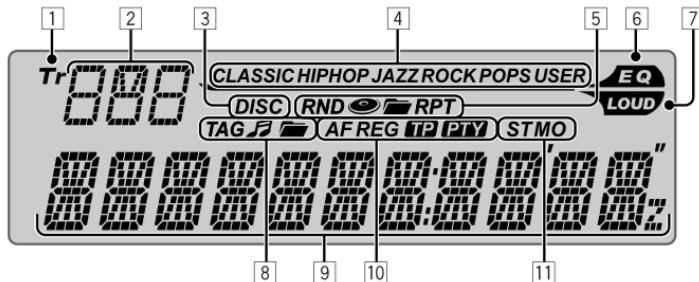

# Preparation

## ■ Canceling the display demonstration and setting the clock

- See also page 15.

<b>1</b> 	<b>Turn on the power.</b>
<b>2</b>  [Hold] Press and hold until the main menu is called up.  [Turn] → [Press] • Repeat this procedure.	<b>Cancel the display demonstrations</b> Select “DEMO,” then “DEMO OFF.”  <b>Set the clock</b> Select “CLOCK” → “CLOCK SET.” Adjust the hour, then press control dial once to proceed to adjust the minute. Select “24H/12H,” then “24 HOUR” or “12 HOUR.”  • To return to the previous menu, press BACK.

## Changing the display information



When the power is turned off: The current clock time is displayed if “CLOCK DISP” is set to “CLOCK OFF,” (see page 15).

When the power is turned on: The display information of the current source changes as follows:

<b>FM/AM:</b>	Station Frequency → Clock → (back to the beginning)
<b>FM Radio Data System:</b>	Station name (PS) → Station Frequency → Programme type (PTY) → Clock → (back to the beginning)
<b>CD:</b>	Audio CD/CD Text: Disc title/performer* <sup>1</sup> → Track title* <sup>1</sup> → Current track number with the elapsed playing time → Current track number with the clock time → (back to the beginning)
<b>CD/USB:</b>	MP3/WMA: Album name/performer (folder name)* <sup>2</sup> → Track title (file name)* <sup>2</sup> → Current track number with the elapsed playing time → Current track number with the clock time → (back to the beginning)

\*<sup>1</sup> If the current disc is an audio CD, “NO NAME” appears.

\*<sup>2</sup> If an MP3/WMA file does not have Tag information or “TAG DISPLAY” is set to “TAG OFF” (see page 15), folder name and file name appear.


# Listening to the radio

1		<b>Select “FM,” “AM,” or “FM-LO.”</b>
2		<b>Search for a station to listen—Auto Search.</b> When a station is tuned in, searching stops. To stop searching, press the same button again. <ul style="list-style-type: none"> <li>• You can also search for a station manually—Manual Search. Hold either one of the buttons until “M” flashes on the display, then press it repeatedly.</li> <li>• When receiving an FM stereo broadcast with sufficient signal strength, the ST indicator lights up on the display.</li> </ul> <p><b>Note:</b></p> <p>FM: 87.5 MHz – 108.0 MHz  FM-LO: 65.00 MHz – 74.00 MHz</p>

## Improving the FM reception

When an FM stereo broadcast is hard to receive, activate monaural mode for better reception.

- See also page 16.

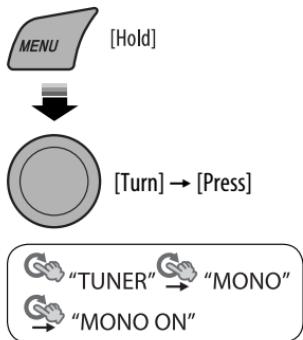

Reception improves, but stereo effect will be lost.

- The MO indicator lights up on the display.

**To restore the stereo effect,** repeat the same procedure to select “MONO OFF.” The MO indicator goes off.

## Storing stations in memory

### Automatic presetting (FM/FM-LO)—

### SSM (Strong-station Sequential Memory)

You can preset up to 12 stations for FM, and 6 stations for FM-LO.

#### 1 While listening to a station...



#### 2 Select the preset number range you want to store.



FM:  
**SSM 01–06, SSM 07–12**  
FM-LO:  
**SSM 01–06**

#### 3



Local FM stations with the strongest signals are searched and stored automatically.

- To stop searching, press  $\blacktriangleleft\blacktriangleright\blacktriangledown\blacktriangleright\blacktriangleleft$ .

**To preset other 6 stations,** repeat from step 1 again.

*Continued on the next page*

## Manual presetting (FM/AM)

You can preset up to 12 stations for FM, 6 stations for FM-LO, and 6 stations for AM.

Ex.: Storing FM station of 92.50 MHz into preset number "04."

1




**92.50MHz**

2 Select preset number "04."




3

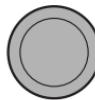


**P04**  
**MEMORY**

## Selecting preset station

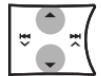

or

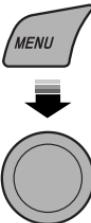

[Turn] → [Press]

The following features are available only for FM Radio Data System stations.

## Searching for FM Radio Data System programme—PTY Search

You can tune in to a station broadcasting your favorite programme by searching for a PTY code.

1



The last selected PTY code appears.

2 Select one of your favorite programme types or a PTY code.



3 Start searching for your favorite programme.



If a station is broadcasting a programme of the same PTY code as you have selected, that station is tuned in.

## Using the standby receptions

### TA Standby Reception

TA Standby Reception allows the unit to switch temporarily to Traffic Announcement (TA) from any source other than AM and FM-LO.

The volume changes to the preset TA volume level if the current level is lower than the preset level (see page 16).

## To activate TA Standby Reception



The TP (Traffic Programme) indicator either lights up or flashes.

- If the TP indicator lights up, TA Standby Reception is activated.
- If the TP indicator flashes, TA Standby Reception is not yet activated. (This occurs when you are listening to an FM station without the Radio Data System signals required for TA Standby Reception.)

To activate the reception, tune in to another station providing these signals. The TP indicator will stop flashing and remain lit.

## To deactivate the TA Standby Reception



The TP indicator goes off.

## PTY Standby Reception

PTY Standby Reception allows the unit to switch temporarily to your favorite PTY programme from any source other than AM and FM-LO.

### To activate and select your favorite PTY code for PTY Standby Reception, see page 16.

The PTY indicator either lights up or flashes.


- If the PTY indicator lights up, PTY Standby Reception is activated.
- If the PTY indicator flashes, PTY Standby Reception is not yet activated.

To activate the reception, tune in to another station providing these signals. The PTY indicator will stop flashing and remain lit.

## To deactivate the PTY Standby Reception, select "PTY OFF" for the PTY code (see page 16). The PTY indicator goes off.

## ■ Tracing the same programme—Network-Tracking Reception

When driving in an area where FM reception is not sufficient enough, this unit automatically tunes in to another FM Radio Data System station of the same network, possibly broadcasting the same programme with stronger signals (see the illustration below).

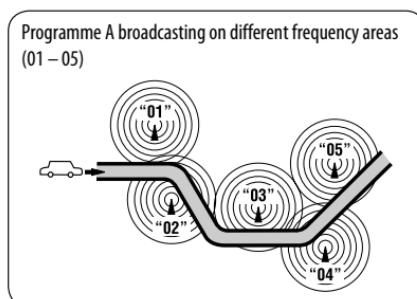

When shipped from the factory, Network-Tracking Reception is activated.

**To change the Network-Tracking Reception setting**, see "AF-REG" on page 16.

## ■ Automatic station selection—Programme Search

Usually when you select a preset number, the station preset in that number is tuned in.


If the signals from the FM Radio Data System preset station are not sufficient for good reception, this unit, using the AF data, tunes in to another frequency possibly broadcasting the same programme as the original preset station is broadcasting.

- The unit takes some time to tune in to another station using programme search.
- See also page 16.

## PTY codes

NEWS, AFFAIRS, INFO, SPORT, EDUCATE, DRAMA, CULTURE, SCIENCE, VARIED, POP M (music), ROCK M (music), EASY M (music), LIGHT M (music), CLASSICS, OTHER M (music), WEATHER, FINANCE, CHILDREN, SOCIAL, RELIGION, PHONE IN, TRAVEL, LEISURE, JAZZ, COUNTRY, NATION M (music), OLDIES, FOLK M (music), DOCUMENT

# Disc operations
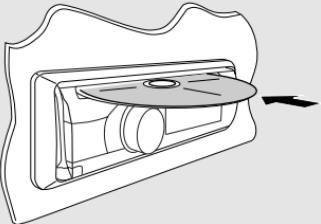
<b>1</b>  <b>2</b> 	<p><b>Turn on the power.</b></p> <p><b>Insert a disc.</b> All tracks will be played repeatedly until you change the source or eject the disc.</p>
--	---

## Stop playing and ejecting the disc




- “NO DISC” appears. Press SRC to listen to another playback source.

## Prohibiting disc ejection



To cancel the prohibition, repeat the same procedure.

## Selecting a track/folder

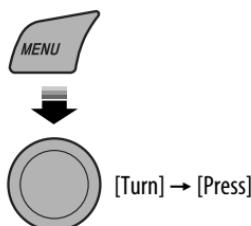

- For MP3/WMA discs, select the desired folder, then the desired track by repeating the control dial procedures.
- To return to the previous menu, press BACK.

Pressing (or holding) the following buttons allows you to...



[Press]Pause/resume playback



MP3/WMA: Select folder




[Press]Select track  
[Hold] Reverse/fast-forward track

## Selecting the playback modes


You can use only one of the following playback modes at a time.

**1**

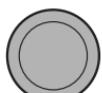

[Hold]


**2**

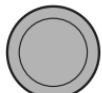

[Turn] → [Press]

**REPEAT ↔ RANDOM**

3

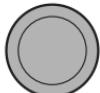

[Turn] → [Press]

- To cancel repeat play or random play, select “RPT OFF” or “RND OFF.”
- To return to the previous menu, press BACK.



ENGLISH

**REPEAT****TRACK RPT** : Repeats current track**FOLDER RPT** : MP3/WMA: Repeats current folder**RANDOM****FOLDER RND** : MP3/WMA: Randomly plays all tracks of current folder, then tracks of next folders**ALL RND** : Randomly plays all tracks

## Listening to the USB device

This unit can play MP3/WMA tracks stored in a USB device.

All tracks will be played repeatedly until you change the source or detach the USB device.

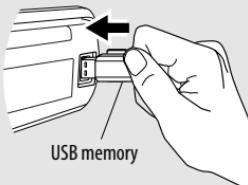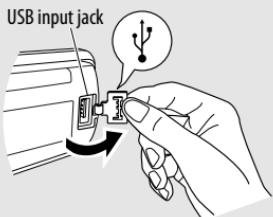**If a USB device has been attached...**

Playback starts from where it has been stopped previously.

- If a different USB device is currently attached, playback starts from the beginning.

**To stop play and detach the USB device**

Straightly pull it out from the unit.

- Press SRC to listen to another playback source.

You can operate the USB device in the same way you operate the files on a disc. (See pages 10 and 11.)

*Continued on the next page*

**Cautions:**

- Avoid using the USB device if it might hinder your safety driving.
- Do not pull out and attach the USB device repeatedly while "READING" is shown on the display.
- Do not start the car engine if a USB device is connected.
- This unit may not be able to play the files depending on the type of USB device.
- Operation and power supply may not work as intended for some USB devices.

- You cannot connect a computer to the USB input terminal of the unit.
- Make sure all important data has been backed up to avoid losing the data.
- Do not leave a USB device in the car, expose to direct sunlight, or high temperature to avoid deformation or cause damages to the device.
- Some USB devices may not work immediately after you turn on the power.
- For more details about USB operations, see page 20.


## Listening to the other external components

You can connect an external component to AUX (auxiliary) input jack on the control panel.

**Preparation:** Make sure "AUX ON" is selected in the "SRC SELECT" → "AUX IN" setting, see page 17.

<b>1</b>	SRC 	Select "AUX IN."
<b>2</b>	—	Turn on the connected component and start playing the source.
<b>3</b>	 [Turn]	Adjust the volume.
<b>4</b>	—	Adjust the sound as you want (see pages 13 and 14).


### Connecting an external component to the AUX input jack

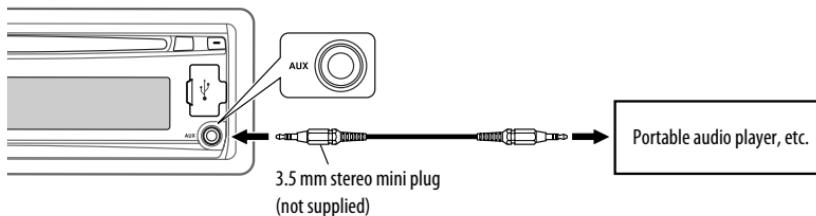

# Selecting a preset sound mode

You can select a preset sound mode suitable to the music genre.

- See also page 15.

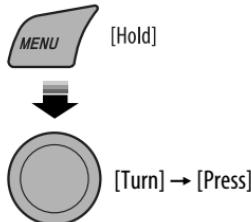

"EQ" "USER/ROCK/CLASSIC/POPS/HIP HOP/JAZZ"

- See page 14 for "USER" settings.

## Preset value setting for each sound mode


Sound mode	Preset value									LOUD (loudness) OFF	
	BASS			MIDDLE			TREBLE				
	Freq.	Level	Q	Freq.	Level	Q	Freq.	Level	Q		
USER	60 Hz	00	Q1.25	1.0 kHz	00	Q1.0	10.0 kHz	00	—		
ROCK	100 Hz	+03	Q1.0	1.0 kHz	00	Q1.25	10.0 kHz	+02	—		
CLASSIC	80 Hz	+01	Q1.25	1.0 kHz	00	Q1.25	10.0 kHz	+03	—		
POPS	100 Hz	+02	Q1.25	1.0 kHz	+01	Q1.25	10.0 kHz	+02	—		
HIP HOP	60 Hz	+04	Q1.0	1.0 kHz	-02	Q1.0	10.0 kHz	+01	—		
JAZZ	80 Hz	+03	Q1.25	1.0 kHz	00	Q1.25	10.0 kHz	+03	—		

Freq.: Frequency Q: Q-slope

## ■ Storing your own sound mode

You can store your own adjustments in memory.


### 1 Select “USER” for “EQ.”

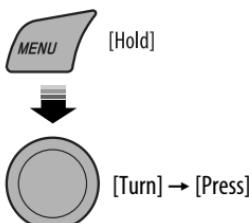

### 2 While “USER” is shown on the display...



### 3 Select a tone.

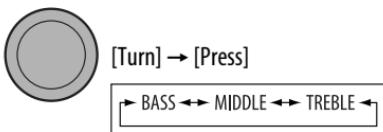

### 4 Adjust the sound elements of the selected tone.



- 1 Adjust the frequency.
- 2 Adjust the level.
- 3 Adjust the Q-slope.

Sound elements	Range/selectable items		
	BASS	MIDDLE	TREBLE
Frequency	60 Hz	0.5 kHz	10.0 kHz
	80 Hz	1.0 kHz	12.5 kHz
	100 Hz	1.5 kHz	15.0 kHz
	200 Hz	2.5 kHz	17.5 kHz
Level	-06 to +06	-06 to +06	-06 to +06
Q	Q1.0	Q0.75	Fixed
	Q1.25	Q1.0	
	Q1.5	Q1.25	
	Q2.0		

### 5 Repeat steps 3 and 4 to adjust other sound characteristics.

The adjustment made will be stored automatically.

# Menu operations

ENGLISH

**1 Call up the menu.**



[Hold]

**2 Select the desired item.**



[Turn] → [Press]

**3 Repeat step 2 if necessary.**

- To return to the previous menu, press BACK.
- To exit from the menu, press DISP or MENU.

Initial: **Underlined**

Category	Menu items	Selectable settings, [reference page]	
DEMO	DEMO Display demonstration	<ul style="list-style-type: none"> <li>• <b>DEMO ON</b> : Display demonstration will be activated automatically if no operation is done for about 20 seconds, [6].</li> <li>• <b>DEMO OFF</b> : Cancels.</li> </ul>	
CLOCK	CLOCK DISP* <sup>1</sup> Clock display	<ul style="list-style-type: none"> <li>• <b>CLOCK ON</b> : Clock time is shown on the display at all times when the power is turned off.</li> <li>• <b>CLOCK OFF</b> : Cancels; pressing DISP will show the clock time for about 5 seconds when the power is turned off, [6].</li> </ul>	
	CLOCK SET Clock setting	: Adjust the hour, then the minute, [6]. (Initial: 0:00)	
	24H/12H Time display mode	<ul style="list-style-type: none"> <li>• <b>24 HOUR</b> : See also page 6 for setting.</li> <li>• <b>12 HOUR</b></li> </ul>	
	CLOCK ADJ * <sup>2</sup> Clock adjustment	<ul style="list-style-type: none"> <li>• <b>AUTO</b> : The built-in clock is automatically adjusted using the CT (clock time) data in the Radio Data System signal.</li> <li>• <b>OFF</b> : Cancels.</li> </ul>	
EQ	EQ Equalizer	: Select a preset sound mode suitable to the music genre. <b>USER, ROCK, CLASSIC, POPS, HIP HOP, JAZZ</b>	
DISPLAY	DIMMER Dimmer	<ul style="list-style-type: none"> <li>• <b>DIMMER ON</b> : Dims the display and button illumination.</li> <li>• <b>DIMMER OFF</b> : Cancels.</li> </ul>	
	SCROLL* <sup>3</sup> Scroll	<ul style="list-style-type: none"> <li>• <b>SCROLL ONCE</b> : Scrolls the displayed information once.</li> <li>• <b>SCROLL AUTO</b> : Repeats scrolling (at 5-second intervals).</li> <li>• <b>SCROLL OFF</b> : Cancels.</li> </ul>	
	TAG DISPLAY Tag display	<p>Pressing DISP for more than one second can scroll the display regardless of the setting.</p> <ul style="list-style-type: none"> <li>• <b>TAG ON</b> : Shows the Tag information while playing MP3/WMA tracks.</li> <li>• <b>TAG OFF</b> : Cancels.</li> </ul>	

\*<sup>1</sup> If the power supply is not interrupted by turning off the ignition key of your car, it is recommended to select "CLOCK OFF" to save the car's battery.

\*<sup>2</sup> Takes effect only when CT data is received.

\*<sup>3</sup> Some characters or symbols will not be shown correctly (or will be blanked) on the display.

Continued on the next page

Category	Menu items	Selectable settings, [reference page]	
TUNER	<b>AF-REG</b> * <sup>4</sup> Alternative frequency/ regionalization reception	<ul style="list-style-type: none"> <li><b>AF ON</b> : When the currently received signals become weak, the unit switches to another station (the programme may differ from the one currently received), [9].  <ul style="list-style-type: none"> <li>The AF indicator lights up.</li> </ul> </li> <li><b>AF-REG ON</b> : When the currently received signals become weak, the unit switches to another station broadcasting the same programme.  <ul style="list-style-type: none"> <li>The AF and REG indicators light up.</li> </ul> </li> <li><b>OFF</b> : Cancels.</li> </ul>	
	<b>PTY-STANDBY</b> * <sup>4</sup> PTY standby	<b>PTY OFF, PTY codes</b> : Activates PTY Standby Reception with one of the PTY codes, [9].	
	<b>TA VOLUME</b> * <sup>4</sup> Traffic announcement volume	<b>VOLUME 00</b> : (Initial: VOLUME 15) <ul style="list-style-type: none"> <li><b>VOLUME 50</b></li> <li>(or <b>VOLUME 00</b>)</li> <li><b>VOLUME 30</b>)*<sup>5</sup></li> </ul>	
	<b>P-SEARCH</b> * <sup>4</sup> Programme search	<ul style="list-style-type: none"> <li><b>SEARCH ON</b> : Activates Programme Search, [9].</li> <li><b>SEARCH OFF</b> : Cancels.</li> </ul>	
	<b>MONO</b> * <sup>6</sup> Monaural mode	<ul style="list-style-type: none"> <li><b>MONO ON</b> : Activate monaural mode to improve FM reception, but stereo effect will be lost, [7].</li> <li><b>MONO OFF</b> : Restore the stereo effect.</li> </ul>	
	<b>IF BAND</b> Intermediate frequency band	<ul style="list-style-type: none"> <li><b>AUTO</b> : Increases the tuner selectivity to reduce interference noises between adjacent stations. (Stereo effect may be lost.)</li> <li><b>WIDE</b> : Subject to interference noises from adjacent stations, but sound quality will not be degraded and the stereo effect will remain.</li> </ul>	
AUDIO	<b>FADER</b> * <sup>7, *8</sup> Fader	<b>R06 – F06</b> : Adjust the front and rear speaker output balance. (Initial: 00)	
	<b>BALANCE</b> * <sup>8</sup> Balance	<b>L06 – R06</b> : Adjust the left and right speaker output balance. (Initial: 00)	
	<b>LOUD</b> Loudness	<ul style="list-style-type: none"> <li><b>LOUD OFF</b> : Cancels.</li> <li><b>LOUD ON</b> : Boost low and high frequencies to produce a well-balanced sound at a low volume level.</li> </ul>	

\*<sup>4</sup> Only for FM Radio Data System stations.

\*<sup>5</sup> Depends on the amplifier gain control.

\*<sup>6</sup> Displayed only when the source is "FM."

\*<sup>7</sup> If you are using a two-speaker system, set the fader level to "00."

\*<sup>8</sup> This adjustment will not affect the subwoofer output.

Category	Menu items	Selectable settings, [reference page]			
AUDIO	<b>VOL ADJUST</b> Volume adjust	<b>VOL ADJ -05</b> — : Preset the volume adjustment level of each source (except FM), compared to the FM volume level. The volume level will automatically increase or decrease when you change the source. <b>VOL ADJ +05</b> (Initial: VOL ADJ 00) <ul style="list-style-type: none"> <li>Before making an adjustment, select the source you want to adjust.</li> <li>“VOL ADJ FIX” appears on the display if “FM” is selected as the source.</li> </ul>			
	<b>L/O MODE</b> Line output mode	<ul style="list-style-type: none"> <li><b>SUB.W</b> : Select if the REAR LINE OUT terminals are used for connecting a subwoofer (through an external amplifier).</li> <li><b>REAR</b> : Select if the REAR LINE OUT terminals are used for connecting the speakers (through an external amplifier).</li> </ul>			
	<b>SUB.W FREQ*</b> <sup>9</sup> Subwoofer cutoff frequency	<ul style="list-style-type: none"> <li><b>LOW</b> : Frequencies lower than 72 Hz are sent to the subwoofer.</li> <li><b>MID</b> : Frequencies lower than 111 Hz are sent to the subwoofer.</li> <li><b>HIGH</b> : Frequencies lower than 157 Hz are sent to the subwoofer.</li> </ul>			
	<b>SUB.W LEVEL*</b> <sup>9</sup> Subwoofer level	<b>SUB.W 00</b> — <b>SUB.W 08</b> : Adjust the subwoofer output level. (Initial: SUB.W 04)			
	<b>BEEP</b> Keypress tone	<ul style="list-style-type: none"> <li><b>BEEP OFF</b> : Deactivates the keypress tone.</li> <li><b>BEEP ON</b> : Activates the keypress tone.</li> </ul>			
	<b>TEL MUTING</b> Telephone muting	<ul style="list-style-type: none"> <li><b>MUTING 1/</b> <b>MUTING 2</b> : Select either one which mutes the sounds while using a cellular phone.</li> <li><b>MUTING OFF</b> : Cancels.</li> </ul>			
	<b>AMP GAIN*</b> <sup>10</sup> Amplifier gain control	<ul style="list-style-type: none"> <li><b>LOW POWER</b> : VOLUME 00 – VOLUME 30 (Select if the maximum power of each speaker is less than 50 W to prevent damaging the speaker.)</li> <li><b>HIGH POWER</b> : VOLUME 00 – VOLUME 50</li> </ul>			
	<b>SRC SELECT</b>	<table> <tr> <td><b>AM*</b><sup>11</sup> AM station</td> <td> <ul style="list-style-type: none"> <li><b>AM OFF</b> : Disable “AM” in source selection.</li> <li><b>AM ON</b> : Enable “AM” in source selection, [4].</li> </ul> </td> </tr> <tr> <td><b>AUX IN*</b><sup>12</sup> Auxiliary input</td> <td> <ul style="list-style-type: none"> <li><b>AUX OFF</b> : Disable “AUX IN” in source selection.</li> <li><b>AUX ON</b> : Enable “AUX IN” in source selection, [4].</li> </ul> </td> </tr> </table>	<b>AM*</b> <sup>11</sup> AM station	<ul style="list-style-type: none"> <li><b>AM OFF</b> : Disable “AM” in source selection.</li> <li><b>AM ON</b> : Enable “AM” in source selection, [4].</li> </ul>	<b>AUX IN*</b> <sup>12</sup> Auxiliary input
<b>AM*</b> <sup>11</sup> AM station	<ul style="list-style-type: none"> <li><b>AM OFF</b> : Disable “AM” in source selection.</li> <li><b>AM ON</b> : Enable “AM” in source selection, [4].</li> </ul>				
<b>AUX IN*</b> <sup>12</sup> Auxiliary input	<ul style="list-style-type: none"> <li><b>AUX OFF</b> : Disable “AUX IN” in source selection.</li> <li><b>AUX ON</b> : Enable “AUX IN” in source selection, [4].</li> </ul>				

\*<sup>9</sup> Displayed only when “L/O MODE” is set to “SUB.W.”

\*<sup>10</sup> The volume level automatically changes to “VOLUME 30” if you change to “LOW POWER” with the volume level set higher than “VOLUME 30.”

\*<sup>11</sup> Displayed only when any source other than “AM” is selected.

\*<sup>12</sup> Displayed only when any source other than “AUX IN” is selected.

# More about this unit

## ■ Basic operations

### Turning on the power

- By pressing SRC button on the unit, you can also turn on the power. If the source is ready, playback also starts.

### Turning off the power

- If you turn off the power while listening to a track, playback will start from where it had been stopped previously next time you turn on the power.

## General

- If you change the source while listening to a disc, playback stops.

Next time you select "CD" as the playback source, playback will start from where it had been stopped previously.

- If no operation is done for about 30 seconds after pressing MENU button, the operation will be canceled.

## ■ Tuner operations

### Storing stations in memory

- During SSM search...
  - All previously stored stations are erased and the stations are stored anew.
  - When SSM is over, the station stored in the lowest preset number will be automatically tuned in.
- When storing a station manually, the previously preset station is erased when a new station is stored in the same preset number.

## FM Radio Data System operations

- Network-Tracking Reception requires two types of Radio Data System signals—PI (Programme Identification) and AF (Alternative Frequency) to work correctly. Without receiving these data correctly, Network-Tracking Reception will not operate correctly.
- If a Traffic Announcement is received by TA Standby Reception, the volume level automatically changes to the preset level (TA VOL) if the current level is lower than the preset level.
- When Alternative Frequency Reception is activated (with AF selected), Network-Tracking Reception is also activated automatically.

## ■ Disc operations

### Caution for DualDisc playback

- The Non-DVD side of a "DualDisc" does not comply with the "Compact Disc Digital Audio" standard. Therefore, the use of Non-DVD side of a DualDisc on this product may not be recommended.

## General

- This unit has been designed to reproduce CDs/CD Texts, and CD-Rs (Recordable)/CD-RWs (Rewritable) in audio CD (CD-DA), MP3/WMA formats.
- When a disc is inserted upside down, "PLEASE" and "EJECT" appear alternately on the display. Press ▲ to eject the disc.
- MP3 and WMA "tracks" (words "file" and "track" are used interchangeably) are recorded in "folders."
- While fast-forwarding or reversing on an MP3 or WMA disc, you can only hear intermittent sounds.

## Playing a CD-R or CD-RW

- Use only “finalized” CD-Rs or CD-RWs.
- This unit can only play back files of the same type as those detected first if a disc includes both audio CD (CD-DA) files and MP3/WMA files.
- This unit can play back multi-session discs; however, unclosed sessions will be skipped while playing.
- Some CD-Rs or CD-RWs may not play back on this unit because of their disc characteristics, or for the following reasons:
  - Discs are dirty or scratched.
  - Moisture condensation has occurred on the lens inside the unit.
  - The pickup lens inside the unit is dirty.
  - The files on the CD-R/CD-RW are written using the “Packet Write” method.
  - There are improper recording conditions (missing data, etc.) or media conditions (stained, scratched, warped, etc.).
- CD-RWs may require a longer readout time since the reflectance of CD-RWs is lower than that of regular CDs.
- Do not use the following CD-Rs or CD-RWs:
  - Discs with stickers, labels, or a protective seal stuck to the surface.
  - Discs on which labels can be directly printed by an ink jet printer.

Using these discs under high temperature or high humidity may cause malfunctions or damage to the unit.

## Playing an MP3/WMA disc

- This unit can play back MP3/WMA files with the extension code <.mp3> or <.wma> (regardless of the letter case—upper/lower).
- This unit can show the names of albums, artists (performer), and Tag (Version 1.0, 1.1, 2.2, 2.3, or 2.4) for MP3 files and for WMA files.

- This unit can play back MP3/WMA files meeting the conditions below:
  - Bit rate of MP3: 32 kbps — 320 kbps
  - Sampling frequency of MP3:  
32 kHz, 44.1 kHz, 48 kHz (for MPEG-1)  
16 kHz, 22.05 kHz, 24 kHz (for MPEG-2)
  - Bit rate of WMA: 32 kbps — 320 kbps
  - Sampling frequency of WMA:  
22.05 kHz, 32 kHz, 44.1 kHz, 48 kHz
  - Disc format: ISO 9660 Level 1/Level 2, Romeo, Joliet, Windows extension.
- The maximum number of characters for file/folder names vary depending on the disc format used (includes 4 extension characters—<.mp3> or <.wma>).
  - ISO 9660 Level 1: up to 12 characters
  - ISO 9660 Level 2: up to 31 characters
  - Romeo: up to 64 characters
  - Joliet: up to 32 characters
  - Windows extension: up to 32 characters
- This unit can recognize a total of 512 files, 255 folders, and 8 hierarchical levels.
- This unit can play back files recorded in VBR (variable bit rate).  

Files recorded in VBR have a discrepancy in the elapsed time display, and do not show the actual elapsed time. In particular, this difference becomes noticeable after performing the search function.
- This unit cannot play back the following files:
  - MP3 files encoded in MP3i and MP3 PRO format.
  - MP3 files encoded in an inappropriate format.
  - MP3 files encoded with Layer 1/2.
  - WMA files encoded in lossless, professional, and voice format.
  - WMA files which are not based upon Windows Media® Audio.
  - WMA files copy-protected with DRM.
  - Files which have data such as AIFF, ATRAC3, etc.
- The search function works but search speed is not constant.

*Continued on the next page*

## **Playing MP3/WMA tracks from a USB device**

- While playing from a USB device, the playback order may differ from other players.
- This unit may be unable to play back some USB devices or some files due to their characteristics or recording conditions.
- Depending on the shape of the USB devices and connection ports, some USB devices may not be attached properly or the connection might be loose.
- Connect one USB mass storage class device to the unit at a time. Do not use a USB hub.
- If the connected USB device does not have the correct files, "CANNOT PLAY" appears.
- This unit can show Tag (Version 1.0, 1.1, 2.2, 2.3, or 2.4) for MP3 files and for WMA files.
- This unit can play back MP3/WMA files meeting the conditions below:
  - Bit rate of MP3: 32 kbps — 320 kbps
  - Sampling frequency of MP3:
    - 32 kHz, 44.1 kHz, 48 kHz (for MPEG-1)
    - 16 kHz, 22.05 kHz, 24 kHz (for MPEG-2)
  - Bit rate of WMA: 32 kbps — 320 kbps
  - Sampling frequency of WMA:
    - 22.05 kHz, 32 kHz, 44.1 kHz, 48 kHz
- This unit can play back MP3 files recorded in VBR (variable bit rate).
- The maximum number of characters for:
  - Folder names : 32 characters
  - File names : 32 characters
  - MP3 Tag : 32 characters
  - WMA Tag : 32 characters
- This unit can recognize a total of 5 000 files, 255 folders (255 files per folder including folder without unsupported files), and of 8 hierarchies.
- This unit does not support SD card reader.
- This unit cannot recognize a USB device whose rating is other than 5 V and exceeds 500 mA.
- USB devices equipped with special functions such as data security functions cannot be used with the unit.
- Do not use a USB device with 2 or more partitions.
- This unit may not recognize a USB device connected through a USB card reader.

- This unit may not play back files in a USB device properly when using a USB extension cord.
- This unit cannot play back the following files:
  - MP3 files encoded with MP3i and MP3 PRO format.
  - MP3 files encoded in an inappropriate format.
  - MP3 files encoded with Layer 1/2.
  - WMA files encoded in lossless, professional, and voice format.
  - WMA files not based on Windows Media® Audio.

## **Ejecting a disc or removing a USB device**

- If the ejected disc is not removed within 15 seconds, it is automatically inserted into the loading slot again to protect it from dust.
- After ejecting a disc or removing a USB device, "NO DISC" or "NO USB" appears and you cannot operate some of the buttons. Insert another disc, reattach a USB device, or press SRC to select another playback source.

## **Menu operations**

- If you change the "AMP GAIN" setting from "HIGH POWER" to "LOW POWER" while the volume level is set higher than "VOLUME 30," the unit automatically changes the volume level to "VOLUME 30."

# Troubleshooting

What appears to be trouble is not always serious. Check the following points before calling a service center.

	<b>Symptoms</b>	<b>Remedies/Causes</b>
<b>General</b>	• Sound cannot be heard from the speakers.	• Adjust the volume to the optimum level. • Check the cords and connections.
	• The unit does not work at all.	Reset the unit (see page 3).
	• "AUX IN" cannot be selected.	Check the "SRC SELECT" → "AUX IN" setting (see page 17).
<b>FM/AM</b>	• SSM automatic presetting does not work.	Store stations manually.
	• Static noise while listening to the radio.	Connect the aerial firmly.
<b>Discs in general</b>	• "AM" cannot be selected.	Check the "SRC SELECT" → "AM" setting (see page 17).
	• Disc cannot be played back.	Insert the disc correctly.
	• CD-R/CD-RW cannot be played back. • Tracks on the CD-R/CD-RW cannot be skipped.	• Insert a finalized CD-R/CD-RW. • Finalize the CD-R/CD-RW with the component which you used for recording.
	• Disc can neither be played back nor ejected.	• Unlock the disc (see page 10). • Eject the disc forcibly (see page 3).
	• Disc sound is sometimes interrupted.	• Stop playback while driving on rough roads. • Change the disc. • Check the cords and connections.
	• "NO DISC" appears on the display.	Insert a playable disc into the loading slot.
	• "PLEASE" and "EJECT" appear alternately on the display.	Press <b>▲</b> , then insert a disc correctly.
	• Disc cannot be played back.	• Use a disc with MP3/WMA tracks recorded in a format compliant with ISO 9660 Level 1, Level 2, Romeo, or Joliet. • Add the extension code <.mp3> or <.wma> to the file names.
	• Noise is generated.	Skip to another track or change the disc. (Do not add the extension code <.mp3> or <.wma> to non-MP3 or WMA tracks.)
<b>MP3/WMA playback</b>		

*Continued on the next page*


Symptoms	Remedies/Causes
<ul style="list-style-type: none"> <li>A longer readout time is required ("READING" keeps flashing on the display).</li> </ul>	Do not use too many hierarchical levels and folders.
<ul style="list-style-type: none"> <li>Tracks do not play back in the order you have intended them to play.</li> </ul>	The playback order is determined when the files are recorded.
<ul style="list-style-type: none"> <li>The elapsed playing time is not correct.</li> </ul>	This sometimes occurs during playback. This is caused by how the tracks are recorded on the disc.
<ul style="list-style-type: none"> <li>"NO FILE" appears on the display.</li> </ul>	Selected folder is an empty folder*. Select another folder that contains MP3/WMA tracks. <i>* Folder that is physically empty or folder that contains data but does not contain valid MP3/WMA track.</i>
<ul style="list-style-type: none"> <li>The correct characters are not displayed (e.g. album name).</li> </ul>	This unit can only display Roman alphabets (upper case), Cyrillic alphabets (upper case), numbers, and a limited number of symbols (see page 2).
<ul style="list-style-type: none"> <li>Noise is generated.</li> </ul>	The track played back is not an MP3/WMA track. Skip to another file. (Do not add the extension code <.mp3> or <.wma> to non-MP3 or WMA tracks.)
<ul style="list-style-type: none"> <li>"READING" keeps flashing on the display.</li> </ul>	<ul style="list-style-type: none"> <li>Readout time varies depending on the USB device.</li> <li>Do not use too many hierarchy or folders.</li> <li>Turn off the power then on again.</li> <li>Reattach the USB device again.</li> </ul>
<ul style="list-style-type: none"> <li>"NO FILE" appears on the display.</li> </ul>	Selected folder is an empty folder*. Select another folder that contains MP3/WMA tracks. <i>* Folder that is physically empty or folder that contains data but does not contain valid MP3/WMA track.</i>
<ul style="list-style-type: none"> <li>Tracks/folders are not played back in the order you have intended.</li> </ul>	The playback order is determined by the write-in time stamp. The first track/folder written into the USB device will be the first track/folder for playback.
<ul style="list-style-type: none"> <li>"CANNOT PLAY" flashes on the display.</li> <li>"NO USB" appears on the display.</li> <li>The unit cannot detect the USB device.</li> </ul>	<ul style="list-style-type: none"> <li>Attach a USB device that contains tracks encoded in an appropriate format.</li> <li>Reattach the USB device again.</li> </ul>
<ul style="list-style-type: none"> <li>Correct characters are not displayed (e.g. album name).</li> </ul>	This unit can only display Roman alphabets (upper case), Cyrillic alphabets (upper case), numbers, and a limited number of symbols (see page 2).
<ul style="list-style-type: none"> <li>While playing a track, sound is sometimes interrupted.</li> </ul>	The MP3/WMA tracks have not been properly copied into the USB device. Copy MP3/WMA tracks again into the USB device, and try again.

- Microsoft and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

# Maintenance

## How to clean the connectors

Frequent detachment will deteriorate the connectors. To minimize this possibility, periodically wipe the connectors with a cotton swab or cloth moistened with alcohol, being careful not to damage the connectors.

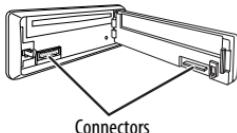

Connectors

## Moisture condensation

Moisture may condense on the lens inside the unit in the following cases:

- After starting the heater in the car.
- If it becomes very humid inside the car.

Should this occur, the unit may malfunction. In this case, eject the disc and leave the unit turned on for a few hours until the moisture has evaporated.

## How to handle discs

**When removing a disc from its case**, press down the center holder of the case and lift the disc out, holding it by the edges.



- Always hold the disc by the edges. Do not touch its recording surface.

**When storing a disc in its case**, gently insert the disc around the center holder (with the printed surface facing up).

- Make sure to store discs in cases after use.

## To keep discs clean

A dirty disc may not play correctly.

If a disc does become dirty, wipe it with a soft cloth in a straight line from center to edge.

- Do not use any solvents (for example, conventional record cleaner, spray, thinner, benzine, etc.) to clean discs.



## To play new discs

New discs may have some rough spots around the inner and outer edges. If such a disc is used, this unit may reject the disc.



**To remove these rough spots**, rub the edges with a pencil or ball-point pen, etc.

### Do not use the following discs:

Single CD (8 cm disc)



Warped disc



Sticker and sticker residue



Stick-on label



Unusual shape



C-thru Disc (semi-transparent disc)



Transparent or semi-transparent parts on its recording area



# Specifications

<b>AUDIO AMPLIFIER SECTION</b>		
Maximum Power Output:	Front/Rear:	50 W per channel
Continuous Power Output (RMS):	Front/Rear:	19 W per channel into 4 Ω, 40 Hz to 20 000 Hz at no more than 0.8% total harmonic distortion.
Load Impedance:		4 Ω (4 Ω to 8 Ω allowance)
Tone Control Range:	Bass:	±12 dB (60 Hz, 80 Hz, 100 Hz, 200 Hz) Q1.0, Q1.25, Q1.5, Q2.0
	Middle:	±12 dB (0.5 kHz, 1.0 kHz, 1.5 kHz, 2.5 kHz) Q0.75, Q1.0, Q1.25
	Treble:	±12 dB (10.0 kHz, 12.5 kHz, 15.0 kHz, 17.5 kHz) Q = Fixed
Frequency Response:		40 Hz to 20 000 Hz
Signal-to-Noise Ratio:		70 dB
Line-Out Level/Impedance:		2.5 V/20 kΩ load (full scale)
Output Impedance:		1 kΩ
Subwoofer-Out Level/Impedance:		2.5 V/20 kΩ load (full scale)
Other Terminal:		USB input jack, AUX (auxiliary) input jack

<b>TUNER SECTION</b>		
Frequency Range:	FM:	87.5 MHz to 108.0 MHz
	FM-LO:	65.00 MHz to 74.00 MHz
	AM:	MW: 522 kHz to 1 620 kHz LW: 144 kHz to 279 kHz
FM Tuner	Usable Sensitivity:	11.3 dBf (1.0 µV/75 Ω)
	50 dB Quieting Sensitivity:	16.3 dBf (1.8 µV/75 Ω)
	Alternate Channel Selectivity (400 kHz):	65 dB
	Frequency Response:	40 Hz to 15 000 Hz
	Stereo Separation:	30 dB
MW Tuner	Sensitivity:	20 µV
	Selectivity:	35 dB
LW Tuner	Sensitivity:	50 µV

<b>CD PLAYER SECTION</b>	
Type:	Compact disc player
Signal Detection System:	Non-contact optical pickup (semiconductor laser)
Number of Channels:	2 channels (stereo)
Frequency Response:	5 Hz to 20 000 Hz
Dynamic Range:	93 dB
Signal-to-Noise Ratio:	98 dB
Wow and Flutter:	Less than measurable limit
MP3 Decoding Format: (MPEG1/2 Audio Layer 3)	Max. Bit Rate: 320 kbps
WMA (Windows Media® Audio) Decoding Format:	Max. Bit Rate: 320 kbps

<b>USB SECTION</b>	
USB Standard:	USB 1.1, USB 2.0
Data Transfer Rate (Full Speed):	Max. 12 Mbps
Compatible Device:	Mass storage class
Compatible File System:	FAT 32/16/12
Playable Audio Format:	MP3/WMA
Max. Current:	DC 5 V == 500 mA

<b>GENERAL</b>		
Power Requirement:	Operating Voltage:	DC 14.4 V (11 V to 16 V allowance)
Grounding System:		Negative ground
Allowable Operating Temperature:		0°C to +40°C
Dimensions (W × H × D): (approx.)	Installation Size:	182 mm × 52 mm × 160 mm
	Panel Size:	188 mm × 58 mm × 12 mm
Mass:		1.3 kg (excluding accessories)

*Design and specifications are subject to change without notice.*

**Having TROUBLE with operation?**

**Please reset your unit**

**Refer to page of How to reset your unit**

**Затруднения при эксплуатации?**

**Пожалуйста, перезагрузите Ваше устройство**

**Для получения информации о перезагрузке Вашего устройства  
обратитесь на соответствующую страницу**

**Маєте ПРОБЛЕМУ з функціонуванням?**

**Повторно налаштуйте систему**

**Див. сторінку “Як повторно налаштовувати пристрій”**

**JVC**

**Віктор Компанії оф Джепен Лімітед**


12, 3-чоме, Морійя-Чо, Канагава-ку, Йокогама, Канагава 221-8520, Японія



**EN, RU, UK**

© 2008 Victor Company of Japan, Limited

1008DTSMĐTJEIN

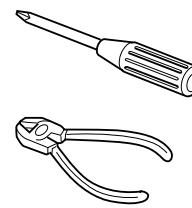

#### ENGLISH

This unit is designed to operate on **12 V DC, NEGATIVE ground electrical systems**. If your vehicle does not have this system, a voltage inverter is required, which can be purchased at JVC IN-CAR ENTERTAINMENT dealers.


#### WARNINGS

To prevent short circuits, we recommend that you disconnect the battery's negative terminal and make all electrical connections before installing the unit.

- Be sure to ground this unit to the car's chassis again after installation.**

#### Notes:




- Replace the fuse with one of the specified rating. If the fuse blows frequently, consult your JVC IN-CAR ENTERTAINMENT dealer.
- It is recommended to connect speakers with a maximum power of more than 50 W (both at the rear and at the front, with an impedance of **4 Ω to 8 Ω**). If the maximum power is less than 50 W, change "AMP GAIN" setting to prevent the speakers from being damaged (see page 17 of the INSTRUCTIONS).
- To prevent short circuits, cover the terminals of the UNUSED leads with insulating tape.
- The heat sink becomes very hot after use. Be careful not to touch it when removing this unit.

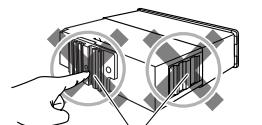

Heat sink / Радиатор / Радіатор

#### PRECAUTIONS on power supply and speaker connections:


- DO NOT connect the speaker leads of the power cord to the car battery; otherwise, the unit will be seriously damaged.**
- BEFORE connecting the speaker leads of the power cord to the speakers, check the speaker wiring in your car.

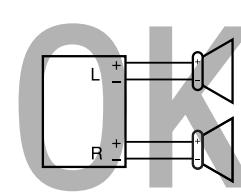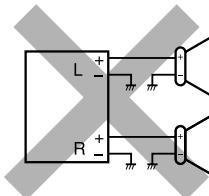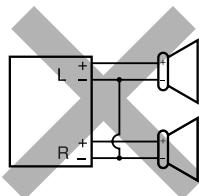


#### Parts list for installation and connection

The following parts are provided for this unit.  
If any item is missing, consult your JVC IN-CAR ENTERTAINMENT dealer immediately.

(A) / (B)  
Hard case/Control panel  
Жесткий футляр/панель управления  
Жорсткий футляр/Панель управління

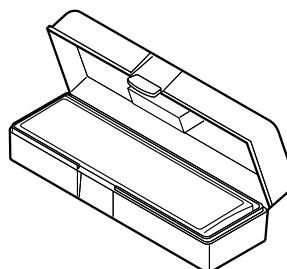


(E)  
Power cord  
Кабель питания  
Шнур живлення

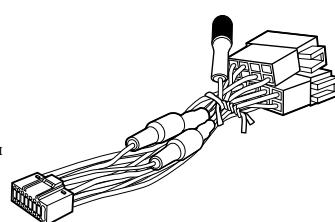

(H)  
Mounting bolt (M4 × 5 mm; M5 × 12.5 mm)  
Крепежный болт (M4 × 5 мм; M5 × 12.5 мм)  
Монтажний болт (M4 × 5 мм; M5 × 12.5 мм)



(C)  
Sleeve  
Муфта  
Екран

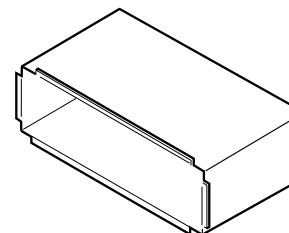


(F)  
Washer (ø5)  
Шайба (ø5)  
Шайба (ø5)



(I)  
Rubber cushion  
Резиновый чехол  
Гумова прокладка




(D)  
Trim plate  
Декоративную панель  
Знімна пластина

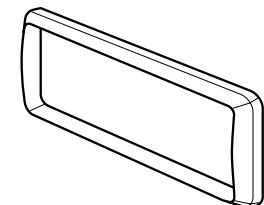

(G)  
Lock nut (M5)  
Фиксирующая гайка (M5)  
Стопорна гайка (M5)



(J)  
Handles  
Рычаги  
Ручки

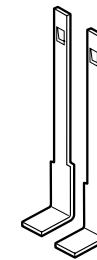

#### РУССКИЙ

Это устройство разработано для эксплуатации на **12 В постоянного напряжения с минусом на массе**. Если Ваш автомобиль не имеет этой системы, требуется инвертор напряжения, который может быть приобретен у дилера автомобилного специалиста JVC.

#### ПРЕДУПРЕЖДЕНИЯ

Для предотвращения коротких замыканий мы рекомендуем Вам отсоединить отрицательный разъем аккумулятора и осуществить все подключения перед установкой устройства.

- После установки обязательно заземлите данное устройство на шасси автомобиля.**

#### Примечания:

- Заменяйте предохранитель другим предохранителем указанного класса. Если предохранитель сгорает слишком часто, обратитесь к дилеру автомобилного специалиста JVC.
- Рекомендуется подключать динамики с максимальной мощностью более 50 Вт (к задней и передней панели устройства, с полным сопротивлением от **4 Ω до 8 Ω**). Если максимальная мощность динамиков менее 50 Вт, перейдите в режим "AMP GAIN", чтобы предотвратить их повреждение (см. ИНСТРУКЦИИ ПО ЭКСПЛУАТАЦИИ на стр. 17).
- Для предотвращения коротких замыканий обмотайте терминалы НЕИСПОЛЬЗУЕМЫХ проводов изоляционной лентой.
- Радиатор во время использования сильно нагревается. Страйтесь его не трогать во время удаления устройства.

#### УКРАЇНА

Цей пристрій призначений для роботи під напругою **12 В постійного струму; з електричними системами, що мають заземлення ВІД'ЄМНОГО полюса**. Якщо ваше авто не оснащене такою системою, потрібно використовувати інвертор напруги, який можна придбати у дилерів устаткування JVC для автомобілів.

#### ПОПЕРЕДЖЕННЯ

Для запобігання коротким замиканням рекомендується перед встановленням пристрою від'єднати від'ємну клему акумулятора та виконати усі електричні з'єднання.

- Переконайтесь у тому, що після закінчення встановлення пристрою, виконано його заземлення на шасі авто.**

#### Примітки:

- Замініть запобіжник тільки запобіжником із вказаними у специфікації номінальними характеристиками. Якщо запобіжники часто виходять з ладу, проконсультуйтесь з дилером устаткування JVC для автомобілів.
- Рекомендується підключати динамики з максимальною потужністю, що перевищує 50 Вт (як для розташованих спереду, так і для тих, що розміщуються позаду). Рекомендований діапазон опору: від 4 до 8 Ом). У разі, якщо потужність є меншою чим 50 Вт, змініть налаштування "AMP GAIN" (коєфіцієнт підсилення) задля запобігання пошкодженням гучномовців (див. стор. 17 "ІНСТРУКЦІЇ").
- Для запобігання коротким замиканням, заізольуйте клеми провідника, ЩО НЕ ВИКОРИСТОВУЄТЬСЯ, ізоляційною стрічкою.
- По закінчені роботи радіатор стає надто гарячим. Будьте обережні, не торкайтесь його при видаленні цього пристрою.

#### ЗАСТЕРЕЖЕННЯ щодо приєднання джерела живлення та гучномовців:

- НЕ з'єднуйте провідники живлення гучномовців з акумулятором. Невиконання такої вимоги призведе до тяжкого ушкодження пристрою.**
- ПЕРЕД тим, як з'єднати провідники живлення з гучномовцями, перевірте схему з'єднання гучномовців вашого авто.

## INSTALLATION (IN-DASH MOUNTING)

The following illustration shows a typical installation. If you have any questions or require information regarding installation kits, consult your JVC IN-CAR ENTERTAINMENT dealer or a company supplying kits.

- If you are not sure how to install this unit correctly, have it installed by a qualified technician.

## УСТАНОВКА (УСТАНОВКА В ПРИБОРНУЮ ПАНЕЛЬ)


На следующих иллюстрациях показана типовая установка. Если у Вас есть какие-либо вопросы, касающиеся установки, обратитесь к Вашему дилеру автомобильного специалиста JVC или в компанию, поставляющую соответствующие принадлежности.

- Если Вы не знаете точно, как следует устанавливать это устройство, обратитесь к квалифицированному специалисту.

## ВСТАНОВЛЕННЯ (МОНТАЖ НА ПРИЛАДОВУ ПАНЕЛЬ)

Наведена нижче ілюстрація демонструє типовий процес встановлення. У разі будь яких запитань або потреби у інформації щодо набору інструментів та спорядження, проконсультуйтесь з дилером устаткування JVC для автомобілів або з компанією, що постачає набір інструментів та спорядження.

- Якщо ви не впевнені щодо правильності встановлення цього пристрою, залучте до його встановлення кваліфікованого спеціаліста.

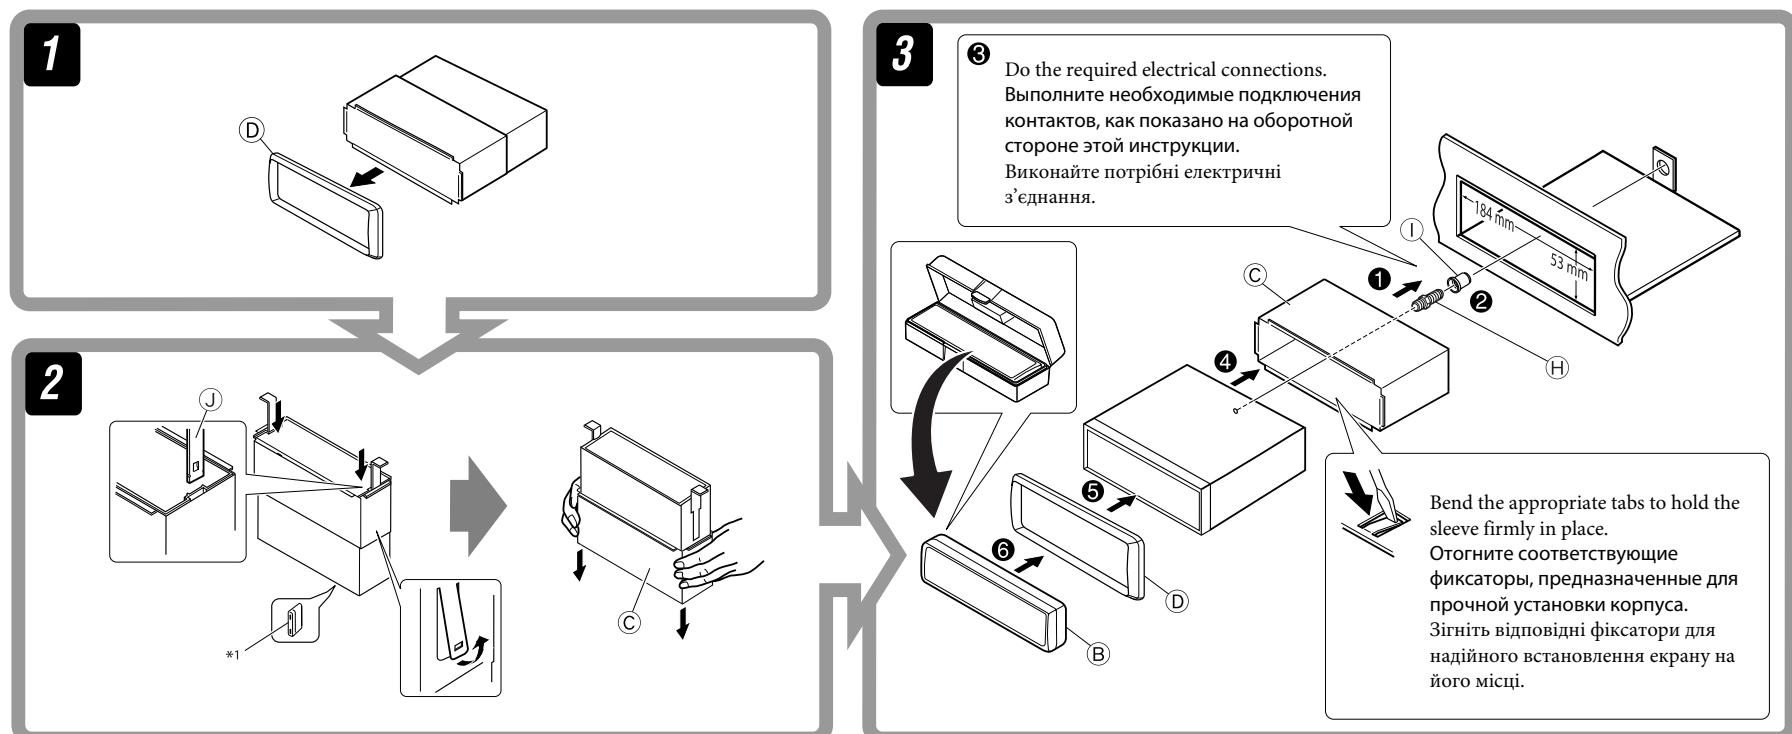

### Removing the unit


Before removing the unit, release the rear section.

### Удаление устройства


Перед удалением устройства освободите заднюю часть.

### Видалення пристрою

Перед видаленням пристрою, ослабте кріплення тильної частини.

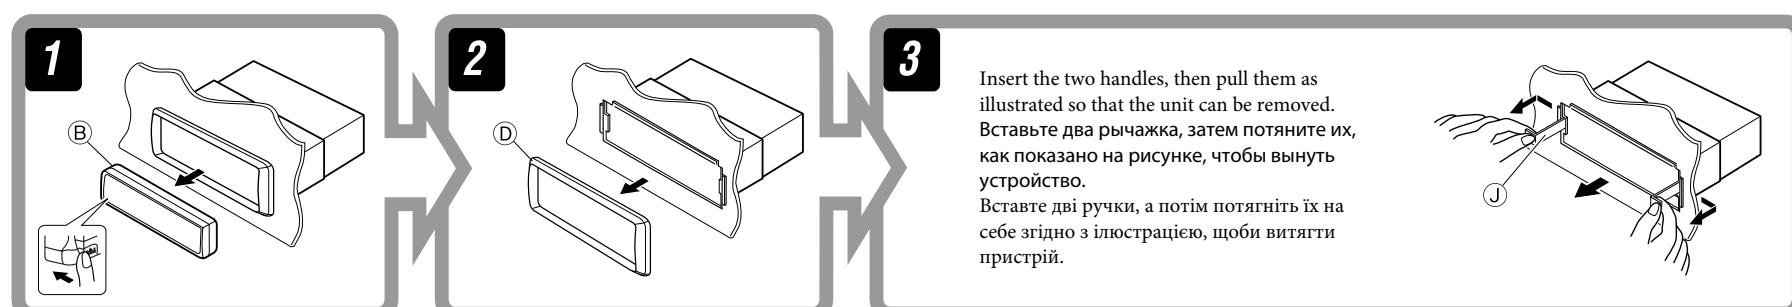

### When using the optional stay / При использовании дополнительной стойки / Використання додаткової стійки (постачається за окремим замовленням)

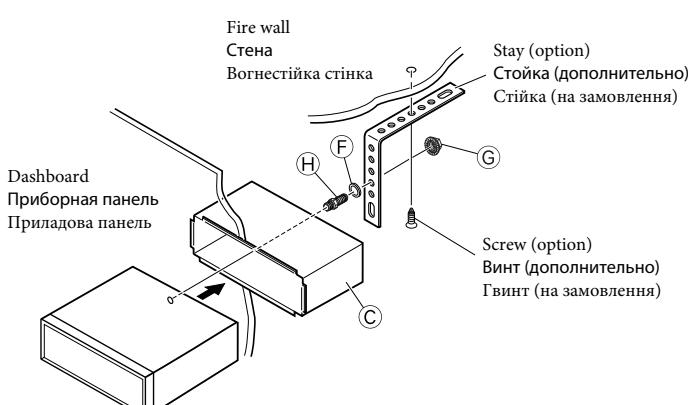


Install the unit at an angle of less than 30°.  
Установите устройство под углом менее 30°.  
Встановіть пристрій під кутом меншим, ніж 30°.

### When installing the unit without using the sleeve / При установке устройства без использования муфты / Встановлення пристрою без екрану

In a Toyota car for example, first remove the car radio and install the unit in its place.  
В автомобиле Тойота, например, сначала извлеките автомобильный радиоприемник и установите устройство на место.

У таких авто, як, наприклад, "Тойота", спершу зніміть радіоприймач, а на його місце встановіть пристрій.

Flat head screws (M5 × 8 mm)\*2  
Болты с плоской головкой (M5 × 8 мм)\*2  
Гвинти з плоскими головками (M5 × 8 mm)\*2

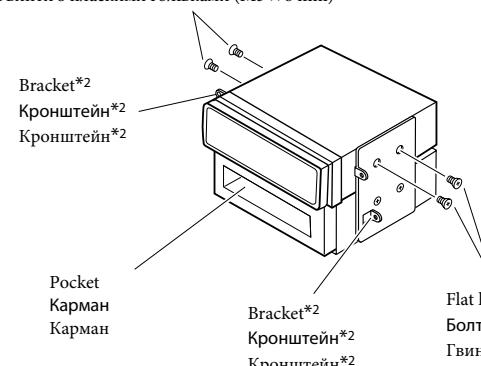

Flat head screws (M5 × 8 mm)\*2  
Болты с плоской головкой (M5 × 8 мм)\*2  
Гвинти з плоскими головками (M5 × 8 mm)\*2

#### Note

When installing the unit on the mounting bracket, make sure to use the 8 mm-long screws. If longer screws are used, they could damage the unit.

#### Примечание

При установке устройства на крепежный кронштейн, используйте только винты длиной 8 мм. При использовании более длинных винтов можно повредить устройство.

Встановлюючи пристрій на монтажні кронштейни, переконайтесь, що застосовуються гвинти довжиною 8 мм. Якщо гвинти довші, вони можуть пошкодити пристрій.

#### Примітка

\*1 When you stand the unit, be careful not to damage the fuse on the rear.

\*2 Not supplied for this unit.

\*1 Устанавливайте устройство таким образом, чтобы не повредить предохранитель, расположенный сзади.


\*2 Не входят в комплект.

\*1 При встановленні пристрою, будьте обережні, не пошкодьте запобіжник, розташований у тильної частині.

\*2 Не входить до комплекту постачання цього пристрою.

#### A If your car is equipped with the ISO connector / Если автомобиль оснащен разъемом ISO / Якщо ваше авто оснащено розніманням за стандартом ISO

- Connect the ISO connectors as illustrated.
- Подключите разъемы ISO, как показано на рисунке.
- Приєднайте рознімання ISO, як рекомендовано на ілюстрації.

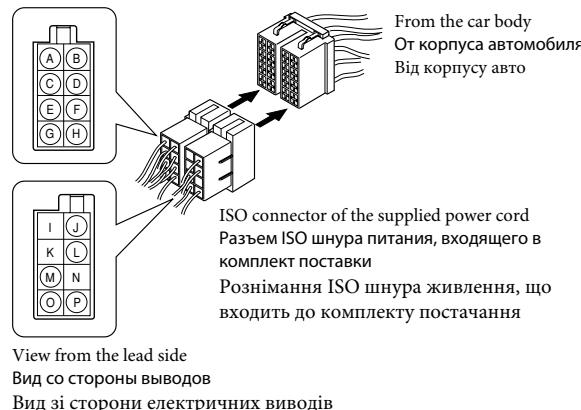

#### B For some VW/Audi or Opel (Vauxhall) automobiles / Для некоторых автомобилей VW/Audi или Opel (Vauxhall) / Для деяких авто марки VW/Audi або Opel (Vauxhall)

You may need to modify the wiring of the supplied power cord as illustrated.

- Contact your authorized car dealer before installing this unit.


Возможно, потребуется изменить схему соединений для прилагаемого шнура питания, как показано на рисунке.

- Перед установкой приемника обратитесь к авторизованному агенту по продажам автомобильных систем.

Вам, возможно, придется внести изменения до з'єднання провідників шнура живлення згідно з ілюстрацією.

- Перед тим, як встановлювати цей пристрій, з'явіться з уповноваженим дилером вашого авто.

Original wiring / Исходная схема соединений / Початкова схема з'єднання рознімань

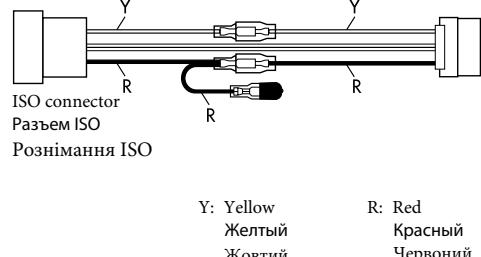

Y: Yellow  
Желтый  
Жовтий  
R: Red  
Красный  
Червоний


Modified wiring ① / Преобразованная схема соединений ① / Змінена схема з'єднання рознімань ①



Use modified wiring ② if the unit does not turn on.

Если приемник не включается, используйте преобразованную схему соединений ②.  
Якщо пристрій не включається, скористайтесь зміненою схемою з'єднання рознімань ②.

Modified wiring ② / Преобразованная схема соединений ② / Змінена схема з'єднання рознімань ②

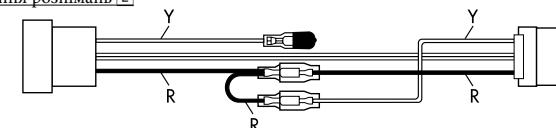

#### B Connections without using the ISO connector / Подключение без использования разъема ISO / З'єднання без допомоги з'єднувача ISO

**Before connecting:** Check the wiring in the vehicle carefully. Incorrect connection may cause serious damage to this unit. The leads of the power cord and those of the connector from the car body may be different in color.

- 1 Cut the ISO connector.
- 2 Connect the colored leads of the power cord in the order specified in the illustration below.
- 3 Connect the aerial cord.
- 4 Finally connect the wiring harness to the unit.

**Перед началом подключения:** Тщательно проверьте проводку в автомобиле. Неправильное подключение может привести к серьезному повреждению устройства.


Жилы силового кабеля и жилы соединителя от кузова автомобиля могут быть разного цвета.

- 1 Обрежьте разъем ISO.
- 2 Подсоедините цветные провода шнура питания в указанном ниже порядке.
- 3 Подключите кабель антенны.
- 4 В последнюю очередь подключите электропроводку к устройству.

**Перед тим, як з'єднати:** Уважно перевірте електричну схему з'єднання вашого авто. Неправильне з'єднання може спричинити тяжке пошкодження вашого пристроя.

Контакти шнура живлення та рознімання, яке йде від корпуса авто можуть мати різні кольори.

- 1 Від'єднайте рознімання ISO.
- 2 З'єднайте кольоворові провідники шнура живлення у порядку, що наведений нижче на ілюстрації.
- 3 Приєднайте провід антени.
- 4 Виконайте кінцеве приєднання джгута провідників до пристроя.

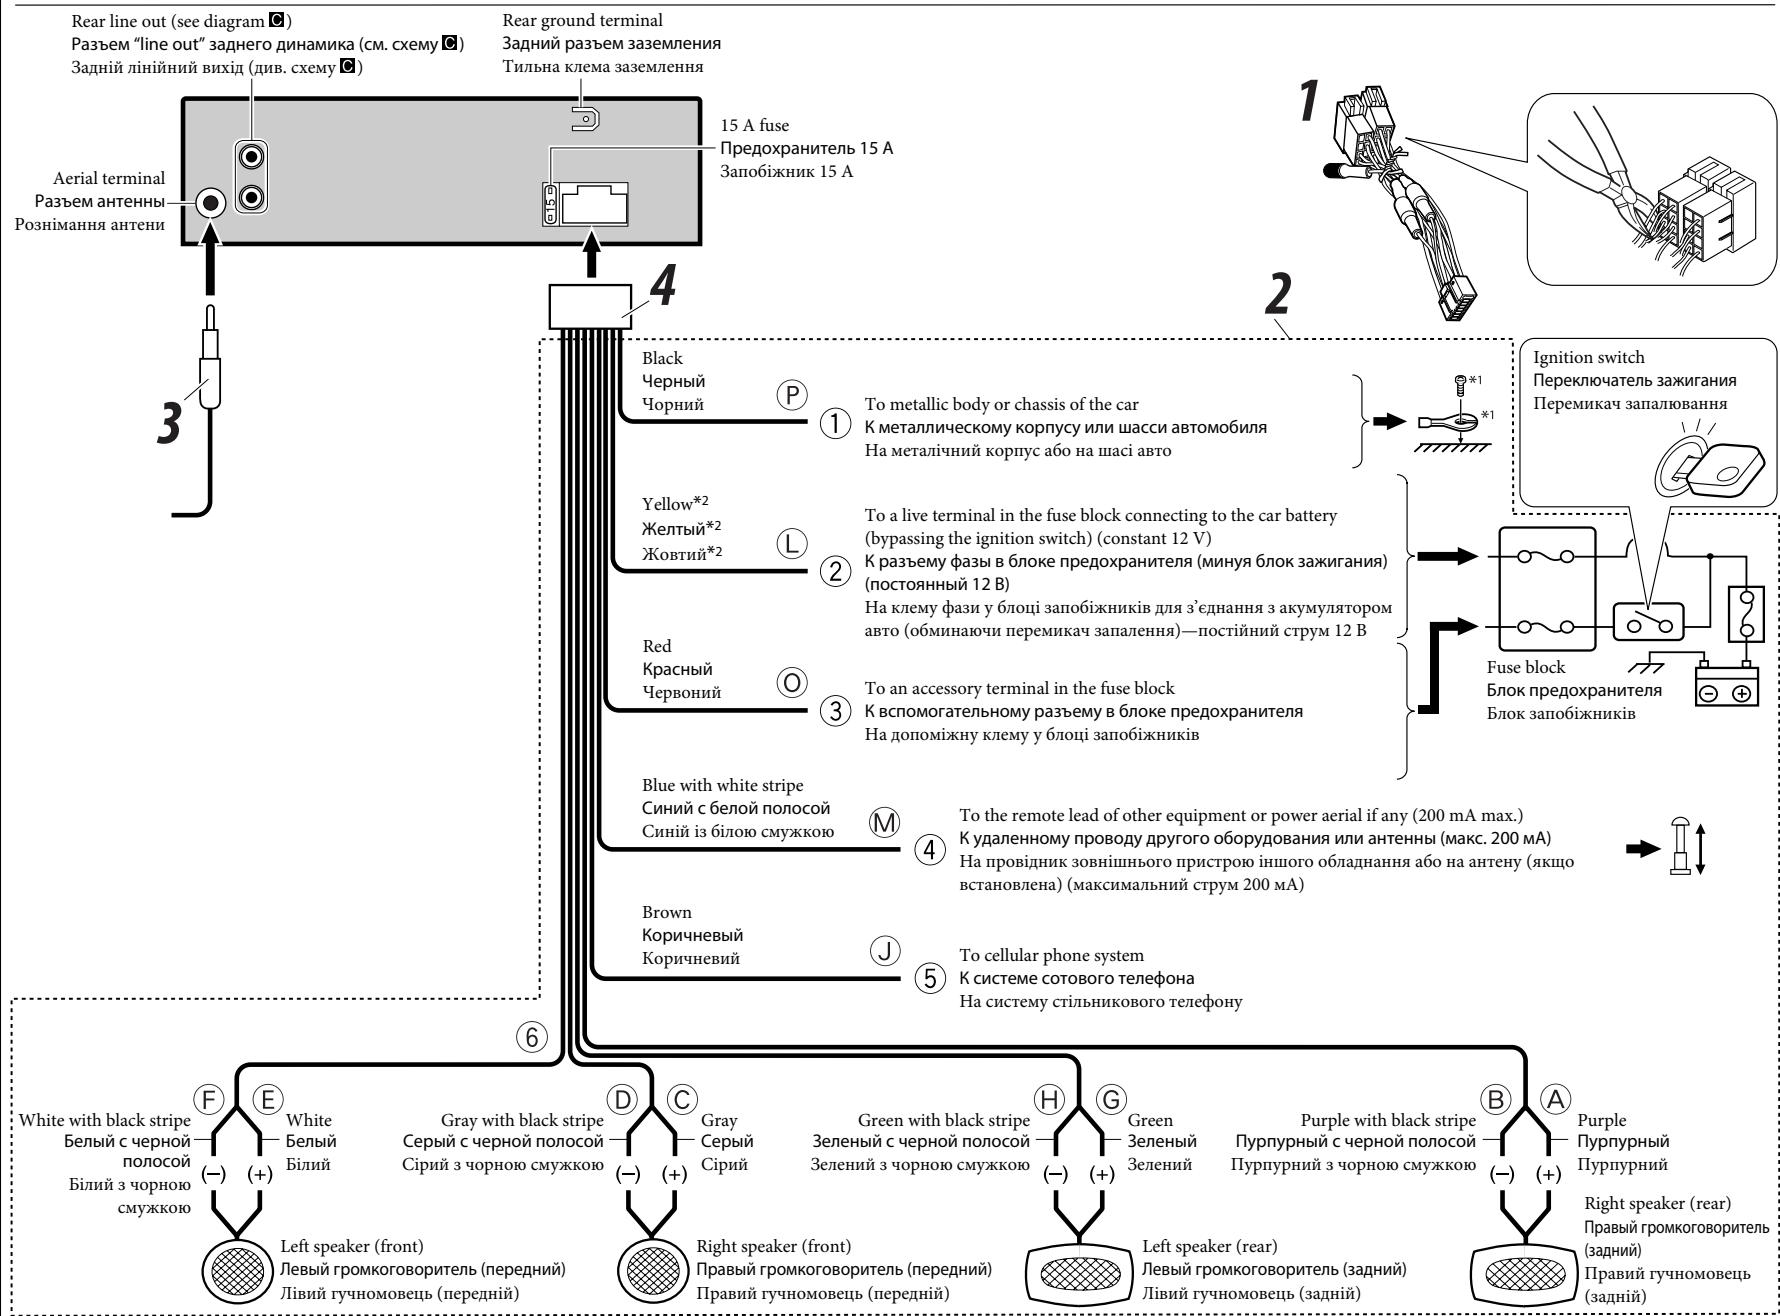

\*1 Not supplied for this unit.

\*2 Before checking the operation of this unit prior to installation, this lead must be connected, otherwise power cannot be turned on.

\*1 Не входит в комплект.

\*2 Перед проверкой работы устройства подключите этот провод, иначе питание не включится.

\*1 Не входить до комплекту поставления цього пристроя.

\*2 Перед тим, як перевірити працездатність цього виробу до його встановлення, цей контакт необхідно приєднати, інакше живлення на пристрій подаватися не буде.




# JVC



## CD RECEIVER

**KD-R504**

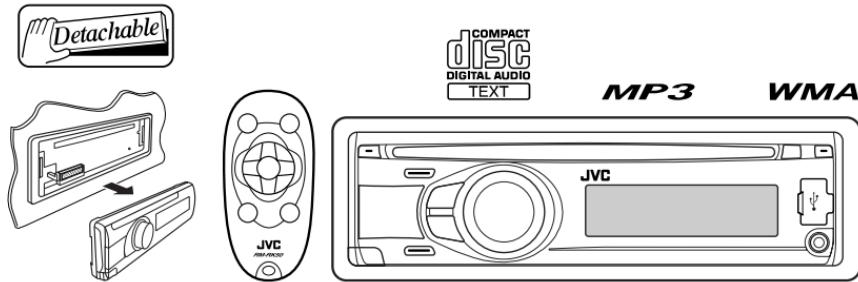

For canceling the display demonstration, see page 7.

For installation and connections, refer to the separate manual.

## INSTRUCTIONS

GET0585-001A  
[UI]

Thank you for purchasing a JVC product.  
Please read all instructions carefully before operation, to ensure your complete understanding and to obtain the best possible performance from the unit.

## **IMPORTANT FOR LASER PRODUCTS**

1. CLASS 1 LASER PRODUCT
2. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel.
3. **CAUTION:** Visible and/or invisible class 1M laser radiation when open. Do not view directly with optical instruments.
4. REPRODUCTION OF LABEL: CAUTION LABEL, PLACED OUTSIDE THE UNIT.

<b>CAUTION</b> VISIBLE AND/OR INVISIBLE CLASS 1M LASER RADIATION WHEN OPEN. DO NOT VIEW DIRECTLY WITH OPTICAL INSTRUMENTS. IEC60825-1:2001 (ENG)	<b>ATTENTION</b> RAYONNEMENT LASER VISIBLE ET/OU INVISIBLE DE CLASSE 1M UNE FOIS OUVERT. NE PAS REGARDER DIRECTEMENT AVEC DES INSTRUMENTS OPTIQUES. (FRA)	<b>AVISO</b> RADIACION LASER VISIBLE DE CLASE 1M INVISIBLE DE CLASE 1M CUANDO ESTA ABIERTO. NO MIRAR DIRECTAMENTE CON INSTRUMENTOS OPTICOS. (ESP)	<b>WARNING</b> SYNLIG OCH/ELLER OSYNLIG LASERSTRÄLLNING, KLASS 1M, NÅR DENNA DEL ÄR ÖPPNAD. BETRÄKTA EJ STRÄLEN MED OPTISKA INSTRUMENT. (SWE)	<b>注意</b> ここに書くと可視 及びまたは不可視 のクラス1M レーザー放射が 出ます。 光学機器で直接 見ないでください。 (JPN)	<b>CAUTION</b> VISIBLE AND/OR INVISIBLE CLASS II LASER RADIATION WHEN OPEN. DO NOT STARE INTO BEAM. FDA 21 CFR (ENG)
--	--	--	--	---	--



[European Union only]

### **Warning:**

If you need to operate the unit while driving, be sure to look around carefully or you may be involved in a traffic accident.

### **Caution on volume setting:**

Digital devices (CD/USB) produce very little noise compared with other sources. Lower the volume before playing these digital sources to avoid damaging the speakers by sudden increase of the output level.

### **For safety...**

- Do not raise the volume level too much, as this will block outside sounds, making driving dangerous.
- Stop the car before performing any complicated operations.

### **Temperature inside the car...**


If you have parked the car for a long time in hot or cold weather, wait until the temperature in the car becomes normal before operating the unit.

### **This mark is used to indicate...**




Turn the control dial to make a selection, then press to confirm the selection.


## ■ Detaching the control panel

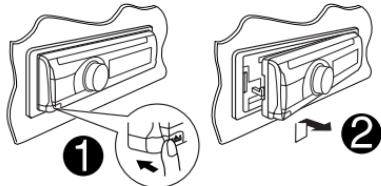

## ■ Attaching the control panel

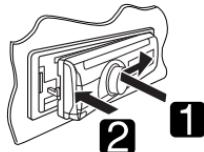

## ■ How to reset your unit

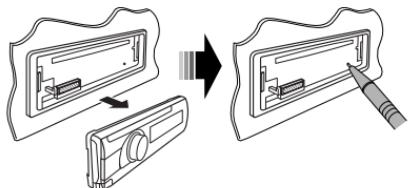

- Your preset adjustments will also be erased.

## ■ How to forcibly eject a disc



- You can forcibly eject the loaded disc even if the disc is locked. To lock/unlock the disc, see page 9.
- Be careful not to drop the disc when it ejects.
- If this does not work, reset your unit.

# CONTENTS

Detaching the control panel.....	3
Attaching the control panel .....	3
How to reset your unit .....	3
How to forcibly eject a disc.....	3

## OPERATIONS

Basic operations.....	4
• Using the control panel.....	4
• Using the remote controller (RM-RK50).....	6
Preparation .....	7
Listening to the radio.....	8
Disc operations.....	9
Listening to the USB device.....	10

## EXTERNAL DEVICES

Listening to the other external components.....	11
---	----

## SETTINGS


Selecting a preset sound mode .....	12
Title assignment .....	13
Menu operations.....	14

## REFERENCES

More about this unit .....	16
Troubleshooting.....	19
Maintenance.....	21
Specifications.....	22

# Basic operations

## Using the control panel

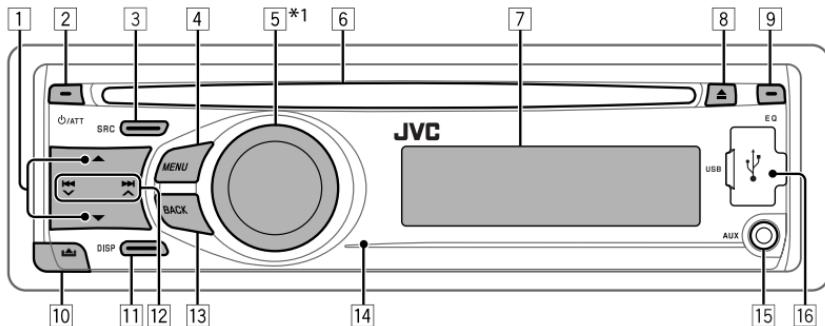

- [1] • **FM/AM:** Select preset station.  
• **CD/USB:** Select folder.
- [2] • Turn on the power.  
• Attenuate the sound (if the power is on).  
• Turn off the power [Hold].
- [3] Select the source.  
**FM** → **AM**\*<sup>2</sup> → **CD**\*<sup>3</sup> → **USB** → **AUX IN**\*<sup>2</sup> →  
(back to the beginning)
- [4] • Enter list operations.  
• Enter Menu setting [Hold].
- [5] • Control the volume\*<sup>4</sup> or select items [Turn].  
• Confirm the selection [Press].  
• **FM:** Enter SSM preset mode [Hold].  
• **CD/USB:** Enter playback mode [Hold].  
    Pause/resume playback\*<sup>4</sup> [Press].
- [6] Loading slot
- [7] Display window
- [8] Eject disc.
- [9] Select the sound mode.

- [10] Detach the panel.
- [11] Change the display information.
- [12] • **FM/AM:** Search for station.  
• **CD/USB:** Select track.
- [13] Return to the previous menu.
- [14] Remote sensor
- [15] AUX (auxiliary) input jack
- [16] USB (Universal Serial Bus) input jack

\*<sup>1</sup> Also known as "Control dial" in this manual.


\*<sup>2</sup> You cannot select these sources if they were disabled in the Menu (see "SRC SELECT" in "Menu operations" on page 16).

\*<sup>3</sup> You cannot select "CD" as the playback source if no disc is in the unit.

\*<sup>4</sup> You can still adjust the volume during pause when the selected source is CD/USB.

Before resume playback, check to be sure that you have not raise the volume level too much.



## Display window

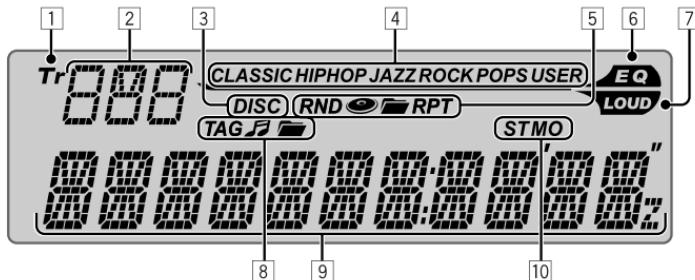

- [1] Tr (track) indicator
- [2] Source display / Track number / Folder number / Time countdown indicator
- [3] DISC indicator
- [4] Sound mode indicators—CLASSIC, HIP HOP, JAZZ, ROCK, POPS, USER
- [5] Playback mode / item indicators— RND (random), (disc), (folder), RPT (repeat)
- [6] EQ (equalizer) indicator
- [7] LOUD (loudness) indicator
- [8] Disc information indicators—  
TAG (Tag information), (track/file), (folder)
- [9] Main display
- [10] Tuner reception indicators—ST (stereo), MO (monaural)

# Using the remote controller (RM-RK50)

## Installing the lithium coin battery (CR2025)

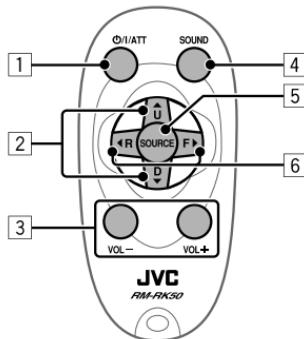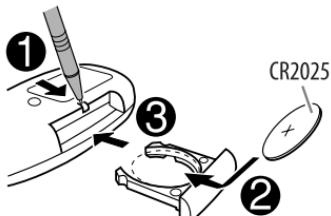


### **Caution:**

- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Battery shall not be exposed to excessive heat such as sunshine, fire, or the like.

**If the effectiveness of the remote controller decreases, replace the battery.**

### **Before using the remote controller:**

- Aim the remote controller directly at the remote sensor on the unit.
- DO NOT expose the remote sensor to bright light (direct sunlight or artificial lighting).

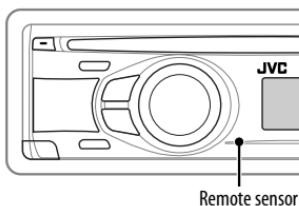

- [1] • Turns the power on if pressed briefly or attenuates the sound when the power is on.
- [2] • Turns the power off if pressed and held.
- [3] • Changes the preset stations.
- [4] • Changes the folder of the MP3/WMA.
- [5] • Adjusts the volume level.
- [6] • Selects the sound mode.
- [5] • Selects the source.
- [6] • Searches for stations if pressed briefly.
  - Fast-forwards or reverses the track if pressed and held.
  - Changes the tracks if pressed briefly.

### **Warning (to prevent accidents and damage):**

- Do not install any battery other than CR2025 or its equivalent.
- Do not leave the remote controller in a place (such as dashboards) exposed to direct sunlight for a long time.
- Store the battery in a place where children cannot reach.
- Do not recharge, short, disassemble, heat the battery, or dispose of it in a fire.
- Do not leave the battery with other metallic materials.
- Do not poke the battery with tweezers or similar tools.
- Wrap the battery with tape and insulate when throwing away or saving it.

# Preparation

## ■ Canceling the display demonstration and setting the clock

- See also page 14.

1		<b>Turn on the power.</b>
2	[Hold] Press and hold until the main menu is called up.  [Turn] → [Press] • Repeat this procedure.	<b>Cancel the display demonstrations</b> Select "DEMO," then "DEMO OFF." <b>Set the clock</b> Select "CLOCK" → "CLOCK SET." Adjust the hour, then press control dial once to proceed to adjust the minute. • To return to the previous menu, press BACK.

## Changing the display information



When the power is turned off: The current clock time is displayed if "CLOCK DISP" is set to "CLOCK OFF," (see page 14).

When the power is turned on: The display information of the current source changes as follows:

FM/AM	Frequency → Clock → Station name*1 → (back to the beginning)
CD	Audio CD/CD Text: Disc title/performer*2 → Track title*2 → Current track number with the elapsed playing time → Current track number with the clock time → (back to the beginning)
CD/USB	MP3/WMA: Album name/performer (folder name)*3 → Track title (file name)*3 → Current track number with the elapsed playing time → Current track number with the clock time → (back to the beginning)

\*1 If no title is assigned to a station, "NO NAME" appears. To assign a title to a station, see page 13.

\*2 If the current disc is an audio CD, "NO NAME" appears.

\*3 If an MP3/WMA file does not have Tag information or "TAG DISPLAY" is set to "TAG OFF" (see page 14), folder name and file name appear.


# Listening to the radio

1	SRC	Select "FM" or "AM."
2		<b>Search for a station to listen—Auto Search.</b> When a station is tuned in, searching stops. To stop searching, press the same button again. <ul style="list-style-type: none"><li>• You can also search for a station manually—Manual Search. Hold either one of the buttons until "M" flashes on the display, then press it repeatedly.</li><li>• When receiving an FM stereo broadcast with sufficient signal strength, the ST indicator lights up on the display.</li></ul>

## Improving the FM reception

When an FM stereo broadcast is hard to receive, activate monaural mode for better reception.

- See also page 14.

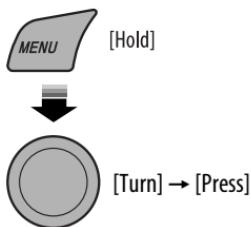

Reception improves, but stereo effect will be lost.

- The MO indicator lights up on the display.

**To restore the stereo effect,** repeat the same procedure to select "MONO OFF." The MO indicator goes off.

## Storing stations in memory

### Automatic presetting (FM)—SSM (Strong-station Sequential Memory)

You can preset up to 18 stations for FM.


#### 1 While listening to a station...



#### 2 Select the preset number range you want to store.



SSM 01–06 ←→ SSM 07–12 ←→ SSM 13–18

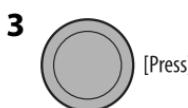

Local FM stations with the strongest signals are searched and stored automatically.

- **To stop searching,** press  $\blacktriangleleft\blacktriangleright\blacktriangledown\blacktriangleright\blacktriangleleft$ .

**To preset other 6 stations,** repeat from step 1 again.

## **Manual presetting (FM/AM)**

You can preset up to 18 stations for FM and 6 stations for AM.

Ex.: Storing FM station of 92.50 MHz into preset number "04."

**1**



**2 Select preset number "04."**



[Turn]

**3**



[Hold]



## **Selecting preset station**



or



[Turn] → [Press]

## **Disc operations**


**1**



POWER  
/ATT

**Turn on the power.**

**2**

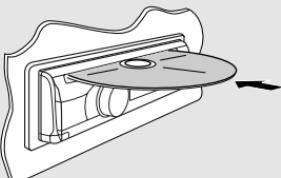

**Insert a disc.**

All tracks will be played repeatedly until you change the source or eject the disc.

## **Stop playing and ejecting the disc**



- “NO DISC” appears. Press SRC to listen to another playback source.

## **Prohibiting disc ejection**



+

[Hold]



**To cancel the prohibition**, repeat the same procedure.

## **Selecting a track/folder**



[Turn] → [Press]

- For MP3/WMA discs, select the desired folder, then the desired track by repeating the control dial procedures.
- To return to the previous menu, press BACK.

*Continued on the next page*

Pressing (or holding) the following buttons allows you to...

	[Press]Pause/resume playback.
	MP3/WMA: Select folder
	[Press]Select track [Hold] Reverse/fast-forward track

- To cancel repeat play or random play, select “RPT OFF” or “RND OFF.”

- To return to the previous menu, press BACK.

## Listening to the USB device

This unit can play MP3/WMA tracks stored in a USB device.

All tracks will be played repeatedly until you change the source or detach the USB device.

### Selecting the playback modes

You can use only one of the following playback modes at a time.

1



[Hold]

2



[Turn] → [Press]

**REPEAT ↔ RANDOM**

3



[Turn] → [Press]

#### REPEAT


**TRACK RPT** : Repeats current track

**FOLDER RPT** : MP3/WMA: Repeats current folder

#### RANDOM

**FOLDER RND** : MP3/WMA: Randomly plays all tracks of current folder, then tracks of next folders

**ALL RND** : Randomly plays all tracks

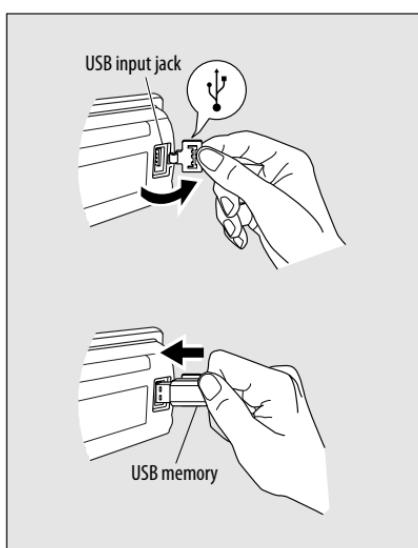

### If a USB device has been attached...

SRC

Playback starts from where it has been stopped previously.

- If a different USB device is currently attached, playback starts from the beginning.

## **To stop play and detach the USB device**

Straightly pull it out from the unit.

- Press SRC to listen to another playback source.

You can operate the USB device in the same way you operate the files on a disc. (See pages 9 and 10.)

### **Cautions:**

- Avoid using the USB device if it might hinder your safety driving.
- Do not pull out and attach the USB device repeatedly while "READING" is shown on the display.
- Do not start the car engine if a USB device is connected.

- This unit may not be able to play the files depending on the type of USB device.
- Operation and power supply may not work as intended for some USB devices.
- You cannot connect a computer to the USB input terminal of the unit.
- Make sure all important data has been backed up to avoid losing the data.
- Do not leave a USB device in the car, expose to direct sunlight, or high temperature to avoid deformation or cause damages to the device.
- Some USB devices may not work immediately after you turn on the power.
- For more details about USB operations, see page 18.


## **Listening to the other external components**

You can connect an external component to AUX (auxiliary) input jack on the control panel.

**Preparation:** Make sure "AUX ON" is selected in the "SRC SELECT" → "AUX IN" setting, see page 16.

<b>1</b>		<b>Select "AUX IN."</b>
<b>2</b>	—	<b>Turn on the connected component and start playing the source.</b>
<b>3</b>		<b>Adjust the volume.</b>
<b>4</b>	—	<b>Adjust the sound as you want (see pages 12 and 13).</b>

### **Connecting an external component to the AUX input jack**

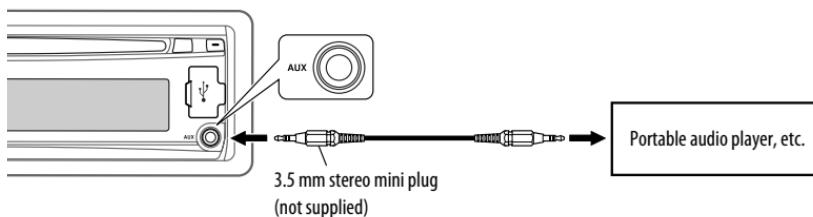

# Selecting a preset sound mode

You can select a preset sound mode suitable to the music genre.

- See also page 14.



or Selecting from Menu.



[Hold]



[Turn] → [Press]



→ "USER/ROCK/CLASSIC  
/POPS/HIP HOP/JAZZ"

- See below and page 13 for "USER" settings.

## Preset value setting for each sound mode

Sound mode	Preset value									
	BASS			MIDDLE			TREBLE			LOUD (loudness)
	Freq.	Level	Q	Freq.	Level	Q	Freq.	Level	Q	
USER	60 Hz	00	Q1.25	1.0 kHz	00	Q1.0	10.0 kHz	00	—	
ROCK	100 Hz	+03	Q1.0	1.0 kHz	00	Q1.25	10.0 kHz	+02	—	
CLASSIC	80 Hz	+01	Q1.25	1.0 kHz	00	Q1.25	10.0 kHz	+03	—	
POPS	100 Hz	+02	Q1.25	1.0 kHz	+01	Q1.25	10.0 kHz	+02	—	
HIP HOP	60 Hz	+04	Q1.0	1.0 kHz	-02	Q1.0	10.0 kHz	+01	—	
JAZZ	80 Hz	+03	Q1.25	1.0 kHz	00	Q1.25	10.0 kHz	+03	—	

Freq.: Frequency Q: Q-slope

## 1 Storing your own sound mode

You can store your own adjustments in memory.

### 1 Select "USER" for "EQ."




[Hold]

### 2 While "USER" is shown on the display...




[Hold]

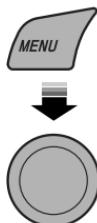

[Turn] → [Press]



### 3 Select a tone.

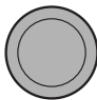

[Turn] → [Press]

↔ BASS ↔ MIDDLE ↔ TREBLE ↔

### 4 Adjust the sound elements of the selected tone.



[Turn] → [Press]

- 1 Adjust the frequency.
- 2 Adjust the level.
- 3 Adjust the Q-slope.

Sound elements	Range/selectable items		
	BASS	MIDDLE	TREBLE
Frequency	60 Hz	0.5 kHz	10.0 kHz
	80 Hz	1.0 kHz	12.5 kHz
	100 Hz	1.5 kHz	15.0 kHz
	200 Hz	2.5 kHz	17.5 kHz
Level	-06 to +06	-06 to +06	-06 to +06
Q	Q1.0 Q1.25 Q1.5 Q2.0	Q0.75 Q1.0 Q1.25	Fixed

### 5 Repeat steps 3 and 4 to adjust other sound characteristics.

The adjustment made will be stored automatically.

## Title assignment

You can assign titles to 30 station frequencies (FM and AM) using 8 characters (maximum) for each title.

### 1 Select "FM" or "AM."

SRC

### 2 Show the title entry screen.


DISP

+[Hold]



### 3 Assign a title.

- 1 Select a character.

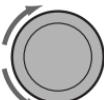

[Turn]


A	B	C	D	E	F	G
H	I	J	K	L	M	N
O	P	Q	R	S	T	U
V	W	X	Y	Z	0	1
2	3	4	5	6	7	8
9	-	/	<	>	space	

- 2 Move to the next (or previous) character position.



- 3 Repeat steps 1 and 2 until you finish entering the title.

### 4 Finish the procedure.

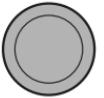

[Press]

### To erase the entire title

In step 2 above...

DISP [Hold]



[Press]

# Menu operations

<b>1 Call up the menu.</b>	<b>2 Select the desired item.</b>	<b>3 Repeat step 2 if necessary.</b>
 <span style="margin-left: 20px;">[Hold]</span>	 <span style="margin-left: 20px;">[Turn] → [Press]</span>	<ul style="list-style-type: none"> <li>• To return to the previous menu, press BACK.</li> <li>• To exit from the menu, press DISP or MENU.</li> </ul>

Initial: **Underlined**

Category	Menu items	Selectable settings, [reference page]
DEMO	DEMO Display demonstration	<ul style="list-style-type: none"> <li>• <b>DEMO ON</b> : Display demonstration will be activated automatically if no operation is done for about 20 seconds, [7].</li> <li>• <b>DEMO OFF</b> : Cancels.</li> </ul>
CLOCK	CLOCK DISP*1 Clock display	<ul style="list-style-type: none"> <li>• <b>CLOCK ON</b> : Clock time is shown on the display at all times when the power is turned off.</li> <li>• <b>CLOCK OFF</b> : Cancels; pressing DISP will show the clock time for about 5 seconds when the power is turned off, [7].</li> </ul>
	CLOCK SET Clock setting	: Adjust the hour, then the minute, [7]. (Initial: 1:00)
EQ	EQ Equalizer	: Select a preset sound mode suitable to the music genre. <b>USER, ROCK, CLASSIC, POPS, HIP HOP, JAZZ</b>
DISPLAY	DIMMER Dimmer	<ul style="list-style-type: none"> <li>• <b>DIMMER ON</b> : Dims the display and button illumination.</li> <li>• <b>DIMMER OFF</b> : Cancels.</li> </ul>
	SCROLL*2 Scroll	<ul style="list-style-type: none"> <li>• <b>SCROLL ONCE</b> : Scrolls the displayed information once.</li> <li>• <b>SCROLL AUTO</b> : Repeats scrolling (at 5-second intervals).</li> <li>• <b>SCROLL OFF</b> : Cancels.</li> </ul> <p>Pressing DISP for more than one second can scroll the display regardless of the setting.</p>
	TAG DISPLAY Tag display	<ul style="list-style-type: none"> <li>• <b>TAG ON</b> : Shows the Tag information while playing MP3/WMA tracks.</li> <li>• <b>TAG OFF</b> : Cancels.</li> </ul>
TUNER	MONO*3 Monaural mode	<ul style="list-style-type: none"> <li>• <b>MONO ON</b> : Activate monaural mode to improve FM reception, but stereo effect will be lost, [8].</li> <li>• <b>MONO OFF</b> : Restore the stereo effect.</li> </ul>

\*1 If the power supply is not interrupted by turning off the ignition key of your car, it is recommended to select "CLOCK OFF" to save the car's battery.

\*2 Some characters or symbols will not be shown correctly (or will be blanked) on the display.

\*3 Displayed only when the source is "FM."

Category	Menu items	Selectable settings, [reference page]	
TUNER	<b>IF BAND</b> Intermediate frequency band	<ul style="list-style-type: none"> <li>• <b>AUTO</b> : Increases the tuner selectivity to reduce interference noises between adjacent stations. (Stereo effect may be lost.)</li> <li>• <b>WIDE</b> : Subject to interference noises from adjacent stations, but sound quality will not be degraded and the stereo effect will remain.</li> </ul>	
	<b>FADER*</b> <sup>4,*5</sup> Fader	<b>R06 – F06</b> : Adjust the front and rear speaker output balance. (Initial: 00)	
	<b>BALANCE*</b> <sup>5</sup> Balance	<b>L06 – R06</b> : Adjust the left and right speaker output balance. (Initial: 00)	
AUDIO	<b>LOUD</b> Loudness	<ul style="list-style-type: none"> <li>• <b>LOUD OFF</b> : Cancels.</li> <li>• <b>LOUD ON</b> : Boost low and high frequencies to produce a well-balanced sound at a low volume level.</li> </ul>	
	<b>VOL ADJUST</b> Volume adjust	<b>VOL ADJ –05 —</b> <b>VOL ADJ +05</b> (Initial: VOL ADJ 00) <ul style="list-style-type: none"> <li>Preset the volume adjustment level of each source (except FM), compared to the FM volume level. The volume level will automatically increase or decrease when you change the source.</li> <li>Before making an adjustment, select the source you want to adjust.</li> <li>"VOL ADJ FIX" appears on the display if "FM" is selected as the source.</li> </ul>	
	<b>L/O MODE</b> Line output mode	<ul style="list-style-type: none"> <li>• <b>SUB.W</b> : Select if the REAR LINE OUT terminals are used for connecting a subwoofer (through an external amplifier).</li> <li>• <b>REAR</b> : Select if the REAR LINE OUT terminals are used for connecting the speakers (through an external amplifier).</li> </ul>	
	<b>SUB.W FREQ*</b> <sup>6</sup> Subwoofer cutoff frequency	<ul style="list-style-type: none"> <li>• <b>LOW</b> : Frequencies lower than 72 Hz are sent to the subwoofer.</li> <li>• <b>MID</b> : Frequencies lower than 111 Hz are sent to the subwoofer.</li> <li>• <b>HIGH</b> : Frequencies lower than 157 Hz are sent to the subwoofer.</li> </ul>	
	<b>SUB.W LEVEL*</b> <sup>6</sup> Subwoofer level	<b>SUB.W 00</b> — <b>SUB.W 08</b> : Adjust the subwoofer output level. (Initial: SUB.W 04)	
	<b>BEEP</b> Key touch tone	<ul style="list-style-type: none"> <li>• <b>BEEP OFF</b> : Deactivates the key touch tone.</li> <li>• <b>BEEP ON</b> : Activates the key touch tone.</li> </ul>	
	<b>AMP GAIN*</b> <sup>7</sup> Amplifier gain control	<ul style="list-style-type: none"> <li>• <b>LOW POWER</b> : VOLUME 00 – VOLUME 30 (Select if the maximum power of each speaker is less than 50 W to prevent damaging the speaker.)</li> <li>• <b>HIGH POWER</b> : VOLUME 00 – VOLUME 50</li> </ul>	

\*<sup>4</sup> If you are using a two-speaker system, set the fader level to "00."

\*<sup>5</sup> This adjustment will not affect the subwoofer output.

\*<sup>6</sup> Displayed only when "L/O MODE" is set to "SUB.W."

\*<sup>7</sup> The volume level automatically changes to "VOLUME 30" if you change to "LOW POWER" with the volume level set higher than "VOLUME 30."

Continued on the next page

Category	Menu items	Selectable settings, [reference page]	
<b>SRC SELECT</b>	<b>AM*</b> <sup>8</sup>	<b>AM OFF</b>	: Disable "AM" in source selection.
	AM station	<b>AM ON</b>	: Enable "AM" in source selection, [4].
	<b>AUX IN*</b> <sup>9</sup>	<b>AUX OFF</b>	: Disable "AUX IN" in source selection.
	Auxiliary input	<b>AUX ON</b>	: Enable "AUX IN" in source selection, [4].

\*8 Displayed only when any source other than "AM" is selected.

\*9 Displayed only when any source other than "AUX IN" is selected.

## More about this unit

### ■ Basic operations

#### Turning on the power

- By pressing SRC button on the unit, you can also turn on the power. If the source is ready, playback also starts.

#### Turning off the power

- If you turn off the power while listening to a track, playback will start from where it had been stopped previously next time you turn on the power.

#### General

- If you change the source while listening to a disc, playback stops.  
Next time you select "CD" as the playback source, playback will start from where it had been stopped previously.
- If no operation is done for about 30 seconds after pressing MENU button, the operation will be canceled.

### ■ Tuner operations

#### Storing stations in memory

- During SSM search...
  - All previously stored stations are erased and the stations are stored anew.
  - When SSM is over, the station stored in the lowest preset number will be automatically tuned in.

- When storing a station manually, the previously preset station is erased when a new station is stored in the same preset number.

### ■ Disc operations

#### Caution for DualDisc playback

- The Non-DVD side of a "DualDisc" does not comply with the "Compact Disc Digital Audio" standard. Therefore, the use of Non-DVD side of a DualDisc on this product may not be recommended.

#### General

- This unit has been designed to reproduce CDs/CD Texts, and CD-Rs (Recordable)/CD-RWs (Rewritable) in audio CD (CD-DA), MP3/WMA formats.
- When a disc is inserted upside down, "PLEASE" and "EJECT" appear alternately on the display. Press ▲ to eject the disc.
- MP3 and WMA "tracks" (words "file" and "track" are used interchangeably) are recorded in "folders."
- While fast-forwarding or reversing on an MP3 or WMA disc, you can only hear intermittent sounds.

## **Playing a CD-R or CD-RW**

- Use only "finalized" CD-Rs or CD-RWs.
- This unit can only play back files of the same type as those detected first if a disc includes both audio CD (CD-DA) files and MP3/WMA files.
- This unit can play back multi-session discs; however, unclosed sessions will be skipped while playing.
- Some CD-Rs or CD-RWs may not play back on this unit because of their disc characteristics, or for the following reasons:
  - Discs are dirty or scratched.
  - Moisture condensation has occurred on the lens inside the unit.
  - The pickup lens inside the unit is dirty.
  - The files on the CD-R/CD-RW are written using the "Packet Write" method.
  - There are improper recording conditions (missing data, etc.) or media conditions (stained, scratched, warped, etc.).
- CD-RWs may require a longer readout time since the reflectance of CD-RWs is lower than that of regular CDs.
- Do not use the following CD-Rs or CD-RWs:
  - Discs with stickers, labels, or a protective seal stuck to the surface.
  - Discs on which labels can be directly printed by an ink jet printer.Using these discs under high temperature or high humidity may cause malfunctions or damage to the unit.

## **Playing an MP3/WMA disc**

- This unit can play back MP3/WMA files with the extension code <.mp3> or <.wma> (regardless of the letter case—upper/lower).
- This unit can show the names of albums, artists (performer), and Tag (Version 1.0, 1.1, 2.2, 2.3, or 2.4) for MP3 files and for WMA files.
- This unit can display only one-byte characters. No other characters can be correctly displayed.

- This unit can play back MP3/WMA files meeting the conditions below:
  - Bit rate of MP3: 32 kbps — 320 kbps
  - Sampling frequency of MP3:
    - 32 kHz, 44.1 kHz, 48 kHz (for MPEG-1)
    - 16 kHz, 22.05 kHz, 24 kHz (for MPEG-2)
  - Bit rate of WMA: 32 kbps — 320 kbps
  - Sampling frequency of WMA: 22.05 kHz, 32 kHz, 44.1 kHz, 48 kHz
  - Disc format: ISO 9660 Level 1/Level 2, Romeo, Joliet, Windows extension.
- The maximum number of characters for file/folder names vary depending on the disc format used (includes 4 extension characters—<.mp3> or <.wma>).
  - ISO 9660 Level 1: up to 12 characters
  - ISO 9660 Level 2: up to 31 characters
  - Romeo: up to 64 characters
  - Joliet: up to 32 characters
  - Windows extension: up to 64 characters
- This unit can recognize a total of 512 files, 255 folders, and 8 hierarchical levels.
- This unit can play back files recorded in VBR (variable bit rate).  
Files recorded in VBR have a discrepancy in the elapsed time display, and do not show the actual elapsed time. In particular, this difference becomes noticeable after performing the search function.
- This unit cannot play back the following files:
  - MP3 files encoded in MP3i and MP3 PRO format.
  - MP3 files encoded in an inappropriate format.
  - MP3 files encoded with Layer 1/2.
  - WMA files encoded in lossless, professional, and voice format.
  - WMA files which are not based upon Windows Media® Audio.
  - WMA files copy-protected with DRM.
  - Files which have data such as AIFF, ATRAC3, etc.
- The search function works but search speed is not constant.

*Continued on the next page*

## **Playing MP3/WMA tracks from a USB device**

- While playing from a USB device, the playback order may differ from other players.
- This unit may be unable to play back some USB devices or some files due to their characteristics or recording conditions.
- Depending on the shape of the USB devices and connection ports, some USB devices may not be attached properly or the connection might be loose.
- Connect one USB mass storage class device to the unit at a time. Do not use a USB hub.
- If the connected USB device does not have the correct files, "CANNOT PLAY" appears.
- This unit can show Tag (Version 1.0, 1.1, 2.2, 2.3, or 2.4) for MP3 files and for WMA files.
- This unit can play back MP3/WMA files meeting the conditions below:
  - Bit rate of MP3: 32 kbps — 320 kbps
  - Sampling frequency of MP3:
    - 32 kHz, 44.1 kHz, 48 kHz (for MPEG-1)
    - 16 kHz, 22.05 kHz, 24 kHz (for MPEG-2)
  - Bit rate of WMA: 32 kbps — 320 kbps
  - Sampling frequency of WMA: 22.05 kHz, 32 kHz, 44.1 kHz, 48 kHz
- This unit can play back MP3 files recorded in VBR (variable bit rate).
- The maximum number of characters for:
  - Folder names : 32 characters
  - File names : 32 characters
  - MP3 Tag : 64 characters
  - WMA Tag : 32 characters
- This unit can recognize a total of 5 000 files, 255 folders (255 files per folder including folder without unsupported files), and of 8 hierarchies.
- This unit does not support SD card reader.
- This unit cannot recognize a USB device whose rating is other than 5 V and exceeds 500 mA.

- USB devices equipped with special functions such as data security functions cannot be used with the unit.
- Do not use a USB device with 2 or more partitions.
- This unit may not recognize a USB device connected through a USB card reader.
- This unit may not play back files in a USB device properly when using a USB extension cord.
- This unit cannot play back the following files:
  - MP3 files encoded with MP3i and MP3 PRO format.
  - MP3 files encoded in an inappropriate format.
  - MP3 files encoded with Layer 1/2.
  - WMA files encoded in lossless, professional, and voice format.
  - WMA files not based on Windows Media® Audio.

## **Ejecting a disc or removing a USB device**

- If the ejected disc is not removed within 15 seconds, it is automatically inserted into the loading slot again to protect it from dust.
- After ejecting a disc or removing a USB device, "NO DISC" or "NO USB" appears and you cannot operate some of the buttons. Insert another disc, reattach a USB device, or press SRC to select another playback source.

## **Title assignment**

- If you try to assign titles to more than 30 station frequencies, "NAME FULL" appears. Delete unwanted titles before assignment.

## **Menu operations**

- If you change the "AMP GAIN" setting from "HIGH POWER" to "LOW POWER" while the volume level is set higher than "VOLUME 30," the unit automatically changes the volume level to "VOLUME 30."

# Troubleshooting

What appears to be trouble is not always serious. Check the following points before calling a service center.

	Symptoms	Remedies/Causes
General	<ul style="list-style-type: none"><li>• Sound cannot be heard from the speakers.</li></ul>	<ul style="list-style-type: none"><li>• Adjust the volume to the optimum level.</li><li>• Check the cords and connections.</li></ul>
	<ul style="list-style-type: none"><li>• The unit does not work at all.</li></ul>	Reset the unit (see page 3).
	<ul style="list-style-type: none"><li>• "AUX IN" cannot be selected.</li></ul>	Check the "SRC SELECT" → "AUX IN" setting (see page 16).
FM/AM	<ul style="list-style-type: none"><li>• SSM automatic presetting does not work.</li></ul>	Store stations manually.
	<ul style="list-style-type: none"><li>• Static noise while listening to the radio.</li></ul>	Connect the antenna firmly.
	<ul style="list-style-type: none"><li>• "AM" cannot be selected.</li></ul>	Check the "SRC SELECT" → "AM" setting (see page 16).
Discs in general	<ul style="list-style-type: none"><li>• Disc cannot be played back.</li></ul>	Insert the disc correctly.
	<ul style="list-style-type: none"><li>• CD-R/CD-RW cannot be played back.</li></ul>	<ul style="list-style-type: none"><li>• Insert a finalized CD-R/CD-RW.</li></ul>
	<ul style="list-style-type: none"><li>• Tracks on the CD-R/CD-RW cannot be skipped.</li></ul>	<ul style="list-style-type: none"><li>• Finalize the CD-R/CD-RW with the component which you used for recording.</li></ul>
	<ul style="list-style-type: none"><li>• Disc can neither be played back nor ejected.</li></ul>	<ul style="list-style-type: none"><li>• Unlock the disc (see page 9).</li><li>• Eject the disc forcibly (see page 3).</li></ul>
	<ul style="list-style-type: none"><li>• Disc sound is sometimes interrupted.</li></ul>	<ul style="list-style-type: none"><li>• Stop playback while driving on rough roads.</li><li>• Change the disc.</li><li>• Check the cords and connections.</li></ul>
	<ul style="list-style-type: none"><li>• "NO DISC" appears on the display.</li></ul>	Insert a playable disc into the loading slot.
	<ul style="list-style-type: none"><li>• "PLEASE" and "EJECT" appear alternately on the display.</li></ul>	Press <b>▲</b> , then insert a disc correctly.
	<ul style="list-style-type: none"><li>• Disc cannot be played back.</li></ul>	<ul style="list-style-type: none"><li>• Use a disc with MP3/WMA tracks recorded in a format compliant with ISO 9660 Level 1, Level 2, Romeo, or Joliet.</li><li>• Add the extension code &lt;.mp3&gt; or &lt;.wma&gt; to the file names.</li></ul>
MP3/WMA playback	<ul style="list-style-type: none"><li>• Noise is generated.</li></ul>	Skip to another track or change the disc. (Do not add the extension code <.mp3> or <.wma> to non-MP3 or WMA tracks.)

Continued on the next page

	<b>Symptoms</b>	<b>Remedies/Causes</b>
<b>MP3/WMA playback</b>	<ul style="list-style-type: none"> <li>A longer readout time is required ("READING" keeps flashing on the display).</li> </ul>	Do not use too many hierarchical levels and folders.
	<ul style="list-style-type: none"> <li>Tracks do not play back in the order you have intended them to play.</li> </ul>	The playback order is determined when the files are recorded.
	<ul style="list-style-type: none"> <li>The elapsed playing time is not correct.</li> </ul>	This sometimes occurs during playback. This is caused by how the tracks are recorded on the disc.
	<ul style="list-style-type: none"> <li>"NO FILE" appears on the display.</li> </ul>	Selected folder is an empty folder*. Select another folder that contains MP3/WMA tracks. <i>* Folder that is physically empty or folder that contains data but does not contain valid MP3/WMA track.</i>
	<ul style="list-style-type: none"> <li>The correct characters are not displayed (e.g. album name).</li> </ul>	This unit can only display letters (upper case), numbers, and a limited number of symbols.
	<ul style="list-style-type: none"> <li>Noise is generated.</li> </ul>	The track played back is not an MP3/WMA track. Skip to another file. (Do not add the extension code <.mp3> or <.wma> to non-MP3 or WMA tracks.)
	<ul style="list-style-type: none"> <li>"READING" keeps flashing on the display.</li> </ul>	<ul style="list-style-type: none"> <li>Readout time varies depending on the USB device.</li> <li>Do not use too many hierarchy or folders.</li> <li>Turn off the power then on again.</li> <li>Reattach the USB device again.</li> </ul>
<b>USB device playback</b>	<ul style="list-style-type: none"> <li>"NO FILE" appears on the display.</li> </ul>	Selected folder is an empty folder*. Select another folder that contains MP3/WMA tracks. <i>* Folder that is physically empty or folder that contains data but does not contain valid MP3/WMA track.</i>
	<ul style="list-style-type: none"> <li>Tracks/folders are not played back in the order you have intended.</li> </ul>	The playback order is determined by the write-in time stamp. The first track/folder written into the USB device will be the first track/folder for playback.
	<ul style="list-style-type: none"> <li>"CANNOT PLAY" flashes on the display.</li> <li>"NO USB" appears on the display.</li> <li>The unit cannot detect the USB device.</li> </ul>	<ul style="list-style-type: none"> <li>Attach a USB device that contains tracks encoded in an appropriate format.</li> <li>Reattach the USB device again.</li> </ul>
	<ul style="list-style-type: none"> <li>Correct characters are not displayed (e.g. album name).</li> </ul>	This unit can only display alphabets (upper case), numbers, and a limited number of symbols.
	<ul style="list-style-type: none"> <li>While playing a track, sound is sometimes interrupted.</li> </ul>	The MP3/WMA tracks have not been properly copied into the USB device. Copy MP3/WMA tracks again into the USB device, and try again.

- Microsoft and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

# Maintenance

## ■ How to clean the connectors

Frequent detachment will deteriorate the connectors. To minimize this possibility, periodically wipe the connectors with a cotton swab or cloth moistened with alcohol, being careful not to damage the connectors.



Connectors

## ■ Moisture condensation

Moisture may condense on the lens inside the unit in the following cases:

- After starting the heater in the car.
- If it becomes very humid inside the car.

Should this occur, the unit may malfunction. In this case, eject the disc and leave the unit turned on for a few hours until the moisture has evaporated.

## ■ How to handle discs

### When removing a disc from its case

case, press down the center holder of the case and lift the disc out, holding it by the edges.



- Always hold the disc by the edges. Do not touch its recording surface.

**When storing a disc in its case**, gently insert the disc around the center holder (with the printed surface facing up).

- Make sure to store discs in cases after use.

## ■ To keep discs clean

A dirty disc may not play correctly.

If a disc does become dirty, wipe it with a soft cloth in a straight line from center to edge.



- Do not use any solvents (for example, conventional record cleaner, spray, thinner, benzine, etc.) to clean discs.

## ■ To play new discs

New discs may have some rough spots around the inner and outer edges. If such a disc is used, this unit may reject the disc.



**To remove these rough spots**, rub the edges with a pencil or ball-point pen, etc.

### Do not use the following discs:

Single CD (8 cm disc)



Warped disc



Sticker and sticker residue



Stick-on label



Unusual shape



C-thru Disc (semi-transparent disc)



Transparent or semi-transparent parts on its recording area



# Specifications

## AUDIO AMPLIFIER SECTION

Maximum Power Output:	Front/Rear:	50 W per channel
Continuous Power Output (RMS):	Front/Rear:	19 W per channel into 4 Ω, 40 Hz to 20 000 Hz at no more than 0.8% total harmonic distortion.
Load Impedance:		4 Ω (4 Ω to 8 Ω allowance)
Tone Control Range:	Bass:	±12 dB (60 Hz, 80 Hz, 100 Hz, 200 Hz) Q1.0, Q1.25, Q1.5, Q2.0
	Middle:	±12 dB (0.5 kHz, 1.0 kHz, 1.5 kHz, 2.5 kHz) Q0.75, Q1.0, Q1.25
	Treble:	±12 dB (10.0 kHz, 12.5 kHz, 15.0 kHz, 17.5 kHz) Q = Fixed
Frequency Response:		40 Hz to 20 000 Hz
Signal-to-Noise Ratio:		70 dB
Line-Out Level/Impedance:		2.5 V/20 kΩ load (full scale)
Output Impedance:		1 kΩ
Subwoofer-Out Level/Impedance:		2.5 V/20 kΩ load (full scale)
Other Terminal:		USB input jack, AUX (auxiliary) input jack

## TUNER SECTION

Frequency Range:	FM:	87.5 MHz to 108.0 MHz
	AM:	531 kHz to 1 602 kHz
FM Tuner	Usable Sensitivity:	11.3 dBf (1.0 µV/75 Ω)
	50 dB Quieting Sensitivity:	16.3 dBf (1.8 µV/75 Ω)
	Alternate Channel Selectivity (400 kHz):	65 dB
	Frequency Response:	40 Hz to 15 000 Hz
	Stereo Separation:	30 dB
AM Tuner	Sensitivity:	20 µV
	Selectivity:	35 dB

<b>CD PLAYER SECTION</b>	
Type:	Compact disc player
Signal Detection System:	Non-contact optical pickup (semiconductor laser)
Number of Channels:	2 channels (stereo)
Frequency Response:	5 Hz to 20 000 Hz
Dynamic Range:	96 dB
Signal-to-Noise Ratio:	98 dB
Wow and Flutter:	Less than measurable limit
MP3 Decoding Format: (MPEG1/2 Audio Layer 3)	Max. Bit Rate: 320 kbps
WMA (Windows Media® Audio) Decoding Format:	Max. Bit Rate: 320 kbps

<b>USB SECTION</b>	
USB Standard:	USB 1.1, USB 2.0
Data Transfer Rate (Full Speed):	Max. 12 Mbps
Compatible Device:	Mass storage class
Compatible File System:	FAT 32/16/12
Playable Audio Format:	MP3/WMA
Max. Current:	DC 5 V === 500 mA

<b>GENERAL</b>		
Power Requirement:	Operating Voltage:	DC 14.4 V (11 V to 16 V allowance)
Grounding System:		Negative ground
Allowable Operating Temperature:		0°C to +40°C
Dimensions (W × H × D): (approx.)	Installation Size:	182 mm × 52 mm × 160 mm
	Panel Size:	188 mm × 58 mm × 6 mm
Mass:		1.3 kg (excluding accessories)

*Design and specifications are subject to change without notice.*

**Having TROUBLE with operation?  
Please reset your unit**

**Refer to page of How to reset your unit**

**JVC**

 EN

© 2008 Victor Company of Japan, Limited

1008DTSM DTJEIN

This unit is designed to operate on **12 V DC, NEGATIVE ground electrical systems**. If your vehicle does not have this system, a voltage inverter is required, which can be purchased at JVC car audio dealers.


### WARNINGS

To prevent short circuits, we recommend that you disconnect the battery's negative terminal and make all electrical connections before installing the unit.

- Be sure to ground this unit to the car's chassis again after installation.**

#### Notes:


- Replace the fuse with one of the specified rating. If the fuse blows frequently, consult your JVC car audio dealer.
- It is recommended to connect speakers with a maximum power of more than 50 W (both at the rear and at the front, with an impedance of **4 Ω to 8 Ω**). If the maximum power is less than 50 W, change "AMP GAIN" setting to prevent the speakers from being damaged (see page 15 of the INSTRUCTIONS).
- To prevent short circuits, cover the terminals of the UNUSED leads with insulating tape.
- The heat sink becomes very hot after use. Be careful not to touch it when removing this unit.

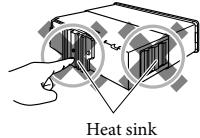

Heat sink


### PRECAUTIONS on power supply and speaker connections:

- DO NOT connect the speaker leads of the power cord to the car battery; otherwise, the unit will be seriously damaged.**
- BEFORE connecting the speaker leads of the power cord to the speakers, check the speaker wiring in your car.

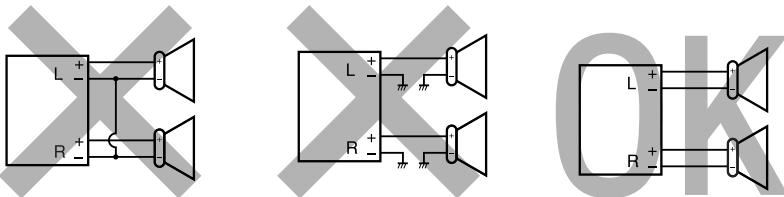


### Parts list for installation and connection

The following parts are provided for this unit. If any item is missing, consult your JVC car audio dealer immediately.

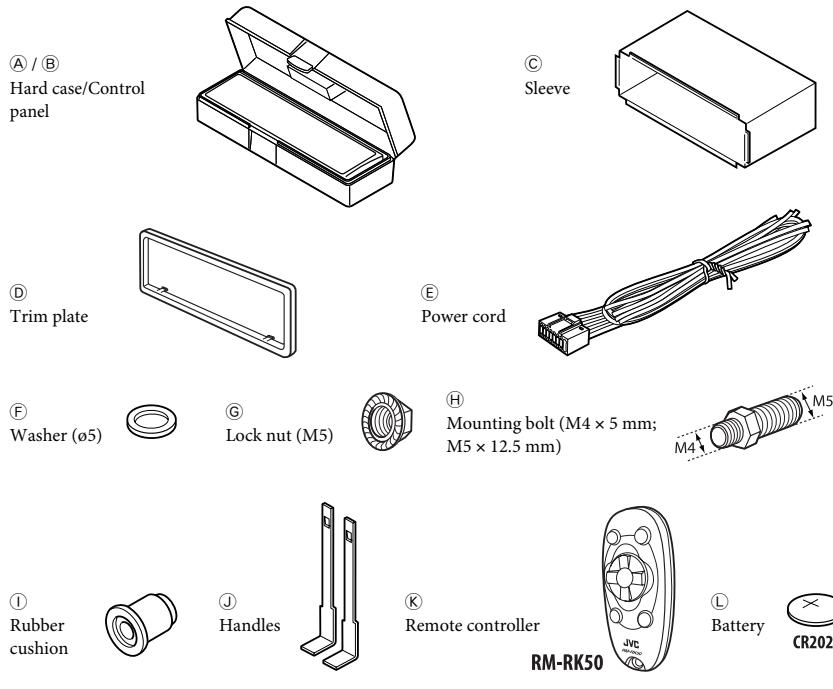

### TROUBLESHOOTING


- The fuse blows.**  
\* Are the red and black leads connected correctly?
- Power cannot be turned on.**  
\* Is the yellow lead connected?
- No sound from the speakers.**  
\* Is the speaker output lead short-circuited?
- Sound is distorted.**  
\* Is the speaker output lead grounded?  
\* Are the "-" terminals of L and R speakers grounded in common?
- Noise interfere with sounds.**  
\* Is the rear ground terminal connected to the car's chassis using shorter and thicker cords?
- This unit becomes hot.**  
\* Is the speaker output lead grounded?  
\* Are the "-" terminals of L and R speakers grounded in common?
- This unit does not work at all.**  
\* Have you reset your unit?

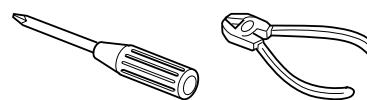

### INSTALLATION (IN-DASH MOUNTING)


The following illustration shows a typical installation. If you have any questions or require information regarding installation kits, consult your JVC car audio dealer or a company supplying kits.

- If you are not sure how to install this unit correctly, have it installed by a qualified technician.

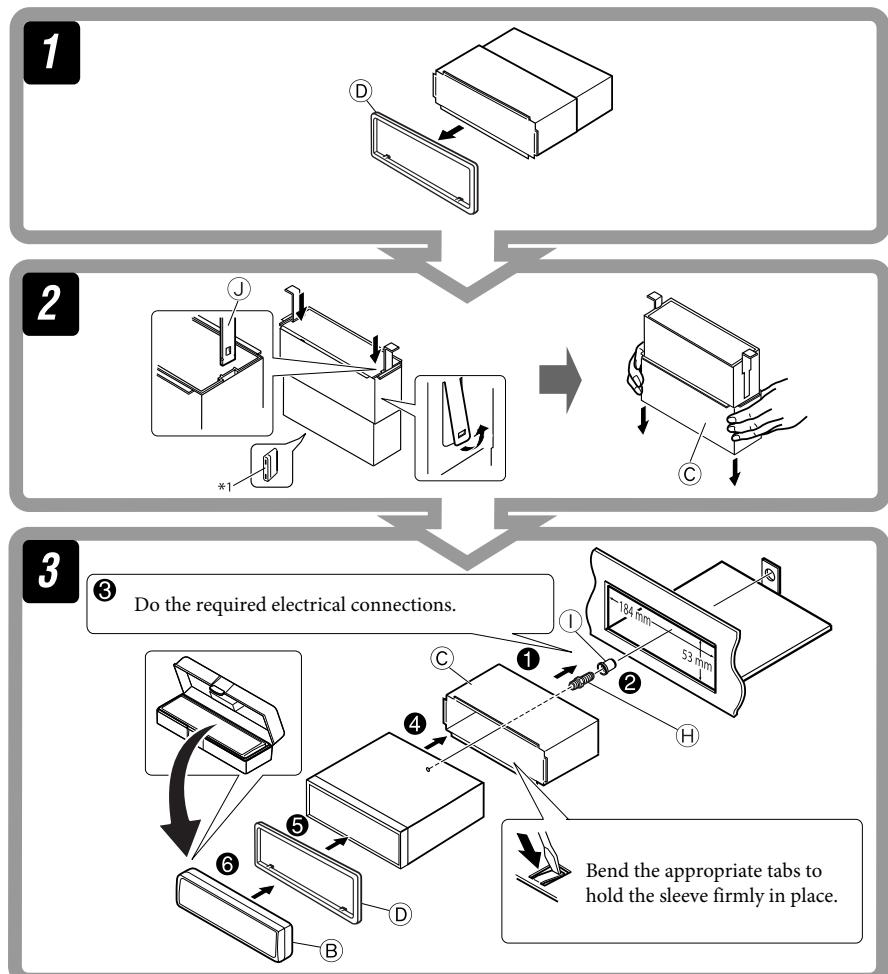


### Removing the unit

Before removing the unit, release the rear section.

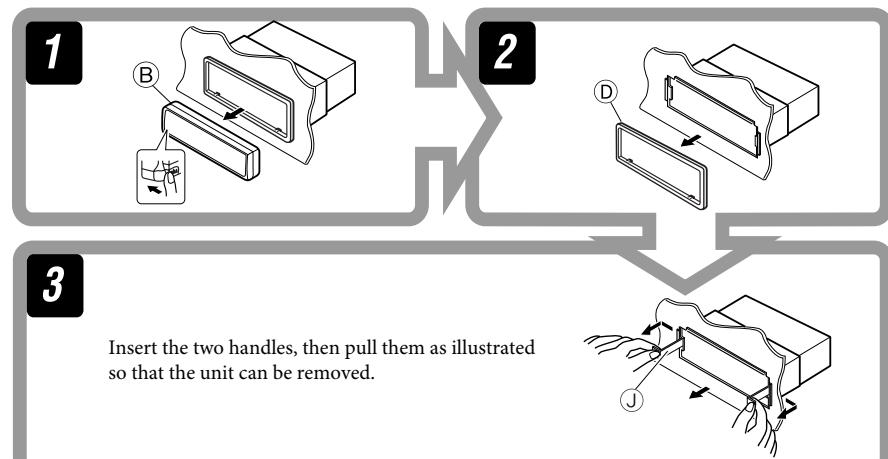


### When using the optional stay

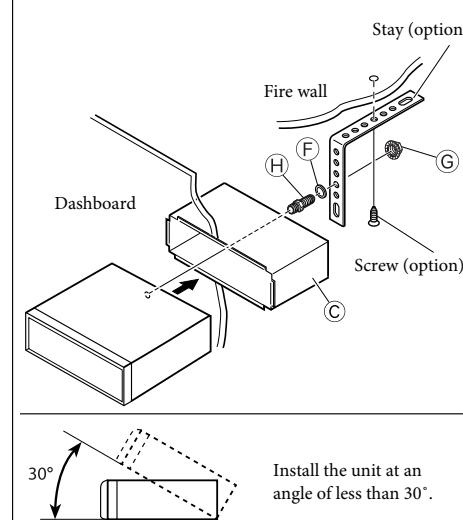

### When installing the unit without using the sleeve

In a Toyota car for example, first remove the car radio and install the unit in its place.

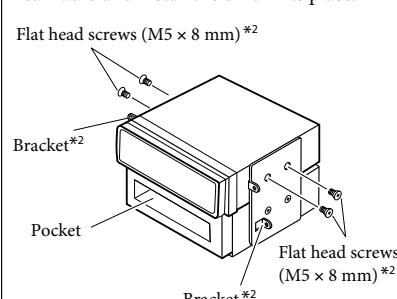

**Note :** When installing the unit on the mounting bracket, make sure to use the 8 mm-long screws. If longer screws are used, they could damage the unit.

\*1 When you stand the unit, be careful not to damage the fuse on the rear.


\*2 Not supplied for this unit.

# ELECTRICAL CONNECTIONS

## A Typical connections

**Before connecting:** Check the wiring in the vehicle carefully. Incorrect connection may cause serious damage to this unit. The leads of the power cord and those of the connector from the car body may be different in color.


- 1 Connect the colored leads of the power cord in the order specified in the illustration below.
- 2 Connect the antenna cord.
- 3 Finally connect the wiring harness to the unit.

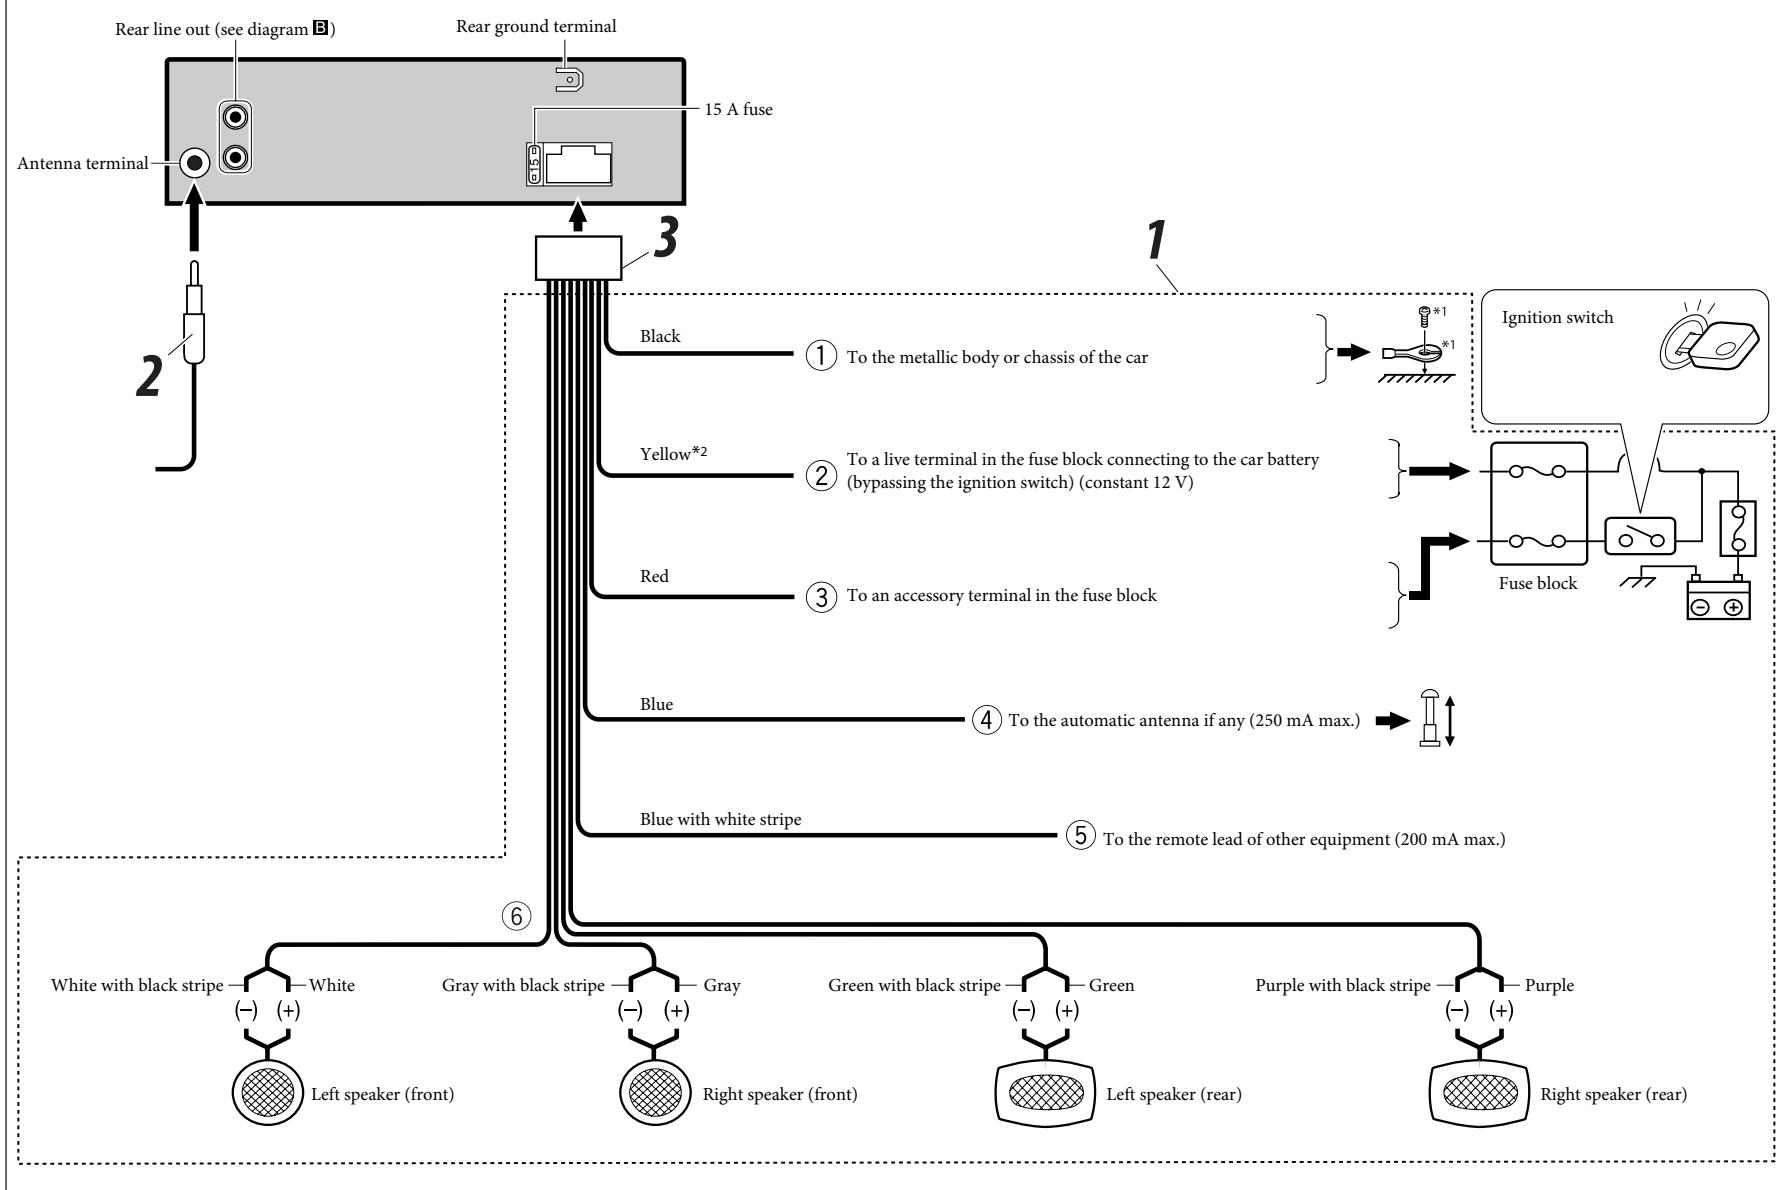

## B Connecting the external amplifier or subwoofer

You can connect an amplifier to upgrade your car stereo system.

- Connect the remote lead (blue with white stripe) to the remote lead of the other equipment so that it can be controlled through this unit.
- **Disconnect the speakers from this unit, connect them to the amplifier. Leave the speaker leads of this unit unused.**

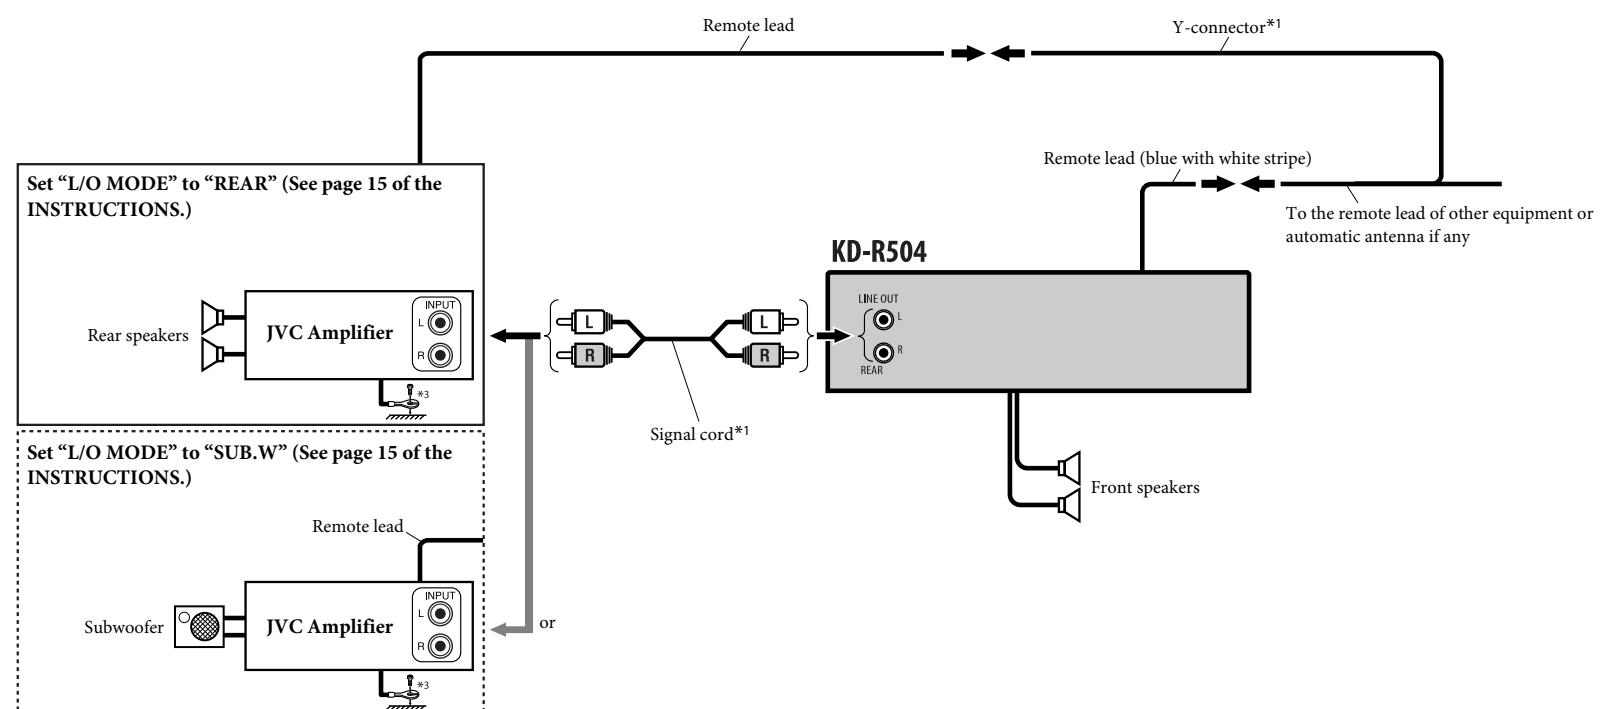

\*1 Not supplied for this unit.

\*2 Before checking the operation of this unit prior to installation, this lead must be connected, otherwise the power cannot be turned on.

\*3 Firmly attach the ground wire to the metallic body or to the chassis of the car—to the place uncoated with paint (if coated with paint, remove the paint before attaching the wire). Failure to do so may cause damage to the unit.

# JVC

## CD RECEIVER




KD-R506/KD-R505/  
KD-RC502/KD-RC501

เครื่องเล่น CD

ENGLISH

ไทย

KD-R506/KD-R505/  
KD-RC502/KD-RC501

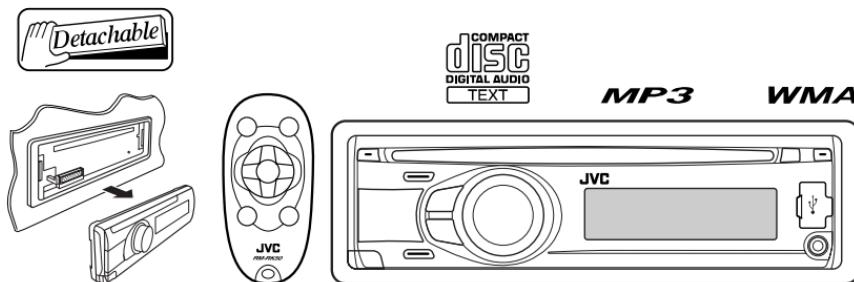

For canceling the display demonstration, see page 7.

ดูที่หน้า 7 เพื่อยกเลิกการสาธิตภาพประกอน

For installation and connections, refer to the separate manual.

กรุณาดูคู่มือที่แยกต่างหาก ในการติดตั้งและการเชื่อมต่อ

## INSTRUCTIONS คำแนะนำ

GET0584-001B  
[U/UH]

Thank you for purchasing a JVC product.

Please read all instructions carefully before operation, to ensure your complete understanding and to obtain the best possible performance from the unit.

## **IMPORTANT FOR LASER PRODUCTS**

1. CLASS 1 LASER PRODUCT
2. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel.
3. **CAUTION:** Visible and/or invisible class 1M laser radiation when open. Do not view directly with optical instruments.
4. REPRODUCTION OF LABEL: CAUTION LABEL, PLACED OUTSIDE THE UNIT.

<b>CAUTION</b> VISIBLE AND/OR INVISIBLE CLASS 1M LASER RADIATION WHEN OPEN. DO NOT VIEW DIRECTLY WITH OPTICAL INSTRUMENTS. IEC60825-1:2001 (ENG)	<b>ATTENTION</b> RAYONNEMENT LASER VISIBLE ET/OU INVISIBLE DE CLASSE 1M UNE FOIS OUVERT. NE PAS REGARDER DIRECTEMENT AVEC DES INSTRUMENTS OPTIQUES. (FRA)	<b>AVISO</b> RADACÓN LASER DE CLASE 1M VISIBLE Y/O INVISIBLE CUANDO ESTA ABIERTO. NO MIRAR DIRECTAMENTE CON INSTRUMENTO ÓPTICO. (ESP)	<b>WARNING</b> SYNLIG OCH/ELLER OSYNLIG LASERSTRÄNING, KLASS 1M, NÅR DENNA DEL ÄR ÖPPNAD. BETRÄKTA EJ STRÄLEN MED OPTISKA INSTRUMENT. (SWE)	<b>注意</b> ここに書くと可視 及び不可視の電磁波 のクラス1M レーザー放射が 出ます。 光学機器で直接 見ないでください。 (JPN)	<b>CAUTION</b> VISIBLE AND/OR INVISIBLE CLASS II LASER RADIATION WHEN OPEN. DO NOT STARE INTO BEAM. FDA 21 CFR (ENG)
--	--	--	--	--	--



[European Union only]

### **Warning:**

If you need to operate the unit while driving, be sure to look around carefully or you may be involved in a traffic accident.

### **Caution on volume setting:**

Digital devices (CD/USB) produce very little noise compared with other sources. Lower the volume before playing these digital sources to avoid damaging the speakers by sudden increase of the output level.

### **For safety...**

- Do not raise the volume level too much, as this will block outside sounds, making driving dangerous.
- Stop the car before performing any complicated operations.

### **Temperature inside the car...**


If you have parked the car for a long time in hot or cold weather, wait until the temperature in the car becomes normal before operating the unit.

### **This mark is used to indicate...**




Turn the control dial to make a selection, then press to confirm the selection.


## ■ Detaching the control panel

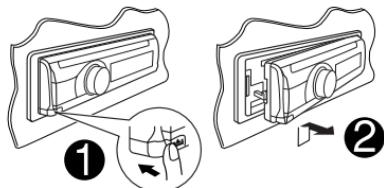

## ■ Attaching the control panel

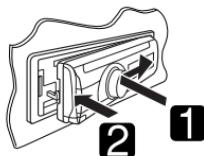

## ■ How to reset your unit

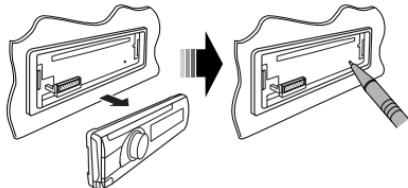

- Your preset adjustments will also be erased.

## ■ How to forcibly eject a disc



- You can forcibly eject the loaded disc even if the disc is locked. To lock/unlock the disc, see page 9.
- Be careful not to drop the disc when it ejects.
- If this does not work, reset your unit.

# CONTENTS

Detaching the control panel.....	3
Attaching the control panel .....	3
How to reset your unit .....	3
How to forcibly eject a disc.....	3

## OPERATIONS

Basic operations.....	4
• Using the control panel.....	4
• Using the remote controller (RM-RK50).....	6
Preparation .....	7
Listening to the radio.....	8
Disc operations.....	9
Listening to the USB device.....	10

## EXTERNAL DEVICES

Listening to the other external components.....	11
---	----

## SETTINGS


Selecting a preset sound mode .....	12
Title assignment .....	13
Menu operations.....	14

## REFERENCES

More about this unit .....	16
Troubleshooting.....	19
Maintenance.....	21
Specifications.....	22

# Basic operations

## Using the control panel

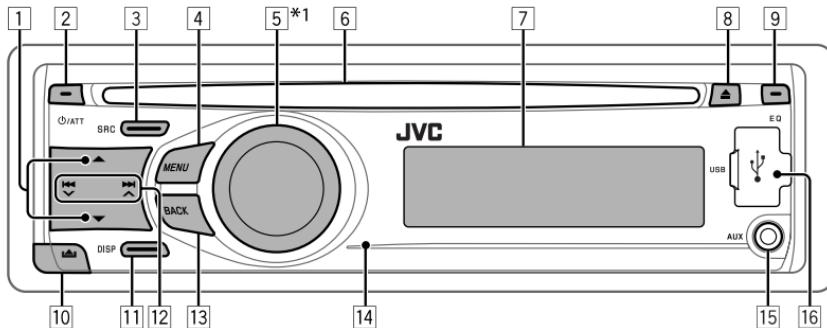

- [1]** • **FM/AM:** Select preset station.  
• **CD/USB:** Select folder.
- [2]** Turn on the power.  
• Attenuate the sound (if the power is on).  
• Turn off the power [Hold].
- [3]** Select the source.  
**FM → AM**\*<sup>2</sup> → **CD**\*<sup>3</sup> → **USB** → **AUX IN**\*<sup>2</sup> →  
(back to the beginning)
- [4]** Enter list operations.  
• Enter Menu setting [Hold].
- [5]** Control the volume\*<sup>4</sup> or select items [Turn].  
• Confirm the selection [Press].  
• **FM:** Enter SSM preset mode [Hold].  
• **CD/USB:** Enter playback mode [Hold].  
Pause/resume playback\*<sup>4</sup> [Press].
- [6]** Loading slot
- [7]** Display window
- [8]** Eject disc.
- [9]** Select the sound mode.

- [10]** Detach the panel.
- [11]** Change the display information.
- [12]** • **FM/AM:** Search for station.  
• **CD/USB:** Select track.
- [13]** Return to the previous menu.
- [14]** Remote sensor
- [15]** AUX (auxiliary) input jack
- [16]** USB (Universal Serial Bus) input jack


\*<sup>1</sup> Also known as "Control dial" in this manual.

\*<sup>2</sup> You cannot select these sources if they were disabled in the Menu (see "SRC SELECT" in "Menu operations" on page 16).

\*<sup>3</sup> You cannot select "CD" as the playback source if no disc is in the unit.


\*<sup>4</sup> You can still adjust the volume during pause when the selected source is CD/USB.  
Before resume playback, check to be sure that you have not raise the volume level too much.

## Display window

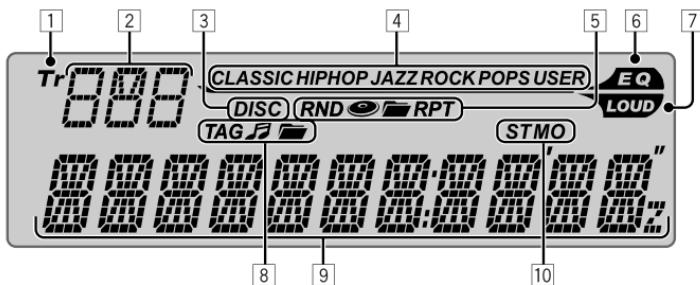

# Using the remote controller (RM-RK50)

## Installing the lithium coin battery (CR2025)

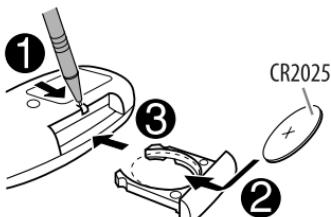



### **Caution:**

- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Battery shall not be exposed to excessive heat such as sunshine, fire, or the like.

**If the effectiveness of the remote controller decreases, replace the battery.**

### **Before using the remote controller:**

- Aim the remote controller directly at the remote sensor on the unit.
- DO NOT expose the remote sensor to bright light (direct sunlight or artificial lighting).

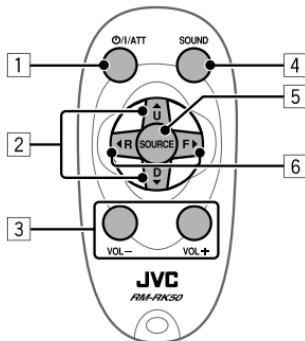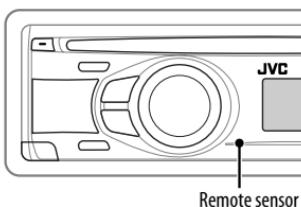

- [1] • Turns the power on if pressed briefly or attenuates the sound when the power is on.
- [2] • Turns the power off if pressed and held.
- [3] • Changes the preset stations.
- [4] • Changes the folder of the MP3/WMA.
- [5] • Adjusts the volume level.
- [6] • Selects the sound mode.
- [5] • Selects the source.
- [6] • Searches for stations if pressed briefly.
  - Fast-forwards or reverses the track if pressed and held.
  - Changes the tracks if pressed briefly.

### **Warning (to prevent accidents and damage):**

- Do not install any battery other than CR2025 or its equivalent.
- Do not leave the remote controller in a place (such as dashboards) exposed to direct sunlight for a long time.
- Store the battery in a place where children cannot reach.
- Do not recharge, short, disassemble, heat the battery, or dispose of it in a fire.
- Do not leave the battery with other metallic materials.
- Do not poke the battery with tweezers or similar tools.
- Wrap the battery with tape and insulate when throwing away or saving it.

# Preparation

## ■ Canceling the display demonstration and setting the clock

- See also page 14.

<b>1</b> 	<p><b>Turn on the power.</b></p>
<b>2</b> 	<p><b>Cancel the display demonstrations</b> Select "DEMO," then "DEMO OFF."</p> <p><b>Set the clock</b> Select "CLOCK" → "CLOCK SET." Adjust the hour, then press control dial once to proceed to adjust the minute.</p> <ul style="list-style-type: none"> <li>• To return to the previous menu, press BACK.</li> </ul>

## Changing the display information



When the power is turned off: The current clock time is displayed if "CLOCK DISP" is set to "CLOCK OFF," (see page 14).

When the power is turned on: The display information of the current source changes as follows:

<b>FM/AM</b>	Frequency → Clock → Station name* <sup>1</sup> → (back to the beginning)
<b>CD</b>	Audio CD/CD Text: Disc title/performer* <sup>2</sup> → Track title* <sup>2</sup> → Current track number with the elapsed playing time → Current track number with the clock time → (back to the beginning)
<b>CD/USB</b>	MP3/WMA: Album name/performer (folder name)* <sup>3</sup> → Track title (file name)* <sup>3</sup> → Current track number with the elapsed playing time → Current track number with the clock time → (back to the beginning)

\*<sup>1</sup> If no title is assigned to a station, "NO NAME" appears. To assign a title to a station, see page 13.

\*<sup>2</sup> If the current disc is an audio CD, "NO NAME" appears.

\*<sup>3</sup> If an MP3/WMA file does not have Tag information or "TAG DISPLAY" is set to "TAG OFF" (see page 14), folder name and file name appear.


# Listening to the radio

<b>1</b> 	<b>Select "FM" or "AM."</b>
<b>2</b> 	<b>Search for a station to listen—Auto Search.</b> When a station is tuned in, searching stops. To stop searching, press the same button again. <ul style="list-style-type: none"><li>• You can also search for a station manually—Manual Search. Hold either one of the buttons until "M" flashes on the display, then press it repeatedly.</li><li>• When receiving an FM stereo broadcast with sufficient signal strength, the ST indicator lights up on the display.</li></ul>

## Improving the FM reception

When an FM stereo broadcast is hard to receive, activate monaural mode for better reception.

- See also page 14.

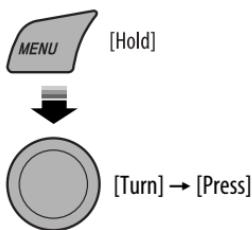

“TUNER” → “MONO”  
“MONO ON”

Reception improves, but stereo effect will be lost.

- The MO indicator lights up on the display.

**To restore the stereo effect,** repeat the same procedure to select “MONO OFF.” The MO indicator goes off.

## Storing stations in memory

### Automatic presetting (FM)—SSM (Strong-station Sequential Memory)

You can preset up to 18 stations for FM.

#### 1 While listening to a station...



#### 2 Select the preset number range you want to store.



SSM 01–06 ← SSM 07–12 ← SSM 13–18



Local FM stations with the strongest signals are searched and stored automatically.


- **To stop searching,** press ↪/↗/↖/↖.

**To preset other 6 stations,** repeat from step 1 again.

**Manual presetting (FM/AM)**

You can preset up to 18 stations for FM and 6 stations for AM.

Ex.: Storing FM station of 92.50 MHz into preset number "04."

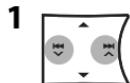

**92.50MHz**

**2 Select preset number "04."****3**


[Hold]

**Selecting preset station**

or



[Turn]

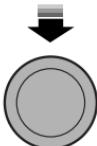

[Turn] → [Press]

**Disc operations**

<b>1</b>		<b>Turn on the power.</b>
<b>2</b>		<b>Insert a disc.</b> All tracks will be played repeatedly until you change the source or eject the disc.

**Stop playing and ejecting the disc**

- “NO DISC” appears. Press SRC to listen to another playback source.

**Prohibiting disc ejection**

+ [Hold]



To cancel the prohibition, repeat the same procedure.

**Selecting a track/folder**

[Turn] → [Press]

- For MP3/WMA discs, select the desired folder, then the desired track by repeating the control dial procedures.
- To return to the previous menu, press BACK.


Continued on the next page

Pressing (or holding) the following buttons allows you to...

	[Press]Pause/resume playback.
	MP3/WMA: Select folder
	[Press]Select track [Hold] Reverse/fast-forward track

## ■ Selecting the playback modes

You can use only one of the following playback modes at a time.

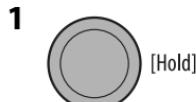

**REPEAT ↔ RANDOM**



### REPEAT

**TRACK RPT** : Repeats current track

**FOLDER RPT** : MP3/WMA: Repeats current folder

### RANDOM

**FOLDER RND** : MP3/WMA: Randomly plays all tracks of current folder, then tracks of next folders

**ALL RND** : Randomly plays all tracks


- To cancel repeat play or random play, select “**RPT OFF**” or “**RND OFF**.”

- To return to the previous menu, press **BACK**.

## Listening to the USB device

This unit can play MP3/WMA tracks stored in a USB device.

All tracks will be played repeatedly until you change the source or detach the USB device.

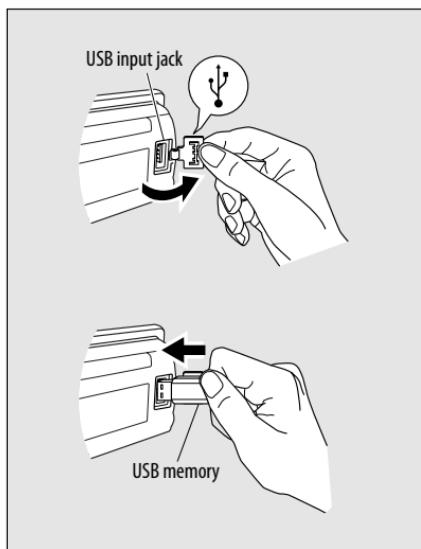

### If a USB device has been attached...



Playback starts from where it has been stopped previously.

- If a different USB device is currently attached, playback starts from the beginning.

## To stop play and detach the USB device

Straightly pull it out from the unit.

- Press SRC to listen to another playback source.

You can operate the USB device in the same way you operate the files on a disc. (See pages 9 and 10.)

### **Cautions:**

- Avoid using the USB device if it might hinder your safety driving.
- Do not pull out and attach the USB device repeatedly while "READING" is shown on the display.
- Do not start the car engine if a USB device is connected.

- This unit may not be able to play the files depending on the type of USB device.
- Operation and power supply may not work as intended for some USB devices.
- You cannot connect a computer to the USB input terminal of the unit.
- Make sure all important data has been backed up to avoid losing the data.
- Do not leave a USB device in the car, expose to direct sunlight, or high temperature to avoid deformation or cause damages to the device.
- Some USB devices may not work immediately after you turn on the power.
- For more details about USB operations, see page 18.


## Listening to the other external components

You can connect an external component to AUX (auxiliary) input jack on the control panel.

**Preparation:** Make sure "AUX ON" is selected in the "SRC SELECT" → "AUX IN" setting, see page 16.

1		Select "AUX IN."
2	—	Turn on the connected component and start playing the source.
3		Adjust the volume.
4	—	Adjust the sound as you want (see pages 12 and 13).

## Connecting an external component to the AUX input jack

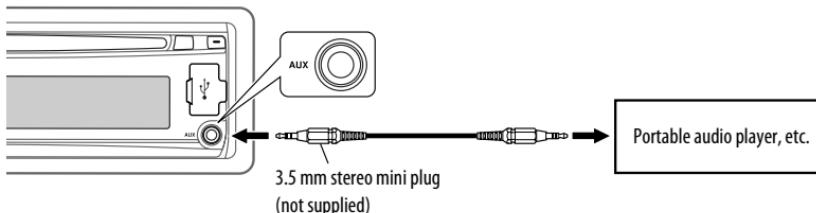

# Selecting a preset sound mode

You can select a preset sound mode suitable to the music genre.

- See also page 14.



Selecting from Menu.

or



[Hold]

[Turn] → [Press]

"EQ" "USER/ROCK/CLASSIC /POPS/HIP HOP/JAZZ"

- See below and page 13 for "USER" settings.

## Preset value setting for each sound mode

Sound mode	Preset value									
	BASS			MIDDLE			TREBLE			LOUD (loudness)
	Freq.	Level	Q	Freq.	Level	Q	Freq.	Level	Q	
USER	60 Hz	00	Q1.25	1.0 kHz	00	Q1.0	10.0 kHz	00	—	OFF
ROCK	100 Hz	+03	Q1.0	1.0 kHz	00	Q1.25	10.0 kHz	+02	—	
CLASSIC	80 Hz	+01	Q1.25	1.0 kHz	00	Q1.25	10.0 kHz	+03	—	
POPS	100 Hz	+02	Q1.25	1.0 kHz	+01	Q1.25	10.0 kHz	+02	—	
HIP HOP	60 Hz	+04	Q1.0	1.0 kHz	-02	Q1.0	10.0 kHz	+01	—	
JAZZ	80 Hz	+03	Q1.25	1.0 kHz	00	Q1.25	10.0 kHz	+03	—	

Freq.: Frequency Q: Q-slope

## 1 Storing your own sound mode

You can store your own adjustments in memory.

### 1 Select "USER" for "EQ."



[Hold]




[Turn] → [Press]

"EQ" "USER"

## 2 While "USER" is shown on the display...



[Hold]

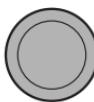**3 Select a tone.**

[Turn] → [Press]

**4 Adjust the sound elements of the selected tone.**

[Turn] → [Press]

- 1 Adjust the frequency.
- 2 Adjust the level.
- 3 Adjust the Q-slope.


Sound elements	Range/selectable items		
	BASS	MIDDLE	TREBLE
Frequency	60 Hz	0.5 kHz	10.0 kHz
	80 Hz	1.0 kHz	12.5 kHz
	100 Hz	1.5 kHz	15.0 kHz
	200 Hz	2.5 kHz	17.5 kHz
Level	-06 to +06	-06 to +06	-06 to +06
Q	Q1.0 Q1.25 Q1.5 Q2.0	Q0.75 Q1.0 Q1.25	Fixed

**5 Repeat steps 3 and 4 to adjust other sound characteristics.**

The adjustment made will be stored automatically.

**Title assignment**

You can assign titles to 30 station frequencies (FM and AM) using 8 characters (maximum) for each title.

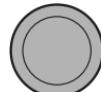**1 Select "FM" or "AM."****2 Show the title entry screen.**+  
[Hold]**3 Assign a title.**

- 1 Select a character.




[Turn]

A	B	C	D	E	F	G
H	I	J	K	L	M	N
O	P	Q	R	S	T	U
V	W	X	Y	Z	0	1
2	3	4	5	6	7	8
9	-	/	<	>	space	

- 2 Move to the next (or previous) character position.



- 3 Repeat steps 1 and 2 until you finish entering the title.

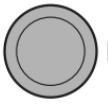**4 Finish the procedure.**


[Press]

**To erase the entire title**

In step 2 above...



[Hold]

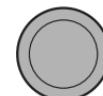

[Press]

# Menu operations

**1 Call up the menu.**



[Hold]

**2 Select the desired item.**



[Turn] → [Press]

**3 Repeat step 2 if necessary.**

- To return to the previous menu, press BACK.
- To exit from the menu, press DISP or MENU.

Initial: **Underlined**

Category	Menu items	Selectable settings, [reference page]
DEMO	DEMO Display demonstration	<ul style="list-style-type: none"> <li>• <b>DEMO ON</b> : Display demonstration will be activated automatically if no operation is done for about 20 seconds, [7].</li> <li>• <b>DEMO OFF</b> : Cancels.</li> </ul>
CLOCK	CLOCK DISP* <sup>1</sup> Clock display	<ul style="list-style-type: none"> <li>• <b>CLOCK ON</b> : Clock time is shown on the display at all times when the power is turned off.</li> <li>• <b>CLOCK OFF</b> : Cancels; pressing DISP will show the clock time for about 5 seconds when the power is turned off, [7].</li> </ul>
	CLOCK SET Clock setting	: Adjust the hour, then the minute, [7]. (Initial: 1:00)
EQ	EQ Equalizer	: Select a preset sound mode suitable to the music genre. <b>USER, ROCK, CLASSIC, POPS, HIP HOP, JAZZ</b>
DISPLAY	DIMMER Dimmer	<ul style="list-style-type: none"> <li>• <b>DIMMER ON</b> : Dims the display and button illumination.</li> <li>• <b>DIMMER OFF</b> : Cancels.</li> </ul>
	SCROLL* <sup>2</sup> Scroll	<ul style="list-style-type: none"> <li>• <b>SCROLL ONCE</b> : Scrolls the displayed information once.</li> <li>• <b>SCROLL AUTO</b> : Repeats scrolling (at 5-second intervals).</li> <li>• <b>SCROLL OFF</b> : Cancels.</li> </ul> <p>Pressing DISP for more than one second can scroll the display regardless of the setting.</p>
	TAG DISPLAY Tag display	<ul style="list-style-type: none"> <li>• <b>TAG ON</b> : Shows the Tag information while playing MP3/WMA tracks.</li> <li>• <b>TAG OFF</b> : Cancels.</li> </ul>
TUNER	MONO* <sup>3</sup> Monaural mode	<ul style="list-style-type: none"> <li>• <b>MONO ON</b> : Activate monaural mode to improve FM reception, but stereo effect will be lost, [8].</li> <li>• <b>MONO OFF</b> : Restore the stereo effect.</li> </ul>

\*<sup>1</sup> If the power supply is not interrupted by turning off the ignition key of your car, it is recommended to select "CLOCK OFF" to save the car's battery.

\*<sup>2</sup> Some characters or symbols will not be shown correctly (or will be blanked) on the display.

\*<sup>3</sup> Displayed only when the source is "FM."

Category	Menu items	Selectable settings, [reference page]	
TUNER	<b>IF BAND</b> Intermediate frequency band	<ul style="list-style-type: none"> <li><b>AUTO</b> : Increases the tuner selectivity to reduce interference noises between adjacent stations. (Stereo effect may be lost.)</li> <li><b>WIDE</b> : Subject to interference noises from adjacent stations, but sound quality will not be degraded and the stereo effect will remain.</li> </ul>	
	<b>FADER*</b> <sup>4</sup> , <sup>5</sup> Fader	<b>R06 – F06</b> : Adjust the front and rear speaker output balance. (Initial: 00)	
	<b>BALANCE*</b> <sup>5</sup> Balance	<b>L06 – R06</b> : Adjust the left and right speaker output balance. (Initial: 00)	
	<b>LOUD</b> Loudness	<ul style="list-style-type: none"> <li><b>LOUD OFF</b> : Cancels.</li> <li><b>LOUD ON</b> : Boost low and high frequencies to produce a well-balanced sound at a low volume level.</li> </ul>	
AUDIO	<b>VOL ADJUST</b> Volume adjust	<b>VOL ADJ –05</b> — <b>VOL ADJ +05</b> (Initial: VOL ADJ 00)	Preset the volume adjustment level of each source (except FM), compared to the FM volume level. The volume level will automatically increase or decrease when you change the source. <ul style="list-style-type: none"> <li>Before making an adjustment, select the source you want to adjust.</li> <li>“VOL ADJ FIX” appears on the display if “FM” is selected as the source.</li> </ul>
	<b>L/O MODE</b> Line output mode	<ul style="list-style-type: none"> <li><b>SUB.W</b> : Select if the REAR LINE OUT terminals are used for connecting a subwoofer (through an external amplifier).</li> <li><b>REAR</b> : Select if the REAR LINE OUT terminals are used for connecting the speakers (through an external amplifier).</li> </ul>	
	<b>SUB.W FREQ*</b> <sup>6</sup> Subwoofer cutoff frequency	<ul style="list-style-type: none"> <li><b>LOW</b> : Frequencies lower than 72 Hz are sent to the subwoofer.</li> <li><b>MID</b> : Frequencies lower than 111 Hz are sent to the subwoofer.</li> <li><b>HIGH</b> : Frequencies lower than 157 Hz are sent to the subwoofer.</li> </ul>	
	<b>SUB.W LEVEL*</b> <sup>6</sup> Subwoofer level	<b>SUB.W 00</b> — <b>SUB.W 08</b> : Adjust the subwoofer output level. (Initial: SUB.W 04)	
	<b>BEEP</b> Key touch tone	<ul style="list-style-type: none"> <li><b>BEEP OFF</b> : Deactivates the key touch tone.</li> <li><b>BEEP ON</b> : Activates the key touch tone.</li> </ul>	
	<b>AMP GAIN*</b> <sup>7</sup> Amplifier gain control	<ul style="list-style-type: none"> <li><b>LOW POWER</b> : VOLUME 00 – VOLUME 30 (Select if the maximum power of each speaker is less than 50 W to prevent damaging the speaker.)</li> <li><b>HIGH POWER</b> : VOLUME 00 – VOLUME 50</li> </ul>	

\*4 If you are using a two-speaker system, set the fader level to “00.”

\*5 This adjustment will not affect the subwoofer output.

\*6 Displayed only when “L/O MODE” is set to “SUB.W.”

\*7 The volume level automatically changes to “VOLUME 30” if you change to “LOW POWER” with the volume level set higher than “VOLUME 30.”

Continued on the next page

Category	Menu items	Selectable settings, [reference page]	
<b>SRC SELECT</b>	<b>AM*<sup>8</sup></b>	• <b>AM OFF</b>	: Disable "AM" in source selection.
	<b>AM station</b>	• <b>AM ON</b>	: Enable "AM" in source selection, [4].
<b>AUX IN*<sup>9</sup></b>	<b>AUX OFF</b>	• <b>AUX OFF</b>	: Disable "AUX IN" in source selection.
	<b>Auxiliary input</b>	• <b>AUX ON</b>	: Enable "AUX IN" in source selection, [4].

\*<sup>8</sup> Displayed only when any source other than "AM" is selected.

\*<sup>9</sup> Displayed only when any source other than "AUX IN" is selected.

## More about this unit

### ■ Basic operations

#### Turning on the power

- By pressing SRC button on the unit, you can also turn on the power. If the source is ready, playback also starts.

#### Turning off the power

- If you turn off the power while listening to a track, playback will start from where it had been stopped previously next time you turn on the power.

#### General

- If you change the source while listening to a disc, playback stops. Next time you select "CD" as the playback source, playback will start from where it had been stopped previously.
- If no operation is done for about 30 seconds after pressing MENU button, the operation will be canceled.

### ■ Tuner operations

#### Storing stations in memory

- During SSM search...
  - All previously stored stations are erased and the stations are stored anew.
- When SSM is over, the station stored in the lowest preset number will be automatically tuned in.

- When storing a station manually, the previously preset station is erased when a new station is stored in the same preset number.

### ■ Disc operations

#### Caution for DualDisc playback

- The Non-DVD side of a "DualDisc" does not comply with the "Compact Disc Digital Audio" standard. Therefore, the use of Non-DVD side of a DualDisc on this product may not be recommended.

#### General

- This unit has been designed to reproduce CDs/CD Texts, and CD-Rs (Recordable)/CD-RWs (Rewritable) in audio CD (CD-DA), MP3/WMA formats.
- When a disc is inserted upside down, "PLEASE" and "EJECT" appear alternately on the display. Press ▲ to eject the disc.
- MP3 and WMA "tracks" (words "file" and "track" are used interchangeably) are recorded in "folders."
- While fast-forwarding or reversing on an MP3 or WMA disc, you can only hear intermittent sounds.

## Playing a CD-R or CD-RW

- Use only “finalized” CD-Rs or CD-RWs.
- This unit can only play back files of the same type as those detected first if a disc includes both audio CD (CD-DA) files and MP3/WMA files.
- This unit can play back multi-session discs; however, unclosed sessions will be skipped while playing.
- Some CD-Rs or CD-RWs may not play back on this unit because of their disc characteristics, or for the following reasons:
  - Discs are dirty or scratched.
  - Moisture condensation has occurred on the lens inside the unit.
  - The pickup lens inside the unit is dirty.
  - The files on the CD-R/CD-RW are written using the “Packet Write” method.
  - There are improper recording conditions (missing data, etc.) or media conditions (stained, scratched, warped, etc.).
- CD-RWs may require a longer readout time since the reflectance of CD-RWs is lower than that of regular CDs.
- Do not use the following CD-Rs or CD-RWs:
  - Discs with stickers, labels, or a protective seal stuck to the surface.
  - Discs on which labels can be directly printed by an ink jet printer.

Using these discs under high temperature or high humidity may cause malfunctions or damage to the unit.

## Playing an MP3/WMA disc

- This unit can play back MP3/WMA files with the extension code <.mp3> or <.wma> (regardless of the letter case—upper/lower).
- This unit can show the names of albums, artists (performer), and Tag (Version 1.0, 1.1, 2.2, 2.3, or 2.4) for MP3 files and for WMA files.
- This unit can display only one-byte characters. No other characters can be correctly displayed.

- This unit can play back MP3/WMA files meeting the conditions below:
  - Bit rate of MP3: 32 kbps — 320 kbps
  - Sampling frequency of MP3:  
32 kHz, 44.1 kHz, 48 kHz (for MPEG-1)  
16 kHz, 22.05 kHz, 24 kHz (for MPEG-2)
  - Bit rate of WMA: 32 kbps — 320 kbps
  - Sampling frequency of WMA: 22.05 kHz, 32 kHz,  
44.1 kHz, 48 kHz
  - Disc format: ISO 9660 Level 1/Level 2, Romeo, Joliet, Windows extension.
- The maximum number of characters for file/folder names vary depending on the disc format used (includes 4 extension characters—<.mp3> or <.wma>).
  - ISO 9660 Level 1: up to 12 characters
  - ISO 9660 Level 2: up to 31 characters
  - Romeo: up to 64 characters
  - Joliet: up to 32 characters
  - Windows extension: up to 64 characters
- This unit can recognize a total of 512 files, 255 folders, and 8 hierarchical levels.
- This unit can play back files recorded in VBR (variable bit rate).  
 Files recorded in VBR have a discrepancy in the elapsed time display, and do not show the actual elapsed time. In particular, this difference becomes noticeable after performing the search function.
- This unit cannot play back the following files:
  - MP3 files encoded in MP3i and MP3 PRO format.
  - MP3 files encoded in an inappropriate format.
  - MP3 files encoded with Layer 1/2.
  - WMA files encoded in lossless, professional, and voice format.
  - WMA files which are not based upon Windows Media® Audio.
  - WMA files copy-protected with DRM.
  - Files which have data such as AIFF, ATRAC3, etc.
- The search function works but search speed is not constant.

*Continued on the next page*

## **Playing MP3/WMA tracks from a USB device**

- While playing from a USB device, the playback order may differ from other players.
- This unit may be unable to play back some USB devices or some files due to their characteristics or recording conditions.
- Depending on the shape of the USB devices and connection ports, some USB devices may not be attached properly or the connection might be loose.
- Connect one USB mass storage class device to the unit at a time. Do not use a USB hub.
- If the connected USB device does not have the correct files, "CANNOT PLAY" appears.
- This unit can show Tag (Version 1.0, 1.1, 2.2, 2.3, or 2.4) for MP3 files and for WMA files.
- This unit can play back MP3/WMA files meeting the conditions below:
  - Bit rate of MP3: 32 kbps — 320 kbps
  - Sampling frequency of MP3:
    - 32 kHz, 44.1 kHz, 48 kHz (for MPEG-1)
    - 16 kHz, 22.05 kHz, 24 kHz (for MPEG-2)
  - Bit rate of WMA: 32 kbps — 320 kbps
  - Sampling frequency of WMA: 22.05 kHz, 32 kHz, 44.1 kHz, 48 kHz
- This unit can play back MP3 files recorded in VBR (variable bit rate).
- The maximum number of characters for:
  - Folder names : 32 characters
  - File names : 32 characters
  - MP3 Tag : 64 characters
  - WMA Tag : 32 characters
- This unit can recognize a total of 5 000 files, 255 folders (255 files per folder including folder without unsupported files), and of 8 hierarchies.
- This unit does not support SD card reader.
- This unit cannot recognize a USB device whose rating is other than 5 V and exceeds 500 mA.

- USB devices equipped with special functions such as data security functions cannot be used with the unit.
- Do not use a USB device with 2 or more partitions.
- This unit may not recognize a USB device connected through a USB card reader.
- This unit may not play back files in a USB device properly when using a USB extension cord.
- This unit cannot play back the following files:
  - MP3 files encoded with MP3i and MP3 PRO format.
  - MP3 files encoded in an inappropriate format.
  - MP3 files encoded with Layer 1/2.
  - WMA files encoded in lossless, professional, and voice format.
  - WMA files not based on Windows Media® Audio.

## **Ejecting a disc or removing a USB device**

- If the ejected disc is not removed within 15 seconds, it is automatically inserted into the loading slot again to protect it from dust.
- After ejecting a disc or removing a USB device, "NO DISC" or "NO USB" appears and you cannot operate some of the buttons. Insert another disc, reattach a USB device, or press SRC to select another playback source.

## **Title assignment**

- If you try to assign titles to more than 30 station frequencies, "NAME FULL" appears. Delete unwanted titles before assignment.

## **Menu operations**

- If you change the "AMP GAIN" setting from "HIGH POWER" to "LOW POWER" while the volume level is set higher than "VOLUME 30," the unit automatically changes the volume level to "VOLUME 30."

# Troubleshooting

What appears to be trouble is not always serious. Check the following points before calling a service center.

	Symptoms	Remedies/Causes
General	<ul style="list-style-type: none"><li>Sound cannot be heard from the speakers.</li></ul>	<ul style="list-style-type: none"><li>Adjust the volume to the optimum level.</li><li>Check the cords and connections.</li></ul>
	<ul style="list-style-type: none"><li>The unit does not work at all.</li></ul>	Reset the unit (see page 3).
	<ul style="list-style-type: none"><li>“AUX IN” cannot be selected.</li></ul>	Check the “SRC SELECT” → “AUX IN” setting (see page 16).
FM/AM	<ul style="list-style-type: none"><li>SSM automatic presetting does not work.</li></ul>	Store stations manually.
	<ul style="list-style-type: none"><li>Static noise while listening to the radio.</li></ul>	Connect the antenna firmly.
	<ul style="list-style-type: none"><li>“AM” cannot be selected.</li></ul>	Check the “SRC SELECT” → “AM” setting (see page 16).
Discs in general	<ul style="list-style-type: none"><li>Disc cannot be played back.</li></ul>	Insert the disc correctly.
	<ul style="list-style-type: none"><li>CD-R/CD-RW cannot be played back.</li></ul>	<ul style="list-style-type: none"><li>Insert a finalized CD-R/CD-RW.</li></ul>
	<ul style="list-style-type: none"><li>Tracks on the CD-R/CD-RW cannot be skipped.</li></ul>	<ul style="list-style-type: none"><li>Finalize the CD-R/CD-RW with the component which you used for recording.</li></ul>
	<ul style="list-style-type: none"><li>Disc can neither be played back nor ejected.</li></ul>	<ul style="list-style-type: none"><li>Unlock the disc (see page 9).</li><li>Eject the disc forcibly (see page 3).</li></ul>
	<ul style="list-style-type: none"><li>Disc sound is sometimes interrupted.</li></ul>	<ul style="list-style-type: none"><li>Stop playback while driving on rough roads.</li><li>Change the disc.</li><li>Check the cords and connections.</li></ul>
	<ul style="list-style-type: none"><li>“NO DISC” appears on the display.</li></ul>	Insert a playable disc into the loading slot.
	<ul style="list-style-type: none"><li>“PLEASE” and “EJECT” appear alternately on the display.</li></ul>	Press ▲, then insert a disc correctly.
MP3/WMA playback	<ul style="list-style-type: none"><li>Disc cannot be played back.</li></ul>	<ul style="list-style-type: none"><li>Use a disc with MP3/WMA tracks recorded in a format compliant with ISO 9660 Level 1, Level 2, Romeo, or Joliet.</li><li>Add the extension code &lt;.mp3&gt; or &lt;.wma&gt; to the file names.</li></ul>
	<ul style="list-style-type: none"><li>Noise is generated.</li></ul>	Skip to another track or change the disc. (Do not add the extension code <.mp3> or <.wma> to non-MP3 or WMA tracks.)

Continued on the next page


Symptoms	Remedies/Causes
MP3/WMA playback	• A longer readout time is required ("READING" keeps flashing on the display).
	Do not use too many hierarchical levels and folders.
	• Tracks do not play back in the order you have intended them to play.
	The playback order is determined when the files are recorded.
	• The elapsed playing time is not correct.
USB device playback	This sometimes occurs during playback. This is caused by how the tracks are recorded on the disc. • "NO FILE" appears on the display.
	Selected folder is an empty folder*. Select another folder that contains MP3/WMA tracks. <i>* Folder that is physically empty or folder that contains data but does not contain valid MP3/WMA track.</i>
	• The correct characters are not displayed (e.g. album name).
	This unit can only display letters (upper case), numbers, and a limited number of symbols.
	• Noise is generated.
USB device playback	The track played back is not an MP3/WMA track. Skip to another file. (Do not add the extension code <.mp3> or <.wma> to non-MP3 or WMA tracks.)
	• "READING" keeps flashing on the display.
	• Readout time varies depending on the USB device. • Do not use too many hierarchy or folders. • Turn off the power then on again. • Reattach the USB device again.
	• "NO FILE" appears on the display.
	Selected folder is an empty folder*. Select another folder that contains MP3/WMA tracks. <i>* Folder that is physically empty or folder that contains data but does not contain valid MP3/WMA track.</i>
USB device playback	• Tracks/folders are not played back in the order you have intended.
	The playback order is determined by the write-in time stamp. The first track/folder written into the USB device will be the first track/folder for playback.
	• "CANNOT PLAY" flashes on the display.
	• "NO USB" appears on the display.
	• The unit cannot detect the USB device.
USB device playback	• Attach a USB device that contains tracks encoded in an appropriate format. • Reattach the USB device again.
	• Correct characters are not displayed (e.g. album name).
USB device playback	This unit can only display alphabets (upper case), numbers, and a limited number of symbols.
	• While playing a track, sound is sometimes interrupted.
	The MP3/WMA tracks have not been properly copied into the USB device.
	Copy MP3/WMA tracks again into the USB device, and try again.

- Microsoft and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

# Maintenance

## ■ How to clean the connectors

Frequent detachment will deteriorate the connectors. To minimize this possibility, periodically wipe the connectors with a cotton swab or cloth moistened with alcohol, being careful not to damage the connectors.

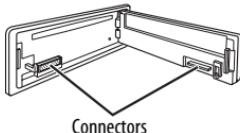

Connectors

## ■ Moisture condensation

Moisture may condense on the lens inside the unit in the following cases:

- After starting the heater in the car.
- If it becomes very humid inside the car.

Should this occur, the unit may malfunction. In this case, eject the disc and leave the unit turned on for a few hours until the moisture has evaporated.

## ■ How to handle discs

**When removing a disc from its case**, press down the center holder of the case and lift the disc out, holding it by the edges.



- Always hold the disc by the edges. Do not touch its recording surface.

**When storing a disc in its case**, gently insert the disc around the center holder (with the printed surface facing up).

- Make sure to store discs in cases after use.

## ■ To keep discs clean

A dirty disc may not play correctly.

If a disc does become dirty, wipe it with a soft cloth in a straight line from center to edge.



- Do not use any solvents (for example, conventional record cleaner, spray, thinner, benzine, etc.) to clean discs.

## ■ To play new discs

New discs may have some rough spots around the inner and outer edges. If such a disc is used, this unit may reject the disc.



**To remove these rough spots**, rub the edges with a pencil or ball-point pen, etc.

### Do not use the following discs:

Single CD (8 cm disc)



Warped disc



Sticker and sticker residue



Stick-on label



Unusual shape



C-thru Disc (semi-transparent disc)



Transparent or semi-transparent parts on its recording area



# Specifications

<b>AUDIO AMPLIFIER SECTION</b>		
Maximum Power Output:	Front/Rear:	50 W per channel
Continuous Power Output (RMS):	Front/Rear:	19 W per channel into 4 Ω, 40 Hz to 20 000 Hz at no more than 0.8% total harmonic distortion.
Load Impedance:		4 Ω (4 Ω to 8 Ω allowance)
Tone Control Range:	Bass:	±12 dB (60 Hz, 80 Hz, 100 Hz, 200 Hz) Q1.0, Q1.25, Q1.5, Q2.0
	Middle:	±12 dB (0.5 kHz, 1.0 kHz, 1.5 kHz, 2.5 kHz) Q0.75, Q1.0, Q1.25
	Treble:	±12 dB (10.0 kHz, 12.5 kHz, 15.0 kHz, 17.5 kHz) Q = Fixed
Frequency Response:		40 Hz to 20 000 Hz
Signal-to-Noise Ratio:		70 dB
Line-Out Level/Impedance:		2.5 V/20 kΩ load (full scale)
Output Impedance:		1 kΩ
Subwoofer-Out Level/Impedance:		2.5 V/20 kΩ load (full scale)
Other Terminal:		USB input jack, AUX (auxiliary) input jack

<b>TUNER SECTION</b>		
Frequency Range:	FM:	87.5 MHz to 108.0 MHz
	AM:	531 kHz to 1 602 kHz
FM Tuner	Usable Sensitivity:	11.3 dBf (1.0 µV/75 Ω)
	50 dB Quieting Sensitivity:	16.3 dBf (1.8 µV/75 Ω)
	Alternate Channel Selectivity (400 kHz):	65 dB
	Frequency Response:	40 Hz to 15 000 Hz
	Stereo Separation:	30 dB
AM Tuner	Sensitivity:	20 µV
	Selectivity:	35 dB

<b>CD PLAYER SECTION</b>	
Type:	Compact disc player
Signal Detection System:	Non-contact optical pickup (semiconductor laser)
Number of Channels:	2 channels (stereo)
Frequency Response:	5 Hz to 20 000 Hz
Dynamic Range:	96 dB
Signal-to-Noise Ratio:	98 dB
Wow and Flutter:	Less than measurable limit
MP3 Decoding Format: (MPEG1/2 Audio Layer 3)	Max. Bit Rate: 320 kbps
WMA (Windows Media® Audio) Decoding Format:	Max. Bit Rate: 320 kbps

<b>USB SECTION</b>	
USB Standard:	USB 1.1, USB 2.0
Data Transfer Rate (Full Speed):	Max. 12 Mbps
Compatible Device:	Mass storage class
Compatible File System:	FAT 32/16/12
Playable Audio Format:	MP3/WMA
Max. Current:	DC 5 V === 500 mA

<b>GENERAL</b>		
Power Requirement:	Operating Voltage:	DC 14.4 V (11 V to 16 V allowance)
Grounding System:		Negative ground
Allowable Operating Temperature:		0°C to +40°C
Dimensions (W × H × D): (approx.)	Installation Size:	182 mm × 52 mm × 160 mm
	Panel Size:	188 mm × 58 mm × 6 mm
Mass:		1.3 kg (excluding accessories)

*Design and specifications are subject to change without notice.*

**Having TROUBLE with operation?**

**Please reset your unit**

**Refer to page of How to reset your unit**

หากมีปัญหาในการใช้งาน  
กรุณากดปุ่มตั้งค่าเริ่มต้นใหม่  
กรุณากดปุ่มตั้งค่าเริ่มต้นใหม่


**JVC**



EN, TH

© 2009 Victor Company of Japan, Limited

0509DTSMĐTJEIN

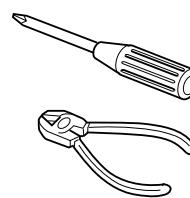

## ENGLISH

This unit is designed to operate on **12 V DC, NEGATIVE ground electrical systems**. If your vehicle does not have this system, a voltage inverter is required, which can be purchased at JVC car audio dealers.

## WARNINGS

To prevent short circuits, we recommend that you disconnect the battery's negative terminal and make all electrical connections before installing the unit.

- Be sure to ground this unit to the car's chassis again after installation.**

## Notes:

- Replace the fuse with one of the specified rating. If the fuse blows frequently, consult your JVC car audio dealer.
- It is recommended to connect speakers with a maximum power of more than 50 W (both at the rear and at the front, with an impedance of **4 Ω to 8 Ω**). If the maximum power is less than 50 W, change "AMP GAIN" setting to prevent the speakers from being damaged (see page 15 of the INSTRUCTIONS).
- To prevent short circuits, cover the terminals of the UNUSED leads with insulating tape.
- The heat sink becomes very hot after use. Be careful not to touch it when removing this unit.

## ไทย

ชุดประกอบนี้ได้รับการออกแบบมาเพื่อใช้งานกับระบบ กระแสไฟฟ้าดินขั้วลบกระแส 12 โวลท์ หากรถยนต์ของคุณไม่ได้ระบบนี้ ต้องไปศูนย์รวมเปลี่ยนกระแสไฟฟ้า ซึ่งสามารถหาซื้อได้จากผู้ขายเครื่องเสียงรถยนต์ JVC


## คำเตือน

เพื่อยืดอายุการใช้งานไฟฟ้าด้วยการดูแลรักษาอย่างดี ควรปฏิบัติตามดังนี้

- ตรวจสอบให้แน่ใจว่าได้เดินสายดินต่อระหว่างเครื่องกับตัวถัง รถยนต์ใหม่แล้วหลังจากติดตั้ง

## หมายเหตุ:

- ใช้พัดลมภายในเพื่อระบายความร้อน หากพัดลมหายใจ นำเข้าเครื่องเสียงรถยนต์ JVC
- ขอแนะนำให้ต่อจุดไฟที่มีกำลังขั้นต่ำสุดเกินกว่า 50 W (ทั้งด้านหน้าและด้านหลัง มีค่าความต้านทาน **4 Ω ถึง 8 Ω**) ถ้ากำลังขั้นต่ำกว่า 50 W ให้เปลี่ยนค่า "AMP GAIN" เพื่อป้องกันไม่ให้กำลังไฟฟ้าสูง (ตุ่นน้ำ 15 คำแนะนำ)
- การป้องกันการลัดวงจร จะต้องหันเข้าสากลต่ำที่สุด ที่ไม่ใช้ผลัดวงไฟ ปั๊มน้ำปั๊มไฟ
- แผนกระบายความร้อนจะร้อนมากหลังจากใช้ ระวังความร้อนที่สัมผัสมือเมื่ออดอุชูประภากอนนี้

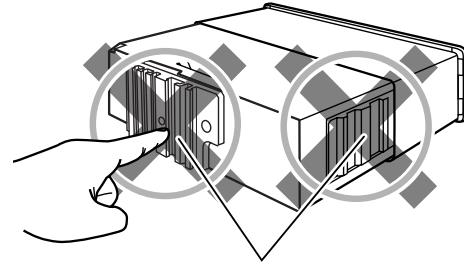







Heat sink / แผ่นระบายความร้อน

## Parts list for installation and connection

The following parts are provided for this unit. If any item is missing, consult your JVC car audio dealer immediately.

## รายการส่วนประกอบสำหรับติดตั้งและเชื่อมต่อ

ส่วนประกอบด้านในห้ามกันชุดประกอบนี้ หากมีสิ่งใดไม่ครบ กรุณาปรึกษาด้วยแทนจำหน่ายเครื่องเสียงรถยนต์ JVC โดยทันที

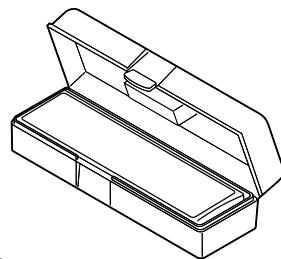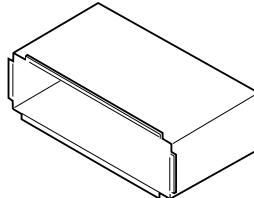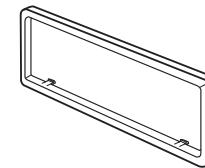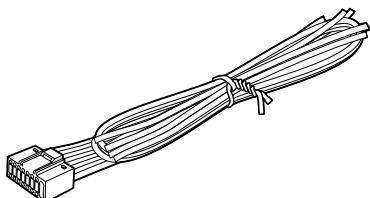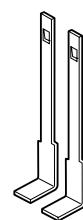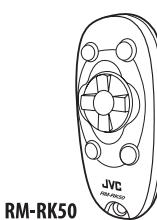(A) / (B)  
Hard case/Control panel  
ลังบรรจุ/หน้าปัด(C)  
Sleeve  
ปลอกหุ้ม(D)  
Trim plate  
แผ่นโลหะขอบแต่ง(E)  
Power cord  
สายไฟบิลกั้ง(F)  
Handles  
ตัวนับนักบิน(G)  
Remote controller  
รีโมทคอนโทรล(H)  
Battery  
แบตเตอรี่

## INSTALLATION (IN-DASH MOUNTING)


The following illustration shows a typical installation. If you have any questions or require information regarding installation kits, consult your JVC car audio dealer or a company supplying kits.

- If you are not sure how to install this unit correctly, have it installed by a qualified technician.

## การติดตั้ง (การประกอบแผงหน้าปัดมีเบ้า)


ภาพด้านล่างคือวิธีการติดตั้งแบบทั่วไป หากคุณมีปัญหาหรือต้องการข้อมูลเพิ่มเติมเกี่ยวกับชุดติดตั้ง กรุณาปรึกษาผู้ขายเครื่องเสียงรถยนต์ JVC ของท่านหรือบริษัท

- ชุดประกอบ ถาดปิดไม่นิ่มใจว่าติดตั้งชุดประกอบนี้ถูกต้องหรือไม่ หากห้ามผู้เชี่ยวชาญเป็นผู้ติดตั้ง


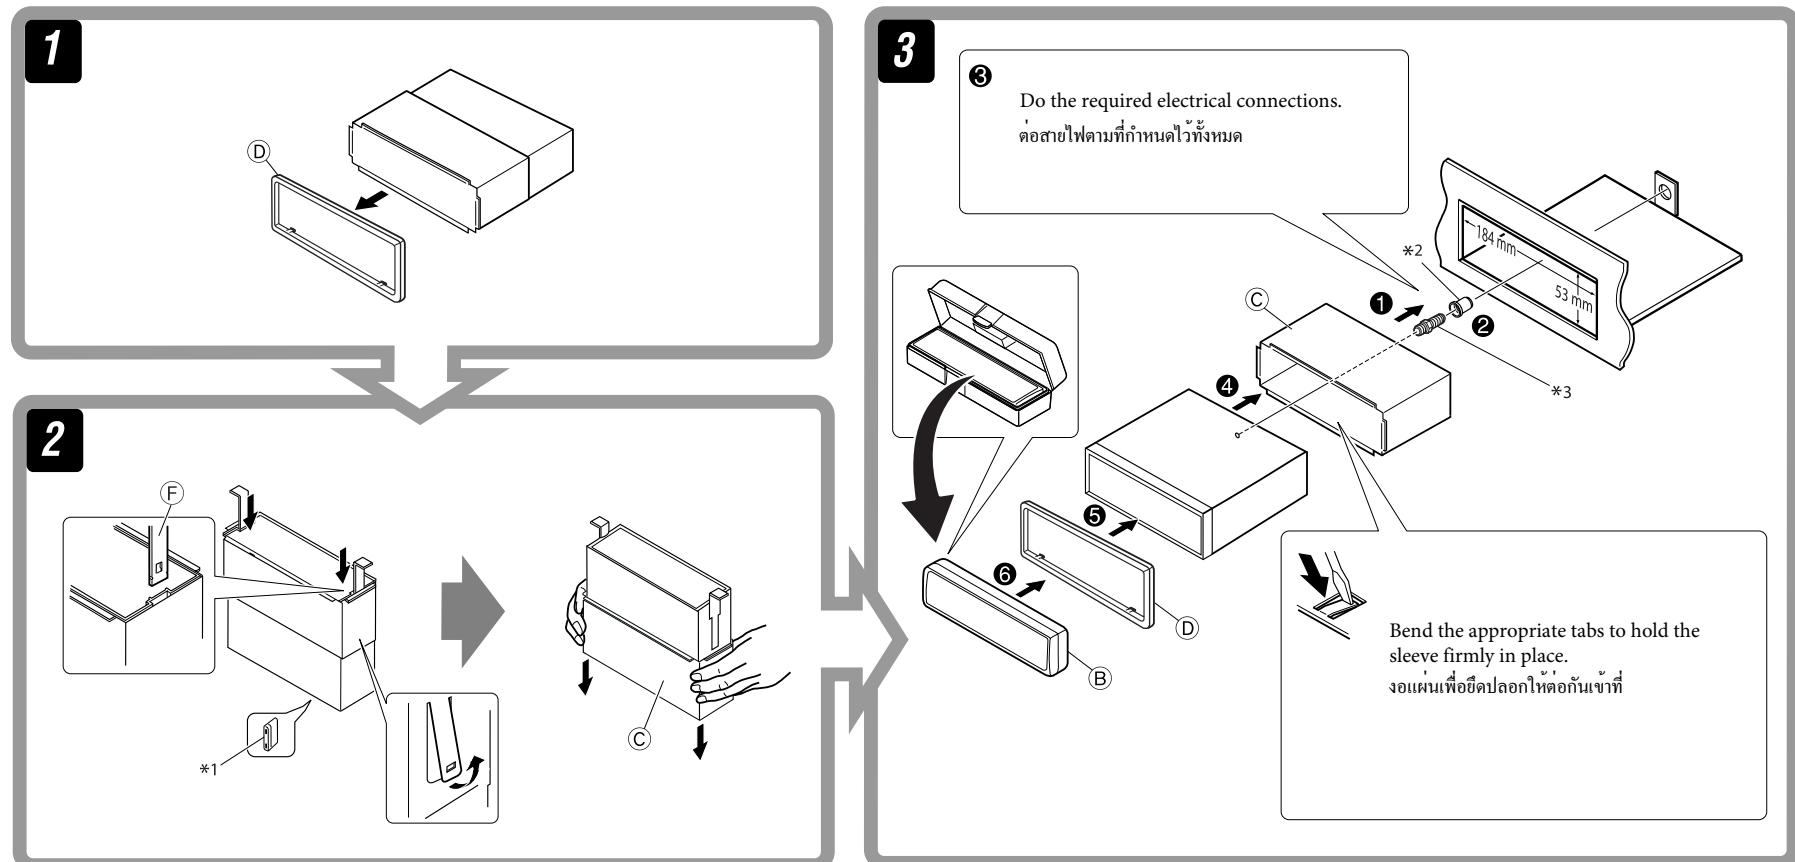


### Removing the unit

Before removing the unit, release the rear section.

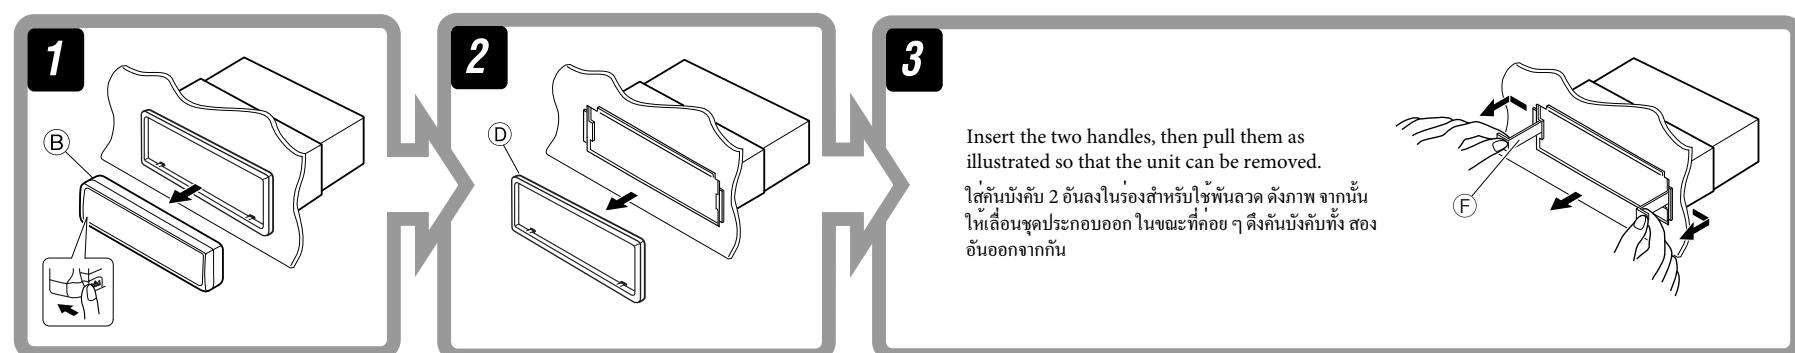


### When using the optional stay / เมื่อใช้ตัวยึดแบบเลือกได้

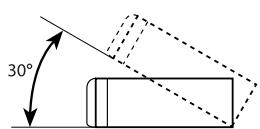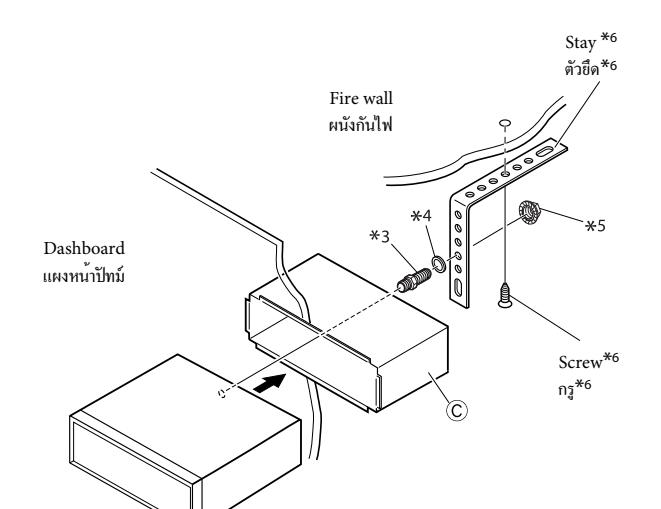

Install the unit at an angle of less than 30°.  
ติดตั้งชุดประกอบที่มุ่งต่ำกว่า 30° องศา

### When installing the unit without using the sleeve / เมื่อติดตั้งชุดประกอบโดยไม่ใช้ปลอกหนาม

In a Toyota car for example, first remove the car radio and install the unit in its place.  
ด้านหลังบานประตูโดยติดตั้งในร่องสำหรับใช้พื้นที่ ดังภาพ งานนี้ ให้เลื่อนชุดประกอบออก ในขณะที่ต้อง ดึงกันบังคับหัว ส่อง อันออกจากนั้น

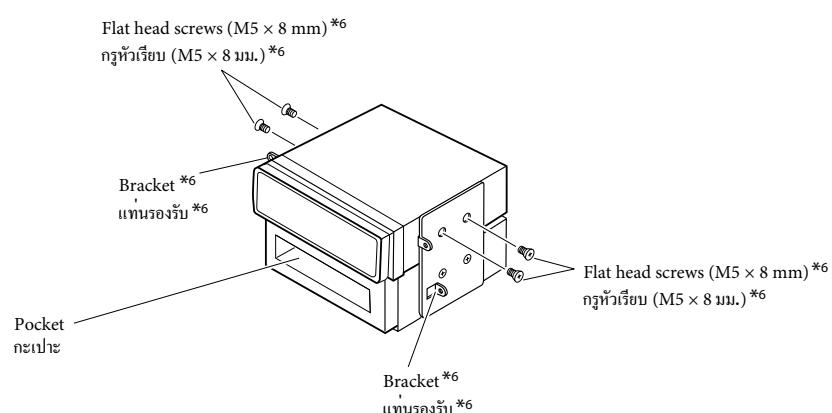

#### Note

When installing the unit on the mounting bracket, make sure to use the 8 mm-long screws. If longer screws are used, they could damage the unit.

#### หมายเหตุ

เมื่อติดตั้งชุดประกอบลงในแท่นรองรับไว้ ให้ใช้สกรูยาวขนาด 8 มม. ถาดสกรูหากว่าน้ำอาจทำให้ชุดประกอบเสียหายได้

\*1 When you stand the unit, be careful not to damage the fuse on the rear.

\*2 Rubber cushion—Not supplied for this unit.

\*3 Mounting bolt (M4 x 5 mm; M5 x 12.5 mm)—Not supplied for this unit.

\*4 Washer (ø5)—Not supplied for this unit.

\*5 Lock nut (M5)—Not supplied for this unit.

\*6 Not supplied for this unit.

\*1 เมื่อติดตั้งชุดประกอบบนบานประตู ระวังอย่าทำให้ไฟลัฟซิริเวลส์ส่วนท้ายเสียหาย

\*2 ยางนิ่นกระแทก—ไม่ได้ให้มา กับชุดประกอบนี้

\*3 สลักดิด (M4 x 5 มม.; M5 x 12.5 มม.)—ไม่ได้ให้มา กับชุดประกอบนี้

\*4 ประแจหัวเหล็ก (ø5)—ไม่ได้ให้มา กับชุดประกอบนี้

\*5 นอตล็อก (M5)—ไม่ได้ให้มา กับชุดประกอบนี้




\*6 ไม่ได้ให้มา กับชุดประกอบนี้

**PRECAUTIONS on power supply and speaker connections:**

- DO NOT connect the speaker leads of the power cord to the car battery; otherwise, the unit will be seriously damaged.**
- BEFORE connecting the speaker leads of the power cord to the speakers, check the speaker wiring in your car.

ข้อควรระวังส่วนหัวของการต่อแหล่งจ่ายกำลังและลำโพง:

- อย่าต่อสายตรงกับเครื่องกำลังของลำโพงเข้าบันไดเครื่องร้อนต์ มิฉะนั้น บุคคลอื่นจะได้รับความเสียหายมาก
- ก่อนที่จะต่อสายตรงกับเครื่องกำลังของลำโพงเข้ากับลำโพง ให้ตรวจสอบการเดินสายไฟลำโพงในรถของคุณให้เรียบร้อยเสียก่อน

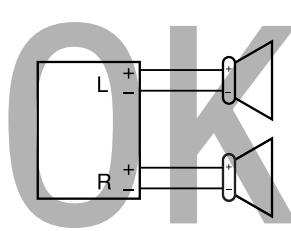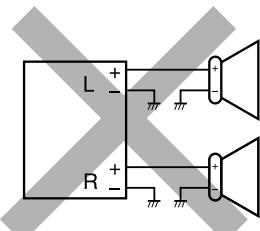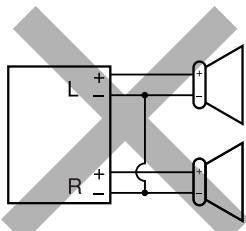**A Typical connections / การเชื่อมต่อแบบปกติ**

**Before connecting:** Check the wiring in the vehicle carefully. Incorrect connection may cause serious damage to this unit.

The leads of the power cord and those of the connector from the car body may be different in color.

1 Connect the colored leads of the power cord in the order specified in the illustration below.

2 Connect the antenna cord.

3 Finally connect the wiring harness to the unit.


ในการเชื่อมต่อ: ตรวจสอบการเดินสายไฟในรถของคุณให้ละเอียดก่อน เช่นการเชื่อมต่อที่ผิดพลาดอาจทำให้เกิดความเสียหายร้ายแรงถาวรหากบุคคลอื่นได้

สายตรงกับของสายไฟและของอุปกรณ์ต่อเชื่อมจากด้านล่างรถของคุณมีสีที่ไม่เหมือนกัน

1 ต่อสายไฟสีดำที่ระดับที่ระบุในรูปด้านล่าง

2 เชื่อมต่อสายอากาศ

3 ชุดท้าย ต่อส่วนควบคุมการเดินสายไฟเข้ากับชุดประกอบชุดนี้

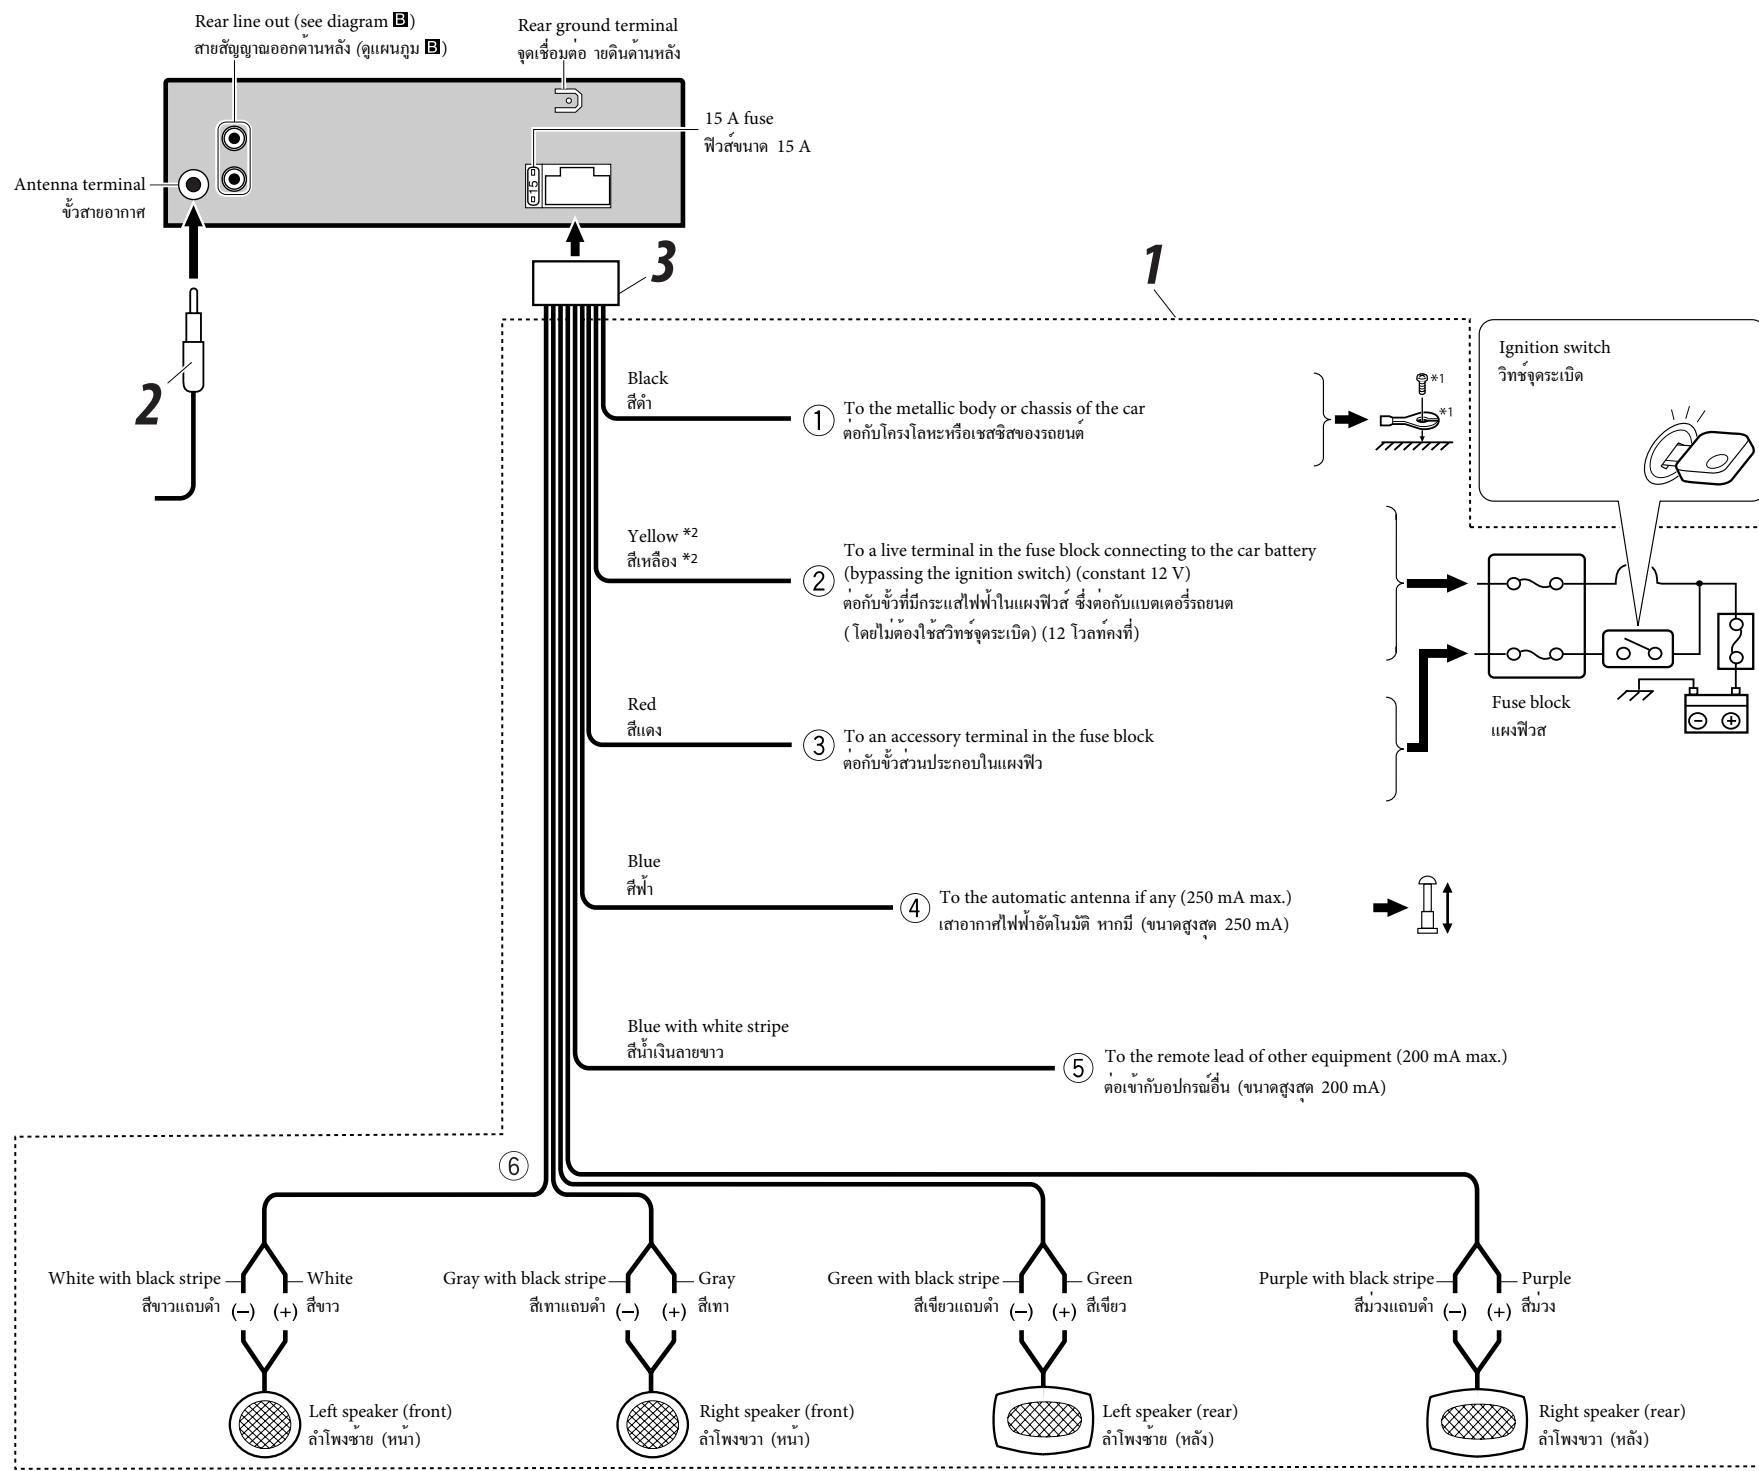

\*1 Not supplied for this unit.

\*2 Before checking the operation of this unit prior to installation, this lead must be connected, otherwise the power cannot be turned on.

\*1 ไม่ได้ให้มาด้วยชุดประกอบนี้

\*2 ก่อนการตรวจสอบการทำงานของชุดประกอบนี้ก่อนที่จะติดตั้ง ต้องต่อสายตรงกับนั้นก่อน  
มิฉะนั้นจะไม่สามารถเปิดเครื่องได้




## B Connecting the external amplifier or subwoofer / การเชื่อมต่อเครื่องขยายเสียงภายนอก

You can connect an amplifier to upgrade your car stereo system.

- Connect the remote lead (blue with white stripe) to the remote lead of the other equipment so that it can be controlled through this unit.
- **Disconnect the speakers from this unit, connect them to the amplifier. Leave the speaker leads of this unit unused.**

คุณสามารถต่อที่บ้านและไฟฟ้าอื่น เพื่อเพิ่มคุณภาพเสียงให้กับระบบสเตอริโอของรถคันนี้

- ต่อสายหัวที่รับเชื่อมต่อ (สายสีเงินลายขาว) เข้ากับสายหัวที่รับเชื่อมต่อของอุปกรณ์อื่น ๆ เพื่อจะสามารถควบคุมโดยชุดประมวลผลนี้ได้
- ถอดปลั๊กหูฟังออกจากชุดประมวลผลนี้ และห่อเข้ากับเครื่องขยายเสียง ทั้งสองข้างหัวปลั๊กหูฟังของชุดประมวลผลนี้ไว้

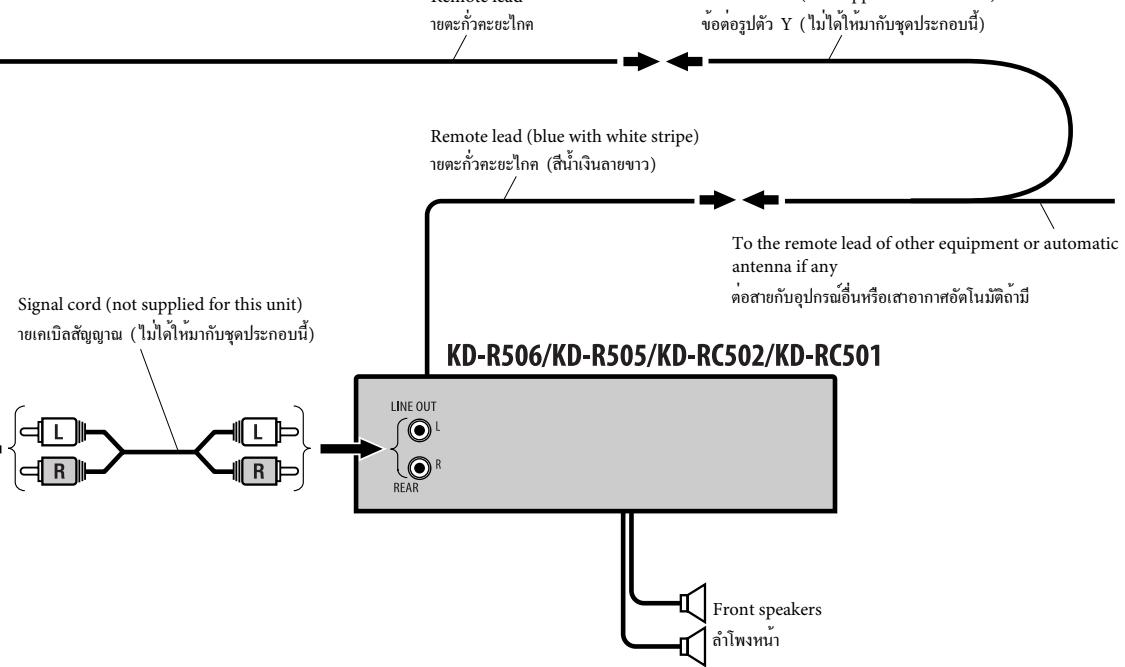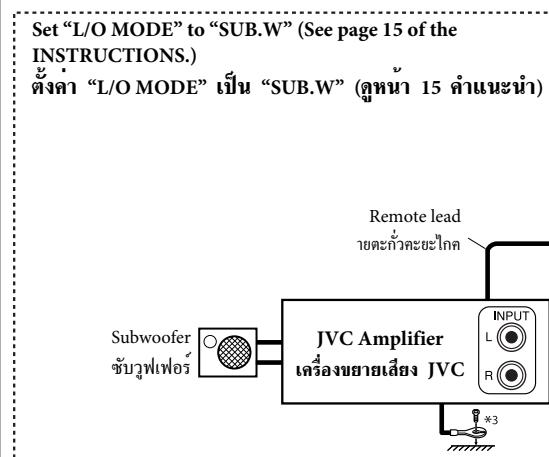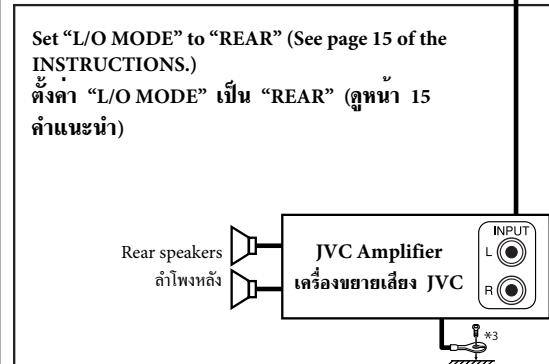

\*3 Firmly attach the ground wire to the metallic body or to the chassis of the car—to the place uncoated with paint (if coated with paint, remove the paint before attaching the wire). Failure to do so may cause damage to the unit.

\*3 ต่อสายต่อติดในหัวแน่นๆ กับตัวลังหัก หรือตัววัสดุ—ตรวจสอบ ที่ไม่มีสีเคลือบอยู่ ให้หุ้สีออกก่อน ก่อนต่อสายต่อ

## TROUBLESHOOTING

- **The fuse blows.**  
\* Are the red and black leads connected correctly?
- **Power cannot be turned on.**  
\* Is the yellow lead connected?
- **No sound from the speakers.**  
\* Is the speaker output lead short-circuited?
- **Sound is distorted.**  
\* Is the speaker output lead grounded?
- Are the “-” terminals of L and R speakers grounded in common?
- **Noise interfere with sounds.**  
\* Is the rear ground terminal connected to the car’s chassis using shorter and thicker cords?
- **This unit becomes hot.**  
\* Is the speaker output lead grounded?
- Are the “-” terminals of L and R speakers grounded in common?
- **This unit does not work at all.**  
\* Have you reset your unit?

## การตรวจสอบปัญหาข้อบ่ง

- **ไฟลับขัด**  
\* มีการใช้ช่อง ขาดหัวสีดำและสีแดงอย่างถูกต้องหรือไม่  
• **ไฟส่องสว่างเปิดหรือปิด**  
\* มีการใช้ช่องสายหัวที่ต้องห้ามหรือไม่  
• **ไม่มีเสียงจากลำโพง**  
\* มีการใช้ช่องสายหัวที่ต้องห้ามหรือไม่  
• **เสียงดังมาก**  
\* สายหัวที่ต้องห้ามที่ต่ออยู่ทางลำโพงเกิดไฟฟ้าลัดวงจรหรือไม่  
• **เสียงเพียง**  
\* สายหัวที่ต้องห้ามที่ต่ออยู่ทางลำโพงต้องห้ามหรือไม่  
\* สายขั้วลบ “-” ของลำโพงด้านซ้ายและขวาต้องห้ามตามปกติหรือไม่  
• **เสียงรบกวน**  
\* มีการใช้สายขั้นๆ หรือหนาๆ ต่อจากเครื่องรับสัญญาณที่ติดตั้งไว้บนพื้นด้านหลังกับตัวรับสัญญาณหรือไม่  
• **มีเสียงรบกวน**  
\* สายหัวที่ต้องห้ามที่ต่ออยู่ทางลำโพงต้องห้ามหรือไม่  
\* สายขั้วลบ “-” ของลำโพงด้านซ้ายและขวาต้องห้ามตามปกติหรือไม่  
• **เครื่องรับนี้ทำงานไม่**  
\* หัวต่อต้องเก็บไว้ในที่แห้งๆ และห้ามชื้น