


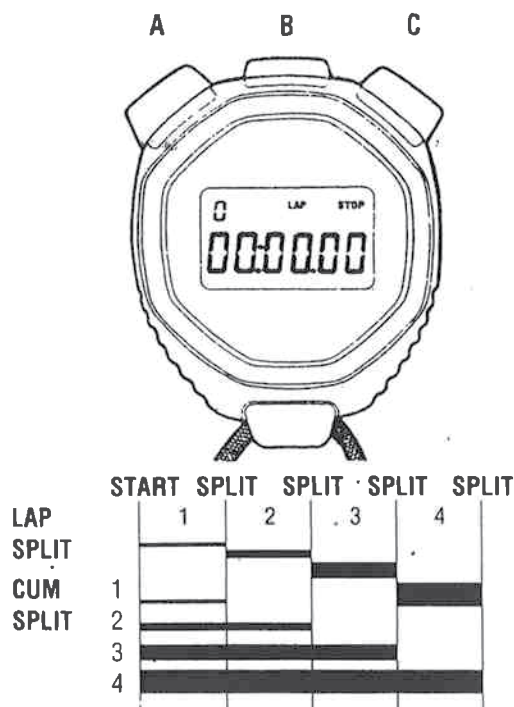

625XCL CUM/LAP SPLIT STOPWATCH OPERATING INSTRUCTIONS



Event

- C → Start
- C → Stop
- C → Restart (time out)

- C → Stop
- A → Reset

Split (CUM or LAP)

- B → LAP or CUM appears

- C → Start
- A → Split
- A → Return to running time

- C → Stop
- A → Reset

1-2 Fast Split

- C → Start
- A → Split Display shows first split

- C → Stop
- A → Display shows second split
- A → Reset

SPECIFICATIONS

Operating Temperature


14°F to 138°F (-10°C to 59°C)

Quartz Crystal Accuracy

±0.002% (accuracy may vary with shock, temperature, or aging of crystal).

Batteries

Batteries should last for 3 years. If display becomes dim, open back and replace with Duracell D357, Eveready D357, or Ray-O-Vac RW42.

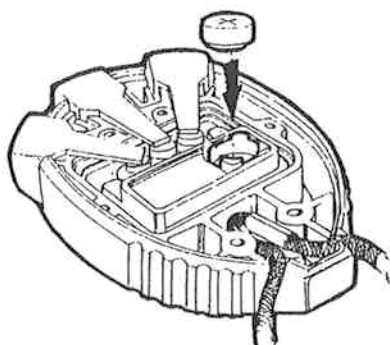

NO-PROOF-OF-PURCHASE LIMITED WARRANTY

See label on back of unit for details, or check

<http://support.ACCUSPLIT.com>

ACCUSPLIT, Inc

3090 Independence Drive, Suite 148

Livermore, CA 94551 USA

800-935-1996 • 925-290-1900

FAX 925-290-1930

www.ACCUSPLIT.com • support@ACCUSPLIT.com