

Universal 2-Din Quick Start Guide



System Features

- High resolution, touch-screen LCD display
- Navigation includes text-to-speech voice and visual turn-by-turn directions, 5 Million+ Points-Of-Interest library, 3D route and building views for major cities, plus 3 language options (English, Spanish, French-Canadian)
- Play DVD movies, audio CDs or discs with MP3 music files
- AM-FM stereo tuner with 24 station presets (18 FM, 6 AM)
- Bluetooth Hands-Free interface with built-in microphone
- iPod™ interface
- XM Satellite Radio ready
- Supports the vehicle's steering wheel controls
- USB & SD Card ports for multi-media playback (SD on some models)
- Back-Up Camera and/or sensor ready
- Dual Zone interface for optional rear seat displays
- Custom DVD Splash Screen capable

DS-UN0810

Notices

NOTICE OF INTENDED USE
Some features of Rosen Entertainment Systems are not intended for viewing by the driver when the vehicle is in motion, such as movie playback. When using navigation, minimize the amount of time spent viewing the screen and use voice prompts as much as possible. Avoid prolonged use of the touch screen controls. Such use might distract the driver or interfere with the driver's safe operation of the vehicle, and thus result in serious injury or death. Such use might also violate state or local laws.

Rosen Entertainment Systems disclaims any liability for any bodily injury or property damage that might result from any improper or unintended use.

Controls & Basic Operations

Adjust Screen Angle to Load Disc

Touch the right side of the screen and icons will appear. Touch "+" or "-" to adjust screen



Figure 1.

- IMPORTANT -
More detailed system operating instructions are located in the Owner's Manuals

Functions Located Behind LCD Display

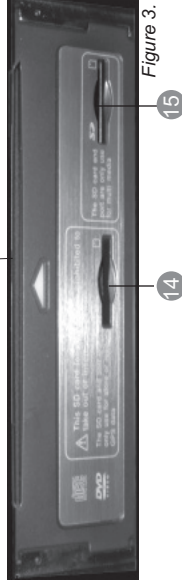


Figure 3.

Control Button Details (as shown in Figure 2-3.)

- 1 Eject button for DVD Mode.
- 2 Mute/Unmute
- 3 Press to turn system ON/OFF. Press again to set display to Night Mode. Press again to turn display OFF.
- 4 Photo sensor used for auto-dimming.
- 5 Mini USB for external media device.
- 6 Enter/Exit Navigation Mode (navigation can only be exited by pressing this button).
- 7 Press repeatedly to cycle through DVD and USB Modes.
- 8 When in DVD/CD or iPod™ Mode, press to Pause or Play.
- 9 Volume Down
- 10 Volume Up
- 11/12 When in Radio Mode, press to play the Next/Previous Preset station. Press and hold to scan for stations. When in DVD or iPod™ Mode, press to select the Next/Previous songs or chapter.
- 13 System reset (if required). Use a paper clip (or similar) to press.
- 14 SD Card Slot (for navigation only).
- 15 SD Card Slot (for multimedia only)
- 16 CD/DVD/MP3 Disc Slot.

Figure 2.



Turn System On/Off

Vehicle ignition must be On or in ACC Mode to operate system.

Press the  button to turn the system ON/OFF (Figure 4).




Volume Adjustment

Press   buttons to adjust the volume (Figure 4.).

Main Menu

Touch  to enter Main Menu. The Main Menu includes TV, Bluetooth, iPod™, Radio, XM, DVD, AV, Navigation and Setup.

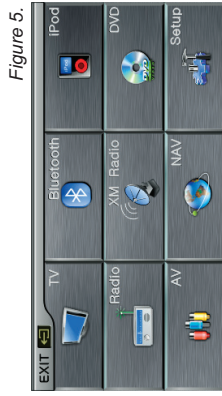

Navigation

Before using the Rosen Navigation software, read this entire manual. Make sure that you are familiar with the system's features and know how to operate the system.

Glance at the screen only when necessary and safe to do so. Let the computer voice guide you. If prolonged viewing is necessary, pull off the road to a safe location.

Introduction to Your Rosen Navigation

Rosen Navigation provides turn-by-turn visual and voice assistance to direct you to your selected destination. It quickly calculates step-by-step directions to any destination available on the included navigation map.

Rosen Navigation uses Global Positioning System (GPS) satellites, and a digital roadway map database to calculate and display travel directions. The system's GPS antenna receives signals from a constellation of 24 satellites orbiting the earth and uses the strongest of signals, to determine your position to within meters.

Before operating your Rosen Navigation system, please carefully read and follow the instructions provided in the "Safety Information and Precautions" located on Page 14 of this Quick Start Guide.


For Complete Operating Instructions

Please refer to the Rosen Navigation User's Manual to find complete instructions on the operation and many features of the Rosen Navigation System.

Initial Touch Screen Calibration

You may need to calibrate the touch screen when the system is first used. To do this, enter the Navigation Mode immediately after you turn the system on. Follow the information screens as indicated.

For detailed information of these functions, please refer to the "User's Manual".

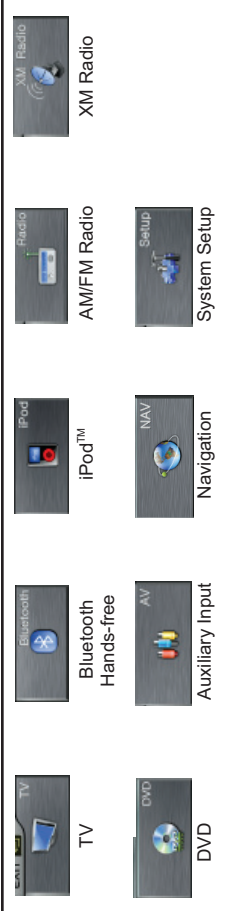


Start Up/Main Menu

When the Rosen Navigation software starts, you will see the reminder warning to use your Rosen Navigation software safely and lawfully.


Note: Please refer to the *User's Manual for additional information and warning on the proper use of the Rosen Navigation product.*

Warning Screen

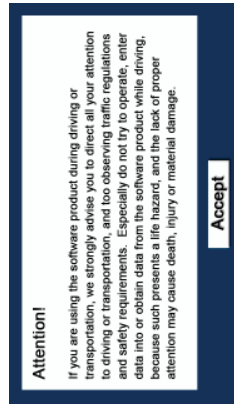

The Attention screen is displayed each time the system is turned ON as a reminder to make use of the navigational aids in a safe manner.

Main Menu

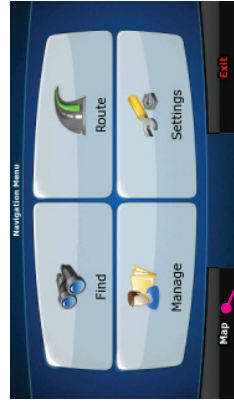

Select to display the map view

Main Menu Option	Select this Option to...
Find	Pick a destination for routing
Manage	Organize or select saved routes or Points-Of-Interest
Route	Edit or cancel a route in progress
Settings	Set preferences for routing, map, screen, navigation and more

5

Find Address Screen




- Select state name
- Select from previously used city
- Select from previously used city
- Enter street name
- Enter street address number

Previous screen

Map View Screens

Indicates distance to and direction of next turn

Next turn street or HWY

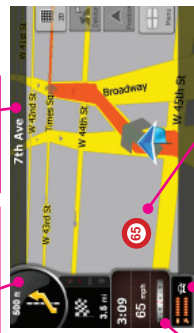

- Touch here to bring up arrow and 3D options
- 2D/3D map view options
- To avoid delays or change route
- Opens cursor menu
- Return to navi menu

3 screen view options can modify your preference

Return to current GPS position

Compass

GPS strength and quick menu option

Indicates posted HWY speed

Button	Select this Option to...	Button	Select this Option to...
+ -	Zoom the map view in and out		Switch map display between 2D and 3D views.
↑ ↓	Horizon up/down adjustment for 3D view		Display menu, jump to Main Menu

6

Points of Interest Screen



POI Menu Option	Select this Option to...
Around Address	Find POI by state, city and address
Around Cursor	Find POI by a cursor or location you have selected
Around GPS Position	Locate POI by your current satellite location
Around Destination	Find POI around your final destination
Along Route	Find POI along your current route

NOTE: Once you have selected your POI Menu Option and entered the requested data, the screen will switch to the POI Category Screen.



7


Set-Up Menu

You may customize the Rosen Navigation software to your own preferences. Select **Settings** from the Navigation Menu. You have 8 user preference categories shown on 2 screens, the second located by pressing the right arrow . In each of the 8 user preference categories, there are numerous options that can be changed.

Screen 1



Screen 2

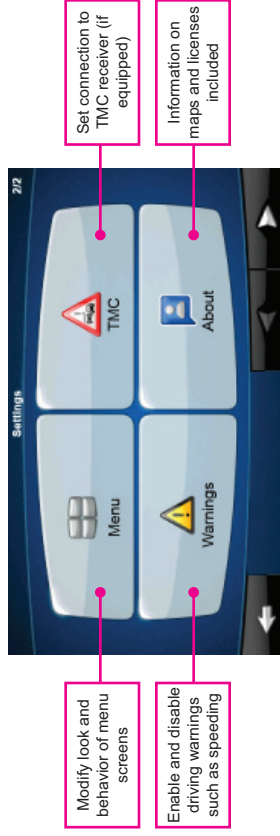

For further explanations of screen options, press the Help button located on the lower Right Hand side of screen (if shown).

8

Bluetooth Hands-Free

The system provides Bluetooth Hands-Free communication function. If your mobile phone is Bluetooth enabled, it can establish a point-to-point connection with the system, providing telephone dial up, call answering, Phonebook and Bluetooth music play functions.

Note: Bluetooth modules and software of cell-phones vary by brand and date of manufacture. Some functions may be different or not compatible with this system during actual use.

Enter/Exit


To Enter: From Main Menu (Figure 6.) touch the  icon.

To Exit: From Bluetooth screen (Figure 6) touch "EXIT" button in the upper left hand corner.



Figure 6.

Pairing Your Phone

Touch  and enable the Bluetooth device search function. "Pairing" will be displayed on the screen. After the connection succeeds, your cell phone will display (Rosen). Connect to the device by entering the password (1234). The system will indicate "Linking" and then "Connected." When your phone is connected its name will be displayed on the unit.


Touch  (Figure 8.) if you desire the systems Bluetooth feature to automatically detect your cell phone when the vehicle and system are turned on.



Figure 7.



Figure 8.

Making/Ending A Call (Figure 9.)

You can dial the number from your cell phone or use the touch-screen shown at the right by entering the number, then press the  icon to dial. Press  to clear.

Touch  to transfer the call to your cell phone. Press again to transfer the call over speakers. Press  to end the call.

Answer A Call (Figure 10.)

For incoming calls, the system will automatically switch to the answer screen.

Press the  icon to answer call or the lower  to refuse the call




Figure 10.



Figure 11.

Dialed Received Missed

Phonebook (Figure 11.)

Touch  and the Phonebook will appear. The phonebook can be used to record incoming numbers, received numbers and missed numbers. The system will not display your cell phone's internal phonebook but will show the last 5 numbers dialed, received or missed. Press the appropriate icon on the screen to view the numbers.

iPod™ Audio/Video

When the system is connected to an external iPod™ player, the audio and video files stored on the iPod™ can be played through the system.

Note: Sleep mode should be enabled on the iPod™ to reduce the event of battery drain.

Enter (Figure 12.)

From the Main Menu, touch the  icon to enter the iPod™ control system.

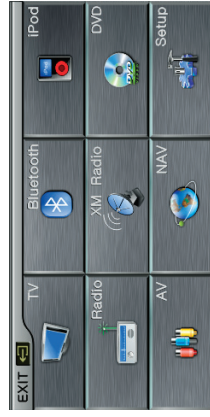



Figure 12.

Touch Button Descriptions (Figure 13.)

-  Pop up/hide the number pad
-  Repeat the current played song
-  Scan and play songs in the current folder. The next song will be played after the current song has been finished for 10 seconds.
-  Play songs in the current folder at random.

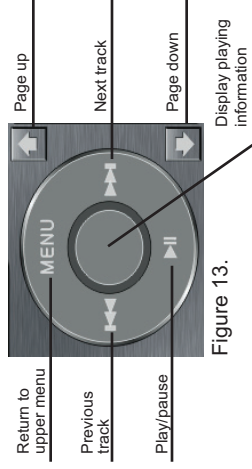



Figure 13.

Main Menu (Figure 14.)

Touch  to enter category list. The system categorizes files into 6 options you can select as shown in screen shot.

Touch the desired category to select that section.

 

Figure 14.

Play A Song (Figure 15.)

Touch the song shown on playlist to play.

Touch  to select previous song or  to select next song.



 
Touch the  arrow for page up or  for page down.



Figure 15.

Touch the center of the control plate and the play information will display on the screen (Figure 16.).

Play A Video (Figure 17.)

Touch  to enter category list.

Touch 6. Video to switch to iPod™ operation.

From your iPod™ press Play for the video file desired. The file will be transferred to the system.

NOTE: Video function may not be supported on all iPod models.



Figure 16.



Figure 17.

XM™ Satellite Radio (optional)

Enter (Figure 16)

From the Main Menu, touch the icon to enter the XM Radio function.

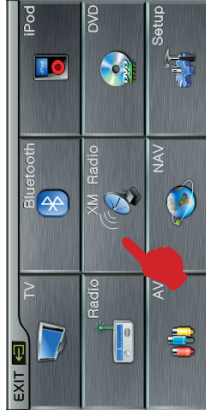


Figure 18.

Touch Button Descriptions (Figure 17)



Touch ◀ and ▶ to seek previous and next available stations.

Touch **BAND** to select XM1, XM2, XM3 Channel Preset screens.

To select a station as a Preset, press and hold a PRESET bar. The name of the station will appear in the bar when saved.

Play A Preset Channel (Figure 18)

Touch the desired Preset channel. The channel will load and begin to play.

NOTE: The background of the selected channel will become darker.



Figure 19.



Figure 20.

Rosen Navigation Information

Safety Information and Precautions

WARNING! Please read and follow the following safety precautions. Failure to follow the instructions below may increase your risk of collision and personal injury.

The Rosen Navigation software is not a substitute for your personal judgment. The route suggestions should never supersede any local traffic regulation or your personal judgment and /or knowledge of safe driving practices. Prior to completing any maneuvers suggested by your Rosen Navigation software (for example, a U-turn or a left turn), verify that you can legally and safely complete the maneuver. Do not follow route suggestions if they direct you to perform an unsafe or illegal maneuver, would place you in an unsafe situation, or would route you into an area that you consider unsafe.

Do not use the Rosen Navigation software to locate emergency services (such as police, fire stations, hospitals, and clinics). The database may not include all emergency service providers. Use your own best judgment and ask for directions in these situations.

If the vehicle is in motion, only a passenger should program the Rosen Navigation software. The driver should not program the system unless the vehicle is parked in a safe location.

The Rosen Navigation software's map database provides information on suggested routes without regard to factors that may affect your driving experience or the time required to arrive at your destination. For example, the system does not reflect road detours, closures or construction, some road characteristics (e.g., road surface, slope or grade, weight or height restrictions, etc.), temporary traffic congestion, weather conditions, and similar factors.

Vehicle Position

The Rosen Navigation software's computer considers vehicle speed and heading changes, together with longitude and latitude information, to accurately determine vehicle heading and position on a digital map.

Map and Information Database

The map database used by your Rosen Navigation software was created using high-resolution aerial and land based data collection.

Car navigation maps are frequently updated. While the database was judged to be as accurate as possible at the time of its release, a map database can never be 100% accurate. Road information that is maintained in the map databases, such as turn restrictions or road names may change over time.

End-User License Agreement

Please refer to the Rosen Navigation User's Manual to review and accept the terms and conditions in the End-User License before operating this product.

About the Registered Marks

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

iPod® is a registered trademark of Apple Computer, Inc.

NOTE: Features and specifications listed in this manual are subject to change without notice.

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D Symbol are trademarks of Dolby Laboratories.



All rights reserved. Copyright 2008.

DP-UN0811 Rev B

Universal - Rev B.indd 16

10/31/2008 4:59:09 PM