

Franklin®

BOOKMAN®

EXPANDABLE ELECTRONIC BOOK

KING JAMES VERSION

HOLY BIBLE

AND COMPLETE CONCORDANCE

USER'S GUIDE

KJB-770

License Agreement

READ THIS LICENSE AGREEMENT BEFORE USING ANY BOOKMAN ELECTRONIC BOOK.

YOUR USE OF THE BOOKMAN ELECTRONIC BOOK DEEMS THAT YOU ACCEPT THE TERMS OF THIS LICENSE. IF YOU DO NOT AGREE WITH THESE TERMS, YOU MAY RETURN THIS PACKAGE WITH PURCHASE RECEIPT TO THE DEALER FROM WHICH YOU PURCHASED THE BOOKMAN ELECTRONIC BOOK AND YOUR PURCHASE PRICE WILL BE REFUNDED. BOOKMAN ELECTRONIC BOOK means the software product, hardware, and documentation found in this package and FRANKLIN means Franklin Electronic Publishers, Inc.

LIMITED USE LICENSE

All rights in the BOOKMAN ELECTRONIC BOOK remain the property of FRANKLIN. Through your purchase, FRANKLIN grants you a personal and nonexclusive license to use the BOOKMAN ELECTRONIC BOOK on a single FRANKLIN BOOKMAN at a time. You may not make any copies of the BOOKMAN ELECTRONIC BOOK or of the preprogrammed data stored therein, whether in electronic or print format. Such copying would be in violation of applicable copyright laws. Further, you may not modify, adapt, disassemble, decompile, translate, create derivative works of, or in any way reverse engineer the BOOKMAN ELECTRONIC BOOK. You may not export or reexport, directly or indirectly, the BOOKMAN ELECTRONIC BOOK without compliance with appropriate governmental regulations. The BOOKMAN ELECTRONIC BOOK contains Franklin's confidential and propriety information which you agree to take adequate steps to protect from unauthorized disclosure or use. This license is effective until terminated. This license terminates immediately without notice from FRANKLIN if you fail to comply with any provision of this license.

Contents

Welcome to the world of BOOKMAN! Your new BOOKMAN is a powerful, portable electronic Bible that you can expand into a complete library when you buy additional BOOKMAN book cards.

With this *Holy Bible, King James Ver-*

sion, you can quickly find any Bible verse, as well as the occurrences of any word and phrase in the Bible.

You can also hear more than 3,000 people and place names to aid your pronunciation.

Using the Special Features	4
Installing Batteries and Book Cards	5
Selecting a Book	6
Using the Color Keys	6
Changing the Settings and Viewing a Demonstration	7
Reading the Bible	8
Looking up a Bible Verse	9
Hearing Names Pronounced	10
Searching for Words	11
Searching for Phrases	12
Highlighting Search Words	13
Expanding Your Searches	13
Reading Footnotes	14
Using Bookmarks	15
Resetting Your BOOKMAN	17
Index	19

Key Guide

Color Keys

MORE

(red) Expands a word search.

SAY

(green) Says certain words.

NOTE

(yellow) Displays footnotes.

LIST


(blue) Displays Bookmark list.

Function Keys

BACK

Backs up (e.g., erases letters).

CAP

Shifts  to type an apostrophe.

CARD

Exits the book you're reading.

CLEAR

Clears your request.

ENTER

Selects a menu item, enters a word search, or starts the highlight in text.

► Understanding the Color Keys

The color keys (red, green, yellow, and blue) perform the functions listed above only for the BOOKMAN book described in this User's Guide. Other books have their own color key functions, which are labelled on their book cards and listed in their User's Guides. For more information, read "Using the Color Keys."

HELP

Displays help messages.

MENU

Displays the main menus.

ON/OFF

Turns BOOKMAN on or off.

SPACE

Types a space or pages down.

? *

At a verse, displays book, chapter, and verse number.

:

Types a colon.



Direction Keys

Move in the indicated direction.

UP

DN

Pages up or down.

Star Key Combinations*

☆

+ CARD

Sends a word between books.

☆

+ UP

or **DN**

Goes to the next or previous chapter or search match.

☆

+ ↵

or **↑**

Goes to the start or end of a menu chapter, or help.

☆

+ M

Adds a bookmark to a verse.

 
☆

+ Q...

Shifts the top row of letters to type numbers.

* Hold **☆** while pressing the other key.

Using the Special Features

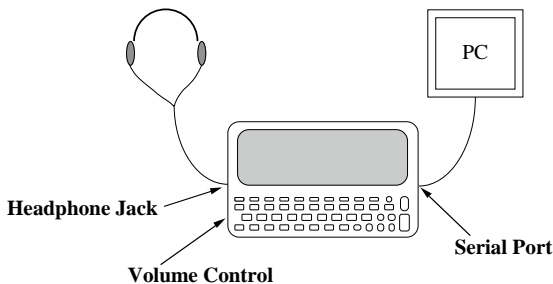

Your BOOKMAN 770 is equipped with several special features that many, but not all, BOOKMAN books use. To learn if you can use the special features with a particular BOOKMAN book, read its User's Guide.

Headphone Jack: The headphone jack is designed for 3.5 mm, 35 ohm impedance stereo headphones. **Caution:** Monophonic headphones will not work with this BOOKMAN model.

Volume Control: The dial located under the headphone jack controls the volume of the speaker or headphones.

Serial Port: The serial port allows certain BOOKMAN books, when Franklin's 3.5 mm serial cable is connected to your BOOKMAN, to transfer data to a personal computer (PC).

Warning: Using a serial cable other than the one obtained from Franklin may damage your BOOKMAN and/or PC. Franklin's serial cable is specifically designed for the transfer of data between BOOKMAN and a PC.

Speaker: The speaker is located on the back of your BOOKMAN near the serial port. For best results, do not cover the speaker with your hand.

Installing Batteries

Your BOOKMAN 770 is powered by two AAA, 1.5-volt batteries. Here is how to install or replace them.

Warning: When the batteries lose power or are removed from your BOOKMAN, information that you entered in its built-in book and in an installed book card will be erased.

1. Turn your **BOOKMAN** over.
2. Remove the battery cover, located above the speaker, by compressing its tab with your finger and then lifting the cover.
3. Install the batteries as shown in the diagram in the battery compartment.
4. Replace the battery cover.

 
► Resuming Where You Left Off

You can turn off your BOOKMAN at any screen. When you turn your BOOKMAN on again, the last screen that you viewed appears.

Installing Book Cards

Warning: Never install or remove a book card when your BOOKMAN is turned on. If you do, information that you entered in its built-in book and in an installed book card will be erased.

1. Turn your **BOOKMAN** off.
2. Turn your **BOOKMAN** over.
3. Align the book card tabs with the notches in a card slot.

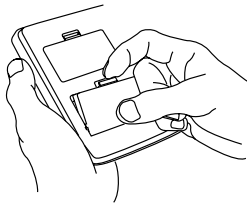

4. Press the book card until it snaps into place.

► Removing Book Cards

Warning: When you remove a book card that doesn't have a built-in battery of its own, information that you entered in that book card will be erased.

Selecting a Book

Once you have installed a book card in your BOOKMAN, you can select which book to use.

1. Turn your **BOOKMAN** on.
2. Press **CARD**.



These are sample books.

3. Press **←** or **→** to highlight the book you want to use.



4. Press **ENTER** to select it.

 
► About the Screen Illustrations

Some screen illustrations in this User's Guide may differ slightly from what you see on screen. This does not mean that your BOOKMAN is malfunctioning.

Using the Color Keys

The red, green, yellow, and blue keys on your BOOKMAN change their functions according to which book you're using.

When the built-in book you're using, the color keys function as labelled on the BOOKMAN keyboard. When you're using a book card, the color keys function as labelled on that card.

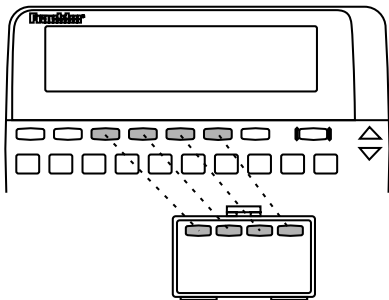


Remember, the color keys for book cards function as labelled on their cards, not as labelled on the BOOKMAN keyboard.

Changing the Settings

You can adjust the type size, shutoff time, and screen contrast of your BOOKMAN, as well as turn off or on the pronunciation guide in this Bible, by using the Setup menu.

The shutoff time is how long your BOOKMAN stays on if you forget to turn it off. The pronunciation guide shows how to pronounce words when you press **(SAY)**.

 1. Press **(MENU)**.
2. Use the arrow keys to highlight **Pron Guide Off/On, Set Type Size, Set Shutoff, or Set Contrast** on the Setup menu.



3. Press **(ENTER)**.
If you select *Pron Guide Off/On*, don't go to Step 4. To leave the settings unchanged, press **(BACK)**.
4. Use **↑** and **↓** to highlight a new setting and press **(ENTER)**.

Viewing a Demonstration

Before you start using your BOOKMAN, you may want to see a brief demonstration of what it can do.

When a book card is installed in your BOOKMAN, select *View Demo* from the Setup menu to see the demonstration.

When a book card is not installed in your BOOKMAN, the demonstration will automatically appear after you turn on the BOOKMAN. To stop the demonstration, press **(CLEAR)**. To disable it, press **(MENU)** and then select *Disable Demo* from the Setup menu. To re-enable it, select *Enable Demo*.

► Help is Always at Hand

At virtually any screen display, you can view a help message by pressing **(HELP)**. Press **↓** or **(SPACE)** to read it. To exit help, press **(BACK)**. Note: To read a tutorial about this book, select *Tutorial* from the Setup menu.

► Follow the Arrows

The flashing arrows at the right of the screen show which arrow keys you can press to move through menus or view more text.

 
Reading the Bible

The simplest way to use this Bible is to select a book from the Old or New Testament and then read its text.

1. Press **CLEAR**.
2. Press **MENU**.
3. Use the arrow keys to highlight a book on the Old or New menu. For example, highlight *Romans* under *New*.



4. Press **ENTER** to go to the first verse of that book.



5. Use **↓**, **DN**, or **SPACE** to read it.

To learn how to use the other Direction keys, refer to the Key Guide.

6. Press **MENU** to return to the

Reading the Bible

menus.

 
The check marks the book that you last read.

7. Press **CLEAR** to clear your selection.

► Where in the Bible Are You?

When you're reading any Bible verse, you can view its book, chapter, and verse number by pressing


?*.



Looking up a Bible Verse


To go directly to a specific Bible verse, simply enter its book title, chapter number, and verse number. If you enter only a book title and chapter number, you go to the start of the chapter. If you enter only a book title, you go to the start of that book.

 1. Press **(CLEAR)**.
2. Type a book title, chapter number, and verse number.



You can type only capital letters. To type a number, hold **(☆)** and press a numbered key. Type a colon or a space between the chapter and verse numbers. To type a colon, press **(.)**. To type an apostrophe, hold **(CAP)** and press **(.)**. To erase a character, press **(BACK)**.

 3. Press **(ENTER)**.



Looking up a Bible Verse

4. Use **↓**, **(DN)**, or **(SPACE)** to read it.
5. When you're done, press **(CLEAR)** to clear your request.

► Verse Finding Tips

Here are some notes that will help you to look up verses:


- Type abbreviations rather than complete book titles (e.g., *ps* for *Psalms* or *eph* for *Ephesians*).
- Type an Arabic or Roman numeral before books of more than one volume (e.g., *1 Samuel* or *II Kings*). To type a number, hold **(☆)** and press a numbered key.
- Some book titles, such as *Numbers* and *John*, are also valid search words. When you search for one of these ambiguous words, a menu appears that asks you to select which type of request you want.

Hearing Names Pronounced

Whenever you see a superscript P (^P) after a people or place name, you can hear and see its pronunciation. Try this example.

1. Find **Matthew 1:3**.


To learn how, read “Looking up a Bible Verse.”

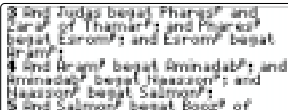

3 And Judas begat Pharez^P and Zarah^P of Thamar^P; and Pharez^P begat Caron^P and Caron^P begat Aram^P;
4 And Aram^P begat Aminadab^P; and Aminadab^P begat Naasson^P; and Naasson^P begat Salmon^P;
5 And Salmon^P begat Booz^P of

Notice the P's after *Pharez*, *Zara*, etc.

 2. Press **(ENTER)** to start the highlight.
3. Use the arrow keys to highlight a name followed by a superscript P. For example, highlight *Pharez*.



3 And Judas begat Pharez^P and Zarah^P of Thamar^P; and Pharez^P begat Caron^P and Caron^P begat Aram^P;
4 And Aram^P begat Aminadab^P; and Aminadab^P begat Naasson^P; and Naasson^P begat Salmon^P;
5 And Salmon^P begat Booz^P of

4. Press **(SAY)** (the green key) to hear and see its pronunciation.

Hearing Names Pronounced



3 And Judas begat Pharez^P and Zarah^P of Thamar^P; and Pharez^P begat Caron^P and Caron^P begat Aram^P;
4 And he pharez / FRAY-eez^P and Aminadab^P begat Naasson^P; and Naasson^P begat Salmon^P;
5 And Salmon^P begat Booz^P of

To adjust the volume, turn the wheel on the side of your BOOKMAN.

5. To hear the word again, press **(SAY)** (green) again.
6. To turn off the pronunciation guide, press another key.
Note: The pronunciation guide disappear automatically after 20 seconds.
7. Highlight other words marked with superscript P's and then press **(SAY)** to hear them.
8. Press **(BACK)** to turn off the highlight.

 
► Disabling the Pronunciation Guide

If you don't want to see the pronunciation guide whenever you press **(SAY)** (green), highlight *Pron Guide Off* on the Setup menu and then press **(ENTER)** to select it. To turn the pronunciation guide on again, select *Pron Guide On*.

Searching for Words

You can search for almost any word or words in this Bible, just as if you were using a concordance. Simply enter search words to find their occurrences, or matches.

1. Press **(CLEAR)**.
2. **Type up to five words. For example, type *Lord Shepherd*.**
You can type capital letters only.
3. Press **(ENTER)** to search for them.



and which man go in before them,
and which man lead them out, and
which man bring them in: that the
congregation of the LORD be not
as sheep which have no
shepherd.

And the LORD said unto Moses,
Take thee Joshua the son of Nun, a

Bullets mark the match.

4. Hold **(*)** and press **(DN)** repeatedly to view the next matches.
5. Press **(MENU)**.



OLD NEW SEARCH SETUP

NUMBERS
1 CHRONICLES
PSALMS
JEREMIAH
EZRA
ESTHER

After a word search, only those books with matches are listed on

Searching for Words

the Old and New menus.

6. **Use the arrow keys to highlight a book on the Old or New menu.**
7. Press **(ENTER)** to view its matches.
8. **When you're done, press (CLEAR) to clear your request.**

► If You Misspell a Word

If you enter a misspelled word, or a word not found in this Bible, a list of spelling corrections appears. Highlight a correction and then press **(ENTER)** to select it, or press **(BACK)** to change your request.

► Words You Can't Search For

The following words are too common to search for, either by entering them or by highlighting them in verses: a, an, and, are, as, be, but, by, for, from, he, her, him, his, I, in, is, it, me, my, not, O, of, our, out, shall, she, that, the, their, them, they, to, up, upon, us, was, we, were, with, you.

 
Searching for Phrases

You can search for phrases—adjacent or nearly adjacent words in a particular order—by selecting an ordered search and a narrow search width.

An ordered search finds words only in the order that you enter them. For example, an ordered search for *Holy Spirit* will not find *spirit holy*.

The search width determines how far apart your search words can be in the Bible and still be a match.

1. Press **(MENU)**.
2. Highlight **Ordered Search** on the Search menu.



3. Press **(ENTER)** to select it.
4. Press **(MENU)**.
5. Highlight **Set Search Width** on the Search menu.
A check marks your previous selection.
6. Press **(ENTER)** to select it.

Searching for Phrases



7. Press **(ENTER)** to select **Close Together**.
8. Type a phrase and then press **(ENTER)** to search for it. For example, enter *Holy Spirit*.
9. Hold **(☆)** and press **(DN)** repeatedly to view the next matches. Or press **(MENU)** to see the books with matches.
10. Press **(CLEAR)** when done.

► Understanding Search Widths

This is how far apart your search words can be in verses when you select a certain search width:

Search Width	Distance Apart
<i>Close Together</i>	nearly adjacent
<i>Not as Close</i>	a few words
<i>Far Apart</i>	many words
<i>Very Far Apart</i>	up to a few verses

 
Highlighting Search Words

You can also search for a word by highlighting it in a verse. Try this example.

1. Find **Romans 3:5**.

To learn how, read "Looking up a Bible Verse."


2. Press **ENTER** to start the highlight.



5 **unrighteous** if our unrighteousness commend the righteousness of God, what shall we say? 22 God unrighteous who taketh vengeance? 3 speak as a man? 6 God forbid for then how shall God judge the world? 7 For if the truth of God hath

To turn the highlight off, press **BACK**.

3. Use the arrow keys to highlight **unrighteous**.

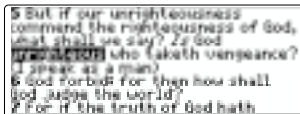

5 But if our unrighteousness commend the righteousness of God, what shall we say? 22 God **unrighteous** who taketh vengeance? 3 speak as a man? 6 God forbid for then how shall God judge the world? 7 For if the truth of God hath

4. Press **ENTER** to search for the highlighted word.

5. Hold **☆** and press **DN** repeatedly to view the next matches.

6. Press **MENU** to view the books that have matches.

 
7. Press **CLEAR** when done.

Expanding Your Searches

You can expand your word searches up to three times to find inflections, synonyms, and similar words.


1. Press **CLEAR**.

2. Type a word and press **ENTER**. For example, enter **belief**.



SEARCH your request:
belief Matches in 1 book

 3. Press **MORE** (the red key) to expand the search.



believed of the Lord, because God hath from the beginning chosen you to evangelize through a justification of the truth: Matches in 38 books the
14 Wherunto he called you by our gospel, to the obtaining of the glory of our Lord Jesus Christ.

4. Press **MORE** (red) again.

5. Press **MORE** (red) once more to fully expand the search.

6. Press **MENU** to view the menus.

7. Select a book to view its matches.

8. Press **CLEAR** when done.

Expanding Your Searches

► Understanding Expansions

Each time that you expand a word search, similar words are added to your search.

The first time that you press **MORE**, inflections are added (e.g., *believe* and *believed* to *belief*).

The second time that you press **MORE**, compound and related words are added (e.g., *believer* and *unbelief* to *belief*).

The third time that you press **MORE**, synonyms are added (e.g., *understand* and *surely* to *belief*).

When you expand a multiple-word search, words similar to any or all your search words are added.

 
Note: Sometimes pressing **MORE** only once does not expand a search because your search word(s) have no inflections in this Bible. In that case, press **MORE** a second and a third time to expand your search.

Reading Footnotes

Whenever you see a **Ⓜ** after a word, that word has a footnote. These footnotes provide alternative translations, describe textual variants, and define obscure words. Try this example.

1. Find *John 21:5*.

To learn how, read “Looking up a Bible Verse.”



Ⓜ Then Jesus saith unto them, Children, have ye any meat? They answered him, No.
Ⓜ And he said unto them, Cast the net on the right side of the ship, and ye shall find. They cast therefore, and now they were not able to draw it for the multitude.

Notice the footnote marker.

2. Press **NOTE** (the yellow key).






i.e. fish



3. If needed, press ↵ to read the footnote.


4. Press **BACK** to go back to the verse.

Reading Footnotes


► When More Than One Footnote Appears on Screen


Sometimes more than one  appears on the screen at one time. In that case, pressing  displays the footnote of the first .

To view the subsequent footnotes, press  and then the arrow keys to highlight a subsequent .

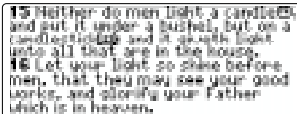


15 Neither do men light a candle and put it under a bushel, but on a stand or on a lamp, and it gives light unto all that are in the house.
16 Let your light so shine before men, that they may see your good works, and glorify your Father which is in heaven.

Then press  to view its footnote.

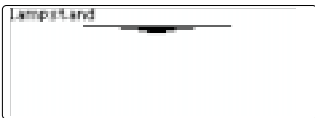


Lampstand


Press  to go back to the verse.



Using Bookmarks

 To quickly find your favorite verses, you can place up to 30 bookmarks in this Bible.

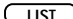


Adding a Bookmark

1. When a Bible verse is on screen, press  (the blue key).





2. Highlight *Add...* and then press  to add a bookmark () to that verse.

Viewing a Bookmark

1. When a Bible verse is on screen, press  (blue).
2. Press  to select *View Bookmark*.
3. Highlight a verse and then press  to view it.

► A Quick Way to Add Bookmarks

You can also add a bookmark to a verse by holding  and pressing  when that verse is on screen.

Deleting a Bookmark

1. When a Bible verse is on screen, press **(LIST)** (blue).
2. Highlight the verse whose bookmark you want to delete.
3. Press **(ENTER)**.
4. Press **(Y)** to delete the bookmark or **(N)** to keep it.

► Deleting All Your Bookmarks


Caution: When you delete all your bookmarks as described below, the settings revert to their original states: *Ordered Search* off, *Close Together* search width, *Medium* type size, and *2 Minutes* shutoff time. To learn how to change the settings, read “Changing the Settings.”

To delete all your bookmarks at one time, first turn off your BOOKMAN. Then hold **(ON/OFF)** and press **(CLEAR)** to reset it.

This BOOKMAN can send words between certain books.

To send a word, you must first install a book card in your BOOKMAN, and that book card must be able to send or receive words. To learn if a book card can send or receive words, read its User's Guide.

1. Highlight a word in this book.

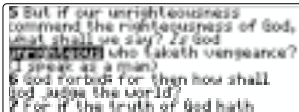

5 But if our unrighteousness
commend the righteousness of God,
what shall we say? Is God
unrighteous who taketh vengeance?
(I speak as a man)
6 God forbid for then how shall
God judge the world?
7 For if the truth of God hath

To highlight a word in text, press **(ENTER)** and then press the arrow keys. To highlight a word in a list, press the arrow keys.

2. Hold **(☆)** and press **(CARD)**.
3. Highlight the other book.
4. Press **(ENTER)**.

The word that you highlighted appears in the other book.

5. Press **(ENTER)** to look up the word.

Resetting Your BOOKMAN

If the keyboard fails to respond, or if the screen performs erratically, first press **CLEAR** and then press **ON/OFF** twice. If nothing happens, follow the steps below to reset it.

Warning: Pressing the reset button with more than light pressure may permanently disable your BOOKMAN. Also, resetting BOOKMAN erases settings and information entered in its built-in book and in an installed book card.

1. Hold **CLEAR and press **ON/OFF**.**

If nothing happens, try Step 2.

2. Use a paper clip to gently press the reset button on BOOKMAN.

The reset button is recessed in a pin-sized hole on the back of BOOKMAN. Look for it on the battery cover or near the book card slot.

This unit may change operating modes due to Electro-static Discharge. Normal operation of this unit can be re-established by pressing the reset key, **ON/OFF**, or by removing/replacing batteries.

Specifications

BOOKMAN Model KJB-770

- Batteries: two AAA 1.5-volt
- Size: 14 x 8.9 x 1.6 cm.
- Weight: 7 oz.

© 1996 Franklin Electronic Publishers, Inc., USA. All rights reserved. BOOKMAN is a registered trademark of Franklin.

U.S. Patents 4,406,626; 4,490,811; 4,830,618; 4,891,775; 4,982,181; 5,007,019; 5,113,340; 5,153,831; 5,203,705; 5,218,536; 5,229,936; 5,249,965; 5,295,070; 5,321,609; 5,333,313; 5,396,606. Euro. Patent 0 136 379.

Deutsch Pats. No. M9409743.7, M9409744.5. PATENTS PENDING.

FCC Notice: Complies with the limits for a Class B computing device pursuant to Subpart B of part 15 of FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) This device must accept any interference received, including interference that may cause undesired operation. ISBN 1-56712-2801-9.

Limited Warranty (U.S. only)

FRANKLIN warrants to you that the BOOKMAN PRODUCT will be free from defects in materials and workmanship for one year from purchase. In the case of such a defect in your BOOKMAN PRODUCT, FRANKLIN will repair or replace it without charge on return, with purchase receipt, to the dealer from which you made your purchase or Franklin Electronic Publishers, Inc., One Franklin Plaza, Burlington, N.J. 08016-4907, within one year of purchase. Alternatively, FRANKLIN may, at its option, refund your purchase price. Data contained in the BOOKMAN PRODUCT may be provided under license to FRANKLIN. FRANKLIN makes no warranty with respect to the accuracy of data in the BOOKMAN PRODUCT. No warranty is made that the BOOKMAN PRODUCT will run uninterrupted or error free. You assume all risk of any damage or loss from your use of the BOOKMAN PRODUCT.

This warranty does not apply if, in the sole discretion of FRANKLIN, the BOOKMAN PRODUCT has been tampered with, damaged by accident, abused, misused, or misapplication, or as a result of service or modification by any party, including any dealer, other than FRANKLIN. This warranty applies only to products manufactured by or for FRANKLIN. Batteries, corrosion, or battery contacts and any damage caused by batteries are not covered by this warranty. NO FRANKLIN DEALER, AGENT, OR EMPLOYEE IS AUTHORIZED TO MAKE ANY ADDITIONAL WARRANTY IN THIS REGARD OR TO MAKE ANY MODIFICATION OR EXTENSION OF THIS EXPRESS WARRANTY.

THE FOREGOING WARRANTY IS EXCLUSIVE AND IS IN LIEU OF ALL OTHER EXPRESS OR IMPLIED WARRANTIES, WRITTEN OR ORAL, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. YOUR SOLE AND EXCLUSIVE REMEDY SHALL BE FRANKLIN'S OBLIGATION TO REPLACE OR REFUND AS SET FORTH ABOVE IN THIS WARRANTY. Some States do not allow the exclusion of implied warranties, or limitations on how long a warranty lasts. This warranty gives you specific rights; you may also have additional rights which vary from State to State. This warranty shall not be applicable to the extent that enforcement of any provision may be prohibited by applicable law.

FRANKLIN SHALL IN NO EVENT BE LIABLE TO YOU OR TO ANY OTHER PERSON FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, OR ANY OTHER INDIRECT LOSS OR DAMAGE, ARISING OUT OF YOUR PURCHASE, THE MANUFACTURE OR SALE OF THE BOOKMAN PRODUCT, THIS LICENSE, OR ANY OBLIGATION RESULTING THEREFROM OR THE USE OR PERFORMANCE OF THE BOOKMAN PRODUCT UNDER ANY LEGAL THEORY, WHETHER BREACH OF CONTRACT, TORT, STRICT LIABILITY OR ANY OTHER CAUSE OF ACTION OR PROCEEDING, WHICH DAMAGES SHALL INCLUDE, BUT NOT BE LIMITED TO, LOST PROFITS, DAMAGES TO PROPERTY, OR PERSONAL INJURY (BUT ONLY TO THE EXTENT PERMITTED BY LAW). FRANKLIN'S ENTIRE LIABILITY FOR ANY CLAIM OR LOSS, DAMAGE, OR EXPENSE FROM ANY SUCH CAUSE SHALL IN NO EVENT EXCEED THE PRICE PAID FOR THE BOOKMAN PRODUCT. THIS CLAUSE SHALL SURVIVE FAILURE OF AN EXCLUSIVE REMEDY. This license and warranty is governed by the laws of the United States and the State of New Jersey.

Index

?* key 8

Apostrophes, typing 9

Arrow keys 7

Auto-resume feature 5

Batteries, installing 5

Book cards

installing 5

removing 5

Bookmarks

adding to a verse 15

viewing 15

deleting all at once 16

deleting singly 16

Changing

screen settings 7

search settings 12

Colons, typing 3, 9

Color keys

understanding 3

using 6

Contrast, changing 7

Deleting bookmarks 16

Direction keys 3

Disabling the demonstration 7

Erasing typed characters 9

Expanding searches 13, 14

Finding

Bible verses 9

books of the Bible 8, 9

sections of books 8, 9

Footnotes

viewing multiple notes 15

viewing singly 14

Function keys 3

Headphone jack 4

Help messages 7

Highlighting

footnotes 15

names 10

search words 13

Inflections 14

LIST key 15

M symbol 15

Misspellings, correcting 11

MORE key 13, 14

N symbol 14

Names, hearing 10

New menu 8

NOTE key 14

Numbers

before book titles 9

typing 9

Old menu 8

Ordered searches 12

P symbol 10

Index

- Phrases, finding** 12
- Pron Guide Off/On** 7
- Pronunciation guide**
 - defined 7
 - disabling and enabling 10
- Resetting**
 - BOOKMAN 17
 - settings and bookmarks 16
- SAY key** 7, 10
- Screen contrast** 7
- Search widths** 12
- Searching**
 - expansions 13, 14
 - for phrases 12
 - for sections 9
 - for verses 9
 - for words 11
 - for words by highlighting them 13
 - for words in other books 16
 - highlighting words 13
 - ordered searches 12
 - search widths 12
 - unsearchable words 11
- Sending words** 16
- Serial cable** 4
- Serial port** 4
- Shutoff time** 7
- Speaker** 4
- Special features** 4
- Spelling correction** 11
- STAR + CARD** 16
- STAR + M** 15
- STAR + S** 8
- Synonyms** 14
- Type size** 7
- Typing**
 - abbreviations 9
 - apostrophes 3, 9
 - colons 3, 9
 - numbers 3, 9
- Viewing**
 - book, chapter, verse 8
 - footnotes 14
 - help messages 7
 - menus 8
- Volume control** 4
- Warranty** 18