

PACKAGE CONTENTS

- Extension tube kit with three sections for Canon EOS cameras
 - 12 mm section
 - 20 mm section
 - 36 mm section
- Plastic cap covers (2)
- *Quick Setup Guide*

FEATURES

- Works with Canon™ EF and EF-S lenses, including standard, wide-angle, macro, or zoom lenses
- Reduces the lens focusing distance and lets you “get closer” to the subject to capture more detail
- Provides seven lengths by using the three sections individually or in combination
- Enables macro photography with your existing lens
- Works with an auto focus or manual focus lens



ASSEMBLING YOUR EXTENSION TUBE

Notes:

- Avoid getting dirt/dust in your camera or camera lens.
- Always turn off the power on your camera before removing or attaching the lens or the extension tubes.

- 1 Remove the camera lens from the camera by pushing the lock lever on the extension tube towards the camera body and turning the tube counter-clockwise.
- 2 Attach an extension tube section to your camera body by screwing it on clockwise.
- 3 Remove or add sections to create the length you want. By using the sections individually or combining them, you can create seven different lengths. The longer the tube, the closer you can focus.
 - To remove a section, press the release button, then turn the section counter clockwise.
 - To add a section, screw the section clockwise onto another section.
- 4 Attach your camera lens to the extension tube.

Notes:

- If you are using your camera's AE (automatic exposure) feature, it adjusts to the length of your extension tube.
- If you are manually adjusting your camera, you may need to adjust your exposure features because your extension tube reduces the amount of light.
- The use of a tripod and camera shutter release cable are highly recommended to avoid camera shake and blurred images.
- On zoom lenses with focal lengths above 100 mm, the focusing range may be drastically reduced. Use the shortest extension tube for these lenses or use a lens with smaller focal length.



Before using your new product, please read these instructions to prevent any damage.

REMOVING YOUR EXTENSION TUBE

- 1 Turn your camera off.
- 2 Unscrew and remove your camera lens.
- 3 Press the release button on the extension tube attached to the camera body, then turn the extension tube counter clockwise.
- 4 Attach your camera lens onto the camera body.

Note: When not in use, always use the plastic caps on both ends of the extension tube stack to avoid dirt, dust, and other small objects from entering the tubes.

TROUBLESHOOTING

PROBLEM	SOLUTION
I cannot remove the extension tube from my camera.	Make sure that you press and hold the unlock button on the extension tube closest to the camera body before attempting to remove the tube.
With the extension tube on, my camera does not focus on subjects a few feet away or further.	The main application for the extension tube is for close-up or macro photography. Remove the extension tube for longer distances to the subject.
Does the tube fit other camera brands?	No, the tube is designed for Canon EOS cameras only.
When I place the extension tubes on my camera, the auto focus function does not work.	Make sure that you are using a lens that has auto focus feature. Also make sure that the gold contacts inside the extension tube are free of dust and oil.

SPECIFICATIONS

Tube diameter	Approximately 67 mm
Tube lengths	12 mm, 20 mm, and 36 mm

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)
www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.
Registered in some countries.
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2014 Best Buy. All rights reserved.
Made in China