

**INSTALLATION, OPERATION and MAINTENANCE
MANUAL for Cres Cor
RADIANT OVENS**



**1000-CH-SS
1000-CH-AL**



**1000-CH-SS-SPLIT
1000-CH-AL-SPLIT**

Models: 1000-CH SERIES

Cabinet model number: _____

Cabinet serial number: _____

Authorized Service Agency: _____


Ph: _____ Fax: _____

Keep this manual for future reference.

| | |
|---------------|----------------|
| Ovens | FL-2340 |
| Rev. 5 (7/08) | Page 2 of 14 |

TABLE OF CONTENTS

| SUBJECT | PAGE |
|--|-------------|
| INSTALLATION INSTRUCTIONS | 3, 4 |
| OPERATING INSTRUCTIONS | 5 |
| Illustration, Control Panel | 5 |
| MAINTENANCE INSTRUCTIONS | |
| How to Clean the Unit..... | 6 |
| Trouble Shooting Guide | 7 |
| Replacement Parts | 8 |
| Illustration; Ovens | 9 |
| Wiring Diagram for 1000-CH-SS or 1000-CH-AL..... | 10,11 |
| Wiring Diagram for 1000-CH-SPLIT | 12 |
| HOW TO REVERSE DOOR OPENING | 13 |
| SERVICE POLICY and AGENCY LIST | FL-1400 |

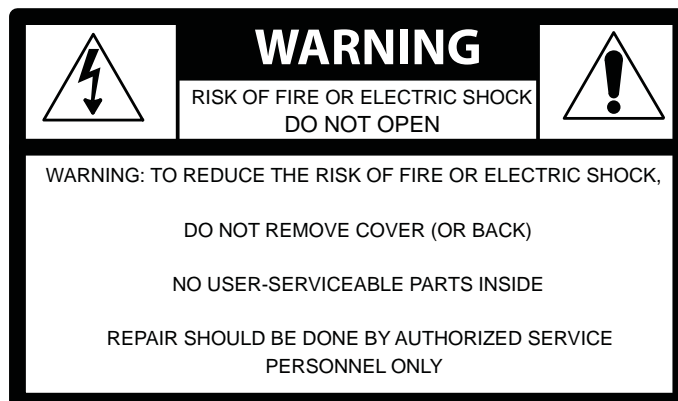

INSTALLATION INSTRUCTIONS

VENTING YOUR OVEN:

- The purpose of ventilating hoods is to direct and capture smoke, grease-laden vapors, heat, odors, or fumes.
- Low temperature equipment (maximum temperature 250°F/121°C) does not produce heat, odors, fumes, grease-laden vapors or smoke and is not required to be vented.
- Most jurisdictions consider our low-temperature ovens (maximum temperature is 350°F/177°C) as low-heat appliances not requiring vent hoods.
- Installation must conform with local codes. The authority having jurisdiction of enforcement of the codes will have the responsibility for making interpretations of the rules.

SPECIFICATIONS: All units are rated 3000 watts.

| CMP MODEL NOS. | ELECTRICAL SPECS (AC SERVICE) | | | ELEC. LOAD | | POWER SUPPLY REQUIREMENT | | | | |
|--|----------------------------------|--------|----------|------------|------------|--------------------------|--------|--------|------------|--------------------|
| | Volts | Ph | Hz. | Amps | Volts | Amps | Ph | Wire | Volts | NEMA |
| SINGLE OVENS | | | | | | | | | | |
| 1000CHSSSPLIT OR 1000CHALSPLIT | 208 240 | 1 1 | 60 60 | 14 13 | 208 240 | 20 20 | 1 1 | 2 2 | 208 240 | 6-20P 6-20P |
| 1000CHSSSPLIT3 OR 1000CHALSPLIT3 | 208 240 | 3 3 | 60 60 | 8 7 | 208 240 | 20 20 | 3 3 | 3 3 | 208 240 | L15-20P L15-20P |

SPECIFICATIONS: All units are rated 6000 watts. *For USA Only - Canadian is 6-50P


| CMP MODEL NOS. | ELECTRICAL SPECS (AC SERVICE) | | | ELEC. LOAD | | POWER SUPPLY REQUIREMENT | | | | |
|------------------------------|----------------------------------|--------|----------|------------|------------|--------------------------|--------|--------|------------|--------------------|
| | Volts | Ph | Hz. | Amps | Volts | Amps | Ph | Wire | Volts | NEMA |
| DOUBLE OVENS | | | | | | | | | | |
| 1000CHSS OR 1000CHAL | 208 240 | 1 1 | 60 60 | 29 25 | 208 240 | 30 30 | 1 1 | 2 2 | 208 240 | *6-30P *6-30P |
| 1000CHSS3 OR 1000CHAL3 | 208 240 | 3 3 | 60 60 | 16 14 | 208 240 | 20 20 | 3 3 | 3 3 | 208 240 | L15-20P L15-20P |

Model number "AL" is aluminum outer body with stainless steel doors and interior.

All models designed for AC Service. Model number may have the letters: M, Z, S or CAN.

IDENTIFYING YOUR CABINET:

Look for this label on the back of your cabinet. This information is needed when calling for questions or service.

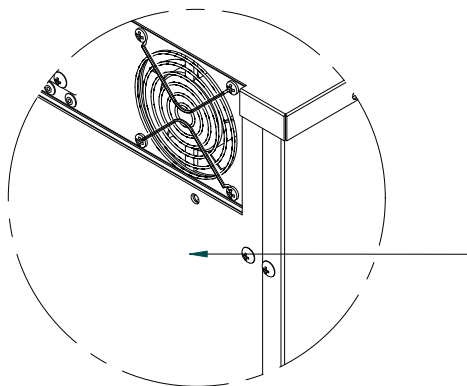

UPPER RIGHT CABINET CORNER



| | |
|---------------|----------------|
| Ovens | FL-2340 |
| Rev. 5 (7/08) | Page 4 of 14 |

INSTALLATION INSTRUCTIONS (continued)

HOW TO INSTALL CABINETS:

1. Remove all packing material from the inside and all vinyl from the outside of oven.
2. Place the oven in a well ventilated area on level floor.
Clearance requirements: 3" (76mm) at the back, 2" (51mm) at the top, 1" (25mm) at both sides.
3. Install the pan slide racks on the sidewalls, if necessary.
4. Slide drip pan(s) onto the bottom of the compartment(s).
5. Remove (3) screws at the bottom front of the oven, under the door (See Figure).
6. Screw the drip tray bracket to the oven in those holes and place the drip tray onto the bracket.


All models are rated at 208/240 Volts.

NOTE: OVENS NEED TO BE INSTALLED BY A QUALIFIED PERSON.


Check the voltage selector switch which is under an access cover on the back of the oven near the power cord.

- * Flip the switch "UP" for 208 Volts
- * Flip the switch "DOWN" for 240 Volts

MAKE SURE THE SWITCH POSITION MATCHES YOUR POWER SOURCE.

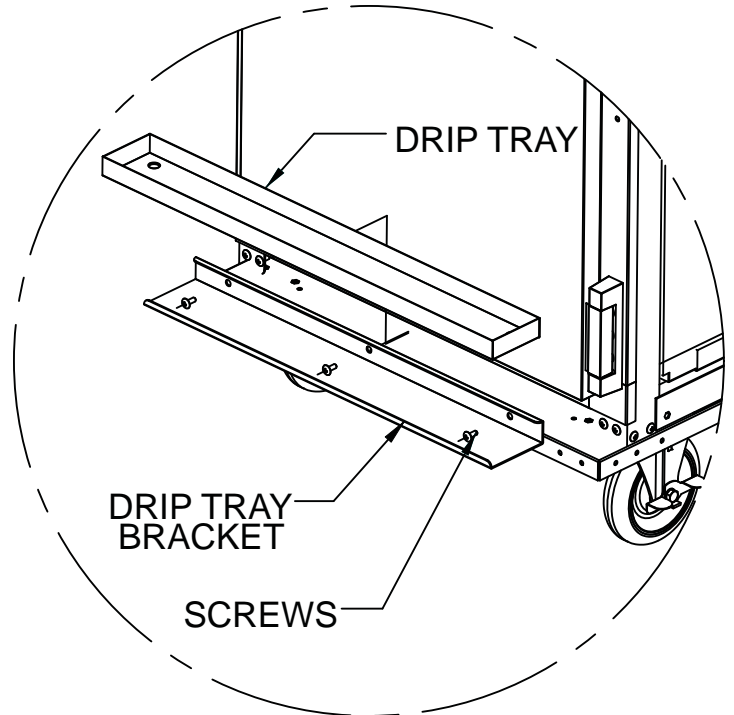

OPERATING INSTRUCTIONS

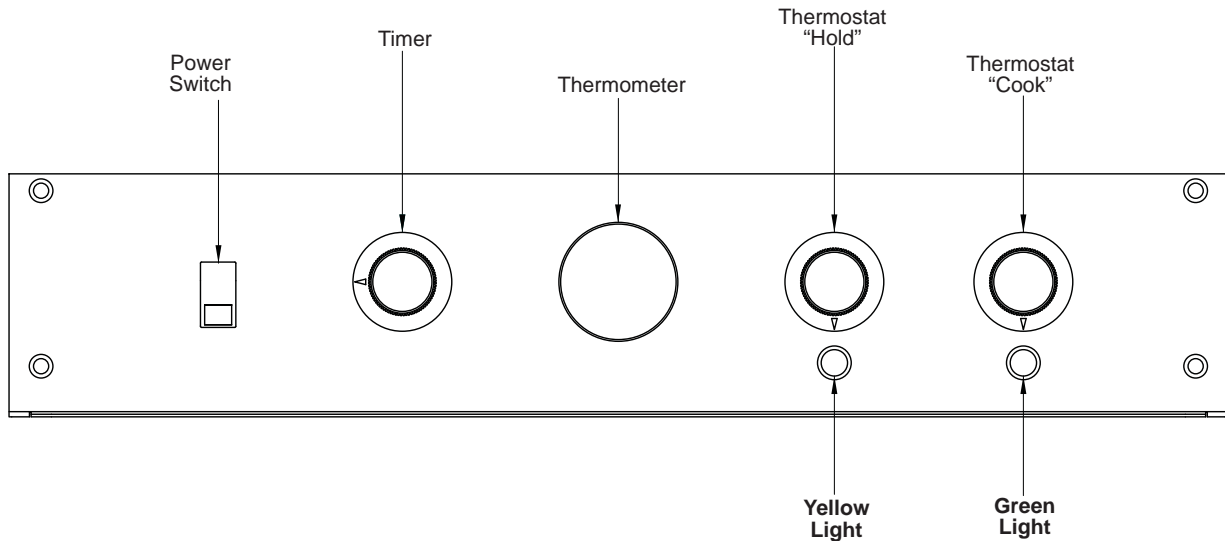

FOR FIRST-TIME OPERATION ONLY:

A new oven needs to “burn off” factory oils and glue before it’s first use. **Do NOT load food into oven until this has been done!**

1. Push switch to “ON”.
2. Set the **Cook** thermostat to 325°F/163°C.
3. Set the **Hold** thermostat to 150°F/66°C.
4. Set the timer to one (1) hour.
5. Allow oven to run automatically for one (1) hour of **Cook** cycle and 30 minutes of **Hold** cycle.
6. Turn oven off and let cool.
7. Wipe inside clean with detergent and hot water.

HOW TO START UNIT

(after first-time operation):

Push POWER switch “ON”.

NOTE: For **HOLD** or **COOK** mode, preheat unit to desired temperature for 30 minutes.

For Automatic Operation:

1. Set **Cook** thermostat to the cooking temperature you need.
2. Set **Hold** thermostat to the warming temperature you need. Proper food holding temperature is 140°F/60°C or higher.
3. Set **Timer** for the roasting time. The unit will automatically switch to the pre-set “hold” temperature after roasting time has expired.

For Holding Operation ONLY:

Cold food is **NOT** to be added when unit is operating in **HOLD** mode.

1. Set **HOLD** thermostat to the temperature you need.
2. Set Timer at zero.

TO SHUT DOWN UNIT:

Push SWITCH to “OFF”.

NOTE: Ventilating fans will continue to run until cabinet is cool. Do **NOT** disconnect the power supply to the cabinet while the ventilating fan is still operating.



WARNING

Air is VERY HOT when door is opened.

| | |
|---------------|----------------|
| Ovens | FL-2340 |
| Rev. 5 (7/08) | Page 6 of 14 |

HOW TO CLEAN THE UNIT:

WARNING

BEFORE cleaning the cabinet:

1. **Unplug cord from wall. Allow cabinet to cool.**
2. **Do NOT hose cabinet with water.**
3. **Do NOT get water on controls.**
4. **Do NOT use abrasives or harsh chemicals.**

- Wipe up spills as soon as possible.
- Clean regularly to avoid heavy dirt build-up.

Cleaning Hints:

1. Use the mildest cleaning procedure that will do the job.
2. Always rub in the direction of polish lines to avoid scratching the surface.
3. Use only a soft cloth, sponge, fibrous brushes, plastic or stainless steel pads for cleaning and scouring.
4. Rinse thoroughly with fresh water after every cleaning operation.
5. Always wipe dry to avoid water marks.

MODELS: 1000-CH-SS & 1000-CH-SS-SPLIT

| | SOIL | CLEANER | METHOD |
|--|--------------------------|---|--|
| STAINLESS STEEL CABINET Inside and Outside | Routine Cleaning | Soap or mild detergent* and water. | 1. Sponge on with cloth 2. Rinse |
| | Stubborn Spots, Stains | Mild abrasive made for Stainless Steel. | 1. Apply with damp sponge or cloth. 2. Rub lightly. |
| | Burnt on Foods or Grease | Chemical oven cleaner made for Stainless Steel. | Follow oven cleaner manufacturer's directions. |
| | Hard Water Spots & Scale | Vinegar | 1. Swab or wipe with cloth. 2. Rinse and dry. |

MODEL: 1000-CH-AL & 1000-CH-AL-SPLIT (Aluminum cabinet outside only with stainless steel doors and pan slides)

| | SOIL | CLEANER | METHOD |
|--|---------------------------|--|--|
| ALUMINUM CABINET Outer body ONLY | Dirt | Mild detergent* and hot water, or mild abrasive cleaner. | 1. Use soft, damp cloth. 2. Rinse with hot water. 3. Wipe dry. |
| | | Steam (no strong alkaline additive). | 1. Rinse after steam cleaning. 2. Wipe dry. |
| | Fingerprints, Grease, Oil | Detergent* and hot water. | 1. Wipe with soft, damp cloth. 2. Rinse with hot water. 3. Wipe dry. |
| | | Chemical oven cleaner made for aluminum. | Follow oven cleaner manufacturer's directions |
| | | Mild abrasive cleaner. Oily or waxy cleaner. | Apply with soft, clean cloth. |
| Water Spots | Mild abrasive cleaner. | Wipe with damp cloth. | |

**Mild detergents include soaps and non-abrasive cleaners.*

MAINTENANCE INSTRUCTIONS TROUBLE-SHOOTING GUIDE

WARNING

IF UNIT GETS TOO HOT OR WON'T SHUT OFF, DISCONNECT POWER AT BRANCH PANEL. DO NOT UNPLUG CORD!

If hot unit is *NOT* working, first check the following causes:

- | | |
|--|--|
| 1. Cord is unplugged from wall outlet. | 3. Switch(es) are turned off. |
| 2. Circuit breaker/fuse to wall outlet is blown. | 4. Thermostat(s) are turned off, or are set too low. |

| PROBLEM | POSSIBLE CAUSE | SOLUTION |
|---|--|---|
| Oven does not heat, or doesn't heat properly | 1. Thermostat(s) defective 2. Heater contactor 3. On/Off Switch *4. Fuses | 1. Replace 2. Replace 3. Replace 4. Replace |
| Timer runs down, but oven does not go into hold mode. | Timer defective | Replace |
| Heaters will not shut off | 1. Thermostat defective 2. Contactor defective | 1. Replace 2. Replace |
| Vent fans do not shut off | 1. Vent fan switch defective 2. Control compartment is still hot. | 1. Replace 2. Wait until it cools Check "Heaters will not shut off" |
| Vent fans do not operate (See Note) | 1. Vent fan switch defective 2. Vent fan defective *3. Fuses | 1. Replace 2. Replace 3. Replace |


**Fuses are in 6000 Watt units only*

NOTE: Vent fans will not operate until the control compartment requires ventilation to limit temperatures. Replacement of electrical components must be done by a qualified electrician. Refer to our *Service Agency list, FL-1400* (found in the back of this manual), of authorized service centers.

| | |
|---------------|----------------|
| Ovens | FL-2340 |
| Rev. 5 (7/08) | Page 8 of 14 |

REPLACEMENT PARTS

Include all information on nameplate when ordering parts

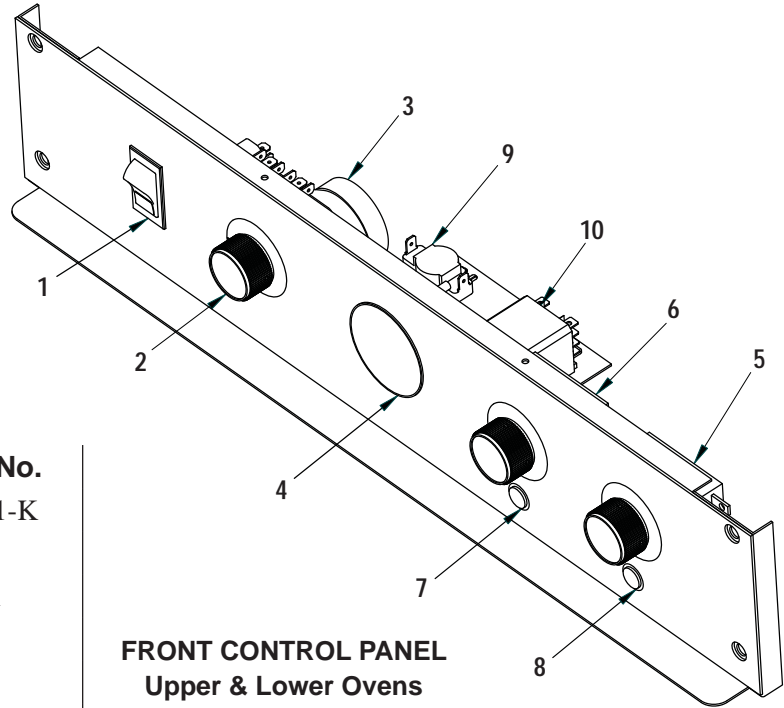

FRONT CONTROL PANEL
Upper & Lower Ovens

ITEM DESCRIPTION

1. Switch (On/Off)
2. Knob, Thermostat & Timer
3. Timer
4. Thermometer
5. Thermostat, Cook
6. Thermostat, Hold
7. Pilot Light, Yellow
8. Pilot Light, Green
9. Switch, Fan
10. Relay
11. Contactor
12. Terminal Block (Input)
13. Terminal Block
14. Toggle Switch
15. Vent Fan
16. Fan Guard
17. Heater Kit, 208V, 195 Watt
Heater Kit, 240V, 1000 Watt
18. Door Latch Kit
19. Latch Strike
20. Door Assembly
21. Door Gasket
22. Door Hinge

CMP Part No.

- 0808-113-01-K
- 0595-061
- 0849-009-K
- 5238-031
- 0848-082
- 0848-083
- 0766-096
- 0766-097
- 0848-034
- 0857-102
- 0857-131
- 0852-109
- 0852-091
- 0808-020
- 0769-174
- 0769-167
- 0811-291-K
0811-290-K
- 1006-122-01-K
- 1006-122-02-K
- 1221-563-K
- 0861-267
- 0519-074-K

ITEM DESCRIPTION


23. Casters
24. Casters w/brake
25. Pan Slides
26. Drip Pan
27. Fuses, 3 Amp. (for units mfr'd before 7/08)
Fuse Holder (for units mfr'd before 7/08)
- Fuses, 3 Amp. (for units mfr'd after 7/08)
Fuse Holder (for units mfr'd after 7/08)
28. Hi-Limit
29. Drip Tray
Wire Shelf
- Power Cord (3000 Watts, 1-PH)
- Power Cord (6000 Watts, 1-PH)
- Power Cord (6000 Watts, 3-PH)

CMP Part No.

- 0569-306-K
- 0569-306-BK
- 0692-200
- 1017-099
- 0807-058
- 0807-048
- 0848-033
- 1017-100
- 1170-005
- 0810-173-01-K
- 0810-163-01-K
- 0810-164-01-K

REPLACEMENT PARTS

Include all information on nameplate when ordering parts

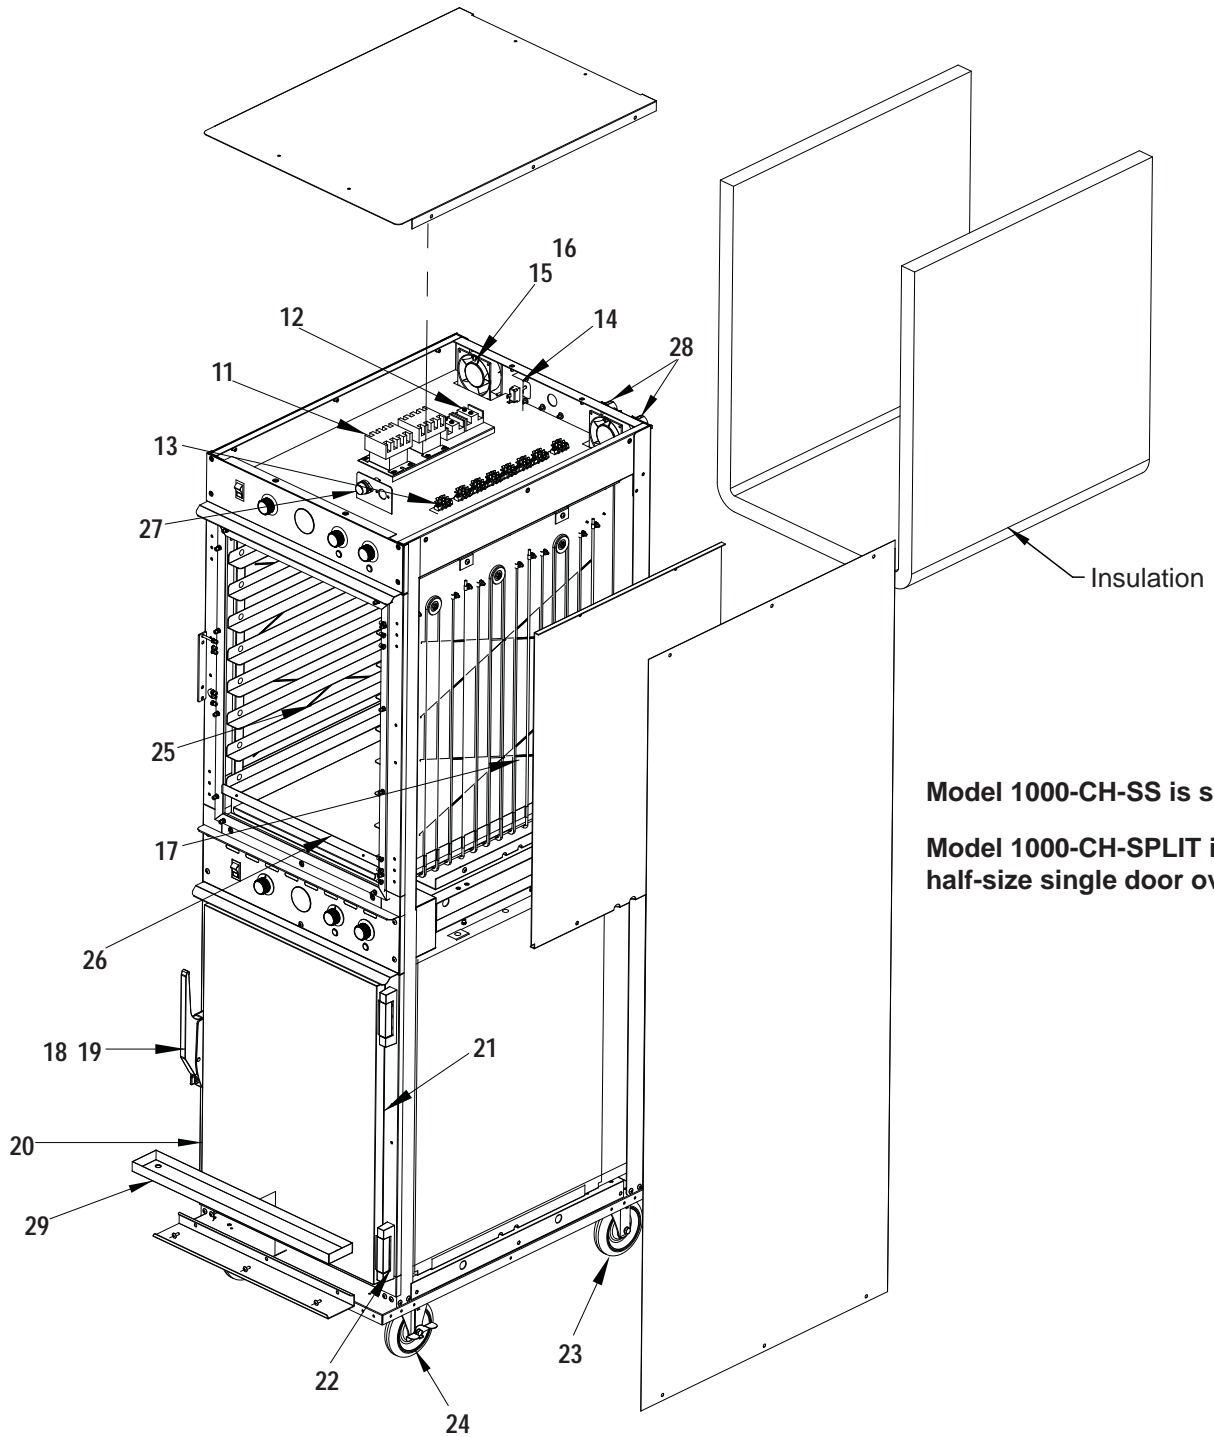


Model 1000-CH-SS is shown.

**Model 1000-CH-SPLIT is
half-size single door oven.**

| | |
|---------------|----------------|
| Ovens | FL-2340 |
| Rev. 5 (7/08) | Page 10 of 14 |




5925 Heisley Road • Mentor, OH 44060-1833

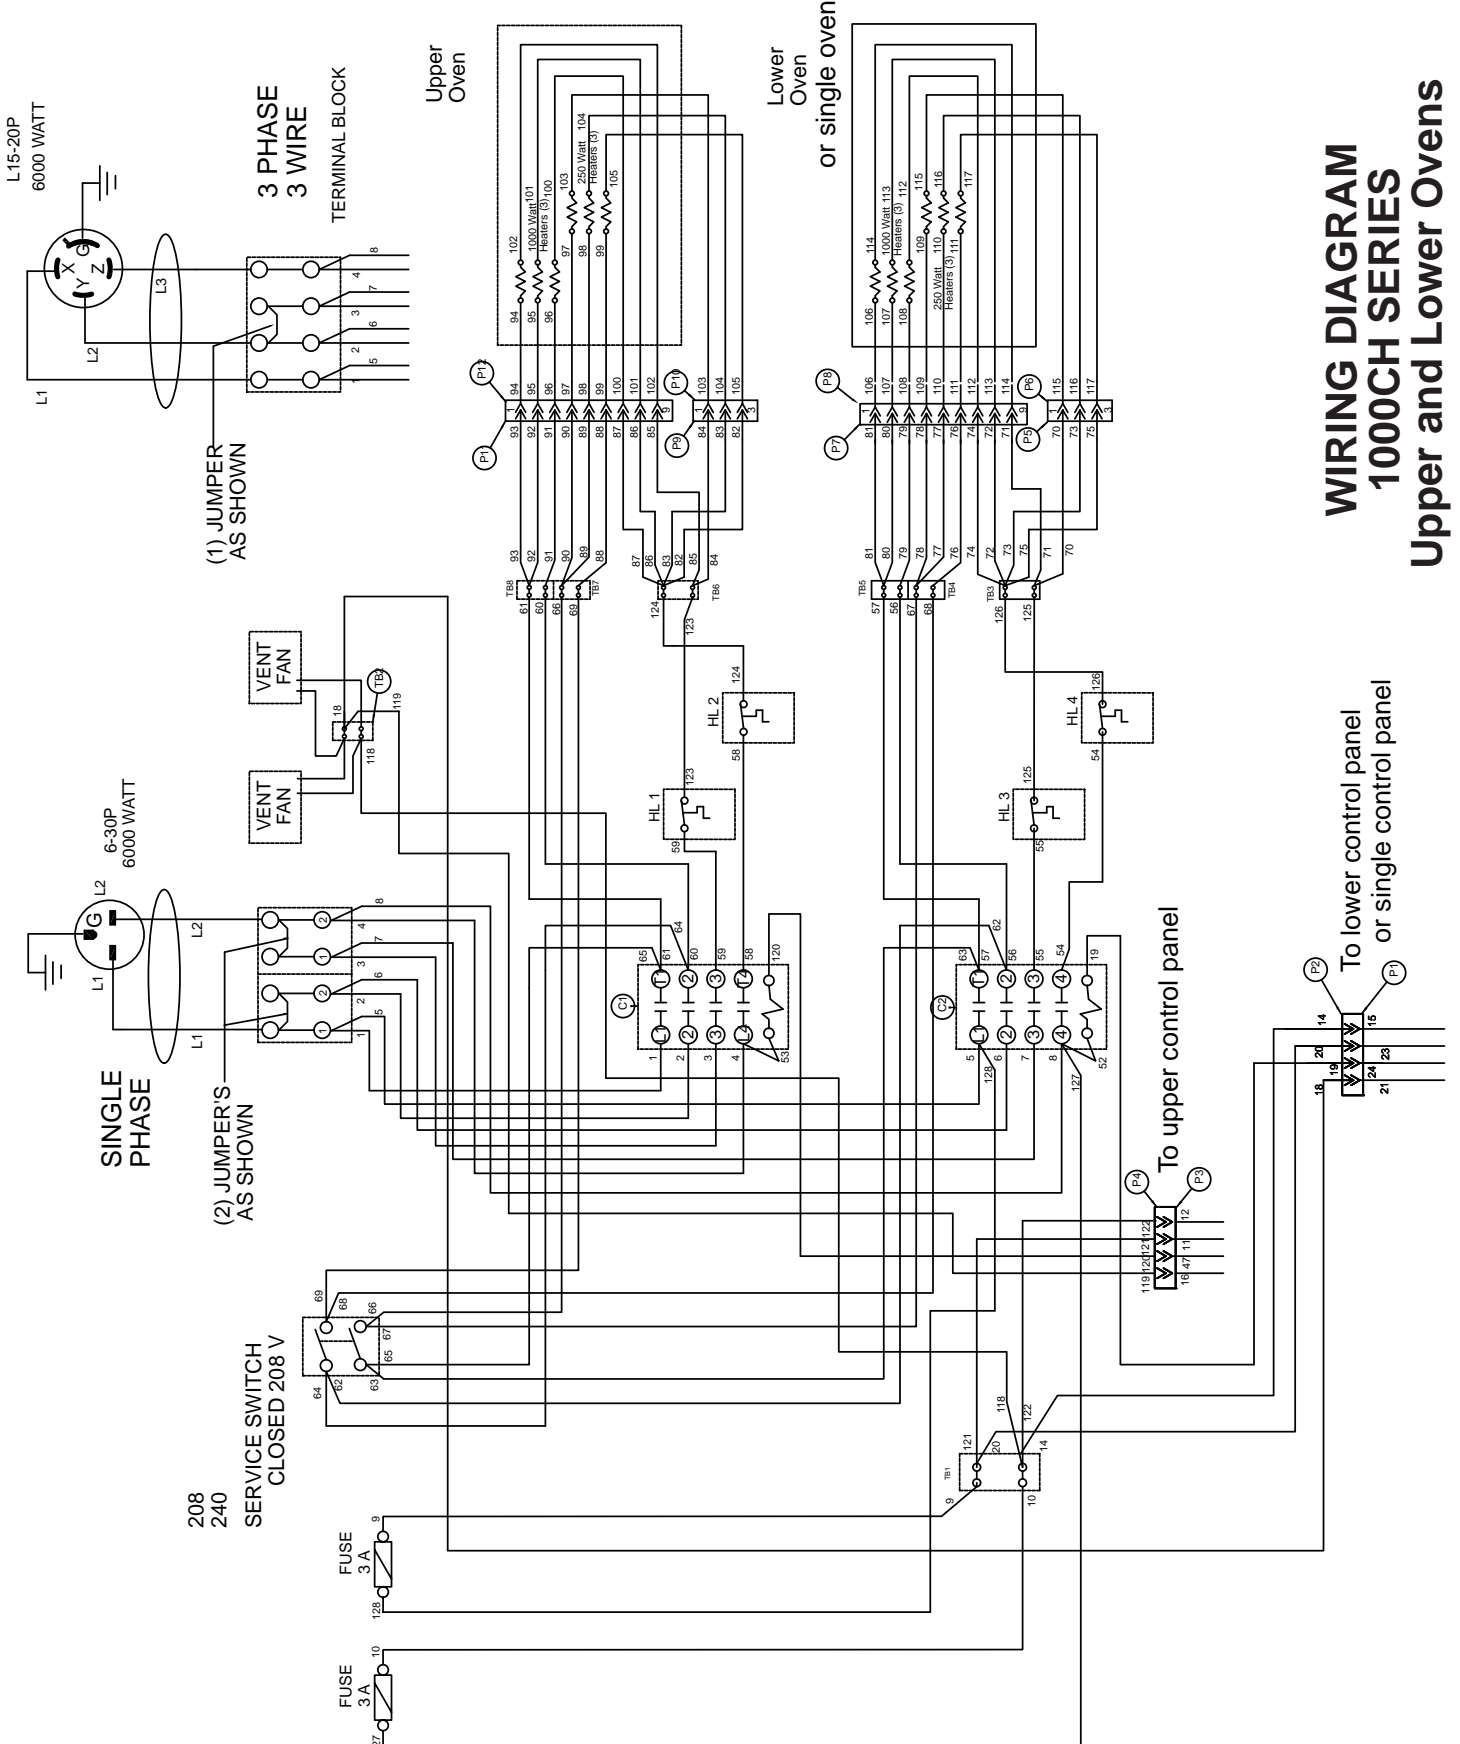


**WIRING DIAGRAM
1000CH SERIES
Upper and Lower Ovens**

WIRING DIAGRAM FOR 1000CH SERIES, Control Panel

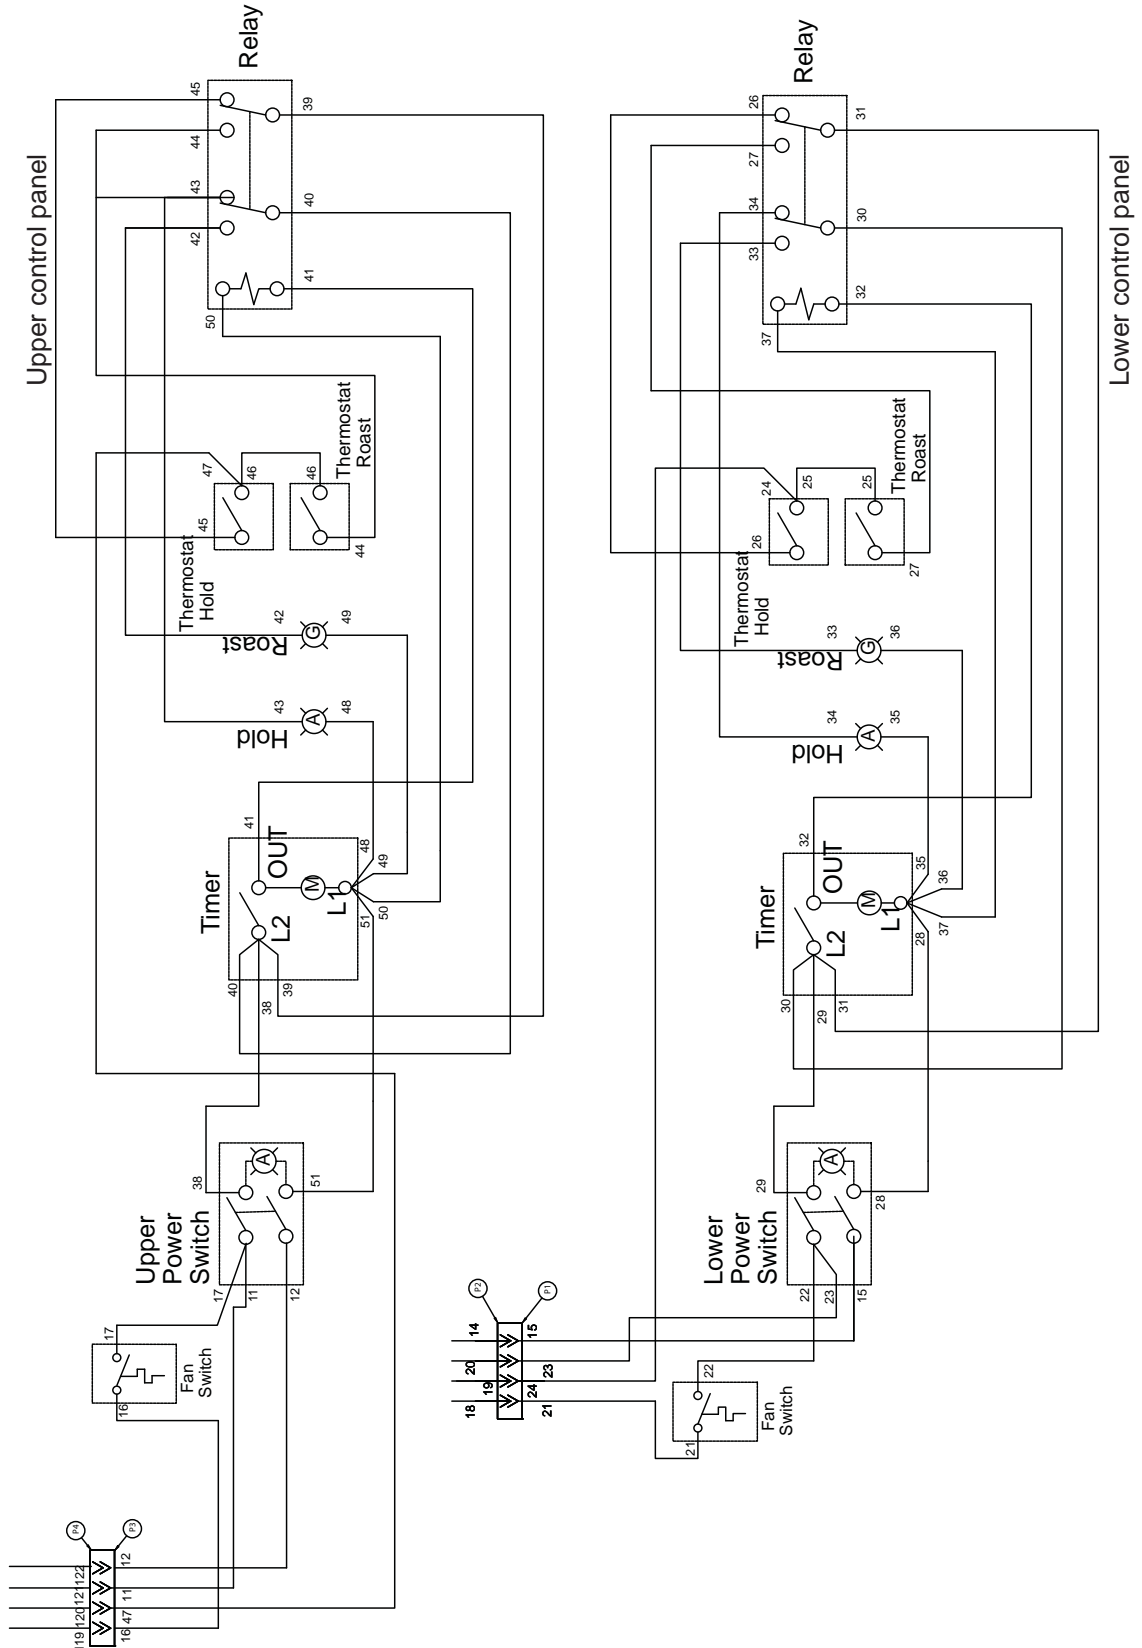

| | |
|---------------|----------------|
| Ovens | FL-2340 |
| Rev. 5 (7/08) | Page 12 of 14 |

WIRING DIAGRAM FOR 1000CH-SPLIT SERIES

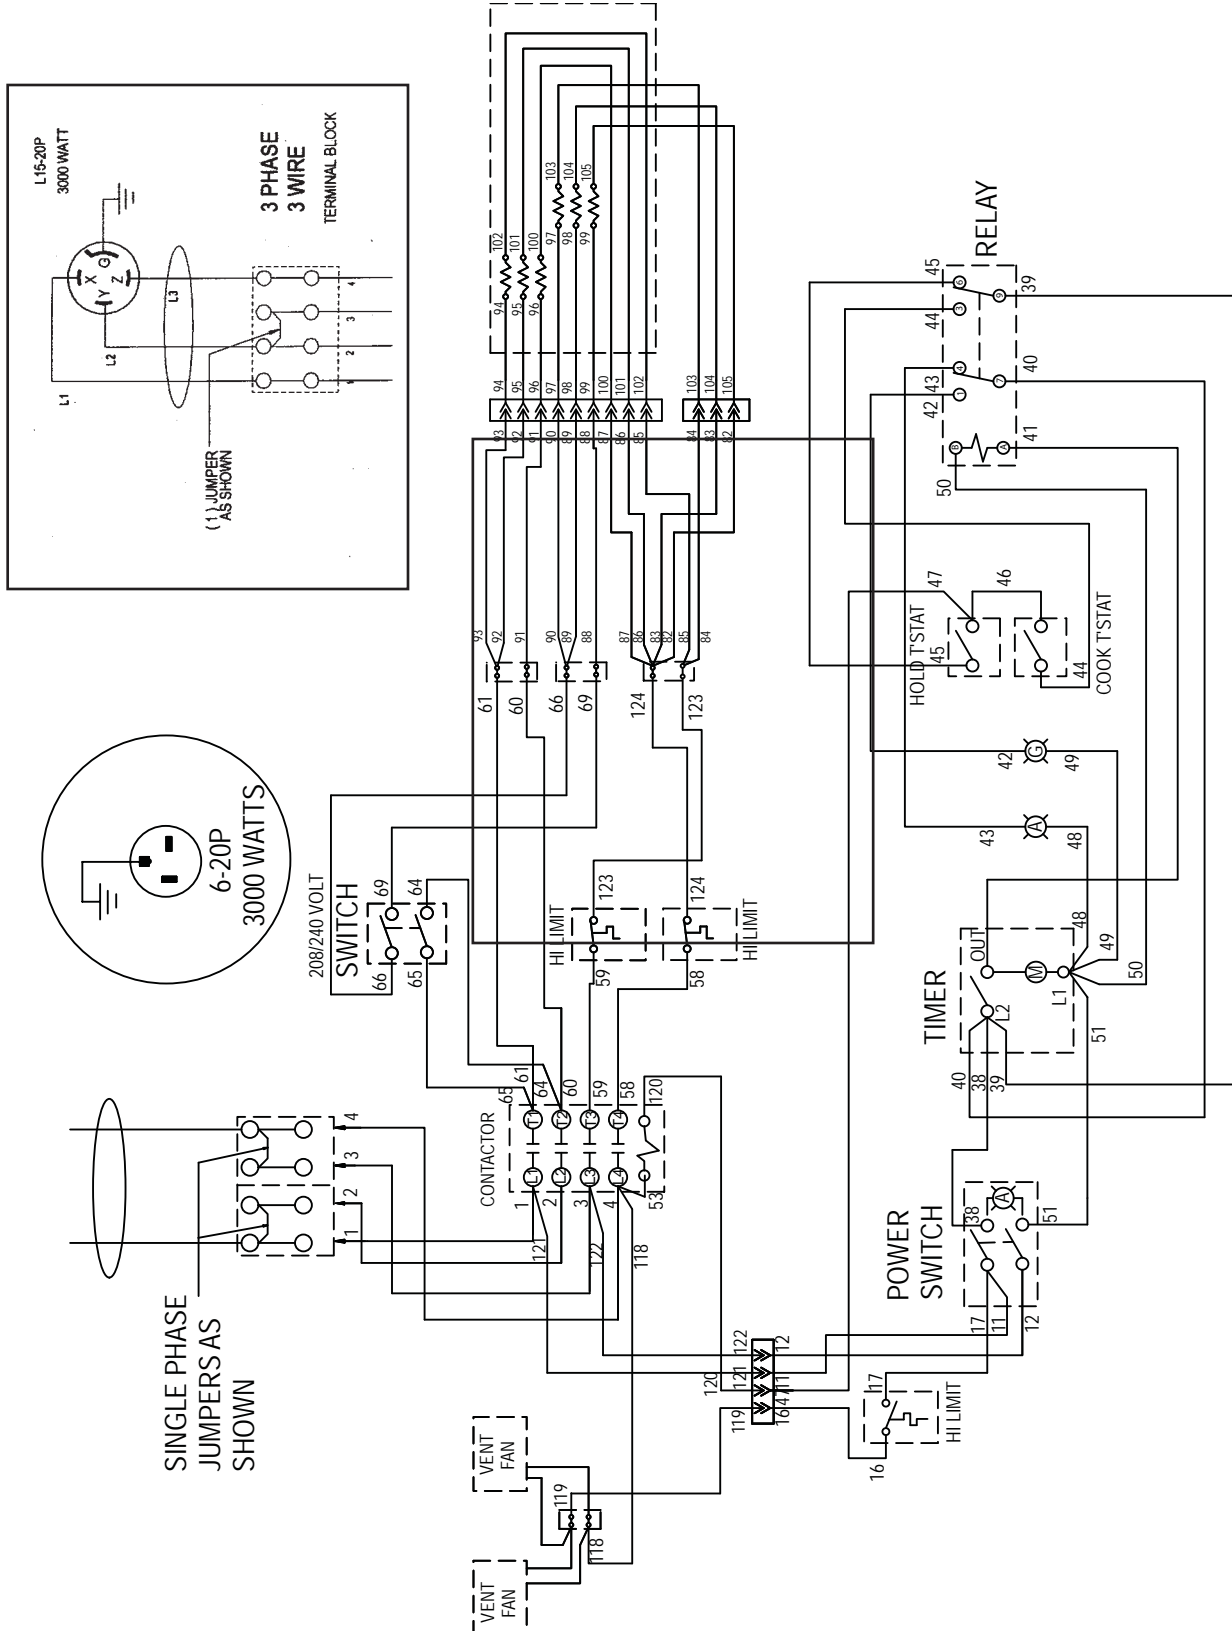


HOW TO REVERSE DOOR OPENING

Models: 1000-CH Radiant Ovens

HOW TO REVERSE THE DOOR

1. Pop off hinge covers with screwdriver.
2. Remove the screws from the hinges to the cabinet; remove the door and unscrew the latch strike from the oven. Keep all screws.
3. Rotate the door 180° so that the hinges are now on the left side of the door.
4. Re-mount the hinges in the same hole pattern on the opposite sides of the door opening.
5. Remove the latch and rotate it 180°; re-mount it to the right side of the door.
6. Adjust the hinges and latch for proper door seal.
7. Plug all the extra holes with screws and snap on the hinge covers.

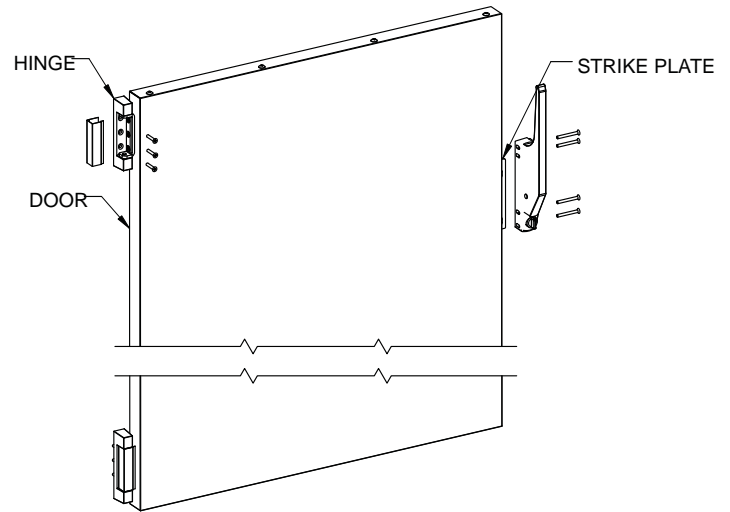

NOTES:
