





# Di620

## Operator's Manual

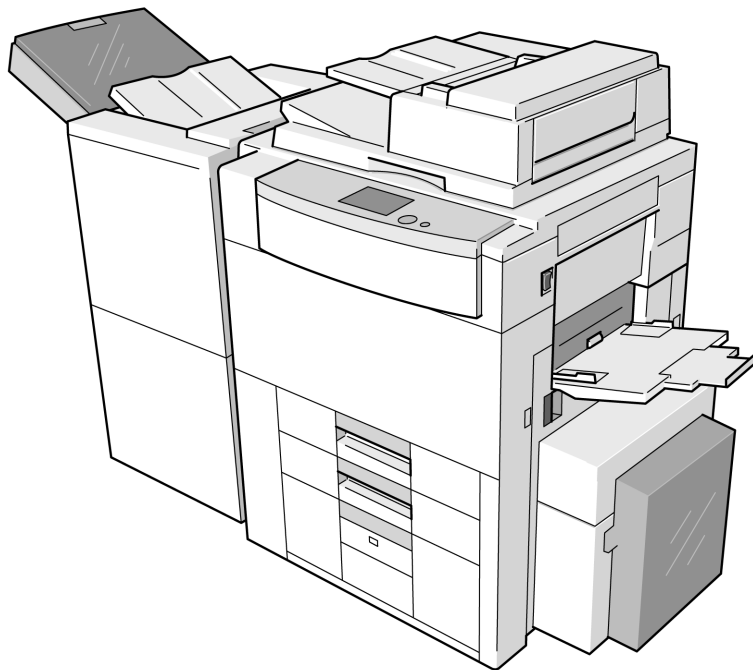



As an ENERGY STAR® Partner, Minolta Co., Ltd. has determined that this copier meets the ENERGY STAR® Guidelines for energy efficiency.

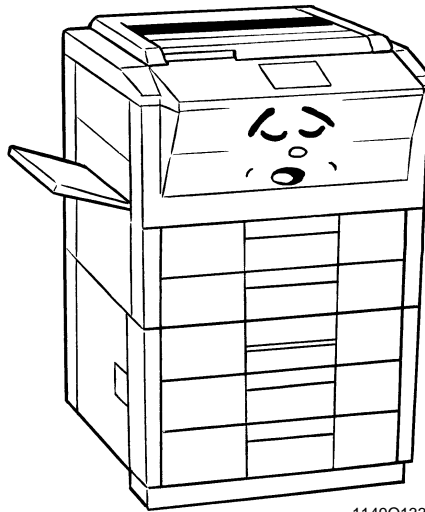

1149O133AA

## What is an Energy Star Copier?

Energy Star Copiers have a feature that allows them to automatically turn off or “go to sleep” after a period of inactivity, ensuring night and weekend shut off. This auto-feature can reduce a copier’s annual electricity costs by over 60 percent. In addition, high speed copiers will be set to automatically make double-sided copies. An organization’s paper costs can be reduced by \$60 a month and the volume of paper sent into the waste stream will decline. It takes 10 times more energy to produce a piece of paper than it does to make a single copy on a copier. Therefore, using less paper also means decreased national energy consumption.

## Recycled Paper (USA market only)

Your Minolta Copier has been designed to use the following Recycled Paper:

Minolta Recycled Bond  
20% Post Consumer Waste

Item No. 8925 701





## Using the Copier Properly

---

To ensure the optimum performance of the copier, follow the precautions listed below.

- Never place a heavy object on the copier.
- Never subject the copier to shocks.
- Never open any doors or turn the copier off while the copier is making copies.
- Never bring any magnetized object near the copier.
- Never use flammable sprays, liquids or gases near the copier.
- Never modify the copier, as a fire or electrical shock could result.
- Never remove any panel or cover which is secured. The copier contains high voltage components which can cause electrical shock.
- Never tamper with the laser mechanism in laser-equipped models, as blindness or other injury may result.
- Never drop paper clips, staples or other small pieces of metal through the vents or other openings in the copier, as a fire or electrical shock can result.
- Never place containers of liquid on the copier. If liquids get inside the copier, they can cause fire or electrical shock. If a piece of metal or any liquid gets inside the copier, immediately turn the copier off, unplug the power cord and call your technical representative. A fire or electrical shock can result if the copier remains plugged in or is operated after metal or liquid gets inside.
- Never leave the copier running if it becomes unusually hot, or if smoke or an unusual odor or noise is detected. Should any of these conditions occur, immediately turn the copier off, unplug the power cord and call your technical representative. A fire or electrical shock can result if the copier remains plugged in under any of these conditions.
- Always insert the power plug all the way into the outlet.
- Always make sure that the outlet is visible, clear of the copier or copier cabinet.
- Always provide good ventilation when making a large number of continuous copies.
- Never pull on the power cord, and always hold the plug when unplugging the power cord. A damaged cord could result in a fire or cause an electrical shock.
- Never unplug the power cord with a wet hand, as it could cause an electrical shock.
- Always unplug the power cord before moving the copier. Moving the copier with the power cord plugged in can damage the cord resulting in a fire or causing an electrical shock.
- Always unplug the power cord when the copier is not going to be used for a long time.
- Never place a heavy object on the power cord, or pull or bend it, as a fire or electrical shock can result.
- Always ensure that the copier does not sit on or roll onto the power cord or communications cable of other electrical equipment, as malfunctioning equipment or a fire could result.
- Always ensure that the power cord or communications cable of other electrical equipment does not become wedged into the copier mechanism, as malfunctioning equipment or a fire could result.
- Always use the correct power voltage, as improper voltage can cause a fire or electrical shock.

## Using the Copier Properly

---

- Never use a multiple outlet adapter, as a fire or electrical shock can result.
- Should the power cord become damaged, immediately turn the copier off, unplug the power cord and call your technical representative. A damaged cord can result in a fire or cause an electric shock.
- If an extension cord is needed, use one with a greater rated capacity than the maximum power requirements of the copier. The use of an extension cord that falls short of supporting the maximum power requirements can result in overheating or a fire.
- Always unplug the copier whenever anything unusual is observed during operation. Make sure that the outlet is nearby and clear of the copier and furniture.

### =Locate the Copier in a Well Ventilated Room=

A negligible amount of ozone is generated during normal operation of this copier. An unpleasant odor may, however, be created in poorly ventilated rooms during extensive copier operations. For a comfortable, healthy and safe operating environment, it is recommended that the room be well ventilated.

### =Placer le copieur dans une pièce largement ventilée=

Une quantité d'ozone négligeable est dégagée pendant le fonctionnement du copieur quand celui-ci est utilisé normalement. Cependant, une odeur désagréable peut être ressentie dans les pièces dont l'aération est insuffisante et lorsqu'une utilisation prolongée du copieur est effectuée. Pour avoir la certitude de travailler dans un environnement réunissant des conditions de confort, santé et de sécurité, il est préférable de bien aérer la pièce où se trouve le copieur.

Thank you for choosing Minolta quality. For over 30 years Minolta has been a leader on the forefront of office equipment technology and service. Our desire has always been to bring you highly reliable products. We pledge to continue to provide you, our customer, with our state of the art equipment, as well as full customer service for all our products. We look forward to a long healthy relationship with you and our company. If you have any questions or comments about Minolta, our product or service, please let us know. Our fax number is 800-237-8087 (for the U.S.A. and Canada). Thank you again.

This operator's manual explains how to operate the copier and replenish its supplies. It also gives some troubleshooting tips as well as general precautions to be observed when operating the copier.

To ensure the best performance and effective use of your copier, read this manual carefully until you familiarize yourself thoroughly with the copier's operation and features. After you have read through the manual, keep it ready for reference.

Please use this manual as a quick and handy reference tool for immediately clarifying any questions which may arise.

MC-F01

**WARNING**

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

The design and production of this unit conforms to FCC Regulations, and any changes or modifications must be registered with the FCC and are subject to FCC control. Any changes made by the purchaser or user without first contacting the manufacturer will be subject to penalty under FCC regulations.

FCC-F01

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

IC-F03

# Contents

---

Terms and Symbols for the Type of Originals and Copy Paper .....	v
Feeding Direction (copy paper path) .....	v
Safety Precautions .....	vi
Laser Safety Label .....	vi
Safety Information .....	vii

## Chapter 1

### Safety Notes

1. Installing the Copier	
Installation Site .....	1-2
Power Source .....	1-2
Space Requirements .....	1-2
2. Precautions for Use	
Operating Environment .....	1-3
Using the Copier Properly .....	1-3
Moving the Copier .....	1-3
Care of Copier Supplies .....	1-3
Note on making multiple copies .....	1-4
Legal Restrictions on Copying .....	1-4

## Chapter 2

### Getting to Know Your Copier

1. Typical Copies You Can Make with Your Copier	
Typical copies you can make with your copier .....	2-2
2. System Overview	
System Overview .....	2-6
3. Copier Parts and Accessories	
Outside the copier .....	2-8
Copier Accessories .....	2-10
Precautions When Using a Finisher .....	2-11
Inside the Copier .....	2-13
4. Control Panel Keys and Indicators	
Control panel keys and indicators .....	2-14
5. Using the Touch Panel	
What is the Touch Panel? .....	2-16
How the Screen is Organized .....	2-16
Operating the Touch Panel .....	2-17
6. Turning ON and OFF and Initial Mode	
Turning ON and OFF .....	2-18
When the Copier is Turned ON .....	2-18
Initial Mode .....	2-18
7. Auxiliary Functions	
Auxiliary functions .....	2-19
Entering the Access Number .....	2-20

## Chapter 3

### Making Copies

1. Basic Copying Overview	
Basic Copying Overview .....	3-2
2. Placing the Original	
Using the Electronic Document Handler .....	3-4
Not Using the Document Handler .....	3-6
3. Selecting the Paper	

Copy Paper Size .....	3-9
Manual Bypass Copying .....	3-11
4. Selecting the Zoom	
Zoom Ratio .....	3-14
5. Selecting the Finishing	
Finishing Functions .....	3-20
Selecting the Finishing Function .....	3-22
Loading the Originals .....	3-30
Auto Dual Function .....	3-32
Note on Stapling .....	3-33
6. Selecting the Original ► Copy Type	
Original ► Copy Types .....	3-34
Selecting the Original ► Copy Type .....	3-36
Some Precautions for Making Copies .....	3-41
7. Selecting the Density	
Image Density .....	3-42
8. Auxiliary Functions	
Cover .....	3-44
Page Insertion .....	3-46
OHP Interleaving .....	3-50
File Margin .....	3-54
Edge/Frame Erase .....	3-56
Image Repeat .....	3-58
Number Stamping .....	3-60
Image Stamping .....	3-64
9. Selecting Mixed Orig. Detection and Other Functions	
Mixed Orig. Detection and Other Functions .....	3-66
10. Selecting the Job Functions	
Memory Recall .....	3-69
Reserve .....	3-70
Job List .....	3-71

## Chapter 4

### Using the Utility Mode

1. Job Memory Input and Job Recall	
Job Memory Input .....	4-2
Recalling a Job from Memory .....	4-5
2. Zoom Memory Input	
Storing a Zoom Ratio .....	4-6
3. Image Memory Input	
Image Memory Input .....	4-8
4. Meter Count and Toner Replenisher	
Meter Count .....	4-13
Toner Replenisher .....	4-13
5. User's Choice	
User's Choice Functions .....	4-14
Making the User's Choice Settings .....	4-21
Copy Track Function .....	4-22




<b>Chapter 5</b>	<b>When a Message Appears</b>
	1. When the Message “The current Paper Drawer is empty.” Appears
	Adding paper ..... 5-2
	2. When the Message “Replenish Toner.” Appears
	Replacing the Toner Bottle ..... 5-6
	3. When the Message “The Staple Cartridge is empty.” Appears
	Replacing the Staple Cartridge ..... 5-8
	4. When the Message “A paper misfeed has been detected.” Appears
	Misfeed Location Displays ..... 5-12
	Misfeed Clearing Procedures ..... 5-14
	5. When a Staple Misfeed Occurs
	Clearing the Staple Misfeed ..... 5-34
	6. What Does Each Message Mean?
	What does each message mean? ..... 5-36
<b>Chapter 6</b>	<b>Troubleshooting</b>
	1. When This Type of Copy is Produced
	When this type of copy is produced ..... 6-2
	2. The Copier is not Functioning as Designed
	The copier is not functioning as designed ..... 6-4
<b>Chapter 7</b>	<b>Miscellaneous</b>
	1. Specifications
	Specifications ..... 7-2
	2. Care of the Copier
	Cleaning ..... 7-8
	3. Function Combination Matrix
	Function combination matrix ..... 7-10
	Conditions for Combined Functions ..... 7-12
	4. Description of Paper Size and Zoom Ratio Table
	Description of paper size and zoom ratio table ..... 7-13
<b>Index</b>	

## Terms and Symbols for the Type of Originals and Copy Paper

A few special terms and symbols are used in this manual to designate types of originals and copy paper. This page explains about these terms and symbols.


### Feeding Direction (copy paper path)

In this copier system, copy paper is taken up from the right-hand side of the copier and fed through the copier toward the left-hand side, face up onto the Copy Tray. In the figure below, the direction in which the copy paper is fed, as indicated by the arrow, is called the “feeding direction.”

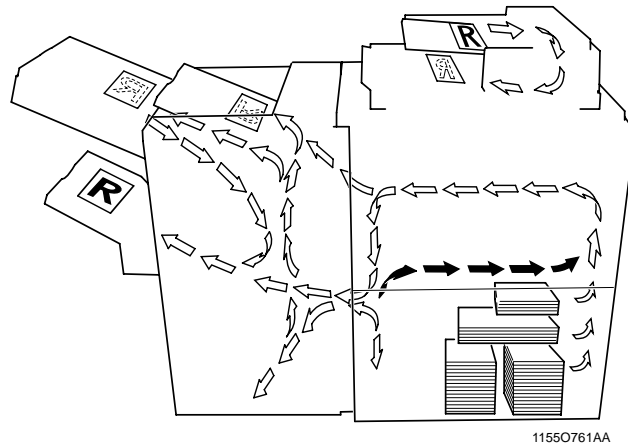

11550761AA

### “Width” and “Length”

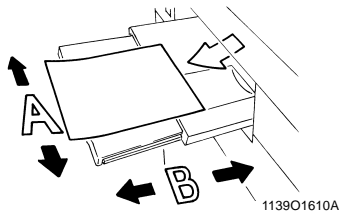


1139O1610A


When we talk about the size of the original or copy, we call side A “width” and side B “length.”


A: Width  
B: Length


### Terms and Symbols Used

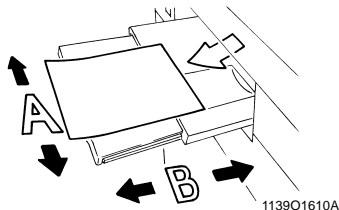


1139O1610A


<Lengthwise  >

When the original or copy has a “length” longer than its “width,” we call it “lengthwise” and use symbol “L” or “.”

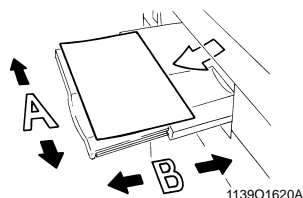

1139O1620A


<Crosswise  >

When the original or copy has a “length” shorter than its “width,” we call it “crosswise” and use symbol “C” or “.”

# Safety Precautions

## Laser Safety Label

A laser safety label is attached to the outside of the copy machine as shown below.

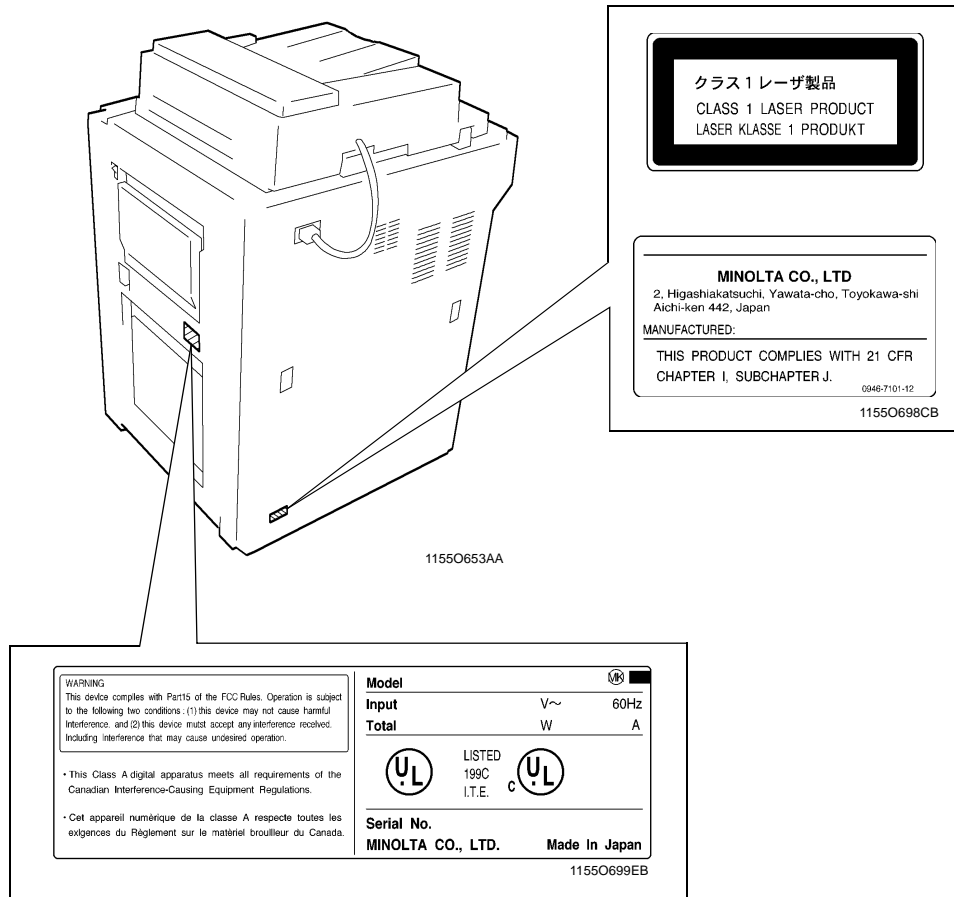

The Manufacturer's Name Plate is affixed at the position illustrated above.  
Please write down the Model Name and Serial No. of your copier here.

Model:
Serial No.

## Safety Information

This copy machine is a digital copy machine which operates by means of a laser. There is no possibility of danger from the laser, provided the copy machine is operated according to the instructions in this manual.

Since radiation emitted by the laser is completely confined within protective housing, the laser beam cannot escape from the machine during any phase of user operation.

This copy machine is certified as a Class 1 laser product. This means the copy machine does not produce hazardous laser radiation.

**LUOKAN 1 LASERLAITE  
KLASS 1 LASER APPARAT**

**CAUTION: The use of controls, adjustments or performance of procedures other than those specified in this manual may result in hazardous radiation exposure. Because of this, we strongly recommend that you operate your copy machine only as described in this documentation.**

### For United States Users

#### Laser Safety

This copy machine is certified as a Class 1 Laser product under the U.S. Department of Health and Human Services (DHHS) Radiation Performance Standard according to the Radiation Control for Health and Safety Act of 1968. This means that the copy machine does not produce hazardous laser radiation.

#### CDRH Regulations

The Center for Devices and Radiological Health (CDRH) of the U.S. Food and Drug Administration implemented regulations for laser products on August 2, 1976. Compliance is mandatory for products marketed in the United States. The label shown below indicates compliance with the CDRH regulations and must be attached to laser products marketed in the United States.

**WARNING:** Use of controls, adjustments or performance of procedures other than those specified in this manual may result in hazardous radiation exposure.

#### Internal Laser Radiation

Maximum Radiation Power: 15mW × 2 diodes  
Wave Length: 780nm

## Safety Precautions

---

### For European Users

**WARNING:** Use of controls, adjustments or performance of procedures other than those specified in this manual may result in hazardous radiation exposure.

This is a semiconductor laser. The maximum power of the laser diode is 15mW and the wavelength is 780nm. (Two provided.)

### For Denmark Users

**ADVARSEL**

Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion.  
Undgå udsættelse for stråling.

Klasse 1 laser produkt der opfylder IEC825 sikkerheds kravene.

### For Finland, Sweden Users

**VAROITUS**

Laitteen käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyttäjän turvallisuusluokan 1 ylittävälle näkymättömälle lasersäteilylle.

**VARNING**

Om apparaten används på annat sätt än i denna bruksanvisning specificerats, kan användaren utsättas för osynlig laserstråling, som överskrider gränsen för laserklass 1.

### For Norway Users

**ADVERSEL**

Dersom apparatet brukes på annen måte enn spesifisert i denne bruksanvisning, kan brukeren utsettes for usynlig laserstråling som overskrider grensen for laser klasse 1.

Dette en halvleder laser. Maksimal effekt till laserdiode er 15mW og bølgelengde er 780nm.

# Chapter 1

---

## Safety Notes

# 1. Installing the Copier

## Installation Site

To ensure utmost safety and prevent possible malfunctions of the copier, install it in a location which meets the following requirements.

### Safety Notes

- ◆ A place away from a curtain or the like that may catch fire and burn easily.
- ◆ An area where there is no possibility of being splashed with water or other types of liquid.
- ◆ An area free from direct sunlight.
- ◆ A place out of the direct air stream of an air conditioner, heater, or ventilator.
- ◆ A well-ventilated place.
- ◆ A dry place.
- ◆ A dust-free location.
- ◆ An area not subject to undue vibration.
- ◆ A stable and level location.
- ◆ A place where ammonia or other organic gas is not generated.
- ◆ A place which does not put the operator in the direct stream of exhaust from the copier.
- ◆ A place which is not near any kind of heating device.


## Power Source

The power source voltage requirements are as follows:

- ◆ Use a power source with little voltage fluctuation.
  - Voltage Fluctuation : Within  $\pm 10\%$
  - Frequency Fluctuation : Within  $\pm 0.3\%$

## Space Requirements

To ensure easy copier operation, supply replacements, and service maintenance, adhere to the recommended space requirements detailed below. Allow a clearance of 6" or more at the back of the copier as there is a ventilation duct.

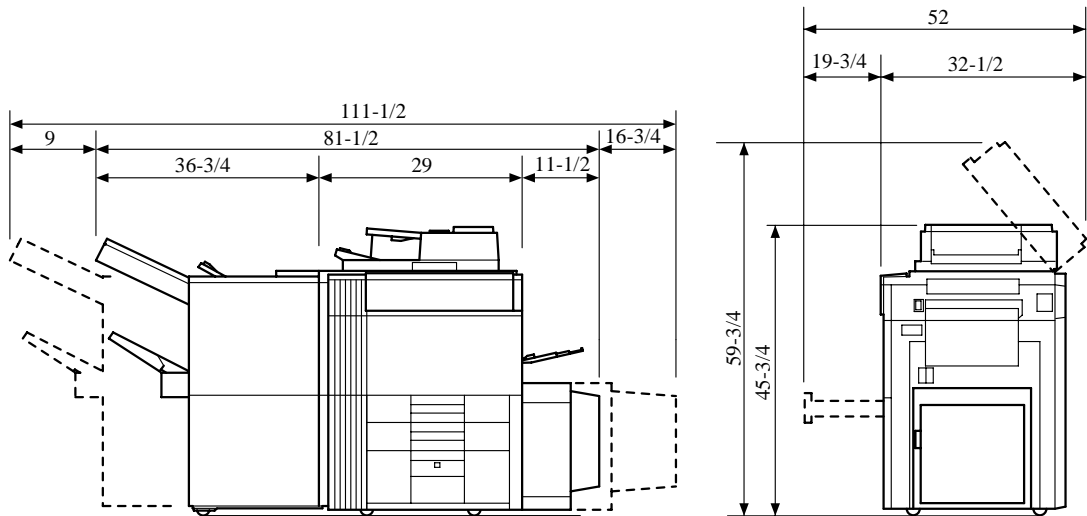

<With EDH-1, FN-3 and C-304L mounted>

Unit: Inch

1155O724AB

## 2. Precautions for Use

### Operating Environment

The operating environmental requirements of the copier are as follows:

Temperature : 10°C to 32°C (50°F to 90°F) with a fluctuation of 10°C (18°F) per hour.

Humidity : 15% to 85% with a fluctuation of 10% per hour.

### Using the Copier Properly

To ensure optimum performance of the copier, follow the precautions listed below.

- ◆ NEVER place a heavy object on the copier or subject the copier to shocks.
- ◆ NEVER open any doors, or turn OFF the copier while the copier is making copies.
- ◆ NEVER bring any magnetized object or use flammable sprays near the copier.
- ◆ NEVER remodel the copier, as a fire or electrical shock could result.
- ◆ ALWAYS insert the power plug all the way into the outlet.
- ◆ ALWAYS make sure that the outlet is visible, clear of the copier or copier cabinet.
- ◆ ALWAYS provide good ventilation when making a large number of continuous copies.

---

#### **NOTE**

= *Locate the Copier in a Well Ventilated Room* =

*A negligible amount of ozone is generated during normal operation of this copier. An unpleasant odor may, however, be created in poorly ventilated rooms during extensive copier operations. For a comfortable, healthy, and safe operating environment, it is recommended that the room be well ventilated.*

---

#### **REMARQUE**

= *Placer le copieur dans une pièce largement ventilée* =

*Une quantité d'ozone négligable est dégagée pendant le fonctionnement du copieur quand celui-ci est utilisé normalement. Cependant, une odeur désagréable peut être ressentie dans les pièces dont l'aération est insuffisante et lorsque une utilisation prolongée du copieur est effectuée. Pour avoir la certitude de travailler dans un environnement réunissant des conditions de confort, santé et de sécurité, il est préférable de bien aérer la pièce où se trouve le copieur.*

---

### Moving the Copier

If you need to transport the copier over a long distance, consult your Technical Representative.

### Care of Copier Supplies

Use the following precautions when handling the copier supplies (toner, paper, etc.).

- ◆ Store the paper, toner, and other supplies in a place free from direct sunlight and away from any heating apparatus. Keep them in a dry, cool, clean environment.
- ◆ Store paper, which has been removed from its wrapper but not loaded into the drawer, in a sealed plastic bag in a cool, dark place.
- ◆ Keep supplies out of the reach of children.
- ◆ If your hands become soiled with toner, wash them with soap and water immediately.



## 2. Precautions for Use

---

### Note on making multiple copies

If the fusing temperature drops excessively during a multi-copy cycle, there is a possibility that the copying speed will be reduced. The copying speed will automatically return to normal when the fusing temperature rises enough to ensure good fusing performance.

### Legal Restrictions on Copying

Certain types of documents must never be copied by the copier for the purpose or with the intent to pass copies of such documents off as the original. The following is not a complete list but is meant to be used as a guide to responsible copying.

#### Financial Instruments

- Personal Checks
- Travelers Checks
- Money Orders
- Certificates of Deposit
- Bonds or other Certificates of Indebtedness
- Stock Certificates

#### Legal Documents

- Food Stamps
- Postage Stamps (canceled or uncanceled)
- Checks or Drafts drawn by Government Agencies
- Internal Revenue Stamps (canceled or uncanceled)
- Passports
- Immigration Papers
- Motor Vehicle Licenses and Titles
- House and Property Titles and Deeds

#### General

- Identification Cards, Badges, or Insignias
- Copyrighted Works without permission of the copyright owner

In addition, it is prohibited under any circumstances to copy domestic or foreign currencies or Works of Art without permission of the copyright owner.

When in doubt about the nature of a document, consult with legal counsel.

# Chapter 2

---

## Getting to Know Your Copier

# 1. Typical Copies You Can Make with Your Copier

## Typical copies you can make with your copier

Here's a sample of the features the copier is equipped with to turn out different types of copies. For the specific operations, see the relevant pages indicated by p.


### Original Copy p. 3-34

1-sided 1-sided




1155O004AA

1-sided 2-sided

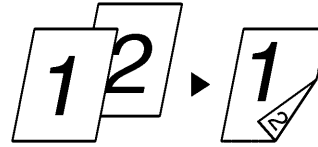


1155O006AA

2-sided 1-sided

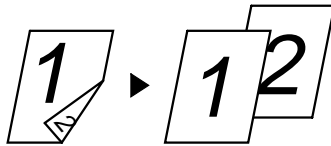


1155O726AA

Book 1-sided

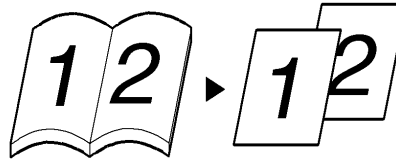


1155O005AA

2-in-1

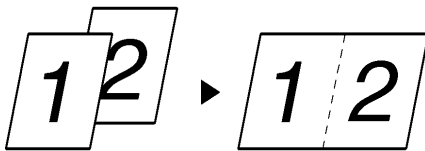


1155O007AA

4-in-1

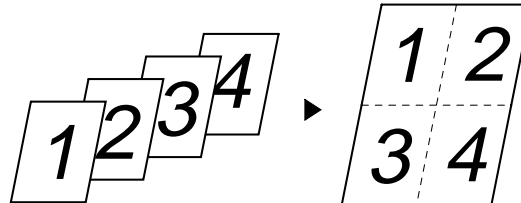

1155O725AB

Booklet

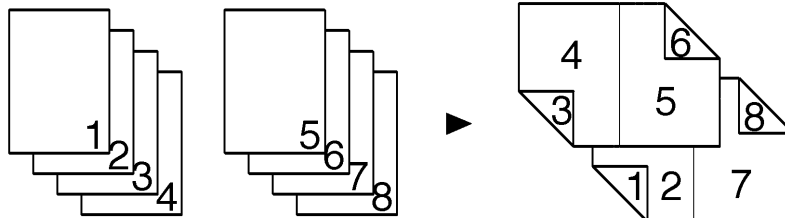


1155O008AA


1. Typical Copies You Can Make with Your Copier

**Finishing** ↗ p. 3-20


Sort

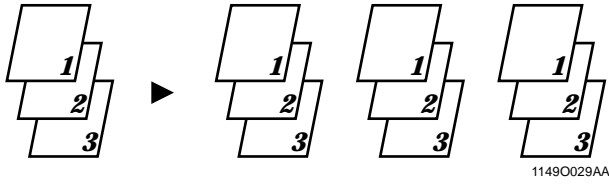


Staple

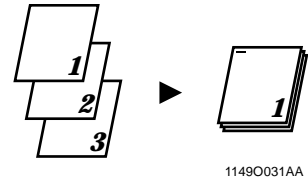


Group

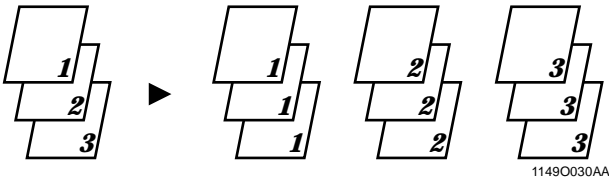

Hole Punch

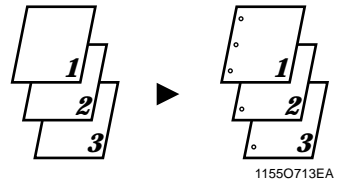


Folding Options

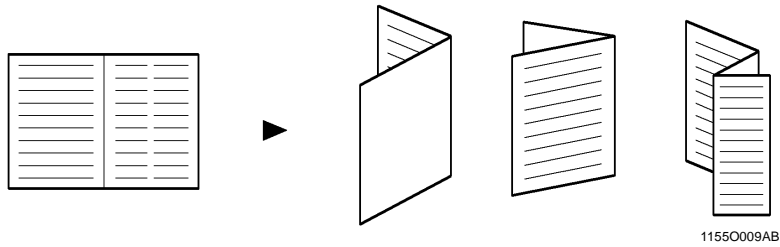

**Zoom Ratio** ↗ p. 3-14


Reduce, Full size, Enlarge, X/Y Zoom

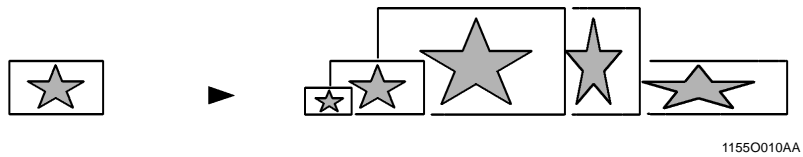


1. Typical Copies You Can Make with Your Copier

### Auxiliary Functions


Cover ☞ p. 3-44

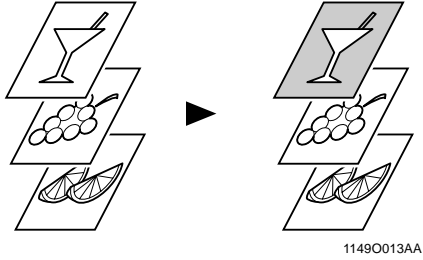


Page Insertion ☞ p. 3-46

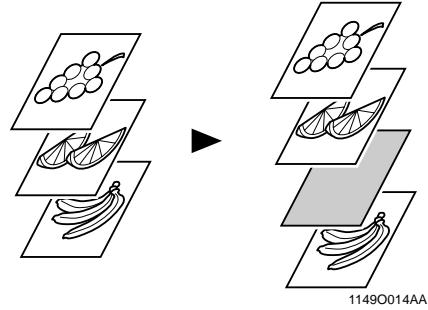


OHP Interleaving ☞ p. 3-50

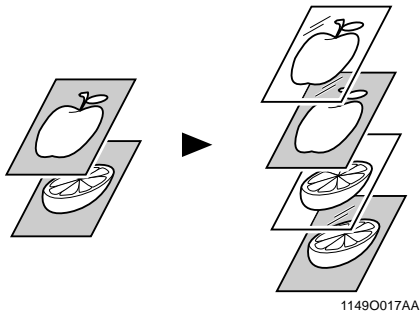


File Margin ☞ p. 3-54

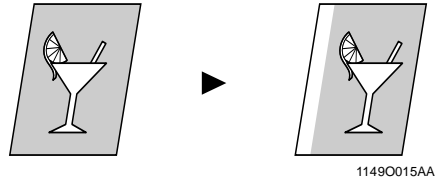


Erase ☞ p. 3-56

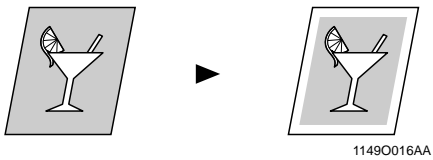


Number Stamping (Date) ☞ p. 3-60

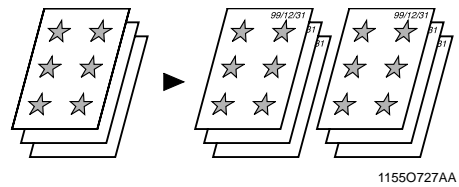

Number Stamping (Page) ☞ p. 3-60

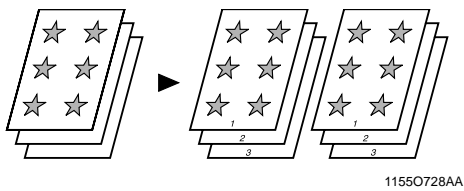


Number Stamping (Distribution) ☞ p. 3-60

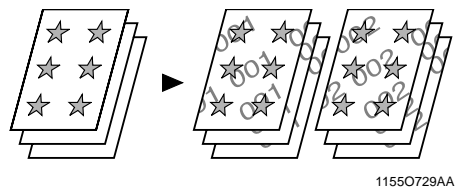


### Auxiliary Functions

Image Repeat ↗ p. 3-58

Image Stamping ↗ p. 3-64

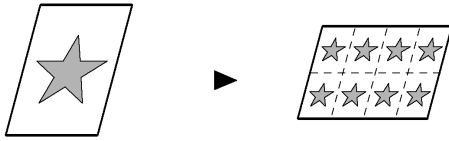


1155O051AA

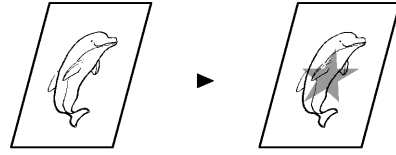

1155O011AA

### Mixed Original Detection ↗ p. 3-66

Mixed Orig. Detection

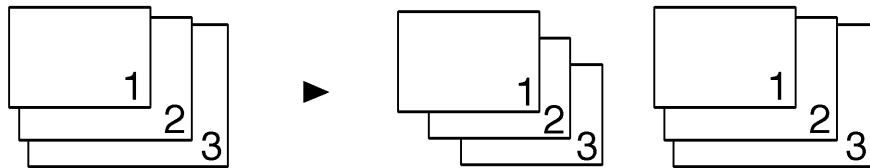


1155O003AA

## 2. System Overview

### System Overview


The following overview presents the copier and the available options with a brief explanation of the function of each. Refer to “Control Panel Keys and Indicators” (p. 2-14) for using the Touch Panel and Control Panel.

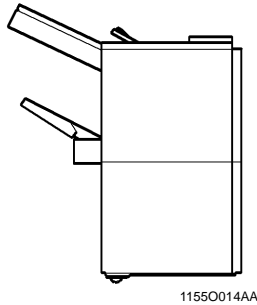

1155O014AA

#### **Finisher FN-3 <Option>**


Permits sorting, grouping, sort-stapling, punching or folding copies.

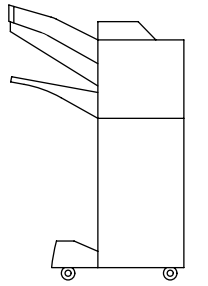

1155O730AA

#### **Finisher FN-102 <Option>**


Permits sorting, grouping, sort-stapling or punching copies.

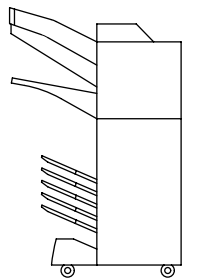

1155O731AA

#### **Mailbin Finisher FN-502 <Option>**

 
In addition to the function of the FN-102, it can sort or group output into 5 bins. Bin assignment is available from the PC.



1155O012AA

#### **Electronic Document Handler EDH-1**

In addition to being capable of feeding in sheet originals one at a time, it can automatically turn over the original for making copies from 2-sided originals.

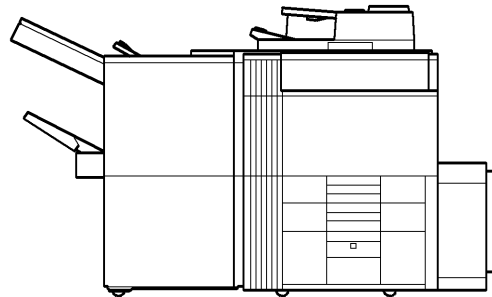


1155O013DA



1138O525AA

**Data Controller D-102 <Option>**


Capable of controlling various types of data including the number of copies made, copy cost, and user departments by means of specific magnetic cards.

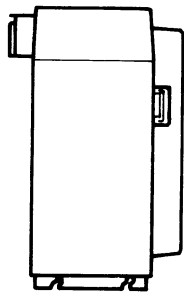

1134O005AA

**Large Capacity Cassette C-304 <Option>**

Holds up to 3,400 sheets of LetterC copy paper (20 lbs.).

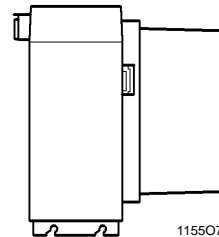

1155O721AA

**Large Capacity Cassette C-304L <Option>**

Holds up to 3,400 sheets of LegalL, LetterL or LetterC copy paper (20 lbs.).

**16MB Memory****Hard Disk Drive Kit  
<Option>**

Expands the memory capacity of Di620.

**Printer Controller Pi6000 <Option>**


When the copier is fitted with this unit, it can function also as a printer.

\*For more details, see the Printer Operator's Manual.



## 3. Copier Parts and Accessories


### Outside the copier

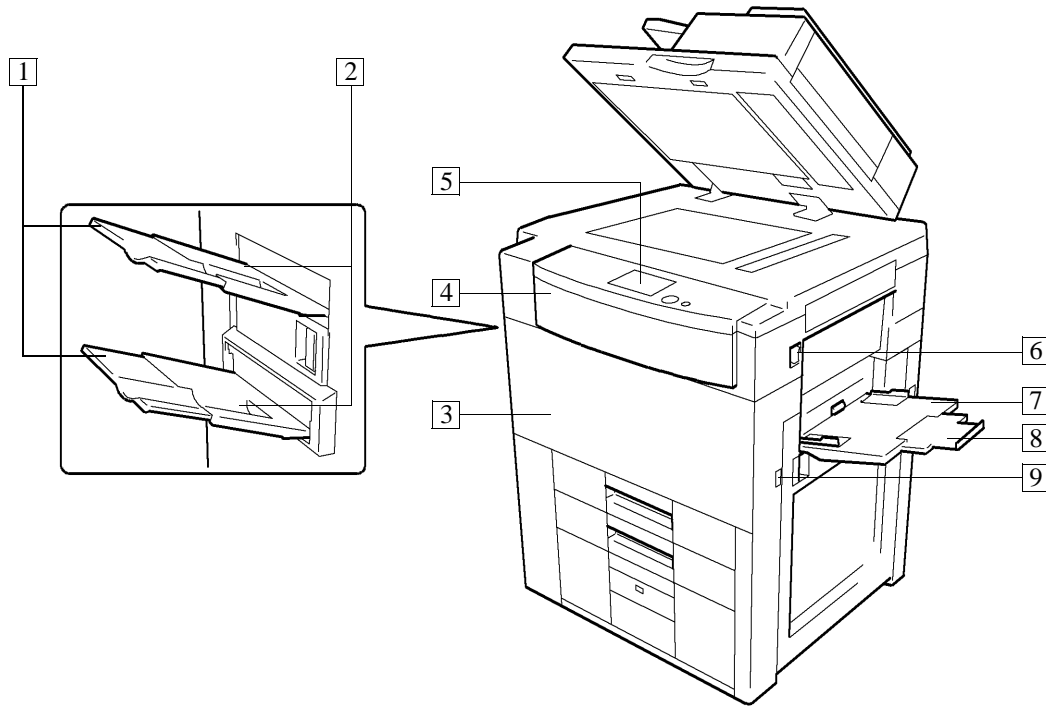

11550016DA

### Copier

- |   |                               |   |
|---|-------------------------------|---|
| 1 | Exit Tray Extender            | : Slide this extender out when making copies on large-size paper.   |
| 2 | Exit Tray                     | : Holds copies fed out of the copier. (Option)  |
| 3 | Front Door                    | : Open to clear a paper misfeed. <a href="#">p. 5-12</a><br>Closing the Front Door after a misfeed has been cleared will turn the misfeed warning message on the control panel OFF. |
| 4 | Upper Front Door              | : Open to replace the Toner Bottle. <a href="#">p. 5-6</a>  |
| 5 | Control Panel                 | : Use to start a copy cycle or to make copy job settings.<br>(See) Control Panel Keys and Touch Panel. <a href="#">p. 2-14</a>  |
| 6 | Power Switch                  | : Use to turn the copier ON and OFF. <a href="#">p. 2-18</a>  |
| 7 | Intelligent Multi Bypass Tray | : Use for manual feeding of copy paper into the copier. <a href="#">p. 3-11</a>   |
| 8 | Extender                      | : Slide this extender out to make copies on large-size copy paper.  |
| 9 | Total Counter                 | : Shows the total number of copies made so far.   |

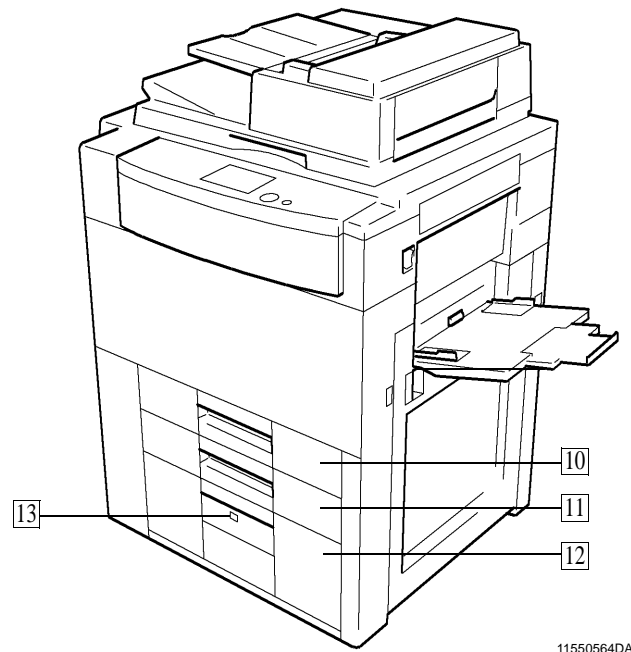

11550564DA


### Drawers of the Copier

- 10** 1st Drawer : Holds up to 550 sheets of copy paper. ↗p. 5-2
- 11** 2nd Drawer : Holds up to 550 sheets of copy paper. ↗p. 5-3  
It can accommodate paper of different sizes.
- 12** 3rd Drawer : Holds up to 2,700 sheets of copy paper. ↗p. 5-4
- 13** Paper Descent Key : Press before sliding the drawer out of the copier.


Copier Accessories

Chapter 2


Getting to Know Your Copier

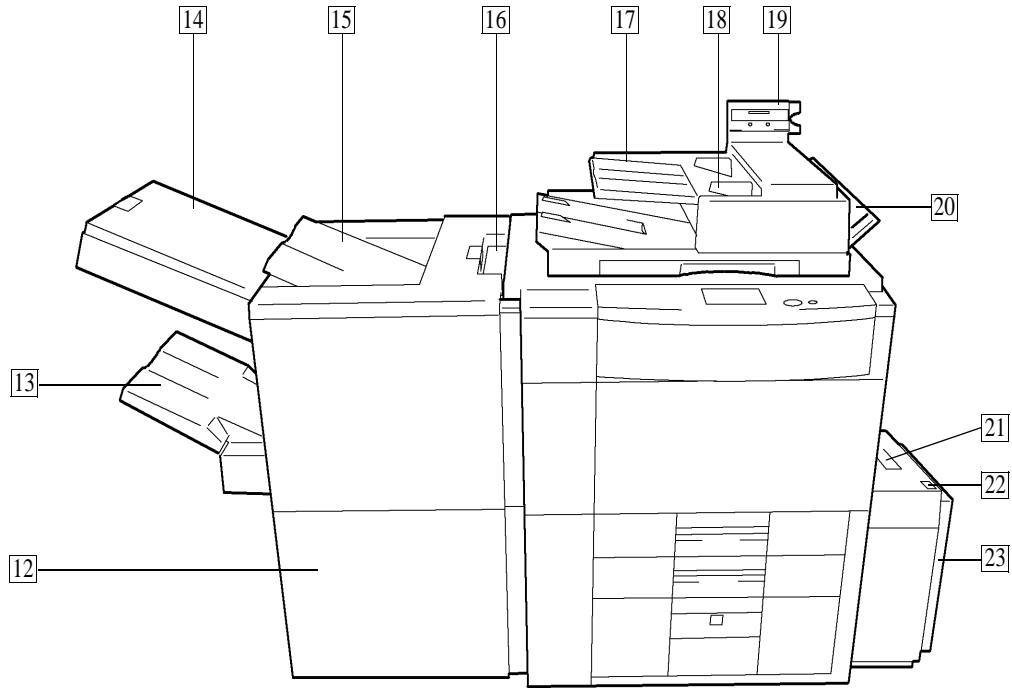


1155O019DA

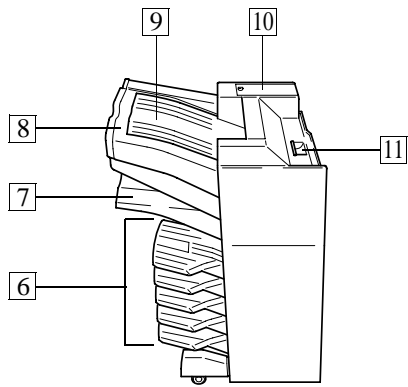

1155O733AB

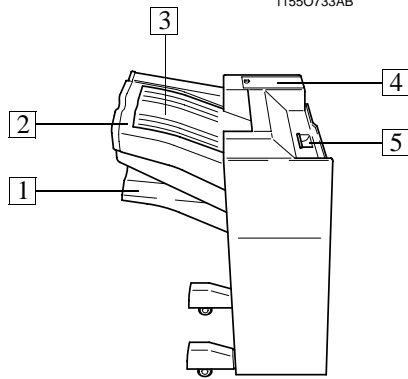

1155O732AB

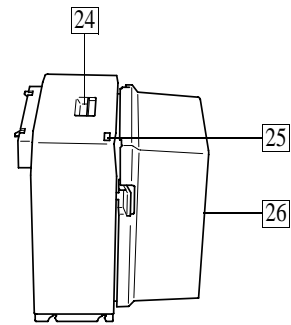

1155O734AB

**Finisher FN-102**


- 1 Elevator Tray : Receives sorted paper by shifting.
- 2 Top Offset Tray : Receives plain paper or exclusive paper fed out.
- 3 Misfeed Clearing Guide : Open to clear misfed paper.
- 4 Stapler Cover : Open to replace the staple cartridge.
- 5 Lock Release Lever : Hold to slide the Finisher away from the copier.

**Mailbin Finisher FN-502**

- 6 Mail Bins : Receives outputs fed out in finishing mode.
- 7 Elevator Tray : Receives sorted paper by shifting.
- 8 Top Offset Tray : Receives plain paper or exclusive paper fed out.
- 9 Misfeed Clearing Guide : Open to clear misfed paper.
- 10 Stapler Cover : Open to replace the staple cartridge.
- 11 Lock Release Lever : Hold to slide the Finisher away from the copier.

**Finisher FN-3**

- 12 Finisher Door : Open to replace the Staple Cartridge. ☞ p. 5-8  
Open to clear a paper misfeed. ☞ p. 5-12
- 13 Bottom Offset Tray : Receives sorted/stapled copy sets or grouped copy stacks.
- 14 Manual Staple Tray Cover : Open to load documents for manual stapling or to clear a paper misfeed.
- 15 Top Offset Tray : Receives sorted copy sets or grouped copy stacks.
- 16 Grip : Grasp and press here to slide the Finisher away from the copier to clear a misfeed or other service job.

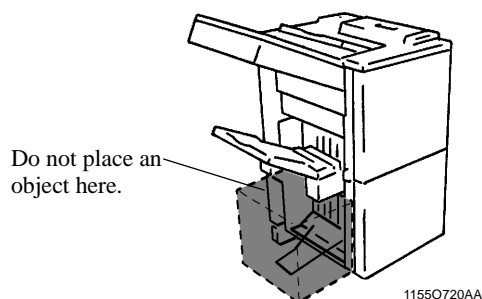**Precautions When Using a Finisher**

NEVER place an object under the Bottom Offset Tray or Elevator Tray. Anything that is placed under the Bottom Offset Tray or Elevator Tray can interfere with the tray when it lowers after a copy set has been fed onto it, which results in a malfunction.

### 3. Copier Parts and Accessories

#### Electronic Document Handler

- 17 Document Handling Tray : Load the originals face up on this tray. ☞p. 3-5
- 18 Document Guide Plate : Slide the plate as necessary to the size of the originals. ☞p. 3-5
- 20 Single Feed Tray : Insert a single sheet of original into the tray to make a copy or copies of it. ☞p. 3-8

#### Data Controller D-102

- 19 Data Controller : See the operator's manual for the Data Controller for details.


#### Large Capacity Cassette C-304

- 21 Lock Release Lever : Use to unlock the Cassette from the copier for clearing a misfed sheet of paper or other service job.
- 22 Paper Plate Descent Key : Press to lower the paper plate.
- 23 Cassette Door : Open to add paper or clear a misfed sheet of paper.

#### Large Capacity Cassette C-304L

- 24 Lock Release Lever : Use to unlock the Cassette from the copier for clearing a misfed sheet of paper or other service job.
- 25 Paper Plate Descent Key : Press to lower the paper plate.
- 26 Cassette Door : Open to add paper or clear a misfed sheet of paper.


## Inside the Copier

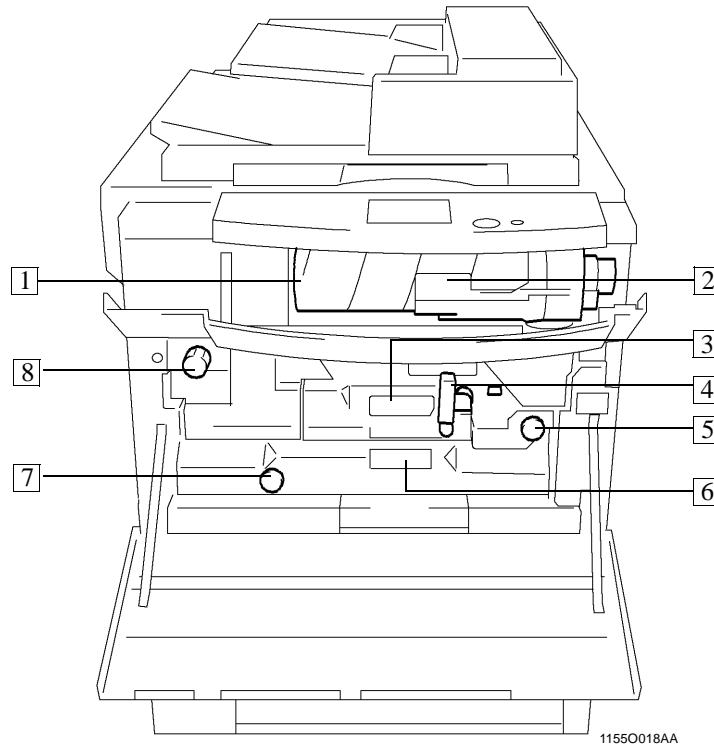

- |   |                                      |  |
|---|--------------------------------------|--|
| 1 | Toner Bottle                         | : Contains Toner. Replace it with a new one when the warning message tells you to. ☞p. 5-6 |
| 2 | Toner Bottle Holder                  | : Swing open to replace the Toner Bottle. ☞p. 5-6  |
| 3 | Misfeed Removal Guide Unit <b>M5</b> | : Use to clear a misfed sheet of paper. ☞p. 5-14   |
| 4 | Misfeed Removal Lever <b>M4</b>      | : Press down to pull out the <b>M5</b> Unit. ☞p. 5-14                                      |
| 5 | Misfeed Removal Knob <b>M3</b>       | : Use to clear a misfed sheet of paper. ☞p. 5-14   |
| 6 | Duplex Unit <b>D2</b>                | : Slide out to clear a sheet of paper misfed in the Duplex Unit. ☞p. 5-16                  |
| 7 | Misfeed Removal Knob <b>D1</b>       | : Use to clear a misfed sheet of paper. ☞p. 5-14   |
| 8 | Misfeed Removal Knob <b>M1</b>       | : Turn to clear a misfed sheet of paper. ☞p. 5-14  |

## 4. Control Panel Keys and Indicators

### Control panel keys and indicators

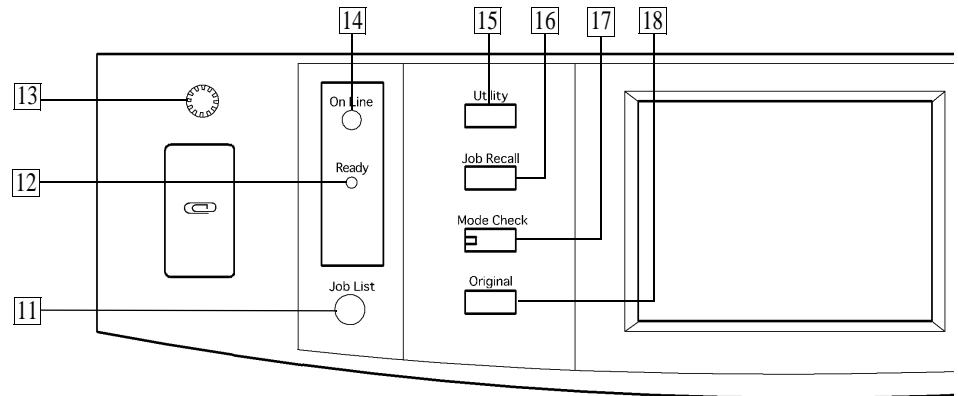

#### 1 Touch Panel

- Shows various screens and messages. ☞ p. 2-16

#### 2 Start Key

- Press to start the document scanning sequence.
- Press to start a print cycle.
- Lights up green to accept a print command; lights up orange to reject one.
- Print lamp :  
Lights up to indicate that a print cycle can be run.
- Scan lamp:  
Lights up to indicate that a document scanning cycle can be run.

#### 3 10-Key Pad

Use to enter :

- The number of copies to be made.
- The various numeric values.

#### 4 Clear Key

Press to:

- Reset the multi-copy entry to 1.
- Clear a zoom ratio entered when setting one from the 10-Key Pad.
- Clear the original count, image data scanned, and Access code.

#### 5 Stop Key

Press to :

- Stop a print cycle.
- Stop a scanning cycle.

#### 6 Access Mode Key

- Press to enter the access number. ☞ p. 2-20  
\* This key becomes valid only when Copy Track of the Administrator mode available from User's Choice is set.

#### 7 Energy Saver Key

- Press to set the copier into the Energy Saver mode. ☞ p. 2-19

#### 8 HDD Lamp

- Lights up to indicate that the Hard Disk Drive Kit (option) is being accessed.


#### 9 Interrupt Key

- Press to interrupt a current job with a different one.
- Press it again to return to the previous job. ☞ p. 2-20
- Press to stop a multi copy cycle (except when the copier is in an interrupt mode).
- Lights up to indicate that the copier is in the Interrupt mode.

#### 10 Panel Reset Key

- Press to set the copier into the initial mode, clearing all settings made on the control panel. ☞ p. 2-19  
\* It does not, however, clear the contents of the zoom and job program memory, Interrupt mode, and the job held in reserve.

## 4. Control Panel Keys and Indicators

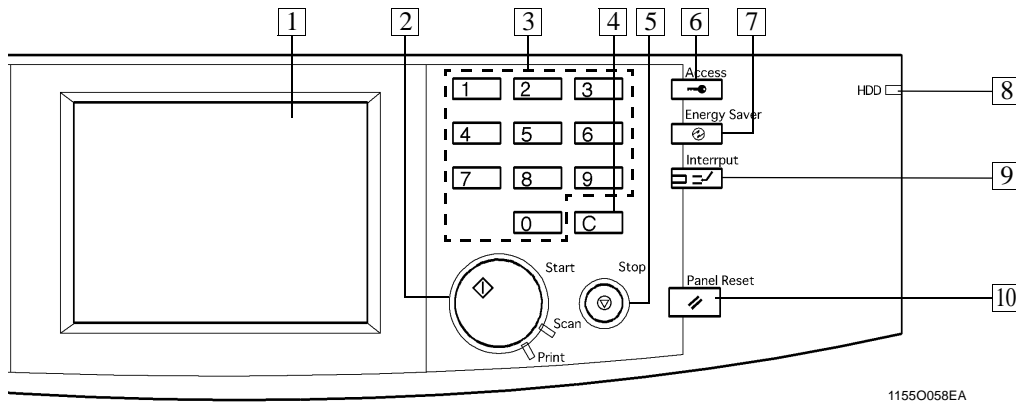**11 Job List Key**

- Press to check for the settings made for a job (Mode Check), modify the settings of a job (Change), delete a job (Delete), and unlock a job (Unlock). *p. 3-71*
- Press to check for the memory space still available for use.
- When the lamp is lit up, it indicates that a job has been reserved.

**12 Ready Lamp**

- When the lamp is lit up, it indicates that data can be transferred.
- The lamp also indicates whether the copier is hooked up to the Printer Controller.  
Blinking: Data is being transferred.  
\* For more details, see the Printer Operator's Manual.

**13 Display Contrast Knob**

- Turn to vary the brightness of the Touch Panel.

**14 On Line Key**

- Used when the copier is hooked up to the Printer Controller.

**15 Utility Key**

- Press to show the Utility Mode menu.

## Utility Mode

- Job/Zoom Mem. Input •Meter Count
- User's Choice •Toner Replenisher

\* For details, see Using the Utility Mode

*p. 4-1*

**16 Job Recall Key**

- Press to show the Job Recall screen on which you can recall or check a copy-job program previously stored in memory.
- This key is not valid while the copier is in the Interrupt mode.  
\* For details, see Recalling a Job from Memory *p. 4-5*

**17 Mode Check Key**

- Press to show the Mode Check screen. From this screen you can access the setting screen of a particular function and change or cancel the setting as necessary.
- When the lamp is lit up, it indicates that the copying function currently valid is not the default setting.  
\* For details, see Mode Check *p. 2-20*

**18 Original Key**

- Press to select the Mixed Orig. Detection and other document-related functions setting screen.
  - Mixed Orig. Detection •Free Orig. Placement
  - Small Orig. Adjustment •Separate Scan




## 5. Using the Touch Panel

### What is the Touch Panel?


When you turn ON the Power Switch, the Basics screen as shown below appears on the Touch Panel. It shows in messages and graphics the currently set functions, available functions to choose from, and the copier status.

\* Some of the Touch Panel screens used in the Operator's Manual may be different from what you actually will see on your copier.

### How the Screen is Organized

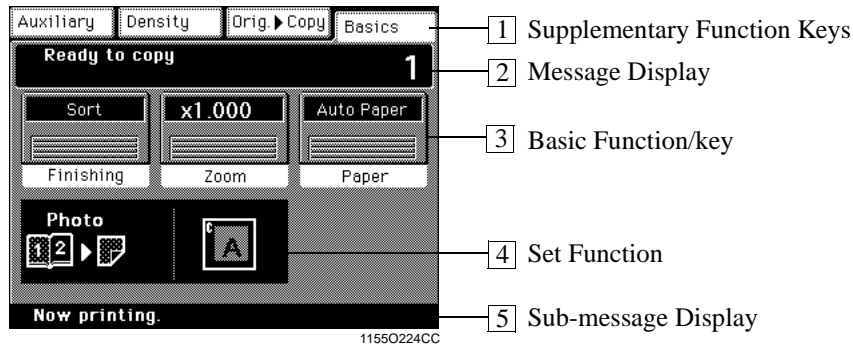

#### 1 Supplementary Function Keys

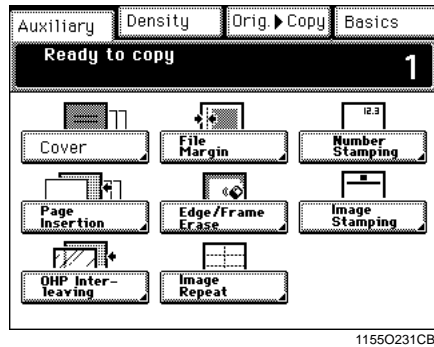


ex.) Auxiliary Function

The Auxiliary, Density, Orig, Copy, and Basics keys are displayed. When any of these keys is touched, the corresponding supplementary function screen appears.

\* Touching Basic returns you to the Basics screen.


#### 2 Supplementary Function Keys

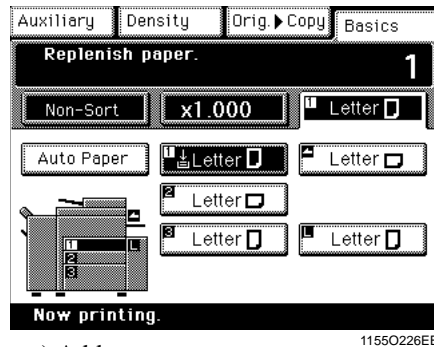

ex.) Add paper

Shows the current copier status, operating instructions and precautions, and other data including the number of copies selected.

### 3 Basic Function/Key Display

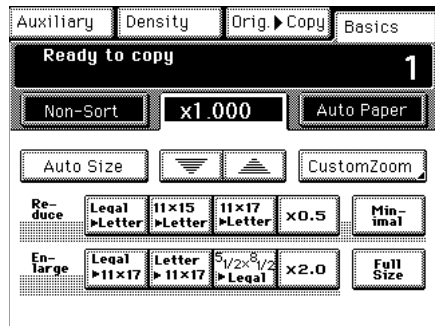


ex.) Zoom

Shows the basic function keys and the corresponding functions currently selected for use. Touching a basic function key shows the corresponding basic function screen.

\* What is shown inside the key is the current setting.

### 4 Set Function Display

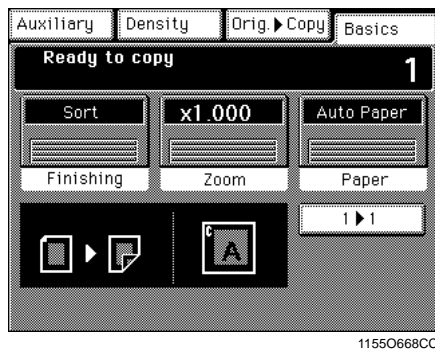


ex.) Orig. ► Copy : 1 ► 2  
Finishing : Sort-and-Staple

Shows graphic representations of the settings currently made for Orig. ► Copy and Finishing.

\* When you want to check for more details of the set functions, press the Mode Check key.  
☞ p. 2-20

### 5 Sub-message Display

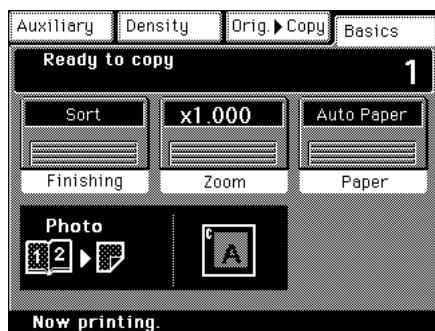

ex.) Being printed

Shows what is being done with the currently reserved job.

\* To check for the settings made for the currently reserved job, press the Job List key. ☞ p. 3-71

## Operating the Touch Panel


You need only to lightly touch the key shown on the Touch Panel to select or activate the function represented by the key.

### NOTE

NEVER press the Touch Panel hard or use a hard or pointed object to press it, as a damaged panel could result.

## 6. Turning ON and OFF and Initial Mode

### Turning ON and OFF

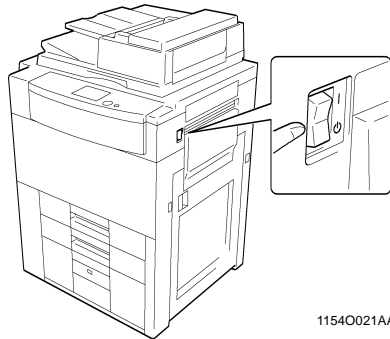

11540021AA

- Turning the Copier ON:  
Press the Power Switch to the **I** (ON) position.
- Turning the Copier OFF:  
Press the Power Switch to the **⏻** (OFF) position.

#### NOTE

The Auto Power OFF function will automatically shut down the copier a given period of time after the last activity. [p. 2-19](#)

### When the Copier is Turned ON

When the Power Switch is turned ON, the Start Key lights up orange.

In about a few seconds, the message “Now warming-up. Ready to scan.” appears and the Start key lights up green. The copier thereafter enables its auto copy start function. [p. 2-19](#)

At this time, however, pressing of the Start key does not start a copy cycle. The copier needs a warm-up period of about 7 minutes (at a room temperature of 23°C).

### Initial Mode

When the Power Switch is turned ON, the Basic screen appears on the Touch Panel. The settings on this screen are called the initial mode, serving as the reference for all panel settings to be later made.



11550228CB

No. of copies selected : 1  
 Finishing : Non-Sort  
 Zoom : ×1.000  
 Paper : Auto Paper  
 Density : Auto  
 Orig. ▶ Copy : 1 ▶ 2

Touch this key if you want to make 1 ▶ 1 copies.

#### Useful Tip

User's Choice can be used to change the settings of initial mode. [p. 4-14](#)

## 7. Auxiliary Functions

### Auxiliary functions

#### Panel Resetting

The Panel Reset key resets all control panel settings to default settings including the number of copies and zoom ratio. The settings just made would also be cleared.

##### *Useful Tips*

- The Panel Reset key enables you to cancel all previous settings at the touch of the key.
- To avoid miscopy, try to press this key before making any setting for your own copy job.

#### Auto Panel Reset

If no key on the control panel is pressed within 1 min. after a copy cycle has been completed or copying settings made, the Auto Panel Reset function is activated to return the copier to the default settings.

##### *Useful Tip*

The time for the copier to enter the Auto Panel Reset Function can be selected from among “30 sec.,” “1 min.,” “2 min.,” “3 min.,” or “5 min.” For details, see *User's Choice*. ☞p. 4-18

#### Auto Copy Start

If you load originals into the document handler or place an original on the Glass and press the Start key while the copier is warming up after it has been turned ON, the Auto Copy Start function allows that copy process to be started as soon as the copier completes warming up.

#### Auto Shut OFF

The Auto Shut OFF function shuts down the copier a given period of time after the copier has been used last. The initial setting is 90 min.

##### *Useful Tip*

The time for the copier to enter the Auto Shut OFF mode can be selected from 15 to 240 min. The Auto Shut OFF function can even be disabled.

For details, see *User's Choice*. ☞p. 4-18

#### Energy Saver

If the copier is shut down when it is not in use, it takes the copier some time to complete the warm-up cycle. Instead of turning the copier OFF, it's a good idea to use the Energy Saver mode which will minimize the time for the copier to complete the warm-up cycle to about 20 sec.

To set the copier into the Energy Saver mode, you need only to press the Energy Saver key. Or, a given period of time after the copier has been touched last, it automatically enters the Energy Saver mode. The initial setting is 15 min.

To cancel the Energy Saver mode, press any key on the control panel.

##### **NOTE**

The copier is automatically shut down if the Auto Shut OFF function is activated while it is in the Energy Saver mode.

##### *Useful Tip*

The time for the copier to enter the Energy Saver mode can be selected from 1 to 240 min. For details, see *User's Choice*. ☞p. 4-18

## 7. Auxiliary Functions

### Interrupt

The Interrupt function allows you to interrupt a current job and run a different one. Pressing the Interrupt key once sets the copier into the Interrupt mode. Pressing the key again lets the copier leave the Interrupt mode, returning to the previous settings.

#### NOTE


To cancel an Interrupt cycle, you need to press the Interrupt key. The Panel Reset key or Auto Panel Reset function does not serve this purpose.

#### Useful Tips

- Pressing the Interrupt key sets the copier into the initial mode, except for the finishing function which is Non-Sort.
- Custom Zoom and X/Y Zoom cannot be set in the Interrupt mode. Cover, Page Insertion and OHP Interleaving cannot be set in the Interrupt mode, either.

### Mode Check

By pressing the Mode Check key on the control panel, you can either check for or change the current settings.

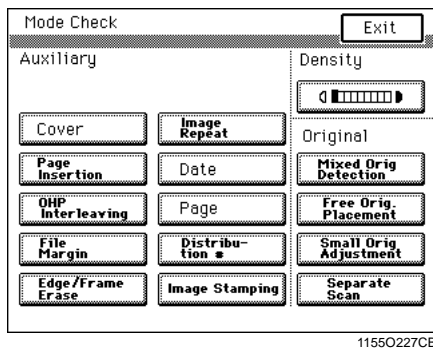

- When you touch **Exit** after having checked the currently set functions, the Basic screen reappears.
- To change a certain function, touch the corresponding key and then make the necessary change.

### Access Number

If an access number has been programmed, it allows only particular persons to use the copier or a supervisor to keep track of the number of copies made by a particular department.

#### NOTES


- If an access number has been programmed, a copy cycle can be initiated only after the access number has been input to the copier. <“Access #” Prompt Screen>



- Before you can use this function, you must first turn “ON” the “Copy Track” function of the Administrator Mode available from User’s Choice. *p. 4-19*

### Entering the Access Number

- 1 From the 10-Key Pad, enter the 4-digit access number and press the Access Mode key.

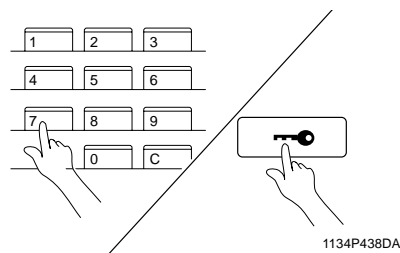

#### NOTE

To correct the 4-digit access number entered, first press the **C** key, then enter the new number.

- 2 When the initial screen reappears, you can now start the copy cycle.
- 3 When the copy cycle is completed, press the Access Mode key again.

# Chapter 3

---

## Making Copies

# 1. Basic Copying Overview

## Basic Copying Overview



One of the most basic copying jobs is to make full-size (×1.000) copies of the original.

- Place the original in position (step 1), set the number of copies to be made (step 8), and press the Start key (step 9). This will allow you to make full-size copies on paper of the same size as the original.  
(\*Automatically selected in the initial mode are Auto Paper, Full Size, and Auto Exposure.)

The selections → you make on the Touch Panel will change the exposure level, zoom ratio, the type of copy and so on.

**1. Placing the Original**


- Load the originals face up on the document handler. ☞ p. 3-4
- Raise the document handler and place the original face down on the Original Glass. ☞ p. 3-6

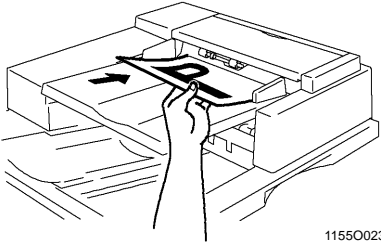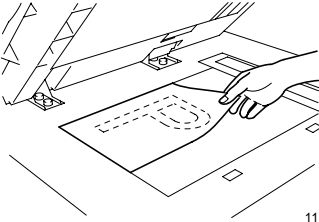1155O023AA 1155O753AA

**Selecting the basic functions**


- To change the copy paper size → 2. Touch **Paper** . ☞ p. 3-9
- To change the zoom ratio → 3. Touch **Zoom** . ☞ p. 3-14
- To sort copies
- To staple copies
- To punch holes in copies → 4. Touch **Finishing** . ☞ p. 3-20

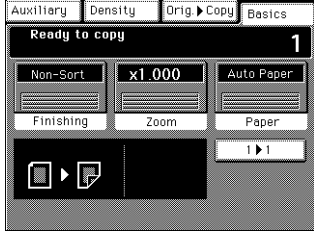

1155O228CB

- To make copies from a book
- To save copy paper → 5. Touch **Orig. ▶ Copy** . ☞ p. 3-34

**Selecting the original ▶ copy type**

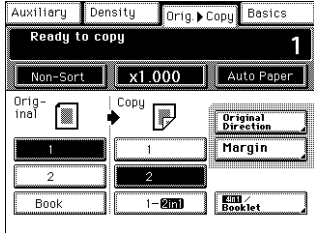

1155O229CB

1. Basic Copying Overview

• To change the exposure level

6. Touch **Density** .  
 ☞ p. 3-42

Selecting the exposure level

1155O230CB

• To make a file margin on the copy  
 • To use OHP Interleaving

7. Touch **Auxiliary** .  
 ☞ p. 3-44

Selecting the auxiliary functions

1155O231CB

8. Setting the number of copies.

- From the 10-Key Pad, set the desired number of copies to be made.

The maximum number that can be set is 999.

**Useful Tip**  
 The User's Choice can be used to limit the maximum number of copies to be set in the range from 1 to 99. ☞ p. 4-19

\* If you have entered an incorrect number, press the **C** key, then enter the correct number.

1139O2640A

9. Pressing the Start key

When you press the Start key, the copier starts the copy cycle.

\* To stop the copy cycle, press the Stop key.

1155O651EA



## 2. Placing the Original

### Using the Electronic Document Handler

The Document Handler automatically feeds in sheet originals placed on the Document Handling Tray one by one. After the copy cycle has been completed, it automatically ejects the original onto the Document Exit Tray.

Some originals may not be suitable for reliable operation in the Document Handler. Here is a guide.

#### Originals Suitable for the Document Handler

Types of Originals: Sheets (Plain paper)

Normal mode

- 1-sided Original (weighing 13-1/4 to 29-1/4 lbs.)
- 2-sided Original (weighing 16 to 24 lbs.)
- Mixed Original Detection mode (weighing 16 to 24 lbs.)

Original size: 1-Sided Original, 2-Sided Original Mode : 11"×17"L to 5-1/2"×8-1/2"L

Mixed Original Detection mode : 11"×17"L to Letter

#### Originals Not Suitable


- Typing paper, paraffin paper, and other thin paper
- Thick paper
- Originals greater than 11"×17"L or smaller than 5-1/2"×8-1/2"L
- Transparencies, translucent paper
- Wrinkled, dog-eared, curled, or torn originals
- Clipped or stapled originals
- Carbon-backed originals

\* For any of these types of originals, place the original manually on the Original Glass to make a copy.

☞ p. 3-6


## Loading the Originals

- 1 Slide the Document Guide Plate to the size of the originals.

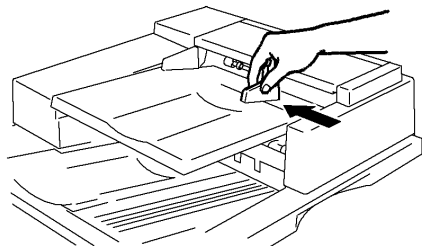

1155O022AA

- 2 Load a neat stack of originals face up on the Document Handling Tray.

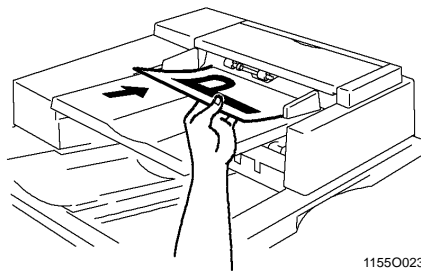

1155O023AA

### NOTES

- The maximum number of originals that can be loaded: Up to 100.
- The copier is capable of scanning a document consisting of 100 or more pages at one time.  
☞ p. 3-68
- Make sure that the top level of the original stack does not exceed the ▼ marking.
- Make sure that the Document Guide Plate is in touch with the edges of the original stack. If it's not pressed snugly against the original stack, skewed feeding could result.
- You can make copies automatically from originals of assorted sizes loaded in the Document Handler. You can also make copies of the same size from originals of different sizes. ☞ p. 3-66
- When loading originals in the Document Handler, select the "Direction of Original"  
☞ p. 3-36

## 2. Placing the Original

### Not Using the Document Handler


Different methods are used to place the original depending on its type. Use the procedure appropriate for your original. If you are using a Document Handler, see p. 3-4

\*When placing an original directly on the Original Glass, select the "Direction of Original".


#### Sheet Originals

<Using plain paper or originals not suitable for the Document Handler>

- 1 Raise the Document Handler.
- 2 Place the original face down on the Original Glass.

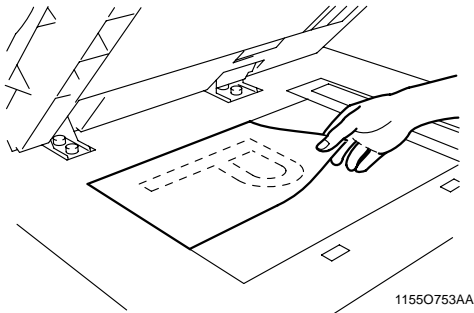

- 3 Position the original in the left rear corner with the ↑ marker on the scale.

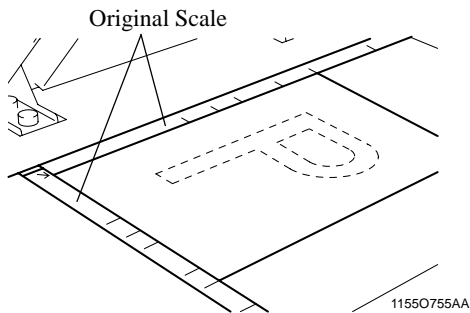


- 4 Gently lower the Document Handler.

#### Highly Transparent Originals

<Using transparencies and translucent paper for the original>

- 1 Place the original in the same way as the sheet originals.
- 2 Place a blank sheet of paper of the same size over the original.

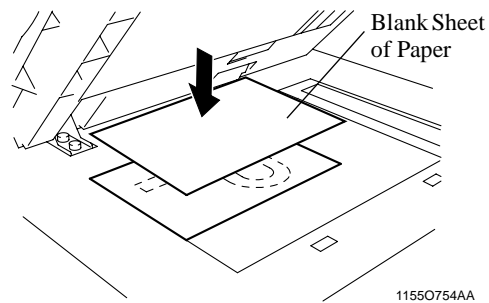


- 3 Gently lower the Document Handler.

## Making Copies from a Book Using Book Copy Mode

<“Book” refers to an open bound original>

- 1 Place the open book so that its top edge is at the rear of the copier and the center of the book is aligned with the Book Marker indicated on the Original Length Scale.

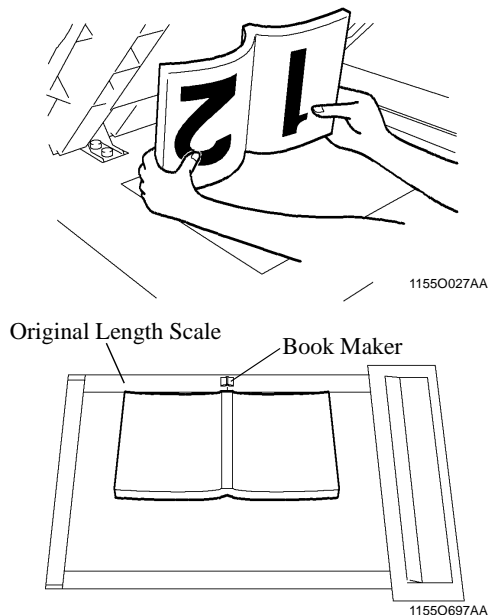


- 2 Gently lower the Document Handler.

### NOTES

- If the book is thick, make a copy with the document handler raised.
- Not positioning the open book properly will result in copies with pages in incorrect order.
- Do not look directly at the Original Glass surface as a strong beam of light is emitted.

### NOTES

- Be sure to raise the document handler 15° or more before placing the original. If the document handler is raised to an angle less than 15°, the copier may fail to select the correct copy paper size or zoom ratio.

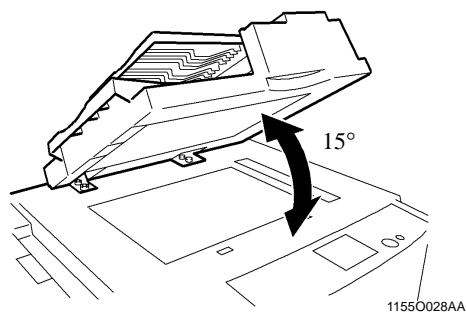

- Do not place an original weighing more than 6-1/2 lbs. on the Original Glass.
- When placing an open book, do not press the book hard on the Original Glass, as trouble could result.

## 2. Placing the Original

### Using the SADF Mode

This is the mode in which you insert your originals one by one into the Document Handler to make a copy or copies from it. When you insert the original, the copier automatically starts the copy cycle.

#### NOTES

- *Originals appropriate for the SADF Mode.*

Type : Plain paper


Thickness : 9-1/4 to 41-3/4 lbs.

Size : 11"×17"L to 5-1/2"×8-1/2"L

- *The following features will be cancelled when using the SADF Mode.*

*Auto Paper, Auto Zoom, Staple Mode, Punch Mode, Folding Options Mode, 2-sided Original Mode, Book, Dual Original Scanning Mode, 4-in-1 Mode, Booklet Creation, Cover Mode, Page Insertion Mode, OHP Interleaving Mode, File Margin Mode, Image Repeats, Mixed Orig. Detection and Free Orig. Placement.*


- 1 Open the Single Feed Tray and slide the Guide Plate to the size of the original.

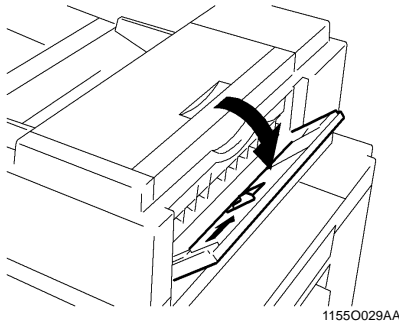

- 3 The original is automatically taken up and the copy cycle is started.

- 4 Making sure that the Scan Lamp and Print Lamp of the Start Key lights up green again, insert the next original.

- 2 Make sure that the Scan Lamp and Print Lamp of the Start Key are lit green and insert the original face down into the Tray.

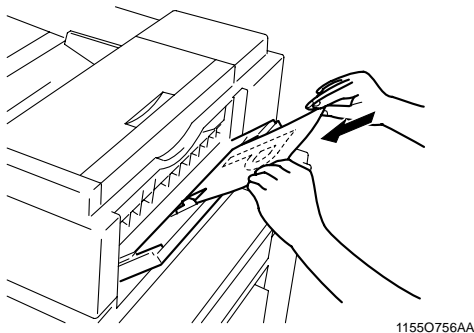

#### NOTES

- *Be sure to place one original at a time.*
- *Be sure to correct any fold or curl in the original beforehand.*

## 3. Selecting the Paper

In the following pages, we explain how to select the copy paper.


Touch **Basics** and **Paper** to show a screen which allows you to select the copy paper.

### Copy Paper Size

#### Auto Paper

In the Auto Paper mode, the copier automatically selects the paper of the optimum size according to the size of the original being used and zoom ratio selected for use.

- 1 Touch **Paper** on the Basics screen and then touch **Auto Paper**.

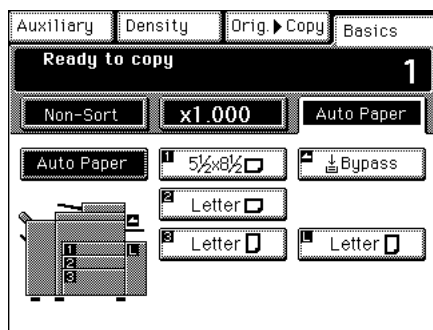

11550232EB

#### NOTES

- The original sizes that can be detected in the Auto Paper Select Mode are 11"×17"L, LegalL, LetterL, LetterC, 5-1/2"×8-1/2"L, A4L, A4C. When making copies from originals other than the above, select the copy paper size.
- When using wrinkled or curled originals, the original size might not be detected correctly. So, select the copy paper size and do not use the Auto Paper Select Mode.
- When the document handler is used, the copier determines the copy paper size when the first original is taken up and fed in and uses that paper size for the subsequent originals (except in the Mixed Original Detection mode).


#### Useful Tips

- This mode is efficient when you want to make copies on paper of the same size as your originals automatically.
- Priority settings for the initial mode can be made using User's Choice.

#### Manual Selection


The copy paper size can be set manually according to your need.

- 1 Touch **Paper** on the Basics screen and the Touch Panel shows which drawer holds which copy paper size.

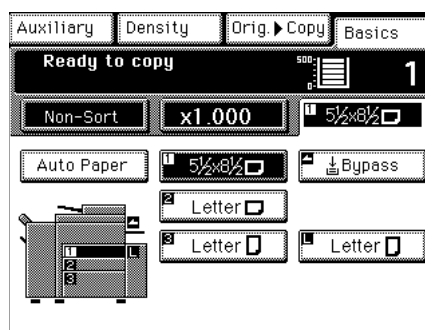

11550234EC

- 2 Touch the desired paper size key.

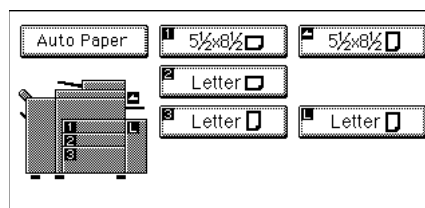







11550236EA

- |                     |                                  |
|---------------------|----------------------------------|
| <b>1</b> 1st Drawer | <b>L</b> Manual Bypass           |
| <b>2</b> 2nd Drawer | <b>L</b> Large Capacity Cassette |
| <b>3</b> 3rd Drawer |                                  |


### 3. Selecting the Paper
 
#### Special Paper Setting


If the symbol , , , , or  appears on the paper select key on the Touch Panel, it means that particular drawer has been designated for special paper.

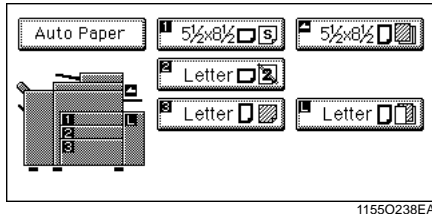

The copier provides five different types of special paper setting, each having a specific purpose as detailed below. The setting can be made by using User's Choice. [p. 4-18](#)

 : Recycled paper

 This setting precludes the Auto Paper mode. You may be using both recycled as well as plain paper loaded in your copier. If, for example, you make this setting for the drawer loaded with recycled paper, the copier does not select that particular drawer in the Auto Paper mode. This allows you to make copies on plain paper first.

 : Disabling 2-sided copying


This setting precludes 2-sided copying.

 : Cover/Inserts

This setting precludes both Auto Paper mode and Automatic Drawer Switching. Make this setting for the paper for cover/inserts (e.g., colored paper), preventing that paper from being used for other purposes.

 : Cover

This setting precludes both Auto Paper mode and Automatic Drawer Switching. Make this setting for the paper for covers (e.g., colored paper), preventing that paper from being used for other purposes.

 : Inserts

This setting precludes both Auto Paper mode and Automatic Drawer Switching. Make this setting for the paper for inserts (e.g., colored paper), preventing that paper from being used for other purposes.

#### Auto Drawer Switching

If the drawer currently selected for use runs out of paper and there is another drawer loaded with paper of the same size and in the same direction, the copier automatically selects that second drawer to continue copying.

#### Useful Tip

*This feature is a great advantage when you need to make a large number of copies on the same size paper. For example, you can make up to 3,850 copies without interruption if all three drawers and Multi Bypass Tray are loaded with paper of the same size and in the same direction. You can even make up to 7,250 copies if an optional Large Capacity Cassette is additionally fitted to the copier.*

## Manual Bypass Copying


- Use the Manual Bypass to make copies on paper not loaded in any drawer, or to copy onto OHP transparencies, thick paper, or any other special paper.
- When using the Multi Bypass Tray, you can load multiple sheets of copy paper.
- The setting of copy paper size is needed for manual bypass copying.
- Manual Bypass cannot be used for a reserved job.

### Copy Paper that Can be Used for Manual Bypass


- ◆ Types of Paper
  - Plain paper (weighing 16 to 24 lbs.)
  - Thick paper (weighing 24-1/4 to 41-3/4 lbs.)
  - Recycled paper, OHP transparencies
- ◆ Paper Size
  - Max. Size : 11-3/4"×17"
  - Minimum Size: 4"× 5-3/4"
- ◆ Capacity of the Multi Bypass Tray
  - Plain paper, Recycled paper...Up to 50 sheets
  - Plain paper (once-copied paper)...Up to 20 sheets
  - Thick paper, OHP transparencies...Up to 20 sheets

### Using the Intelligent Multi Bypass Tray

- 1 Place the original on the Original Glass and make the control panel settings.
- 2 Swing down the Bypass Tray and insert a neat stack of copy paper into the tray until it stops.  
\*Slide the Tray Extender out when using large-size copy paper.

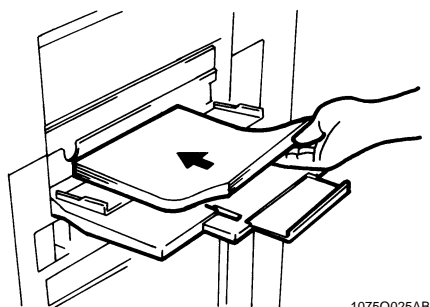

- 3 Slide the Paper Guide Plate to the size of the copy paper.

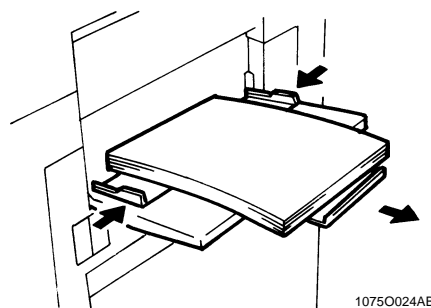


#### NOTES

- The paper should be loaded no higher than the ▼ (Max. Level Indicator).
- Before inserting, fan the paper stack well if you are using OHP transparencies.
- Correct any curl if you are using thick paper.
- For making copies on thick paper or OHP transparencies, the following functions cannot be used: 1 ► 2, Booklet Creation, Staple, Hole Punch, Folding Options.
- The paper will be copied on the side facing up.



3. Selecting the Paper

4 Select the desired copy paper size.

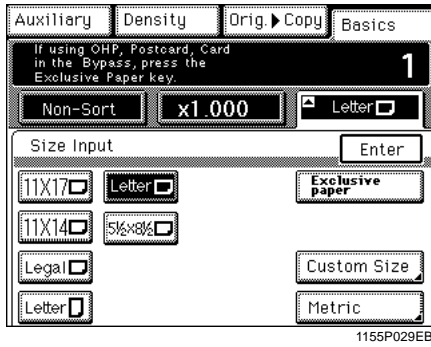


1155P029EB

5 Touch **Enter**.


<Changing the Paper Size>

- Touch **Paper** and **Size Input** on the Touch Panel.

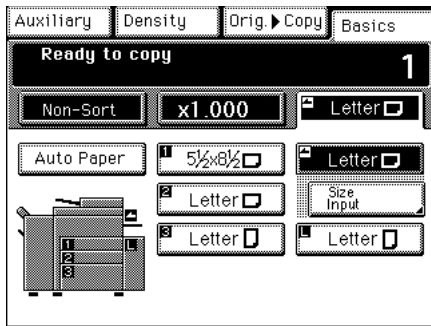

1155O656EB

- Select the desired copy paper size.

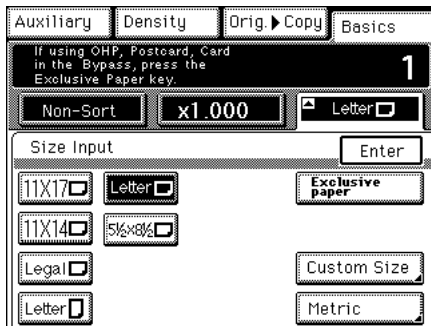


1155P029EB

- Touch **Enter**.

<Using Metric Size Paper>

When you want to use metric size paper, touch **Metric** on the screen given in step 4 and you have a screen that allows you to select an metric paper size.

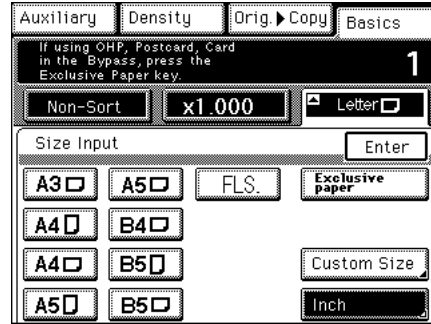


1155P030EB


## 3. Selecting the Paper

## &lt;Using Nonstandard Size Paper&gt;

- When you use a nonstandard size paper, touch **Custom Size** on the screen given in step 4 and you have the following screen.

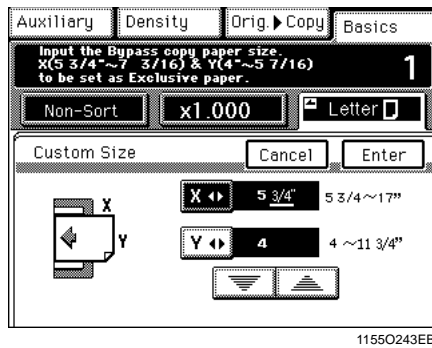

- Touch or to set the whole number for X and touch the **X** key. The underline moves to the number and the **X** key. Now the value for X has been fixed.

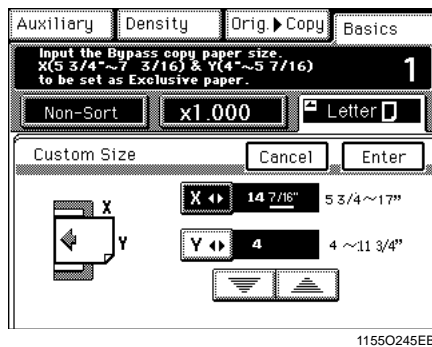


- Do the same for Y, then touch **Enter**.

## &lt;Using Exclusive Paper&gt;

Exclusive Paper: Thick paper and OHP transparencies.

After a paper size has been selected in step 4, touch **Exclusive paper**.

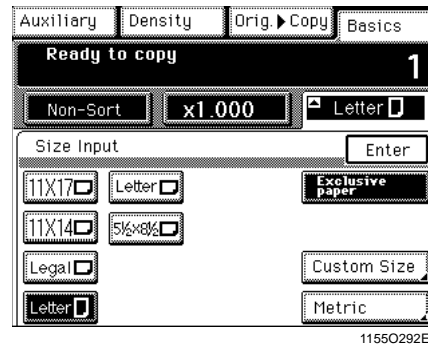**NOTES**

- The Exclusive Paper mode is automatically selected when a length in the range of 5-3/4" ~7-3/16" is entered for X and a width in the range of 4" ~5-7/16" is entered for Y using Custom Size.
- When a multi-page document is copied using the Electronic Document Handler, the page order of the originals is reversed in the copy set.
- When making copies of a multi-page document through the Glass, start with the last page and go in descending order.


**Useful Tips**

- Exclusive Paper setting precludes 1 ► 2, Booklet Creation, Staple Mode, Punch Mode and Folding Options.
- This setting prevents that paper from being used for other purposes.
- This setting ensures that the copier uses the paper path for exclusive paper.

## 4. Selecting the Zoom

### Zoom Ratio


In the following pages, we explain how to select the zoom ratio. When you touch **Zoom** after touching **Basics** on the Touch Panel, a screen appears that allows you to set the zoom ratio. You have six different ways to choose from to set the zoom ratio. Select one according to your need.

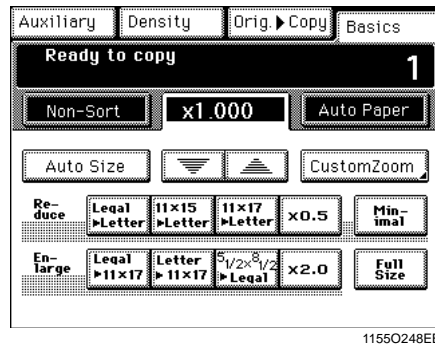

### Auto Size

In the Auto Size mode, the copier automatically selects the zoom ratio according to the size of the original being used and the copy paper size selected for use.

- 1 Touch **Auto Size** to set the copier into the Auto Size mode.

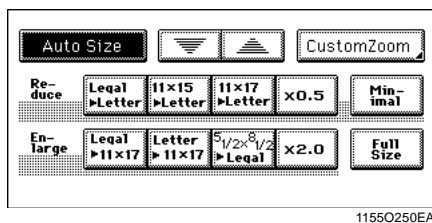

- 2 Select the paper size.  
(Copy Paper Size p. 3-9)


#### Useful Tips

- This mode is very helpful for neat filing when you need to make copies from originals of assorted sizes.
- Priority settings for the initial mode can be made using User's Choice.

### Selecting the Fixed Zoom

The copier provides most frequently used zoom ratios ready for immediate use.

- 1 Touch the appropriate original-to-copy-size representation key. You have four reduction and four enlargement ratios.

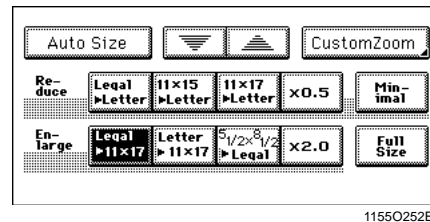

When you touch **Full Size**, full size (×1.000) is selected.


#### NOTE

When the document handler is used, the copier determines the zoom ratio when the first original is taken up and fed in and uses that zoom ratio for the subsequent originals (except in the Mixed Original Detection mode.)

### For a Slightly Smaller Image

This function lets you make a copy slightly reduced in image size from that of the original.

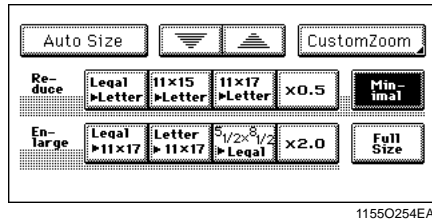

**I** Touch **Minimal**.




#### Useful Tips

- A ratio of  $\times 0.930$  has been factory-programmed in Minimal, but that ratio can be changed as necessary. *☞* p. 4-6
- It comes in handy for making a copy, without losing any portion of the original image, from an original which has an image area covering its entire surface.



### Using Zoom Up/Down Keys

Pressing the  or  key changes the zoom ratio in 0.001 increments. You can hold down the key to change the ratio quickly.

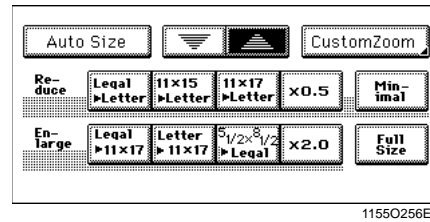**I** Hold down the  or  key until the desired zoom ratio is reached.



#### Useful Tips

- To save time, first select the fixed zoom ratio nearest to the target ratio before using the  or  key.
- The zoom ratio can be set within the range  $\times 0.250$  to  $\times 4.000$  when placing the original face down on the Original Glass. When using the Document Handler, the ratio can be set within  $\times 0.250$  to  $\times 2.000$ .


## 4. Selecting the Zoom

## Using the 10-Key Pad


You may use the 10-Key Pad to directly enter the zoom ratio.

<Same ratio for X and Y>

1 Touch **Custom Zoom**.

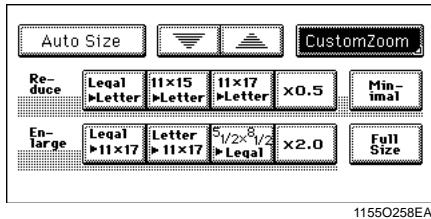

2 Enter the desired zoom ratio from the 10-Key Pad.

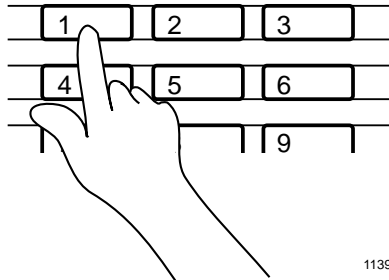**Useful Tips**

Example:  $\times 1.300$

Press 1, 3, 0, and 0, in that order.

**x 1.300**


1149O160BA

- To correct a ratio, press the **C** key and then enter the correct one again.
- The zoom ratio can be set within the range  $\times 0.250$  to  $\times 4.000$  when placing the original face down on the Original Glass. When using the Document Handler, the ratio can be set within  $\times 0.250$  to  $\times 2.000$ .


3 Touch **Enter**.

<Using the X / Y Zoom>


1 Touch **Custom Zoom**.

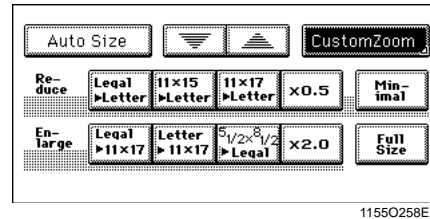

2 Touch **X / Y Zoom**.

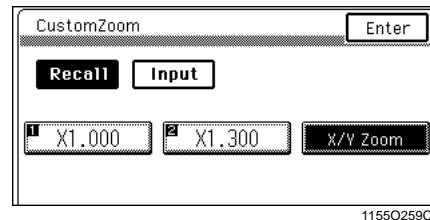

3 Touch **X** and enter the zoom ratio from the 10-Key Pad. Then do **Y**.

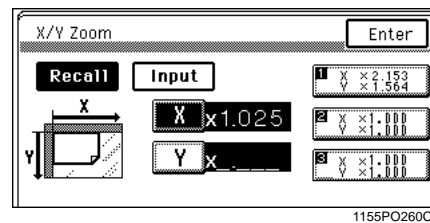**Useful Tips**

- To correct a ratio, press the **C** key and then enter the correct one again.
- The zoom ratio can be set within the range  $\times 0.250$  to  $\times 4.000$  when placing the original face down on the Original Glass. When using the Document Handler, the ratio can be set within  $\times 0.250$  to  $\times 2.000$ .


4 Touch **Enter**.

## Calling up a Ratio from Memory

You can store some of the most frequently used zoom ratios in memory and recall them later as necessary.


<Same ratio for X and Y>

1 Touch **Custom Zoom**.

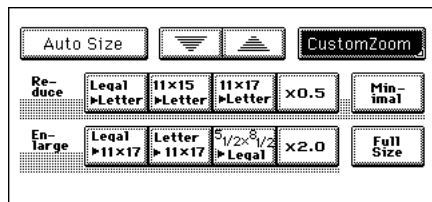

1155O258EA

2 From among the two ratios previously stored in memory, select the desired one.

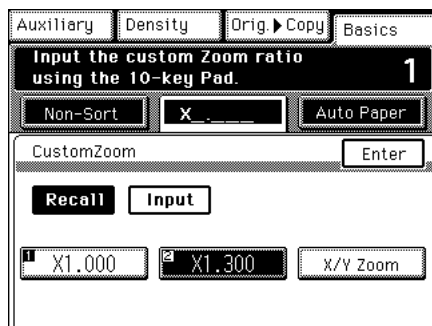

1155O261CB


### Useful Tip

It's a good idea for you to store frequently used zoom ratios in memory. [p. 3-18](#)

3 Touch **Enter**.


<Using the X/Y Zoom>

1 Touch **Custom Zoom**.

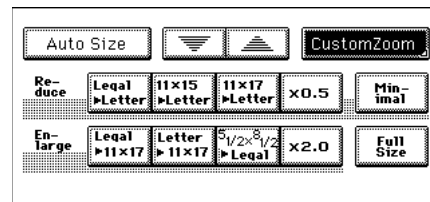


1155O258EA

2 Touch **X / Y Zoom**.

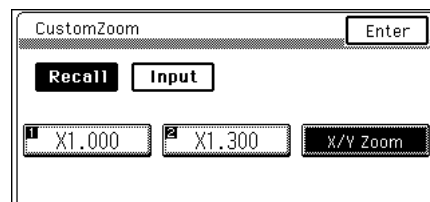

1155O259CA

3 From among the three ratios previously stored in memory, select the desired one.

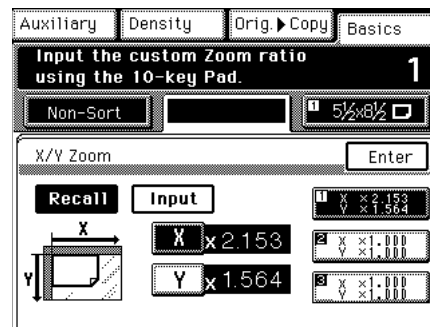

1155O263EA

### Useful Tip


It's a good idea for you to store frequently used zoom ratios in memory. [p. 3-18](#)

4 Touch **Enter**.


## 4. Selecting the Zoom

## Storing a Ratio in Memory

&lt;Same ratio for X and Y&gt;

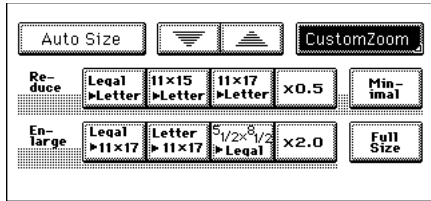
1 Touch **Custom Zoom**.

1155O258EA

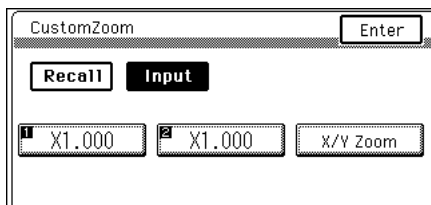
2 Touch **Input**.

1155O264CB

3 Enter the desired zoom ratio from the 10-Key Pad.

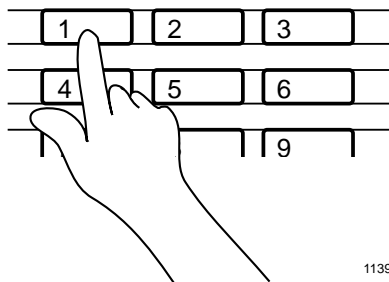

1139O4870A

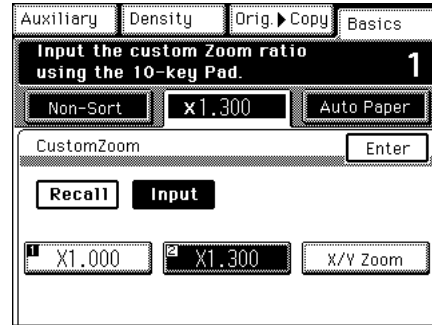4 Touch memory location key **1** or **2** in which to store the set zoom ratio.

1155O265CB

\* When the key is touched, the ratio is shown on the key, indicating that it has been stored in memory.

## NOTES

- When a new ratio is stored, the old one is erased.
- The ratios may also be stored in memory by using the Utility Mode. *☞* p. 4-6

5 Touch **Enter**.

## Useful Tips

Example:  $\times 1.300$ 

Press 1, 3, 0, and 0, in that order.


1149O160BA

- To correct a ratio, press the **C** key and then enter the correct one again.
- The zoom ratio can be set within the range  $\times 0.250$  to  $\times 4.000$  when placing the original face down on the Original Glass. When using the Document Handler, the ratio can be set within  $\times 0.250$  to  $\times 2.000$ .


## 4. Selecting the Zoom

<Using the X/Y Zoom>


- 1 Touch **Custom Zoom**.

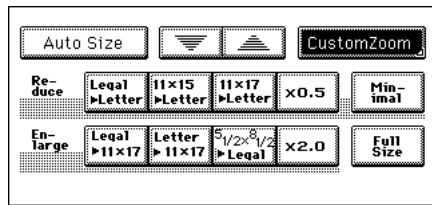


- 2 Touch **X/Y Zoom**.

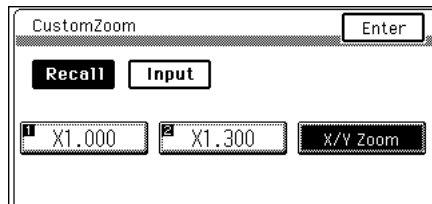


- 3 Touch **Input**.

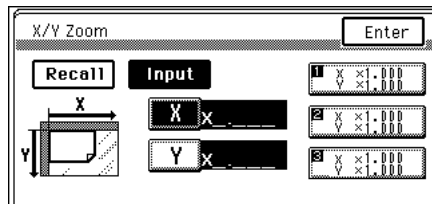

- 4 Touch the **X** or **Y** key to enter the desired zoom ratio from the 10-key Pad.

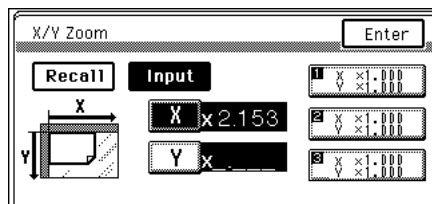

- 5 Touch memory location key **1**, **2** or **3** in which to store the set zoom ratio.

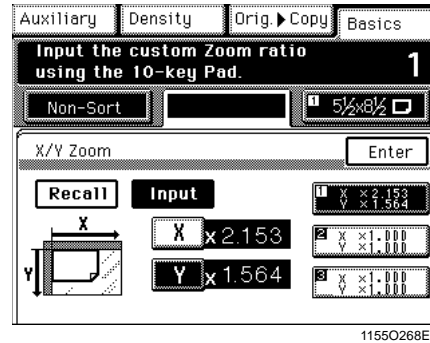

\* When the key is touched, the ratio is shown on the key, indicating that it has been stored in memory.

**NOTE**

When a new ratio is stored, the old one is erased.

- 6 Touch **Enter**.




## 5. Selecting the Finishing

In the following, we explain about different finishing functions and setting procedures.

When **Finishing** is touched on the Touch Panel, a screen appears that allows you to set a particular finishing function.

### Finishing Functions

#### Non-Sort

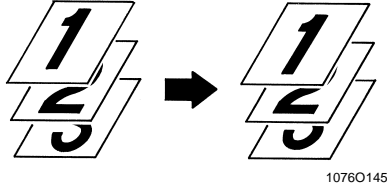


- All copies are fed out without being sorted, grouped, stapled or punched.  
Touch **Non-Sort**.

#### NOTE


*Thick paper and OHP transparencies cannot be used for making copies in Staple, Punch and Folding.*

#### Sort

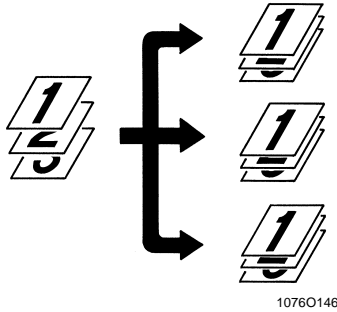


- This function is effective when making multiple copies from multiple originals. Copies are sorted into complete sets of the originals.  
Touch **Sort**.

#### Group

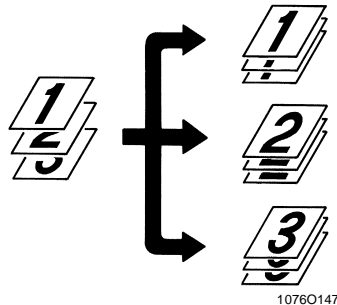

- The copies made from each original are separated into groups. Each group contains the same number of copies.  
Touch **Group**.


## Staple

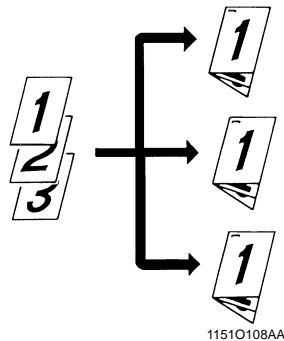

<Only when the Finisher or Mailbin Finisher is mounted>

- This function is effective when making multiple copies from multiple originals. Copies are sorted or grouped into complete sets of the originals and then stapled.
  - Only when the Finisher FN-3 is mounted, this feature is efficient for stapling originals after making copies. ☞ p. 3-26
- Touch **Staple**.

## Hole Punch

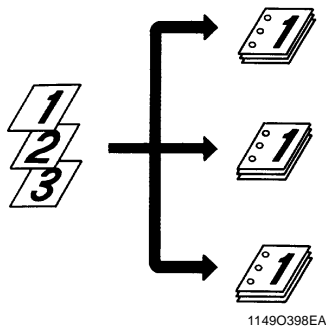

<Only when the Finisher or Mailbin Finisher is mounted>

- Holes are punched in the copy sets or stacks for filing. It can be combined with Non-Sort, Sort, Group or Staple.
- Touch **Hole Punch**.

## Folding



<Only when the Finisher FN-3 is mounted>

- This function allows you to fold copies.
- Touch **Fold**.

\* You have a choice of folding options, either Crease, Half-Fold or Z-fold. ☞ p. 3-28


**Useful Tip**

The copier has been factory-set to automatically select Non-Sort in the initial mode. Also, the copier automatically switches between Sort and Non-Sort depending on the number of originals loaded in the Document Handler and the number of copies to be made. User's Choice can, however, be used to change these default settings. ☞ p. 4-16

## Selecting the Finishing Function

### Sort/Group

- 1** Touch the desired finishing function key.

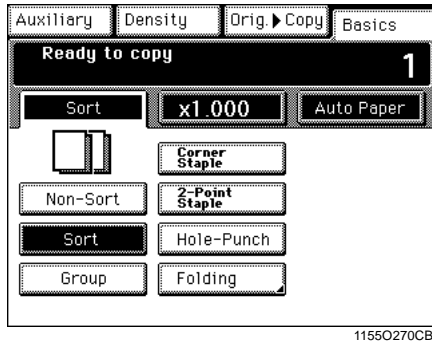

11550270CB

#### NOTES

- When either the Finisher FN-102 or Mailbin Finisher is mounted, copies are fed out in a sawtooth manner in Sort or Group mode. When the Finisher or Mailbin Finisher are not mounted, copies are fed out in a crisscross manner in Sort or Group mode. Only when the Finisher FN-3 is mounted, copies are fed out in a crisscross manner.
- Crisscross sorting is possible only when all of the following conditions are met:
  - Crisscross Mode of User's Choice is turned ON.
  - The copier is loaded with paper of the same size, but in two different directions.
  - Mixed Original Detection is turned OFF.
  - None of the Staple, Hole Punch, Folding, Page Insertion, and Cover functions are set.

#### Useful Tips

- If Crisscross is set to ON in User's Choice, sorted copy sets will be stacked in a crisscross manner, one set stacked lengthwise on top of another set stacked crosswise. Otherwise, if Crisscross is set to OFF, the sorted copy sets will be stacked together in the same direction.
- The default setting for Crisscross is ON. This can be changed to OFF in User's Choice.

☞ p.4-16

#### Useful Tips

- **Shift Sorting**  
The sorted copy sets are stacked in the same direction, but in a sawtooth manner by shifting the tray to the front or rear for each set.



11660033AB

- **Crisscross Sorting**  
The sorted copy sets are stacked in a crisscross manner, one set stacked lengthwise on top of another set stacked crosswise.



11660034AB

- **Shift Grouping**  
The sorted copy stacks are stacked in the same direction, but in a sawtooth manner by shifting the tray to the front or rear for each stack.



11660035AB


- **Crisscross Grouping**  
The sorted copy stacks are stacked in a crisscross manner, one stack stacked lengthwise on top of another stack stacked crosswise.




11660036AB

## Hole Punch


1 Touch the desired finishing function key.

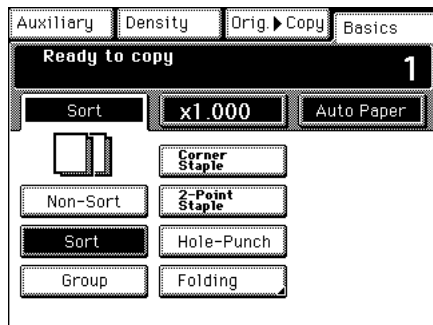


2 Touch **Hole Punch**.

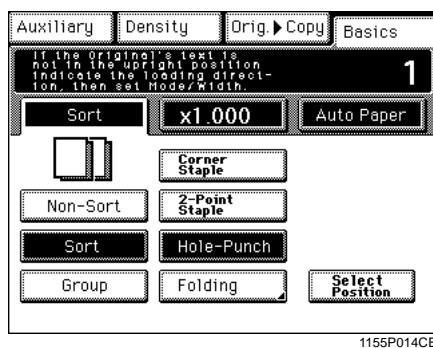

3 Touch **Select Position**.

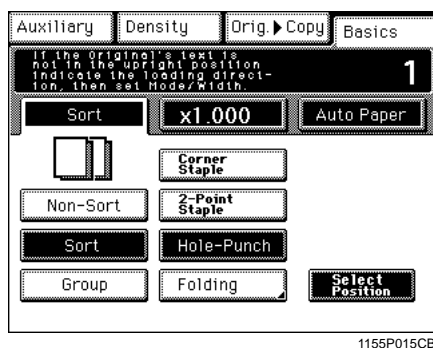

4 Touch the desired hole-punching position.

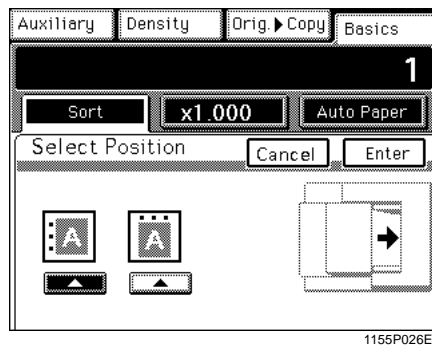


5 Touch **Enter**.

### NOTES

- The size of the copy paper for Hole Punch is 11"×17"L, LegalL, LetterL and LetterC only.
- Hole Punch is not possible in the Interrupt mode.
- When making copies in the Hole Punch Mode, make sure to load the originals into the Document Handler in the correct direction. *p. 3-31*

<Only when the Finisher FN-3 is mounted>

- The number of punch holes can be changed between "2-Hole" and "3-Hole" by using the Knob located inside the Finisher.
- \*When changing the setting for the number of holes to be made, be sure the ▲ marks are aligned.

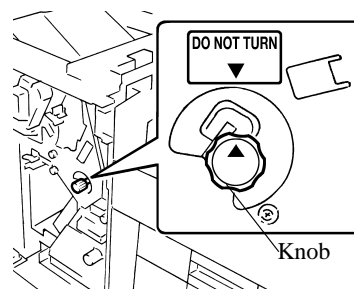

Pull out Knob: 2-Hole



Push in Knob: 3-Hole




\*The number of punch holes can be graphically identified on the Display.

## 5. Selecting the Finishing


## Staple

<Only when the Finisher FN-3 is mounted>

1 Touch the desired finishing function key.

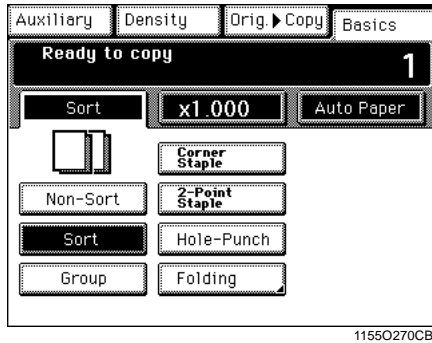


2 Touch the stapling key of your choice.

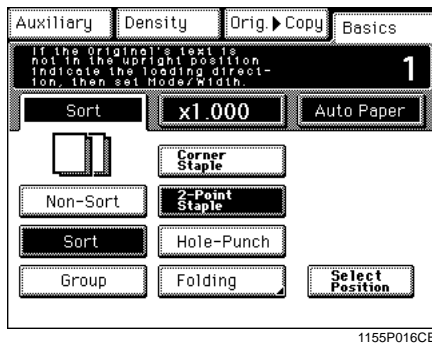


You have a choice of the following two stapling types.

 • Corner Staple




Paper size :  
11"×17"L, LegalL,  
LetterL, LetterC  
Number of sheets :  
2 ~ 50

 • 2-Point Staple



 Paper size :  
11"×17"L, LegalL,  
LetterL, LetterC  
Number of sheets :  
2 ~ 50




Paper size :  
11"×17"L, LetterL  
Number of sheets :  
2 ~ 15

11550768EA

\* When you touch a stapling key, the sorter is automatically set into the Sort mode.


3 Touch **Select Position**.

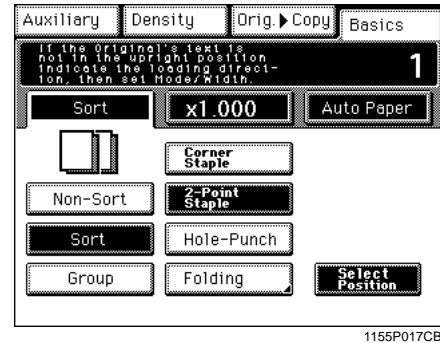

**NOTES**

- The stapling position cannot be specified if Corner Staple is selected.
- Although Hole Punch is combined with Corner Staple, you can specify the stapling position.

4 Touch the desired stapling position on the Touch Panel.

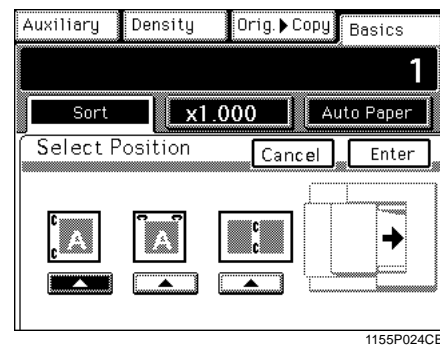


5 Touch **Enter**.

**NOTES**


- Stapling is not possible in the Interrupt mode.
- Note the correct direction of the originals when making copies in the Sort Staple Mode.  
☞ p. 3-30

<Only when the Finisher FN-102 or Mailbin Finisher is mounted>

**1** Touch the desired finishing function key.

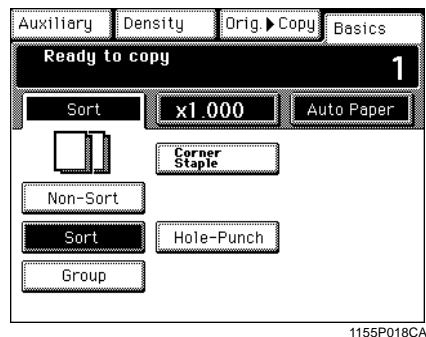

**2** Touch **Corner Staple**.

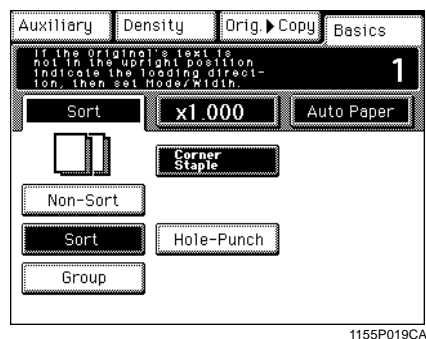

#### NOTES

- The stapling is not possible in the Interrupt mode.
- Stapling position cannot be specified if the copier is equipped with a Finisher FN-102 or Mailbin Finisher. Only when Hole Punch is combined with Staple, can you select the stapling position.
- Note the correct direction of the originals when making copies in the Staple Mode.  
☞ p. 3-30
- 2-Point Staple cannot be selected if the copier is equipped with a Finisher FN-102 or Mailbin Finisher.

#### Useful Tip

Paper size : 11"×17L" to Letter


Number of sheets : 2 to 50

Kinds of Paper: Plain paper, Recycled paper

## 5. Selecting the Finishing


**Manual Staple**

- 1** Open the Manual Staple Tray Cover.

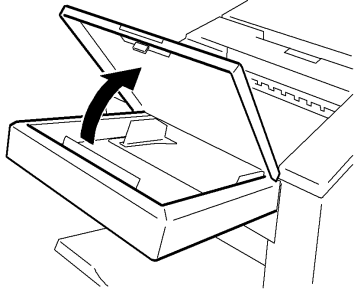


1155O033AA

- 2** Align the sheets of paper neatly.

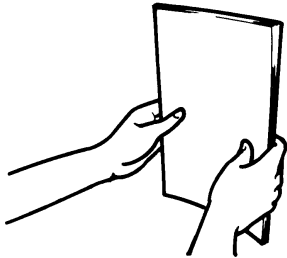

1134O039AA

- 3** Insert a neat stack of papers face down into the Staple Tray.

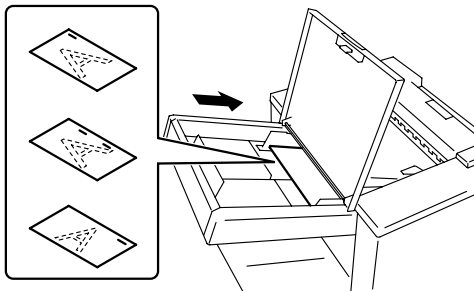


1155O036AB

**NOTES**

- Make sure of the stapling position and press the paper stack against the end bracket.
- Up to 50 sheets of plain paper can be stapled.

- 4** Slide the Paper Guide Plate to the size of the copy paper.

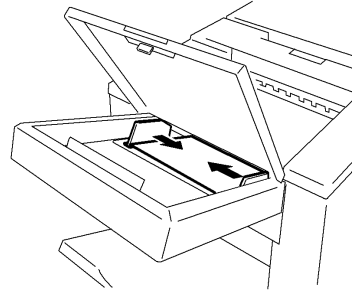


1155O034AA

**NOTE**


Make sure that the Paper Guide Plates are in touch with the edge of the paper stack.

- 5** Close the Manual Staple Tray Cover.

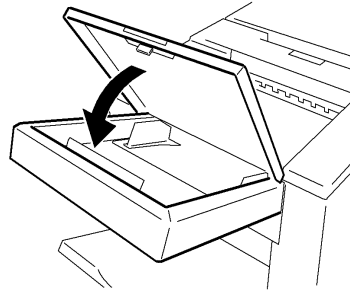


1155O035AA

- 6** After you hear the mechanism stop, select the desired stapling type on the Finisher Panel.

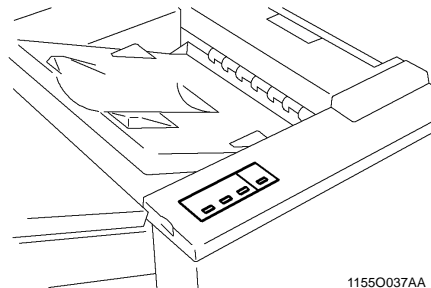


1155O037AA

 You have a choice of the following three stapling positions.



 Paper size :  
11"×17"L, LegalL,  
LetterL, LetterC  
Number of sheets :  
2 ~ 50





Paper size :  
11"×17"L, LegalL,  
LetterL, LetterC  
Number of sheets :  
2 ~ 50



Paper size :  
11"×17"L, LegalL,  
LetterL, LetterC  
Number of sheets :  
2 ~ 50

 1155O769EA

- 7** Press . This staples the copy stack or set.

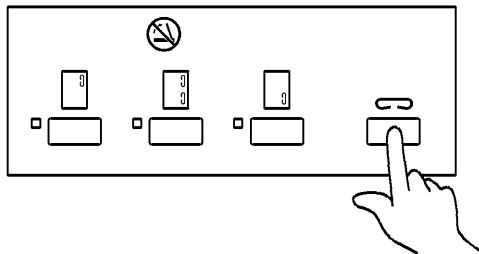


1155O038AA

### Useful Tip

*This feature is useful for stapling originals after making copies.*

- 8** Open the Manual Staple Tray Cover and remove the stapled paper stack.

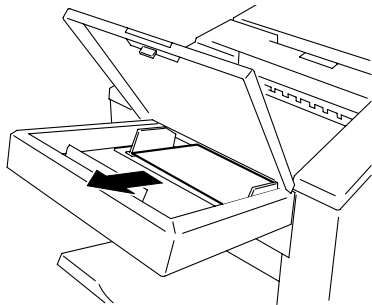

1155O760AA


- 9** Close the Manual Staple Tray Cover.



5. Selecting the Finishing


**Folding**

1 Touch the desired finishing function key.

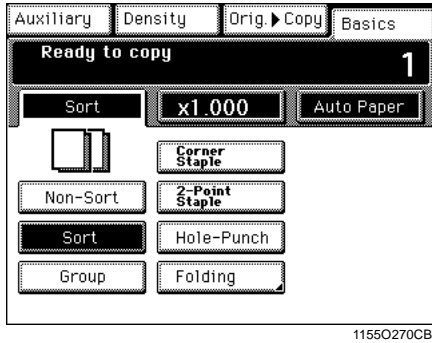


1155O270CB

2 Touch **Folding**.

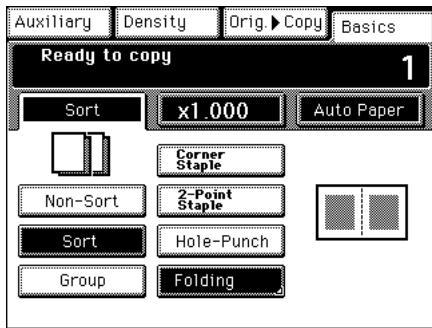

1155O275CB

3 Touch the desired folding mode.

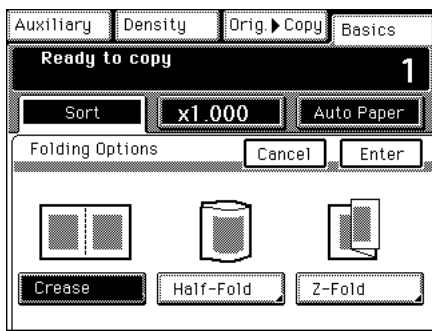


1155O276CB

**NOTE**  
Select the finished copy size when selecting the Z-Fold function.

4 Touch **Enter**.

<Crease>

Crease makes a crease in the copy at its center before it is fed out.

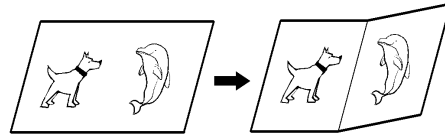


1155O039AA

Sizes of paper that can be loaded:  
11"×17"L, LetterL

**NOTE**

Make sure to select the correct stapling function when making copies with the Crease function if you want to make a stapled copy set.

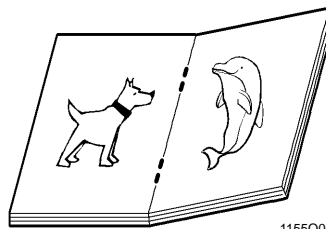


1155O040AA

## 5. Selecting the Finishing

## &lt;Half-Fold&gt;

Half-Fold folds the copy in two at its center with the copy surface on the outside.

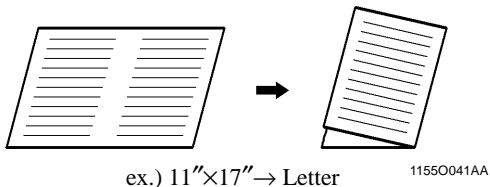


Sizes of paper that can be loaded: 11"×17"L  
\*The finished copy size has a length half that of the paper loaded in the copier.

**NOTE**

*Half-Fold cannot be used if you make a copy from an original placed directly on the Original Glass.*


**Useful Tip**

*You can produce a document that looks like below by combining this function with Staple and Hole Punch.*

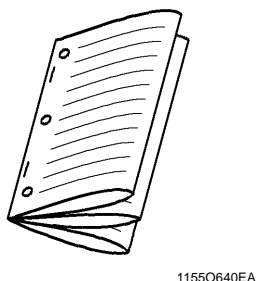

## &lt;Z-Fold&gt;

Z-Fold folds the copy into three parts with the copy surface inside as shown below.

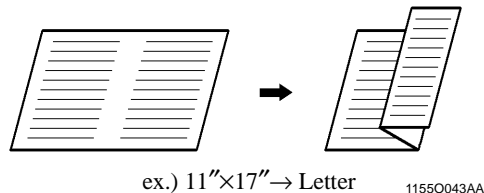


Sizes of paper that can be loaded: 11"×17"L  
\*The finished copy size has a length half that of the paper loaded in the copier.

**NOTES**

- *Z-Fold cannot be used if you make a copy from an original placed directly on the Original Glass.*
- *Even if control panel settings are made to make 2-sided copies from 1-sided originals, the copies to be Z-Folded will be 1-sided.*
- *If control panel settings are made to make 2-sided copies from 2-sided originals, the copies to be Z-Folded will be 2-sided.*

**Useful Tip**

*This feature comes in handy when you combine it with Mixed Original Detection to make a document of the same size or when you make copies for filing.*

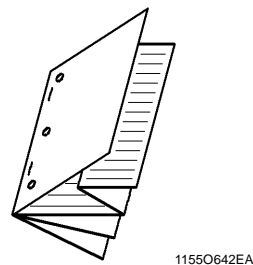

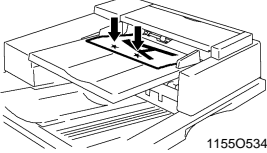

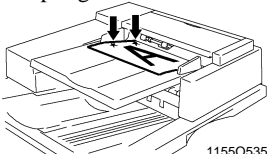
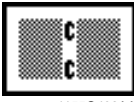
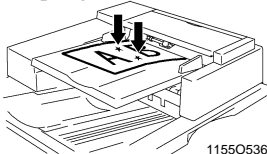


## Loading the Originals



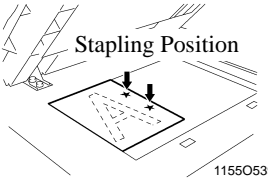

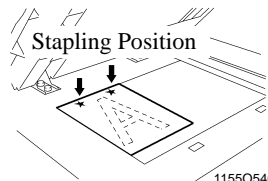
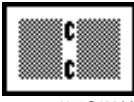
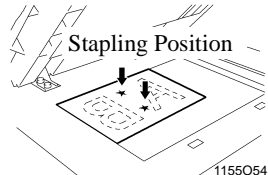
### Staple

Note the correct direction of the originals if the copies are to be stapled in Staple Mode.

<Using the Document Handler>

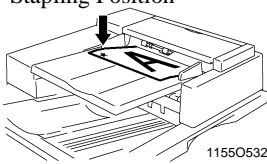	Panel	Original Placement
Corner Staple	—	<p>Stapling Position</p>  <p>1155O532AA</p>
	 1155O430AA	<p>Stapling Position</p>  <p>1155O534AA</p>
2-Point Staple	 1155O431AA	<p>Stapling Position</p>  <p>1155O535AA</p>
	 1155O432AA	<p>Stapling Position</p>  <p>1155O536AA</p>

<Placing the Original on the Glass>

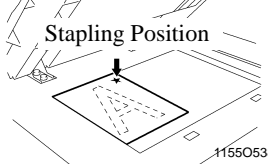	Panel	Original Placement
Corner Staple	—	<p>Stapling Position</p>  <p>1155O538AA</p>
	 1155O430AA	<p>Stapling Position</p>  <p>1155O539AA</p>
2-Point Staple	 1155O431AA	<p>Stapling Position</p>  <p>1155O540AA</p>
	 1155O432AA	<p>Stapling Position</p>  <p>1155O541AA</p>


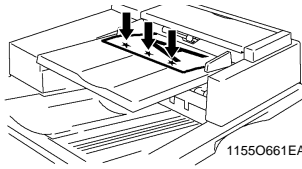

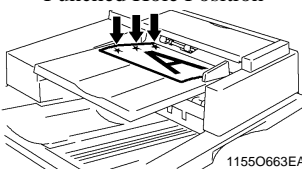
**Useful Tip**

Refer to the instruction labels on the machine or the Document Handler.


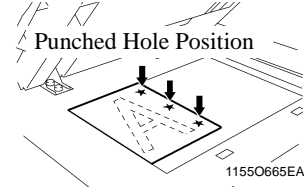

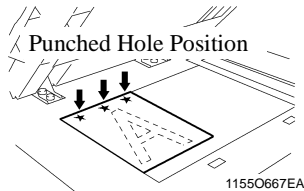
## Hole Punch

Note the correct direction of the originals if the copies are to be punched using Hole Punch.

<Using the Document Handler>

Panel	Original Placement
 <p>1155O568EA</p>	<p>Punched Hole Position</p>  <p>1155O661EA</p>
 <p>1155O570EA</p>	<p>Punched Hole Position</p>  <p>1155O663EA</p>

<Placing the Original on the Glass>

Panel	Original Placement
 <p>1155O568EA</p>	<p>Punched Hole Position</p>  <p>1155O665EA</p>
 <p>1155O570EA</p>	<p>Punched Hole Position</p>  <p>1155O667EA</p>

## 5. Selecting the Finishing

**Auto Dual Function****Auto Dual Function in Finishing Mode**

Though the Top Offset Tray can hold only up to 100 sheets, the Auto Dual function permits making copies of up to 2,100 sheets.

<Only when the Finisher FN-3 is mounted>

		Paper Size	Top Offset Tray	Bottom Offset Tray		
				Corner Staple	2-Point Staple	
<b>Non-Sort Sort Group</b>		LetterC	100 sheets	2000 sheets (no staple)		
		11"×17"L, LegalL, LetterL	100 sheets	1000 sheets (no staple)		
		5-1/2"×8-1/2L, 5-1/2"×8-1/2"C	100 sheets	-		
<b>Crisscross Sort</b>		LetterL, LetterC	100 sheets	1000 sheets (no staple)		
<b>Staple</b>	<b>Sort Group</b>	<b>Corner</b>	11"×17"L to Letter	-	100 sets or 1000 sheets	-
		<b>Side</b>	LetterC	-	-	200 sets or 2000 Sheets
	11"×17"L, LegalL, LetterL		-	-	200 sets or 1000 Sheets	
	<b>Center</b>	11"×17"L, LetterL	-	-	100 sets or 1000 sheets	
<b>Folding</b>	<b>Crease</b>	<b>Staple</b>	11"×17"L, LetterL	-	-	100 sets or 1000 sheets
	<b>Half-Fold</b>	<b>Non-Sort, Sort, Group</b>	11"×17"L	10 sheets	50 sheets (no staple)	
		<b>Staple</b>	11"×17"L	-	-	100 sheets
	<b>Z-Fold</b>	<b>Non-Sort, Sort, Group</b>	11"×17"L	10 sheets	50 sheets (no staple)	
<b>Staple</b>		11"×17"L	-	100 sheets	100 sheets	
<b>Mixed Orig. Detection</b>	<b>Z-Folded + Unfolded*</b>	11"×17" (Z-Folded) + LetterC	30 sheets	Z-Folded: 100 sheets Z-Folded + Unfolded*: 1000 sheets (no staple)		
		*Z-Folded: 5 sheets/set Unfolded*: 2 sheets/set	-	Z-Folded: 100 sheets Z-Folded + Unfolded*: 1000 sheets	Z-Folded 100 sheets Z-Folded +Unfolded*: 2000 sheets	

\* Only 11"×17" size paper can be Z-folded. Therefore, if a stack of mixed-size originals (11"×17" and other sizes) is copied in Mixed Original Detection mode, the copy set will contain a mix of Z-folded and unfolded copies.

**NOTE**

When either the Finisher FN-102 or Mailbin Finisher is mounted, the Auto Dual Function is not available.

**Auto Dual Function in Stapling**

If a stapling sequence is attempted and the number of sheets is greater than the stapling capacity, Stapling is automatically canceled and the Finisher is set into the Sort or Group mode, sorting or grouping copies using the Auto Dual function (but no stapling action takes place).

## Note on Stapling

When copies are made using the stapling function, the stapled copy sets may not be neatly stacked on the tray or may even fall off the tray unless certain conditions are met regarding the number of copies to be stapled and the number of copy sets to be made. Use the following table as guide when making copies.


No. of Copies Stapled	Copy Set Capacity					
	When Finisher FN-102 is Mounted			When Mailbin Finisher FN-502 is Mounted		
	2-Point Staple		Corner Staple	2-Point Staple		Corner Staple
	LetterC	11"×17"L, LegalL, LetterL	11"×17"L to Letter	LetterC	11"×17"L, LegalL, LetterL	11"×17"L to Letter
2 copies	200 sets	100 sets	100 sets	200 sets	100 sets	100 sets
3 to 5 copies	150 sets	100 sets	100 sets	150 sets	100 sets	100 sets
6 to 10 copies	100 sets			100 sets		
11 to 20 copies	70 sets			50 sets		
21 to 30 copies	53 sets			33 sets		
31 to 40 copies	45 sets			25 sets		
41 to 50 copies	40 sets			20 sets		

## 6. Selecting the Original ▶ Copy Type


In the following pages, we shall look at how to make the settings for the type of copy you want to make from the type of original you have. When you touch **Orig. ▶ Copy** on the Touch Panel, a screen appears that allows you to set the orig. ▶ copy type.

### Original ▶ Copy Types


Select 1 ▶ 1 to make 1-sided copies from 1-sided originals.

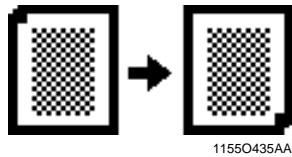


Select 2 ▶ 1 to make 1-sided copies from 2-sided originals.

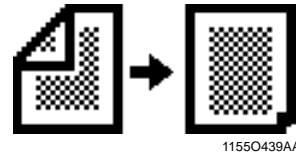


Select 1 ▶ 2 to make 2-sided copies from 1-sided originals.

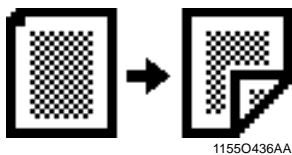


Select 2 ▶ 2 to make 2-sided copies from 2-sided originals.

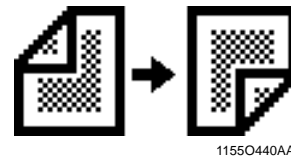


Select 1 ▶ 1 [2in1] to make a 1-sided copy, through reduction, from two 1-sided originals side-by-side.

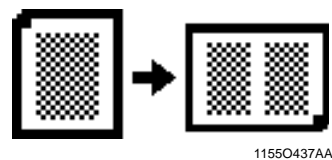


Select 2 ▶ 1 [2in1] <accessed via 2in1> to make a 1-sided side-by-side copy, by reduction, from a 2-sided original.

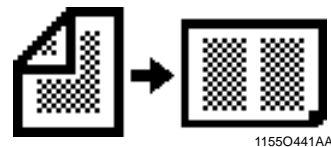

Select 1 ▶ 2 [2in1] to make a 2-sided copy, through reduction, from four 1-sided originals. Each pair of originals will be placed side-by-side on either side of the copy.

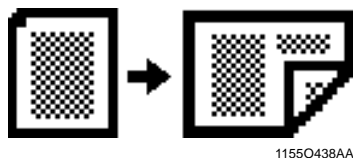


Select 2 ▶ 2 [2in1] <accessed via 2in1> to make a 2-sided side-by-side copy, by reduction, from two-sided originals.

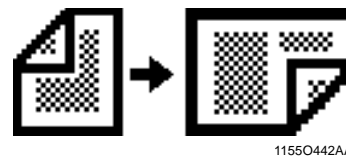


## 6. Selecting the Original ► Copy Type


Select 1 ► 1 [4in1] to copy 4 different 1-sided originals onto one side of a single sheet of paper.

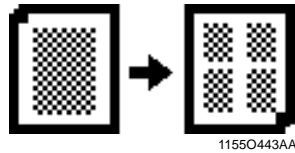


Select 2 ► 1 [4in1] to copy 4 different 2-sided originals (4 pages) onto one side of a single sheet of paper.

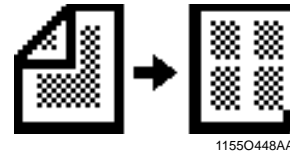


Select 1 ► 2 [4in1] to copy 8 different 1-sided originals onto both sides of a single sheet of paper, each side containing 4 pages of the originals.

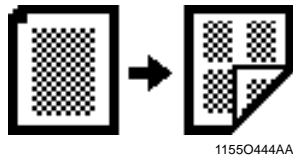


Select 2 ► 2 [4in1] to copy 4 different 2-sided originals (8 pages) onto both sides of a single sheet of paper, each side containing 4 pages of the originals.

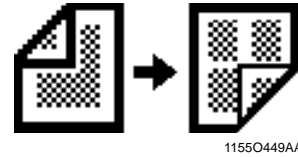


Select 1 ► Booklet Creation to copy 4 different 1-sided originals onto both sides of a single sheet of paper.

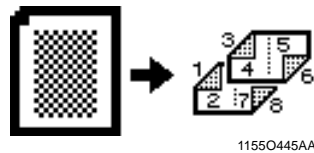


Select 2 ► Booklet Creation to copy 2 different 2-sided originals onto both sides of a single sheet of paper.

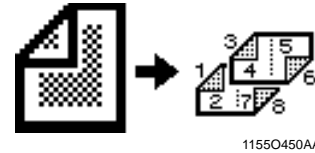


Select Book ► 1 to make 1-sided page-by-page copies of an open book.

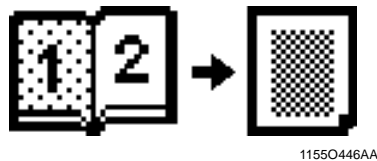

Select Book ► 2 to make a 2-sided copy of an open book. Each page of the open book will be copied onto one side of the copy.

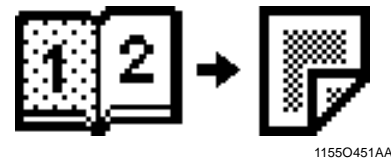

Select Book ► Booklet Creation to copy 4 pages of a book onto both sides of a single sheet of paper.

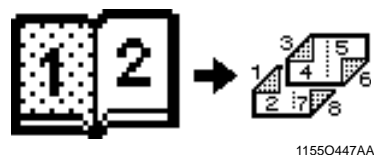




## Selecting the Original ▶ Copy Type

### Using 1 or 2 Originals


1 Load the Originals.

2 Select the Original Type.

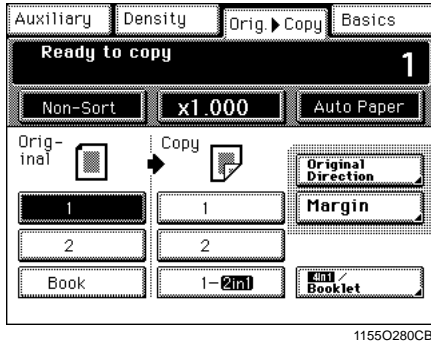


1155O280CB

3 Select the desired copy type.

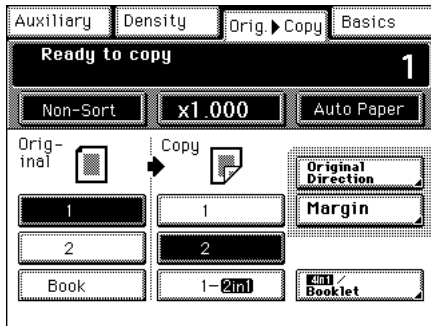


1155O229CB

4 Touch **Original Direction**.

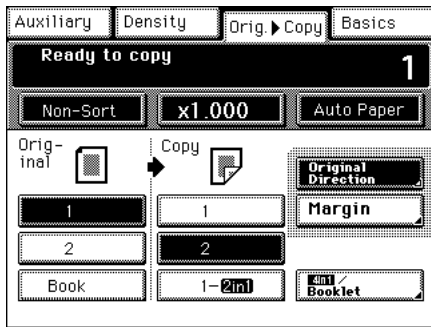

1155O281CB

5 Select the position of the original.

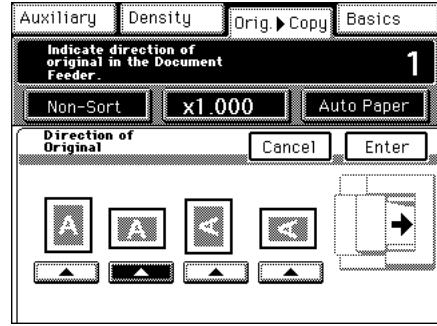


1155O282CB

6 Touch **Enter**.


<To copy using 2 ▶ 2[2in1], Booklet, 1 ▶ 1[4in1], 2 ▶ 2[4in1]>

- Touch **4in1 / Booklet** in step 3.

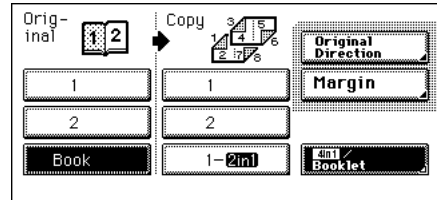

1155O657CB


- Select the desired copy type and touch **Enter**.

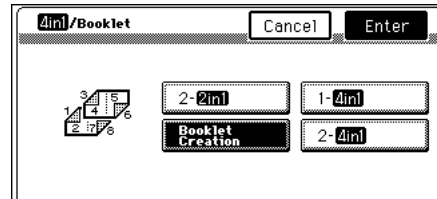


1155O658CA

6. Selecting the Original ▶ Copy Type

**Margin** key for the original:  
 When you're going to make copies using 1 ▶ 2 or 2 ▶ 1, first check to see if your original has a file margin in it. The copier can correct the margin position to make good copies as long as you instruct it properly.

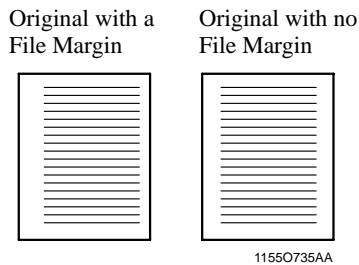


3 Hold down the or key until the desired margin width is reached.

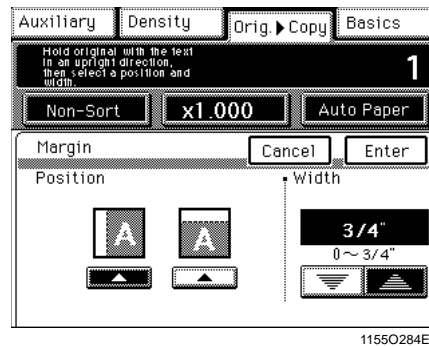


**If your original has a file margin**

1 Touch **Margin**.

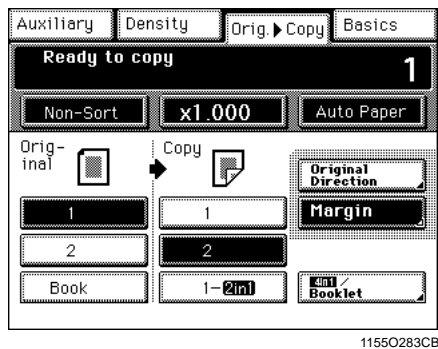


2 Select the desired margin position. You have a choice of the following two Margin Positions.

• Margin Position (Left)

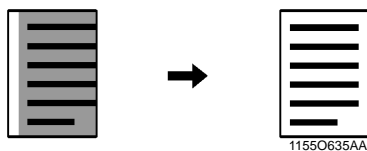

• Margin Position (Top)

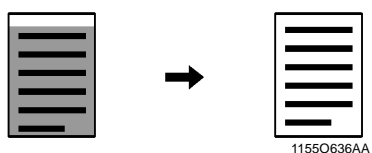


**Useful Tip**  
 You can change the margin width in 1/16" increments within the range 0" ~ 3/4".


4 Touch **Enter**.

**Useful Tips**

- If the margin position is set to Left and width to 0", the image on both the front and back sides of the copy has the same orientation as that on the original.

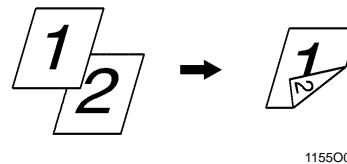

- If the margin position is set to Top and width to 0", the image on the 2nd side of the copy is inverted to that on the 1st side.

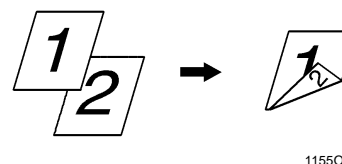

**If your original has no file margin**


It's not necessary to correct the margin position and width if your original has no file margin.

6. Selecting the Original ▶ Copy Type

**Book**


1 Position the book on the glass.

2 Touch **Book**.

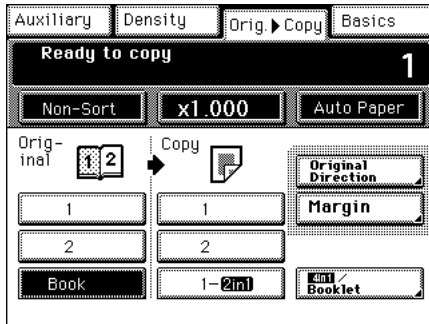


1155O288CB

3 Touch **Standard Book** or **Right Bound**.

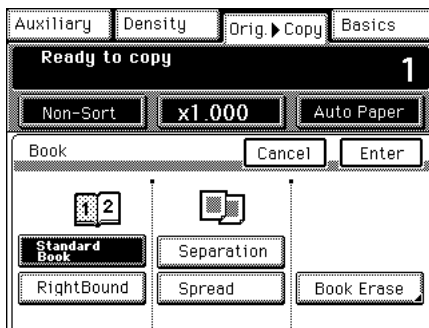


1155O289CB

4 Touch **Separation** or **Spread**.

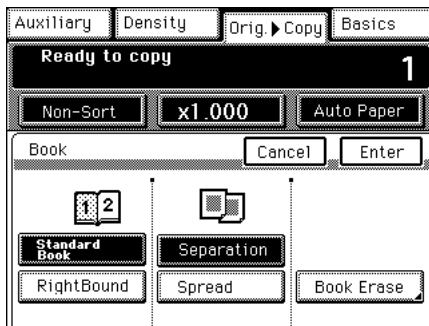

1155O290CB

5 If you want to erase the four edges or center, touch **Book Erase**.

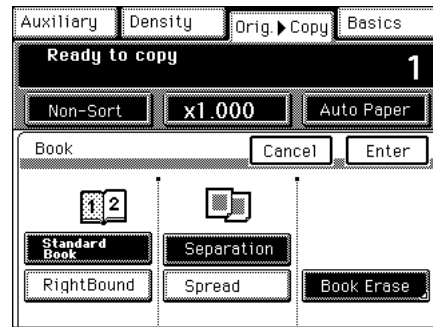



1155O291CB


*Useful Tip*


You have a choice of the following three erase functions.


- Frame Erase  Erase a given width along the four edges.

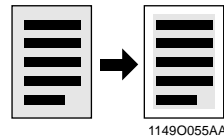

 - Center Erase  Erase a given width down the center.




 - Frame + Center Erase  Erase a given width along the four edges and down the center.




## 6. Selecting the Original ▶ Copy Type

- 6 Select the particular erase function (“Book Erase”).

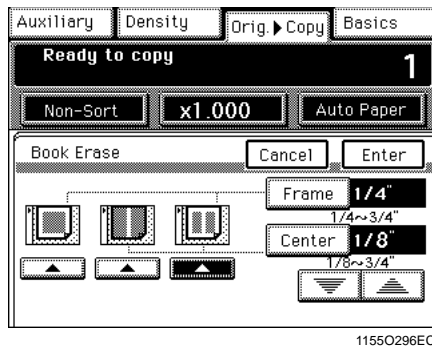

- 7 Touch **Frame** or **Center**, then hold down the or key until the desired erase width is reached. Then, touch **Enter**.

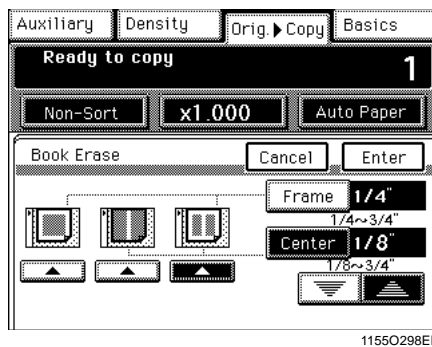
**Useful Tip**

You can change the erase width in 1/6" increments within the following range:

- Frame: 1/4"~3/4"
- Center: 1/8"~3/4"


- 8 Touch **Enter**.

- 9 Touch the **1**, **2** or **Booklet** keys in the Orig. ▶ Copy Mode.

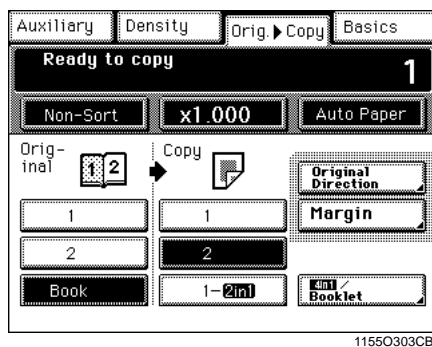


<To copy Using Booklet>

- Touch **4in1 / Booklet** in step 9.

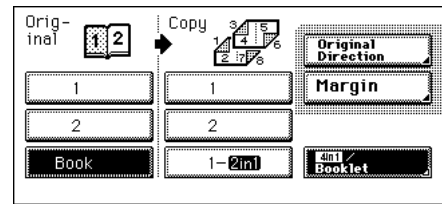


1155O657CB

- Touch **Booklet Creation**.

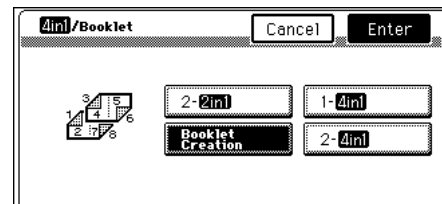

1155O658CA

- Input the copy starting page position and last page position. Then touch **Enter**.

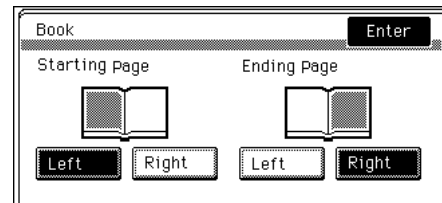


1155O659CA

6. Selecting the Original ▶ Copy Type


<To copy using Separation and 2-sided>

- Touch **Page arrange**.

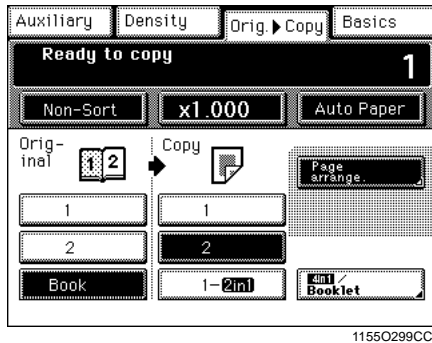


You have a choice of the following two arrangement types.


- Book Order

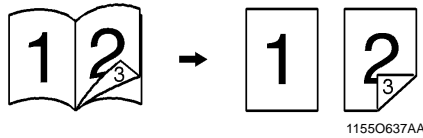

- Standard

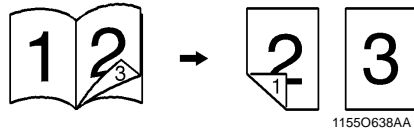

- Select the desired page arrangement.

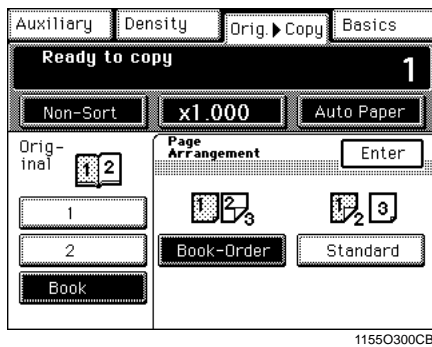


- Touch **Enter**.

## Some Precautions for Making Copies


### Precautions for Book Copying

- Place the open book so that its top edge is at the rear of the copier and the center of the book is aligned with the Book Marker indicated on the Original Length Scale.
- Make copies in descending order of page.
- Select the desired zoom ratio and copy paper size.

#### Placing the Book on the Glass Correctly

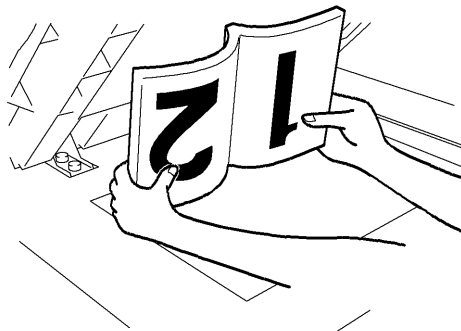

1155O027AA

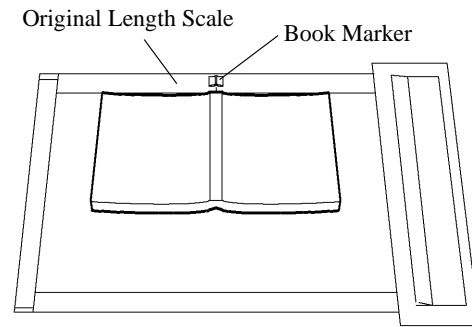

1155O697AA

### Precautions for 2-in-1, 4-in-1 and Booklet Copying


- When the 2-in-1, 4-in-1 or Booklet function is selected, the copier automatically selects a default zoom ratio. However, you can choose another zoom ratio by changing the User's Choice setting. ☞ p. 4-16
- User's Choice also allows you to program a specific page order for 4-in-1. ☞ p. 4-17

## 7. Selecting the Density

### Image Density

In the following pages, we explain how to set the exposure level for the image density.


When you touch **Density** on the Touch Panel, a screen appears that allows you to set the exposure level for the image density. You have a choice of three different ways to adjust the exposure level: Auto Exposure, Manual Exposure, or Photo mode. Select the appropriate mode according to your particular needs.

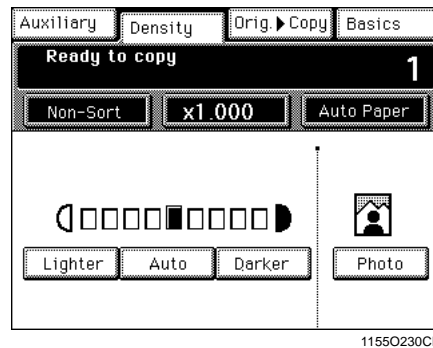

#### Auto Exposure

When in the Auto Exposure mode, the copier automatically adjusts the exposure level for the optimum copy image density.

- 1 Touch **Auto**.  
The **Auto** key is highlighted, indicating that the copier is set into the Auto Exposure mode.

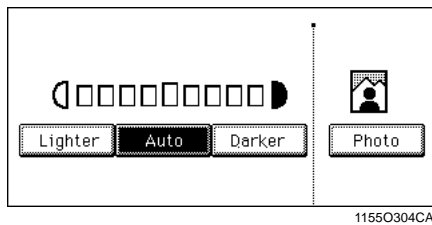


#### Useful Tips

- The exposure level in the Auto Exposure mode can be made either “Darker” or “Lighter” by using User's Choice. ☞ p. 4-16
- The copier has been factory-set to automatically select the Auto Exposure mode. User's Choice can be used to change this default setting to the Manual Exposure mode. ☞ p. 4-16

#### Manual Exposure

In the Manual Exposure mode, you can vary the exposure level in nine steps.

- 1 Touch **Lighter** or **Darker** as necessary.

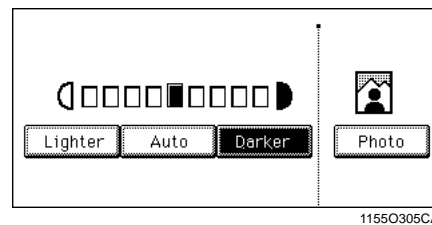


#### Useful Tips

- To make the image darker, touch **Darker**.
- To make the image lighter, touch **Lighter**.

## Photo


The copier can make a faithful reproduction of an original having a halftone image such as photos. The exposure level of the photo may be varied in nine steps.

- 1 Touch **Photo**.  
The **Photo** key is highlighted, indicating that the copier is set into the Photo mode.

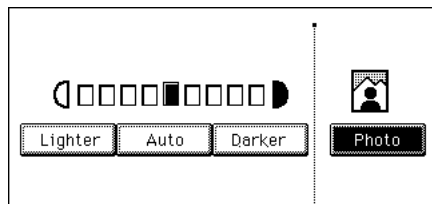

1155O306CA

- 2 Touch **Lighter** or **Darker** as necessary.

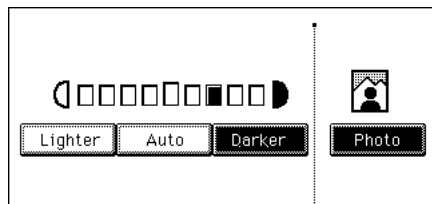

1155O307CA

### NOTE

When making copies in the Photo Mode, Auto Exposure does not operate. Select the desired exposure level in the Manual Exposure Mode.


### Useful Tips

- To make the image darker, touch **Darker**.
- To make the image lighter, touch **Lighter**.



## 8. Auxiliary Functions

These pages explain about convenient functions offered as the Auxiliary functions and how to set these features. When the **Auxiliary** key on the Touch Panel is touched, the Auxiliary function menu screen appears.

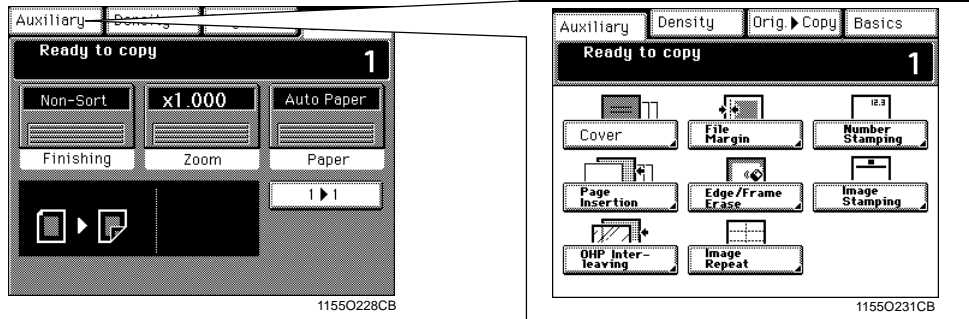


### Cover


The Cover mode lets you make a front cover or a front and back cover for a copy set by copying the first page or the first and last page of an original set on different paper from the normal copy paper, such as color paper. There are six different Cover functions available. Select the appropriate one according to your need.

### Functions


Front Cover: Copied  
Back Cover: None

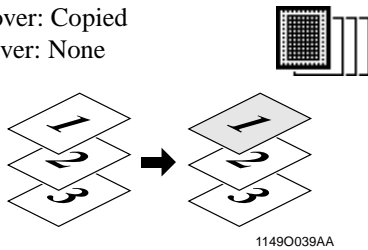


Front Cover: Blank  
Back Cover: None

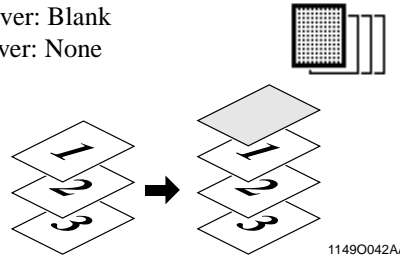


Front Cover: Copied  
Back Cover: Blank

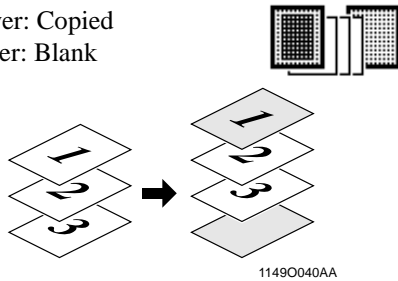


Front Cover: Blank  
Back Cover: Blank

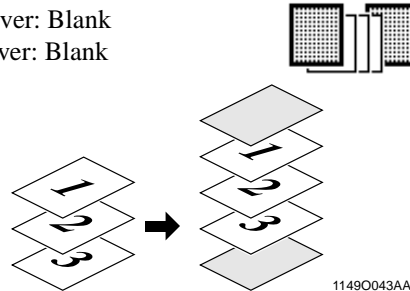

Front Cover: Copied  
Back Cover: Copied

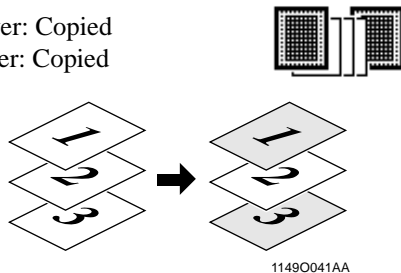


Front Cover: Blank  
Back Cover: Copied

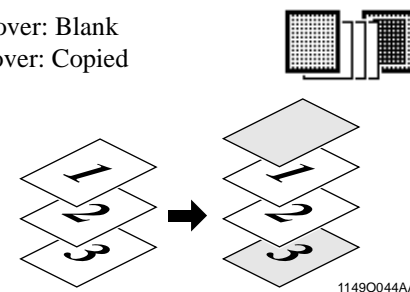


## Using the Cover Mode

- 1** Load your originals into the document handler.

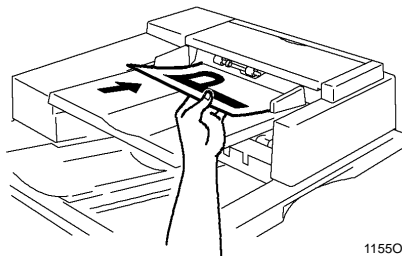


1155O023AA

- 5** Load the paper for the cover (e.g., color paper) into the drawer.

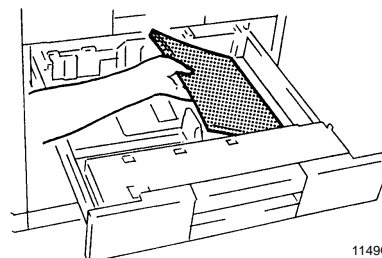


1149O093AA

- 2** Touch **Cover**.

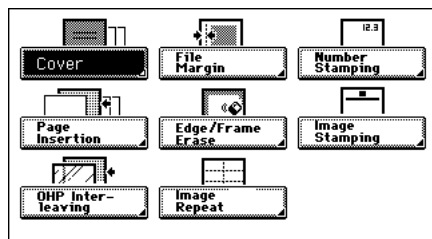


1155O309CA

- 3** Select the key for the front cover.

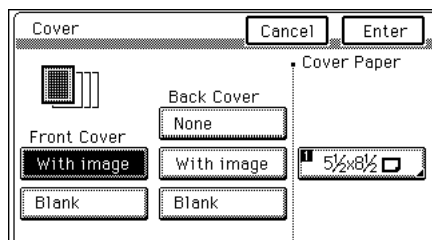

1155O311EA

- 4** Select the key for the back cover.

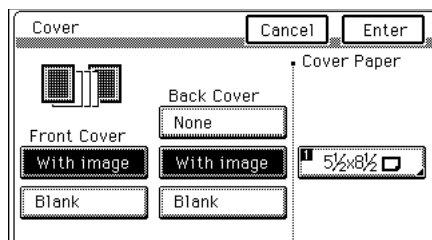


1155O313EA

### Useful Tip


You can use the Multi Bypass Tray as the source of the cover paper.

- 6** Touch the key for Cover Paper.

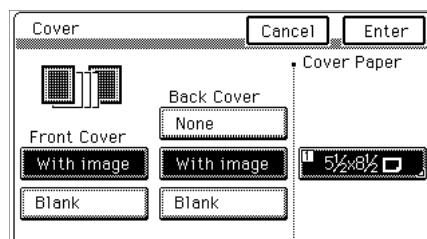

1155O315EA


- 7** Select the drawer in which paper for the cover has been loaded in step 5.

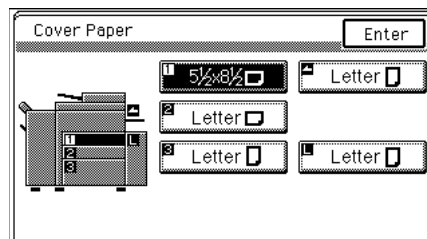

1155O317EA

- 8** Touch **Enter**.

- 9** Touch **Enter**.

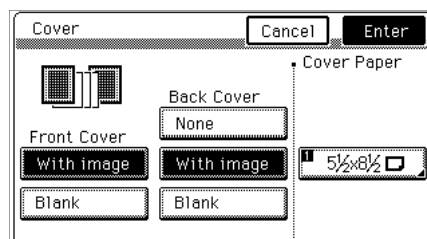

1155O319EA


## 8. Auxiliary Functions

### Page Insertion

Page Insertion allows you to insert a special sheet of paper (e.g., color paper) into the copy set. Two different functions are available. Select the appropriate one according to your need.


#### Functions

##### Page Insertion <Copied Inserts>

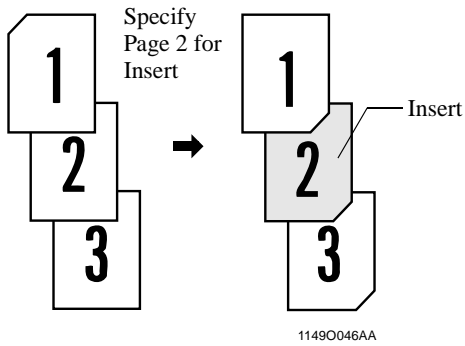

The copier copies the page, which is specified for an insert, on paper for inserts (e.g., color paper).

##### Page Insertion <Non-Copied Inserts>

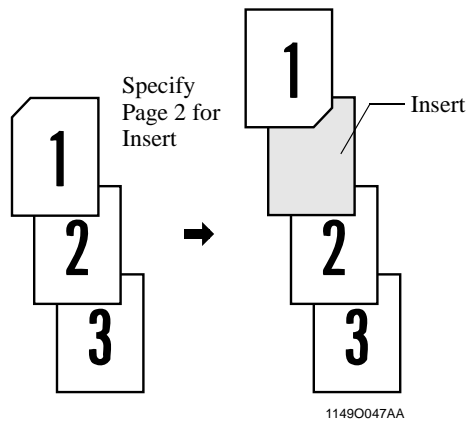

The copier inserts a blank sheet of paper for inserts (e.g., color paper) at any specified place between pages.

## Specifying the Place for an Insert

In the Page Insertion mode, you must specify where to place an insert by using Automatic Detection.


### Automatic Detection

Put a sheet of paper of a different size from the originals at your desired places in the original set (for convenience, let us call this paper the insert marker), load the original set onto the document handler and let the copier start the original count sequence. ☞ p. 3-48

<The copier automatically detects and sets the places for inserts.>


### NOTE

*Automatic Detection cannot be performed when the Mixed Original Detection mode is set.*

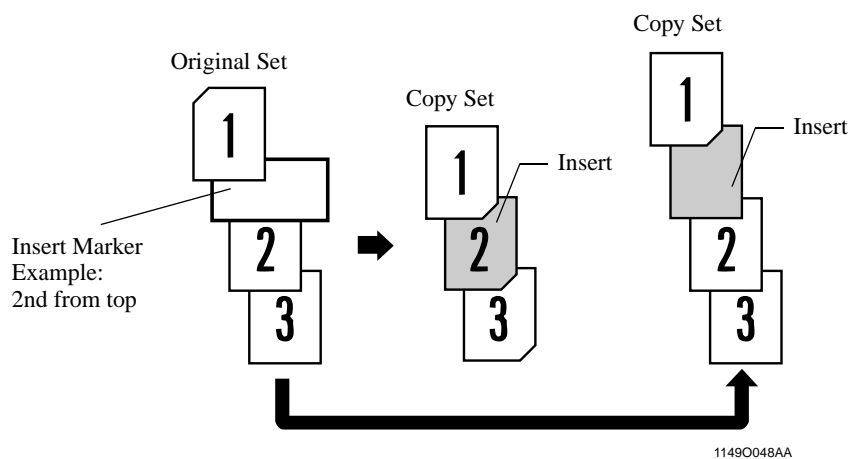


## Using Page Insertion


- 1 Put an insert marker into the desired place in the original set.

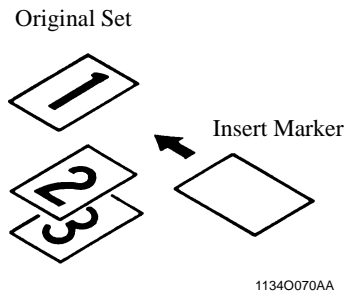

Example 1: To place a copied insert at the 2nd position from top.

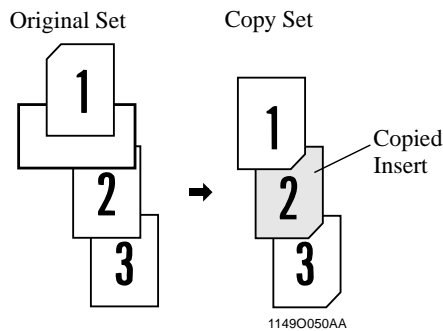


Example 2: To place a non-copied insert between pages 1 and 2.

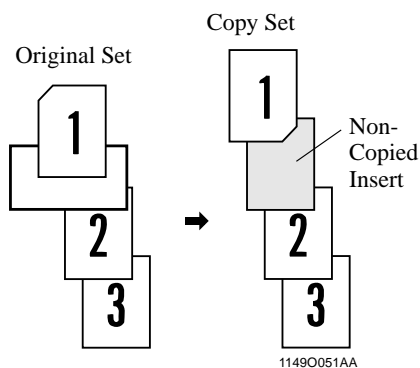


### NOTE

For the insert marker, use paper that is a size, or loaded in a direction, different from the originals.


- 2 Load the original set containing insert markers into the document feeder.

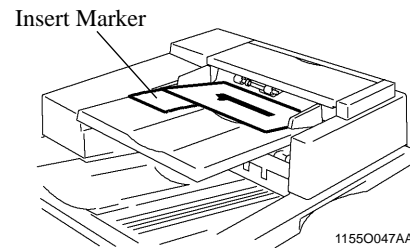


- 3 Touch **Page Insertion**.

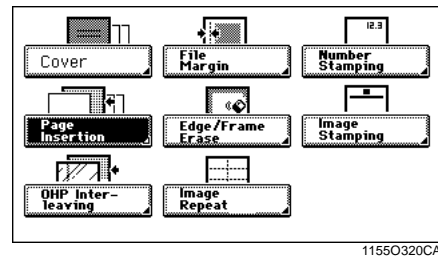

- 4 Touch the appropriate key for Paper to select whether to copy onto inserts (With Image) or not (Blank).

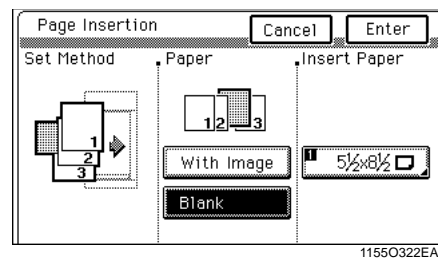


- 5 Load the paper for inserts into the drawer.

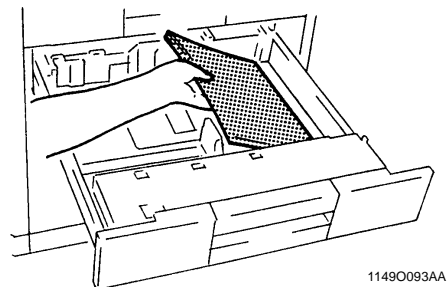

### Useful Tip


You can use the Multi Bypass Tray as the source of the paper for the inserts.

- 6 Touch the paper size key for Insert Paper.

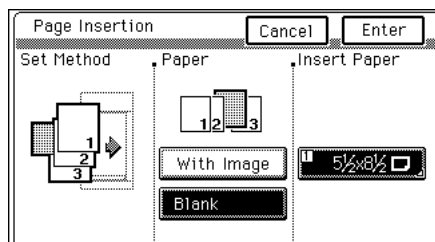

1155O324EA


- 7 Select the paper source in which paper for inserts has been loaded in step 5.

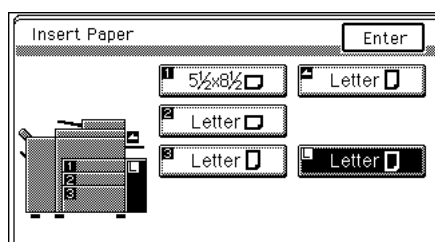

1155O326EA

- 8 Touch **Enter**.

- 9 Touch **Enter**.

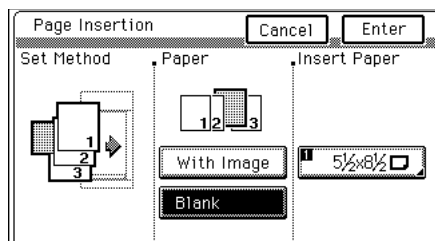

1155O328EA

- 10 Press the Start Key to let the copier start the Auto Detection sequence.

\*The document handler starts feeding the originals loaded in it to detect the insert markers and scan the originals.


## OHP Interleaving

When you make copies on transparencies, the OHP Interleaving function inserts copied or non-copied interleaves after each transparency. Four different functions are available. Select the appropriate one according to your need.

### Functions


#### Single Copy

<Copied Interleaves>

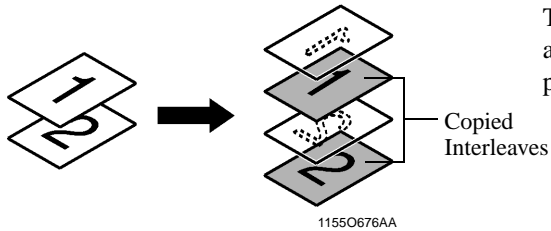

The copier copies onto OHP transparencies and, after each transparency, inserts a copied sheet of paper.


<Non-Copied Interleaves>

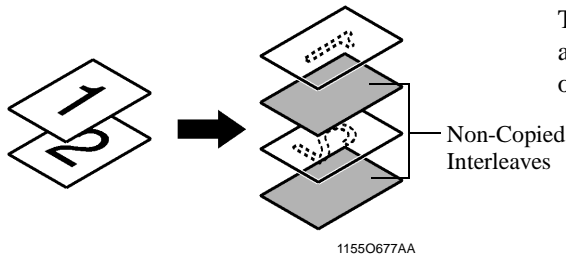

The copier copies onto OHP transparencies and, after each transparency, inserts a non-copied sheet of paper.


**Multiple Copy**

<Copied Interleaves>

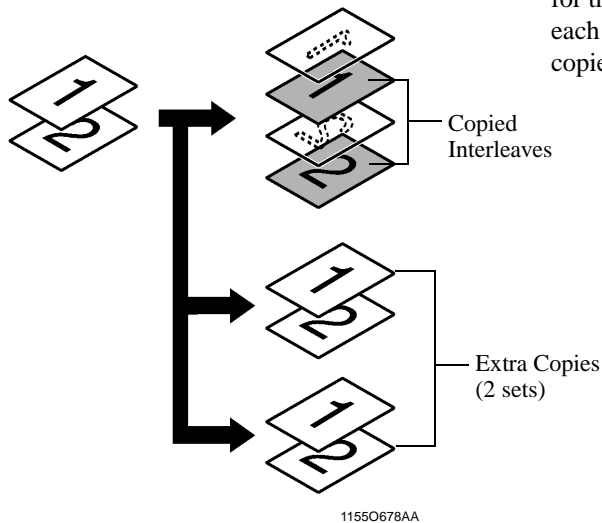

The copier copies onto OHP transparencies and, for the 1st set, inserts a copied sheet of paper after each transparency. Also, the copier sorts extra copies into a specified number of sets.

<Non-Copied Interleaves>

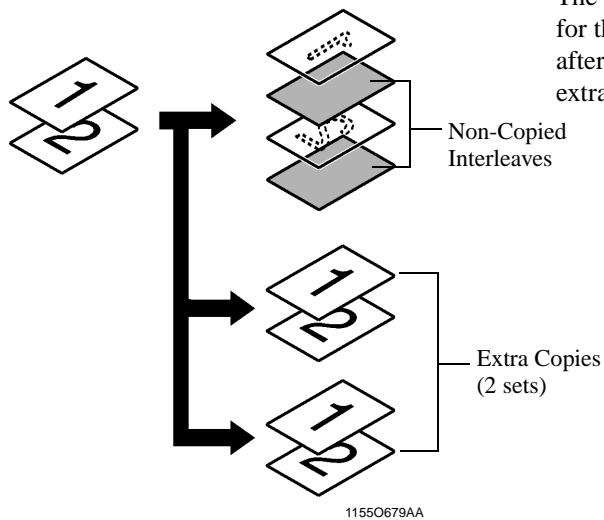

The copier copies onto OHP transparencies and, for the 1st set, inserts a non-copied sheet of paper after each transparency. Also, the copier sorts extra copies into a specified number of sets.


**Useful Tip**

*Auto Paper, Auto Zoom, Sort, Staple, Punch, 2-sided, 2-in-1, 4-in-1, Booklet, Cover and Insertion are all available for the extra copies.*



### Using OHP Interleaving


1 Load the originals.

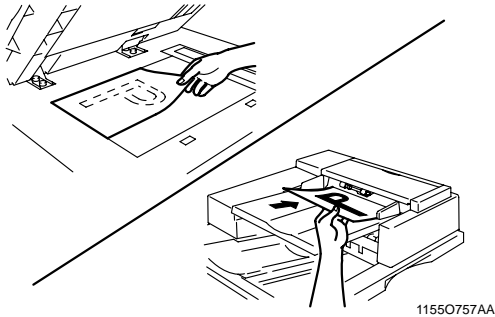


**NOTES**

- If you make each copy through the Original Glass, start with the first page of the set. “Not Using the Document Handler” p. 3-6
- When a multi-page document is copied using the Electronic Document Handler, the page order of the originals is reversed in the copy set.


2 Touch **OHP Interleaving**.

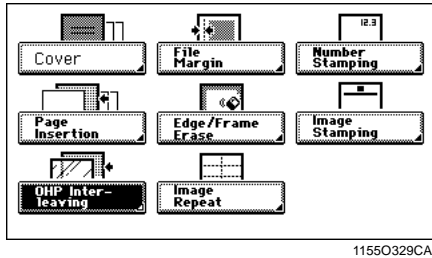

3 Load OHP transparencies onto the Multi Bypass Tray. (Up to 20 sheets of OHP transparencies can be placed on the tray.)

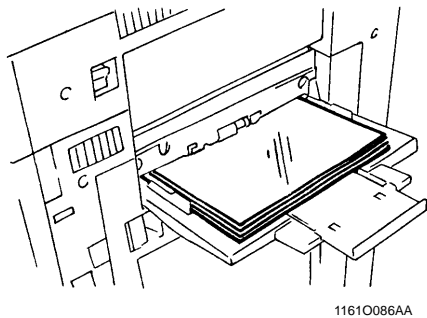


4 Select a transparency size.

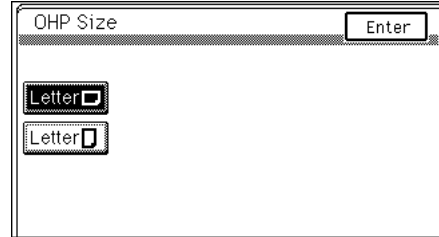


5 Touch **Enter**.


6 Select whether to copy onto the interleaves (With Image) or not (Blank).

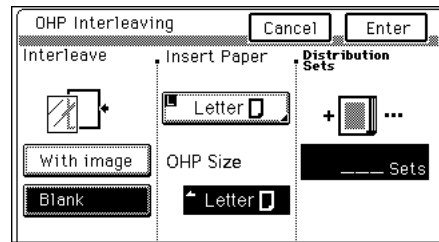

7 Touch the key for Insert Paper.

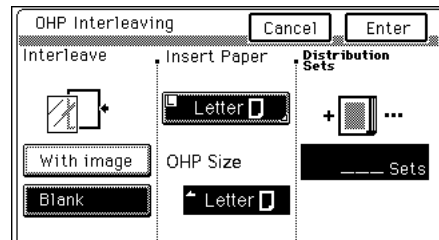


8 Select the Insert Paper.

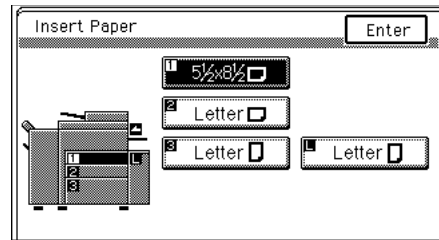

9 Touch **Enter**.

- 10** Enter the number of extra copy sets to make from the 10-Key Pad.

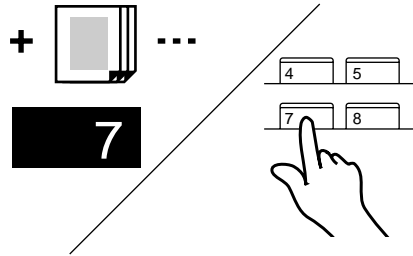

1149O052AA

---

**NOTE**

For the paper for extra copy sets, touch **Paper** on the Basics screen and select the desired copy paper.

\*Auto Paper may also be used for the copies.

---

- 11** Touch **Enter**.


## 8. Auxiliary Functions

### File Margin


The copier provides a file margin along the leading edge for your ease in filing. There are four different ways available for making a file margin. Use the one that is most suited to your need.

#### Functions

##### Shift-for-Margin

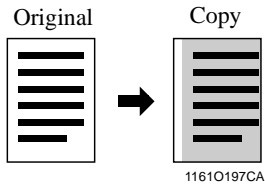


The image of the original is shifted to the right to make a margin along the left edge of the copy.

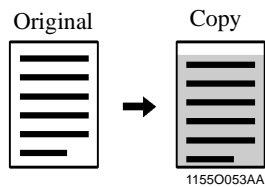


The image of the original is shifted to the bottom to make a margin along the top edge of the copy.

##### Margin-by-Reduction

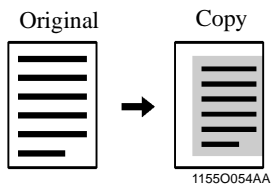

The image of the original which has almost no file margins along the sides is reduced to make a wider margin along the left edge of the copy.

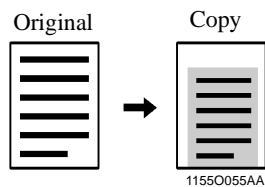

The image of the original which has almost no file margins along the sides is reduced to make a wider margin along the top edge of the copy.

---


#### **Useful Tip**

*If the image of the original covers the entire surface of the original, Margin-by-Reduction will ensure a copy with no lost image along the edges.*

---


## Using File Margin

- 1 Touch **File Margin**.

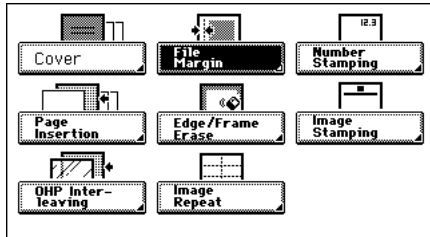


1155O338CA

- 2 Place the original.  
3 Select the desired "Position" of the margin.

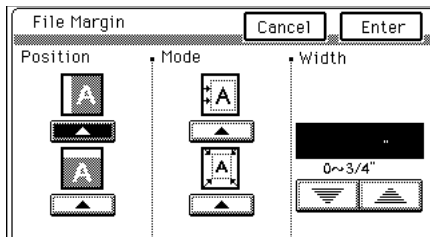


1155O340EA

- 4 Select the "Mode" of margin making.

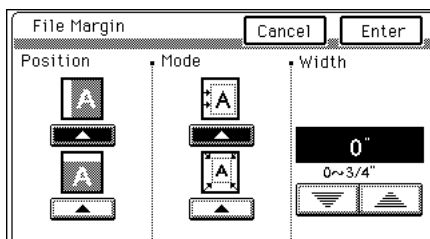

1155O342EB

- 5 Hold down the or key until the desired margin width is reached.

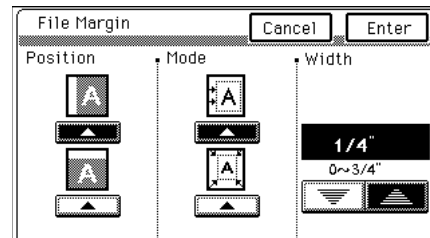

1155O344EA

### NOTE

Having a margin width larger than necessary could result in part of the image missing on the copy. Try to keep a logical margin width.


### Useful Tip

You can change the margin width in 1/16" increments within the range 0"~ 3/4".

- 6 Touch **Enter**.


### Useful Tips

- If the margin position is set to Left and width to 0", the image on both the front and back sides of the copy has the same orientation as that on the original.

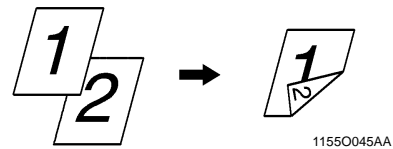

1155O045AA

- If the margin position is set to Top and width to 0", the image on the 2nd side of the copy is inverted to that on the 1st side.

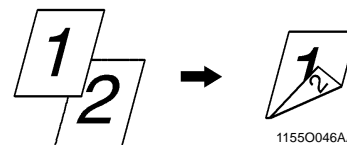

1155O046AA

8. Auxiliary Functions

### Edge/Frame Erase


The copier erases a margin of a set width along the four edges, one edge, or at the center to erase shadows or other unwanted images. This feature is effective in erasing the communications record on a document received by fax. One of three different functions can be selected. Use the one that is most suited to your need.

#### Functions

Chapter 3


Making Copies

##### Left Edge Erase

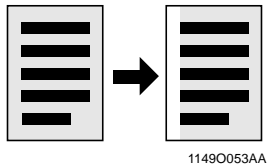


Erases a given width from the left edge of the copy.

##### Top Edge Erase

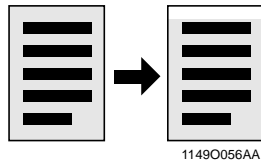

Erases a given width from the top edge of the copy.


##### Frame Erase

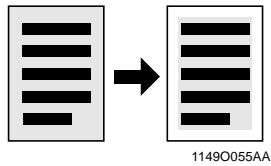


Erases a given width along the four edges.



## Using a Particular Edge/Frame Erase Function

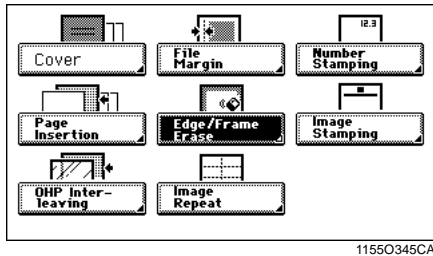
- 1 Touch **Edge/Frame Erase**.

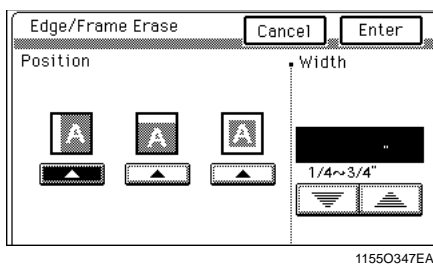

- 2 Place the original.
- 3 Select the desired erase function ("Position").



- 4 Hold down the  or  key until the desired erase width is reached.

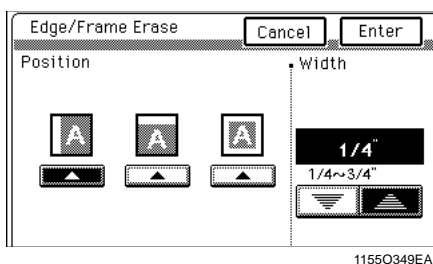

### Useful Tip


You can change the erase width in 1/16" increments within the range 1/4" ~ 3/4".

- 5 Touch **Enter**.

### NOTE

The erase width represents that on the original, not on the copy. So, use care when making a reduction or enlargement copy.

Example: Erasing the margin of an 11"×17" size original on a copy reduced by ×0.5:

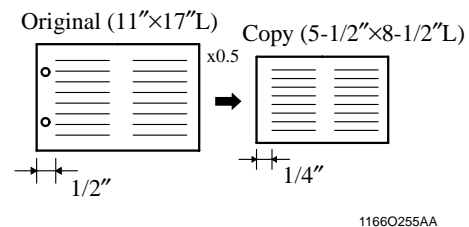

If you want to erase the 1/2"-wide margin on the original, select 1/2" for the erase width.


## 8. Auxiliary Functions

### Image Repeat

The image of the original is repeatedly produced on the copy paper. The copier automatically calculates the number of images that can be printed based on the copy paper size and zoom ratio.


#### Functions

With Dotted Line

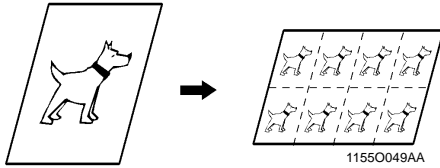

Provides dotted lines between the adjacent images on the copy.

Without Dotted Line

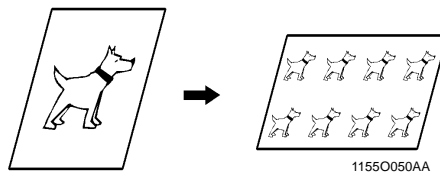


Provides no dotted lines between images on the copy.


### Selecting Image Repeat

- 1 Load the originals.
- 2 Select the desired copy paper and zoom ratio.  
(Selecting the Paper ↗ p. 3-9  
Selecting the Zoom ↗ p. 3-14)


- 3 Touch **Image Repeat**.

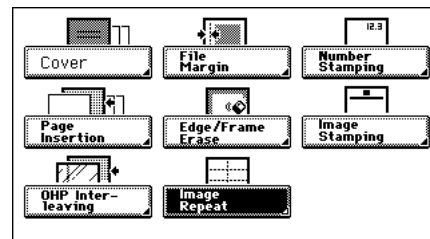

- 4 Select whether you want a dotted line or not by touching **Yes** or **No**.

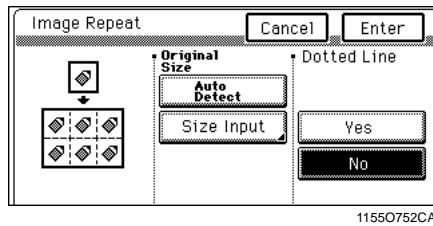

- 5 Touch **Auto Detect** to detect the original size.

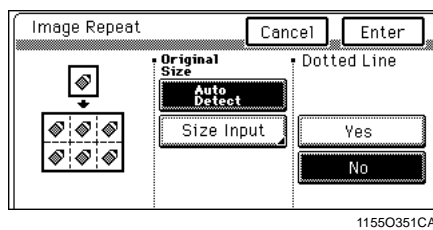


**NOTE**

For an original placed directly on the Original Glass, enter its size using Size Input. For using Size Input, see the instructions on the right.


- 6 Touch **Enter**.

<Size Input>


- Original Size is standard  
Touch **Size Input** in step 5. Select the size of the original and touch **Enter**.

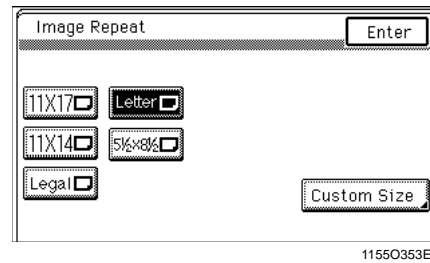

- Original Size is nonstandard  
Touch **Size Input**, then touch **Custom Size** in step 5.

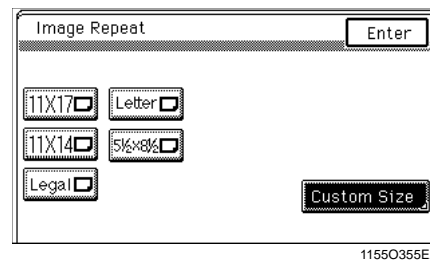

- Touch or to set the whole number for X and touch the **X** key. The underline moves to the right. Then touch or to set the fractional number and touch the **X** key. Now the value for X has been fixed.

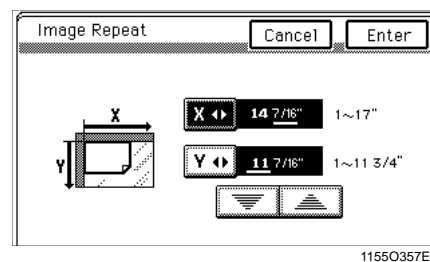

- Do the same for Y, then touch **Enter**.




8. Auxiliary Functions

# Number Stamping

The copier places on each copy the date of copying (Date), page number (Page) and a reference number for each copy set (Distribution).

## Functions


### Date

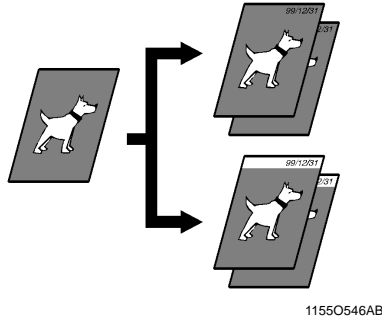

Places the date of copying on each copy.

\*The image area on which the date is printed may be erased.


### Page

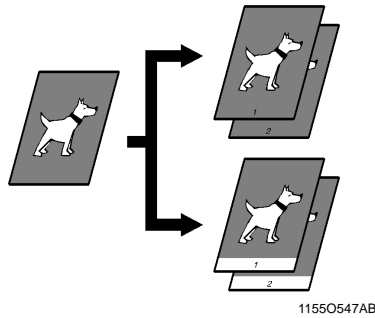

Places a page number on each copy.

\*The image area on which the page number is printed may be erased.

### Distribution

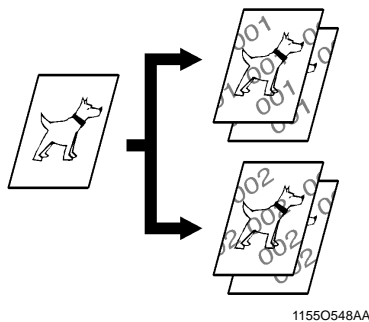

Places a reference (distribution) number on the background of the copy, as assigned to each copy set.


**NOTE**

*Number Stamping is possible when the copier is equipped with an optional Hard Disk Drive Kit.*

## Using Date


1 Load your originals.

2 Touch **Number Stamping**.

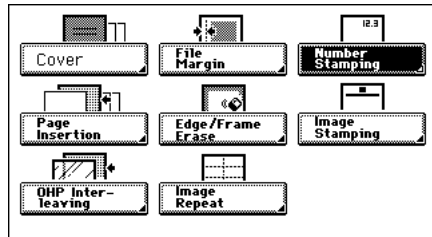


1155O358CA

3 Touch **Date**.

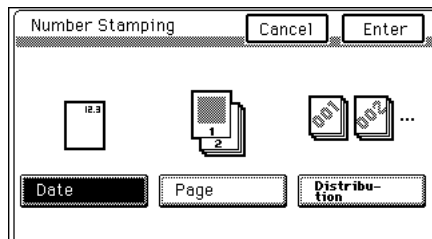


1155O359CA

4 Select the desired date stamping position.

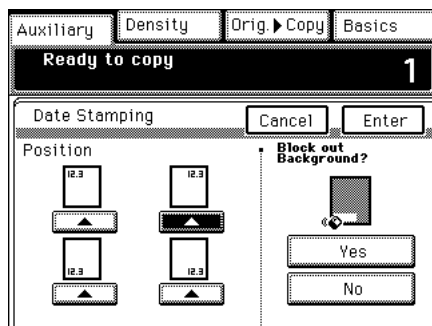

1155O360CB


5 Select whether to block out the background **Yes** or not **No**.

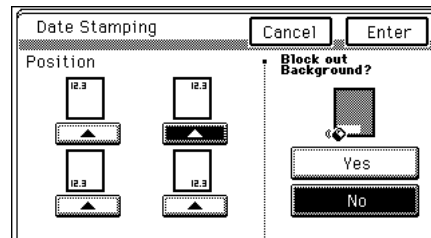

1155O361CA

### Useful Tips

- *Blocking out the background*  
The background image is erased and the date is printed on the erased area.

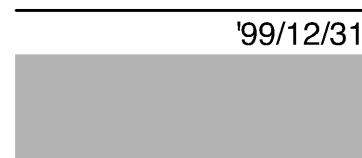

1155O550AB

- *Not blocking out*  
The date is printed over the image.



1155O549AB

6 Touch **Enter**.

### Useful Tip


User's Choice allows you to set the date and time, date printing format, and date printing position. ☞ p. 4-17, 4-19

8. Auxiliary Functions

**Using Page**


1 Load your originals.

2 Touch **Number Stamping**.

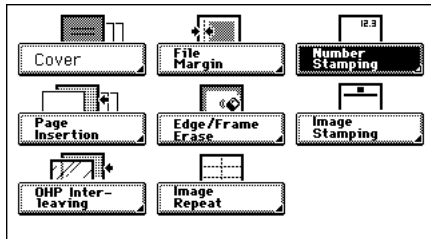


1155O358CA

3 Touch **Page**.

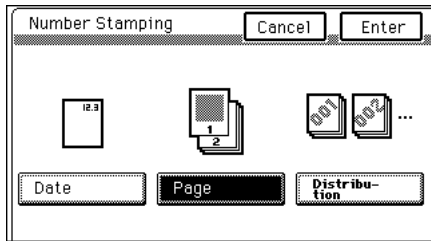


1155O362CA

4 Enter the starting number from the 10-Key Pad.

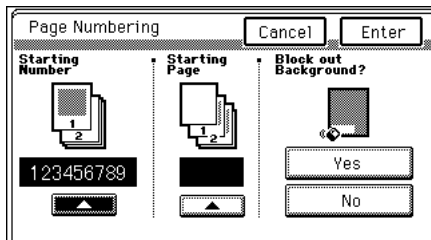


1155P037CA

5 Enter the starting page number from the 10-Key Pad.

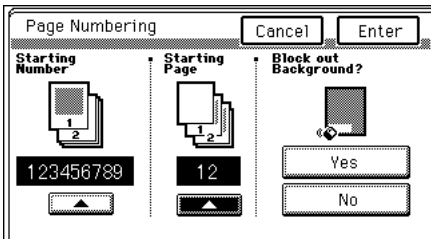

1155P038CA

6 Select whether to block out the background **Yes** or not **No**.

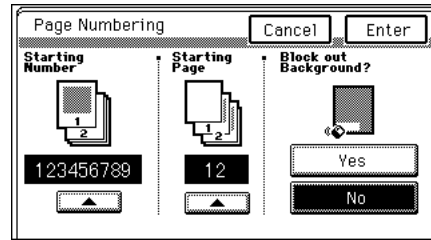

1155P039CA

**Useful Tips**

- *Blocking out the background*  
The background image is erased and the page number is printed on the erased area.



1155O551AB

- *Not blocking out*  
The page number is printed over the image.



1155O552AB

7 Touch **Enter**.


**Useful Tips**

- *User's Choice* allows you to set the page number position. *p. 4-17*
- *Page number is reset to 0 when reaching 99999999.*

## Using Distribution


1 Load your originals.

2 Touch **Number Stamping**.

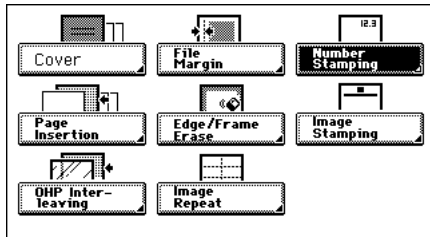


1155O358CA

3 Touch **Distribution**.

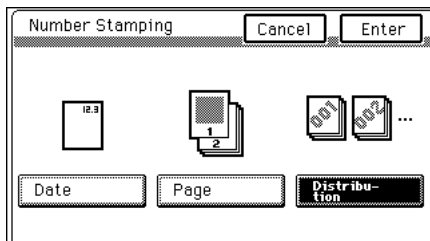


1155O365CA

4 Enter the starting number from the 10-Key Pad.

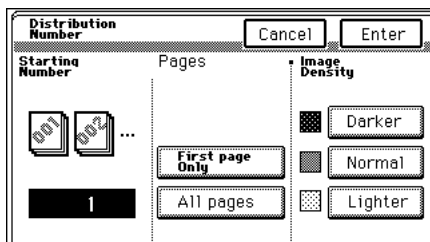


1155O366CA

5 Select the page on which to print the distribution number, either **First page only** or **All pages**.

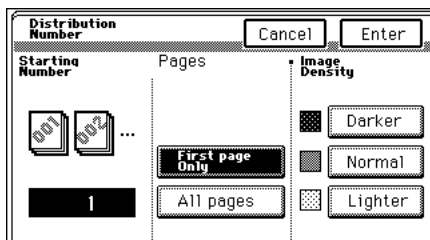

1155O367CA

6 Select the image density, either Darker, Normal, or Lighter.

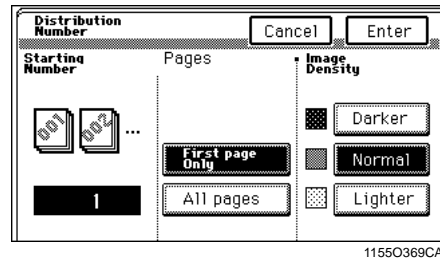


1155O369CA

7 Touch **Enter**.

### Useful Tip

The Distribution number is reset to 0 when reaching 999.

## Image Stamping

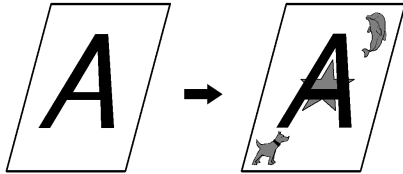

11550553AA

Image Stamping lets you print a preprogrammed image at a specified location on the copy.

\*The image can be printed at up to three places.


### NOTE

Image Stamping is possible when the copier is equipped with an optional Hard Disk Drive Kit.

## Checking the Preprogrammed Image


The preprogrammed image can be checked in advance.

- 1 Touch **Image Stamping**.

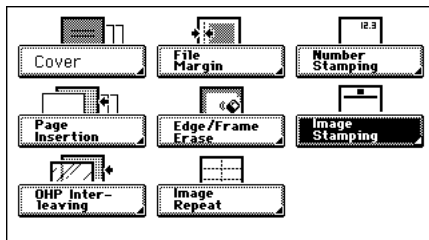


11550368CA

- 2 Touch **Check** and select the image to be checked.

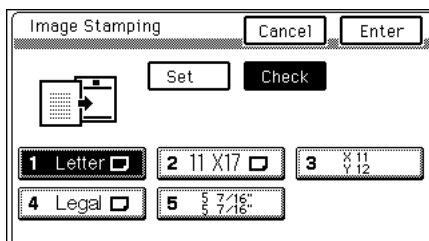

11550371EA

- 3 Select the copy paper and press the Start key.

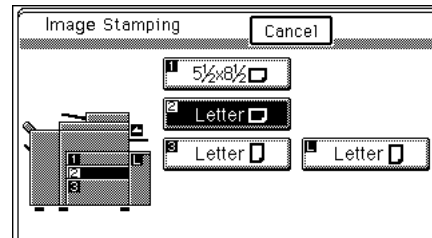

11550373EB

### NOTE

It is not possible to check the preprogrammed image if a job has been reserved.

### Useful Tips


- A preprogrammed image can be stored in memory using Utility. *Image Memory Input.* ☞ p. 4-8
- A preprogrammed image can also be checked using Utility. *Checking Programmed Image.* ☞ p. 4-11

## Calling Up a Preprogrammed Image


You may want to call up a preprogrammed image for use on the copy.

**1** Load the originals.


**2** Touch **Image Stamping**.

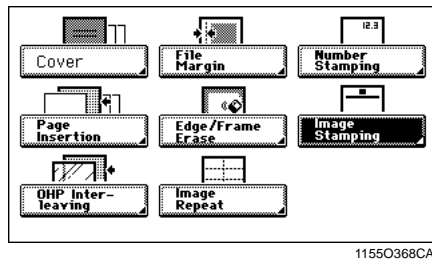


**3** Touch **Set** and select the desired image.

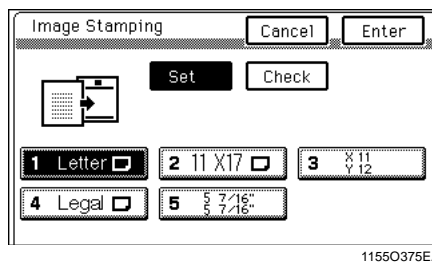

**4** Select the image stamping position.

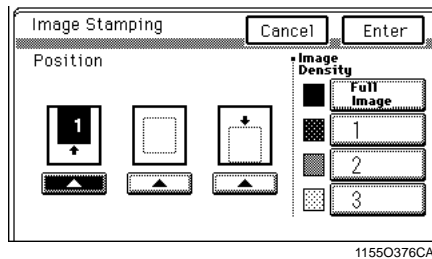


**5** Select the desired image density.

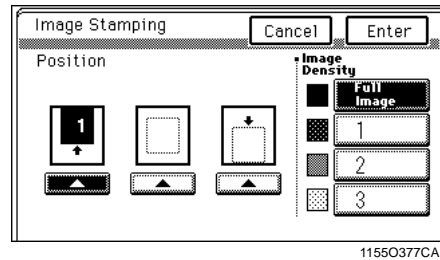

**6** Touch **Enter**.

**7** Touch **Enter**.

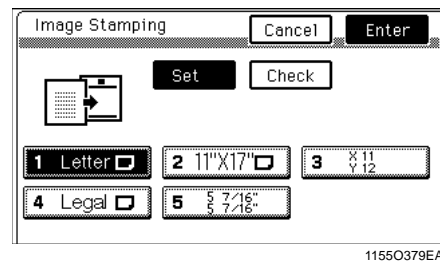

### NOTES

- If two or more images are used, each has to be different from the other and should be placed in a unique position. (No two images can be exactly the same.)
- When using Image Stamping, select the "Original Direction." [p. 3-36](#)

### Useful Tip

Up to three preprogrammed images can be placed on the copy.

## 9. Selecting Mixed Orig. Detection and Other Functions


### Mixed Orig. Detection and Other Functions

These pages explain about Mixed Original Detection and other document-related functions the copier offers. Pressing the Original key on the control panel shows a screen that allows you to set these functions.


- Touching either one of the four function keys highlights that particular key, which sets that function.
- Touching it a second time cancels the setting of that function.

#### Selecting Mixed Original Detection

Use the Mixed Original Detection function to make copies automatically from originals of assorted sizes loaded in the Electronic Document Handler.

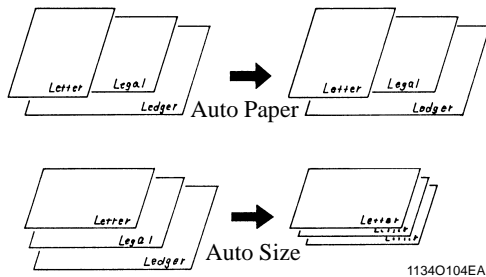

- 2 Touch the **Mixed Orig. Detection** key on the touch panel.

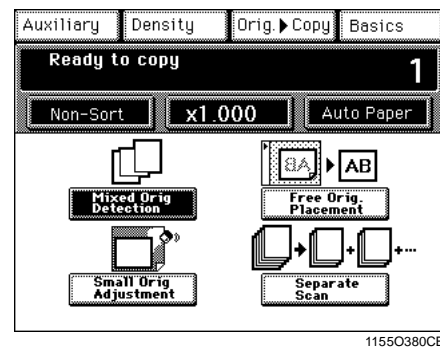


#### NOTE

The copier may not be able to staple copies of different sizes made with Mixed Orig. Detection and Auto Paper selected.

#### Useful Tip


User's Choice allows you to default to Mixed Original Detection. [p. 4-15](#)

- 1 Load the stack of originals so that the rear edge of each original is pressed against the rear Document Guide Plate. Then, slide the front Document Guide Plate against the front edges of the originals with the greatest width.

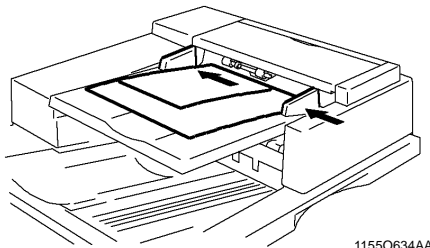


### Selecting Free Original Placement

Free Original Placement eliminates voids or image deviations on the copy even if the original is placed away from the Original Scales on the Original Glass.

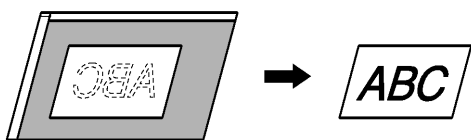

11550554AA

1 Touch **Free Orig. Placement**.

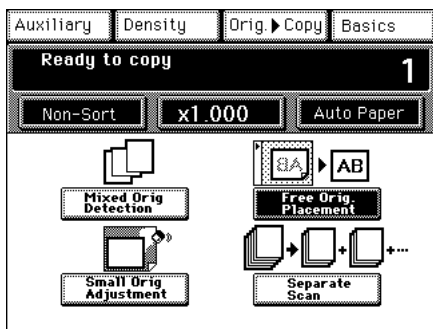


11550381CB

**NOTES**

- Place the original in parallel with the Original Scales. The function does not work on an original placed askew.
- If the Realign Warning available from User's Choice is turned ON, the copier warns you of an original placed askew.
- The Realign Warning may fail to function properly to detect the correct original position for the following types of originals:
  - An original with a colored background
  - An original with images printed to the edges
  - An original that is not rectangular


### Selecting Small Original Adjustment

When your original is smaller than the copy paper or when you are making a reduction copy, Small Original Adjustment prevents the areas outside the original from being dirtied on the copy. You will not have a copy with black areas surrounding the image which is made with the Electronic Document Handler raised.

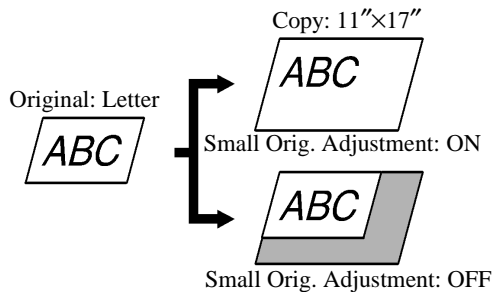

11550555AA

1 Touch **Small Orig. Adjustment**.

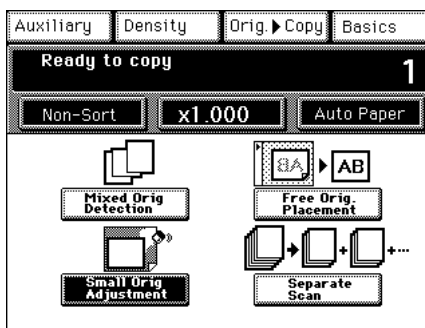

11550382CB

**NOTES**

- Small Orig. Adjustment may fail to detect the correct position of the original, erasing part of the image, for the following types of originals:
  - An original with a colored background
  - An original with images printed to the edges
  - An original that is not rectangular
- The function can erase only a rectangular area even if the original is a complicated shape.



11550646AA




## 9. Selecting Mixed Orig. Detection and Other Functions

### Selecting Separate Scan


Separate Scan permits the copier to scan a large set of originals in several parts.

The Electronic Document Handler can be loaded with up to 100 pages of a document. If you, however, divide a document consisting of more than 100 pages so that each part contains less than 100 pages, it can still be scanned as one set by the copier.


Example: A 150-page document

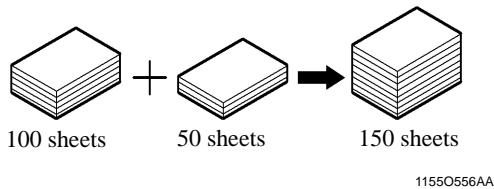

- 1 Touch **Separate Scan**.

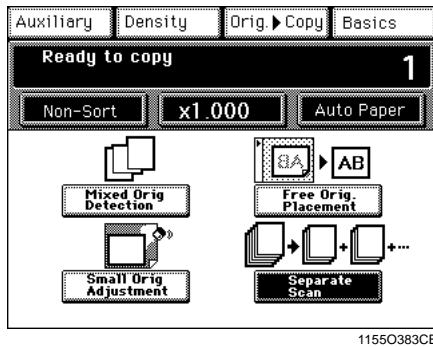

- 2 Load the first set of original(s) and press the Start key.

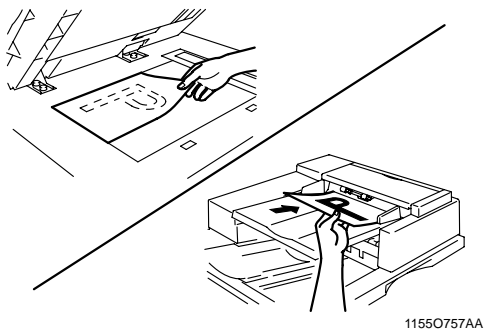

#### NOTE


If the original is placed directly on the Original Glass to make a copy, do that in ascending order of page.

- 3 Load the next set of originals and press the Start key.
- 4 Repeat step 3 according to the number of pages of the document.

#### Useful Tip

The number of originals that can be scanned and stored in memory at one time is about 200 sheets of standard Letter paper. The addition of an optional 16MB Memory expands the maximum storage capacity to about 400 sheets and the addition of an optional Hard Disk Drive Kit expands it to about 500 sheets.

- 5 When all pages of the document have been scanned, touch **Finish** and press the Start key.

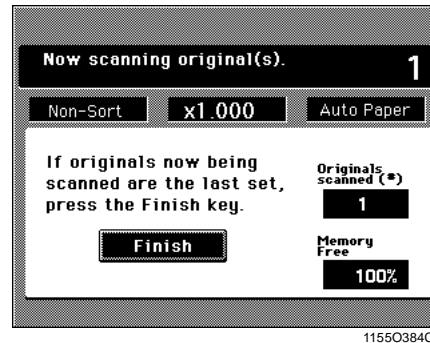

- 6 The copier starts a print cycle.

## 10. Selecting the Job Functions


### Memory Recall

After a print cycle has been completed, Memory Recall allows you to run another print cycle again using the same image data and copy settings as the previous one without having to reload the originals.


After the first print cycle, touch **Memory Recall** on the Touch Panel to show a screen that allows you to make the necessary settings.

#### Setting Memory Recall

1 Touch **Memory Recall**.

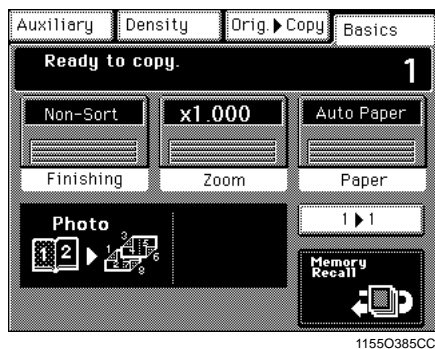
 


2 If you have any function to change, touch the corresponding mode key and make the necessary change.

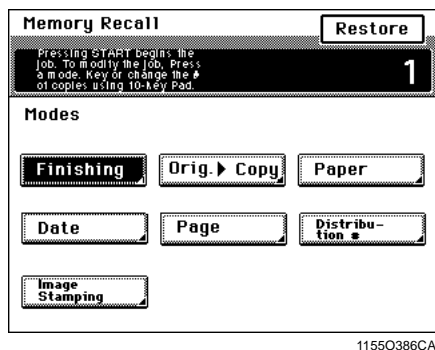


#### Useful Tips

 • The following functions can be changed when running a print cycle again using Memory Recall:

- Finishing
  - Orig. Copy
  - Paper
  - Date
  - Page
  - Distribution #
  - Image Stamping
  - No. of copies
- A pen mark  appears above the key of the function changed.
- To change the number of copies to be made, press the  key and set the new number.
- The paper size and paper direction cannot be changed.

3 Press the Start key and the copier starts the print cycle.

#### NOTES

- Memory Recall available from User's Choice must be turned ON to use this function. *p. 4-15*
- This function cannot be used in the Interrupt mode.
- The preceding image data and copy settings are cleared to disable Memory Recall when any of the following operations are performed:
  - The copier is turned OFF.
  - The copier scans a new original or the Start key is pressed.
  - The Access key or Interrupt key is pressed, or Reserve is touched.
  - The  key or Panel Reset key is pressed while the copier remains idle.

#### Useful Tip

After you have made copies from a confidential document, it is recommended that you press the Panel Reset key to erase the data.

## 10. Selecting the Job Functions


### Reserve

As the copier completes scanning for a regular copy job, it is capable of scanning for another job which is held in reserve. When the copier completes the print cycle for the first job, it automatically starts the print cycle for the reserved job.

\*By job, we mean a sequence of operation from original loading to the end of the print cycle.

### Reserving a Job


- 1 Touch **Reserve** on the Touch Panel.

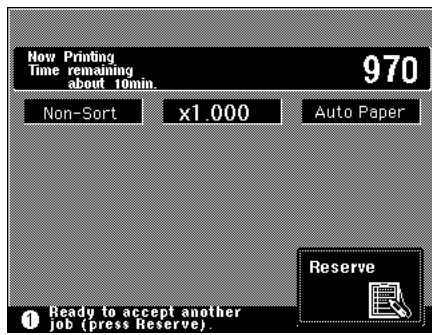

#### NOTES

- Reserve is possible when the copier is equipped with an optional Hard Disk Drive Kit.
- The number of copier jobs that can be stored is a maximum of 5 or about 500 sheets of Letter standard original.
- Jobs are printed in order of reservation.
- For a job to be reserved, Manual Bypass cannot be selected.

- 2 Load the originals and make the necessary settings.

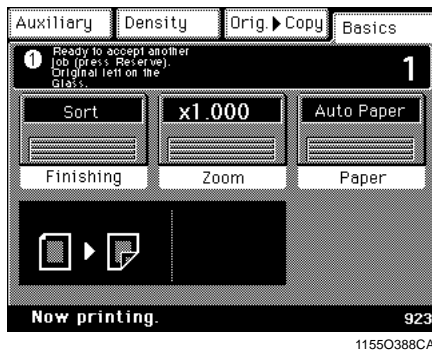

- 3 Press the Start key and the copier starts scanning the originals and the job is reserved.


## Job List

These pages explain about what convenient functions can be performed and settings made with the Job List key on the control panel. To use this function, press the Job List key.


### Mode Check

Mode Check allows you to check what settings have been made for a job.

- 1 Touch **Mode Check** and then touch the job no. key whose settings are to be checked.

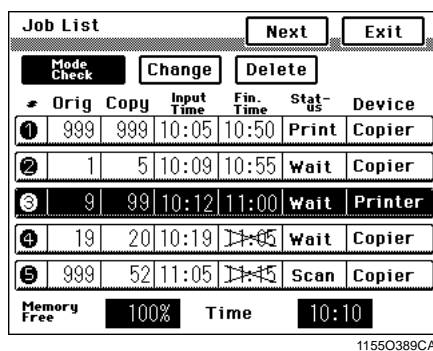

- 2 Touch **Next** or **Back Up** to check for the details of the settings.

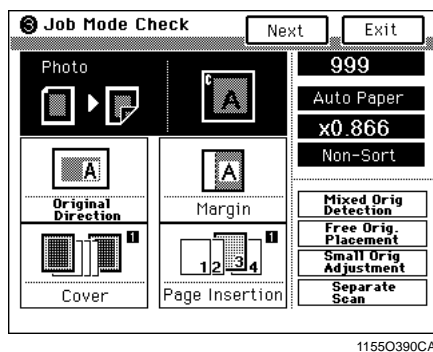


- 3 After the settings have been checked, touch **Exit**.
- 4 Touch **Exit** again.


### Change

Change allows you to change the settings made for a job.


- 1 Touch **Change** and then touch the job no. key whose settings are to be changed.

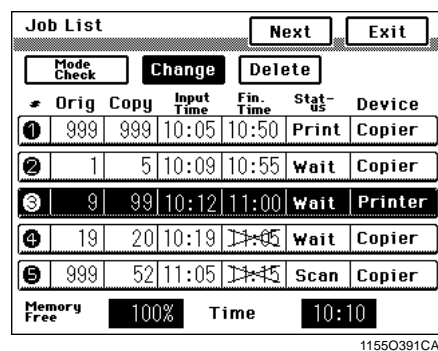

- 2 Select the desired function mode to be changed and touch **Enter**.

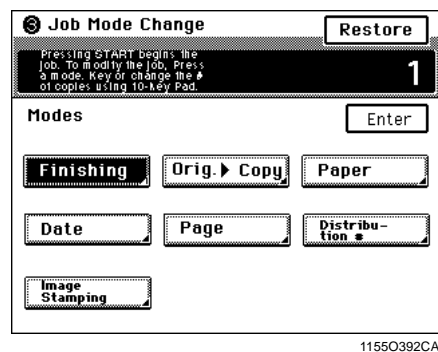

### NOTES

- The following functions can be changed:
  - Finishing
  - Orig. Copy
  - Paper
  - Date
  - Page
  - Distribution #
  - No. of copies
  - Image Stamping
- A pen mark  appears above the key of the function changed.
- To change the number of copies to be made, press the **C** key and set the new number.

- 3 Touch **Enter**.


10. Selecting the Job Functions

**Delete**

Delete allows you to delete a job previously set.


<To delete a job on the print queue>

1 Touch **Delete**.

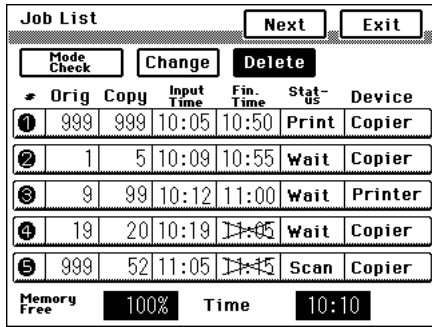


1155O393CA

2 Touch the job no. key to be deleted.

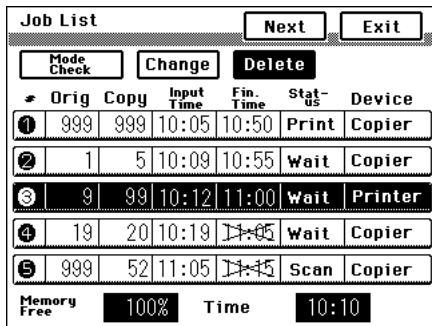

1155O394CB

3 Touch **Yes**.

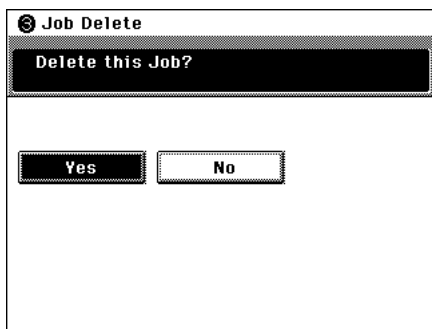


1155O395CB

4 Touch **Exit**.


<To delete a job being scanned or printed>

1 Press the Stop key while the job in queue is being scanned or printed.

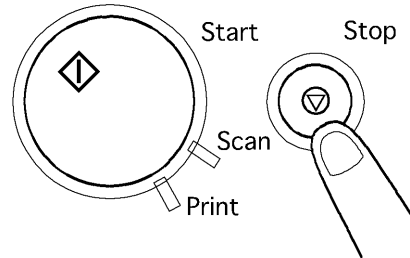

1155O648EA

2 Touch **Delete Printing Job** or **Delete Scanning Job**.

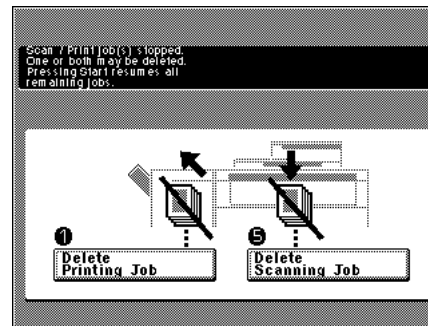

1155O400CA

**Useful Tip**


Pressing the Stop key stops the scanning or printing action being performed.

3 Press the Start key.


## Unlock

A confidential document transmitted by a personal computer is unlocked when a password is entered, putting it in the print queue. A confidential document is identified with “Lock” in the status column.


- 1 Touch **Unlock**.

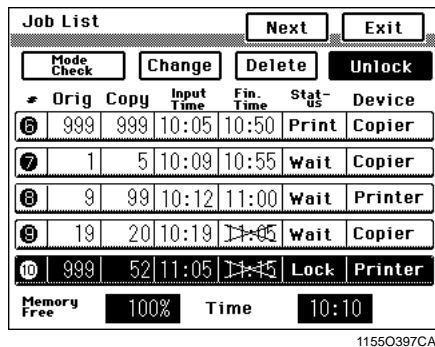

- 2 Enter a 4-digit password from the 10-Key Pad.

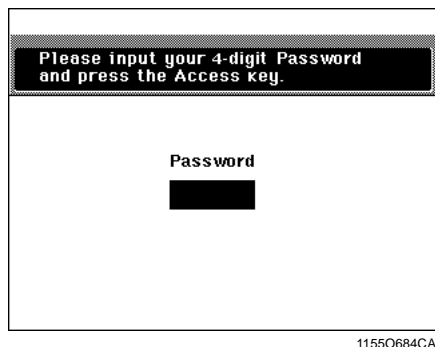

- 3 This unlocks the job, putting it in the print queue (status changes to “Wait”).

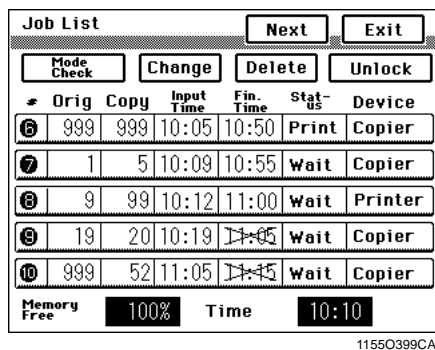

### NOTES

- All jobs are unlocked if the password matches that entered.
- An unlocked job is placed at the end of the jobs on the print queue.



# Chapter 4

---

## Using the Utility Mode




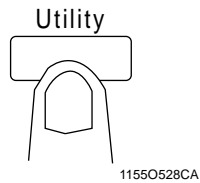
# 1. Job Memory Input and Job Recall

## Job Memory Input


Up to 10 different, frequently used copy job programs can be stored in memory and recalled later as necessary. When the copier is equipped with an optional Hard Disk Drive Kit and if “100 Accounts” is selected for “Copy Track” or “Administrator Mode” available from User's Choice, up to 10 different jobs can be stored in memory for each account.

### Storing a Job



- 1 Set up the job you want to store in memory.
- 2 Press the Utility key.
- 3 Touch **Job/Zoom mem. Input**.
- 4 Touch **Job Memory Input**.
- 5 Select any one of the 10 job number keys from **1** to **10** marked with .




- 3 Touch **Job/Zoom mem. Input**.

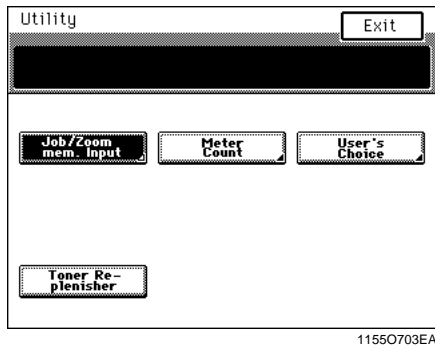


- 4 Touch **Job Memory Input**.

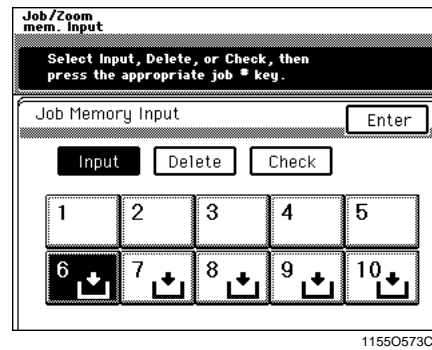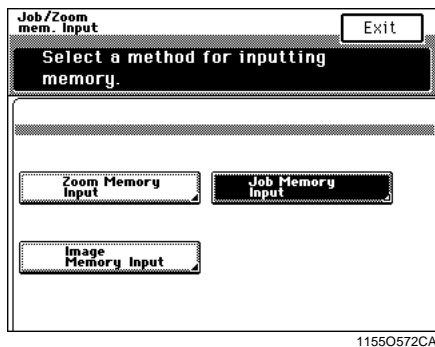


#### NOTE

A job number key not marked with  indicates that a job has already been stored under that number. If you store a new job in that number key, the old job is erased.

- 6 To check for the details of the job stored, touch **Check** and then touch the job number key.

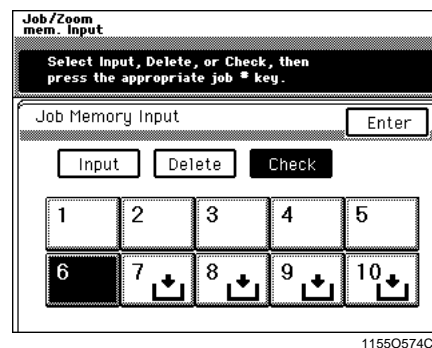


The job settings appear on the Touch Panel.

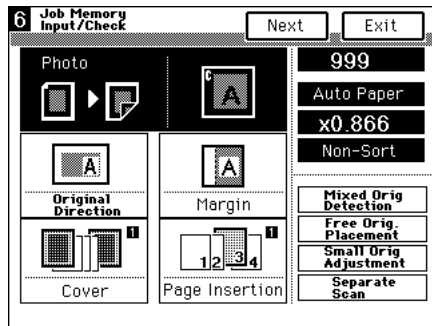

1155O575CA

7 After you have checked the settings, touch **Exit**.

8 Touch **Enter**.

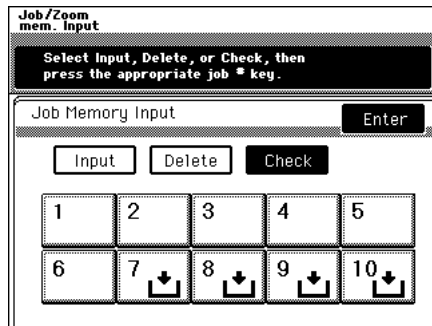


1155O576CA


1. Job Memory Input and Job Recall

**Deleting a Job Program**


1 Press the Utility key.

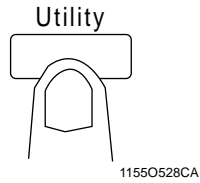


2 Touch **Job/Zoom mem. Input**.

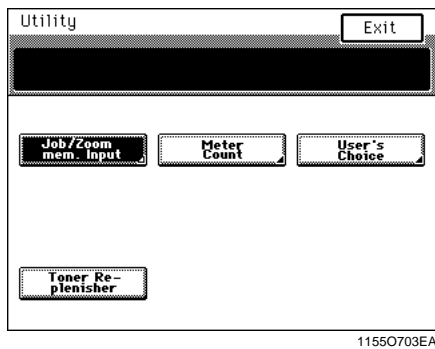


3 Touch **Job Memory Input**.

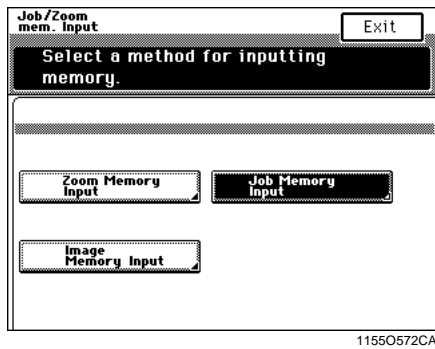


4 Touch **Delete**, then touch the job number key from which you want to delete a job program.

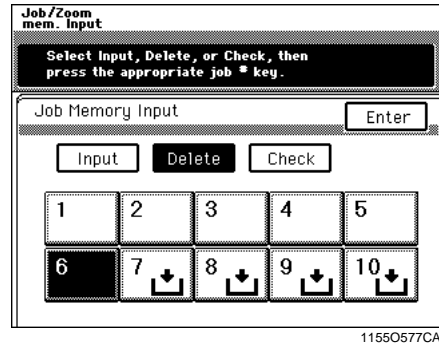


When  appears in that key, it indicates that the job program has been deleted.

5 Touch **Enter**.

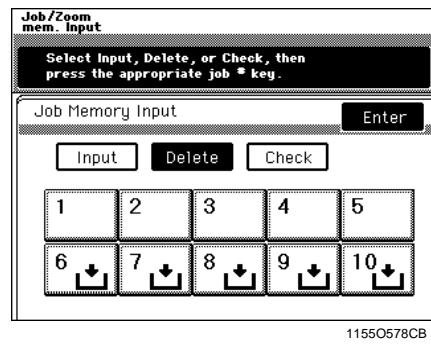


## Recalling a Job from Memory


- 1 Press the Job Recall key.

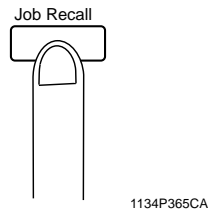

- 2 Touch the job number key in which the desired job has been stored.

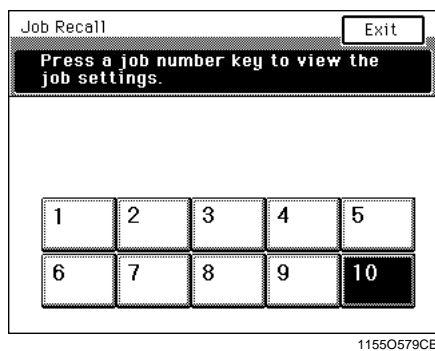

- 3 Check the settings made and then touch **Exit**. The copier is set up for these settings and the Basics screen reappears.

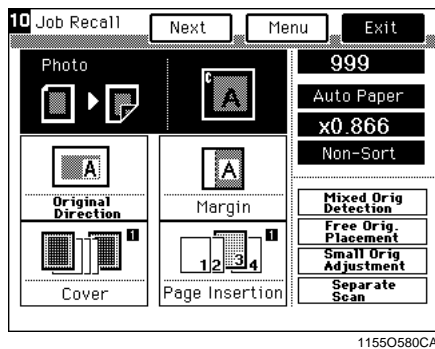


If the job recalled is not what you want, touch **Menu**. Then, the Job Recall screen reappears.

## 2. Zoom Memory Input


Up to two different, frequently used zoom ratios can be stored in memory so you can use them later whenever necessary. For the **Mini Redu** ratio,  $\times 0.930$  has been factory-set, but that can be changed as necessary. When the copier is equipped with an optional Hard Disk Drive Kit and if “100 Accounts” is selected for “Copy Track” of “Administrator Mode” available from User's Choice, zoom ratios can be stored in memory for each account.

### Storing a Zoom Ratio


**1** Press the Utility key.

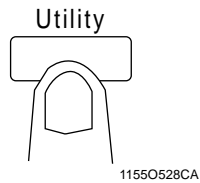


**4** Using the 10-Key Pad, enter the desired zoom ratio.

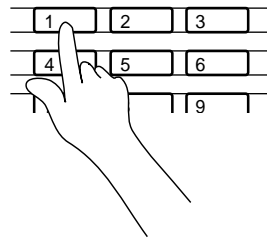

**2** Touch **Job/Zoom mem. Input**.

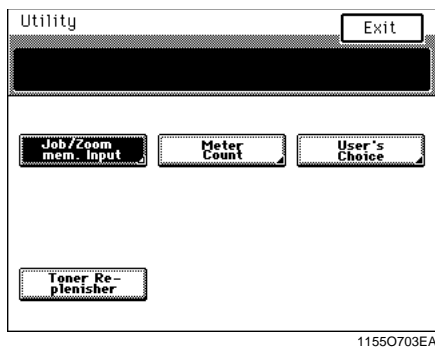

**3** Touch **Zoom Memory Input**.

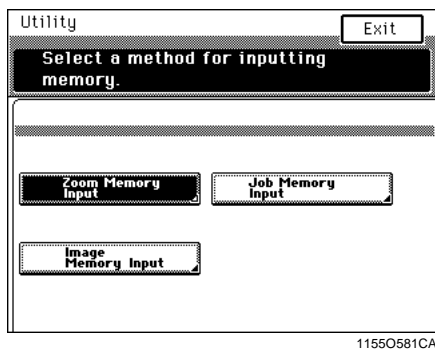

#### Useful Tips


- For example, enter  $\times 1.234$  as **1**, **2**, **3**, and **4**, in that order.

**x1.234**

1155O758AA

- To correct an entry, press the **C** key, then enter the new ratio.
- The zoom ratio can range from  $\times 0.250 \sim \times 4.000$ .
- The **Mini Redu** ratio can range between  $\times 0.900 \sim \times 0.999$ .


**5** Touch the desired number key in which you want to store the zoom ratio, either **1** or **2**. When the zoom ratio is properly stored in the number key, the ratio appears on the number key.

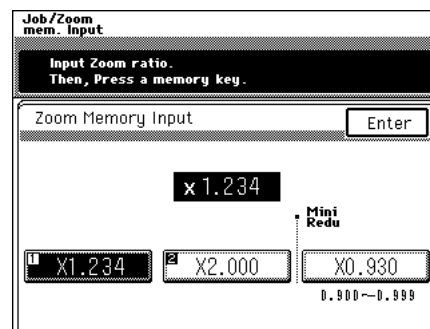

**NOTE**

When a new zoom ratio is stored in a key number, the old one stored in that key number is lost.

6 Touch **Enter** .

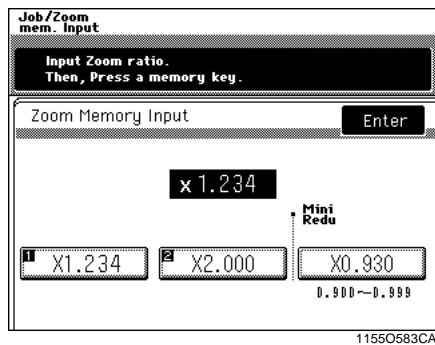**Useful Tips**

- A zoom ratio using X/Y Zoom can be stored in memory on the screen with which to recall a X/Y Zoom ratio.  
Storing a Ratio in Memory ↗ p. 3-19
- Custom Zoom may also be used to store a zoom ratio.  
Storing a Ratio in Memory ↗ p. 3-18


## 3. Image Memory Input

### Image Memory Input


Up to five different, frequently used characters and marks can be stored in memory so you can use them later whenever necessary. This function is possible when the copier is equipped with a Hard Disk Drive Kit.

#### Storing an Image


- 1 Press the Utility key.

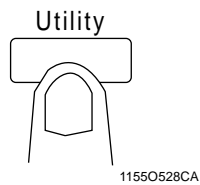


- 2 Touch **Job/Zoom mem. Input**.

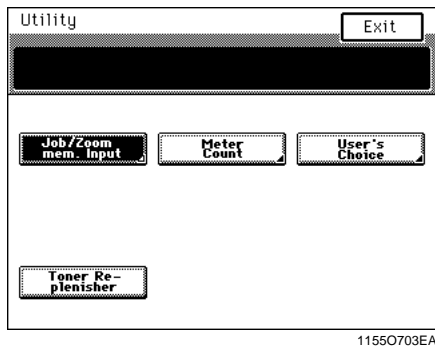


- 3 Touch **Image Memory Input**.

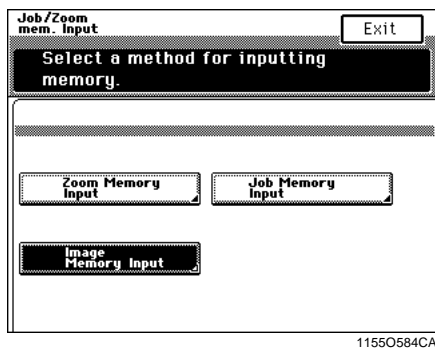


- 4 Touch **Input**, then touch the desired image number key, in which you want to store the image.

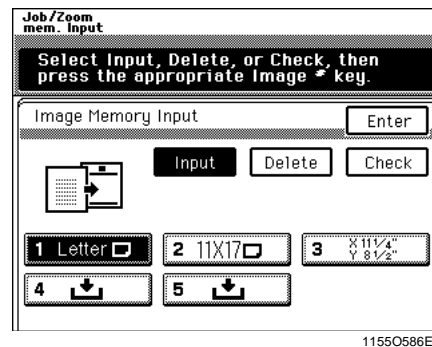

#### NOTE

An image number key not marked with  indicates that an image has already been stored under that number. If you store a new image in that number key, the old image is erased.


- 5 Select the size of the original, from which to store an image.

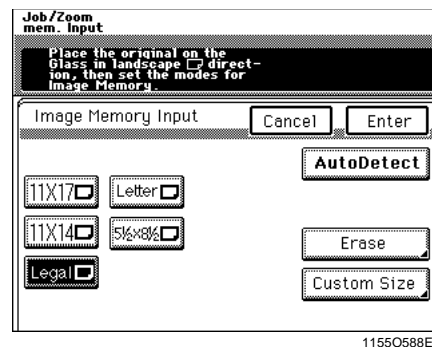

## 3. Image Memory Input


<Auto size detection>

- Touch **AutoDetect** on the screen given in step 5.

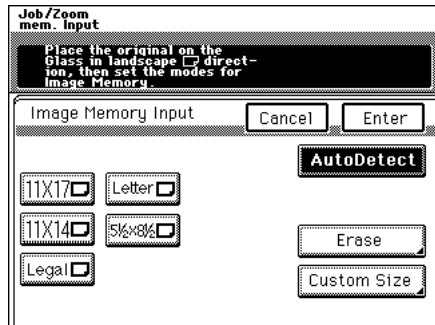

1155O590EA


- 6 If you want to erase the image on the left, top, or along the frame of the original, touch **Erase**.

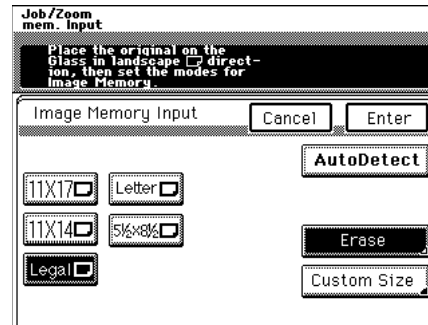





1155O596EA


<Size input>

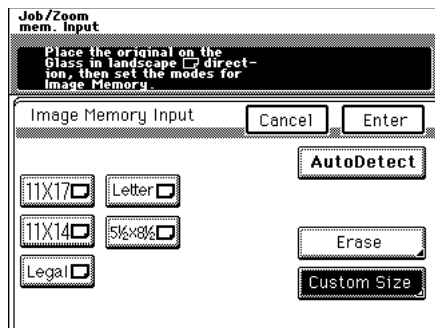- Touch **Custom Size** on the screen given in step 5.



  1155O592EA


- Touch  or  to set the whole number for X and touch the **X** key. The underline moves to the right. Then touch  or  to set the fractional number and touch the **X** key. Now the value for X has been fixed.

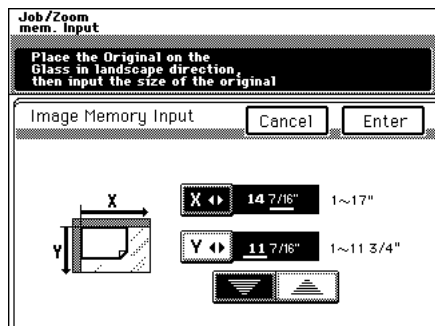


1155O594EA

- Do the same for Y, then touch **Enter**.


You have a choice of the following three types of erase:

- Left edge erase 


Stores the image after erasing the left edge of the original.

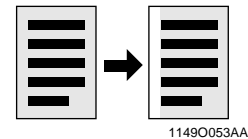


1149O053AA

- Top edge erase 


Stores the image after erasing the top edge of the original.

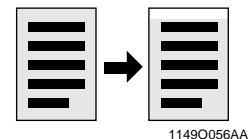

1149O056AA

- Frame erase 

Stores the image after erasing the four edges of the original.

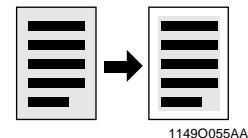


1149O055AA




3. Image Memory Input

7 Select the desired erase position.

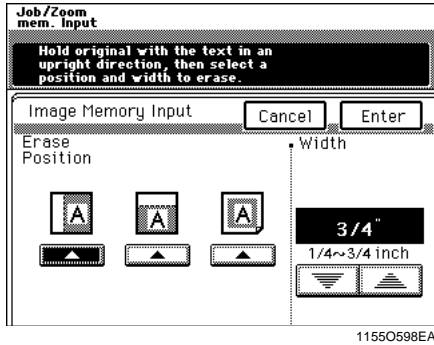

11550598EA

8 Using the or key, set the desired erase width.

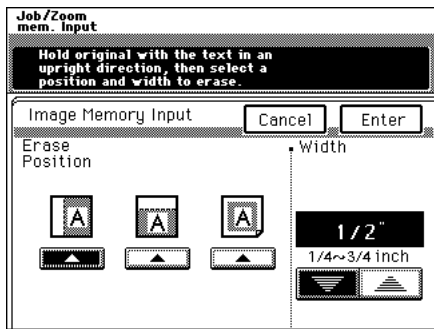


11550600EA

**Useful Tip**  
The erase width can range between 1/4" ~ 3/4" variable in /16" increments.


9 Touch **Enter** .

10 Touch **Enter** .

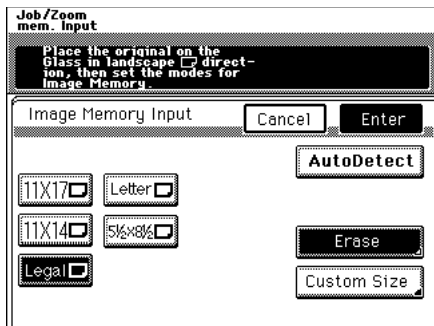


11550602EA

11 As illustrated on the Touch Panel, place the original directly on the Original Glass.

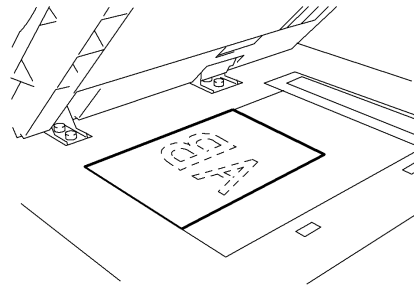

11550557AA

12 Select an image orientation the same as that of the original.

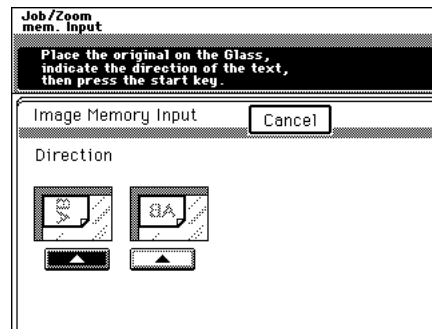


11550603CA


13 Press the Start key.

## Checking the Programmed Image


- 1 Press the Utility key.

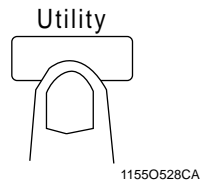


- 2 Touch **Job/Zoom mem. Input**.

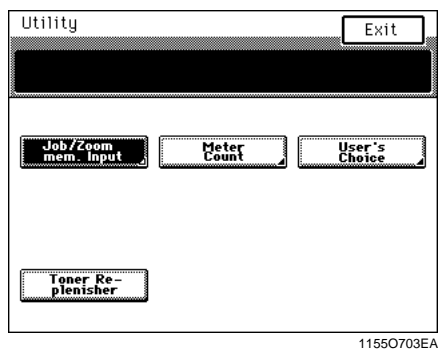


- 3 Touch **Image Memory Input**.

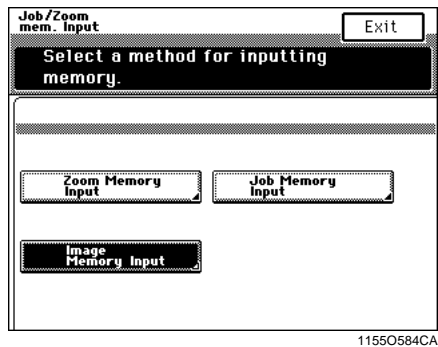

- 4 Touch **Check**, then touch the number key to be checked.

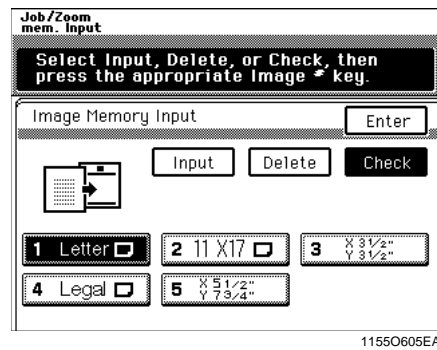

- 5 Select the copy paper.

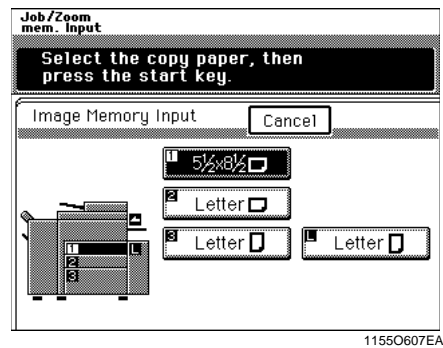

- 6 Press the Start key and the programmed image is printed on the copy.

### Useful Tip


Programmed images may be checked by using the screen for calling up a preprogrammed image.

Checking the Preprogrammed Image p. 3-64


3. Image Memory Input

**Deleting a Programmed Image**


1 Press the Utility key.

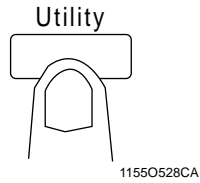


2 Touch **Job/Zoom mem. Input**.

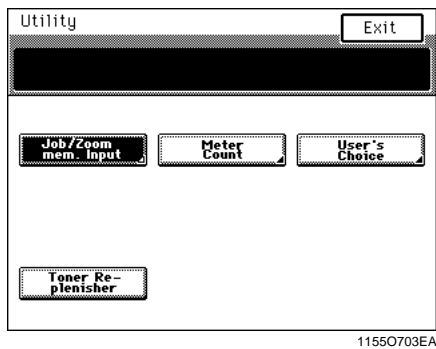

3 Touch **Image Memory Input**.

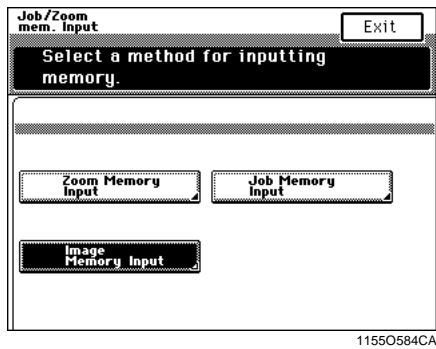

4 Touch **Delete**, then touch the number key to be deleted.

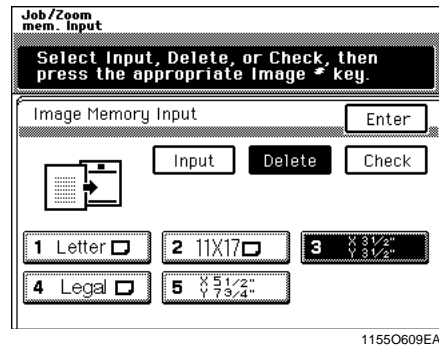

5 Touch **Enter**.

## 4. Meter Count and Toner Replenisher

---

### Meter Count

Touching **Meter Count** allows you to check the total count of each of the following seven counters.

---

#### Total Counter

Shows the total number of copies made since the installation of the copier.

#### Account Total

Shows the total number of copies made by the active accounts.

#### Size Counter

Shows the number of copies made on copy paper of a preset size. (The size will be set by your Tech. Rep.)

#### Printer Total Counter

Shows the total number of prints produced by the copier configured as a printer.

#### 2-Sided Total

Shows the number of 2-sided copies made.

#### Printer Size Counter

Shows the number of prints produced by the copier configured as a printer on paper of a size preset for Size Counter.

#### 2-Sided Size

Shows the number of 2-sided copies made on copy paper of a preset size (the same size as set for Size Counter).

### Toner Replenisher

Touching **Toner Replenisher** sets the copier into the auxiliary toner replenishing mode. The copier tends to exhaust the supply of toner rapidly when making a number of copies from an original with dark solid areas such as a photo. As a result, the image density of the copy will become lighter. In such a case, you can use Toner Replenisher to regain the normal image density quickly.

---


#### NOTES

- Do not turn OFF the Power Switch or open the Front Door while the copier is replenishing toner.
  - Toner is not replenished if the image density is sufficiently high.
  - The toner replenishing sequence ends automatically.
-

## 5. User's Choice

The copier has been set so that the most frequently used settings are automatically selected in the initial mode. User's Choice allows you to select the default settings which are automatically selected in the initial mode according to your own needs. By setting defaults that are most frequently used, time and effort to make extra settings will be eliminated when the copier is turned ON or when Auto Panel Reset is activated.

### User's Choice Functions

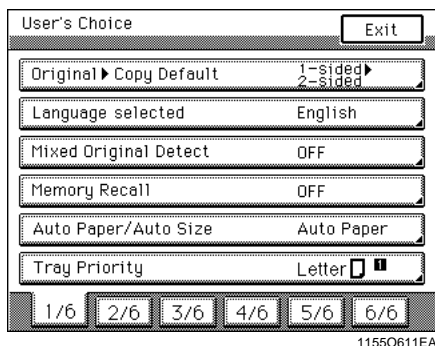

A listing of User's Choice functions is given in six pages of menu, from **1/6** to **6/6**. To show the listing of each page, touch the desired page number key at the bottom of the Touch Panel.

**1/6** ⇨ p. 4-15

Original ▶ Copy Default

Language Selected

Mixed Original Detect

Memory Recall

Auto Paper/Auto Size

Tray Priority

**2/6** ⇨ p. 4-16

2in1, 4in1, Booklet Copy Zoom

Exposure Priority

Default Level

Output Priority

Intelligent Sorting

Criss Cross Mode

**3/6** ⇨ p. 4-17

Realign Warning

“Small” Originals

4in1 Copy Order

Date Printing Format

Date Printing Position

Page Number Position

**4/6** ⇨ p. 4-18

Confirmation Beep

**5/6** ⇨ p. 4-18

Universal Tray

Special Paper

Auto Panel Reset

Energy Save Mode

Plug-in Counter Reset

Auto Shut OFF

**6/6** ⇨ p. 4-19

Date/Time Set

Print Exposure

Priority Device

Density (ADF)

Priority Offset Tray

Administrator Mode

**Useful Tips**

- When “100 Accounts” is selected, the User’s Choice functions of **1/6** to **4/6** can be set for each account after the corresponding access code has been entered. Note, however, that when “100 Accounts” is selected, the listing of User’s Choice displayed on the Touch Panel is from **1/4** to **4/4**.
- The administrator can make the User’s Choice settings in common with all 100 accounts after “100 Accounts” has been selected.
  - ① With the Touch Panel prompting you to enter the access code, press the **Utility** key.
  - ② Touch **User’s Choice**.
  - ③ Enter the administrator number from the 10-Key Pad.

\*This allows the administrator to make the settings for **1/6** to **6/6**.

**NOTE**

The User’s Choice settings in common with 100 accounts for **1/6** to **4/6** are not valid for the accounts for which the individual User’s Choice settings have been made after “100 Accounts” was selected.

1/6

**Original ▶ Copy Default**

Specify the original ▶ copy type automatically selected when power is turned ON or panel reset.

The initial setting is 1-Sided ▶ 2-Sided.

Consult your Technical Representative if you want to change the setting to 1-Sided ▶ 1-Sided.

**Language Selected**

Select the language of the Touch Panel messages.

The initial setting is “English.”

**Mixed Original Detect**

Select whether to default to Mixed Original Detection (“ON”) or not (“OFF”) when power is turned ON or panel reset.

The initial setting is “OFF.”

\* If the following combination is set at a time in User’s Choice, the Mixed Orig. Detect will be automatically canceled and the copies are made in 1 ▶ 2 copy mode.

- Original ▶ Copy Default: 1-sided ▶ 2-sided
- Mixed Orig. Detect: ON

**Memory Recall**

Select whether to enable (“ON”) the function that allows you to use the same image data of the copy cycle that has just been completed or not (“OFF”).

The initial setting is “OFF.”

**Auto Paper/Auto Size**

Specify the default mode selected automatically when power is turned ON or panel reset, either “Auto Paper,” “Auto Size,” or “Manual.”

The initial setting is “Auto Paper.”

**Tray Priority**

Specify the default paper source that is automatically selected.

The initial setting is “1” (1st Drawer).

### 2in1, 4in1, Booklet Copy Zoom

Select whether to enable (“ON”) or disable (“OFF”) recalling a default zoom ratio for 2in1, 4in1, or Booklet Creation. Setting is possible for “2in1/4in1” and “Booklet Creation.”

- “2in1/4in1”

Default zoom ratios:

2in1: 0.647

4in1: 0.500

The initial setting is “ON.”

- “Booklet Creation”

Default zoom ratio:

Booklet Creation: 0.647

The initial setting is “ON.”

### Exposure Priority

Select the default exposure mode selected automatically when power is turned ON or panel reset, either “Auto Exposure” or “Manual.”

The initial setting is “Auto Exposure.”

### Default Level

#### Auto

Select the default exposure level in the Auto Exposure mode, either “Lighter,” “Normal,” or “Darker.”


The initial setting is “Normal.”

#### Manual

Set the default exposure level in the Manual Exposure mode.

The initial setting is “5.”

\* With EXP5 at the central level, the exposure level will become lower as the number becomes smaller, and it will become higher as the number becomes greater.

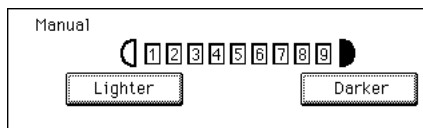

1155O685CA

### Output Priority

Select the default finishing type when the copier is equipped with a Finisher from among the following: Non-Sort, Sort, Group, Non-Sort + Hole Punch, Sort + Hole Punch, Sort + Corner Staple, Sort + Corner Staple + Hole Punch, \*Sort + 2-Point Staple, \*Sort + 2-Point Staple + Hole Punch, Group + Hole Punch, Group + Corner Staple, Group + Corner Staple + Hole Punch, \*Group + 2-Point Staple, \*Group + 2-Point Staple + Hole Punch.

The initial setting is “Non-Sort.”

\*Only when the Finisher FN-3 is mounted.

### Intelligent Sorting

Select whether to turn “ON” or “OFF” the function that automatically switches between Sort and Non-Sort, selecting Non-Sort if only a single original is loaded and Sort if two or more originals are loaded in the Electronic Document Handler.

The initial setting is “ON.”

### Crisscross Mode

Select whether to enable (“ON”) or disable (“OFF”) crisscross sorting when the conditions for crisscross sorting are met and Sort or Group is selected.

The initial setting is “ON.”

3/6

### Realign Warning

Select whether to give (“ON”) a warning message or not (“OFF”) when the original is placed out-of-alignment on the Glass.

The initial setting is “OFF.”

### “Small” Originals

 
 
Select whether to enable (“ON”) a copy cycle or not (“OFF”) when it is initiated by pressing the Start key with no originals placed on the Original Glass or with an original smaller than the detectable size placed on the Glass in the Auto Paper mode.

If this function is turned “ON,” the copy cycle is run using the paper loaded in the default paper source. If turned “OFF,” a warning message appears to instruct the user to select the paper.


The initial setting is “ON.”

### 4in1 Copy Order

Select the default copying order in the 4-in-1 mode from among the following two:



The initial setting is

 



### Date Printing Format

Select the format for date printing, i.e., “punctuation,” “date format,” and “year.”



- “Punctuation” can be either XX/XX/XX or XX.XX.XX.  
The initial setting is XX/XX/XX.
- “Date Format” can be either '98/12/27, 12/27/'98, DEC/27/'98, 27/12/'98, or 27/DEC/'98.  
The initial setting is '98/12/27.
- “Year” can be either 'yy or yyyy.  
The initial setting is 'yy.

### Date Printing Position

Enter the position at which to print the date by X and Y using the  or  keys. The dimension can range from 3/16” ~1-9/16”.

The initial setting is X: 1/4”, Y: 3/4”.

### Page Number Position

Enter the position at which to print the page number using the  or  keys. It can range from 3/16” ~1-9/16” from the bottom of the page.

The initial setting is 1/4”.



4/6

**Confirmation Beep**

Select whether to turn “ON” or “OFF” the beep that sounds each time a key on the Touch Panel is touched.

The initial setting is “ON.”

5/6

**Universal Tray**

Select the default paper size detection for the Universal Tray, either Auto Detect or Custom Size. The initial setting is “Auto Detect.”

**Special Paper**

Designate a drawer for special paper.

The initial setting is “Normal” for all drawers. See p. 3-10 for Special Paper Setting.

**Auto Panel Reset**

Select the time it takes the auto panel reset function to be activated from among “30 seconds,” “1 min.,” “2 min.,” “3 min.,” or “5 min.,” or not activate the function at all (“No Reset”).

The initial setting is “1 min.”

**Energy Save Mode**

Set the time it takes the copier to enter the Energy Saver mode, from 1 min. ~ 240 min. (in 1 min. increments).

The initial setting is “15 min.”

**Plug-In Counter Reset**

Select whether to reset the panel (“ON”) or not (“OFF”) when the Plug-In Counter is pulled out of the copier or a magnetic card is pulled out of the Data Controller.

The initial setting is “ON.”

**Auto Shut Off**

Select the time it takes the Auto Shut Off function to be activated, from 15 min. ~ 240 min. in 1 min. increments. Auto Shut Off shuts down the copier a given period of time after the last operation.

The initial setting is 90 min.

\*A setting is also possible to disable Auto Shut Off.

### Date/Time Set

Set the date and time-of-day.

The initial setting is "1997/04/01, 00:00:00."

### Print Exposure

Select the print exposure level from among "Lighter," "Normal," or "Darker."

The initial setting is "Normal."

### Priority Device

Select the configuration of the Di620, either as a "Copier" or "Printer."

The initial setting is "Copier."

### Density (ADF)

Select the density level according to the original, either Mode 1 or Mode 2.

The initial setting is "Mode 1."

Mode 1: Used for the standard original, such as a word-processor made document.

Mode 2: Effective in reproducing a pale original, such as a faint pencil-written document.

### Priority Offset Tray

<Only when the Finisher FN-3 is mounted>

Select the output tray into which copied paper is to be fed, either "Top Tray" or "Bottom Tray."

The initial setting is "Top Tray."

### Administrator Mode

This mode is used only by the administrator of your copier. When Administrator Mode is selected, the copier prompts you to enter your "Administrator's #." The following functions can be set only when the correct administrator number is entered.

- Copy Track
- Max. Copy Sets
- Non-Auto Shut Off

The administrator number is set by the Technical Representative. For more details, consult your Technical Representative.

See p. 4-22 for setting the Copy Track function.

#### <Copy Track>

This function allows the administrator to keep track of the number of copies made in the Copier mode and the number of prints made in the Printer mode for each account.

Select whether to turn "ON" or "OFF" the Copy Track function for "Copier" or "Printer" and select the Copy Track Method, either "100 Accounts" or "1000 Accounts."

The initial setting is "OFF."

When "100 Accounts" is selected:

- ◆ Access Code:  
You can program or change your access code (for a max. of 100 accounts).
- ◆ Copy Limit:  
You can limit the maximum number of copies that can be made.
- ◆ Total Count:  
Displays the count of the Total Counter. You can also clear the counter.
- ◆ Size Count:  
Displays the count of the Size Counter. You can also clear the counter.
- ◆ Account No.:  
Program or change the account number.

When "1000 Accounts" is selected:

- ◆ Total Count:  
Displays the count of the Total Counter. You can also clear the counter.

5. User's Choice

---

6/6

<Max. Copy Sets>

Limit the number of copies or copy sets that can be made per job.

The initial setting is "OFF."

<Non-Auto Shut Off>


This function can disable the Auto Shut Off function.

Select whether to enable ("ON") or disable ("OFF") the Non-Auto Shut Off function.


The initial setting is "OFF" (disable).

## Making the User's Choice Settings


- 1 Press the Utility key.

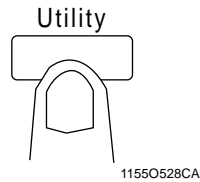


- 2 Touch **User's Choice**.

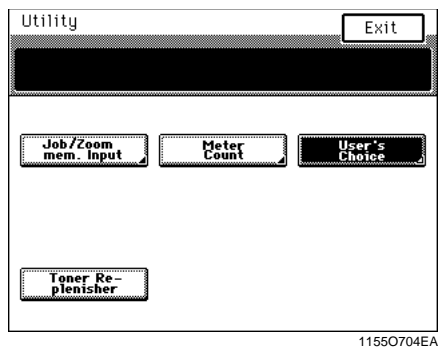


- 3 Select the key of the page number on which the desired User's Choice function is listed. For example, to change Output Priority from Non-Sort to Sort, touch **2/6**.

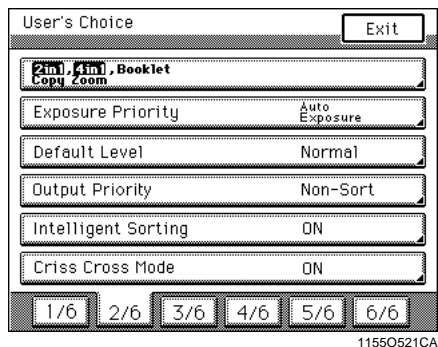

- 4 Touch the key of the desired User's Choice function. For example, touch **Output Priority**.

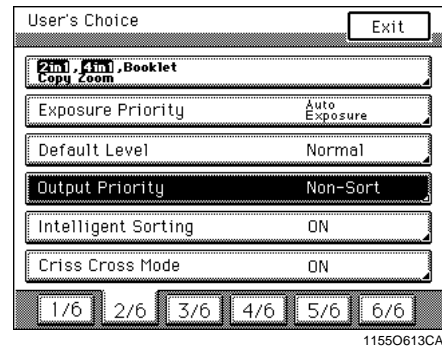

- 5 Touch **Sort**.

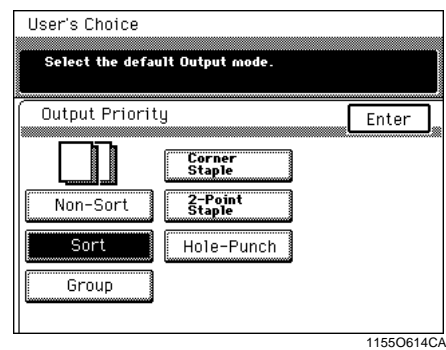

- 6 Touch **Enter**.  
\*Repeat steps 3 to 6 to make new settings for other User's Choice functions.


- 7 Touch **Exit**.

## Copy Track Function


The administrator of the copier should make the setting, either “100 Accounts” or “1000 Accounts.”  
 \*If the copier is equipped with a Hard Disk Drive Kit and “100 Accounts” is selected, it is possible to make the User's Choice settings for each account.

### Setting the Copy Track Function


1 Press the Utility key.

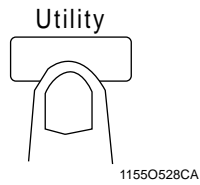


2 Touch **User's Choice**.

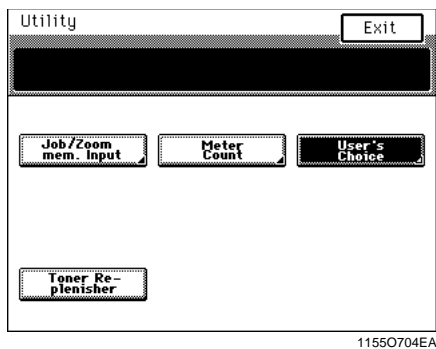


3 Touch **6/6**.

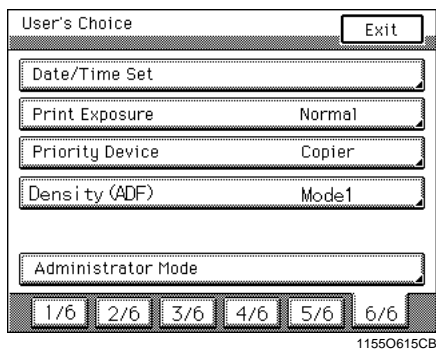

4 Touch **Administrator Mode**.

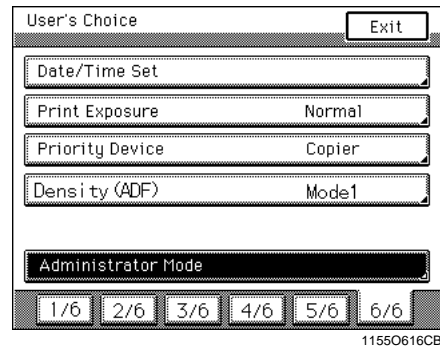

5 Enter the administrator number from the 10-Key Pad.

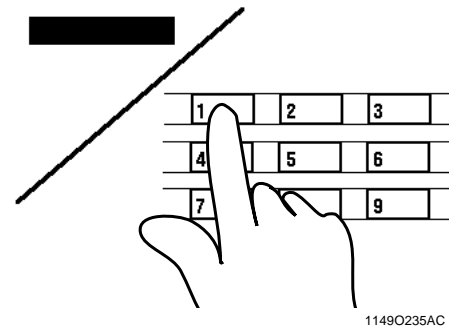

#### NOTES

- Your Technical Representative is to program and change the administrator number. For details, consult your Technical Representative.
- The administrator should remember the administrator number.

- 6 Touch **Copy Track** .

11550705EA

- 7 Touch **ON** or **OFF** of the desired configuration (Copier or Printer), then select the appropriate Copy Track Method. For example, to keep track of 100 accounts, touch **100 Accounts** , and then **Enter** .

11550618CB

- 8 Initialize the Copy Track function data. Touch **Yes** and **Enter** .

11550619CA

**NOTE**

If you change the Copy Track Method, be sure to initialize the Copy Track data.

- 9 Touch **Enter** .

- 10 Touch **Exit** .

11550706EA

**NOTE**

When "100 Accounts" is set, program the access code for each account. Programming the Access Code [p. 4-24](#)

**Useful Tip**

You can have the copy track data printed on paper.

- Touch **Copy Track Data** .


11550707EA

- Place LetterL copy paper on the Intelligent Multi Bypass Tray lengthwise and press the Start key.


## Programming the Access Code

An access code can be programmed when "100 Accounts" is selected. These procedures assume that the copier is equipped with a Hard Disk Drive Kit.


**1** Press the Utility key.

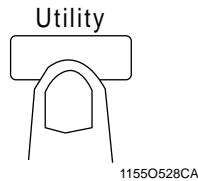


**2** Touch **User's Choice**.

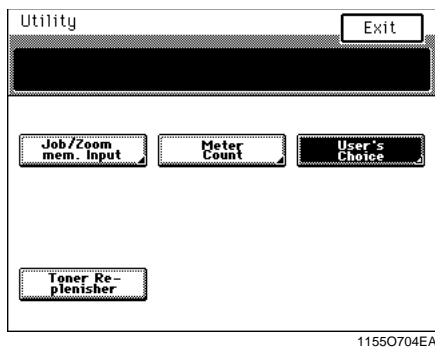


**3** Enter the administrator number from the 10-Key Pad.

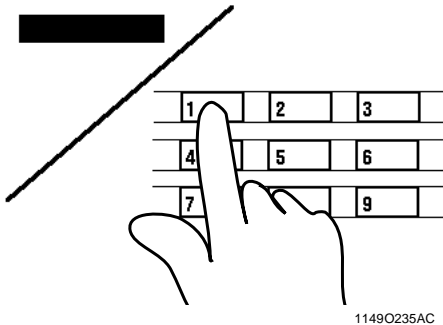


**4** Touch **6/6**.

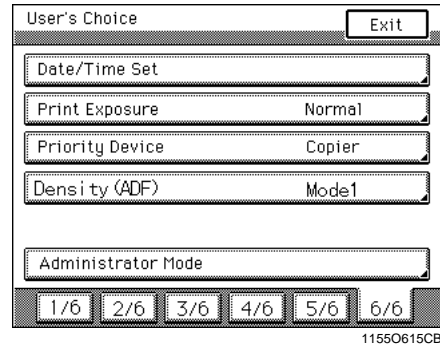

**5** Touch **Administrator Mode**.

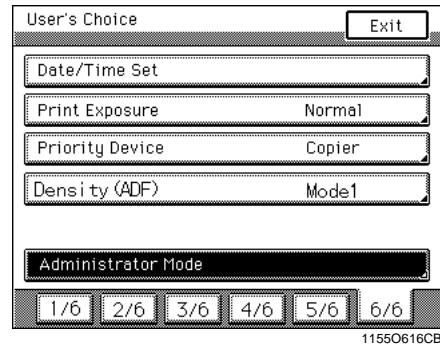

**6** Touch **Copy Track Data**.

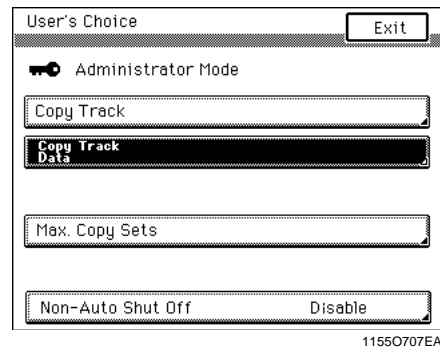

### NOTES

- Your Technical Representative is to program and change the administrator number. For details, consult your Technical Representative.
- The administrator should remember the administrator number.

- 7 Select the page number on which the target account is shown.

User's Choice

Copy Track Data can be printed.  
Place Letter  paper in the Bypass Tray and press the start key.

Copy Track Data

1/20	3/20	5/20	7/20	9/20
11/20	13/20	15/20	17/20	19/20

11550623EA

- 8 Touch the Access Code key of the target account.

User's Choice


Select an account, then input/change the data using the 10-key Pad.

Copy Track Data 1/20

NO.	Total Count	Size Count	Copy Limit	Access Code
0001	0	0	-----	----
0002	0	0	-----	----
0003	0	0	-----	----
0004	0	0	-----	----
0005	0	0	-----	----

11550624CA

- 9 Enter the access code from the 10-Key Pad. Then, touch .

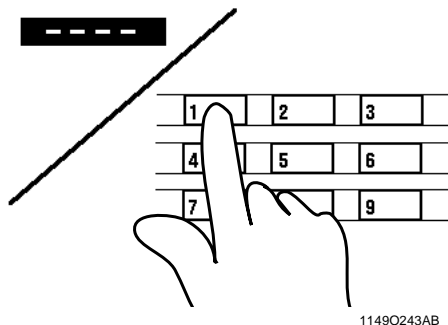

### NOTES

- The access code should be a 4-digit number.
- To correct a number entry, press the  key and then enter the new number.
- If you want to program an access code for another account, repeat steps 7 through 9.
- If a new access code is programmed, the old one is erased.
- If a new access code entered already exists for another account, the entry is rejected. Enter a different access code.

- 10 Touch .

- 11 Touch .

User's Choice

Administrator Mode

Copy Track

Copy Track Data

Max. Copy Sets

Non-Auto Shut Off

11550706EA

### Useful Tip


The account number may be changed by touching the corresponding  key and using the 10-Key Pad. If the account number newly entered already exists, that entry is canceled.




## Setting a Copy Limit for Each Account

A limit for the number of copies made can be set for each account when "100 Accounts" is selected. These procedures assume that the copier is equipped with a Hard Disk Drive Kit.


**1** Press the Utility key.

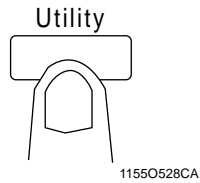


**2** Touch **User's Choice**.

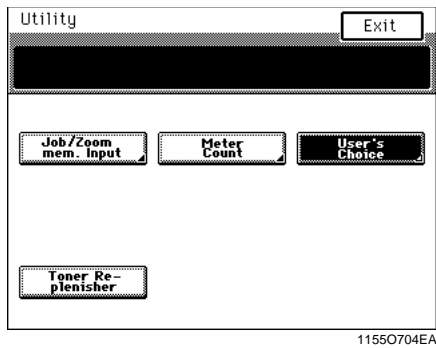


**3** Enter the administrator number from the 10-Key Pad.

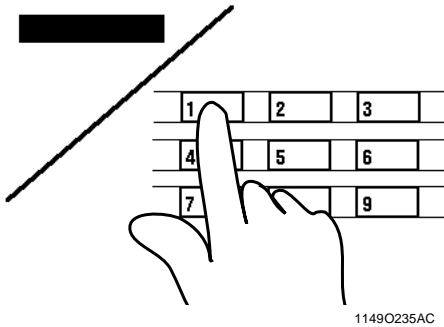


**4** Touch **6/6**.

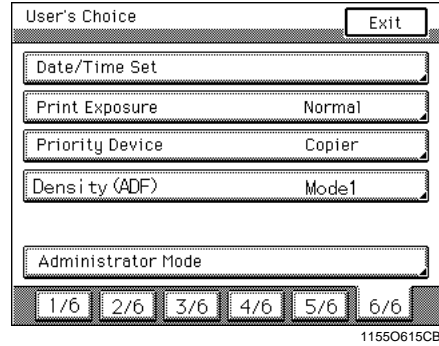

**5** Touch **Administrator Mode**.

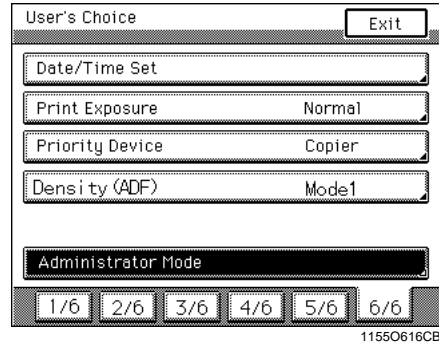

**6** Touch **Copy Track Data**.

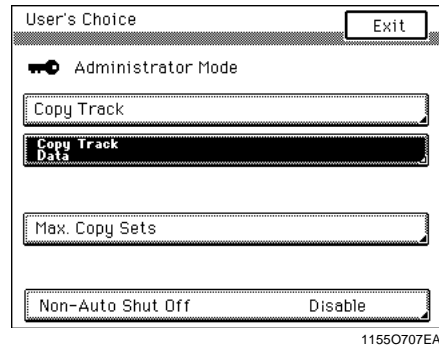

**NOTES**

- Your Technical Representative is to program and change the administrator number. For details, consult your Technical Representative.
- The administrator should remember the administrator number.

- 7 Select the page number on which the target account is shown.


11550623EA

- 8 Touch the Copy Limit key of the target account.

NO.	Total Count	Size Count	Copy Limit	Access Code
0001	0	0	-----	1111
0002	0	0	-----	----
0003	0	0	-----	----
0004	0	0	-----	----
0005	0	0	-----	----

11550625CA

- 9 Enter a number for the Copy Limit from the 10-Key Pad. Then, touch **Enter**.

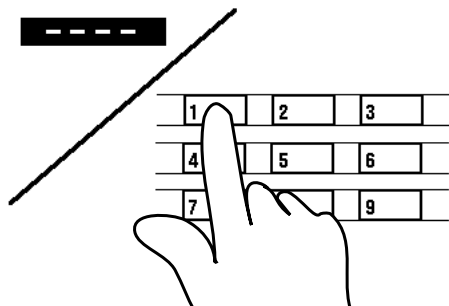

11490243AB

- 10 Touch **Enter**.

- 11 Touch **Exit**.

11550706EA


#### NOTES

- To correct a number entry, press the **C** key and then enter the new number.
- If you want to set a Copy Limit for another account, repeat steps 7 through 9.


## Clearing Counters for Each Account

A counter can be cleared for each account when “100 Accounts” or “1000 Accounts” is selected. It is also possible to clear all counters of all accounts at once.


**1** Press the Utility key.

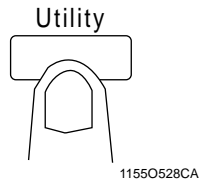

**2** Touch **User's Choice**.

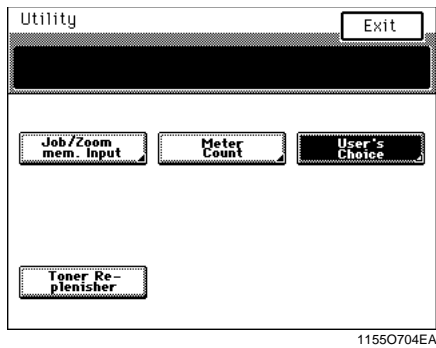


**3** Enter the administrator number from the 10-Key Pad.

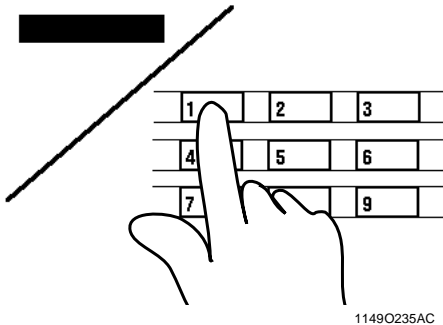


**NOTES**

- Your Technical Representative is to program and change the administrator number. For details, consult your Technical Representative.
- The administrator should remember the administrator number.
- If “1000 Accounts.” is selected, enter the administrator number after step 5.


**4** Touch **6/6**.

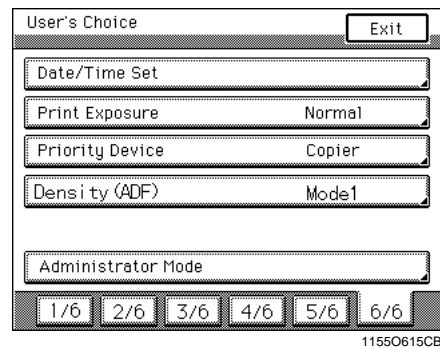


**5** Touch **Administrator Mode**.

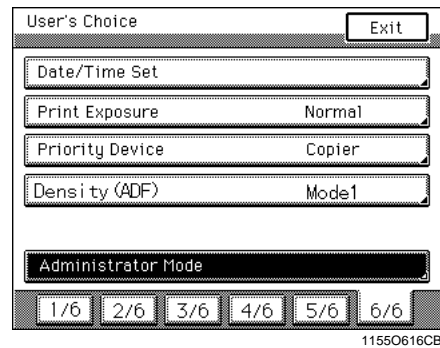


6 Touch **Copy Track Data**.

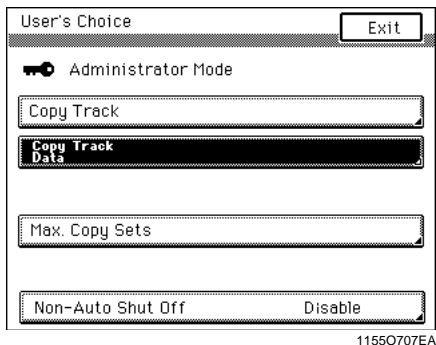

9 Press the **Enter** key and then touch **Enter**.

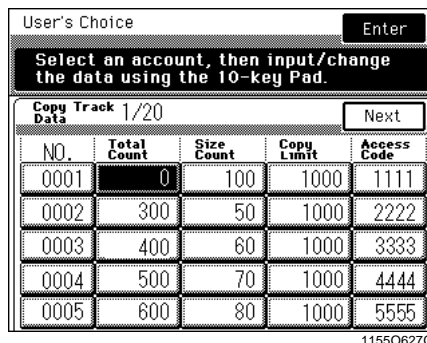

7 Select the page number on which the target account is shown.

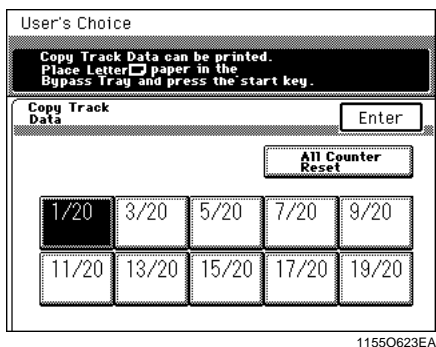

**NOTE**

If you want to clear the counter of another account, repeat steps 7 through 9.


**Useful Tip**

To undo a clear operation, press the Interrupt key.

**Useful Tip**


To clear the counters of all accounts at once, touch **All Counter Reset**.

8 Touch the counter key of the target account.

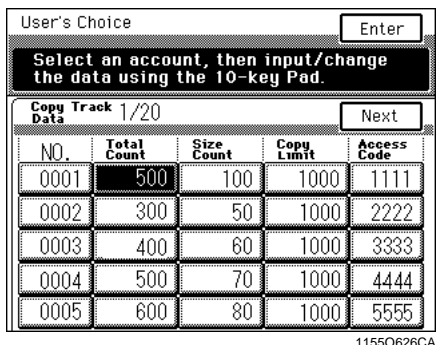

10 Touch **Enter**.

11 Touch **Exit**.

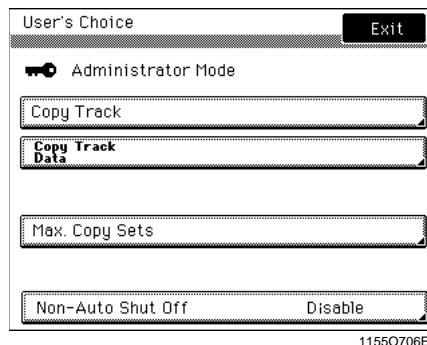



# Chapter 5


---

When a Message Appears

Chapter 5

*When a Message Appears*

# 1. When the Message “The current Paper Drawer is empty.” Appears

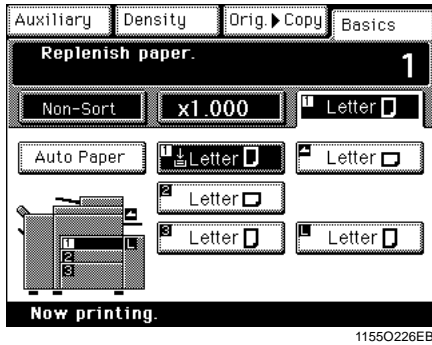


When the drawer currently selected for use runs out of paper, the message shown on the left appears. The current copy cycle is interrupted and you cannot start a new copy cycle. The blinking drawer has run out of paper.

Add paper by using the following procedure.

## Adding paper


### 1st Drawer

1 Slide out the 1st Drawer.

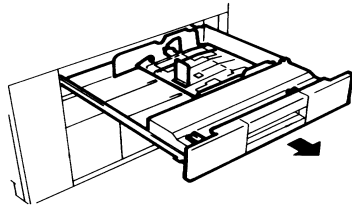


1075O101DA

3 Slide the Drawer back in.

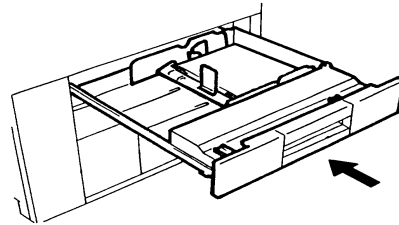

1161O095DA

2 Load the paper stack into the Drawer so that its front side faces down.

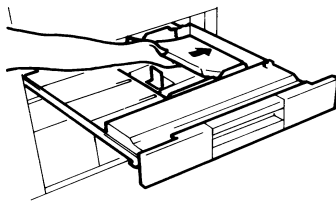

1161O009AA

**NOTE**

The paper should be loaded no higher than the ▼ (Max. Level Indicator).




1145O555KA

## 1. When the Message “The current Paper Drawer is empty.” Appears


### 2nd Drawer

**1** Slide out the 2nd Drawer.

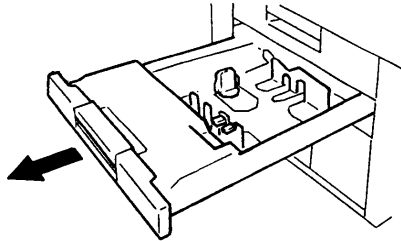


1161O096DA

**4** Slide the Drawer back in.

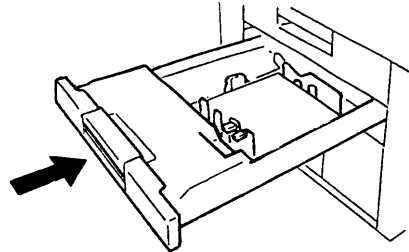


1161O104DA

**2** Slide the Edge Guides in the direction of the arrow to suit the paper size.

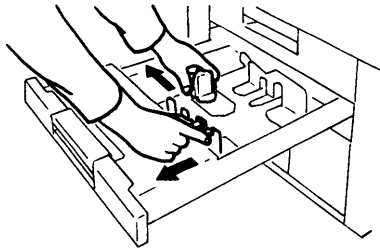

1161O097DA

**3** Load the paper stack into the Drawer so that its front side faces down.

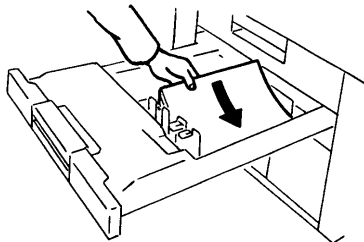

1161O099DA

#### **NOTE**

The paper should be loaded no higher than the ▼ (Max. Level Indicator).




1145O555KA



**1. When the Message “The current Paper Drawer is empty.” Appears**

**3rd Drawer**

**1** Press the Paper Descent Key and then slide the Drawer out.

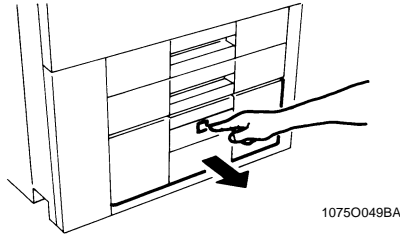

**Indication of the Paper Descent Key**




**Steady Light:**  
The 3rd Drawer has run out of paper when a Drawer other than the 3rd is currently selected for use.




**Blinking Light:**  
The 3rd Drawer has run out of paper when the 3rd Drawer is currently selected for use.

**3** Load another paper stack into the left half of the Drawer, front side face down. Press the leading edge of the paper stack tightly up against the left side of the Drawer.

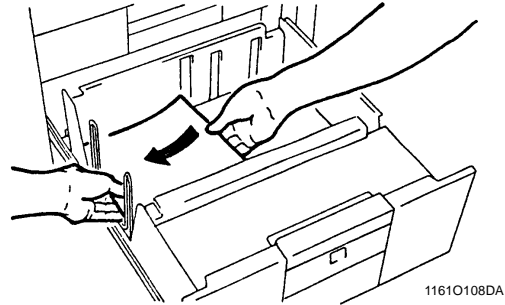


**NOTE**

 
The paper should be loaded no higher than the ▼ (Max. Level Indicator).



**2** Load the paper stack into the right half of the Drawer, front side face down. Press the leading edge of the paper stack tightly up against the right side of the Drawer.

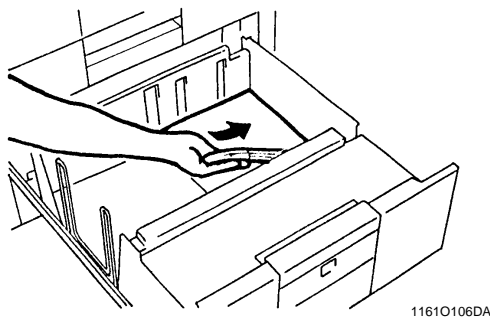


**4** Slide the Drawer back in and press the Paper Descent Key.

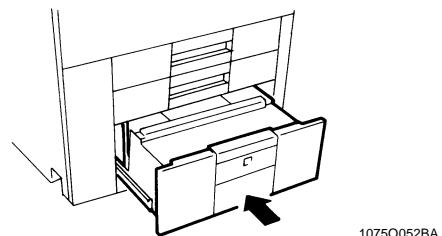

**NOTE**

 
The paper should be loaded no higher than the ▼ (Max. Level Indicator).



## 1. When the Message “The current Paper Drawer is empty.” Appears


### Large Capacity Cassette

- 1** Holding the Door Lock Release Lever, open the Cassette Door.

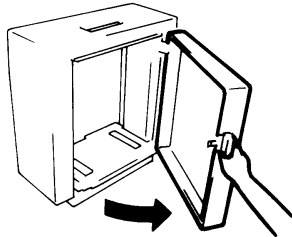


1134O055AA

When adding paper to a partially loaded Cassette, press the Paper Plate Descent Key to lower the Paper Plate before opening the Cassette Door.

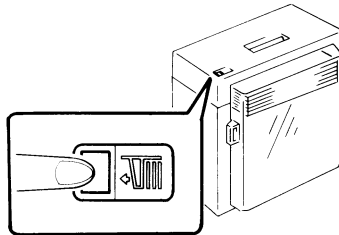

1134O031AA

- 2** Place the paper stack onto the Paper Plate so that its front side faces up.

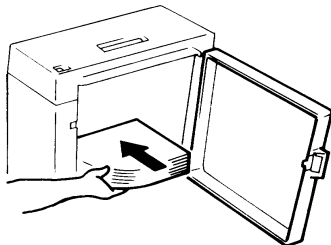

1134O054AA


#### NOTES

- Make sure that the leading edge of the paper stack is pressed tightly up against the Guide Plate on the take-up side of the Cassette.
- The paper should be loaded no higher than the ▼ (Max. Level Indicator).



1145O555KA

- 3** Close the Cassette Door.

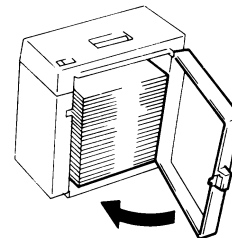


1134O033AA

\* This causes the Paper Plate to rise automatically.

#### NOTE

The Paper Plate may not ascend if the Cassette Door is not closed completely. Be sure to close the Door completely.

## 2. When the Message “Replenish Toner.” Appears

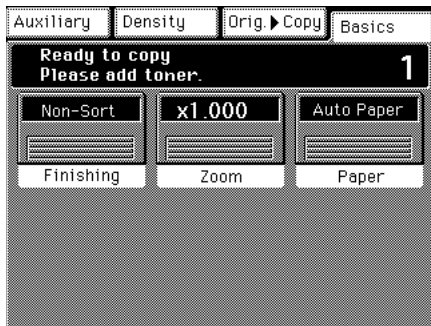

1155O629CB

The message shown on the left appears when toner is soon running out. You can still make copies, but the image density will become lighter and lighter. It is recommended therefore that you replace the Toner Bottle as soon as possible.




1155O630CA

When toner has run out, the message shown on the left appears and you can no longer start a new copy cycle. Replace the Toner Bottle with a new one by following the procedure given below.


### Replacing the Toner Bottle

- 1 Swing down the Upper Front Door.

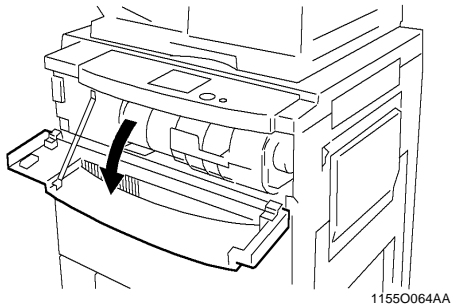


1155O064AA

- 2 Swing open the Toner Bottle Holder and pull out the used Toner Bottle.

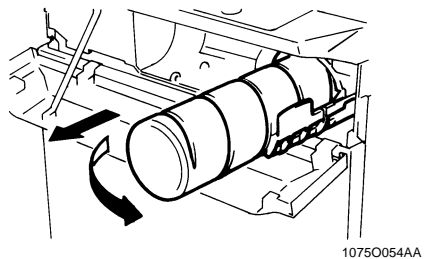

1075O054AA


- 3 Tap a new Toner Bottle against a desk or other hard surface four to five times. Then, turn the Toner Bottle upside down and tap it in the same way again.

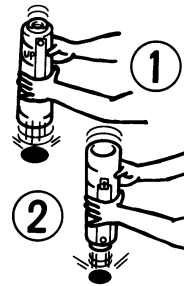

1075O229AA


## 2. When the Message “Replenish Toner.” Appears

- 4** Shake the new Toner Bottle well and turn it over lengthwise five times.

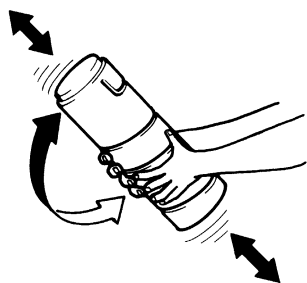


1075O266AA

- 7** Swing the Toner Bottle Holder closed and close the Front Door.

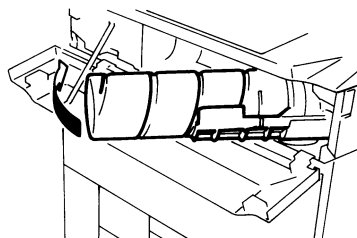


1075O059AA

- 5** With the “UP” marking on top, insert the Bottle into position. Check that the □ marking on the Bottle is aligned with the □ marking on the Toner Bottle Holder.

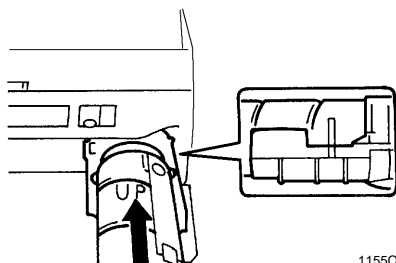

1155O065AA

- 6** Pull the seal off the Toner Bottle.

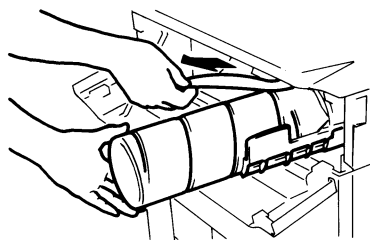

1075O058AA

### NOTES


- Use *ONLY* the specified toner for this copier. Using any other toner could result in trouble.
- Do not throw away, but keep, the used Toner Bottle which will be collected by your Tech. Rep.
- Be careful not to drop the Toner Bottle from a 1 m or more height. It may cause damage to the Toner Bottle.
- When the Front Door is closed, the copier automatically starts replenishing the supply of toner. During this period, do not attempt to turn OFF the Power Switch or open the Front Door.

### Toner Replenisher

Use the Toner Replenisher function available from the User Mode if the image is light immediately after the Toner Bottle has been replaced with a new one. ☞ p. 4-13

### 3. When the Message “The Staple Cartridge is empty.” Appears

<Only when the Finisher FN-3 is mounted>

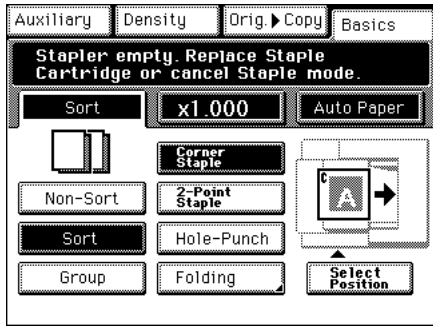


1155P021CA

The message shown on the left appears when the staples are running out.

Replace the Staple Cartridge with a new one by following the procedure given below.

<Only when the Finisher FN-102/Mailbin Finisher is mounted>

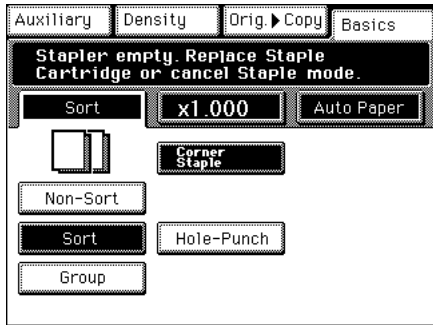


1155P020CA

### Replacing the Staple Cartridge


<Only when the Finisher FN-3 is mounted>

- 1 Holding the Finisher Lock Release Lever, slide the Finisher away from the copier.

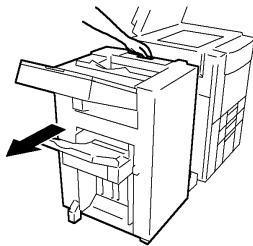


1155O066AA

- 3 Slide out the Staple Unit.

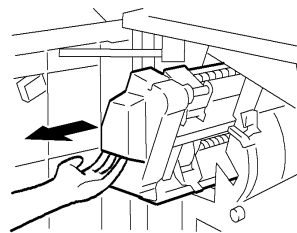


1155O067AA

- 2 Open the Finisher Front Door.

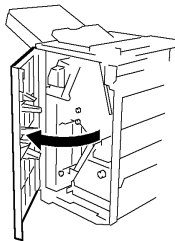

1155O067AA


- 4 While pressing down the Staple Cartridge Lever, pull the Staple Cartridge out its port.

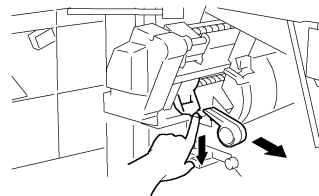

1155O069AA

### 3. When the Message “The Staple Cartridge is empty.” Appears


- 5** Pull the staple sheet about 3 cm out of the new Staple Cartridge and break off that portion.

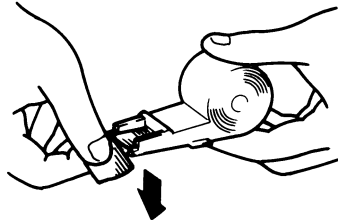

11360012AA


#### NOTE

Check that no portion of the staple sheet hangs out of the cartridge. Break off any portion of the sheet that hangs out of the cartridge.

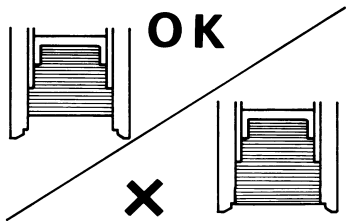


11340076AA

- 6** Insert the new Staple Cartridge until it clicks into position.

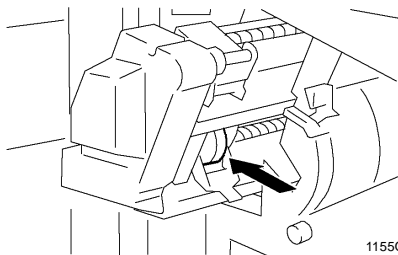


11550070AA

- 7** Push the Staple Unit back in and close the Finisher Front Door.

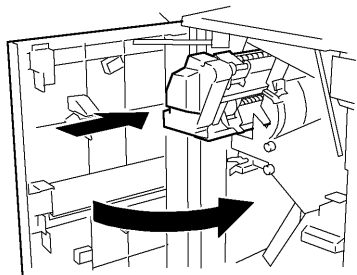


11550071AA

- 8** Slide the Finisher back against the copier.

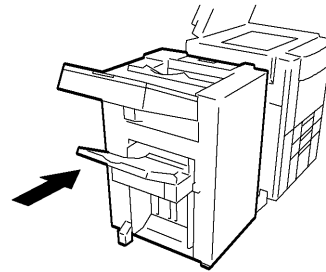


11550072AA

- 9** Touch **Staple** and the copier automatically feeds a sheet of paper to test the stapling.

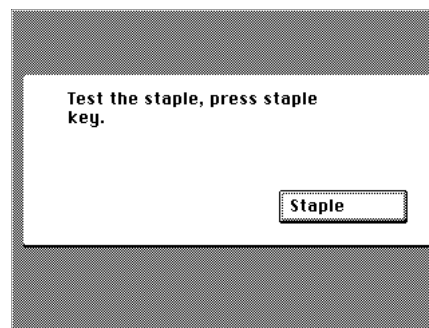

11550633CA

- 10** Remove the sheet of paper to check that it has been properly stapled.  
\* If no staples are evident, repeat the procedure from the beginning.

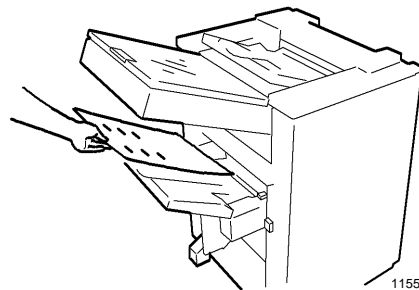

11550644AC


#### NOTES

- Replace the Staple Cartridge only after you are prompted to do that by the message. Removing the Staple Cartridge before then will result in stapling trouble.
- After a new Staple Cartridge has been installed, be sure to run a test-stapling sequence to ensure that staples are properly driven into the paper.


**3. When the Message “The Staple Cartridge is empty.” Appears**

<Only when the Finisher FN-102/Mailbin Finisher is mounted>


**1** Press and turn the knob and open the cover at the rear of the Finisher.

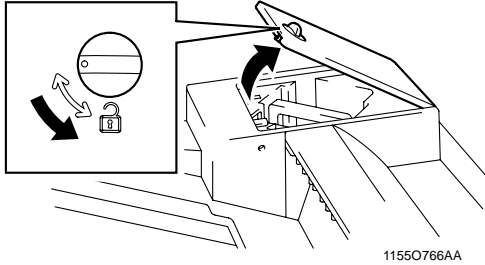


**2** Pull the Stapler Unit out of the well.

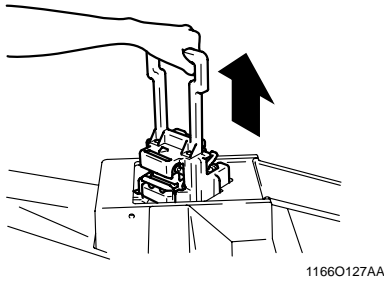


**3** While pressing down the green lever, pull out the Staple Cartridge.

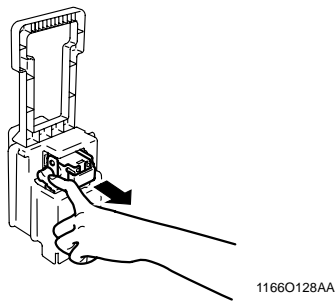


**4** Remove the empty staple clip from the Staple Cartridge.

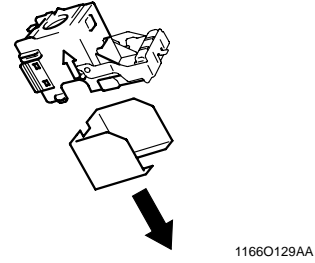


**5** Load a new staple clip into the Staple Cartridge and carefully peel off the Seal.

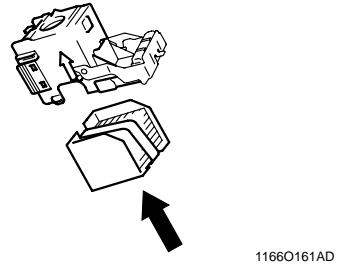

**6** Insert the Staple Cartridge into the Stapler Unit until it clicks into place.

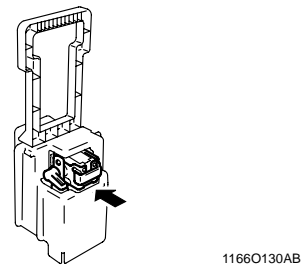


**7** Align the arrows and firmly push the Stapler Unit down into the well.

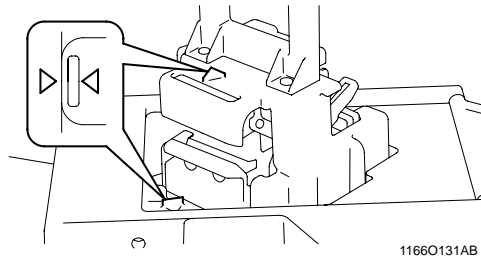


### 3. When the Message “The Staple Cartridge is empty.” Appears

- 8 Press and turn the Knob to lock the cover.

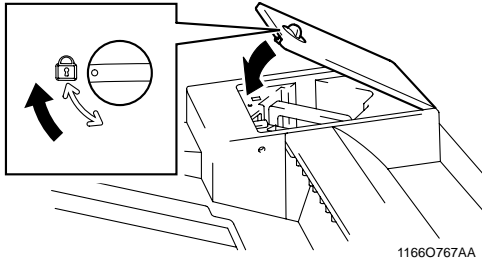


- 9 Touch **Staple** and the copier automatically feeds a sheet of paper to test the stapling.

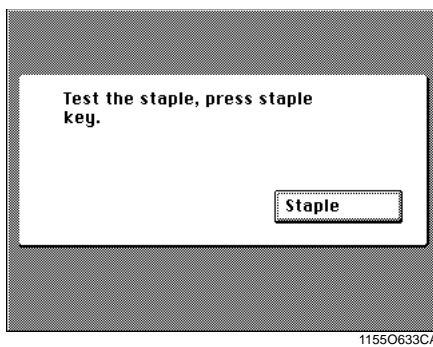

- 10 Remove the sheet of paper to check that it has been properly stapled.

- \* If no staples are evident, clear the staple misfeed. “Clearing the Staple Misfeed.”  
☞ p. 5-34

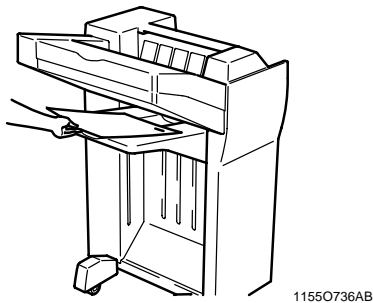


#### NOTES

- *Replace the Staple Cartridge only after you are prompted to do that by the message. Removing the Staple Cartridge before then will result in stapling trouble.*
- *After a new Staple Cartridge has been installed, be sure to run a test-stapling sequence to ensure that staples are properly driven into the paper.*



## 4. When the Message “A paper misfeed has been detected.” Appears

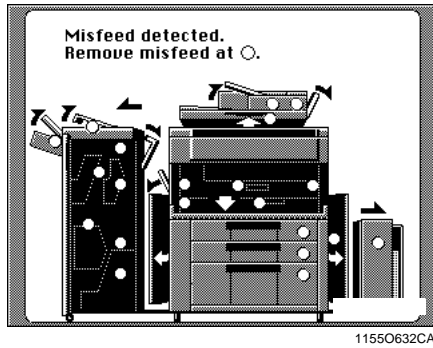


If a paper misfeed occurs during a copy cycle, the message shown on the left appears and that particular copy cycle is stopped in the middle of operation.

Clear the misfed sheet of paper according to the procedure given below.


### Misfeed Location Displays

Different procedures are used to clear a misfed sheet of paper depending on the location. First, isolate the location, then clear the misfeed according to the procedure applicable to the misfeed occurring at that particular location. A blinking dot “○” indicates that there is a misfeed at that location. A lit dot “○” indicates that there might be a sheet of paper stopped at that location.


### Copier p. 5-14

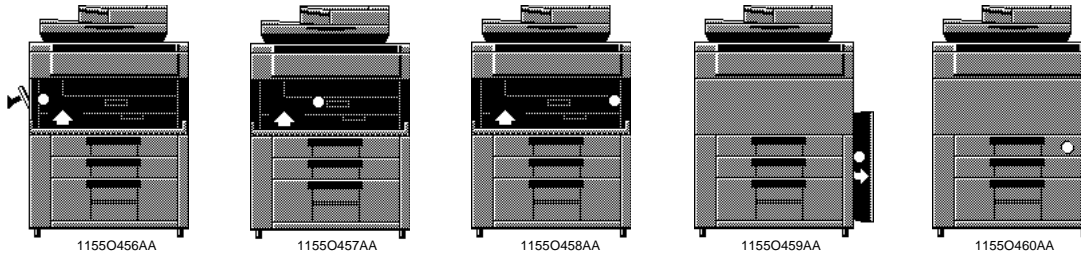

### Duplex Unit p. 5-16

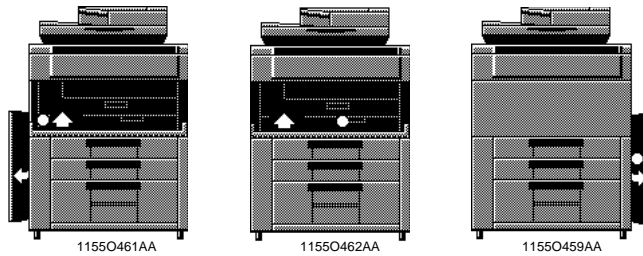


### Electronic Document Handler p. 5-18

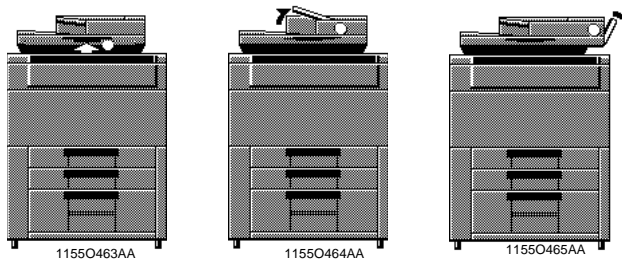


4. When the Message "A paper misfeed has been detected." Appears


**Large Capacity Cassette p. 5-20**

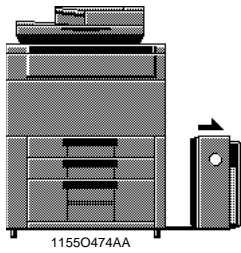


**Intelligent Multi Bypass Tray p. 5-21**

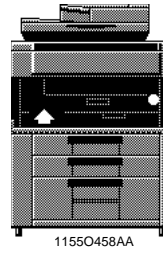

**Finisher FN-3 p. 5-22**

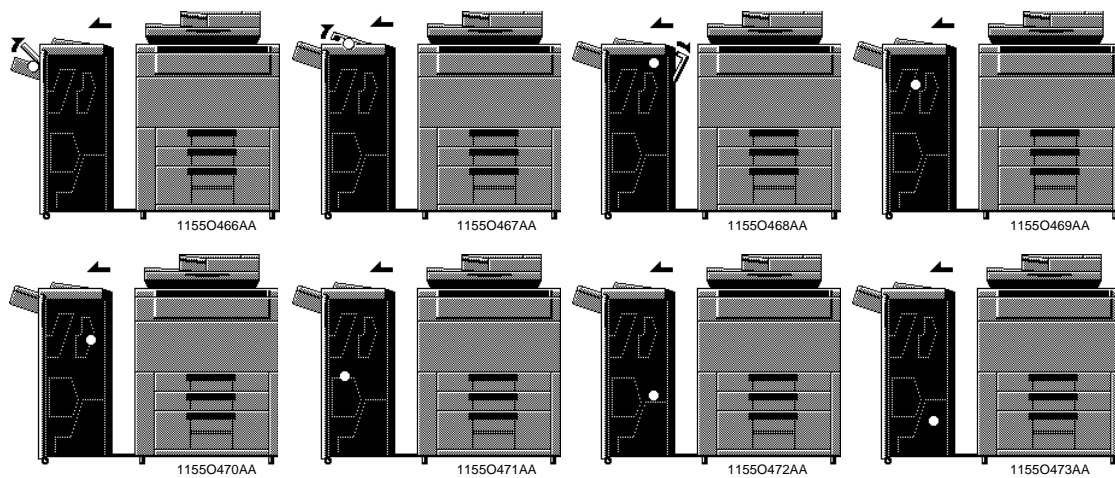

**Finisher FN-102/Mailbin Finisher p. 5-30**

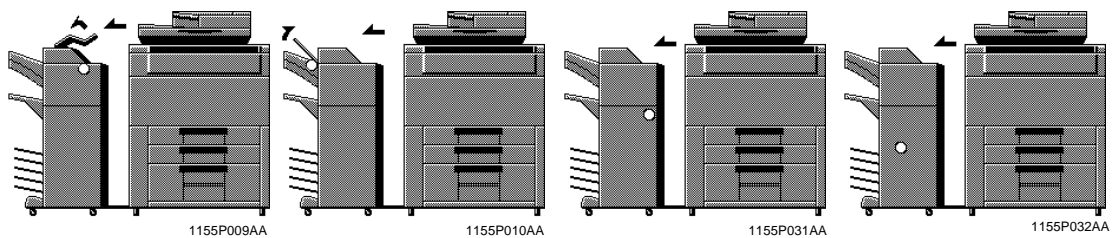


4. When the Message "A paper misfeed has been detected." Appears


Misfeed Clearing Procedures

Copier


1 Open the Misfeed Clearing Guide **L1** , pull out the sheet of paper.

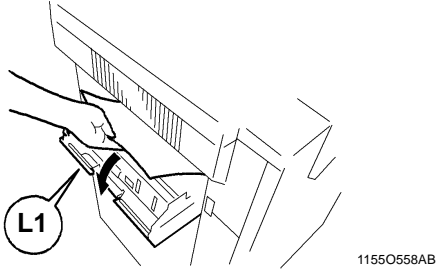


2 Open the Left Door.

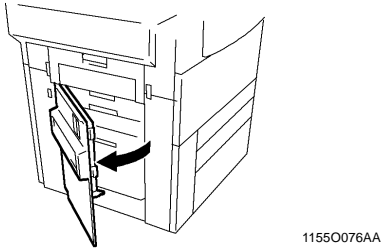

3 Open the Front Door.

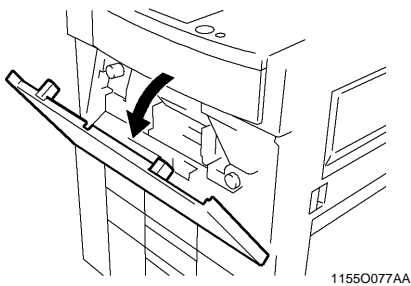


4 Turning Knob **M1** , pull out the sheet of paper. Then turn Knob **D1** to return any paper to the Duplex Unit.

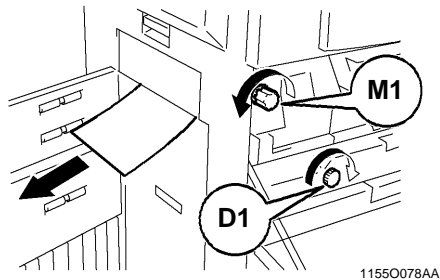


5 Close the Left Door.

6 Open the Right Door.

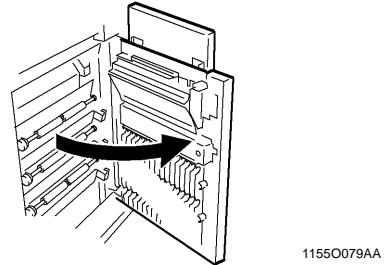


7 Turning Knob **M2** , pull out the sheet of paper.

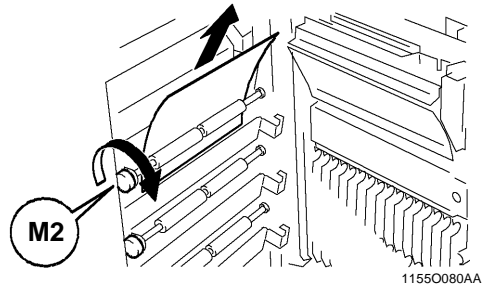


8 Close the Right Door.

9 Turn Knob **M3** to feed the sheet of paper.

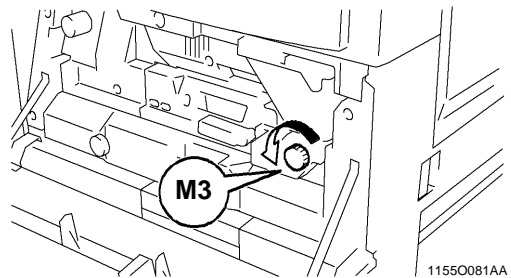


10 Lower the **M4** Lever and slide out the **M5** Unit.

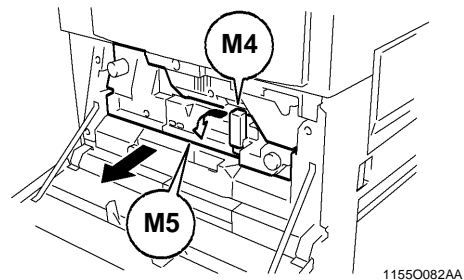


#### 4. When the Message "A paper misfeed has been detected." Appears


- 11** Raising Misfeed Clearing Guide **M6** ,  
remove the sheet of paper.

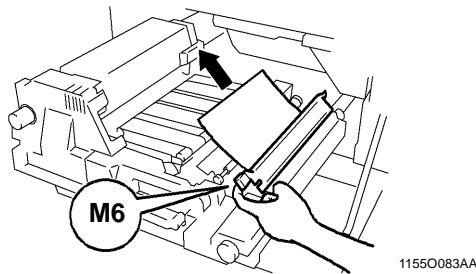

- 12** Turn Knob **M7** and remove the sheet of paper.

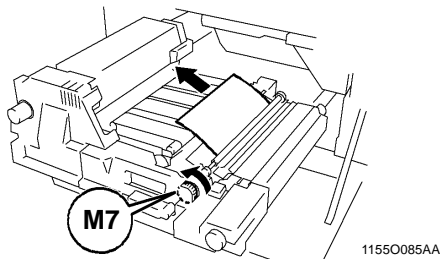


- 13** Opening Misfeed Clearing Guide **M8** ,  
remove the sheet of paper.

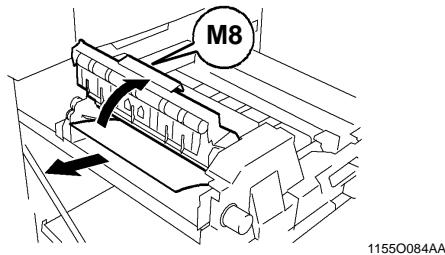

#### ⚠ CAUTION


The area around the Fusing Unit is very hot. Do not touch anything but the paper to prevent you from getting burned.

- 14** Slide in the **M5** Unit and raise the **M4**  
Lever back up again.

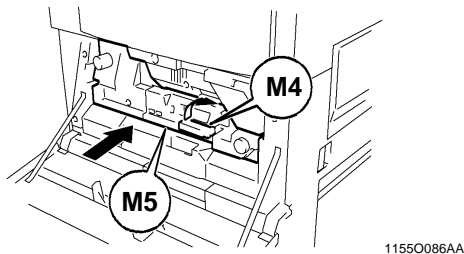


- 15** Close the Front Door.


- 16** Slide out the drawer being used and take out  
the paper stack left in it.

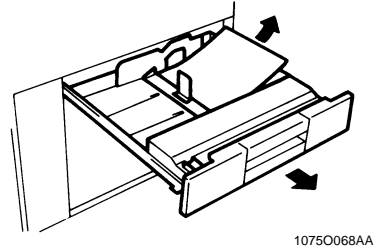

- 17** Reload the paper stack and slide the drawer  
into the copier.

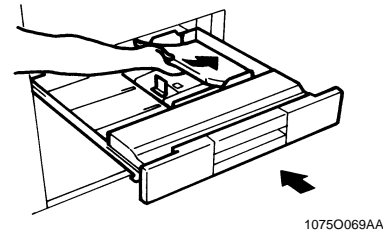

- 18** To reset the paper misfeed indication on the  
Touch Panel, open and close the Front Door.

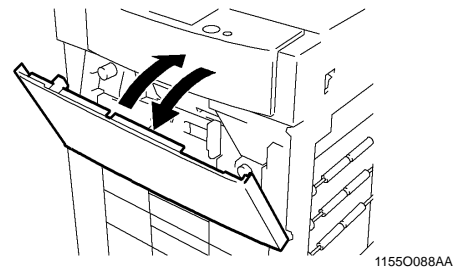


#### Useful Tip

After the paper misfeed has been cleared, the copier automatically resumes a print cycle without pressing the Start key.

**4. When the Message “A paper misfeed has been detected.” Appears**


**Duplex Unit**

**1** Open the Left Door.

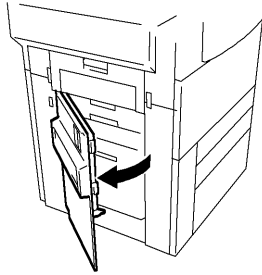


1155O076AA

**2** Open the Front Door.

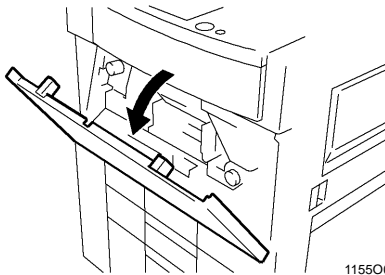

1155O077AA


**3** Turning Knob **M1** , pull out the sheet of paper. Then turn Knob **D1** to return any paper to the Duplex Unit.

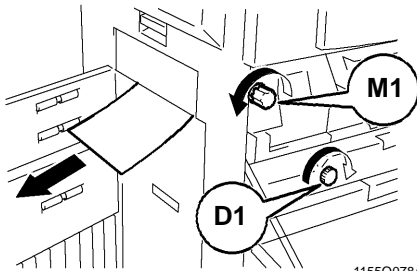

1155O078AA


**4** Close the Left Door.

**5** Open the Right Door.

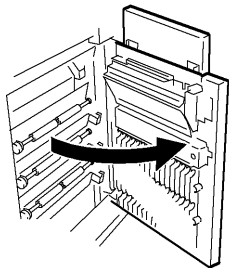

1155O079AA


**6** Turning Knob **M2** , pull out the sheet of paper.

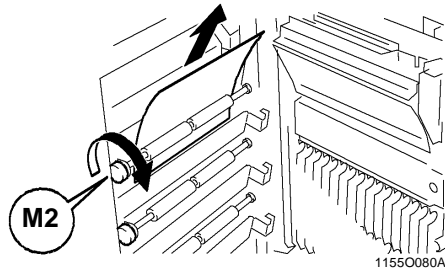

1155O080AA


**7** Close the Right Door.

**8** Slide out Duplex Unit **D2** .

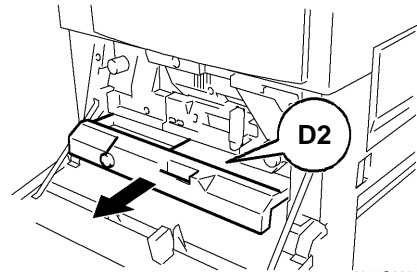


1155O089AA

**9** Raising Misfeed Clearing Guide **D3** , remove the sheet of paper.

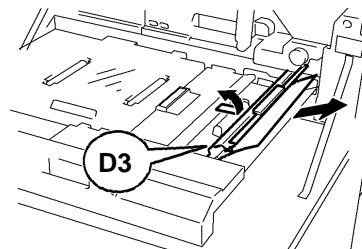

1155O090AA


**10** Raising Misfeed Clearing Guide **D4** , remove the sheet of paper.

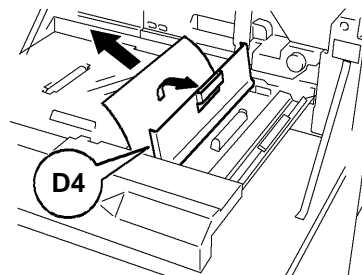


1155O091AA

**4. When the Message “A paper misfeed has been detected.” Appears**

- 11** Raising Misfeed Clearing Guide **D5** ,  
remove the sheet of paper.

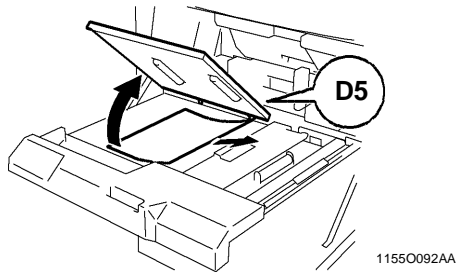

- 12** Slide Duplex Unit **D2** back into the  
copier.

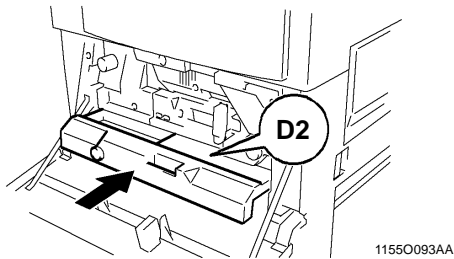

- 13** Close the Front Door.

---

**Useful Tip**


*After the paper misfeed has been cleared, the copier automatically resumes a print cycle without pressing the Start key.*

---


**4. When the Message “A paper misfeed has been detected.” Appears**

**Electronic Document Handler**


**1** Unload the originals from the Document Handling Tray.

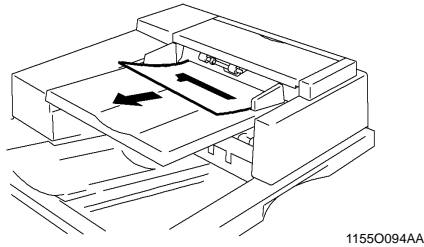


**2** Open Misfeed Clearing Guide **F1**.

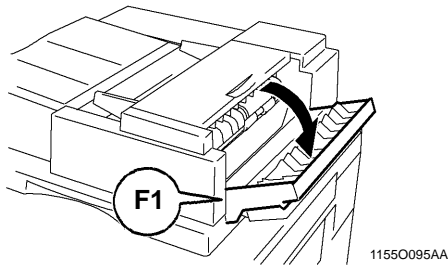


**3** Open Misfeed Clearing Guide **F2** and gently pull out the original.

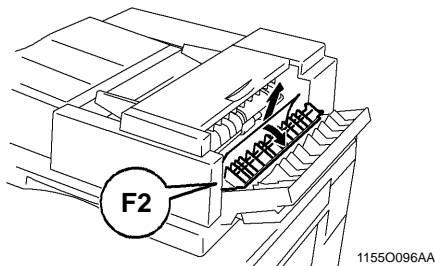


**4** Pull up the Document Handling Tray until a click is heard and then gently pull out the original.

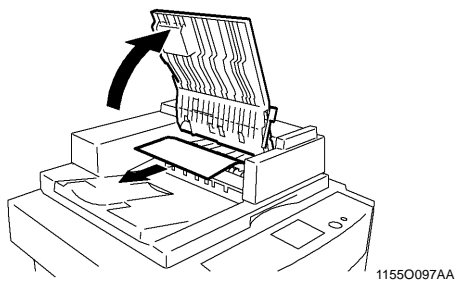


**5** Pulling up Misfeed Clearing Tray **F4**, gently pull out the original.

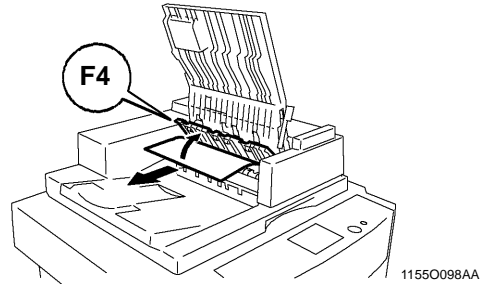


**6** Pinching the lever on the Document Tray, bring the tray back down.

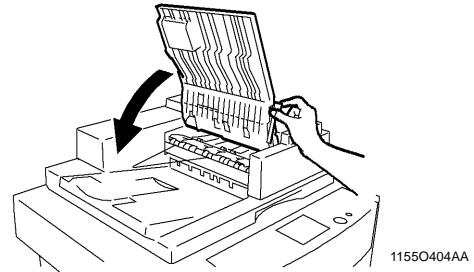

**7** Raise the Electronic Document Handler.

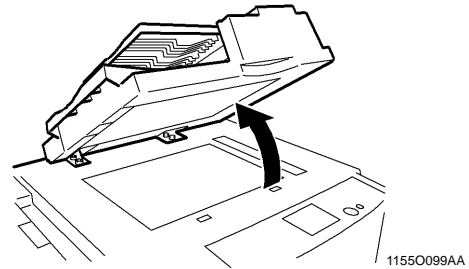


**8** Opening the **F5** Lever, gently pull out the original.

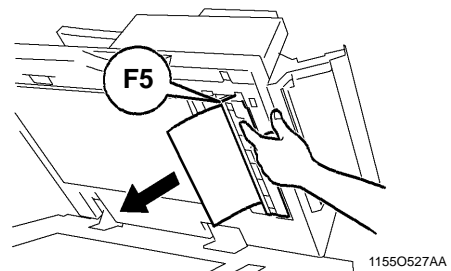


#### 4. When the Message “A paper misfeed has been detected.” Appears


- 9** Opening the **F6** Lever, gently pull out the original.

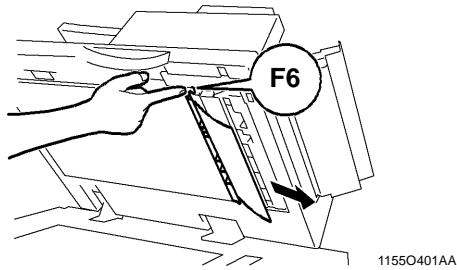


- 10** Lower the Electronic Document Handler.

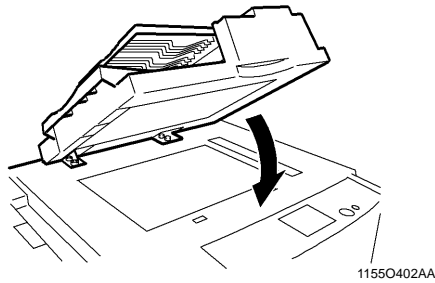

- 11** Close Misfeed Clearing Guides **F1** and **F2**.

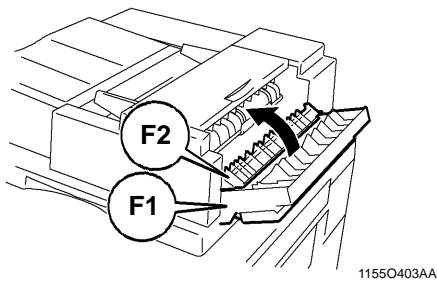

- 12** Reload the originals as instructed on the Touch Panel.

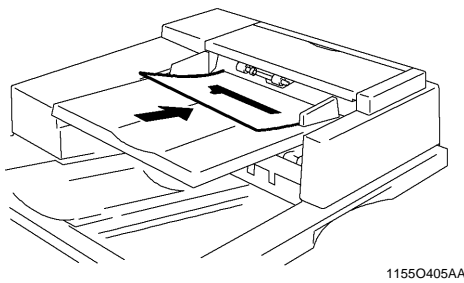




4. When the Message "A paper misfeed has been detected." Appears


**Large Capacity Cassette**

**1** Press the Paper Descent Key.

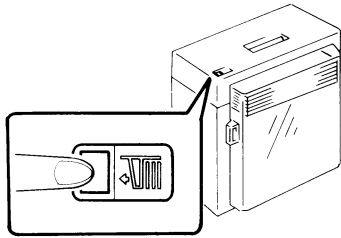


1134O031AA

**5** Remove the sheet of paper.

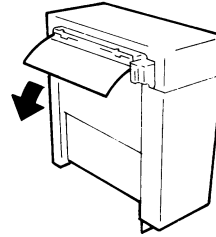


1134O029AA

**2** Holding the Door Lock Release Lever, open the Cassette Door and remove the sheet of paper.

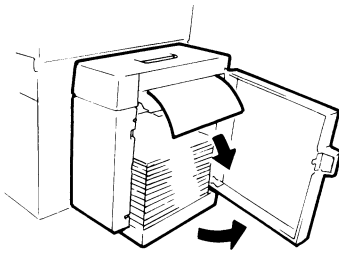


1134O027AA

**6** Slide the Cassette back against the copier.

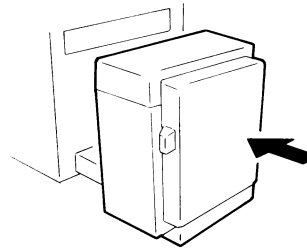


1134O030AA

**3** Close the Cassette Door.

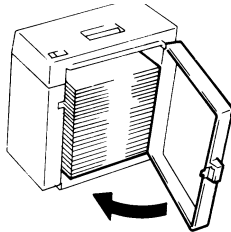

1134O033AA

**4** Press the Lock Release Lever and slide the Cassette away from the copier.

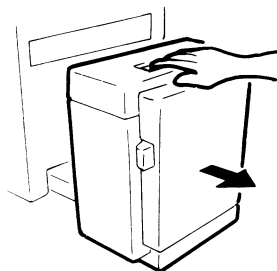


1134O028AA

#### 4. When the Message “A paper misfeed has been detected.” Appears


### Intelligent Multi Bypass Tray

- 1 Unload the paper stack from the Intelligent Multi Bypass Tray and open the Right Door.

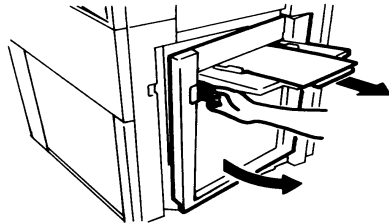


1075O071AB

- 2 Pull out the sheet of paper from the Paper Take-Up Section. Then, close the Right Door.

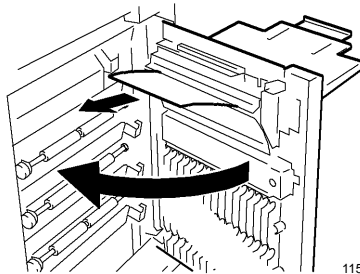


1155O087AA

- 3 Place the paper stack back on the tray.

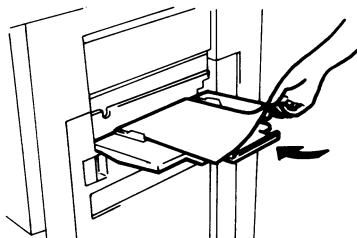

1075O073AA

- 4 To reset the paper misfeed indication on the Touch Panel, open and close the Front Door.

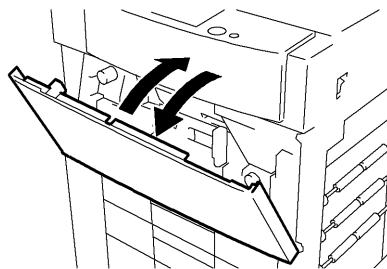


1155O088AA


**4. When the Message “A paper misfeed has been detected.” Appears**

**Finisher FN-3**


<When the following dots are lit:>

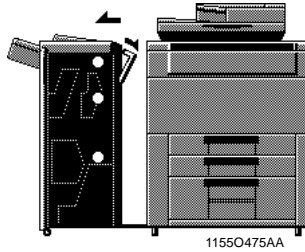


- 1** Holding the Finisher Lock Release Lever, slide the Finisher away from the copier.

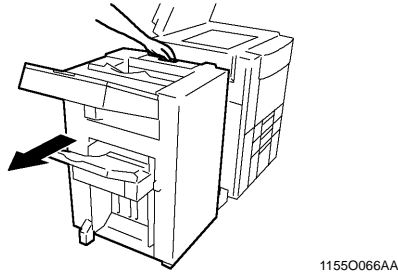

- 2** Opening Misfeed Clearing Guide **FN1** , remove the sheet of paper.

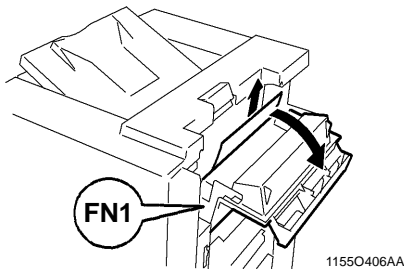


- 3** Loosen two screws, open the Misfeed Clearing Guide and remove the sheet of paper.

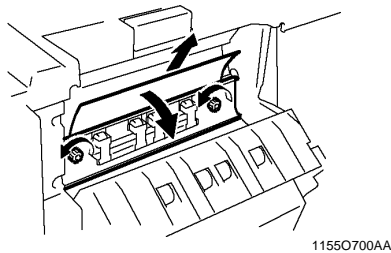


- 4** Close the Misfeed Clearing Guide and tighten the screws.


- 5** Open the Finisher Front Door.

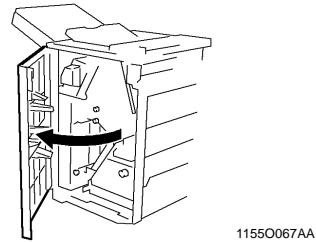


- 6** Raising Misfeed Clearing Guide **FN3** , remove the sheet of paper.

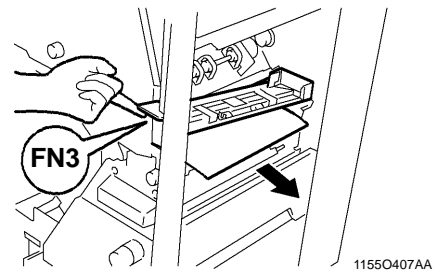

- 7** Turn Knob **FN2** to feed the sheet of paper.

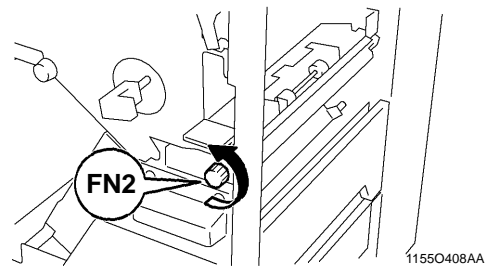


- 8** Open Misfeed Clearing Guide **FN4** .

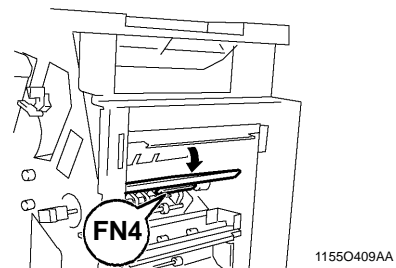


#### 4. When the Message "A paper misfeed has been detected." Appears


- 9** Remove the sheet of paper and close Misfeed Clearing Guide **FN4**.

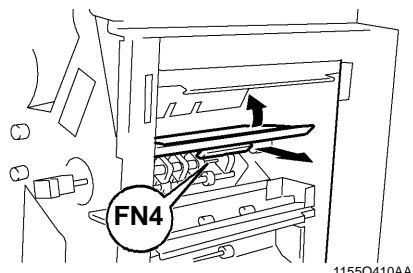


- 13** Close the Finisher Front Door.

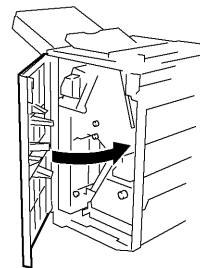


- 10** Turn Knobs **FN7** and **FN6** to feed the sheet of paper.

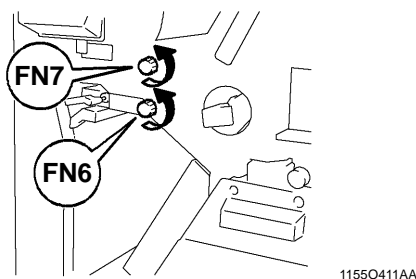


- 14** Slide the Finisher back against the copier.

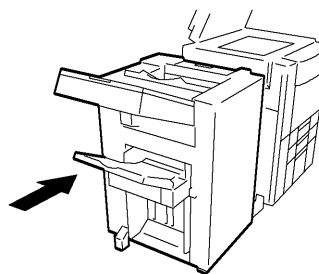

- 11** Pinching the lever of Misfeed Clearing Guide **FN5**, open **FN5**.

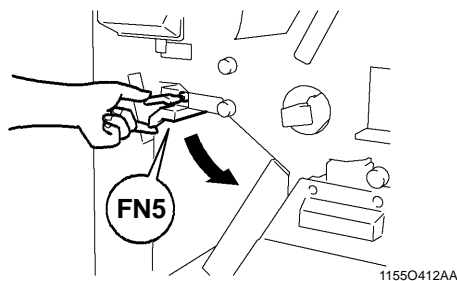


- 12** Remove the sheet of paper and close **FN5**.

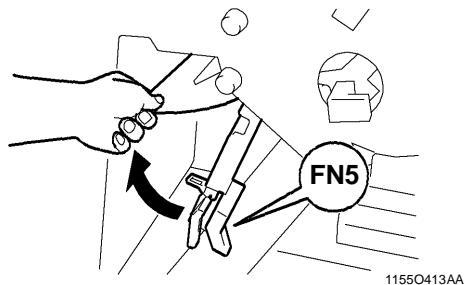


**4. When the Message “A paper misfeed has been detected.” Appears**


<When the following dots are lit:>

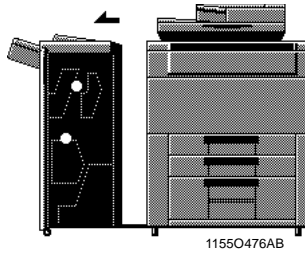


**1** Holding the Finisher Lock Release Lever, slide the Finisher away from the copier.

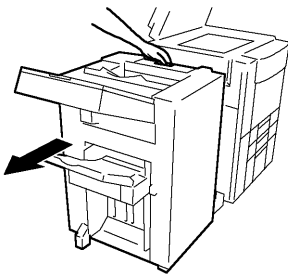


**2** Open the Finisher Front Door.

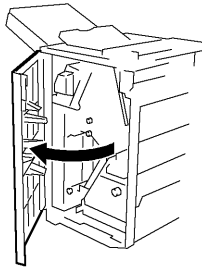


**3** Pinching the lever of Misfeed Clearing Guide **FN8**, open **FN8**.

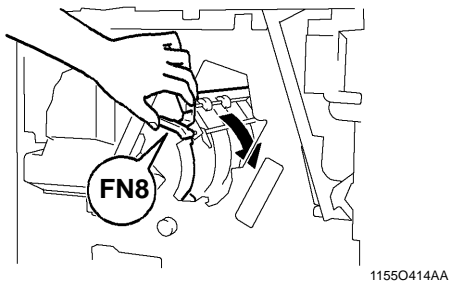


**4** Remove the sheet of paper and close **FN8**.

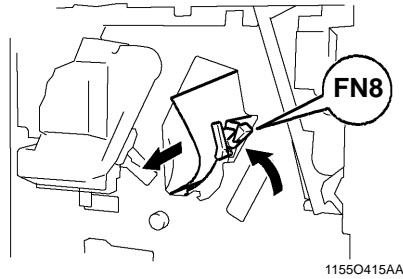


**5** Turn Knobs **FN7** and **FN6** to feed the sheet of paper.

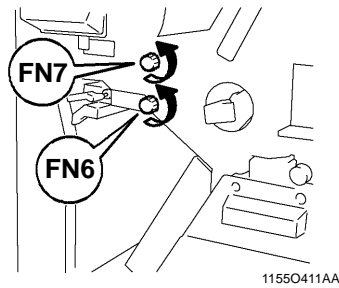

**6** Pinching the lever of Misfeed Clearing Guide **FN5**, open **FN5**.

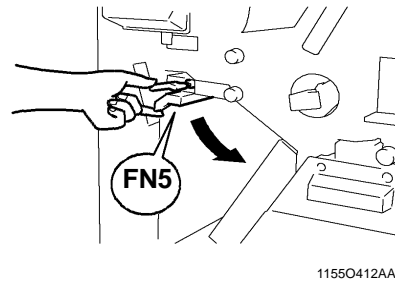


**7** Remove the sheet of paper and close **FN5**.

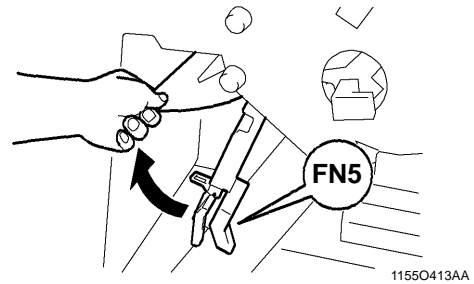


**4. When the Message “A paper misfeed has been detected.” Appears**

**8** Close the Finisher Front Door.

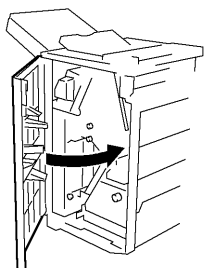


1155O645AA

**9** Slide the Finisher back against the copier.

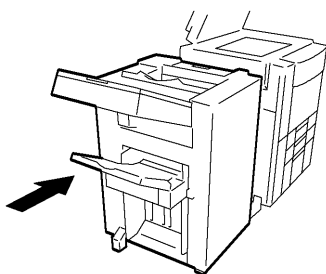


1155O072AA

<When the following dots are lit:>

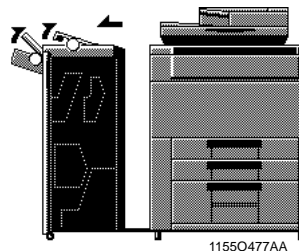

1155O477AA


**1** Open Exit Tray **FN9** and remove the sheet of paper.

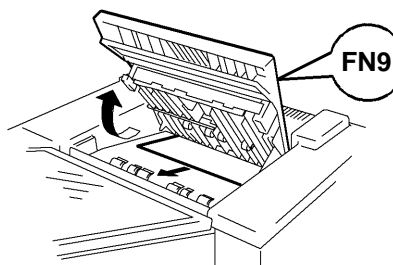

1155O424AA

**2** Close **FN9**.

**3** Open Manual Staple Tray Cover **FN10** and remove the sheet of paper.

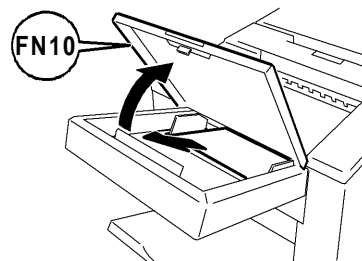


1155O425AA


**4** Close **FN10**.

**4. When the Message “A paper misfeed has been detected.” Appears**


<When the following dots are lit:>

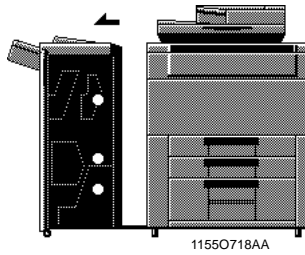


**1** Holding the Finisher Lock Release Lever, slide the Finisher away from the copier.

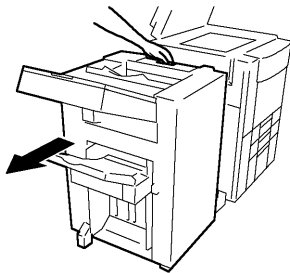


**2** Open the Finisher Front Door.

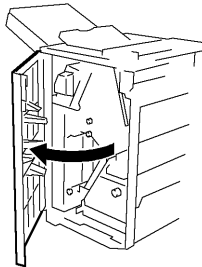


**3** Raising Misfeed Clearing Guide **FN3**, remove the sheet of paper.

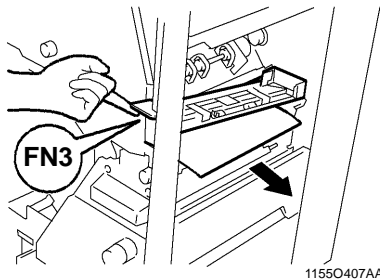


**4** Turn Knob **FN2** to feed the sheet of paper.

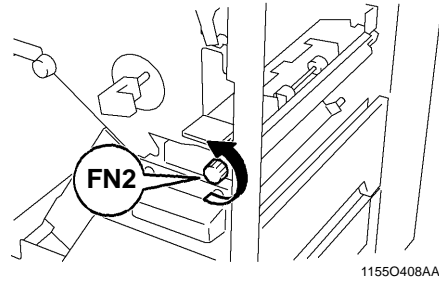


**5** Open Misfeed Clearing Guide **FN4**.

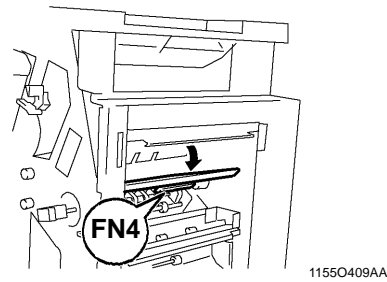

**6** Remove the sheet of paper and close Misfeed Clearing Guide **FN4**.

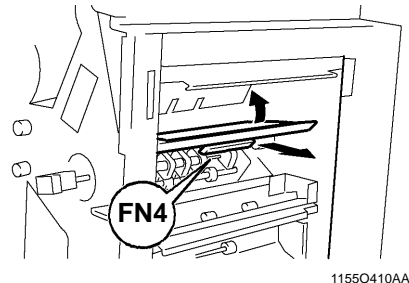


**7** Turn Knobs **FN7** and **FN6** to feed the sheet of paper.

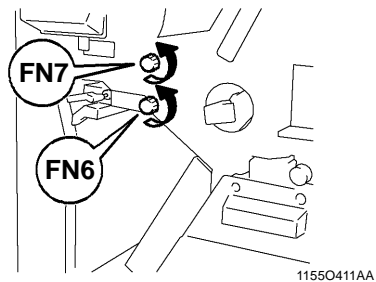


**4. When the Message “A paper misfeed has been detected.” Appears**



- 8** Pinching the lever of Misfeed Clearing Guide **FN5**, open **FN5**.

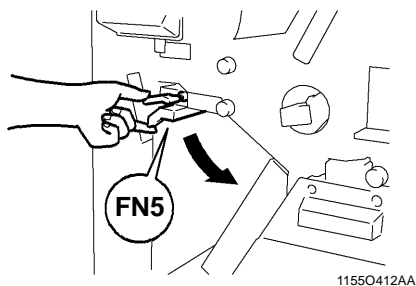


- 9** Remove the sheet of paper and close **FN5**.

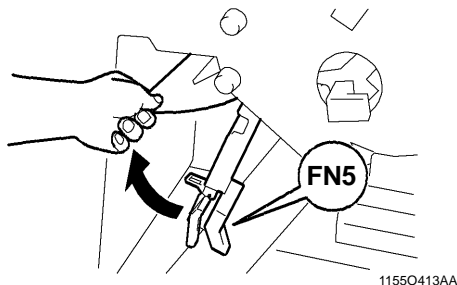

- 10** Turn Knobs **FN2** and **PF1** together five turns to feed the sheet of paper.

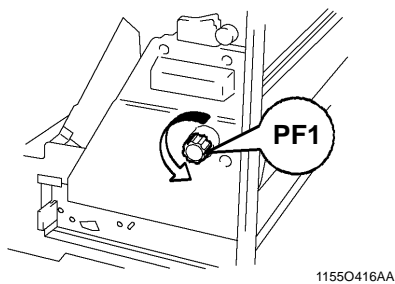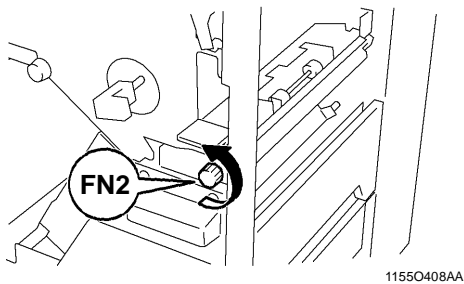


- 11** Check to see if a sheet of paper is left in the Finisher. If any is visible, perform step 10 once again.

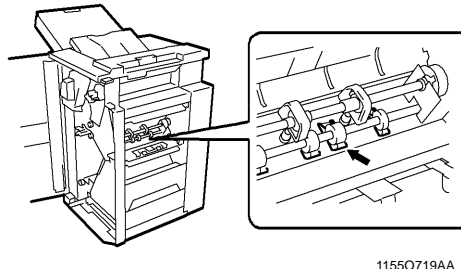


**NOTE**  
Sliding out Paper Folding Unit **PF2** with a sheet of paper left inside could result in a malfunction.

- 12** Open Misfeed Clearing Guide **FN4**.

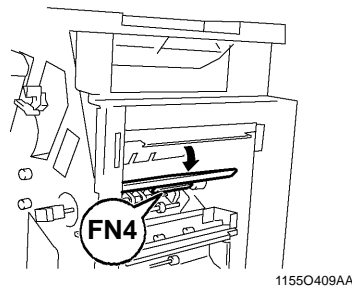


- 13** Remove the sheet of paper and close Misfeed Clearing Guide **FN4**.

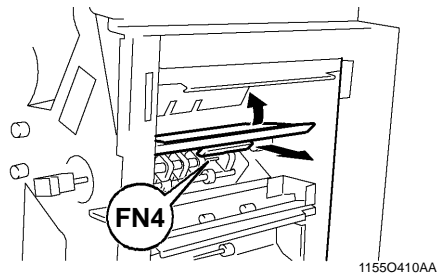




**4. When the Message “A paper misfeed has been detected.” Appears**


- 14** Turn Knobs **FN7** and **FN6** to feed the sheet of paper.

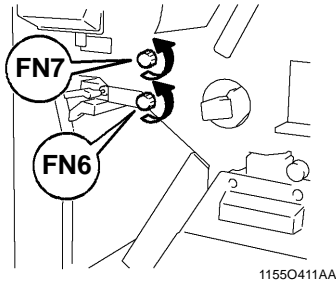


- 18** Opening Misfeed Clearing Guide **PF3**, remove the sheet of paper.

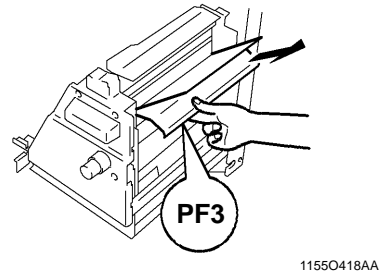


- 15** Pinching the lever of Misfeed Clearing Guide **FN5**, open **FN5**.

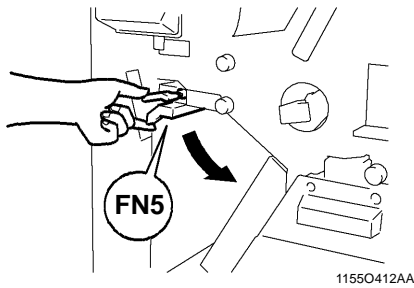


- 19** Raise Misfeed Clearing Guide **PF4**.

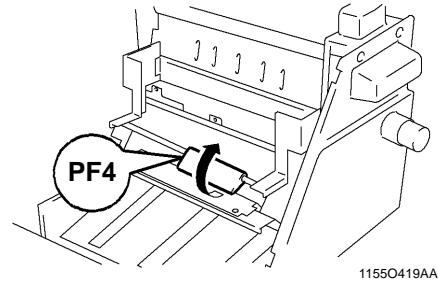


- 16** Remove the sheet of paper and close **FN5**.

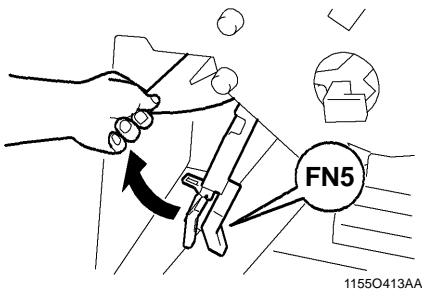


- 20** Turning Knob **PF1**, remove the sheet of paper and then lower Misfeed Clearing Guide **PF4**.

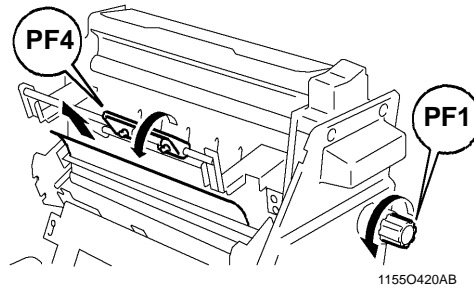

- 17** Slide out Paper Folding Unit **PF2**.

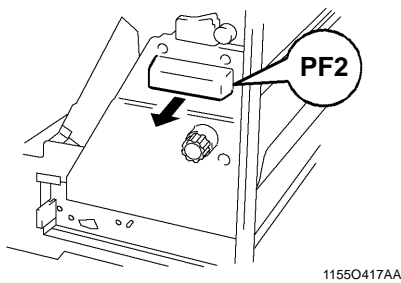


- 21** Opening Misfeed Clearing Guide **PF5**, remove the sheet of paper.

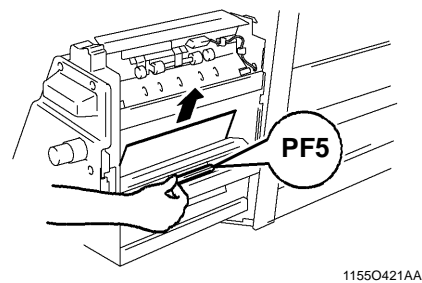

---


**4. When the Message “A paper misfeed has been detected.” Appears**

- 22** Opening Misfeed Clearing Guide **PF6**,  
remove the sheet of paper.

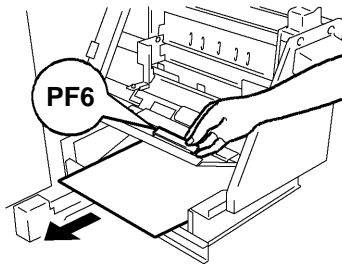


1155O423AA

- 23** Slide Paper Folding Unit **PF2** back into the copier.

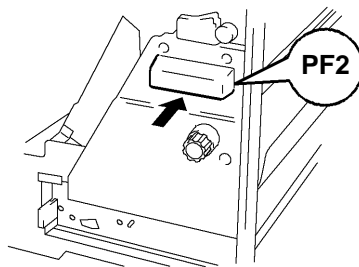


1155O422AA

- 24** Close the Finisher Front Door.

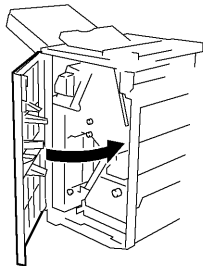

1155O645AA

- 25** Slide the Finisher back against the copier.

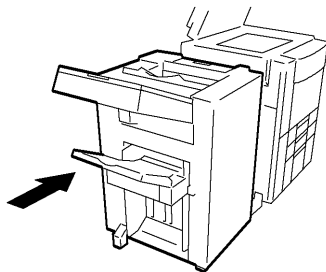


1155O072AA


**4. When the Message “A paper misfeed has been detected.” Appears**

**Finisher FN-102**


- 1 Holding the Finisher Lock Release Lever, slide the Finisher away from the copier.

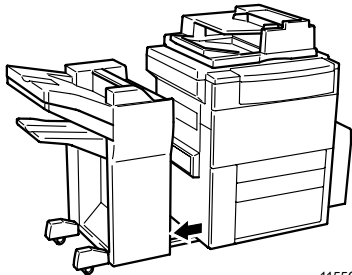

- 2 If “Hole Punch” has been set, turn the Hole Punch Adjustment Dial ten times upward. Remove the sheet of paper.

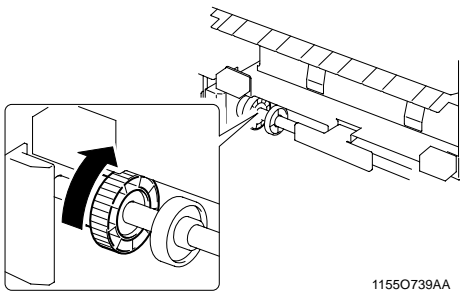


- 3 Open Misfeed Clearing Guide **FN2**.

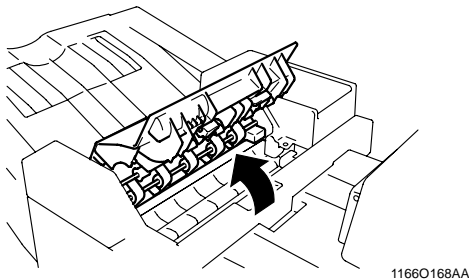


**⚠ CAUTION**  
 Metallic parts inside the Misfeed Clearing Guide **FN2** are very hot. Do not touch anything but the paper to prevent you from getting burned.


- 4 Open Misfeed Clearing Guide **FN3** and remove the sheet of paper.

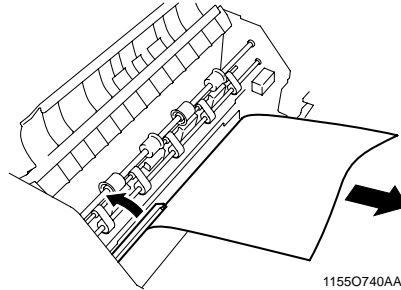


- 5 Open Misfeed Clearing Guide **FN4** and remove the sheet of paper.

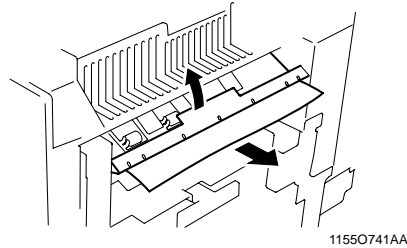

- 6 Raise Misfeed Clearing Guide **FN5** and remove the sheet of paper.

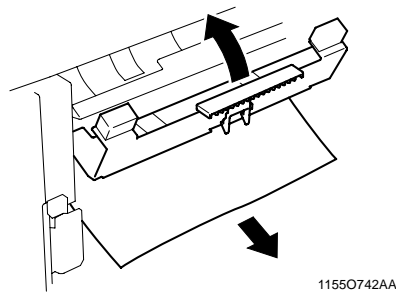


- 7 Close Misfeed Clearing Guide **FN5** until it clicks into position.

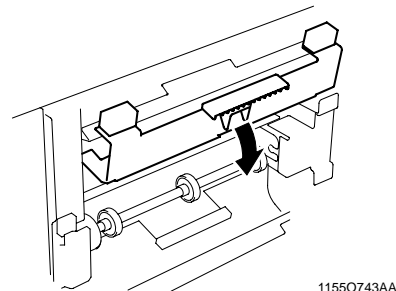


#### 4. When the Message "A paper misfeed has been detected." Appears


- 8** Open Misfeed Clearing Guide **FN9** and remove the sheet of paper.

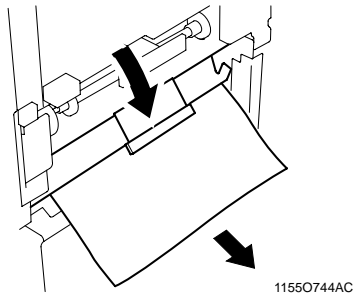


- 9** Open Misfeed Clearing Guide **FN7** at the right side of the Finisher.

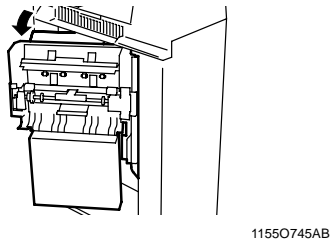


- 10** Remove the sheet of paper.

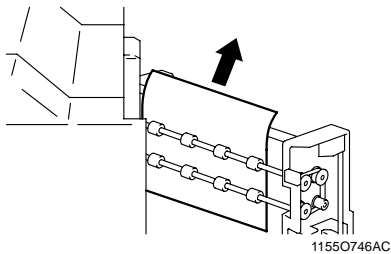


- 11** Close Misfeed Clearing Guide **FN7**.

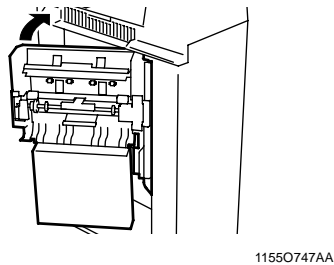


- 12** Close Misfeed Clearing Guide **FN2**.

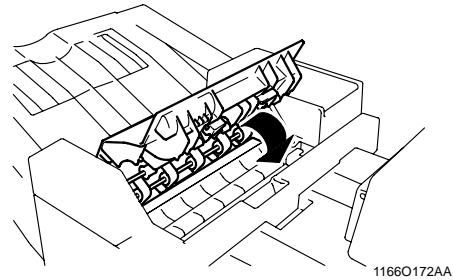


- 13** Open Misfeed Clearing Guide **FN1**.

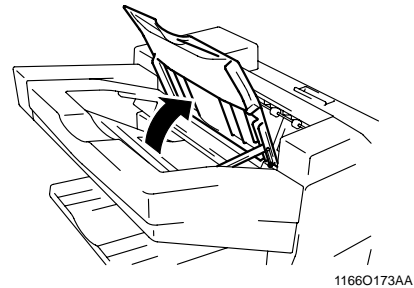

- 14** Remove the sheet of paper and close Misfeed Clearing Guide **FN1**.

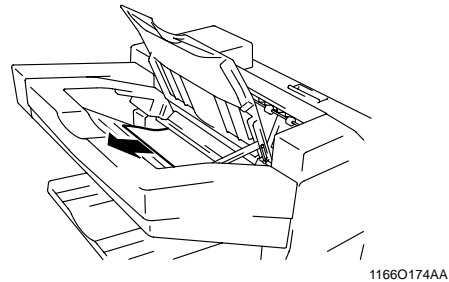


- 15** Slide the Finisher back against the copier.

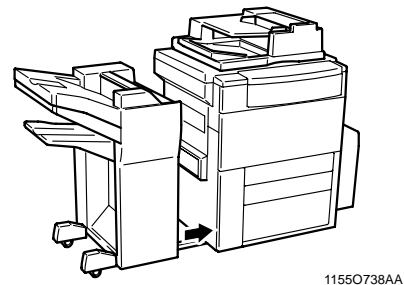

#### 4. When the Message “A paper misfeed has been detected.” Appears


### Mailbin Finisher

- 1** Holding the Finisher Lock Release Lever, slide the Mailbin Finisher away from the copier.

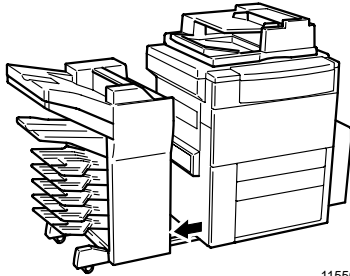


1155O762AA

- 2** If “Hole Punch” has been set, turn the Hole Punch Adjustment Dial ten times upward. Remove the sheet of paper.

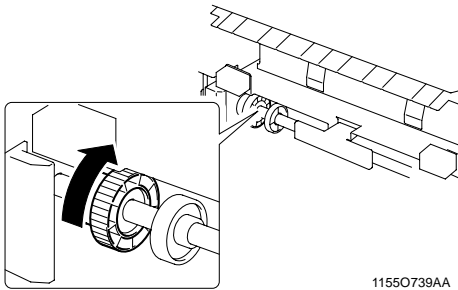

1155O739AA

- 3** Open Misfeed Clearing Guide **FN2**.

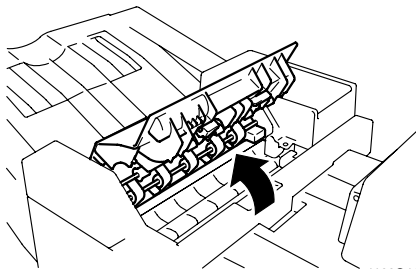


1166O168AA

#### ⚠ CAUTION


Metallic parts inside the Misfeed Clearing Guide **FN2** are very hot. Do not touch anything but the paper to prevent you from getting burned.

- 4** Open Misfeed Clearing Guide **FN3** and remove the sheet of paper.

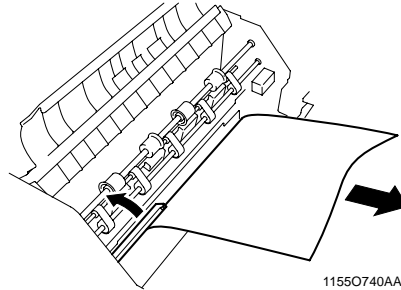


1155O740AA

- 5** Open Misfeed Clearing Guide **FN4** and remove the sheet of paper.

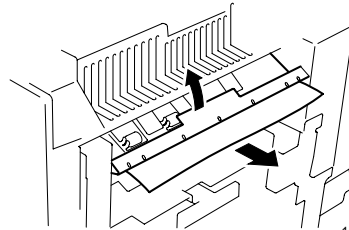


1155O741AA

- 6** Raise Misfeed Clearing Guide **FN5** and remove the sheet of paper.

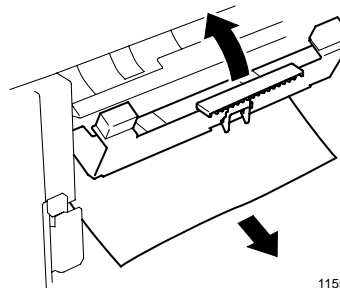

1155O742AA

- 7** Close Misfeed Clearing Guide **FN5** until it clicks into position.

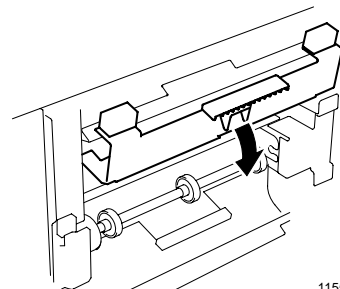


1155O743AA

---


**4. When the Message “A paper misfeed has been detected.” Appears**


---


- 8** Open Misfeed Clearing Guide **FN6** and remove the sheet of paper.

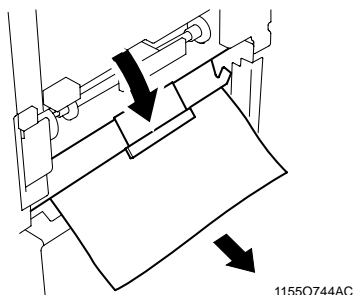


- 9** Open Misfeed Clearing Guide **FN7** at the right side of the Finisher.

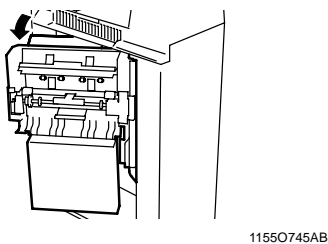


- 10** Remove the sheet of paper.

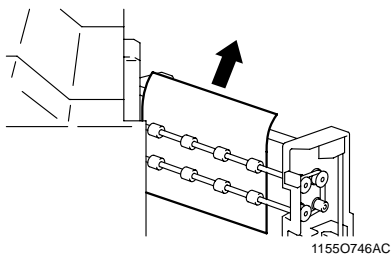


- 11** Open Misfeed Clearing Guide **FN9**.

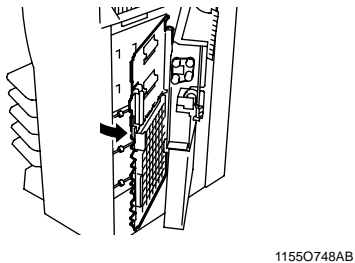

- 12** Remove the sheet of paper.

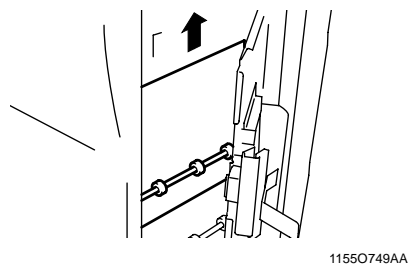


- 13** Raise Misfeed Clearing Guide **FN8** and remove the sheet of paper.

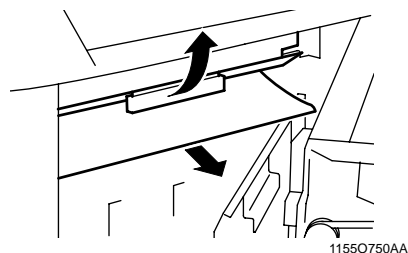


- 14** Close Misfeed Clearing Guide **FN9**, **FN7** and **FN2** in that order.

- 15** Open Misfeed Clearing Guide **FN1**.

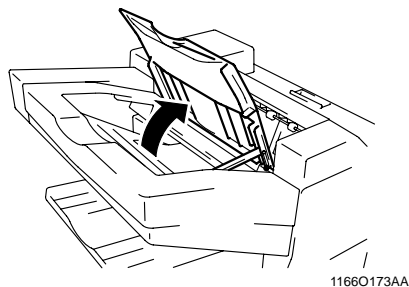

- 16** Remove the sheet of paper and close Misfeed Clearing Guide **FN1**.

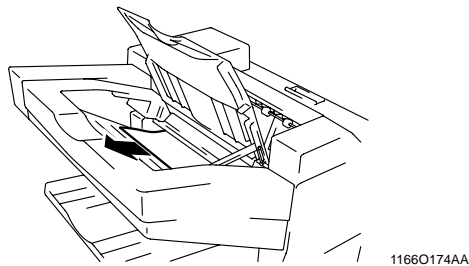


- 17** Slide the Finisher back against the copier.

## 5. When a Staple Misfeed Occurs

### Clearing the Staple Misfeed

<Only when the Finisher FN-102 or Mailbin Finisher is mounted>

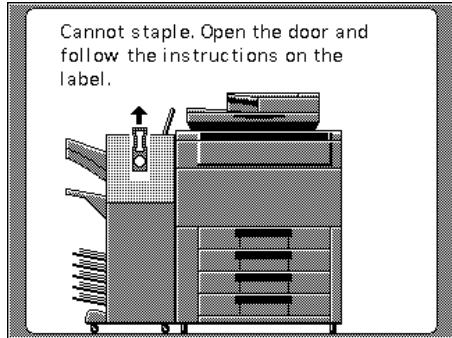


1155P033CA

If a staple misfeed occurs, the message shown on the left appears.


Clear the staple misfeed according to the procedure given below.

- 1 Open Misfeed Clearing Guide **FNI**.

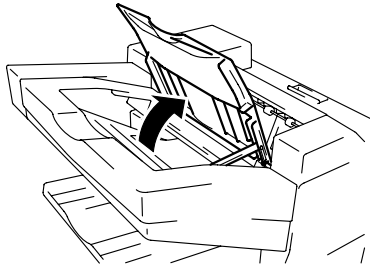


1166O173AA

- 4 Pull the Stapler Unit out of the well.

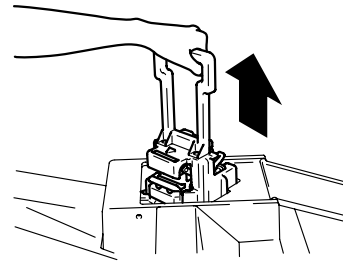


1166O127AA

- 2 Remove the sheet of paper and close Misfeed Clearing Guide **FNI**.

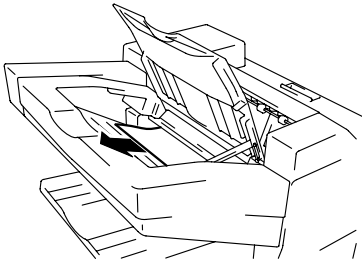


1166O174AA

- 5 While pressing down the green lever, pull out the Staple Cartridge.

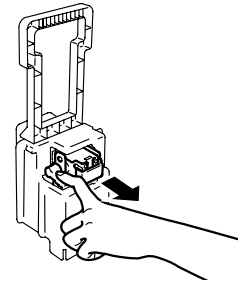


1166O128AA

- 3 Press and turn the knob to open the cover at the rear of the Finisher.

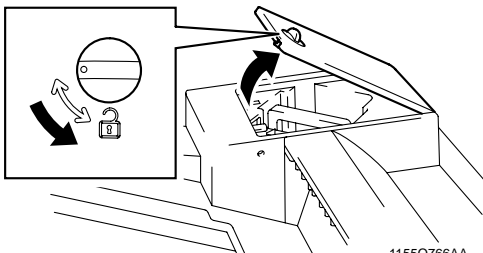


1155O766AA

- 6 Push up the guide of the Staple Cartridge and pull out one staple sheet.

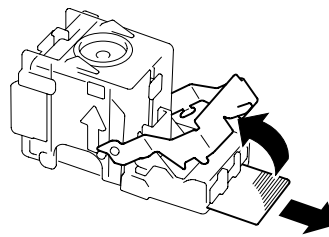


1166O177AA


- 7** Return the guide back to its original position.

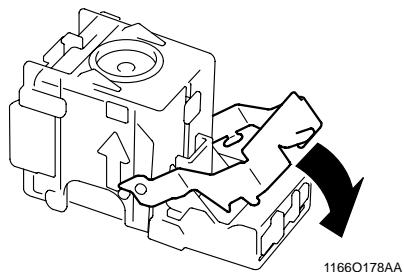


- 8** Insert the Staple Cartridge into the Stapler Unit until it clicks into place.

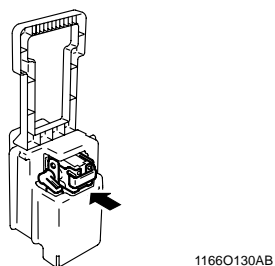

- 9** Align the arrows and firmly push the Stapler Unit down into the well.

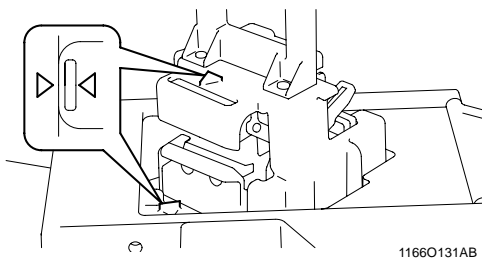

- 10** Press and turn the knob to lock the cover.

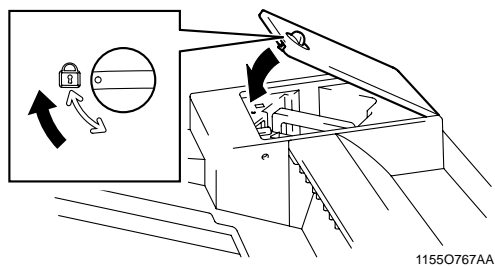

**NOTE**

*If the finisher does not staple after clearing the staple misfeed, call your Tech. Rep.*



## 6. What Does Each Message Mean?

### What does each message mean?

Message	Cause	Action
A malfunction was detected. The SMART controller has called your Technical Representative.	The copier malfunctioned and is unable to make copies.	Call and inform your Technical Representative of the code being shown on the Touch Panel.
Please add toner. Follow the instructions on label inside of Front Door.	Toner has run out and the copier is unable to make copies.	Replace the Toner Bottle with a new one. ("When the Message 'Replenish Toner.' Appears" ☞ p. 5-6)
Please add toner.	Toner is soon running out.	Replace the Toner Bottle with a new one. ("When the Message 'Replenish Toner.' Appears" ☞ p. 5-6)
Stapler empty. Replace Staple Cartridge or cancel Staple mode.	The staples have run out.	Replace the Staple Cartridge with a new one. ("When the Message 'The Staple Cartridge is empty.' Appears" ☞ p. 5-8)
Preventative maintenance time.	The time has come when the copier needs service.	Call your Technical Representative.
Your account has reached its maximum copy allowance. Please call your administrator.	The max. number of copies that can be made for your account is determined in the Administrator Mode.	Consult the administrator of your copier. (Administrator Mode of User's Choice ☞ p. 4-19)
Return the following # of originals to Document Feeder: # Sheet(s)	After a misfed sheet of paper has been cleared, you need to reload the originals fed out onto the Document Exit Tray onto the Document Feed Tray.	Add the number of originals indicated to the bottom of the remaining stack and reload.
Image data has caused memory overflow. Your copy job has been canceled.	The copier is unable to scan the data for lack of memory.	Wait until a print cycle is run or erase a reserved job to make room for new data.
Original left on the Glass.	You have left an original on the Original Glass.	Remove the original from the Glass.
This mode cannot be selected with the ○○○.	You have set two functions that conflict with each other.	Cancel either one of the two functions.




# Chapter 6

---





## Troubleshooting

## 1. When This Type of Copy is Produced

### When this type of copy is produced

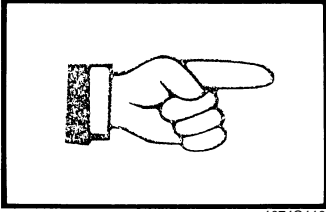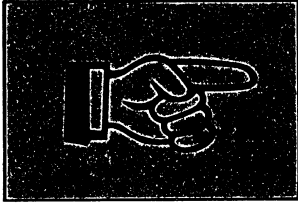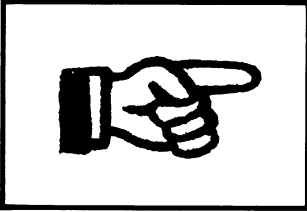Symptom	Possible Cause	Action
The image is too light.  <small>10740110</small>	The exposure level for the Auto Exposure mode is set at "Lighter."	Change the setting of "Auto Exposure Level" of User's Choice. ☞p. 4-16 Or, cancel the Auto Exposure mode and select Manual Exposure to adjust the exposure level to obtain a darker image. ☞p. 3-42
	The exposure level for the Manual Exposure mode is set at "Lighter."	Touch <b>Darker</b> as necessary to obtain a darker image. ☞p. 3-42
	You have been making copies from a photo or an original with a large dark area.	The copier needs more toner. Replenish toner by using Toner Replenisher of Utility Mode. ☞p. 4-13
	The Toner Bottle has just been replaced.	The copier needs more toner. Replenish toner by using Toner Replenisher of Utility Mode. ☞p. 4-13
	The message "Replenish Toner." is shown on the Touch Panel.	Replace the Toner Bottle. ☞p. 5-6
	The paper is damp.	Change the paper. ☞p. 5-2
The image is too dark.  <small>10740109</small>	The exposure level for the Auto Exposure mode is set at "Darker."	Change the setting of "Auto Exposure Level" of User's Choice. ☞p. 4-16 Or, cancel the Auto Exposure mode and select Manual Exposure to adjust the exposure level to obtain a lighter image. ☞p. 3-42
	The exposure level for the Manual Exposure mode is set at "Darker."	Touch <b>Lighter</b> as necessary to obtain a lighter image. ☞p. 3-42
	The Original Glass surface is dirty.	Wipe the Original Glass clean with a soft dry cloth. ☞p. 7-8
	The original is not held tightly against the Original Glass.	Place the original in position so that it is held tightly against the Original Glass. ☞p. 3-6
The copy is blurry.  <small>10740110</small>	The paper is damp.	Change the paper. ☞p. 5-2


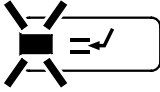
## 1. When This Type of Copy is Produced

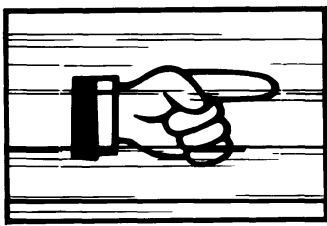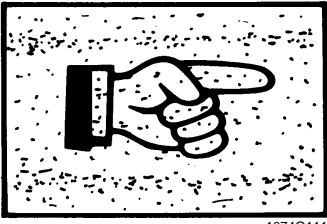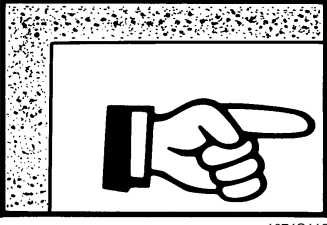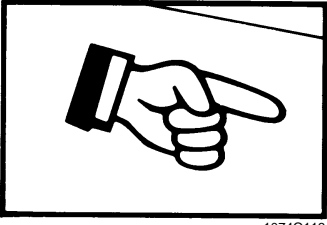Symptom	Possible Cause	Action
<p>The copy has lines.</p>  <p>1139O1670A</p>	The Original Glass is dirty.	Wipe the Original Glass clean with a soft dry cloth. ☞p. 7-8
	The Original Pad is dirty.	Wipe the Original Pad clean with a soft cloth dampened with alcohol. ☞p. 7-9
	The original is very thin or highly transparent.	Place a blank sheet of paper over the original. ☞p. 3-6
	The original is 2-sided.	The information on the back side of a 2-sided, thin original may be slightly reproduced on the copy. Set the copier into the Manual Exposure mode and, using the <b>Lighter</b> key, make the exposure level lighter. ☞p. 3-42
<p>The copy has dark specks or spots.</p>  <p>1074O111</p>	The Original Pad is dirty.	Wipe the Original Pad clean with a soft cloth dampened with alcohol. ☞p. 7-9
	You have selected a paper size larger than the original. (When Zoom Ratio is set at full size $\times 1.000$ )	Select the same copy paper size as the original. ☞p. 3-9 Or, use the Auto Size Mode to enlarge the copy to the appropriate size. ☞p. 3-14
	The original is not placed in the correct position (when the zoom ratio is set at full size $\times 1.000$ ).	Select the same copy paper size as the original. Or, reload the paper in the same direction as the original. ☞p. 3-9
	The reduction ratio selected is not in accord with the copy paper size. (When doing manual reduction copying.)	Select the zoom ratio according to the copy paper size. ☞p. 3-14 Or, use the Auto Size Mode to reduce the copy to the appropriate size. ☞p. 3-14
<p>The edge of the copy is dirty.</p>  <p>1074O112</p>	The original is not placed in the correct position.	Place the original correctly on the Original Glass against the Original Width Scale. ☞p. 3-6 Or, load it onto the document feeder correctly along the Document Guide Plates. ☞p. 3-5
	The originals may not be suitable for use in the document feeder.	Raise the document feeder and place the originals on the Original Glass one at a time, instead of using the document feeder. ☞p. 3-5
	Something is sticking to the Original Glass.	Wipe the Original Glass clean with a soft dry cloth. ☞p. 7-8
<p>The image on the copy is not aligned properly.</p>  <p>1074O113</p>		

\* Call your Technical Representative if these procedures do not correct the problem.

## 2. The Copier is not Functioning as Designed

### The copier is not functioning as designed

Symptom	Check for	Action
The Touch Panel shows nothing.	Is only the Start key lit up green?	The copier is in the Energy Saver mode. Press any key on the control panel to cancel Energy Saver mode.
	Auto Shut Off is activated.	Turn the Power Switch ON.
	The Display Contrast Knob is turned to the excessively light or dark position.	Viewing the Touch Panel, adjust the Display Contrast Knob as necessary.
The Start key does not light up green.	Is your Access Number or Account Number entered? 	Enter your Access Number or Account Number by following the procedure given in “Entering the Access Number.” ☞ p. 2-20
No copies are fed out when the Start key is pressed.	The copier has developed a malfunction.	Check the Touch Panel and take action according to the message on the panel.
	The copier was just turned ON and is warming up.	It takes the copier about 7 min. to be ready for making copies after it has been turned ON. Please wait.
Control panel keys do not respond.	The Interrupt key LED is lit up. 	The copier is in the interrupt mode. Press the Interrupt key to cancel the interrupt mode.
The copier is not activated when the Power Switch is turned ON.	The power cord is left unplugged from the power outlet.	Plug the power cord into the power outlet.
	The room circuit breaker is open.	Close the room circuit breaker.

\* If these procedures do not correct the problem, turn OFF the Power Switch, unplug the power cord from the power outlet, and contact your Technical Representative.

# Chapter 7

---

Miscellaneous

Chapter 7

*Miscellaneous*

# 1. Specifications

## Specifications

### Copier Di620

Type	Console Copier
Platen Type	Stationary
Photoconductor	OPC
Copying System	Electrostatic Dry Powdered Image Transfer to Plain Paper
Developing System	Micro-Toning System
Fusing System	Lamp-Heated Roller
Resolution	400dpi
Types of Original	Sheets, Books and other three-dimensional objects Maximum Original Size : 11"×17" Lengthwise Maximum Original Weight : 6-1/2 lbs.
Kinds of Paper	Plain Paper (16 to 24 lbs.), Recycled Paper Exclusive Paper : Thick paper (24-1/4 to 41-3/4 lbs.), OHP transparencies *Exclusive Paper can only be used for the Multi Bypass Tray.
Copy Paper Size	1st Drawer : 11"×17"L to 5-1/2"×8-1/2"L 2nd Drawer : 11"×17"L to 5-1/2"×8-1/2"L 3rd Drawer : LetterC Intelligent Multi Bypass Tray : Crosswise : 4" to 11-3/4" Lengthwise : 5-3/4" to 17"
Paper Feeding System	1st Drawer : 550 sheets (20 lbs.) 2nd Drawer : 550 sheets (20 lbs.) 3rd Drawer : 2, 700 sheets (20 lbs.) Intelligent Multi Bypass Tray : 50 sheets (20 lbs.), 20 sheets (Recycled paper or Exclusive paper)
Warm-Up Time	450 sec. or less
First Copy	LetterC = 6 sec. or less (in full size mode using 1st copier drawer)
Copy Speed (Approx. copies/minute)	Full size (x1.000) 11"×17"L: 35 LetterL: 48 LetterC: 62
Magnification Ratios	Fixed ratios, Full size: 1:1±0.005 Reduction ratios : ×0.500, ×0.647, ×0.733, ×0.785 Enlargement ratios : ×1.214, ×1.294, ×1.545, ×2.000 Zoom ratios : From ×0.250 to ×4.000 in ×0.001 increments
Multiple Copies	Up to 999 copies (count-down system)
Exposure Control	Auto Exposure Mode, Manual Exposure Mode and Photo Mode
Lost Image	1-sided copy in the full size mode Leading Edge, 3mm Trailing Edge, 3mm Rear Edge, 3mm
Power Requirements	AC120V, 220V-240V; 50/60Hz
Power Consumption	1.5kW or less
Dimensions	Width : 30-1/2" Depth : 29" Height : 38-1/2"
Weight	441 lbs.

## 1. Specifications

**Electronic Document Handler EDH-1**

Document Feeding System	Standard Mode : 1-sided original, 2-sided original Mixed Original Detection Mode : 1-sided Mixed Original Detection 2-sided Mixed Original Detection Single Feeding Mode : 1-sided original
Kinds of Original	Plain paper 1-sided original Mode : 13-1/4 to 29-1/4 lbs. 2-sided original Mode, Mixed Original Detection Mode: 16 to 24 lbs. Single Feeding Mode : 9-1/4 to 41-3/4 lbs.
Original Size	1-sided, 2-sided original, Single Feeding Mode: 11"×17"L to 5-1/2"×8-1/2"L Mixed original Detection Mode : 11"×17"L to Letter
Capacity of Document Feed Tray	Up to 100 sheets (20 lbs.)
Copy Productivity	100%
Power Source	Supplied from copier
Power Consumption	60W or less
Dimensions	Width : 26-1/4" Depth : 22" Height : 7-1/4"
Weight	37-1/2 lbs.

**Large Capacity Cassette C-304**

Kinds of Paper	Plain paper (16 to 24 lbs.), Recycled paper
Paper Size	Letter C
Capacity	3,400 sheets (20 lbs.)
Power Source	Supplied from copier
Power Consumption	30W or less
Dimensions	Width : 11-1/2" Depth : 17-1/2" Height : 19-3/4"
Weight	31-1/4 lbs.

**Large Capacity Cassette C-304L**

Kinds of Paper	Plain paper (16 to 24 lbs.), Recycled paper
Paper Size	LegalL, LetterL, Letter C
Capacity	3,400 sheets (20 lbs.)
Power Source	Supplied from copier
Power Consumption	40W or less
Dimensions	Width : 17-1/4" Depth : 17-1/2" Height : 19-3/4"
Weight	36-1/4 lbs.



## 1. Specifications

### Finisher FN-3

Types of Trays	Top Offset Tray, Bottom Offset Tray
Modes	Non-Sort Mode, Sort Mode, Group Mode, Staple Mode, Hole Punch Mode and Folding Mode
Kinds of Paper	Non-Sort Mode, Sort Mode and Group Mode <ul style="list-style-type: none"> <li>• Plain paper (16 to 24 lbs.), Recycled paper</li> <li>• Exclusive paper: Thick paper, OHP transparencies</li> </ul> Staple Mode, Hole Punch Mode and Folding Mode <ul style="list-style-type: none"> <li>• Plain paper (16 to 21-1/4 lbs.), Recycled paper</li> </ul>
Capacity of Bins	<ul style="list-style-type: none"> <li>• Plain paper, Recycled paper: Refer to the chart below</li> <li>• Exclusive paper: 10 OHP transparencies (Max. paper size Letter), 10 Thick papers</li> </ul>
Punching	Acceptable paper size: 11"×17"L to letter Punch Hole : 2-Hole or 3-Hole
Power Source	Supplied from copier
Power Consumption	96W or less
Dimensions	Width: 36-3/4" Depth: 26-1/4" Height: 43-3/4"
Weight	198-1/2 lbs.
Accessories	Staple Cartridge, 5000 staples/ cartridge x1 piece

		Paper Size	Top Offset Tray	Bottom Offset Tray		#Sheets/ Copy Set	
				Corner Staple	2-Point Staple		
<b>Non-Sort Sort Group</b>		LetterC	100 sheets	2000 sheets (no staple)		-	
		11"×17"L, LegalL, LetterL	100 sheets	1000 sheets (no staple)		-	
		5-1/2"×8-1/2"L, 5-1/2"×8-/2"C	100 sheets	-		-	
<b>Crisscross Sort</b>		LetterL, LetterC	100 sheets	1000 sheets (no staple)		-	
<b>Staple</b>	<b>Sort Group</b>	Corner	11"×17"L to Letter	-	100 sets or 1000 sheets	2 to 50 sheets	
		Side	LetterC	-	-	200 sets or 2000 sheets	2 to 50 sheets
		11"×17"L, LegalL, LetterL	-	-	200 sets or 1000 sheets	2 to 50 sheets	
	Center	11"×17"L, LetterL	-	-	100 sets or 1000 sheets	2 to 50 sheets	
<b>Folding</b>	<b>Crease</b>	Staple	11"×17"L, LetterL	-	-	100 sets or 100 sheets	2 to 15 sheets
	<b>Half- Fold</b>	Non-Sort, Sort, Group	11"×17"L	10 sheets	50 sheets (no staple)		-
		Staple	11"×17"L	-	-	100 sheets	2 to 10 sheets
	<b>Z- Fold</b>	Non-Sort, Sort, Group	11"×17"L	10 sheets	50 sheets (no staple)		-
		Staple	11"×17"L	-	100 sheets	100 sheets	2 to 10 sheets
<b>Mixed Orig. Detection</b>	<b>Z-Folded + Unfolded*</b>		11"×17" (Z-Folded) + LetterC	30 sheets	Z-Folded: 100 sheets Z-Folded + Unfolded*: 1000 sheets (no staple)		-
			*Z-Folded: 5 sheets/set Unfolded*: 2 sheets/set	-	Z-Folded: 100 sheets Z-Folded + Unfolded*: 1000 sheets	Z-Folded: 100 sheets Z-Folded + Unfolded*: 2000 sheets	2 to 30 sheets

\* Only 11"×17" size paper can be Z-folded. Therefore, if a stack of mixed-size originals (11"×17" and other sizes) is copied in Mixed Original Detection mode, the copy set will contain a mix of Z-folded and unfolded copies.

## 1. Specifications

**Finisher FN-102**

Types of Trays	Top Offset Tray, Elevator Tray
Modes	Non-Sort Mode, Sort Mode, Group Mode, Staple Mode, Hole Punch Mode
Kinds of Paper	<p>Top Offset Tray Non-Sort Mode</p> <ul style="list-style-type: none"> <li>• Plain paper (16 to 24 lbs.), Recycled paper</li> <li>• Exclusive paper</li> </ul> <p>Thick paper (24-1/4 to 41-3/4 lbs.), OHP transparencies</p> <p>Hole Punch Mode</p> <ul style="list-style-type: none"> <li>• Plain paper (16 to 24 lbs.), Recycled paper</li> </ul> <p>Elevator Tray Staple Mode</p> <ul style="list-style-type: none"> <li>• Plain paper (16 to 21-1/4 lbs.), Recycled paper</li> </ul> <p>Hole Punch Mode</p> <ul style="list-style-type: none"> <li>• Plain paper (16 to 24 lbs.), Recycled paper</li> </ul>
Paper Size	<p>Top Offset Tray: 11"×17"L to 5-1/2"×8-1/2"</p> <p>Elevator Tray: 11"×17"L to Letter</p>
Capacity	<p>Top Offset Tray</p> <ul style="list-style-type: none"> <li>• Plain paper (20 lbs.), Recycled paper : Max. Paper Size 5-1/2"×8-1/2"L, 250 sheets Max. Paper Size 11"×17"L to 5-1/2"×8-1/2"C, 500 sheets</li> <li>• Exclusive paper : 20 Thick papers, 10 OHP transparencies</li> </ul> <p>Elevator Tray</p> <ul style="list-style-type: none"> <li>• Plain paper (20 lbs.), Recycled paper : LetterL or smaller, 2000 sheets Larger than LegalL, 1000 sheets</li> </ul>
Stapling	<p>Acceptable paper size : 11"×17"L to Letter</p> <p>Acceptable Number of copies : 2 to 50 sheets</p>
Punching	<p>Acceptable paper size : 11"×17"L, Letter</p> <p>Punch Hole : 3-Hole (2-Hole is an option)</p>
Power Source	Supplied from copier
Power Consumption	63W or less
Dimensions	Width : 25-3/4" Depth : 24-1/2" Height : 38-3/4"
Weight	Finisher : 94-1/4 lbs. Transport Unit : 6-1/4 lbs.
Accessories	Staple Cartridge, 5000 staples/cartridge ×1 piece

## 1. Specifications

**Mailbin Finisher FN-502**

Types of Trays	Top Offset Tray, Elevator Tray, Mailbins (5 bins)
Modes	Non-Sort Mode, Sort Mode, Group Mode, Staple Mode and Hole Punch Mode
Kinds of Paper	<p>Top Offset Tray</p> <p>Non-Sort Mode</p> <ul style="list-style-type: none"> <li>• Plain paper (16 to 24 lbs.), Recycled paper</li> <li>• Exclusive paper</li> </ul> <p>Thick paper (24-1/4 to 41-3/4 lbs.), OHP transparencies</p> <p>Hole Punch Mode</p> <ul style="list-style-type: none"> <li>• Plain paper (16 to 24 lbs.), Recycled paper</li> </ul> <p>Elevator Tray</p> <p>Staple Mode</p> <ul style="list-style-type: none"> <li>• Plain paper (16 to 21-1/4 lbs.), Recycled paper</li> </ul> <p>Hole Punch Mode</p> <ul style="list-style-type: none"> <li>• Plain paper (16 to 24 lbs.), Recycled paper</li> </ul> <p>Mailbin</p> <p>Sort Mode, Group Mode and Hole Punch Mode</p> <ul style="list-style-type: none"> <li>• Plain paper (16 to 21-1/4lbs.), Recycled paper</li> </ul>
Paper Size	<p>Top Offset Tray: 11"×17"L to 5-1/2"×8-1/2"</p> <p>Elevator Tray: 11"×17"L to Letter</p> <p>Mailbin: 11"×17" to 5-1/2"×8-1/2"L</p>
Capacity	<p>Top Offset Tray</p> <ul style="list-style-type: none"> <li>• Plain paper (20 lbs.), Recycled paper : Max. Paper Size 5-1/2"×8-1/2"L, 250 sheets Max. Paper Size 11"×17"L to 5-1/2"×8-1/2"C, 500 sheets</li> <li>• Exclusive paper : 20 Thick papers, 10 OHP transparencies</li> </ul> <p>Elevator Tray</p> <ul style="list-style-type: none"> <li>• Plain paper (20 lbs.), Recycled paper : LetterL or smaller, 1000 sheets Larger than LegalL, 500 sheets</li> </ul> <p>Mailbin</p> <ul style="list-style-type: none"> <li>• Plain paper (20 lbs.), Recycled paper : 200 sheets/bin</li> </ul>
Stapling	<p>Acceptable paper size : 11"×17"L to Letter</p> <p>Acceptable Number of copies : 2 to 50 sheets</p>
Punching	<p>Acceptable paper size : 11"×17"L, Letter</p> <p>Punch Hole : 3-Hole (2-Hole is an option)</p>
Power Source	Supplied from copier
Power Consumption	63W or less
Dimensions	Width : 25-3/4" Depth : 24-1/2" Height : 38-3/4"
Weight	Mailbin Finisher : 115-3/4 lbs. Transport Unit : 6-1/4 lbs.
Accessories	Staple Cartridge, 5000 staples/cartridge ×1 piece

## 1. Specifications

**Data Controller D-102**

Type	Magnetically encoded card accessed Copy Counter
Type of Cards	Departmental, Register, Administration, Erasing, Time/Date, and Cleaning Card
Departmental Cards Accommodated	Up to 999 groups
Display	7-segment, 16-digit liquid-crystal display
Copy Count to be Stored in Memory	<ul style="list-style-type: none"> <li>• Max. no. of copies made, total : 9,999,999</li> <li>• Max. no. of copies made, by paper size : 9,999,999</li> <li>• Max. no. of copies made, by department : 999,999</li> <li>• Max. no. of copies made, by copy mode : 999,999</li> <li>• Max. no. of copies made, by department/copy mode : 99,999</li> </ul>
Distinguishable Copy Modes	Up to 16 types
Power Source	Supplied from copier
Power Consumption	5W or less
Dimensions	Width: 7" Depth: 2-1/2" Height: 4-1/4"
Weight	Approx. 1-1/4 lbs.
Others	A printer (optional) recommended by the manufacturer can be hooked up, sourced from another power supply.


## 2. Care of the Copier

### Cleaning

(Turn OFF the Power Switch of the copier when cleaning.)

#### Housing


- 1 Wipe the surface of the housing clean with a soft cloth dampened with alcohol.

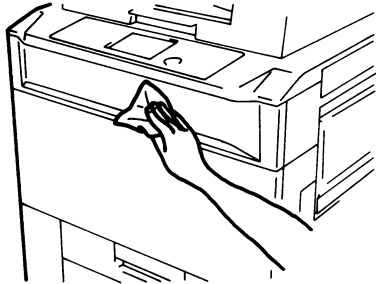

1075O087AA

#### Original Glass

- 1 Raise the Electronic Document Handler.
- 2 Wipe the surface of the Original Glass clean with a soft, dry cloth.

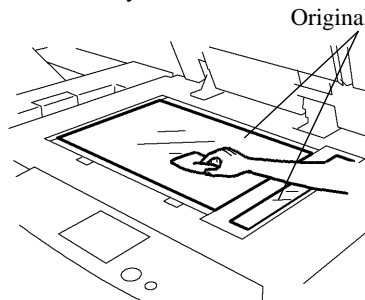


Original Glass

1155O701AA


#### Control Panel

- 1 Turn the Power Switch OFF.
- 2 Wipe the surface of the Control Panel clean with a soft, dry cloth.

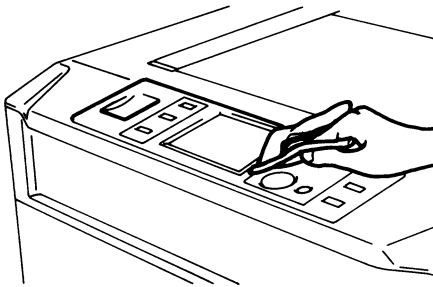

1075O088AA

- 3 Wipe the surface of the guide plate and polyester film (shown below) of the Document Handler clean with a soft, dry cloth.

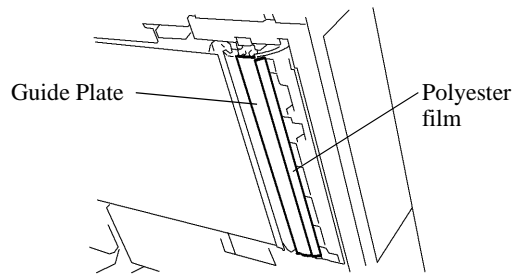

Guide Plate

Polyester film

1155O702AA

#### NOTE


*Wipe the film gently as it is fragile.*

#### NOTE

*NEVER use a glass cleaner or any detergent to avoid damage to the control panel keys and Touch Panel.*

**Original Pad**


- 1 Raise the Document Handler.
- 2 Wipe the surface of the Original Pad clean with a soft cloth dampened with alcohol.

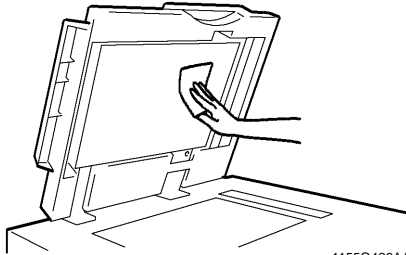

11550426AA

**Front Door**

- 1 Swing down the Front Door.
- 2 Wipe the surface of the Front Door clean with a soft, dry cloth.

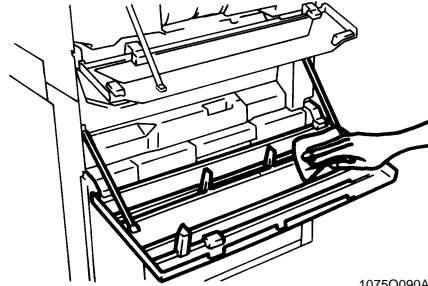

10750090AA

### 3. Function Combination Matrix

Function combination matrix

Function Set Last \ Function Set First		Basic																	Orig. ▶ Copy									
		Paper				Zoom					Finishing								Orig.	Copy								
		Auto Paper	Manual Paper	Bypass	Exclusive Paper	Auto Size	Full Size	Change Fixed Zoom	Zoom Ratio in Memory	10-Key Input	X/Y Zoom	Non-Sort	Sort	Group	Corner Staple	Side Staple	Center Staple	Hole Punch	Crease	Half-Fold	Z-Fold	1	2	Book	1	2	1 [2in1]	
Basic	Paper	Auto Paper	×	×	×	×	○	○	○	○	×	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
		Manual Paper	×	×	×	×	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
		Bypass	×	×	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
		Exclusive Paper	×	×	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
	Zoom	Auto Size	×	A	A	○	×	×	×	×	×	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
		Full Size	○	○	○	○	×	×	×	×	×	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
		Change Fixed Zoom	○	○	○	○	×	×	×	×	×	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
		Zoom Ratio in Memory	○	○	○	○	×	×	×	×	×	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
		10-Key Input	○	○	○	○	×	×	×	×	×	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
	Finishing	X/Y Zoom	×	○	○	○	×	×	×	×	×	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
		Non-Sort	○	○	○	○	○	○	○	○	○	×	×	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
		Sort	○	○	○	○	○	○	○	○	○	○	×	×	○	○	○	○	○	○	○	○	○	○	○	○	○	○
		Group	○	○	○	○	○	○	○	○	○	×	×	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Corner Staple		○	○	○	○	○	○	○	○	○	○	×	×	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
Side Staple		○	○	○	○	○	○	○	○	○	○	○	×	×	○	○	○	○	○	○	○	○	○	○	○	○	○	
Center Staple		○	○	○	○	○	○	○	○	○	○	○	○	×	×	○	○	○	○	○	○	○	○	○	○	○	○	
Hole Punch		○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
Crease		○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Half-Fold		○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Orig. ▶ Copy	Z-Fold	○	●	●	-	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
	1	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
	2	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
	Book	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
	Copy	1	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
		2	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
		1 [2in1]	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
		2 [2in1]	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
		1 [4in1]	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
		2 [4in1]	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Booklet Creation		○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
Original Direction		○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
Auxiliary	Margin	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
	Page Arrange	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
	Cover	○	○	○	-	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
	Page Insertion	○	○	○	-	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
	OHP Interleaving	B	○	○	-	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
	File Margin	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
	Edge/Frame Erase	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
	Image Repeat	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
	Date Stamping	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
	Page Numbering	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
Mixed Orig.-Detection	Distribution Numbering	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○		
	Image Stamping	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○		
	Mixed Orig. Detection	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○		
	Separate Scan	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○		
Others	Small Orig. Adjustment	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○		
	Free Orig. Placement	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○		
	ADF/SADF Mode	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○		
	Interrupt	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
	Reserve	○	○	-	-	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
Orig. on the Glass	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○		
Image Memory Input	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		





## Conditions for Combined Functions

- : The combination is possible.
- : Either of the functions which is set first takes precedence.
- ✕ : Either of the functions which is set last takes precedence.
- △ : One of the functions must be canceled before a copy cycle can be initiated.
- ▲ : The combination is disabled in 1 ► 2 Mode and the function set first takes precedence.
- A : The combination is impossible if the Paper Size is input by custom size and the function set first takes precedence.
- B : The combination is only available for the extra copies.  
When OHP Interleaving is selected, 2 ► 2[2-in-1] or 2 ► 2[4-in-1] Mode will be automatically changed to 1 ► 1[2-in-1] or 1 ► 1 [4-in-1] Mode.
- C : The combination can make OHP copies.
- D : Shift-for-Margin and Half-Fold cannot be combined. (The function set first takes precedence.)
- E : The Mixed Original Detection mode is valid regardless of whether Mixed Orig. Detect is turned ON or OFF.
- F : The Mixed Original Detection mode is valid for Auto Detect and not valid for Size Input regardless of whether Mixed Orig. Detect is turned ON or OFF.
- G : Booklet Creation and Back Cover cannot be combined. (Booklet Creation takes precedence.)
- H : The zoom ration is automatically changed to Full Size.
- I : No zoom ratios can be stored in memory in the Interrupt mode.
- J : The function set last takes precedence. (Center Staple is automatically selected.)
- K : Auto Size is automatically selected.
- L : 2-Point Side Staple is automatically selected.
- M : The functions cannot be combined only for Separation. (The function set first takes precedence.)
- N : When the copier is equipped with an FN-3, the function set last takes precedence (and Center Staple is automatically selected). When the copier is equipped with an FN-102/FN-502, the function set first takes precedence.
- P : The combination is not possible only if Auto Paper is used, and Staple is automatically canceled. (The combination becomes possible when it is further combined with Z-Fold.)
- Q : The combination is not possible only if Auto Paper is used with an FN-3 installed, and Staple is automatically canceled. (The combination becomes possible when it is further combined with Z-Fold.) When an FN-102/FN-502 is installed, the combination is not possible only if the document loaded contains pages of different widths with Auto Paper used. (Staple is automatically canceled.)
- R : The combination is not possible only if the finished size of Z-Fold differs from the size of the cover or interleaf. The function set first takes precedence. (Neither the cover nor interleaf can be folded in Z-fold.)

## 4. Description of Paper Size and Zoom Ratio Table

### Description of paper size and zoom ratio table

#### Paper Size

Name	Size (Metric)	Size (Inch)
A3	297mm×420mm	11-3/4" × 16-1/2"
B4	257mm×364mm	10" × 14-1/4"
A4	210mm×297mm	8-1/4" × 11-3/4"
B5	182mm×257mm	7-1/4" × 10"
A5	148mm×210mm	5-3/4" × 8-1/4"
B6	128mm×182mm	5" × 7-1/4"
A6	105mm×148mm	4-1/4" × 5-3/4"
POST CARD	100mm×148mm	4" × 5-3/4"

Name	Size (Inch)	Size (Metric)
LEDGER	11" × 17"	279mm×432mm
11"×14"	11" × 14"	279mm×356mm
COMPUTER	10-1/8" × 14"	257mm×356mm
10"×14"	10" × 14"	254mm×356mm
9-1/4"×14"	9-1/4" × 14"	236mm×356mm
LEGAL	8-1/2" × 14"	216mm×356mm
FOOLSCAP	GOVERNMENT LEGAL 8-1/2" × 13"	216mm×330mm
FOOLSCAP	8" × 13"	203mm×330mm
FOOLSCAP	8-2/3" × 13"	220mm×330mm
FOOLSCAP	FOLIO 8-1/4" × 13"	210mm×330mm
8-1/4"×11-3/4"	8-1/4" × 11-3/4"	210mm×301mm
LETTER	8-1/2" × 11"	210mm×279mm
GOVERNMENT LETTER	8" × 10-1/2"	203mm×267mm
QUARTO	8" × 10"	203mm×254mm
STATEMENT	INVOICE 5-1/2" × 8-1/2"	140mm×216mm

#### Zoom Ratio Table (Original Size to Copy Paper Size)

Original Size	Metric Areas	
	Copy Paper Size	Zoom Ratio
A3 297×420mm 11-3/4"×16-1/2"	A4	×0.707
	A5	×0.500
	B4	×0.866
	B5	×0.610
A4 210×297mm 8-1/4"×11-3/4"	A5	×0.707
	A6	×0.500
	B5	×0.866
	B6	×0.610
	A3	×1.414
	B4	×1.224
A5 148×210mm 5-3/4"×8-1/4"	A6	×0.707
	B6	×0.866
	A4	×0.414
	A3	×2.000
	B4	×1.733
A6 105×148mm 4-1/4"×5-3/4"	B5	×1.224
	A4	×2.000
	A5	×1.414
	B5	×1.733
B4 257×364mm 10"×14-1/4"	B6	×1.224
	A4	×0.816
	A5	×0.577
	B5	×0.707
B5 182×257mm 7-1/4"×10"	B6	×0.500
	A3	×1.154
	A5	×0.816
	A6	×0.577
	B6	×0.707
B6 128×182mm 5"×7-1/4"	A3	×1.640
	A4	×1.154
	B4	×1.414
	A6	×0.816
	A4	×1.640

Original Size	Metric Areas	
	Copy Paper Size	Zoom Ratio
11"×17" 279.4×431.8mm	11"×14"	×0.823
	Legal	×0.772
	Foolscap	×0.764
	Letter	×0.647
	Invoice	×0.500
11"×15" 279.4×381mm	11"×14"	×0.933
	Legal	×0.772
	Foolscap	×0.772
	Letter	×0.733
	Invoice	×0.500
11"×14" 279.4×355.6mm	Legal	×0.772
	Foolscap	×0.772
	Letter	×0.772
	Invoice	×0.500
Legal 8-1/2"×14" 215.9×355.6mm	Foolscap	×0.928
	Letter	×0.785
	Invoice	×0.607
	11"×17"	×1.214
Foolscap 8-1/2"×13" 215.9×330.2mm	Letter	×0.846
	Invoice	×0.647
	11"×17"	×1.294
	11"×14"	×1.076
Letter 8-1/2"×11" 215.9×279.4mm	Invoice	×0.647
	11"×17"	×1.294
	11"×14"	×1.272
Invoice 5-1/2"×8-1/2" 139.7×215.9mm	11"×17"	×2.000
	11"×14"	×1.647
	Legal	×1.545
	Foolscap	×1.529
	Letter	×1.294

Zoom Ratio = Copy Paper Size ÷ Original Size

1"(Inch) = 25.4mm  
1mm = 0.0394"(Inch)

# Index

## Numeric

100 Accounts .....	4-19
1000 Accounts .....	4-19
10-Key Pad .....	2-14
1 ▶ 1 .....	3-34
1 ▶ 1 (2in1) .....	3-34
1 ▶ 1 (4in1) .....	3-35
1 ▶ 2 .....	3-34
1 ▶ 2 (2in1) .....	3-34
1 ▶ 2 (4in1) .....	3-35
1 ▶ Booklet Creation .....	3-35
1st Drawer .....	5-2
2 ▶ 1 .....	3-34
2 ▶ 1 (2in1) .....	3-34
2 ▶ 1 (4in1) .....	3-35
2 ▶ 2 .....	3-34
2 ▶ 2 (2in1) .....	3-34
2 ▶ 2 (4in1) .....	3-35
2 ▶ Booklet Creation .....	3-35
2in1, 4in1, Booklet Copy Zoom .....	4-16
2nd Drawer .....	5-3
3rd Drawer .....	5-4
4in1 Copy Order .....	4-17

## A

Access Mode Key .....	2-14
Access Number .....	2-20
Adding paper .....	5-2
Administrator Mode .....	4-19
Auto Copy Start .....	2-19
Auto Drawer Switching .....	3-10
Auto Dual Function .....	3-32
Auto Exposure .....	3-42
Auto Panel Reset .....	2-19
Auto Paper/Auto Size .....	4-15
Auto Shut OFF .....	2-19
Auto Size .....	3-14

## B

Book ▶ 1 .....	3-35
Book ▶ 2 .....	3-35
Book ▶ Booklet .....	3-35

## C

Calling up a Ratio from Memory .....	3-17
Cleaning .....	7-8
Clear Key .....	2-14
Clearing Counters for Each Account .....	4-28
Confirmation Beep .....	4-18
Control Panel .....	2-8
Copy Paper Size .....	3-9
Copy Track .....	4-19

Copy Track Data .....	4-23
Cover .....	3-44
Crisscross Grouping .....	3-22
Crisscross Sorting .....	3-22

## D

Date/Time Set .....	4-19
Default Level .....	4-16
Deleting a Job Program .....	4-4
Description of Paper Size and Zoom Ratio Table .....	7-13
Display Contrast Knob .....	2-15

## E

Edge/Frame Erase .....	3-56
Energy Saver .....	2-19
Exposure Priority .....	4-16

## F

File Margin .....	3-54
Folding .....	3-21
Function combination matrix .....	7-10

## G

Group .....	3-20
-------------	------

## H

Half-Fold .....	3-29
Hole Punch .....	3-21

## I

Image Density .....	3-42
Image Memory Input .....	4-8
Image Repeat .....	3-58
Image Stamping .....	3-64
Initial Mode .....	2-18
Intelligent Sorting .....	4-16
Interrupt .....	2-20
Interrupt Key .....	2-14

## J

Job List .....	3-71
Job Memory Input .....	4-2

## L

Language Selected .....	4-15
Large Capacity Cassette .....	5-5
Loading the Originals .....	3-5

## M

Making the User's Choice Settings .....	4-21
Manual Bypass Copying .....	3-11
Manual Exposure .....	3-42
Manual Staple .....	3-26
Margin .....	3-37

Max. Copy Set .....	4-20	Staple .....	3-21
Memory Recall .....	3-69	Start Key .....	2-14
Meter Count .....	4-13	Stop Key .....	2-14
Misfeed Clearing Procedures .....	5-14	Storing a Ratio in Memory .....	3-18
Misfeed Location Displays .....	5-12	<b>T</b>	
Mixed Orig. Detection .....	3-66	Toner Replenisher .....	4-13
Mixed Original Detect .....	4-15	Total Counter .....	4-13
Mode Check .....	2-20	Touch Panel .....	2-14
Mode Check Key .....	2-15	Tray Priority .....	4-15
<b>N</b>		Turning ON and OFF .....	2-18
Non-Auto Shut Off .....	4-19	<b>U</b>	
Non-Sort .....	3-20	User's Choice Functions .....	4-14
Number Stamping .....	3-60	Using Zoom Up/Down Key .....	3-15
<b>O</b>		Utility Key .....	2-15
OHP Interleaving .....	3-50	Utility Mode .....	4-1
Original Direction .....	3-36	<b>W</b>	
OriginalCopy Default .....	4-15	What does each message mean? .....	5-36
<b>P</b>		<b>X</b>	
Page Insertion .....	3-46	X / Y Zoom .....	3-16
Panel Reset Key .....	2-14	<b>Z</b>	
Panel Resetting .....	2-19	Z-Fold .....	3-29
Photo .....	3-43	Zoom Memory Input .....	4-6
Plug-In Counter Reset .....	4-18	Zoom Ratio .....	3-14
Print Exposure .....	4-19		
Priority Device .....	4-19		
Priority Offset Tray .....	4-19		
Programming the Access Code .....	4-24		
<b>R</b>			
Recalling a Job from Memory .....	4-5		
Replacing the Staple Cartridge .....	5-8		
Replacing the Toner Bottle .....	5-6		
Reserve .....	3-70		
<b>S</b>			
SADF Mode .....	3-8		
Selecting Free Original Placement .....	3-67		
Selecting Separate Scan .....	3-68		
Selecting Small Original Adjustment .....	3-67		
Selecting the Finishing Function .....	3-22		
Selecting the Fixed Zoom .....	3-14		
Setting a Copy Limit for Each Account .....	4-26		
Setting the Copy Track Function .....	4-22		
Shift Grouping .....	3-22		
Shift Sorting .....	3-22		
Size Counter .....	4-13		
“Small” Originals .....	4-17		
Sort .....	3-20		
Special Paper Setting .....	3-10		
Specifications .....	7-2		



*Copyright*  
**1997 MINOLTA CO., LTD.**  
*Printed in Japan*

The information contained in this manual is  
subject to change without notice to  
incorporate improvements made on the  
product or products the manual covers.