VG16





Removal of components for general cleaning purposes.

NOTICE






The fat collection trays simply slide out and must be emptied after every cook.

These items must be replaced before using the oven.






The shaft and disc assemblies: Both of the discs and the shaft must be removed from the oven for cleaning.

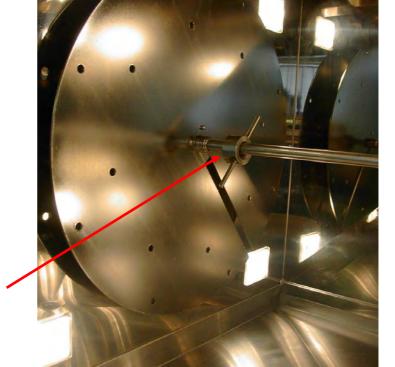

To remove the discs from the central shaft, simply unscrew the retaining nut that releases the disc for removal.



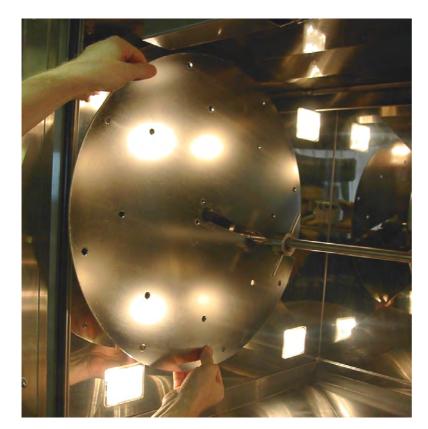

To remove the discs, withdraw from the drive pins and slide off the shaft, the shaft passing through the slot provided.



Remove the central shaft by lifting and withdrawing from the drive coupling.

Replace items before using the oven. Replacement is a reversal of the above procedure.

IMPORTANT:



BEFORE CARRYING OUT THE NEXT STAGE, THE OVEN MUST BE ISOLATED FROM THE ELECTRICAL SUPPLY BY WITHDRAWING THE MAINS PLUG.

The Fan Guards form an integral part of the oven lining & as such, it is essential to replace these panels before re-connecting the electrical supply.

The fan guard should be removed and cleaned along with the discs and shaft.



To remove a fan guard: Press as shown at both ends and pull down to unclip from the retaining slots.





NOTICE:



The Element Covers form an integral part of the oven lining & as such, it is essential to replace these panels before re-connecting the electrical supply.



To remove an element cover, unscrew the four retaining nuts.

Swing down the cover and unhook from the rear pins.







... And slide the cover out from the oven cavity.

Element cover removed, showing the rear pins.

