

Welcome to HUAWEI

**HUAWEI U8860**  
User Guide

# Contents

<b>1 Reading Before Proceeding</b> .....	<b>1</b>
1.1 Safety Precautions.....	1
1.2 Personal Information and Data Security .....	2
1.3 Legal Notice.....	3
<b>2 Getting Started</b> .....	<b>6</b>
2.1 Appearance .....	6
2.2 Setting Up Your Mobile Phone .....	8
2.3 Power On or Off Your Mobile Phone .....	11
2.4 Using the Touchscreen.....	12
2.5 Locking and Unlocking the Screen .....	12
2.6 Home Screen.....	13
2.7 Application Screen.....	18
2.8 Using a microSD Card.....	18
<b>3 Calling</b> .....	<b>19</b>
3.1 Making a Call.....	19
3.2 Answering or Rejecting a Call.....	20
3.3 Other Operations During a Call .....	22
3.4 Using the Call log.....	22
3.5 Using Airplane Mode .....	23
<b>4 Contacts</b> .....	<b>23</b>
4.1 Opening the Contacts Application .....	23
4.2 Importing Contacts from a SIM Card .....	23
4.3 Adding a Contact .....	24
4.4 Adding a Contact to Your Favorites.....	24
4.5 Searching for a Contact.....	24
4.6 Editing a Contact .....	24
4.7 Communicating with Your Contacts.....	25
4.8 Deleting a Contact .....	25

4.9 Backing Up and Synchronizing Contacts.....	26
4.10 Streams .....	26
4.11 Managing Groups .....	28
4.12 Joining and Separating Contacts.....	29
4.13 Sending Contacts .....	30
<b>5 Using the Onscreen Keyboard.....</b>	<b>30</b>
5.1 Displaying the Keyboard.....	30
5.2 Customizing Keyboard Settings.....	31
<b>6 Messaging .....</b>	<b>32</b>
6.1 SMS and MMS.....	32
6.2 Email.....	34
<b>7 Getting Connected.....</b>	<b>36</b>
7.1 Mobile Networks .....	36
7.2 Wi-Fi .....	37
7.3 Sharing Your Phone's Data Connection.....	38
7.4 WPS.....	38
7.5 Browser.....	39
7.6 Bluetooth.....	41
<b>8 Entertainment .....</b>	<b>42</b>
8.1 Taking Photos and Recording Videos .....	42
8.2 Using the Gallery .....	44
8.3 Enjoying Music.....	46
8.4 Listening to the FM Radio.....	48
<b>9 Google Services .....</b>	<b>48</b>
9.1 Creating a Google Account.....	49
9.2 Gmail .....	49
9.3 Talk.....	51
9.4 Maps.....	52
9.5 YouTube .....	53

9.6 Market.....	54
<b>10 Synchronizing Information .....</b>	<b>55</b>
10.1 Managing Your Accounts.....	55
10.2 Customizing Your Account Synchronization.....	57
<b>11 Using Other Applications .....</b>	<b>58</b>
11.1 AppInstaller.....	58
11.2 Traffic Manager.....	59
11.3 All Backup.....	59
11.4 Calendar .....	60
11.5 File Manager.....	62
11.6 Clock.....	64
11.7 Calculator.....	65
11.8 Notepad .....	65
11.9 Richpad.....	65
11.10 Weather Clock .....	66
<b>12 Managing Your Mobile Phone .....</b>	<b>67</b>
12.1 Setting the Date and Time .....	67
12.2 Setting the Display.....	68
12.3 Setting Ringers .....	68
12.4 Setting Phone Services .....	69
12.5 Configuring Text-to-Speech.....	70
12.6 Protecting Your Mobile Phone .....	70
12.7 Managing Applications.....	71
12.8 Resetting Your Mobile Phone .....	73
12.9 Setting Power Saving Mode .....	73
12.10 Online Update.....	73
<b>13 Huawei Cloud+ (Optional) .....</b>	<b>74</b>
13.1 Registration and Settings.....	74
13.2 Cloud+ Drive.....	75
13.3 Phone Finder .....	76

13.4 Synchronizing Contacts .....	77
13.5 Backing Up Data .....	77
<b>14 Appendix.....</b>	<b>77</b>
14.1 Warnings and Precautions.....	77
14.2 FAQs.....	84

# 1 Reading Before Proceeding

## 1.1 Safety Precautions

Please read the safety precautions carefully to ensure the correct use of your mobile phone.



Do not crash, throw, or puncture your mobile phone. Avoid the falling, squeezing, and bending of your mobile phone.



Do not use your mobile phone in a moist environment, such as the bathroom. Prevent your mobile phone from being soaked or washed in liquid.



Do not switch on your mobile phone when it is prohibited to use phones or when the phone may cause interference or danger.



Do not use your mobile phone while driving.



Follow any rules or regulations in hospitals and health care facilities. Switch off your mobile phone near medical apparatus.



Switch off your mobile phone in aircraft. The phone may cause interference to control equipment of the aircraft.



Switch off your mobile phone near high-precision electronic devices. The phone may affect the performance of these devices.



Do not attempt to disassemble your mobile phone or its accessories. Only qualified personnel are allowed to service or repair the phone.



Do not place your mobile phone or its accessories in containers with a strong electromagnetic field.



Do not place magnetic storage media near your mobile phone. Radiation from the phone may erase the information stored on them.



Do not put your mobile phone in a high-temperature place or use it in a place with flammable gas such as a gas station.



Keep your mobile phone and its accessories away from children. Do not allow children to use your mobile phone without guidance.



Use only approved batteries and chargers to avoid the risk of explosions.



Observe any laws or regulations on the use of wireless devices. Respect others' privacy and legal rights when using your wireless device.



Strictly follow the relevant instructions of this manual while using the USB cable. Otherwise your mobile phone or PC may be damaged.

## 1.2 Personal Information and Data Security

The use of some functions or third-party applications on your device could result in your personal information and data being lost or becoming accessible to others. Several measures are recommended to help you protect personal and confidential information.

- Place your device in a safe area to prevent it from unauthorized use.
- Set your device screen to lock and create a password or unlock pattern to open it.

- Periodically back up personal information kept on your SIM/UIM card, memory card, or stored in your device memory. If you change to a different device, be sure to move or delete any personal information on your old device.
- If you are worried about viruses when you receive messages or emails from a stranger, you can delete them without opening them.
- If you use your device to browse the Internet, avoid websites that might pose a security risk to avoid theft of your personal information.
- If you use services such as Wi-Fi tether or Bluetooth, set passwords for these services to prevent unauthorized access. When these services are not in use, turn them off.
- Install or upgrade device security software and regularly scan for viruses.
- Be sure to obtain third-party applications from a legitimate source. Downloaded third-party applications should be scanned for viruses.
- Install security software or patches released by Huawei or third-party application providers.
- Some applications require and transmit location information. As a result, a third-party may be able to share your location information.
- Your device may provide detection and diagnostic information to third-party application providers. Third party vendors use this information to improve their products and services.
- If you have concerns about the security of your personal information and data, please contact [mobile@huawei.com](mailto:mobile@huawei.com).

## 1.3 Legal Notice

**Copyright © Huawei Technologies Co., Ltd. 2011. All rights reserved.**

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

The product described in this manual may include copyrighted software of Huawei Technologies Co., Ltd. and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders.



## Trademarks and Permissions



**HUAWEI** are trademarks or registered trademarks of Huawei Technologies Co., Ltd.



WOW HD, SRS and the symbol  are trademarks of SRS Labs, Inc. WOW HD technology is incorporated under license from SRS Labs, Inc.

WOW HD™ significantly improves the playback quality of audio, delivering a dynamic 3D entertainment experience with deep, rich bass and high frequency clarity for crisp detail.

Android is a trademark of Google Inc.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

### Notice

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and therefore may not be activated or may be limited by local network operators or network service providers. Thus the descriptions herein may not match exactly the product or its accessories you purchase.

Huawei Technologies Co., Ltd. reserves the right to change or modify any information or specifications contained in this manual without prior notice and without any liability.

### Third-Party Software Statement

Huawei Technologies Co., Ltd. does not own the intellectual property of the third-party software and applications that are delivered with this product. Therefore, Huawei Technologies Co., Ltd. will not provide any warranty of any kind for these third-party software and applications. Neither will Huawei Technologies Co., Ltd. provide support to customers who use these third-party software and applications, nor be responsible or liable for the functions of these third-party software and applications.

Third-party software and applications services may be interrupted or terminated at any time. Huawei Technologies Co., Ltd. does not guarantee that any content or service would be maintained for any period during its availability. Third-party service providers provide content and services through network or transmission tools outside of the control of Huawei Technologies Co., Ltd. To the greatest extent permitted by applicable law, it is explicitly stated that Huawei Technologies Co., Ltd. shall not

compensate or be liable for services provided by third-party service providers, or the interruption or termination of third-party contents or services.

Huawei Technologies Co., Ltd. shall not be responsible for the legality, quality, or any other aspects of any software installed on this product, or for any uploaded or downloaded third-party works, such as texts, images, videos, or software. Customers shall bear the risk for any and all effects, including incompatibility between the software and this product, which result from installing software or uploading or downloading the third-party works.

This product uses the open-source Android™ platform. Huawei Technologies Co., Ltd. has made necessary changes to the platform. Therefore, this product may not support all the functions that are supported by the standard Android platform or may be incompatible with third-party software. Huawei Technologies Co., Ltd. shall not be liable for any of such situation.

### **DISCLAIMER OF WARRANTIES**

THE CONTENTS OF THIS MANUAL ARE PROVIDED “AS IS”. EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

### **LIMITATIONS OF LIABILITY**

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL HUAWEI TECHNOLOGIES CO., LTD. BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

THE MAXIMUM LIABILITY (THIS LIMITATION SHALL NOT APPLY TO LIABILITY FOR PERSONAL INJURY TO THE EXTENT APPLICABLE LAW PROHIBITS SUCH A LIMITATION) OF HUAWEI TECHNOLOGIES CO., LTD. ARISING FROM THE USE OF THE PRODUCT DESCRIBED IN THIS DOCUMENT SHALL BE LIMITED TO THE AMOUNT PAID BY CUSTOMERS FOR THE PURCHASE OF THIS PRODUCT.

### **Import and Export Regulations**

Customers shall comply with all applicable export or import laws and regulations and be responsible to obtain all necessary governmental permits and licenses in order to

 
export, re-export or import the product mentioned in this manual including the software and technical data therein.

## 2 Getting Started

- ⓘ All the pictures in this guide are for your reference only. Your phone's actual display features may be different to those described here, depending on its software version.


### 2.1 Appearance

#### 2.1.1 Phone at a Glance

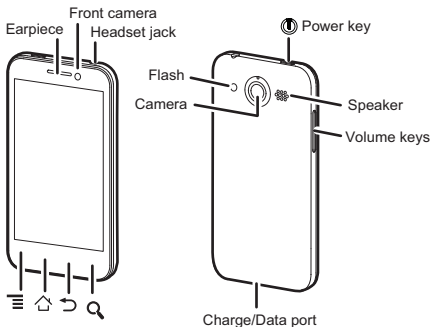


## 2.1.2 Key Functions at Your Fingertips


---


- Press and hold to power on your mobile phone.
  -  • Press and hold to open the **Phone options** menu.
  - Press to lock the screen when your mobile phone is active.
- 

 Touch to open the menu on an active screen.

---

- Touch to return to the Home screen.
  -  • Touch and hold to open **Task Manager**.
- 

- Touch to return to the previous screen.
  -  • Touch to hide the keyboard.
  - Touch to view thumbnails of the Home screen and its extensions.
- 

 
 Touch to open Google search for searching your mobile phone and the web.

---


## 2.2 Setting Up Your Mobile Phone

### 2.2.1 Before getting started


1 Removing battery cover

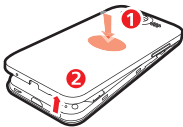


2 Installing SIM card

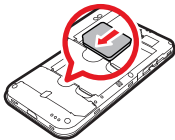 

3 Installing \*microSD card

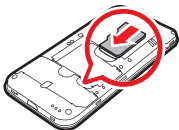 

4 Installing battery

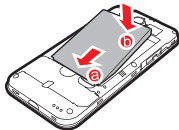 


\*microSD card is optional

5 Installing battery cover




## 2.2.2 Charging the Battery

 Before charging the battery, ensure that it has been properly installed on your phone.

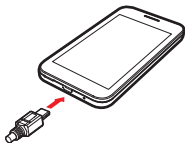


1. Connect the USB cable that came with your mobile phone to the charger.
2. Connect the other end of the USB cable to your mobile phone. Then, to start charging, plug the charger into an electrical outlet.

If you charge your mobile phone while it is powered on, the battery icon on the notification bar indicates the charging status. When the battery icon changes to , your mobile phone is fully charged.

### Status Indicator

 The color of the status indicator tells you the status of your mobile phone's battery.



Green: Fully charged (when connected to charger).

Orange: Charging in progress (when connected to charger).

Red: Battery low.



## 2.2.3 Important Information About the Battery

- If the battery has not been used for a long time, you may not be able to power on your mobile phone immediately after you begin charging the battery. Allow the battery to charge for a few minutes with the phone powered off before attempting to power the phone on.
- As it ages, the battery's performance will degrade, in particular it will not hold charge as it did when it was new. When the battery life becomes noticeably shorter than usual after being charged properly, replace the battery with a new one of the same type.
- Using data services increases the power consumption of the phone and will therefore reduce the length of time that the phone can be used between battery charges.
- The time required to fully charge the battery depends on the ambient temperature and the age of the battery.
- When the battery power is low, the phone will alert you and display a message. When the battery power is almost exhausted, your phone will power off automatically.

## 2.2.4 Power Saving Tips

The longevity of battery power depends on the network to which you connect, and how you use your mobile phone.


Try the following to conserve battery power:

- When you do not need 3G services, set your phone to connect to a 2G network.
- When your mobile phone is not in use, turn off the screen backlight.
- Reduce the time it takes for your screen backlight to turn off when your phone is idle.
- Lower the screen brightness.
- Turn off Bluetooth when you are not using it. Only make your phone visible to other Bluetooth devices when you need to establish a Bluetooth connection.
- Turn off Wi-Fi when you are not using it.
- Turn off your phone's GPS receiver when you are not using it.
- Lower the volume.
- Close power-draining programs, when you do not need them.

- Turn off the data service.

## 2.3 Power On or Off Your Mobile Phone

### 2.3.1 Powering On Your Mobile Phone

Press . The first time you power on your phone, you will be asked to sign in to your account and set up your mobile phone.

- ⓘ If personal identification number (PIN) protection is enabled on your mobile phone, you must enter your PIN before using the mobile phone.

### 2.3.2 Setting Up Your Mobile Phone

The first time you power on your mobile phone, the phone displays a setup wizard to help you set up the phone.

The setup wizard helps you:


- Create or sign in to your account
- Make some initial decisions about how you want to use your mobile phone

### 2.3.3 Turning On Fast Boot

1. Touch  > **Settings** > **Applications**.
2. Select the **Fast boot** check box.

- ⓘ Do not turn on **Fast boot** while on an airplane.

### 2.3.4 Powering Off Your Mobile Phone

1. Press and hold  to open the **Phone options** menu.
2. Touch **Power off**.

- ⓘ If **Fast boot** is enabled, the phone will enter the deep sleep mode. If **Fast boot** is disabled, touch **OK** to shut down the phone.



## 2.4 Using the Touchscreen

### 2.4.1 Touchscreen Actions

- **Touch:** Tap the screen with your finger to select an item, confirm a selection, or start an application.
- **Touch and hold:** Touch an item with your finger and do not release it until the mobile phone responds. For example, to open the options menu for the active screen, touch and hold the screen until the menu appears.
- **Flick:** Move your finger either vertically or horizontally across the screen.
- **Drag:** Touch and hold the desired item with your finger. To move an item, drag the item to any part of the screen. You can drag an icon to move or delete it.


### 2.4.2 Rotating Your Mobile Phone Screen

The orientation of most screens will change to landscape or portrait view when you rotate your phone sideways.


-  On the Home screen, touch  > **Settings** > **Display** > **Auto-rotate screen** to disable this function.

 
## 2.5 Locking and Unlocking the Screen


### 2.5.1 Locking the Screen

- When your phone is on, press  to lock the screen. When the screen is locked, you can still receive messages and calls.
- If your phone is idle for a while, the screen will lock automatically.

 
## 2.5.2 Unlocking the Screen

1. Press  to wake up the screen.
2. Drag the lock icon from left to right to unlock the screen.

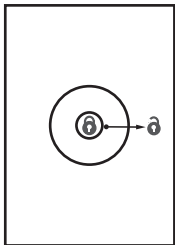





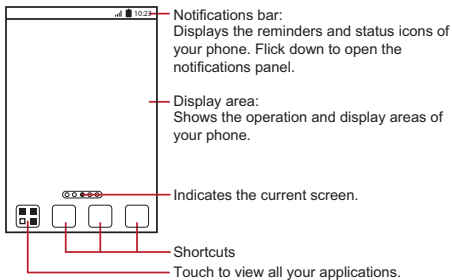



















-  If you have set up a screen unlock pattern, you will be prompted to draw the pattern on the screen to unlock it.

## 2.6 Home Screen



🔍 Touch and hold a shortcut until the mobile phone vibrates, you can then drag it to your desired location or move it to the trash. You can also drag an icon from another area of the screen to the shortcut position.

## 2.6.1 Notification and Status Icons

	Signal strength		No signal
	Connected to GPRS mobile network		GPRS in use
	Connected to EDGE mobile network		EDGE in use
	Connected to 3G mobile network		3G in use
	Roaming		Airplane mode
	Bluetooth on		Receiving location data from GPS
	Speakerphone on		Alarm enabled
	Vibration mode		Ringer silenced
	Call muted		Charging battery
	Battery full		Battery extremely low
	Call in progress		Missed call
	Call in progress with a Bluetooth headset used		New mail from Gmail

	New text or multimedia message		Problem with text or multimedia message delivery
	New chat message		New email
	New voicemail		Connected to a PC
	Open Wi-Fi network available		Upcoming event
	Uploading		Downloading
	Phone storage space is getting low		Sign-in or synchronization problem
	Preparing the microSD card		More undisplayed notifications
	Synchronizing data		Synchronization failed
	Portable Wi-Fi hotspot on		USB tethering on
	Connected to a VPN		Disconnected from a VPN

## 2.6.2 Notification Panel

Your mobile phone will notify you when you receive a new message or there is an upcoming event. The notification panel also informs you of alarms and settings. Open the notification panel to see your network operator or to view a message, reminder, or event notification.

## Opening the Notification Panel

1. When a new notification icon appears on the notification bar, place your finger on the notification bar and flick down to open the notification panel.

 You can also open the notification panel from the Home screen: Touch  > **Notifications** to open the panel.

 
2. On the panel, you can:

- Touch a notification to open the related application.
- Touch **Clear** to clear all notifications.

## Closing the Notification Panel

Touch and hold the bottom of the panel. Then flick up to close it.

## 2.6.3 Viewing Other Parts of the Home Screen

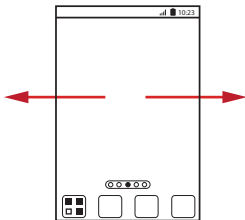

Flick your finger left or right across the Home screen.

## 2.6.4 Customizing the Home Screen

### Adding a New Home Screen Item

1. Touch and hold a blank area on the Home screen until the **Select action** menu is displayed.

 You can also touch  > **Add** on the Home screen to display the **Select**

**action** menu.

2. Select an item to add it to the Home screen.

### **Moving a Home Screen Item**





1. Touch and hold an item on the Home screen until the item expands in size and the mobile phone vibrates.
2. Without lifting your finger, drag the item to the desired position on the screen, and then release it.

### **Removing a Home Screen Item**


1. Touch and hold an item on the Home screen until the item expands and the mobile phone vibrates.
2. Without lifting your finger, drag the item to the trash can. When the item and the trash can turn red, the item is ready to be removed.
3. Release the item to remove it from the Home screen.

## 2.6.5 Service Shortcuts


1. Open the notification bar.
2. Touch  at the top of the screen to switch data services on or off.

! You can also touch , ,  or  turn the corresponding services on or off.





## 2.6.6 Changing the Wallpaper

1. On the Home screen, touch  > **Wallpaper**.
2. Touch the following menu items to select a picture and set it as the wallpaper:
  - **Gallery**
  - **Live wallpapers**
  - **Wallpapers**

## 2.7 Application Screen

The Application screen holds icons for all of the applications on your phone. You can touch  on the Home screen to open the application screen.

 
 
### 2.7.1 Moving Icons on the Application Screen

1. On the application screen, touch .
  2. Touch and hold the icon you want to move on the application screen.
  3. Without lifting your finger, drag the icon to the desired location, and then release it.
-  To move more icons, repeat steps 2 and 3.
4. Touch  or  to save.

## 2.8 Using a microSD Card

### 2.8.1 (Optional) Installing the microSD Card

Your mobile phone is already equipped with a large-volume built-in embedded MultiMediaCard (eMMC). If you want to expand your phone memory, you can also insert a microSD card.

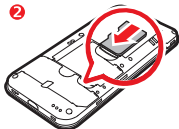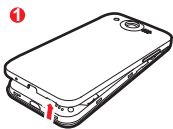

1. Remove the battery cover.
2. Insert the microSD card into the card slot as shown in the diagram.

### 2.8.2 Using the microSD Card as a USB Mass Storage


To transfer all your favorite music and pictures from your PC to your mobile phone's microSD card, set the microSD card as a USB mass storage.

1. Connect your mobile phone to your PC with the USB cable provided. Your PC will detect the microSD card as a removable storage device.
2. Open the notification bar, and then touch **USB connected**.
3. Touch **Turn on USB storage** in the dialog box that opens to confirm that you want to transfer files.

You can now transfer files from your PC to your mobile phone's microSD card.

- ⓘ When your microSD card acts as a USB mass storage, your mobile phone will not use this memory space. Ensure that you follow the correct procedures to disconnect the USB mass storage device (your mobile phone) from the PC when you have finished transferring files.

## 2.8.3 Removing the microSD Card

1. On the Home screen, touch  > **Settings**.
2. Scroll down the screen, and then touch **Storage > Unmount SD card**.
3. Carefully remove the microSD card.

# 3 Calling

To make a phone call, you can dial a number using the keypad or touch a number saved in your contact list, on a webpage, or in other places. When you are in a call, you can answer other incoming calls or redirect them to your voicemail. You can also set up conference calls with several participants.

## 3.1 Making a Call

To make a call, you can use the **Dialer** application, or select a number from **Contacts** or **Call log**.

When you are in a call, you can touch  to use other functions. To return to the call screen, flick the notification bar down and touch **Current call**.

- ⓘ Be careful not to block the microphone at the bottom of your phone if you want your voice heard by the other parties in a call.




### 3.1.1 Making a Call with the Dialer Application

1. On the Home screen, touch  > **Dialer** to display the dialer.

If you are already working with **Contacts** or **Call log**, touch the **Dialer** tab.


2. Touch the appropriate number keys to enter the phone number.

-  Your mobile phone supports the SmartDial function, that is, when you touch numbers on the dialer, the phone automatically searches among your contacts and lists the matching results ordered according to the accuracy of the match. If no contacts match the information entered, the phone will not display any result.

3. Touch  to initiate the call.

During a call, touch **Dialpad** to enter other numbers on the dialpad.

### 3.1.2 Making a Call from Contacts

1. On the Home screen, touch  > **Contacts** to display the contact list.

If you are already working with **Dialer** or **Call log**, touch the **Contacts** tab.

2. In the list, touch the contact you want to call.

3. Touch  to dial the phone number.

### 3.1.3 Making a Call from Call log

1. On the Home screen, touch  > **Call log** to display the call log.

If you are already working with **Contacts** or **Dialer**, touch the **Call log** tab.

2. Touch  to the right of the log entry to dial.

 
-  If you touch and hold a log entry, the options menu will open.

## 3.2 Answering or Rejecting a Call

### 3.2.1 Answering an Incoming Call

When you receive a phone call, the incoming call screen opens. If you have previously saved the caller's number in **Contacts**, the caller's name and number are displayed. If the caller's number is not saved in **Contacts**, the caller's number is displayed.

Drag  to the right to answer the call.

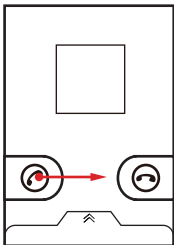



### 3.2.2 Ending a Call

During a call, touch **End** to hang up.

### 3.2.3 Rejecting an Incoming Call

 Drag  to the left to reject the call.

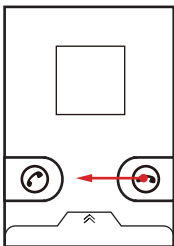


 You can also drag up the bar at the bottom of the screen to reject a call and send the caller a message.

## 3.3 Other Operations During a Call

### 3.3.1 Making a Conference Call

If you receive a new call while you are already in a call, you can add the second call to the call you are in. This feature is known as conference calling. You can also set up a conference call with multiple callers.

- ❗ Contact your network operator to ask if conference calls are supported and, if yes, how many parties can participate.
- 1. To initiate a conference call, dial the number of the first participant. After you have connected to the first participant, keep the connection open, touch **Add call**.
- 2. Enter the phone number of the next person you want to invite for the conversation and touch , or select someone from your **Call log** or **Contacts**. The first participant is automatically placed on hold while you do this.
- 3. Once you have connected to the second person, touch **Merge calls** to begin the conference call.
- 4. To end the conference call and disconnect from everyone, touch **End**.

### 3.3.2 Switching Between Calls

If you receive a new call while you are already in a call, you can switch between the two calls.

1. While you are in the first call and the second call comes in, answer the incoming call, and then touch **Swap**.
2. The current call is placed on hold and you are connected to the first call.

## 3.4 Using the Call log

The **Call log** contains a list of calls that you have dialed, received, and missed. You can use the call log to find a recently called number quickly or add a number from the call log to your contact list.

### 3.4.1 Adding an Entry to Contacts

1. If you are already working with **Dialer** or **Contacts**, touch the **Call log** tab.
2. Touch and hold the entry you want to add to your **Contacts**.

3. Touch **Add to contacts** in the options menu.
4. Touch **Create contact** or scroll through the contact list and touch an existing contact name.

## 3.5 Using Airplane Mode

Some locations may require you to turn off your phone's wireless connections. Rather than powering off your phone, you can place it in **Airplane mode**.

1. Press and hold .
2. Touch **Airplane mode** in the options menu.

## 4 Contacts


The **Contacts** application enables you to save and manage information such as phone numbers and addresses of your contacts. After you save contact information on your mobile phone, you have easy access to the people with whom you want to communicate.

### 4.1 Opening the Contacts Application

If you have not yet added any contacts to your mobile phone, **Contacts** displays a message with hints on how to start adding contacts information. On the Home screen, touch **Contacts** to open the **Contacts** application.


On the Home screen, touch  > **Contacts** to open the **Contacts** application. All of your contacts are displayed alphabetically in a list that you can scroll through.

### 4.2 Importing Contacts from a SIM Card

1. In the contact list, touch  > **Manage contacts**.
2. Touch **Copy from SIM card**.
3. Wait for the SIM card contents to be loaded. Select the contacts you want to import or touch **Select All** to select all contacts.
4. Touch **Copy**.

5. If you have more than one account on your phone, touch the account into which you want to import the contacts.



## 4.3 Adding a Contact

1. In the contact list, touch  > **Create contact**.
2. If you have more than one account with contacts, touch the account to which you want to add the contact.
3. Enter the contact's name, and then add detailed information such as phone number and address.
4. When you are finished, touch **Save** to save the contact information.

## 4.4 Adding a Contact to Your Favorites

- Touch and hold the contact you want to add to **Favorites**. Then touch **Add to Favorites**.
- Touch a contact, and then touch the star to the right of the contact's name. The star turns gold.

## 4.5 Searching for a Contact

1. In the contact list, touch  > **Search**.
  2. Enter the name of the contact you wish to search for. As you type, contacts with matching names appear below the search box.
-  On the contact list screen, you can touch a letter on the right to display contacts starting with the touched letter.

## 4.6 Editing a Contact

You can make changes to the information you have stored for a contact at any time.

1. In the contacts list, touch and hold the contact whose details you want to edit, and then touch **Edit contact** in the options menu.
2. Touch the category of contact information you wish to change: name, phone number, email address, or any other information you recorded earlier.

3. Make the desired changes to the contact information, and then touch **Save**. To cancel all of your changes, touch **Cancel**.

## 4.7 Communicating with Your Contacts

From the **Contacts** or **Favorites** tab, you can quickly call or send a text (SMS) or multimedia (MMS) message to a contact's default phone number. You can also open details to view a list of all the ways you can communicate with that contact. This section describes how to communicate with a contact when you view your contacts list.

### 4.7.1 Using Quick Contact for Android

1. Touch the contact's picture or picture frame (if you have not assigned a picture to the contact) to open Quick Contact for Android.
  2. Touch the icon for the way you want to communicate with the contact.
- ⓘ The icons available depend on the information you have entered for the contact, the applications installed on your phone, and the accounts you have.

### 4.7.2 Communicating with a Contact

1. In the contacts list, touch the contact that you want to communicate with.
2. On the contact's details screen, touch the icon to the right of the number to call or send messages.

## 4.8 Deleting a Contact

1. In the contacts list, touch and hold the contact that you want to delete, and then touch **Delete contact** in the options menu.
2. Touch **OK** to confirm that you want to delete the contact.

## 4.9 Backing Up and Synchronizing Contacts

You can back up contacts from your phone to a microSD card, or synchronize phone contacts with a server using your Google account.

### 4.9.1 Using a microSD Card to Back Up Contacts

#### Backing Up Contacts

1. In the contact list, touch  > **Manage contacts**.
2. Touch **Backup to SD card** in the displayed menu.
3. Touch **OK** to export your phone contact's information to the installed microSD card. You can copy the .vcf files backed up on the microSD card to your computer. The files are stored in the microSD card's **Contact** folder.

#### Restoring Contacts

1. In the contact list, touch  > **Manage contacts**.
2. Touch **Restore from SD card** in the displayed menu.

If there is more than one .vcf files saved on the microSD card, you can choose to restore one, multiple, or all the of them.

### 4.9.2 Using a Google Account to Synchronize Contacts

You can synchronize contacts using your Google account. For details, see [Changing an Account's Synchronization Settings](#).


## 4.10 Streams

Streams is a client that integrates social networking service (SNS) functions, such as Facebook and Twitter. Using Streams, your SNS accounts can be closely linked with Contacts.

To access the Streams screen, touch  > **Streams**. You can also touch **Contacts**, and then flick left to switch to the Streams screen.

## 4.10.1 Logging in to an Account

1. The first time you access Streams, touch **Login to Social Network**.
2. Select the type of account that you want to log in to. Then follow the on-screen setup instructions to complete login.

You can log in to different types of accounts at the same time. To add an account of another type, touch  > **Accounts** > **Add account**.


## 4.10.2 Importing Friends

After login, the phone asks you whether to import all friends. If you choose to import friends, Streams will import the SNS accounts of all your friends to your phone. If not, you can import your friends' accounts in Settings later.

After friends are imported, the group of imported accounts is automatically added to the groups of **Contacts**.

## 4.10.3 Preference Settings

You can configure account settings, such as refresh mode, refresh frequency, and notifications.

1. On the Streams screen, touch  > **Accounts**. Then touch the account to be configured.
2. On the account screen, touch **Social Preference Settings** to configure the settings.

## 4.10.4 Adding the Streams Widget to the Home Screen




Touch and hold the blank area of the Home screen. In the displayed menu, touch **Add widget** > **Streams** to add Streams to the Home screen.

Using the widget, you can quickly access Streams, or directly browse the latest events and update the status of your friends on the Home screen.



## 4.11 Managing Groups

### 4.11.1 Creating a Group

1. On the Home screen, touch  > **Contacts**. Then flick the tab bar to the left and touch **Groups**.
2. In the groups list, touch , and then touch **Create group**.
3. Enter the name and picture you want to assign to the group, and then set a ringtone for it.
4. Touch  > **Add Members** to add members to the group.
5. Select the contacts to be added to the group, and then touch **OK**.
6. When you are finished, touch **Save** to save the group information.

 You can only add contacts saved in the phone memory to a group.



### 4.11.2 Editing a Group

You can always make changes to the information you have saved for a group.

1. In the groups list, touch and hold the group whose details you want to edit, and then touch **Edit group** in the options menu.
2. Make the desired changes to the group information, and then touch **Save**. To cancel all changes you made to the group information, touch **Cancel**.

### 4.11.3 Adding a Contact to Your Groups

To add a contact to your groups, you can do any of the following:

- Touch and hold the contact you want to add to **Groups**. Then touch **Add to groups**.
  - When editing a group, touch , and then touch **Add Members** to select the contacts you want to add to group.
-  You can add contacts in phone memory rather than in SIM/UIM card to a group.

## 4.12 Joining and Separating Contacts


You may have duplicate contacts if you import contacts by:

- Adding an account, such as a Gmail account.
- Using the social networking services such as Facebook or Twitter. (If your phone has the Streams function, you can use it to access Facebook or Twitter.)
- Using other methods, such as exchanging emails.

To avoid duplication, join two or more contacts together to form a single contact.

ⓘ Availability of Facebook or Twitter may vary depending on your country or carrier. Please use them according to local laws and regulations.


### 4.12.1 Joining Contacts

1. On the Home screen, touch  > **Contacts**.
2. Touch a duplicated contact.
3. Touch **Joined Contacts**, and then touch **Add contact**.
4. Select the contact to be joined to combine two duplicate contacts.

Two contacts will be joined together and displayed as one contact. Touch the contact to view the joined information. You can see that the contact is joined together by two contacts. You can also combine more than two contacts.

### 4.12.2 Separating Contacts



If contact information from different sources was joined together in error, you can separate the contacts.

1. On the Home screen, touch  > **Contacts**.
2. Touch the joint contact to be separated.
3. Touch the option for separating a contact.
4. Select the contact to be separated from the joint contact.

The joint contact is then separated into two contacts displayed separately in **Contacts**.

## 4.13 Sending Contacts

You can send contacts as a .vcf file via Bluetooth or Email.

1. In the contacts list, touch .
  2. Select contacts that you want to send.
  3. Touch **Send**.
  4. Select the way you prefer to send the contacts you have selected, for example Bluetooth or Email.
-  You can send one contact by another way. Touch and hold a contact, touch **Send contact**, and then select the way you prefer to send.

## 5 Using the Onscreen Keyboard

### 5.1 Displaying the Keyboard

To enter text, use the onscreen keyboard. Some applications open the keyboard automatically. In others, touch a text field to open the keyboard.

 
Touch  to hide the keyboard.

 Touch and hold a text field to open the **Edit text** menu.

#### 5.1.1 Choosing an Input Method

1. Touch and hold a text field until the **Edit text** menu is displayed.
2. Touch **Select input method**.
3. Select the input method.

## 5.1.2 Using the Android Keyboard

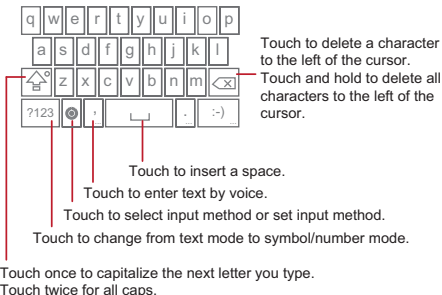


❗ The keyboard layout may vary slightly depending on the field where you are entering text. The previous figure is provided for your reference only.

👉 On the Home screen, touch  > **Settings** > **Language & keyboard** > **Android keyboard** > **Voice input** to turn on or turn off voice input.

## 5.1.3 Using the Landscape Keyboard

If you find the keyboard inconvenient or difficult to use, turn your mobile phone sideways. The screen will display the keyboard in landscape orientation, providing you with a wider keyboard layout.

# 5.2 Customizing Keyboard Settings


1. On the Home screen, touch  > **Settings** > **Language & keyboard**.
2. In **Keyboard settings**, select an input method to customize the keyboard settings.

# 6 Messaging



The **Messaging** application allows you to exchange text messages (SMS) and multimedia messages (MMS) with anyone using an SMS-or-MMS-capable phone. With the **Email** application you can read and send emails.

## 6.1 SMS and MMS

### 6.1.1 Opening Messaging

Touch  > **Messaging**.

### 6.1.2 Creating and Sending a Text Message

1. Touch  > **Messaging** > **New message**.
2. Enter a phone number or a contact's name in the **To** field, or touch  to select a contact from **Contacts** or **Groups**.

As you enter the phone number or the contact's name, the phone displays possible matches from your contacts. Select a contact from the list of possible matches or continue entering.



After you select a contact or finish entering a number, add a comma and you can enter another recipient. You can also touch a previously entered contact again to edit or delete it.

3. Touch the composition text box to start entering your message.

4. When you are ready to send the message, touch  .


Sent and received messages will be displayed in a message thread, grouping together the messages in a conversation.


### 6.1.3 Creating and Sending a Multimedia Message

1. Touch  > **Messaging** > **New message**.
2. Enter a phone number in the **To** field, or touch  to select a contact from **Contacts** or **Groups**.
3. Touch the composition text box to start entering your message.

4. Touch  to display the options panel. Touch **Add subject** to add the message subject. Your mobile phone is now in multimedia message mode.

5. When the message is ready to be sent, touch  .

 On the message editing screen, you can also touch  , and then select your desired files to add.

 You can direct select a multimedia file (audios, videos, or pictures) and send it via MMS: Touch **File Manager**, touch and hold the multimedia file to be sent, and then select **Share > Messaging**.

### Adding a Slideshow


If you want to attach more than one file to your message, use the **Slideshow** option.

1. On the message editing screen, touch  to display the options panel.

2. Touch **Add > Slideshow**, and then select a slide to start editing it.

3. Touch  and then touch **More > Add slide** to add more slides.

4. Touch **Done** to finish composing your message and return to the multimedia message screen.

5. To alter your multimedia message, touch the slideshow on the multimedia message screen. When the message is ready to be sent, touch  .

## 6.1.4 Opening and Viewing a Multimedia Message



1. In the message list, touch the message thread you wish to view.

2. Touch the multimedia message to view the message.

## 6.1.5 Replying to a Message

1. In the message list, touch a text or multimedia message thread to open it.

2. Touch the text box to compose your message. Once finished, touch  .


 You can also do the following to reply to a message: Touch  > **Multiselect**, select one or more message threads, and touch **Reply**.

## 6.1.6 Copying a Text Message to Notepad or Calendar

1. In the message list, touch a text message thread to open it.
2. Touch and hold one of the messages, and then touch **Copy message to**.
3. Touch **Notepad** or **Calendar** to save it as a note or an event.

For information about how to use **Notepad** or **Calendar**, see the relevant sections of this guide.

## 6.1.7 Customizing Message Settings


In the message list, touch , and then touch **Settings** to customize the message settings.

# 6.2 Email


Your mobile phone also puts email at your fingertips. With your phone's **Email** application, you can use your email account with Yahoo!, AOL, or other popular email services on your phone.


## 6.2.1 Adding an Email Account


When using the **Email** application for the first time, you must configure an email account. The Email setup wizard helps you to configure your account. A number of popular email systems are supported. You can work with the same email service that you use on your PC or you can select another email service.

1. On the Home screen, touch  > **Email**.
2. In the email system list, select a system, or select **Others**.
3. To customize your email settings, follow the onscreen instructions, and then touch **Next**.
4. Enter the account name and the name you want other people to see when they receive an email from you.
5. Touch **Done**.

### Adding Other Email Accounts

1. After creating your initial email account, touch  on the **Inbox** screen, and then touch **More > Accounts** to access the accounts screen.

2. Touch  on the accounts screen, and then touch **Add account** to create another email account.

 When adding an additional email account, you have the option to use the new account to send all outgoing messages.


## 6.2.2 Viewing an Email Message

1. On the accounts screen, touch the email account you want to use.
2. Access a folder, and then touch the message that you want to view.

## 6.2.3 Saving an Email Attachment


1. On the accounts screen, touch the email account you want to use.
2. Touch the email message you want to view.
3. Touch **Save** next to the attachment in the email.
4. Select a path for saving the attachment and touch **Save**.

## 6.2.4 Creating and Sending an Email Message

1. On the accounts screen, touch the email account you want to use.
2. On the **Inbox** screen, touch , and then touch **Compose** in the options panel.
3. In the **To** field, enter the recipients' name or email address.
4. Enter the subject of your message and compose the message.

To send an attachment with the message, touch , and then touch **Add attachment**.

5. When you are finished, touch **Send**.

If you are not ready to send the message, touch **Save as draft** or touch  to save the message as a draft.

## 6.2.5 Replying to an Email Message

1. On the accounts screen, touch the email account you want to use.
2. Touch the email message to which you want to reply.
3. Touch **Reply** or **Reply all** to reply to the email message.




## 6.2.6 Deleting an Email Account

1. On the accounts screen, touch and hold the email account you want to delete.
2. Touch **Remove account**.
3. Touch **OK**.

## 6.2.7 Changing Email Account Settings

You can change a number of account settings, including how often you check for emails, how you are notified of a new mail, and details about the servers the account uses to send and receive mails.

❗ Your account's incoming and outgoing settings depend on the kind of email service you are using. You can enter the necessary details manually, although you may need to contact your email service provider to obtain the correct information.


1. Touch  > **Email**.
2. On the accounts screen, touch and hold the email account you want to change.
3. Touch **Account settings**.
4. Change **General settings**, **Notification settings**, or **Server settings**.

# 7 Getting Connected

## 7.1 Mobile Networks

Your mobile phone will be automatically configured to use your network operator's 2G/3G service (if available) when you turn on the phone for the first time. Note that the SIM/UIM card must be inserted (some CDMA mobile phones have an integrated UIM card and do not need a separate UIM card)

### 7.1.1 Checking the Network Connection

1. Touch  > **Settings**.
2. Touch **Wireless & networks** > **Mobile networks**.
3. Touch **Network operators** or **Access Point Names** to check the network connection.

- ❗ Your mobile phone will automatically read the access point settings from the SIM/UM card (if any). For this reason, do not change the access point parameters; otherwise, you might not be able to access network resources.

## 7.1.2 Turning on the Data Service

1. Touch  > **Settings**.
2. Touch **Wireless & networks** > **Mobile networks**.
3. Select the **Data enabled** check box to turn on the data connection.


## 7.2 Wi-Fi

Wi-Fi gives you wireless access to broadband Internet. To use Wi-Fi on your mobile phone, you must have an access to wireless access points (hotspots). Obstacles that block the Wi-Fi signal will reduce its strength.

### 7.2.1 Turning On Wi-Fi

1. Touch  > **Settings**.
2. Touch **Wireless & networks**, and then select the **Wi-Fi** check box to turn on Wi-Fi.

### 7.2.2 Connecting to a Wireless Network

1. After turning on Wi-Fi, touch  > **Settings**.
2. Touch **Wireless & networks** > **Wi-Fi settings**. You will see a list of detected Wi-Fi networks in the **Wi-Fi networks** section.
3. Touch a Wi-Fi network to connect to it.
  - If you select an open network, you will be automatically connected to the network.
  - If you select a network that is secured with Wired Equivalent Privacy (WEP) and connect to it for the first time, enter the password as prompted, and then touch **Connect**. If you connect to a secured wireless network that you have already used, you will not be prompted to enter the password again unless you have reset your mobile phone to its default settings.

-  On the **Wi-Fi settings** screen, touch **Add Wi-Fi network** to add a new Wi-Fi network.

## 7.3 Sharing Your Phone's Data Connection

You can share your mobile phone's data connection with a single computer via a USB cable: USB tethering. You can share your mobile phone's data connection with a number of devices at the same time, by turning your phone into a portable Wi-Fi hotspot.


### 7.3.1 Sharing Your Phone's Data Connection via USB

To use USB tethering in different operating systems, you may need to prepare your computer to establish a network connection via USB.

❗ You cannot share your mobile phone's data connection and access its microSD card via USB at the same time.

1. Touch  > **Settings**.
2. Touch **Wireless & networks** > **Tethering & portable hotspot**.
3. Select the **USB tethering** check box to share your data connection.

### 7.3.2 Sharing Your Phone's Data Connection as a Portable Wi-Fi Hotspot

1. Touch  > **Settings**.
2. Touch **Wireless & networks** > **Tethering & portable hotspot**.
3. Select the **Portable Wi-Fi hotspot** check box to share your data connection.

🔍 When **Portable Wi-Fi hotspot** is selected, you can touch **Portable Wi-Fi hotspot settings** to change its network name or secure it.

## 7.4 WPS

The Wi-Fi Protected Setup (WPS) function simplifies the operations to set up Wi-Fi networks and configure network security settings.

❗ When connecting to a Wi-Fi network via WPS, ensure that the Wi-Fi access point to be connected supports the WPS function.

## 7.4.1 Connecting to a Wireless Network via the WPS Button

1. Turn on Wi-Fi, and then access the **Wi-Fi settings** screen.
2. Touch **WPS button connection**.
3. Press the WPS button of the Wi-Fi access point. When your phone connects to the network, it displays a message.

## 7.4.2 Connecting to a Wireless Network via the WPS PIN

1. Turn on Wi-Fi, and then access the **Wi-Fi settings** screen.
2. In the **Wi-Fi networks** section, press and hold the Wi-Fi network to be connected. Then select **WPS PIN connection** in the options menu. Your phone displays the PIN of the selected Wi-Fi access point.
3. Enter the PIN on the Wi-Fi access point. When your phone connects to the network, it displays a message.


 To add a new Wi-Fi network, touch **Add Wi-Fi network** on the **Wi-Fi settings** screen, and then enter the Service Set Identifier (SSID) of the network.


# 7.5 Browser

Your mobile phone comes with an Internet browser pre-installed.

## 7.5.1 Opening the Browser

Touch  > **Browser** to open the home page.

 When known or open Wi-Fi networks and mobile data networks are available at the same time, your phone will preferably select a Wi-Fi network for Internet access.

Touch  to open the browser options menu and perform one of the following operations:

- **New window:** Touch to open a new window.
- **Bookmarks:** Touch to display bookmarks.
- **Windows:** Touch to view thumbnails of open browser windows. You can switch to another browser window or open a new one on this screen.

- **Refresh:** Touch to refresh the current webpage.
- **Forward:** Touch to browse the next web page.
- **More:** Touch to open other menus and perform operations such as searching, selecting text, downloading, or setting options.

## 7.5.2 Opening a Webpage

1. In a browser window, touch the URL field at the top of the screen.
2. Use the keyboard to enter a webpage address. You can touch  to enter the web page address by voice.
3. As you enter the address, matching webpage addresses will appear on the screen. If you see the address you want, touch it and go directly to that webpage or complete entering your desired webpage.


## 7.5.3 Setting a Home Page

1. In a browser window, touch .
2. Touch **More** > **Settings** > **Set home page**.
3. Enter the address of the desired home page, and then touch **OK**.


## 7.5.4 Managing Bookmarks

You can store as many bookmarks as you want on your mobile phone.

### Adding a Bookmark

1. In a browser window, go to the webpage you want to save as a bookmark.
2. Touch , and then touch **Bookmarks** > **Add**.
3. Edit the bookmark name and then touch **OK**.

### Opening a Bookmark

1. In a browser window, touch , and then touch **Bookmarks**.  
On the **Bookmarks** screen, touch the **History** tab to view the pages you have visited, or touch the **Most visited** tab to view the pages you have visited most frequently.
2. Touch the bookmark of the website you want to open.


## 7.5.5 Customizing Browser Settings

Customize the browser to suit your browsing style. Use **Browser** to set page content, privacy, and security preferences. In a browser window, touch , and then touch **More > Settings**.

## 7.6 Bluetooth

Your mobile phone has Bluetooth, which allows you to create a wireless connection with other Bluetooth devices so you can share files with your friends, talk hands-free with a Bluetooth headset, or even transfer photos from your phone to your PC. If you are using Bluetooth, remember to stay within 10 meters (33 feet) of the other Bluetooth devices to which you want to connect. Be aware that obstacles like walls or other electronic equipment may interfere with your Bluetooth connection.

### 7.6.1 Turning On Bluetooth


1. Touch  > **Settings**.
2. Touch **Wireless & networks**, and then select the **Bluetooth** check box to turn on Bluetooth. When Bluetooth is turned on, the Bluetooth icon appears in the notification bar.
3. Touch **Bluetooth settings**, and then select the **Discoverable** to make your mobile phone visible to other Bluetooth devices.

### 7.6.2 Pairing with and Connecting to a Bluetooth Device

Your mobile Bluetooth lets you do the following:

- Hands Free Profile (HFP): allows you to use a hands-free Bluetooth device.
- Headset Profile (HSP): allows you to use a mono Bluetooth headset.
- Object Push Profile (OPP): allows you to transfer files over a Bluetooth connection.
- Advanced Audio Distribution Profile (A2DP): allows you to use a stereo Bluetooth headset.
- AV Remote Control Profile (AVRCP): allows you to control audio playing using a Bluetooth headset remotely.

Before you use Bluetooth, pair your mobile phone with another Bluetooth device as follows:


1. Ensure that the Bluetooth function on your mobile phone is enabled.
2. On the Home screen, touch  > **Settings** > **Wireless & networks** > **Bluetooth settings**. Your mobile phone will then scan for Bluetooth devices in range.
3. Touch the device you want to pair your mobile phone with.
4. If required, enter the pairing password to complete the connection.

### 7.6.3 Sending Files via Bluetooth

With Bluetooth, you can share pictures, videos, or music files with your family and friends. To send files via Bluetooth:

1. Touch and hold the file to be sent in your mobile phone or SD card. The active options menu is displayed.
2. Touch **Share**, then **Bluetooth** to select a paired device.

### 7.6.4 Disconnecting from or Unpairing with a Bluetooth Device

1. Touch  > **Settings** > **Wireless & networks** > **Bluetooth settings**.
2. Navigate to the **Bluetooth devices** section, and then touch and hold the device to which you are connected.
3. Touch **Unpair** to disconnect from the device.


## 8 Entertainment

In addition to being a communication device and personal assistant, your mobile phone also provides you with a multitude of entertainment possibilities. You can take photos, create videos and audio clips, and download and listen to music.

### 8.1 Taking Photos and Recording Videos

 
The camera is a combination of camera and camcorder that you can use to shoot and share pictures and videos.

#### 8.1.1 Opening Your Camera

- Touch  > **Camera** to open the camera. The camera opens in landscape mode, ready to take a picture or record a video.


- Touch  to close the camera.

## Capture Screen

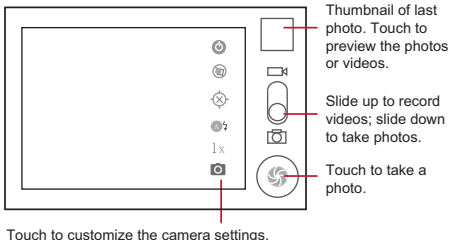

On the capture screen, touch  to show the capture panel.

### 8.1.2 Taking a Photo

1. Open your camera application and switch it to camera mode.
2. If necessary, change the camera settings. The preview changes as you change the settings.
3. Frame your photo within the photo capture screen.
4. Touch  to take your photo.



Photos taken are displayed for a moment. You can take another photo or review your photos.

### 8.1.3 Viewing Your Photos

1. After taking a photo, a thumbnail of the photo you have just taken is shown in the upper right corner of the capture screen. Touch the thumbnail to view it.
2. Touch the onscreen button to do any of the following:
  - Touch **Share** to send the photo in a message or post it online.
  - Touch **Delete** to delete the photo.
  - Touch **More > Set as** to set the photo as a contact icon or the wallpaper.



## 8.1.4 Recording a Video

1. Open the camera application, and then switch it to camcorder mode.
2. If necessary, change the camcorder settings.
3. Frame the scene with which you want to start your video.
4. Touch  to start recording a video.
5. Touch  to stop recording.

## 8.1.5 Viewing Your Videos

1. After recording a video, a thumbnail of the video you have just recorded is shown in the upper right corner of the capture screen. Touch the thumbnail to view it.
2. Touch the onscreen buttons to do any of the following:
  - Touch **Share** to send the video in a message or post it online.
  - Touch **Delete** to delete the video.

On the video playback screen, touch the controls to fast-forward or rewind or to play or pause the video.
3. If you want to view more videos, flick your finger left or right across the screen.

# 8.2 Using the Gallery

Your **Gallery** application can automatically search for pictures and videos on your mobile phone and microSD card. Use **Gallery** to sort photos and videos into folders, view and edit pictures, watch videos, and set a picture as wallpaper or as a photo for a contact.


## 8.2.1 Opening the Gallery

On the Home screen, touch  > **Gallery**.


The **Gallery** application categorizes your pictures and videos by storage location and displays these files in folders. Touch a folder to view the pictures or videos inside.

## 8.2.2 Viewing a Picture


1. In **Gallery**, touch the folder that contains the pictures you want to view.
2. Touch the picture to view it in full-screen mode.

3. Touch the screen. Then the zoom panel appears. You can zoom in or zoom out on the picture.
-  The picture viewer supports the automatic rotation function. When you rotate your mobile phone, the picture adjusts itself to the rotation.

### 8.2.3 Rotating a Picture

1. When viewing a picture, touch  to display the operations panel.
2. Touch **More**.
3. Select either **Rotate Left** or **Rotate Right**. The picture is saved with the new orientation.

### 8.2.4 Cropping a Picture

 
1. When viewing a picture, touch  to display the operation panel, and then touch **More > Crop**.
2. Use the cropping tool to select the portion of the picture to crop.
  - Drag from the inside of the cropping tool to move it.
  - Drag an edge of the cropping tool to resize the image.
  - Drag a corner of the cropping tool to resize the image without changing its length to width ratio.
3. Touch **Save** to save the cropped picture. Touch **Discard** to discard the changes.

## 8.3 Enjoying Music

### 8.3.1 Opening the Music Library


On the Home screen, touch **Music** to open the music library.


The music library automatically scans for music stored on your microSD card and displays them in **Albums**, **Songs**, **Playlists**, **Folders**. Touch **More** to view music in other ways.

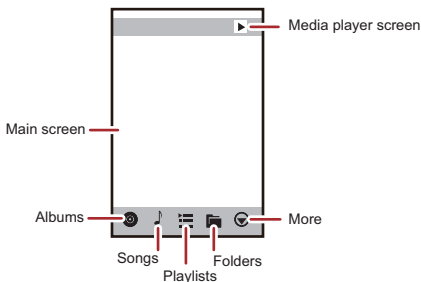

## 8.3.2 Playing Music

 1. From the music library, select a way to view your music.
2. Touch the music file you want to play.

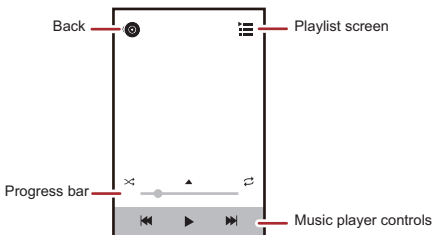

While playing music, touch  to return to the Home screen, the music will continue to play in the background and you can use other applications. Open the notifications panel and touch the playing music to return to the music playing screen.

## 8.3.3 Creating a Playlist

1. In the music library, enter **Playlists**, and touch **New playlist** to create a new playlist.
2. After a playlist is created, touch **OK** to add songs.
3. Select the songs to be added to the playlist, and touch **Done**.

 Touch and hold a playlist to **Rename** or **Delete** it.

## 8.3.4 Adding Music to a Playlist

1. From the music library select a way to view your music.
2. Touch and hold a music file, and then touch **Add to playlist**.
  - Touch an existing playlist to add the song to that playlist.
  - Touch **New playlist** to add the song to a new playlist.

## 8.3.5 Playing Music in a Playlist

1. In music library, touch **Playlists**.
2. Touch and hold the playlist you want to play.
3. Touch **Play** to play the playlist.

## 8.4 Listening to the FM Radio

The FM radio lets you listen to FM radio programs on your mobile phone. Since the FM radio uses the provided wired stereo headset as its antenna, before opening the application, connect the headset to your phone's the audio jack.


### 8.4.1 Opening the FM Radio

1. On the Home screen, touch  > **FM Radio** to open the application.
2. The first time you open FM radio, touch **Auto tuning**, which automatically scans for available FM channels, saves them as presets, and plays the first FM channel found.

## 9 Google Services

 Availability of Google applications, services, and features may vary according to your country or carrier. Please follow local laws and regulations to use them.

When you turn on your mobile phone for the first time, touch a Google services such as **Talk**, **Gmail**, or **Market**, and you will be prompted to sign in to your Google account.


 Ensure that your mobile phone has an active data connection (3G/GPRS) before you sign in to your Google account.

If you already have a Google account, touch **Sign in** and enter your username and password.

## 9.1 Creating a Google Account

If you do not have a Google account, you can create one:


1. After reading the setup information, touch **Next**.
2. Touch **Create**.
3. Enter the first name, last name, and user name for your Google account, and then touch **Next**. The mobile phone will connect to a Google server to check whether the username is available. If the username you entered is already in use, you will be prompted to choose another one or select one from a list.
4. Enter and confirm your Google account password.
5. Select a security question from the drop-down menu, and then enter the answer.
6. Touch **Create**.
7. When the **Google Terms of Service** screen appears, touch **I agree, Next**.
8. Enter the characters that appear on the screen, and then touch **Next**.

 To use another Google account, go to the **Accounts & sync settings** screen, and touch **Add account** to select which type of accounts you want to add.

## 9.2 Gmail

**Gmail** is Google's web-based email service. When you first set up your phone, you may have configured it to use an existing **Gmail** account or create a new account. The first time you open the **Gmail** application on your phone, your **Inbox** will contain the messages from your **Gmail** web account.


### 9.2.1 Opening Gmail


On the Home screen, touch  > **Gmail**. The **Inbox** mail list appears. Any emails you decide to keep on your mobile phone will go to your **Inbox** folder.

### 9.2.2 Switching Between Accounts


1. In the mail list, touch  , and then touch **Accounts**.
2. Touch the account that contains the email you want to read.

## 9.2.3 Creating and Sending an Email

1. In the mail list, touch , and then touch **Compose**.
2. Enter the message recipient's email address in the **To** field. If you are sending the email to several recipients, separate the email addresses with commas. You can add as many message recipients as you want.



If you want to send a copy (Cc) or a blind copy (Bcc) of the email to other recipients, touch , and then touch **Add Cc/Bcc**.

3. Enter the email subject and write your email.

If you want to add a picture attachment, touch , and then touch **Attach** to select the picture you want to attach.

4. After writing your email, touch  .

## 9.2.4 Replying to or Forwarding an Email



1. In the mail list, touch the email that you want to reply to or forward.
2. Touch  to reply. You can also touch , and then touch **Reply**, **Reply all**, or **Forward**.

3. Do one of the following:

- If you selected **Reply** or **Reply all**, enter your message.
- If you selected **Forward**, specify the message recipients and add any additional text you want to include in the forwarded message.

4. Touch  to send, or touch  to save as a draft.

## 9.2.5 Searching for an Email

1. In the mail list, touch , and then touch **Search**.
2. Enter the search keywords in the box, and then touch  .

## 9.2.6 Customizing Your Gmail Settings

In the mail list, touch , and then touch **More > Settings** to customizing your **Gmail**.

## 9.3 Talk


**Talk** is Google's instant messaging service. You can use it to communicate in real time with other people using **Talk** on a phone or on the web.

### 9.3.1 Opening Talk

On the Home screen, touch  > **Talk** to open the application.

ⓘ Your **Talk** account is based on the Google account you set up with your mobile phone.

### 9.3.2 Adding a Friend

1. In the friends list, touch , and then touch **Add friend**.
2. Enter the **Talk** instant messaging ID or Gmail address of the friend you want to add.
3. Touch **Send invitation**.


### 9.3.3 Accepting an Invitation

1. If you have invited anyone to chat or if someone else has invited you to chat, this information will appear in the friends list.
2. Touch a pending invitation, and then touch **Accept**.

### 9.3.4 Starting a Chat

1. In the friends list, touch a friend's name in the friends list.
2. Use the onscreen keyboard to enter text and chat with your friend.
3. After entering your message, touch **Send**.

### 9.3.5 Setting Notifications for New Instant Messages

Whenever you receive an instant message, your mobile phone can play a sound, vibrate, or display an icon. To set up one of these handy notifications, start in the friends list, and then touch . Then touch **Settings**. Now choose from one of the following:



---

<b>Notifications</b>	Select the check box to receive a notification on the notification bar when you receive an instant message.
<b>Ringtone</b>	Touch to choose the ringtone used for a new instant message. You will hear a short sample of the ringtone when you select it. To turn the ringtone off, select <b>Silent</b> .
<b>Vibrate</b>	Select the check box to make your mobile phone vibrate when you receive a new instant message.

---

### 9.3.6 Signing out of Talk

On the friends list screen, touch , and then touch **Sign out** to quit **Talk**.

## 9.4 Maps

**Maps** lets you find your current location, view real-time traffic conditions (depending on availability in your locale), and get detailed directions to various destinations. You can view satellite images, traffic maps, or other kinds of maps of your current or other locations.

### 9.4.1 Enabling the Location Service


Before you open **Maps** to find your location or search for places of interest, you must enable the location service.

1. On the Home screen, touch  > **Settings**.
2. Touch **Location & security**.
3. In the **My Location** section, select the **Use wireless networks** check box, the **Use GPS satellites** check box, or both.



### 9.4.2 Opening Maps

On the Home screen, touch  > **Maps** to open the application.

## 9.4.3 Searching for Places of Interest

1. On the map, touch , and then touch **Search**.
2. Enter the place you want to search for in the search box, and then touch the Search icon.
3. Your search results will then be displayed. Touch a place you are interested in and the application will show where it is on the map.

## 9.4.4 Getting Directions

1. While viewing a map, touch , and then touch **Directions**.
2. Enter the starting point in the first text box, and then enter your destination in the second text box.
3. Touch the icon for car, public transit, or walking directions.
4. Touch **Get directions**. Your directions will appear in a list.
5. Touch a direction item on the list to show it on the map.
6. When you finish viewing or following the directions, touch , and then touch **Clear Map** to reset the map.


# 9.5 YouTube

**YouTube** is Google's free online video streaming service for watching, searching for, and uploading videos.

## 9.5.1 Opening YouTube

On the Home screen, touch  > **YouTube**. You will then see the YouTube screen.

## 9.5.2 Searching for a Video

1. On the **YouTube** screen, touch , and then touch **Search**.
2. Enter a search keyword, and then touch the Search icon.
3. You will see a number of search results displayed below the notification bar. Scroll through the results and touch a video to watch it.


## 9.5.3 Sharing a Video

From the video list on the **YouTube** screen, select a video clip and touch **More > Share**.

# 9.6 Market

Android Market provides direct access to applications and games which you can download and install on your phone.

## 9.6.1 Opening Market

1. On the Home screen, touch  > **Market**.
2. When you open **Market** for the first time, the **Android Market Terms of Service** window will appear. Touch **Accept** to continue.

## 9.6.2 Searching for Applications

There are a few different ways to find applications on the **Market** home screen, including:

- Featured applications
- List of games
- Search function
- My apps

## 9.6.3 Installing an Application

 If you want to install a non-Market application, touch  > **Settings > Applications**, and then select the **Unknown sources** check box to allow installation of the non-Market application.

1. In the **Market**, touch **Apps**.
2. Touch a category, and then touch the item you want to download.
3. On the item details screen, read more about the application, including its cost, overall rating, and user comments. If you scroll down to the **Developer Info** section, you can see other applications from the same developer, link to the developer's website, or can send the developer an email.

4. To install the item, touch **FREE** (if the item is free) or touch the button with a price (if the item is not free), and then touch **OK**.
5. To check the progress of a download, open the notification panel. Most applications are installed within seconds. To stop an item from downloading, touch **Cancel**.
6. After the application has been downloaded and installed on your mobile phone, the content download icon appears in the notification bar.

## 9.6.4 Uninstalling an Application

1. On the **Market** screen, touch **My apps**.
2. Touch the application you want to uninstall, and then touch **Uninstall**.
3. When prompted, touch **OK** to remove the application from your mobile phone.
4. Choose the reason for removing the application, and then touch **OK**.

# 10 Synchronizing Information

Some applications on your mobile phone give you access to the same personal information that you can add, view, and edit on your computer. If you add, change, or delete your information in any of these applications on the web, the updated information also appears on your mobile phone.

This is made possible through over-the-air data synchronization. The process occurs in the background and does not interfere with use of your mobile phone. When your phone is synchronizing, a data synchronization icon will be shown in the notification bar.



## 10.1 Managing Your Accounts

You can synchronize contacts, email, and other information on your mobile phone with multiple Google accounts or other kinds of accounts, depending on the applications installed on your mobile phone.


For example, you can start by adding your personal Google account, so your personal email, contacts, and calendar are always available. You could then add a work account, so your work-related emails and work contacts are handy. If you like, you may add multiple Google accounts or other accounts.

## 10.1.1 Adding an Account

When you add an account, the **Contacts** application compares contacts from the newly synchronized account with contacts from your existing mobile phone accounts and attempts to merge duplicates into a single entry in **Contacts**. While it is presented as a single contact entry, the contact data itself is not merged.

1. On the Home screen, touch  > **Settings** > **Accounts & sync**. The screen displays your current synchronization settings and a list of your current accounts.  
 In some cases, you may need to obtain account details from IT support. For example, you may need to know the account's domain or server address.
2. Touch **Add account**.
3. Touch the kind of account to add.
4. Follow the onscreen steps to enter the required and optional information about the account. Most accounts require a username and password, but the details depend on the kind of account and the configuration of the service to which you are connecting.
5. Configure the account. Depending on the kind of account, you may be asked to configure what kind of data you want to synchronize to the mobile phone, to name the account, and for other details. When you are finished, the account is added to the list on the **Accounts & sync settings** screen.

## 10.1.2 Adding an Exchange Account

1. On the Home screen, touch  > **Settings** > **Accounts & sync**.
2. Touch **Add account** > **Corporate**.
3. Follow the instructions and enter the required information about the exchange account you want to add. For details, contact the server administrator.
4. Touch **Next** to display the **Account options** screen. Configure the synchronization settings for this account.
5. Touch **Next** to finish configuring the account settings. If emails are not synchronized properly, contact the server administrator.

## 10.1.3 Removing an Account

You can remove an account, deleting it and all information associated with it from your mobile phone, including email, contacts, settings, and so on. You cannot, however,

remove some accounts, such as the first account you signed into on the mobile phone. If you attempt to remove certain accounts, all personal information associated with it will be deleted.

❗ You can only remove the first Google Account by resetting the phone to factory defaults.

1. On the **Accounts & sync settings** screen, touch the account to be deleted.
2. Touch **Sign Out**.
3. Confirm that you want to remove the account.

## 10.2 Customizing Your Account Synchronization

You can configure background data use and synchronization options for all the applications on your phone. You can also configure what kind of data you synchronize for each account.

For some accounts, synchronization is bi-directional; changes that you make to the information on your mobile phone are made to the copy of that information on the web. Some accounts support only one-way synchronization; the information on your mobile phone is read-only.

### 10.2.1 Configuring General Synchronization Settings

On the **Accounts & sync settings** screen, do the following:

- Select or clear the **Background data** check box to control whether applications and services can transmit data when you are not working with them directly (that is, when they are running in the background).

If you clear this option, **Gmail** stops receiving new mails, **Calendar** stops synchronizing events, and so on, until you refresh them.

- Select or clear the **Auto-sync** check box to control whether changes you make to information on the phone or on the web are automatically synchronized with each other.

For example, when this option is selected, changes that you make in **Contacts** on the phone are automatically made in Google Contacts on the web.

## 10.2.2 Changing an Account's Synchronization Settings


1. On the **Accounts & sync settings** screen, touch the account whose synchronization settings you want to change. The data and synchronization screen opens, displaying a list of the kinds of information the account can synchronize.
2. Selected items are configured to synchronize to your mobile phone.
3. Select or clear the check box of information you want to synchronize with the mobile phone.

# 11 Using Other Applications

## 11.1 AppInstaller

You can use this installer to install more than one applications at a time.

### 11.1.1 Install Applications

1. On the Home screen, touch  > **AppInstaller**. Then the installer will scan and display all the applications (.apk files) in the microSD card.
2. In the applications list, select applications you want to install.

 You can touch  , and then touch **Deselect all** or **Select all** to select and deselect all applications.

3. Touch  > **Install**.


The applications you select will be installed in your phone.

## 11.2 Traffic Manager

**Traffic Manager** allows you to enter the total amount of traffic included in your 2G/3G monthly package and set traffic notification thresholds. When your traffic usage reaches these thresholds, you will be notified.

### 11.2.1 Using Traffic Manager

When **Traffic Manager** is opened for the first time, it will request you to enter the monthly traffic limit and notification thresholds.

1. On the Home screen, touch  > **Traffic Manager**.
2. Enter the monthly traffic limit in the **Monthly package** field.
3. Touch **Next**.
4. Enter the notification thresholds in the **Set daily traffic reminder** and **Set monthly traffic reminder** fields.
5. Touch **Finish**.
6. You can now view your data traffic in **Traffic statistics**.

 You can modify the monthly traffic limit and notification thresholds in **Settings**.

## 11.3 All Backup

You can back up data using **All Backup**, which provides the following options: **Backup to SD**, **Restore from SD**, and **Quick Backup**.

### 11.3.1 Backing Up data by using Backup to SD

1. On the Home screen, touch  > **All Backup**.
2. Touch **Backup to SD**.
3. Enter a file name in the **Filename:** field.
4. In the **Backup contents:** field, select the contents you want to back up.
5. Touch **Backup** to back up the selected data.


 To cancel the backup, touch **Cancel**.





# 11.4 Calendar


Use **Calendar** to create and manage events, meetings, and appointments. Depending on your synchronization settings, the calendar on your phone can be synchronized with the internet-based calendar you use.


## 11.4.1 Opening Calendar

On the Home screen, touch  > **Calendar** to open the application.

 When you add a Google Account that includes a calendar service to your phone, you can access Google calendar: Touch , and then touch **More > Calendars**.

## 11.4.2 Creating an Event

1. In any calendar view, touch , and then touch **New event** to open the **Event details** screen.

 If you have more than one calendar, select the calendar where you want to save the event.


2. Enter the event name.

- If there is a time frame for the event, touch **From** and **To** to set the beginning and end times of the event.
- If the event is a special occasion such as a birthday or a day-long activity, set the date for **From** and **To**, and then select the **All day** check box.

3. Enter the location of the event and a description.

4. Specify in **Repetition** whether the event recurs and, if it does, how frequently, and then set the time for your event reminder in **Reminders**.

5. Touch **Done**.

 To quickly create an event in the day, week, or month view, touch and hold an empty time slot, and then touch **New event**. A new event details screen will appear with the selected time slot and date in the **From** and **To** fields.

## 11.4.3 Setting an Event Reminder

1. In any calendar view, touch an event to view its details or an event summary.

2. Touch the **Add reminder** button to add a reminder, or touch the reminder's "-" button to delete an existing reminder.
3. Touch the reminder time, and then, from the list displayed, touch the length of time before the event when you want to be reminded. When the time comes, you will receive a notification about the event.

#### 11.4.4 Setting Synchronization and Display

1. In any calendar view, touch . Then touch **More > Calendars**.

The Calendars screen displays all the calendars you have added or subscribed to for each account that is configured to synchronize events to your phone, organized by account. (Calendars for accounts you have configured not to synchronize Calendar events are not included in the list.)

2. Touch the icon next to a calendar to change whether it is synchronize and whether it is displayed.

You remain subscribed to Calendars that you configure not to store on the phone and you can still work with them with Google Calendar on the web, or in other calendaring services.

3. Touch **OK**.

#### 11.4.5 Customizing Calendar Settings

In any calendar view, touch . Then touch **More > Settings** and choose from the following:

- **Hide declined events:** Select to hide events for which you have declined invitations.
- **Set alerts & notifications:** Touch to set event reminders to alert you, to send you a notification, or to turn off event notifications on your mobile phone.
- **Select ringtone:** Touch to select the ringtone to sound when you receive an event reminder.
- **Vibrate:** Select to vibrate the mobile phone when you receive an event notification.
- **Default reminder time:** Touch to select the default time before an event for event reminders to occur.


# 11.5 File Manager

**File Manager** is like having a pocket-sized personal assistant (PA), letting you organize, edit, and delete files and folders.



## 11.5.1 Opening File Manager

On the Home screen, touch  > **File Manager** to open the application.



## 11.5.2 Creating a Folder

1. On the **File Manager** screen, access the directory in which you want to create a new folder.
2. Touch  to open the options panel, and then touch **New folder**.
3. Enter the name of the new folder in the text box.
4. Touch **Save**.

## 11.5.3 Moving or Copying a File

1. On the **File Manager** screen, touch  to show the options panel, and then touch **Multiselect**.
2. Touch the file or folder you want to move or copy. When a file or a folder is selected, a check mark will appear.  
To select or unselect all files, touch **Select all** or **Unselect all**.
3. Touch **Cut** or **Copy**.
4. Select the path where you want the file to be copied or moved. Touch  to open the options panel, and then touch **Paste** to move or copy the file to the selected path.

## 11.5.4 Searching for a File

1. On the **File Manager** screen, touch a folder to access the directory where the file you want is located.
2. Touch  to open the options panel, and then touch **Search**.
3. Write a key word of the name of your file in the search box.
4. Touch . Your mobile phone will start the search.


5. A list of search results will be displayed. Touch a file in the list to open it.
6. Touch **New search** for a new search or touch the back key to return to the file manager screen.

## 11.5.5 Compressing or Extracting Files

Your phone supports compressing and extracting files.

- ! You can only compress files and folders into .zip files, but can extract both .zip and .rar files.


### Compressing Files

1. On the **File Manager** screen, touch , and then touch **Multiselect**.
2. Select the files or folders you want to compress. When a file is selected, a check mark will appear.  
To select or unselect all files, touch **Select all** or **Unselect all**.
3. Touch **Compress**.
4. Edit the save path and the name of the target file, and then touch **OK** to start compressing the files and folders.

### Extracting a File

1. Touch and hold a compressed file.
2. Touch **Extract**.
3. Edit the save path for the extracted files.
4. Touch **OK** to start extracting.

## 11.5.6 Viewing Your Memory Status

On the **File Manager** screen, touch  to open the options panel, and then touch **Memory Status**. The memory management screen will be displayed. This screen allows you to view the memory status and available memory on your mobile phone and microSD card.

# 11.6 Clock

In addition to displaying the date and time, the **Clock** application displays information about the weather and your phone. You can also use **Clock** to turn your mobile phone into an alarm clock.

## 11.6.1 Opening the Clock

On the Home screen, touch  > **Clock** to open the application.

**Clock** opens with the date and time displayed on your Home screen wallpaper, along with your local weather and other useful information.

## 11.6.2 Opening the Alarms

On the **Clock** screen, touch  to open the **Alarms**.

### Adding an Alarm

1. On the alarm list screen, touch **Add alarm**.
2. Set the alarm, and then touch **Done**.

### Setting an Alarm

1. On the alarm list screen, touch one of the alarms on the screen.
2. Touch **Time** to set the time of the alarm.
3. Touch **Repeat** to set the days when you want the alarm to sound.
4. Touch **Ringtone** to select a ringtone for the alarm.
5. Select the **Vibrate** check box to enable the phone to vibrate, in addition to playing the ringtone.
6. Touch **Label** to enter a name for the alarm.
7. Touch **Done**.

 The alarm clock still works when the phone is powered off.


### Customizing Alarm Settings

On the alarm list screen, touch  , and then touch **Settings**.

## 11.7 Calculator

Use **Calculator** to solve simple arithmetic problems or use its advanced operators to solve more complex equations.

### 11.7.1 Opening Calculator




On the Home screen, touch  > **Calculator** to open the application.

### 11.7.2 Switching Between Basic and Advanced panel

On the **Calculator** screen, flick the screen to the right or left to switch between **Advanced panel** and **Basic panel**.




## 11.8 Notepad

**Notepad** features a simple text processor. In the note list, you can add, edit, and delete notes.

1. On the Home screen, touch  > **Tools** > **Notepad** to open the application.
2. Touch , and then touch **Add note** to create a note.
3. Touch  > **OK** to save the note.

## 11.9 Richpad

**Richpad** combines text note and paint note functions. In the note list, you can add, edit, and delete notes.



1. Touch  > **Tools** > **Richpad** to open the application.
2. Touch , and then touch **Add text note** or **Add paint note** to create a note.
  - While you are editing a text note, touch  to change the background, or the font, or to insert an icon.
  - While you are editing a paint note, touch the icon in the upper right corner of the screen to draw a picture.
3. Touch the icons at the lower part of the screen to save the note, set a reminder, or discard the note.

## 11.10 Weather Clock

You can use **Weather Clock** to check the date and time of cities around the world, to get the latest weather of any city in any time and to share weather information with others.

- ❗ You need to turn on the GPS and data service on your phone before using weather clock.

### 11.10.1 Setting the Default City

1. On the Home screen, touch  > **Weather Clock**.
2. On the weather clock screen, touch  > **Add city**.
3. Select the city you want to add.


- ❗ In addition to your current city, you can add up to four more cities to the weather clock and get weather information for all of them at the same time.

4. Touch  > **More** > **Set as default city** to set the newly added city as the default city.


### 11.10.2 Updating Weather

You can update weather information on the weather clock either manually or automatically. To update the current city's latest weather information, touch  > **Refresh** on the weather clock screen.




You can also set your phone to update the weather information automatically.

1. On the weather clock screen, touch  > **More** > **Settings**.
2. Select **Auto update**.
3. Touch **Update interval** to set the interval between automatic weather updates.

### 11.10.3 Changing a City

1. On the weather clock screen, touch  > **Change city**.
2. Select a city from the **Hot city** list, or search for another city by entering its name in the search field.

## 11.10.4 Sharing Weather Information


1. On the weather clock screen, touch  > **Share weather**.
2. Enter a phone number or a contact's name in the **To** field, or touch  to select a **Contacts** or **Groups**.
3. Touch  to send weather information to the recipient.





# 12 Managing Your Mobile Phone

To configure your mobile phone, touch  > **Settings**.

## 12.1 Setting the Date and Time

By default, your mobile phone automatically uses the date, time, and time zone provided by the network.

 When your mobile phone is using the date and time settings provided automatically by the network, you cannot manually set the date, time, and time zone.

1. On the **Settings** screen, touch **Date & time**.
2. Clear the **Automatic** check box.
3. Touch **Set date**. On the set date screen, touch  or  to adjust the date, month, and year, and then touch **Set** when the configuration is complete.
4. Touch **Select time zone**, and then select the desired time zone from the list. Scroll the list to view more time zones.
5. Touch **Set time**. On the set time screen, touch  or  to adjust the hour and minute. Touch **Set** when the configuration is complete.
6. Select or clear the **Use 24-hour format** check box to switch between 24-hour and 12-hour formats.
7. Touch **Select date format** to select how you want the date to display on your mobile phone.



## 12.2 Setting the Display

### 12.2.1 Adjusting the Screen Brightness

1. On the **Settings** screen, touch **Display > Brightness**.
2. Drag the slider left to make the screen darker, or right to make it brighter.
3. Touch **OK** to save the adjustment.

### 12.2.2 Adjusting the Time Before the Screen Turns Off

If your mobile phone is idle for several minutes, it will turn off the screen to save battery power. To set a longer or shorter idle time:

1. On the **Settings** screen, touch **Display > Screen timeout**.
2. Select the duration you want the screen to be illuminated.

## 12.3 Setting Ringers

### 12.3.1 Turning On Silent Mode

1. On the **Settings** screen, touch **Sound**.
2. Select the **Silent mode** check box to silence all sounds except alarms, and music and video media.

### 12.3.2 Adjusting the Volume

You can adjust the volume from the Home screen or any application screen (except during a call or when playing music or videos). Press the Volume keys to adjust volume to the level you desire.

You can also adjust the volume from the settings screen.

1. On the **Settings** screen, touch **Sound > Volume**.
2. Drag the slider left to make the volume lower, or right to make it higher.
3. Touch **OK** to save the adjustment.

### 12.3.3 Changing the Phone Ringtone

1. On the **Settings** screen, touch **Sound > Phone ringtone**.
2. In the displayed list, select an option:

- **Ringtone:** Select a preinstalled ringtone. The ringtone plays when selected.
- **Music:** Select the music stored in the phone or on the microSD card. The music plays when selected.

3. Touch **OK**.

### 12.3.4 Changing the Message Ringtone

1. On the Home screen, touch  > **Messaging**.

2. In the message list, touch **Settings** > **Select ringtone**.

3. In the displayed list, select an option:

- **Ringtone:** Select a preinstalled ringtone. The ringtone plays when selected.
- **Music:** Select the music stored in the phone or on the microSD card. The music plays when selected.

4. Touch **OK**.

## 12.4 Setting Phone Services

### 12.4.1 Customizing Call Settings

Mobile phone service providers offer different services such as call forwarding, call waiting, fixed dialing numbers, and voicemail. You can customize many of these services if they are part of your calling plan.

On the **Settings** screen, touch **Call settings** to customize your call functions.

### 12.4.2 Turning on Data Roaming

1. On the **Settings** screen, touch **Wireless & networks** > **Mobile networks**.

2. Select the **Data roaming** check box.

 Accessing data services while roaming may incur additional charges. Ask your wireless service provider about data roaming fees.

### 12.4.3 Switching off the Data Service

1. On the **Settings** screen, touch **Wireless & networks** > **Mobile networks**.

2. Clear the **Data enabled** check box.

## 12.5 Configuring Text-to-Speech

Use the Text-to-Speech settings to configure the Android text-to-speech synthesizer, for applications that can take advantage of this feature.

### 12.5.1 Installing Voice Data

1. On the **Settings** screen, touch **Voice input & output > Text-to-speech settings > Install voice data**.
2. If your mobile phone does not have speech synthesizer data installed, connect to Android Market and let it guide you through the process of downloading and installing the data.
3. Follow the instructions to install the voice data.

### 12.5.2 Adjusting the Speech Rate

1. On the **Settings** screen, touch **Voice input & output > Text-to-speech settings > Speech rate**.
2. Select a speed at which the text is to be spoken.

## 12.6 Protecting Your Mobile Phone

### 12.6.1 Turning on Your SIM Card PIN

1. On the **Settings** screen, touch **Location & security > Set up SIM card lock**.
2. Select the **Lock SIM card** check box.
3. Use the keyboard to enter the PIN, and then touch **OK**.
4. To change the PIN at any time, touch **Change SIM PIN**.

 You can dial emergency numbers any time from your mobile phone.

### 12.6.2 Protecting Your Mobile Phone with a Screen Lock

To keep your data more secure, lock the screen and/or require a screen unlock pattern every time your mobile phone is turned on or wakes up from sleep mode.

1. On the **Settings** screen, touch **Location & security > Set up screen lock > Pattern**.

2. Flick your finger vertically, horizontally or diagonally, connect at least four dots in any order you choose. Lift your finger from the screen when you are finished.

You must drag your finger between the dots on the screen to create the pattern, not simply touch individual dots.

3. Your mobile phone will record the pattern. Touch **Continue**.

4. When prompted, draw the screen unlock pattern again, and then touch **Confirm**.

To change your unlock screen pattern, touch **Location & security > Change screen lock**.

### 12.6.3 Protecting Your Mobile Phone with a Numeric PIN

You can set up a numeric PIN to lock your phone.

1. On the **Settings** screen, touch **Location & security > Set up screen lock > PIN**.

2. Enter at least four characters.

3. Touch **Continue**.

4. Enter the same characters again and touch **OK**.

To change your PIN, touch **Location & security > Change screen lock**.

### 12.6.4 Unlocking Your Mobile Phone If You Forget the Screen Lock Pattern

If you have already created a Google account, you can unlock your mobile phone using the following methods.

- After you have entered the wrong sequence five times, a **Forgot pattern?** button will appear. Touch this button to enter the Google account interface. After you have entered your Google account password, you will be able to reset the unlock pattern.
- After you have entered the wrong pattern twenty times, you will be taken directly to the Google account interface. After you have entered your Google account password, you will be able to reset the unlock pattern.

## 12.7 Managing Applications

### 12.7.1 Viewing an Installed Application

1. On the **Settings** screen, touch **Applications > Manage applications**.

2. In the applications list, do either of the following:

- Touch , and then touch **Sort by size**. Then touch an application to view its details.
- Touch an application directly to view its details.

## 12.7.2 Uninstalling an Application

 You cannot uninstall the applications that are pre-installed on the system.

1. On the **Settings** screen, touch **Applications > Manage applications**.
2. Touch an application, and then touch **Uninstall**.

## 12.7.3 Moving an Application to the microSD Card

Some applications are designed to be stored on your phone's USB storage or microSD card (depending on the model of your phone), rather than in its internal storage. Others are designed so you can change where they are stored. You may find it helpful to move large applications off your internal storage, to make more room for other applications that do not offer the option.

1. On the **Settings** screen, touch **Applications > Manage applications**.
2. Touch an application in the list. Then touch **Move to SD card** to move the bulk of the application from the phone's internal storage.

The **Storage** section of the application's details screen shows details about the memory used by the application. If the application can be moved, the **Move to SD card** button is active.

Touch **Move to phone** to move the application back to the phone's internal storage.

## 12.7.4 Ways to Free Up Your Mobile Phone Memory

- Move files and email attachments to the microSD card.
- In **Browser**, clear all temporary Internet files and Browser history information.
- Move applications to the microSD card.
- Uninstall any downloaded programs that you no longer use.
- Reset your mobile phone.

## 12.8 Resetting Your Mobile Phone

### 12.8.1 Backing Up My Data

You can use your Google account to back up your mobile phone's settings to Google servers. If you replace your mobile phone, the settings you have backed up will be transferred to the new mobile phone the first time you sign in to your Google account.

1. On the **Settings** screen, touch **Privacy**.
2. Select the **Back up my data** check box.

### 12.8.2 Restoring Factory Data

If you reset your phone to the settings that were configured at the factory, all of your personal data stored on the phone, including information about your Google Account, any other accounts, your system and application settings, and any applications you have downloaded will be erased. Resetting the phone does not erase any system software updates you have downloaded or any files on your microSD card, such as music clips or photos.

1. On the **Settings** screen, touch **Privacy > Factory data reset**.
2. When prompted, touch **Reset phone**, and then touch **Erase everything**. The mobile phone resets the settings to the original factory settings, and then restarts.

## 12.9 Setting Power Saving Mode

1. On the **Settings** screen, touch **Power saving mode**.
2. Select the **Power saving mode** check box.

## 12.10 Online Update

Your mobile phone has pre-installed the online update function. When there is new software available, the version information appears and prompts you to update. You can also touch **Settings > About phone > Online upgrade** to check whether the new software is available.

When updating:

1. Back up your personal information. All personal information will be removed after the update.

2. Make sure that your microSD card has sufficient space to store the new software version.
3. Perform the online update following the onscreen instructions.


## 13 Huawei Cloud+ (Optional)

Huawei Cloud+ provides a network drive, the Hi Space application, and various functions such as file sharing, phone finder, contact synchronization, and data backup. Simply register a Huawei Cloud+ account to access all these functions.

### 13.1 Registration and Settings


Register a Huawei Cloud+ account and configure the relevant settings when you use Huawei Cloud+ for the first time.

#### 13.1.1 Creating an Account

1. On the Home screen, touch  > **Cloud+ Settings** > **Register**.
2. Carefully read the Huawei Cloud+ Agreement, and touch **Agree**.
3. Enter your user name and password, confirm your password, and touch **Submit**.
4. Set your email address, security question, and answer to the question, and touch **Done**.

#### 13.1.2 Configuring Cloud+ Settings

After registering a Huawei Cloud+ account, configure the Cloud+ settings according to the instructions on the screen.

1. To prevent data loss or leakage, which may occur if you lose your phone, select **Find my phone**, and touch **Next**.
  2. On the **Sync settings** screen, select the option to automatically synchronize data, such as contacts, to the server.
-  If you have entered an email address when you registered your Huawei Cloud+ account but did not receive an account verification email, touch **Resend** after this step.
3. Select the function that you want to use, or touch **Done**.

After Cloud+ settings are configured, touch **Basic information** to set your personal and device information.


## 13.2 Cloud+ Drive

**Cloud+ Drive** enables you to conveniently store, access, and share your data online.

To access the **Cloud+ Drive** home page, touch  > **Cloud+ Drive**.


 You can access **Cloud+ Drive** only after you have logged in to Huawei Cloud+.

### 13.2.1 Uploading a File

1. On the **Cloud+ Drive** home page, touch **My disk**.
2. Touch  > **Upload**.
3. Select the type of the file to be uploaded.
4. Select the file to be uploaded, and then touch **Upload**.
5. Select the path where the file will be stored after being uploaded.

### 13.2.2 Downloading a File

1. On the **Cloud+ Drive** home page, touch **My disk**.
2. In the displayed directory list, touch the directory where the file to be downloaded is stored.
3. Touch and hold the file to be downloaded, and then touch **Download** in the displayed menu.

 If a microSD card has been installed on your phone, the file will be stored on the microSD card. If no microSD card has been installed, the file will be stored in your phone memory. The file will be stored in the **hidisk** folder of the root directory.

### 13.2.3 Viewing Upload and Download Records

On the **Cloud+ Drive** home page, touch **File transfers**.

- Touch **Upload** to view the progress of ongoing uploads, and records of all files that have been uploaded.
- Touch **Download** to view the progress of ongoing downloads, and records of all files that have been downloaded.



## 13.2.4 Clearing the Cache

1. On the **Cloud+ Drive** home page, touch **Settings**.
2. Touch **Clear cache**.
3. Touch **OK**.

Clearing the cache will delete the temporary files generated when you browse Internet pages. It will not delete your personal data.

## 13.3 Phone Finder

**Phone Finder** enables you to locate your phone and back up or erase your data when your phone is lost.


Touch  > **Cloud+ Settings** > **Phone Finder**, select **Phone Finder**, and register for the **Phone Finder** service. You can then use your Huawei Cloud+ account to log in to the Huawei Cloud+ website [www.hicloud.com](http://www.hicloud.com) and use the following **Phone Finder** functions:

- Display a specific message on your phone: On the Huawei Cloud+ website, enter a message that will be displayed on your phone.
- Lock your phone: On the Huawei Cloud+ website, set a password used to unlock your phone. Then once locked, your phone will be unlocked only after the password is entered on the phone.
- Back up or erase data, such as contacts, on your phone: The backup data will be stored on the server.
- Locate your phone: On the Huawei Cloud+ website, locate your phone using the phone's GPS function.
- Transfer calls: All the calls received by your phone will be automatically transferred to a specified phone number.
- Transfer messages: All the messages received by your phone will be automatically transferred to a specified phone number.

 For more information about **Phone Finder**, log in to [www.hicloud.com](http://www.hicloud.com).


## 13.4 Synchronizing Contacts


You can synchronize your contacts from your phone to the server, or vice versa.

1. On the Home screen, touch  > **Cloud+ Settings** > **Sync settings**.
2. Select **Auto-sync**.
3. Select **Sync contacts**.

## 13.5 Backing Up Data

Using Huawei Cloud+, you can back up your data from the phone to the server or restore your data from the server to the phone.

1. Touch  > **All Backup** > **Cloud Services**.
2. Touch **Data backup**.
3. Enter **Filename**:. Under **Backup contents**:, select the content that you want to back up. Then touch **Backup** to back up the content to the server.

 While the content is being backed up, you can cancel the operation by touching **Cancel**.

You can touch **Data restore** to restore previously backed up data from the server to your phone. You can also use **File manager** to delete the data that you have backed up.

# 14 Appendix

## 14.1 Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

### Electronic Device

Power off your device if using the device is prohibited. Do not use the device when using the device causes danger or interference with electronic devices.

## Medical Device

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device when using the device is prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.

## Potentially Explosive Atmosphere

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or a fire, resulting in bodily injuries or even deaths. Do not power on your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmospheres that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

## Traffic Security

Observe local laws and regulations while using the device. In addition, if using the device while driving a vehicle, comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.

- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.
- Do not use your device while flying in an aircraft. Power off your device before boarding an aircraft. Using wireless devices in an aircraft may cause danger to the operation of the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

### **Operating Environment**

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.
- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.
- On a stormy day with thunder, do not use your device when it is being charged, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and the standby time are reduced.
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Keep the ambient temperature between -10°C and 45°C while the device is being charged. Keep the ambient temperature between -10°C to 45°C for using the device powered by a battery.

### **Prevention of Hearing Damage**

Using a headset at high volume can damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

### **Safety of Children**

Comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may be dangerous, as it may present a choking hazard. Ensure that small children are kept away from the device and accessories.

## Accessories

Choose only batteries, chargers, and accessories approved for use with this model by the device manufacturer. The use of any other type of battery, charger, or accessory may invalidate any warranty for the device, may be in violation of local rules or laws, and may be dangerous. Please contact your dealer for information about the availability of approved batteries, chargers, and accessories in your area.

### Battery and Charger

- Unplug the charger from the electrical plug and the device when not in use.
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and the talk time are shorter than the normal time, replace the battery.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause a fire or a malfunction of the charger.
- Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery may be short-circuited and may cause injuries and burns on your body.
- If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Avoid dropping the device or battery. If the device or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a qualified service center for inspection.

- Improper battery use may result in a fire, explosion or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.
- The device should only be connected to products that bear the USB-IF logo or have completed the USB-IF compliance program.

## **Cleaning and Maintenance**

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with a wet hand. Otherwise, it may lead to a short circuit, a malfunction of the device, and an electric shock to the user.
- Do not place your device, battery, and charger in places where they can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion.
- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, and charger in a place with an extreme high or low temperature. Otherwise, they may not function properly and may lead to a fire or an explosion. When the temperature is lower than 0°C, performance of the battery is affected.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before you clean or maintain the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may be damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
- Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories is invalid and the manufacturer is not liable to pay for the damage.
- If the device screen is broken by colliding with hard objects, do not touch or try to remove the broken part. In this case, stop using the device immediately, and then contact an authorized service center in time.

## Emergency Call

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

## Certification Information (SAR)

This device meets guidelines for exposure to radio waves.

Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the independent scientific organization International Commission on Non-Ionizing Radiation Protection (ICNIRP) and include safety measures designed to ensure safety for all users, regardless of age and health.

The Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the device when being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit adopted by USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The Highest SAR value reported to the FCC and IC for this device type when tested for use at the ear is 0.391 W/kg, when properly worn on body is 0.626 W/kg, and when using Wi-Fi hotspot function is 0.85 W/Kg.

The SAR limit also adopted by Europe is 2.0 W/kg averaged over 10 grams of tissue. The highest SAR value for this device type when tested at the ear is 0.376 W/kg, and when properly worn on the body is 0.489 W/kg.

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Changes or modifications made to this device not expressly approved by Huawei Technologies Co., Ltd. may void the FCC authorization to operate this device.

### **Disposal and Recycling Information**



This symbol on the device (and any included batteries) indicates that they should not be disposed of as normal household garbage. Do not dispose of your device or batteries as unsorted municipal waste. The device (and any batteries) should be handed over to a certified collection point for recycling or proper disposal at the end of their life.

For more detailed information about the recycling of the device or batteries, contact your local city office, the household waste disposal service, or the retail store where you purchased this device.

The disposal of this device is subject to the Waste from Electrical and Electronic Equipment (WEEE) directive of the European Union. The reason for separating WEEE and batteries from other waste is to minimize the potential environmental impacts on human health of any hazardous substances that may be present.

### **Reduction of Hazardous Substances**

This device is compliant with the EU Registration, Evaluation, Authorisation and Restriction of Chemicals (REACH) Regulation (Regulation No 1907/2006/EC of the European Parliament and of the Council) and the EU Restriction of Hazardous



Substances (RoHS) Directive (Directive 2002/95/EC of the European Parliament and of the Council). For more information about the REACH compliance of the device, visit the Web site [www.huaweidevice.com/certification](http://www.huaweidevice.com/certification). You are recommended to visit the Web site regularly for up-to-date information.

### EU Regulatory Conformance

Hereby, Huawei Technologies Co., Ltd. declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. For the declaration of conformity, visit the Web site [www.huaweidevice.com/certification](http://www.huaweidevice.com/certification).

CE 0197 !

! Observe the national local regulations in the location where the device is to be used. This device may be restricted for use in some or all member states of the European Union (EU).

! This device may be operated in all member states of the EU.

**France:** Outdoor use limited to 10 mW e.i.r.p. within the band 2454-2483.5 MHz.

**Italy:** For private use, a general authorisation is required if WAS/RLAN's are used outside own premises. For public use, a general authorisation is required.

**Luxembourg:** General authorisation required for network and service supply.

**Norway:** This subsection does not apply for the geographical area within a radius of 20 km from the centre of Ny-Ålesund.

## 14.2 FAQs

More FAQs are available at the following website: <http://www.huaweidevice.com/worldwide>

### How Can I Use a microSD Card to Import Contacts to My Phone from a Different Mobile Phone?

Your mobile phone only supports contact files in the **.vcf** format.

1. Save the contacts you want to import to your mobile phone to a microSD card as a **.vcf** file.

2. Insert the microSD card into your mobile phone and find the **.vcf** file using **File Manager**.
3. Touch the **.vcf** file. The phone displays a message asking whether you want to import the contacts.
4. Touch **OK** to import the contacts.

ⓘ Compatibility problems may occur with **.vcf** files created by different mobile phones and certain contact information may be lost after contacts are imported.

📶 You can also use Bluetooth to share and import contacts.


### **How Do I Set a Song As a Phone Ringtone?**

In **Music**, touch and hold the song to be set as a ringtone, and then touch **Set as ringtone**.

### **How Do I Prevent Automatic Change of Screen Orientation When Rotating My Phone?**

On the Home screen, touch  > **Settings** > **Display** > **Auto-rotate screen** to disable the function.

### **How Do I Set an Unlock Pattern?**

On the Home screen, touch  > **Settings** > **Location & security** > **Set up screen lock** > **Pattern**.

### **How Can I Change the Input Method?**

Touch and hold the area where you write text and then select the input method you prefer.

### **How Do I Stop the Song Playing in the Background?**

Touch the notification bar, flick downwards to open the notifications panel, touch the music playing notification to go to the music playing screen, and then stop playing the song.

### **How Do I Return to the Call Screen?**

While in a call, if you're on another screen, you can touch the notification bar, and flick downwards to open the notifications panel. Then touch the current call notification to return to the call screen.

### How Do I Create an Application Shortcut on the Home Screen?

Touch and hold an application icon on the application screen until the Home screen is displayed. Then drag the icon to where you want to place it and release your finger.

### How Do I Hide the Keyboard?

Touch  to hide the keyboard.

### How Do I Use Quick GPS?

On the Home screen, touch  > **Settings** > **Location & security** > **Use Quick GPS**.

-  Quick GPS downloads data to enhance the GPS satellite information and may therefore incur additional data charges.



THIS DOCUMENT IS FOR INFORMATION PURPOSE ONLY, AND  
DOES NOT CONSTITUTE ANY KIND OF WARRANTIES.