



TOSHIBA

**27/32/37WL56
Series**

Owner's manual

stasia

Contents



SETTING UP

| | |
|---|----|
| Safety precautions – Some do's and don'ts for you to be aware of | 3 |
| Installation and important information | 4 |
| The remote control – an at-a-glance guide | 5 |
| Connecting external equipment – a guide to connecting equipment to the back of the television | 6 |
| Connecting a computer or component video source – connecting a computer or component video source to the back of the television | 7 |
| Side connections and controls – switching on the television, standby, using the top controls, headphone socket, connecting equipment to the side of the television | 8 |
| Tuning the television using Quick Setup – language, country, broadcast system | 9 |
| Programme sorting | 9 |
| Manual tune – an alternative to <i>Quick Setup</i> , direct entry of channels, tuning a programme position for a media recorder | 10 |
| Programme skip | 11 |
| Auto tune | 12 |

CONTROLS AND FEATURES

| | |
|--|----|
| General controls – changing programme position, time display | 12 |
| Stereo and bilingual transmissions – stereo/mono or dual language broadcasts | 12 |
| Sound controls – volume, sound mute, bass boost, bass/treble/balance, dual, stable sound® | 13 |
| WOW™ sound effects – SRS 3D, FOCUS, TruBass | 13 |
| Widescreen viewing | 14 |
| Picture controls – picture position, back light, picture preferences (contrast, brightness, colour, tint, sharpness) | 15 |
| Picture controls – black stretch, MPEG noise reduction (MPEG NR), digital noise reduction (DNR), colour temperature, cinema mode, automatic format (widescreen) | 16 |
| Picture controls – grey screen, side panel adjustment | 17 |
| Panel lock – disabling the buttons on the television | 17 |
| The timer – setting the television to turn on and off | 17 |
| PC Setting – picture position, clock phase, sampling clock, reset | 18 |
| Input selection and AV connections – input and output sockets for connected equipment | 19 |

TEXT SERVICES

| | |
|--|----|
| Setting up, general information, Auto. and LIST modes | 20 |
| Control buttons | 21 |

PROBLEM SOLVING

| | |
|--|----|
| Questions and Answers – answers to some of the more common queries including manual fine tuning and colour system | 22 |
|--|----|

INFORMATION

| | |
|--|----|
| Specifications and Accessories – technical information about the television, supplied accessories | 24 |
|--|----|

Safety Precautions

This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken to obtain the best results and for safety to be assured. Please read the points below for your own safety. They are of a general nature, intended to help with all electronic consumer products and some points may not apply to the goods you have just purchased.

Air Circulation

Leave at least 10cm clearance around the television to allow adequate ventilation. This will prevent overheating and possible damage to the television. Dusty places should also be avoided.

Heat Damage

Damage may occur if the television is left in direct sunlight or near a heater. Avoid places subject to extremely high temperatures or humidity, or locations where the temperature is likely to fall below 5°C (41°F).

Mains Supply

The mains supply required for this equipment is 220-240v AC 50/60Hz. Never connect to a DC supply or any other power source. DO ensure that the television is not standing on the mains lead. DO NOT cut off the mains plug from this equipment, this incorporates a special Radio Interference Filter, the removal of which will impair its performance. In the UK, the fuse fitted in this plug is approved by ASTA or BSI to BS1362. It should only be replaced by a correctly rated and approved type and the fuse cover must be refitted. IF IN DOUBT PLEASE CONSULT A COMPETENT ELECTRICIAN.

Do

DO read the operating instructions before you attempt to use the equipment.

DO ensure that all electrical connections (including the mains plug, extension leads and inter-connections between pieces of equipment) are properly made and in accordance with the manufacturers' instructions. Switch off and withdraw the mains plug before making or changing connections.

DO consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.

DO be careful with glass panels or doors on equipment.

Do not

DON'T remove any fixed cover as this may expose dangerous voltages.

DON'T obstruct the ventilation openings of the equipment with items such as newspapers, tablecloths, curtains, etc. Overheating will cause damage and shorten the life of the equipment.

DON'T allow electrical equipment to be exposed to dripping or splashing or objects filled with liquids, such as vases, to be placed on the equipment.

DON'T place hot objects or naked flame sources, such as lighted candles or nightlights on, or close to equipment. High temperatures can melt plastic and lead to fires.

DON'T use makeshift stands and NEVER fix legs with wood screws. To ensure complete safety, always fit the manufacturers' approved stand, bracket or legs with the fixings provided according to the instructions.

DON'T listen to headphones at high volume, as such use can permanently damage your hearing.

DON'T leave equipment switched on when it is unattended, unless it is specifically stated that it is designed for unattended operation or has a standby mode. Switch off by withdrawing the plug, make sure your family know how to do this. Special arrangements may need to be made for people with disabilities.

DON'T continue to operate the equipment if you are in any doubt about it working normally, or it is damaged in any way – switch off, withdraw the mains plug and consult your dealer.

ABOVE ALL – NEVER let anyone, especially children, push or hit the screen, push anything into holes, slots or any other openings in the case.

NEVER guess or take chances with electrical equipment of any kind – it is better to be safe than sorry.

THE MAINS PLUG IS USED AS A DISCONNECTING DEVICE AND THEREFORE SHOULD BE READILY OPERABLE.

Installation and important information

Where to install

Locate the television away from direct sunlight and strong lights, soft, indirect lighting is recommended for comfortable viewing. Use curtains or blinds to prevent direct sunlight falling on the screen.

Place on a sturdy platform, the mounting surface should be flat and steady. It should then be secured to the wall with a sturdy tie using the clip on the back of the stand, or secured to the platform using the fixing strap located underneath the table top stand, this will prevent it from falling over.

The LCD display panels are manufactured using an extremely high level of precision technology, however sometimes some parts of the screen may be missing picture elements or have luminous spots. This is not a sign of a malfunction.

Make sure the television is located in a position where it cannot be pushed or hit by objects, as pressure will break or damage the screen, and that small items cannot be inserted into slots or openings in the case.



Please take note

EXCLUSION CLAUSE

Toshiba shall under no circumstances be liable for loss and/or damage to the product caused by:


- i) fire;
- ii) earthquake;
- iii) accidental damage;
- iv) intentional misuse of the product;
- v) use of the product in improper conditions;
- vi) loss and/or damage caused to the product whilst in the possession of a third party;
- vii) any damage or loss caused as a result of the owner's failure and/or neglect to follow the instructions set out in the owner's manual;
- viii) any loss or damage caused directly as a result of misuse or malfunction of the product when used simultaneously with associated equipment;

Furthermore, under no circumstances shall Toshiba be liable for any consequential loss and/or damage including but not limited to the following, loss of profit, interruption of business, the loss of recorded data whether caused during normal operation or misuse of the product.


If stationary images generated by text services, channel identification logos, computer displays, video games, on screen menus, etc. are left on the television screen for any length of time they could become conspicuous, it is always advisable to reduce both the brightness and contrast settings.

The remote control

Simple at-a-glance reference of your remote control.

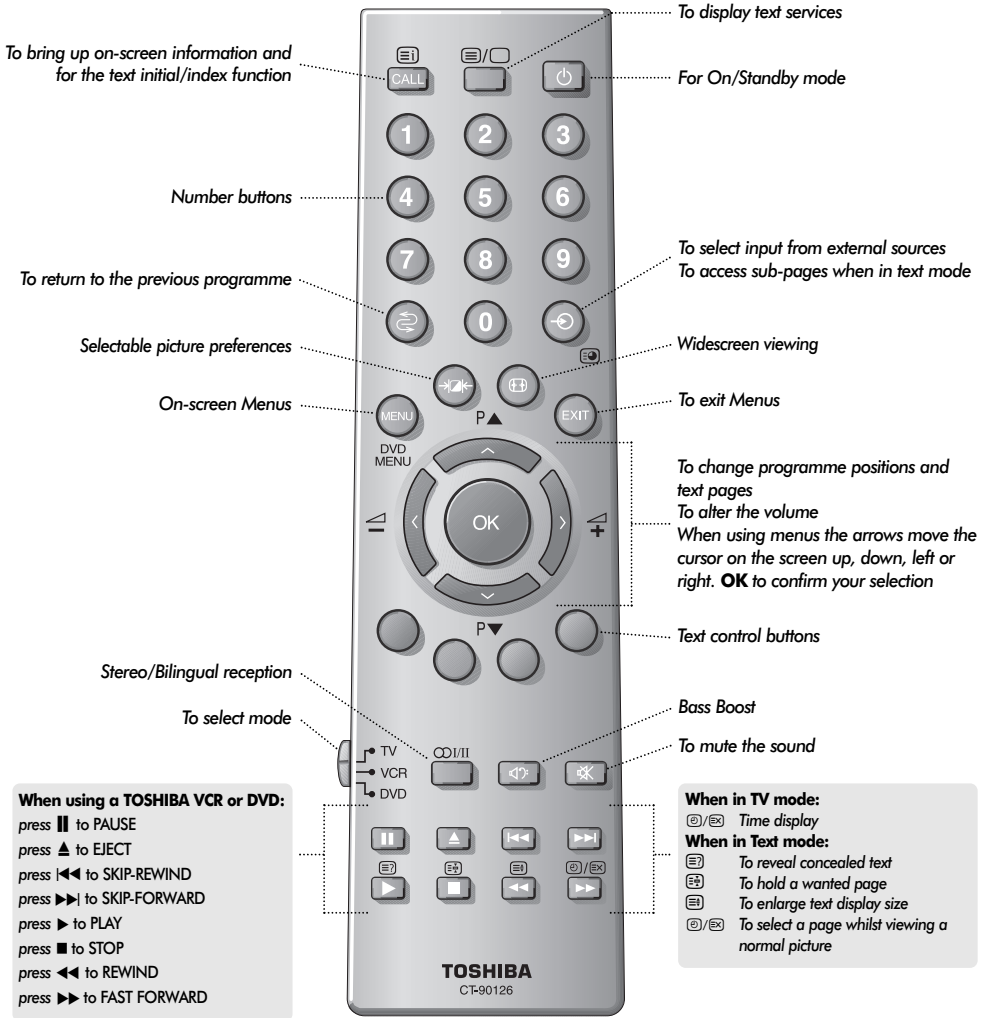

Inserting batteries and effective range of the remote

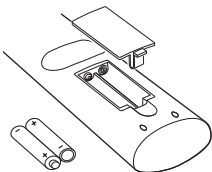


Remove the back cover to reveal the battery compartment and make sure the batteries are inserted the right way round. Suitable battery types for this remote are AAA, IEC R03 1.5V.

Do not combine a used, old battery with a new one or mix battery types. Remove dead batteries immediately to prevent acid from leaking into the battery compartment. Dispose of them in a designated disposal area.

The performance of the remote control will deteriorate beyond a distance of five metres or outside an angle of 30 degrees from the centre of the television. If the operating range becomes reduced the batteries may need replacing.

Connecting external equipment

Before connecting any external equipment, turn off all main power switches. If there is no switch remove the mains plug from the wall socket.

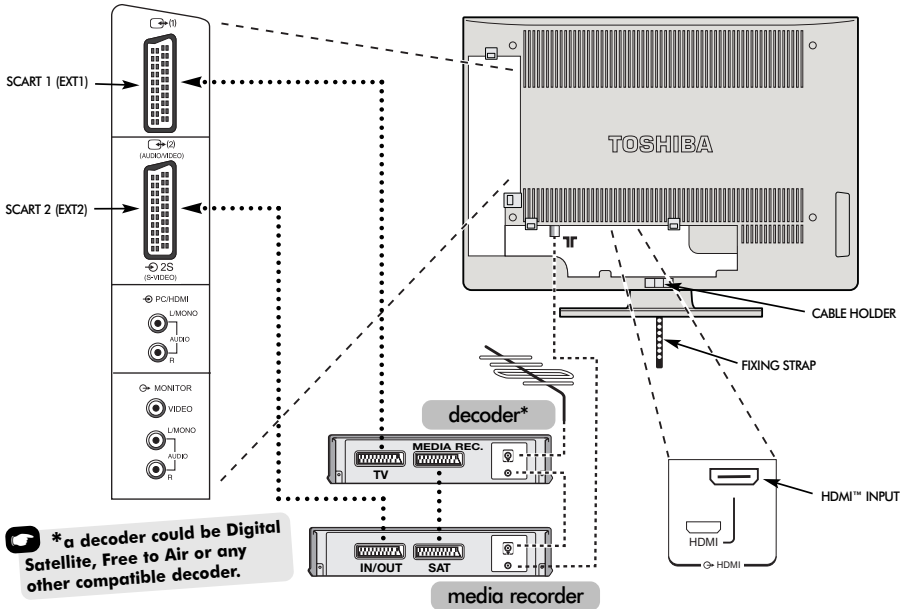

*** a decoder could be Digital Satellite, Free to Air or any other compatible decoder.**

Before connecting the aerial, video and audio cables, remove the side and back terminal covers by squeezing the tab and pulling the covers out.

Aerial cables: ----- 

Connect the aerial to the socket on the rear of the television. If you use a decoder* and/or a media recorder it is essential that the aerial cable is connected through the decoder and/or through the media recorder to the television.

SCART leads: 

Connect the video recorder **IN/OUT** socket to the television. Connect the decoder **TV** socket to the television. Connect the media recorder **SAT** socket to the decoder **MEDIA REC.** socket.

Before running **Auto tuning** put your decoder and media recorder to **Standby**.


The phono sockets below the MONITOR VIDEO socket will accept L and R audio signals.

HDMI™ (High-Definition Multimedia Interface) is for use with a DVD, decoder or electrical equipment with digital audio and video output. It is designed for best performance with 1080i high-definition video signals but will also accept and display 480i, 480p, 576i, 576p and 720p signals.

A wide variety of external equipment can be connected to the back of the television, therefore the relevant owners manuals for all additional equipment must be referred to.

We recommend SCART 1 for a decoder and SCART 2 for a media recorder.

If connecting S-VIDEO equipment, set the **INPUT** for **EXT2**. See page 19.

If the television automatically switches over to monitor external equipment, return to normal television by pressing the desired programme position button. To recall external equipment, press  to select between **EXT1**, **EXT2**, **EXT3**, **HDMI**, **PC** or **YUV**.

HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing, LLC.


Connecting a computer or component video source

Before connecting any external equipment, turn off all main power switches. If there is no switch remove the mains plug from the wall socket.

the back of your television


When connecting to equipment with component video output it will be necessary to connect an audio cable to the PC/HDMI socket.

Computer

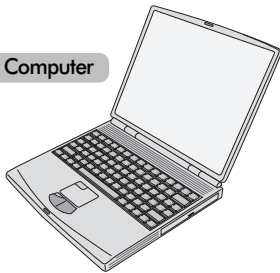


Audio cable from PC or component video audio source to television (not supplied)

Conversion adaptor if required (not supplied)

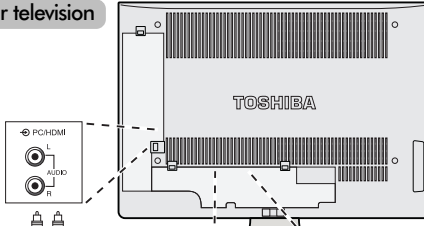

Mini D-sub 15p connector

 


RGB/PC

Component video supports 480i, 480p, 576i, 576p, 720p and 1080i signals.




RGB PC cable (not supplied)

 Mini D-sub 15p connector



Component video connector (not supplied)

Connect the PC cable from the computer to the PC terminal on the back of the television.

Press the  to select PC mode.

The following signals can be displayed:

VGA: 640 x 480/60 Hz (VESA 480-60)

SVGA: 800 x 600/60 Hz (VESA 600-60)

XGA: 1024 x 768/60 Hz (VESA 768-60)

IMPORTANT NOTE: The 27WL model will display XGA but it will not be to the VESA standard.

PLEASE NOTE:

Some PC models cannot be connected to this television.

An adaptor is not needed for computers with a DOS/V compatible mini D-sub 15p terminal.

A band may appear at the edges of the screen or parts of the picture may be obscured. This is due to the strength of the signal, it is not a malfunction.

When PC input mode is selected some of the television's features will be unavailable e.g. **Manual setting** in the **SET UP** menu, **Colour**, **Tint**, **DNR** and **Black Stretch** in the **Picture settings** menu.

Signal information for Mini D-sub 15p connector

Pin assignment for RGB/PC terminal




| Pin. No. | Signal name | Pin No. | Signal name |
|----------|----------------------|---------|-------------|
| 1 | R (P _R *) | 9 | NC |
| 2 | G (Y*) | 10 | Ground |
| 3 | B (P _B *) | 11 | NC |
| 4 | NC (not connected) | 12 | NC |
| 5 | NC | 13 | H-sync |
| 6 | Ground | 14 | V-sync |
| 7 | Ground | 15 | NC |
| 8 | Ground | | |

* Component video

Side connections and controls

A wide variety of external equipment can be connected via the sockets located on the side of the television.

Whilst all the necessary adjustments and controls for the television are made using the remote control, the buttons on the top of the television may be used for some functions.

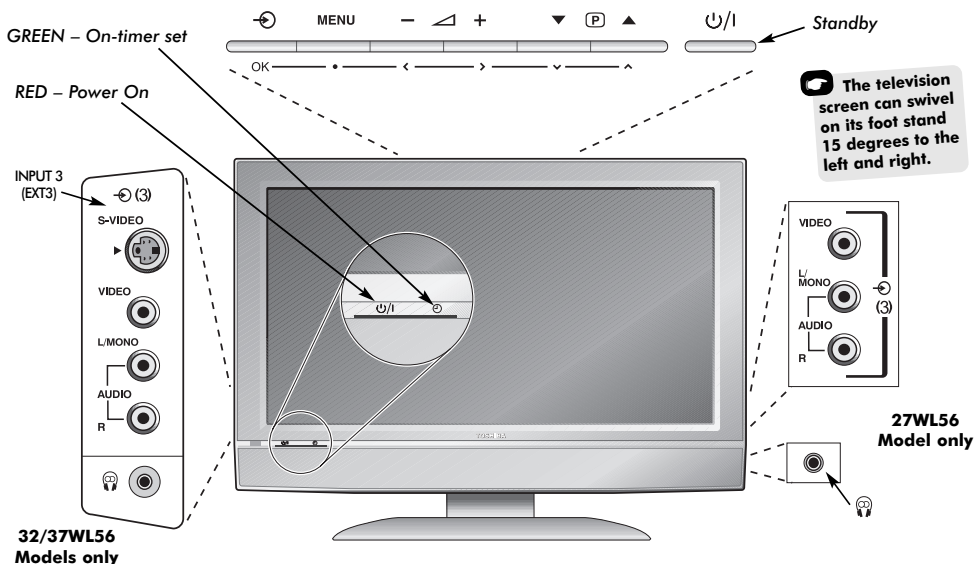

Switching on

If the red LED is unlit check that the mains plug is connected to the power supply. If the picture does not appear press a number button on the remote control, it may take a few moments.

To put the television into Standby press on the remote control. To view the television press again. The picture may take a few seconds to appear.

To set up the television you will now need to use the on-screen menus. Press the **MENU** button on the remote control to see the menus.

The menu bar at the top of the screens will show five different topics shown in symbols. As each symbol is selected by pressing the or button on the remote control, its respective options will appear below.

To use the options press the button on the remote control to move down through them and **OK**, or to select the required choice. Follow the on-screen instructions. The functions of each menu are described in detail throughout the manual.

Using the controls and connections

To alter the volume press .

To alter the programme position press .

Press **MENU** and , , or to control the sound and picture options.

Press **MENU** to finish.

When connecting mono sound equipment to **EXT3**, connect the audio output of the equipment to the L/Mono socket on the television.

To select the Input, press until the display shows **EXT3** as described on page 19. The television will automatically sense the type of signal.

Please always refer to the owner's manual of the equipment to be connected for full details.

Please note: Inserting the headphone plug will mute the sound from all speakers.

Tuning the television using Quick Setup, Programme sorting

Before switching on the television put your decoder and media recorder to **Standby** if they are connected. To set up the television use the buttons on the remote control as detailed on page 5.

 
- 1 Connect the television to the mains power. The **Quick Setup** screen will appear.



- 2 Using **<** or **>** select your **language**, then press **OK**.
- 3 Then press **<** or **>** to select your **country** and press **OK**.
- 4 Your **System** will have been selected, if there is a choice, press **>** to select from the systems displayed.

B/G – Continental Europe, **I** – UK
D/K – Eastern Europe, **L** – France

- 5 To start **Auto tuning** press **OK**.




- 6 The search will begin for all available stations. The slide bar will move along the line as the search progresses.

You must allow the television to complete the search.

When the search is complete the television will automatically select programme position 1. This may not be a clear picture or the signal may be weak, so the station order can be changed using **Programme sorting** which will appear on the screen.

- 7 With the list of stations now showing use **∨** or **∧** to highlight the station you want to move and press **>**.

The selected station will be moved to the right of the screen.

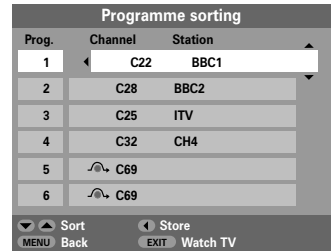

- 8 Use **∨** or **∧** to move through the list to your preferred position. As you do so the other stations will move to make room.
- 9 Press **<** to store your move.

 
Repeat as necessary, then press **EXIT**.

If the television cannot be connected to a media recorder/decoder with a SCART lead or if a station on another **system** is required, use **Manual tuning** to allocate a programme position, see page 10.

Manual tune

The television can be tuned-in manually using **Manual tuning**. For example: if the television cannot be connected to a media recorder/decoder with a SCART lead or to tune-in a station on another **System** (see page 9).

Use **<** and **>** to move across the screen and select any of these Manual Tune options.



Programme: The number to be pressed on the remote control.

System: Specific to certain areas. See page 9.

Colour system: Factory set to Auto, should only be changed if problems are experienced, i.e. NTSC input from external source.

Programme skip: means nothing has been stored or the facility to skip the channel is ON. See page 11.

Channel: The channel number on which a station is being broadcast.

Search: Search up and down for a signal.

Manual fine tuning: Only used if interference/weak signal is experienced. See page 22.

Station: Station identification. Use the **^** or **v** and **<** or **>** buttons to enter up to seven characters.

To allocate a programme position on the television for a decoder and media recorder: turn the decoder on, insert a pre-recorded film in the media recorder and press **PLAY**, then manually tune.

- 1 Press **MENU** and using **<** or **>** select the **SET UP** menu, with **v** highlight **Manual tuning**, press **OK** to select.



- 2 Use **^** or **v** to highlight the programme position required e.g. we suggest **Prog. 0** for a media recorder.

| Manual tuning | | | |
|---------------|------|---------|---------|
| Prog. | Sys. | Channel | Station |
| 0 | I | C60 | VCR |
| 1 | I | C22 | BBC1 |
| 2 | I | C28 | BBC2 |
| 3 | I | C25 | ITV |
| 4 | I | C32 | CH4 |
| 5 | I | C69 | |

Different **Channel** numbers may be displayed

 
- 3 Press **OK** to select. If the programme is skipped, **Programme skip** must be removed before storing.



- 4 Press **>** to select **System** and use **^** or **v** to change (if required, see page 9).

- 5 Then press **>** to select **Search**.

- 6 Press **^** or **v** to begin the search. The search symbol will flash.



- 7 Each signal will show on the television, if it is not your media recorder, press **^** or **v** again to restart the search.


Manual tune continued

Programme skip


- 8** When your media recorder signal is found, press **>** to move along to **Station**. With **^**, **v**, **<** and **>** put in the required characters, e.g. **VCR**.



- 9** Press **OK** to store.
- 10** Repeat for each **programme position** you want to tune or, press **MENU** to return to the list of channels and select the next number to tune.
- 11** Press **EXIT** when you have finished.
- 12** To name external equipment, e.g. DVD on EXT2, press **↶** to select **EXT2**, then select **Manual setting** from the **SET UP** menu.
- 13** Press **>** to select **Label** then using **^**, **v**, **<** and **>** put in the required characters.

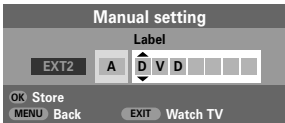

- 14** At any time by pressing **OK** a list will appear on screen showing all stored programmes and external equipment. Use **^** and **v** to highlight and **OK** to select.

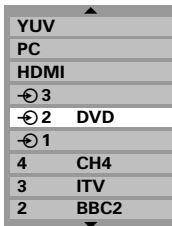


PLEASE NOTE This television has direct channel entry if the channel numbers are known. Select the **Manual tuning** screen in **Step 3**. Enter the **Programme number**, the **System**, then the **Channel number**. Press **OK** to store.


Programme skip

To prevent certain programmes from being viewed, the programme position can be skipped. The remote control must be removed as the channels will still be available using **^** and **v**. The television can then be watched as normal using the controls on the top, but the television will not show the skipped programme position.

- 1** Select **Manual tuning** from the **SET UP** menu.

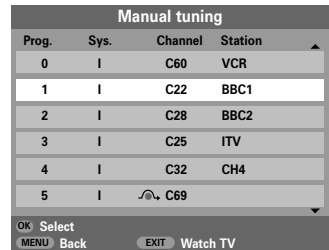

- 2** Use **^** or **v** to highlight the programme position to be skipped and press **OK** to select.
- 3** Press **>** to select **Programme skip**.
- 4** Use **^** or **v** to turn **Programme skip** on. Press **OK**.

 on the screen indicates a skipped programme position.



- 5** Press **MENU** and repeat from **Step 2** or press **EXIT**.

Each programme position has to be *individually* selected. To turn **Programme skip** off, repeat the procedure for each position.

Skipped programme positions **cannot** be selected by **P▲ (^)** and **P▼ (v)** or by the controls on the top of the television, but **can** still be accessed by the number buttons on the remote control.


Auto tune, general controls, time display, stereo/bilingual transmissions

Using Auto tuning

- 1 To set up the television using **Auto tuning**, press **MENU** and use **◀** or **▶** to select the **SET UP** menu.



- 2 Press **▼** to highlight **Language** and **◀** or **▶** to select.
- 3 Using **▼** highlight **Country**, then **◀** or **▶** to select. The television will now tune the stations for your country.
- 4 Press **▼** to highlight **Auto tuning**, then press **OK**.

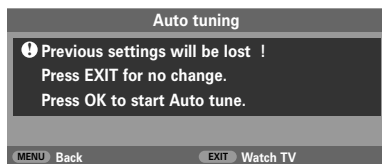

- 5 Your **System** will have been selected, if there is a choice, press **◀** or **▶** to select from the systems displayed, then press **OK**.

B/G – Continental Europe, **I** – UK
D/K – Eastern Europe, **L** – France

You must allow the television to complete the search.

When the search is complete the television will automatically select programme position 1. This may not be a clear picture, so the station order can be changed using **Programme sorting**, see page 9.

Selecting programme positions

To select a programme position use the numbered buttons on the remote control.

For programme positions below 10 use 0 and the required number e.g. 01 for programme position 1.

Programme positions can also be selected using **P▲** (▲) and **P▼** (▼).

To revert to the previous programme position press **↶**.

To display on-screen information i.e. programme position, input mode or stereo/mono signal, press **CALL**.

The Time Display

The time display facility allows the current (text service) time to be seen on the television screen.

Press **Ⓢ/ⓧ** whilst watching a normal television broadcast to see a time display from the broadcaster. It will remain on screen for about 5 seconds.

Stereo and Bilingual transmissions

If stereo or dual language broadcasts are transmitted the word Stereo or Dual will appear on the screen each time programme positions are changed, disappearing after a few seconds. If the broadcast is not in stereo the word Mono will appear.

Stereo... Press **Ⓢ/ⓧ** to select **Stereo** or **Mono**.

Bilingual... Bilingual transmissions are rare. If they are transmitted the word **Dual** will display. Choose the required programme number and if the word **Dual** appears press **Ⓢ/ⓧ** to select **Dual 1**, **Dual 2** or **Mono**.

Sound controls, WOW™ sound effects, dual, stable sound®

Sound controls

Volume

Press (◀) or (▶) to adjust the volume.


Sound Mute

Press once to turn the sound off and again to cancel.

Bass Boost – to enhance the depth of sound

Press then ◀ or ▶ to adjust the effect. The difference will only be noticeable on sound with a strong bass. Press again to turn Bass Boost off.

Bass, Treble and Balance

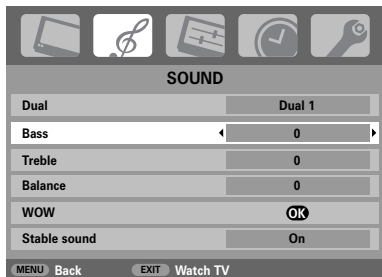

- 1 Press **MENU** and ◀ or ▶ to select **SOUND**.
- 2 Press ▼ to highlight **Bass, Treble** or **Balance** and ◀ or ▶ to change the setting.

WOW™ sound effects

WOW™ gives a rich, virtual surround sound experience from your television's speakers using the stereo signals being broadcast. If mono sound is broadcast these features will be unavailable.

SRS 3D gives a softer effect to the sound, **FOCUS** concentrates the sound and gives the effect of it coming from the centre of the television, **TruBass** alters the depth of sound.

- 1 Press **MENU** and select the **SOUND** menu.
- 2 Use ▲ or ▼ to highlight **WOW** then press **OK**.

SRS (S) WOW, SRS and (S) symbol are trademarks of SRS Labs, Inc.
WOW WOW technology is incorporated under license from SRS Labs, Inc.



- 3 Press ▼ to highlight **SRS 3D** and using ◀ or ▶ select between **On** or **Off**.
- 4 Then press ▼ to highlight **FOCUS** and press ◀ or ▶ to select between **On** or **Off**.
- 5 Highlight **TruBass** and use ◀ or ▶ to select **Off, Low** or **High** to suit your preference.

Dual


If a programme or film is being broadcast with a soundtrack in more than one language, the **DUAL** feature allows selection between them.

- 1 Press **MENU** and select the **SOUND** menu.
- 2 Use ▼ to highlight **Dual** then press ◀ or ▶ to choose between **Dual 1** or **Dual 2**.


Stable sound®

The **Stable Sound** feature limits high volume levels and prevents the extreme changes in volume that can occur when channels are changed or a programme switches to a commercial.

- 1 Press **MENU** and select the **SOUND** menu.
- 2 Use ▼ to highlight **Stable Sound** then press ◀ or ▶ to select **On** or **Off**.

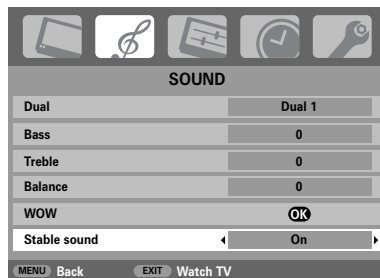


Widescreen viewing

Depending on the type of broadcast being transmitted, programmes can be viewed in a number of formats. Press the  button repeatedly to select between **Super live**, **Cinema**, **Subtitle**, **14:9**, **Wide** and **4:3**. Please note: Whenever the **MENU** button is pressed the picture size setting will change while the menus are ON the screen. This is to ensure that the menus do not overlap the edges of the viewable area.


SUPER LIVE

This setting will enlarge the image to fit the screen by stretching the image horizontally, holding the correct proportions at the centre of the image. Some distortion may occur.

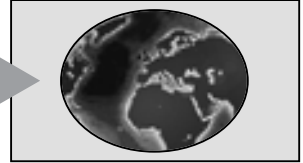


CINEMA

When watching 'letterbox format' films/video tapes, this setting will eliminate or reduce the black bars at the top and bottom of the screen by zooming in and selecting the image without distortion.

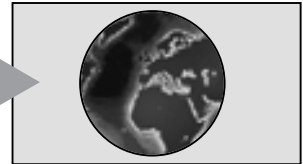


SUBTITLE

When subtitles are included on a letterbox format broadcast, this setting will raise the picture to ensure that all the text is displayed.

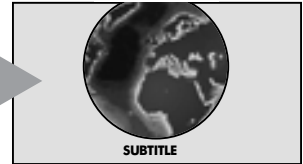


14:9

Use this setting when watching a 14:9 broadcast.

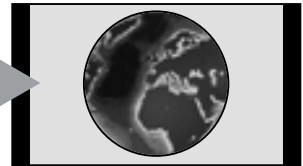


WIDE

Use this setting when watching a widescreen DVD, widescreen video tape or a 16:9 broadcast (when available). Due to the range of widescreen formats (16:9, 14:9, 20:9 etc.) black bars may be visible on the top and bottom of the screen.

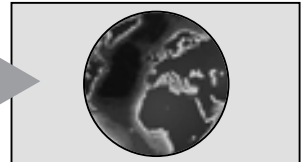

4:3

Use this setting to view a true 4:3 broadcast.

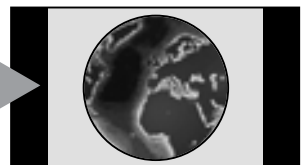

Using the special functions to change the size of the displayed image (i.e. changing the height/width ratio) for the purposes of public display or commercial gain may infringe on copyright laws.

Picture controls

Picture position

The picture position may be adjusted to suit personal preference and can be particularly useful for external inputs.


- 1 In the **SET UP** menu press \blacktriangledown until **Picture position** is highlighted.



- 2 Press **OK** to view the options available for the picture format that has been selected.
- 3 Press \blacktriangle and \blacktriangledown to select an option, then \blacktriangleleft or \blacktriangleright to adjust the settings.

The options alter depending on the widescreen format chosen and when viewing connected equipment.

In **Cinema**:

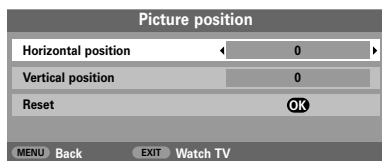


To return to the original factory settings select **Reset** in the **Picture position** menu and press **OK**.


Back light

Adjusting the **Back light** can improve the clarity of the screen when viewing.

- 1 In the **PICTURE** menu press \blacktriangledown to select **Picture settings**, then press **OK**.

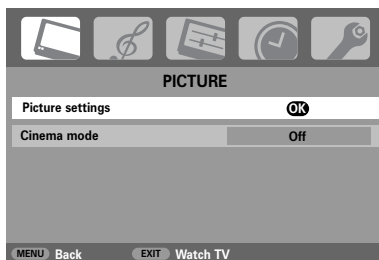

- 2 In the **Picture settings** menu press \blacktriangledown to select **Back light**.
- 3 Press \blacktriangleleft or \blacktriangleright to adjust.

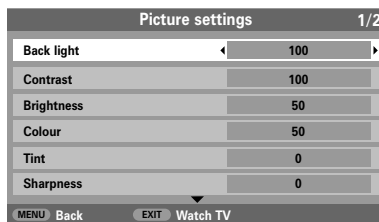


Picture preferences

This television offers the choice of personalising the picture style. Press \blacktriangleleft or \blacktriangleright to view the different styles available:

Picture mode-1 to 3 are preset options and **Picture mode-M** stores your own settings:

- 1 Select **Picture settings** from the **PICTURE** menu.

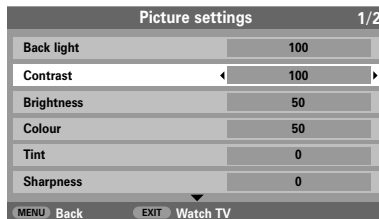


- 2 Use \blacktriangleleft or \blacktriangleright to adjust the **Contrast**, **Brightness**, **Colour**, **Tint** and **Sharpness**.

Picture controls continued

Black stretch

Black Stretch increases the strength of dark areas of the picture which improves the definition.

- 1 In the **Picture settings** menu press \blacktriangledown until **Black Stretch** is highlighted.

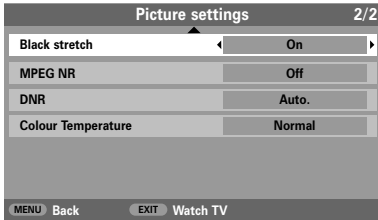

- 2 Press \leftarrow or \rightarrow to select between **On** and **Off**. The effect depends on the broadcast and is most noticeable on dark colours.

MPEG NR – Noise Reduction

When watching a DVD the compression may cause some words or picture elements to become distorted or pixelated. Using the **MPEG NR** feature reduces this effect by smoothing out the edges.

- 1 Select **MPEG NR** from the **Picture settings** menu. Use \leftarrow or \rightarrow to select a setting to suit your preference.

DNR – Digital Noise Reduction

DNR enables you to 'soften' the screen representation of a weak signal to reduce the noise effect.

- 1 Select **DNR** from the **Picture settings** menu. Use \leftarrow or \rightarrow to adjust. The differences may not always be noticeable (for the best result use lower settings as picture quality can be lost if the setting is too high).

Colour temperature

Colour Temperature increases the 'warmth' or 'coolness' of a picture by increasing the red or blue tint.

- 1 In the **Picture settings** menu press \blacktriangledown until **Colour Temperature** is highlighted.
- 2 Press \leftarrow or \rightarrow to select between **Normal**, **Warm** and **Cool** to suit your preference.

Cinema mode


If there are lines or jagged edges in the film or programme being viewed, selecting **Cinema mode** can help correct this by smoothing out the picture.

- 1 In the **Picture** menu press \blacktriangledown to select **Cinema mode**.
- 2 Press \leftarrow or \rightarrow to select **On** or **Off**.

Automatic format (Widescreen)

When this television receives a true Widescreen picture and **Auto format** is **On**, it will automatically be displayed in Widescreen format, irrespective of the television's previous setting.

- 1 Press **MENU** and \leftarrow or \rightarrow to select the **FUNCTION** menu.

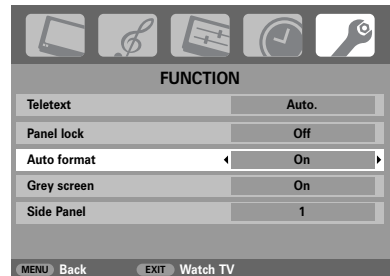

- 2 Press \blacktriangledown to highlight **Auto format**, then \leftarrow or \rightarrow to select **On** or **Off**.

Picture controls continued, panel lock, the timer

Grey screen

When **Grey screen** is selected the screen will turn grey and the sound will be muted when no signal is received.

- 1 In the **FUNCTION** menu press \blacktriangledown to highlight **Grey screen**.
- 2 Press \leftarrow or \rightarrow to select **On** or **Off**.

Side panel adjustment


The **Side Panel** feature lightens or darkens the band each side of the screen when in 4:3 or 14:9 format. This helps prevent image retention of the band and can also make viewing in bright or dark conditions more comfortable.

- 1 In the **FUNCTION** menu press \blacktriangledown until **Side Panel** is highlighted.
- 2 Press \leftarrow or \rightarrow to adjust.

Panel lock

Panel lock disables the buttons on the top of the television. All buttons on the remote control can still be used.

- 1 From the **FUNCTION** menu select **Panel lock** and choose **On** or **Off** using \leftarrow or \rightarrow .

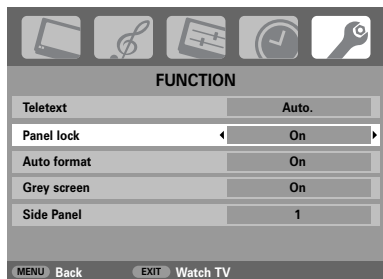

When **Panel lock** is **On**, a reminder will appear when the top panel buttons are pressed. **If the standby button is pressed the television will switch off and can only be brought out of standby by using the remote control.**

The Timer

The television can be set to turn itself **On** or **Off** after a certain time.

- 1 Press **MENU** and \leftarrow or \rightarrow to select the **TIMER** menu.



- 2 Press \blacktriangledown to select **On** or **Sleep timer**. Use the number buttons to set the required time. For example, to switch the television off in one and a half hours enter 01:30, or press \rightarrow to increase/decrease in steps of 10 minutes.
- 3 If setting the **Sleep timer**, press **EXIT** to finish. If setting the **On timer**, press \blacktriangledown to select **On timer Position**, enter the programme position number required, then press ⏻ to put the television into Standby. The GREEN On timer indicator on the front of the television will now be lit.

Any equipment connected with SCART leads must also be put into Standby to prevent them from being displayed when the timer switches on.

Once the **On timer** has been set the television can be switched on at any time by pressing ⏻ . The Green On timer indicator will remain on until the set time period as passed when the television will go to the chosen channel. This feature can help to avoid missing favourite programmes.


- 4 To cancel the **On timer/Sleep timer**, enter zero in each position.

PC settings – picture position, clock phase, sampling clock, reset


Picture position

The picture position may be adjusted to suit personal preference.

- 1 Press \odot to select **PC**, then select **PC Setting** from the **SET UP** menu.

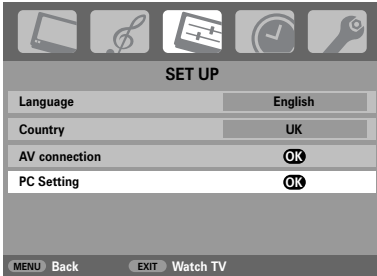

- 2 Press **OK**. Press \wedge and \vee to select an option, then \leftarrow or \rightarrow to adjust the settings.

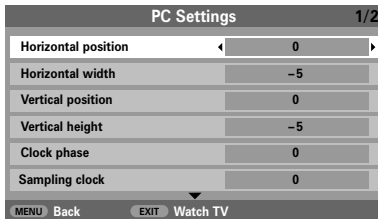

Clock phase


The **Clock phase** matches the PC signal with the LCD display. Adjusting this can clear horizontal stripes and picture blur.

- 1 In the **SET UP** menu press \vee until **PC Setting** is highlighted.
- 2 Press **OK** to select, then \vee to highlight **Clock phase**.
- 3 Use \leftarrow or \rightarrow to adjust until the picture clears.

Sampling clock

Adjusting the **Sampling clock** alters the number of pulses per scan, this will clear vertical lines on the screen.

- 1 In the **SET UP** menu press \vee until **PC Setting** is highlighted.
- 2 Press **OK** to select, then \vee to highlight **Sampling clock**.

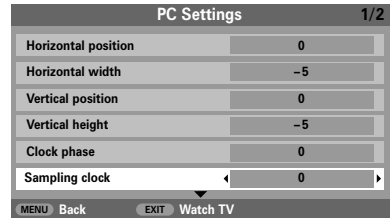


- 3 Use \leftarrow or \rightarrow to adjust until the picture clears.

Reset

To return to the original factory settings.


- 1 In the **SET UP** menu press \vee until **PC Setting** is highlighted.
- 2 Press **OK** to select, then \vee to highlight **Reset**.

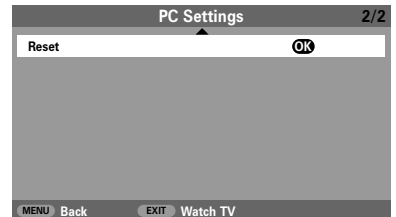

- 3 Press **OK**.

Input selection and AV connections





Defining the INPUT and OUTPUT sockets so that the television recognises connected equipment. See page 6 for a clear view of the back connection recommendations.

Most media recorders and decoders send a signal through the SCART lead to switch the television to the correct *Input* socket. Alternatively press the external source selection button  until the picture from connected equipment is shown.

An **S** in the display e.g.  **3S (EXT 3S)**, indicates the input is set for an S-Video signal.


Input selection

Use the Input Selection if the television does not switch over automatically.

- 1 Press  to select , ,  (**EXT1-3**), **HDMI**, **PC** or **YUV**.




HDMI™ displays equipment connected to *Input HDMI* on the back of the television. It is designed for best performance with 1080i high definition signals.

PC displays a computer connected to *Input RGB/PC* on the back of the television.


- 2 To return to television mode press  again or one of the numbered buttons.

INPUT signal selection

This specifies the type of signal going into SCART 2 (**EXT2**) on the back of the television. Please refer to the manufacturers instructions for the connected equipment.


- 1 In the **SET UP** menu press  until **AV connection** is highlighted, then press **OK**. With  or  select either **AV** or **S-VIDEO** as the required *input* for **EXT2**.


If the colour is missing try the alternative setting.

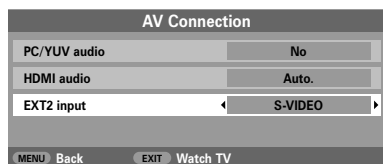

PC/YUV audio

In order to receive sound from a connected PC or component video source, plug the audio cable into the back of the television (as shown in the 'Connecting a computer or component video source' section), then select **PC/YUV audio**.

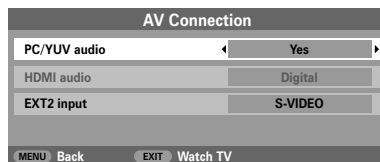


- 1 In the **AV connection** menu highlight **PC/YUV audio**. With  or  select either **Yes** or **No**.




NOTE: Selecting **PC/YUV audio** will force HDMI into digital audio.

HDMI audio

If the connected HDMI source does not support digital audio, plug the audio cable into the back of the television (as shown in the 'Connecting a computer or component video source' section), then use the **HDMI audio** settings.

- 1 In the **AV connection** menu press  to highlight **HDMI audio**. Using  or  select **Auto.** or **Analogue**.

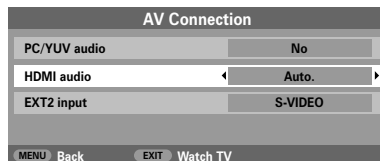

If the sound is missing select the alternative setting.

HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing, LLC.


Text services – setting up, general information, Auto and LIST modes

This television has a multi-page text memory, which takes a few moments to load. It offers two **Modes** of viewing text – **Auto** will display **Fastext**, if available. **LIST** will store your four favourite pages.

Selecting modes


 
The text character set will be automatically chosen by the language setting in the **SET UP** menu.

- 1 Select **Teletext** from the **FUNCTION** menu.
- 2 With **◀** or **▶** choose **Auto.** or **LIST** then press **EXIT**.

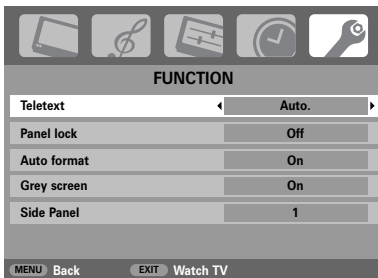

Text information

The / button:

To view text services press / . Press again to superimpose the text over a normal broadcast picture and again to return to normal viewing. Programmes cannot be changed until text is cancelled.

The first text page shown will be the *initial* page.

In **Auto.** mode this displays the main subjects available and their relevant page numbers.

In **LIST** mode this displays whichever page number is currently stored on the **RED** button.

In either mode any text page can be accessed by entering the 3 digit page number using the numbered buttons, pressing the coloured buttons or pressing **P ▲** (**↗**) to advance to the next page and **P ▼** (**↘**) to go back to the previous page.

Sub-pages

If there are sub-pages they will automatically load into memory without changing the page on screen.

To access the sub-pages press  then use **▲** and **▼** to view them. A bar with numbers will appear on the side of the screen.

The sub-page you are viewing will be highlighted and, as the television loads any additional sub-pages the colour of the numbers will change, indicating that these pages have been loaded.

These sub-pages will remain available to view until another page is chosen or, in normal TV mode, the channel is changed.

Navigating pages using Auto.

If **Fastext** is available four coloured titles will appear at the base of the screen.

To access one of the four given subjects, press the relevant coloured button on the remote control.

For further information on your particular text system(s), see the broadcast text index page or, consult your local Toshiba dealer.

Navigating pages using LIST

The four coloured choices at the bottom of the screen are numbers – 100, 200, 300 and 400, which have been programmed into the television's memory. To view these pages press the relevant coloured buttons.

To change these stored pages press the relevant coloured button and enter the 3 digit number. This number will change in the top left of the screen and in the coloured highlight.

Press **OK** to store. The bars at the bottom of the screen will flash white. **Whenever OK is pressed all four page numbers showing at the bottom will be stored and the previous ones will be lost.**


If **OK** is not pressed the selection will be forgotten when text is cancelled.

Other pages may be viewed by entering the 3 digit page number – but **DO NOT** press **OK** or these pages will be stored.

 
Text services continued

– control buttons


Below is a guide to the functions of the remote control text buttons.

 To display an index/initial page:


Auto.


Press  to access index pages. The one displayed is dependant on the broadcaster.

 LIST

Press  to return to the page currently stored on the **RED** button.


/□ To display a page of text:


Press /□ to display text. Press again to superimpose text over a normal broadcast picture. Press again to return to normal television viewing. Programmes cannot be changed until you return to normal television.

 
 
 To access sub-pages:


For use with  and  to view sub-pages when available.


 To reveal concealed text:


To discover the solutions on quiz and joke pages press the  button.



 To hold a wanted page:

   At times it is convenient to hold a page of text. Press  and  will appear in the top left of the screen. The page will be held on screen until the button is pressed again.


 
 To enlarge the text display size:

Press  once to enlarge the top half of the page, press again to enlarge the bottom half of the page. Press again to revert to normal size.

/EX To select a page whilst viewing a normal page:

Enter the page number then press , a normal picture will be displayed. The television will indicate when the page is present by displaying the page number at the top of the screen. Press /□ to view the page.

To display news flashes:

Select the news flash page for the chosen text service (see the index page of text service). Press /EX. The news flashes will be displayed as and when they are broadcast. Press /EX again to cancel the display.

The news flash page must be cancelled before changing programmes.

 **Remember to cancel text before changing channels – press the /□ button twice.**

Questions and Answers



Below are the answers to some of the most common queries.
For more information go to www.toshiba.co.uk

Q Why is there no sound or picture?


A Check the mains switch is on and check all connections.
Check the television is not in standby mode.

Q There is a picture, but why is there little or no colour?

A When using an **external** source, for instance, a poor quality video tape, if there is little or no colour, improvements may sometimes be achieved. The colour is factory set to **Auto**. to automatically display the best colour system.

To check that you have the best colour:

1 With the external source playing, select **Manual setting** from the **SET UP** menu.

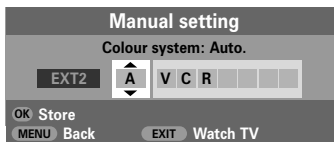

2 With **▲** or **▼** choose between **Auto.**, **PAL**, **SECAM**, **NTSC 4. 43** or **3. 58**.

Q Why doesn't the video/DVD being played show on screen?

A Make sure the VCR or DVD player is connected to the television as shown on page 6, then select the correct input by pressing **↻**.

Q Why is there a good video picture but no sound?

A Check the SCART lead connection.

Q Why is there a picture but no sound?

A Check the volume has not been turned down or that sound mute has not been selected.

Q Why is the VCR/DVD picture in black and white?

A Check the correct **input** has been chosen, **S-VIDEO** or **AV**. See **AV connections**.

Q What else can cause a poor picture?

A Interference or a weak signal. Try a different television station. **Manual fine tuning** may help.

1 Select the **Manual tuning** menu. Highlight the station and press **OK**, then press **➤** to select **Manual fine tuning**.

2 Using **^** or **v** adjust to get the best picture and sound. Press **OK** and then **EXIT**.



Q Why don't the controls on the top of the television work?

A Check that **Panel lock** is not **ON**.

Q Why doesn't the remote control work?

A Check the side switch on the remote control is in TV mode.
Check the batteries aren't dead or inserted incorrectly.

Q Why is there a message permanently on the screen?

A Remove it by pressing **CALL**.

Q Why are there vertical stripes on the screen?

A The **Sampling clock** may need adjustment. Select **PC Setting** from the **SET UP** menu, highlight **Sampling clock** and adjust until the lines clear.

Questions and Answers continued

 
Q Why are there horizontal stripes and/or blurred images on the screen?

A The **Clock phase** may need adjustment. Select **PC Setting** from the **SET UP** menu, highlight **Clock phase** and adjust until the picture clears.


Q Why are there problems with text?

A Good performance of text depends on a good strong broadcast signal. This normally requires a roof or loft aerial. If the text is unreadable or garbled, check the aerial. Go to the *main index* page of the text service and look for the *User Guide*. This will explain the basic operation of text in some detail. If further information is needed on how to use text see the *text* section.

Q Why are there no text sub-pages?


A There are none broadcast or they have not yet loaded. Press the  button to access. (See *text* section).

Q Why are the four coloured text numbers visible but no text?

A Text has been selected whilst viewing an external source i.e. DVD or VCR. No text will appear on screen or a box may appear stating no information is available. Select a broadcasting channel and press  to access.

Q Why are the colours wrong when an NTSC source is played?

A Connect the source via a SCART lead and play. Select **Manual setting** from the **SET UP** menu.

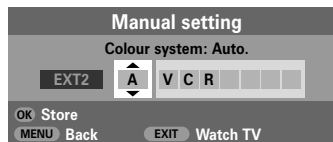

- 1 Set the Colour to **Auto.** and exit.
- 2 Go to the **Picture settings** menu and adjust the tint.

Cleaning the screen and cabinet...

Turn off the power, clean the screen and cabinet with a soft, dry cloth. We recommend that you **do not** use any proprietary polishes or solvents on the screen or cabinet as this may cause damage.

Disposal...

The following information is only for EU-member states:

The use of the symbol indicates that this product may not be treated as household waste. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



Specifications and accessories

Broadcast systems/channels

| | |
|-----------|-----------------------------------|
| PAL-I | UHF UK21-UK69 |
| PAL-B/G | UHF E21-E69 VHF E2-E12, S1-S41 |
| SECAM-L | UHF F21-F69 VHF F1-F10, B-Q |
| SECAM-D/K | UHF R21-R69 VHF R1-R12 |

Video Input PAL, SECAM, NTSC 3.58/4.43

External connections

| | | | |
|------|-------------------------|------------------------------------|--|
| EXT1 | Input | 21-pin SCART | RGB, A/V |
| EXT2 | Input/Output | 21-pin SCART | A/V, S-video |
| EXT3 | Input (Side) | 4 pin Phono jack Phono jacks | S-video (32/37WL only) Video Audio L + R |
| HDMI | Input | HDMI connector | Digital television and audio signal |
| | Input | Phono jacks | Audio L + R |
| PC | Video Input | Mini D-sub 15-pin | Analog RGB signal |
| | Audio Input | Phono jacks | Audio L + R |
| | Video Input (Component) | Mini D-sub 15-pin | Y, P _B /C _B , P _R /C _R |
| | Audio Input | Phono jacks | Audio L + R |

Programme Positions

100

Stereo

Nicam
2 carrier system

Visible Screen Size

(approx.) 27WL 68cm
32WL 80cm
37WL 94cm

Display

16:9

Sound output (at 10% distortion)

Main 10W + 10W

Power consumption

as specified in EN60107-1 : 1997 27WL 130W
32WL 155W
37WL 180W

Standby (approx.)

27WL <1W
32WL <1W
37WL <1W

Dimensions

(approx.) 27WL 57cm (H) 69cm (W) 10cm (D)
32WL 62cm (H) 79cm (W) 10cm (D)
37WL 72cm (H) 91cm (W) 11cm (D)

Weight (approx.)

27WL 16kg
32WL 22kg
37WL 29kg

Headphone socket

3.5mm stereo

Accessories

Remote control
2 batteries
(AAA, IEC R03 1.5V)



Printed on recycled paper. 100% Chlorine free.

© Toshiba Information Systems (U.K.) Limited

All rights reserved.

Reproduction in whole or part without written permission is strictly prohibited.

Toshiba Information Systems (U.K.) Limited

Consumer Products Division,
European Service Centre,
Admiralty Way, Camberley,
Surrey, GU15 3DT, UK

Specification is subject to change without notice.

Originated by Kensa Creative Solutions, Saltash, Cornwall.

27/32/37WL56

2356 6616A