


Instructions

www.easyrefills.com.au

Lexmark 1361760

Kit Code: K30CLR

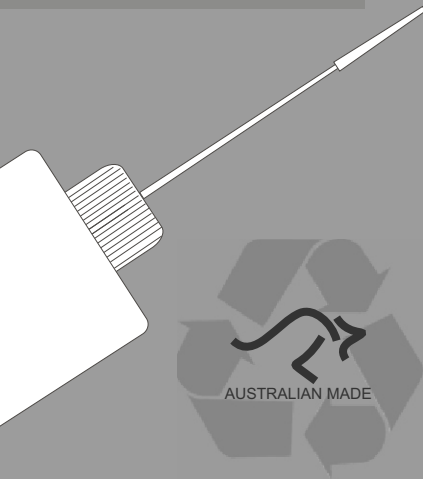

Easyrefills kit

Kit Contents:

- 3 x ink bottles (blue, red, yellow)
- 1 x plastic gloves
- 1 x absorbent pad
- 4 x stickers


Preparation:

- Put on the gloves supplied
- Cover your work area in newspaper in case of accidental spillage.
- Read these instructions thoroughly
- Remove the cartridge from your printer (only do this when ready to refill.)


NB: Ink stains so we would recommend you wear old clothes or an apron when refilling.



Preparation

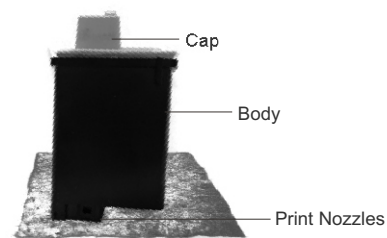


Place the cartridge on the absorbent pad provided. If a few drops of ink leak onto the pad do not worry, this is normal.

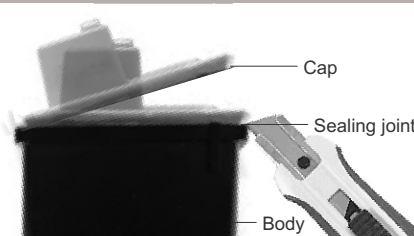

Use a blade or sharp knife to remove the cap from the top of the cartridge. Insert the blade into the sealing joint between the cap and the body and carefully pry it off. Note: Be very careful not to break the cap.

1 Step One

View From Top

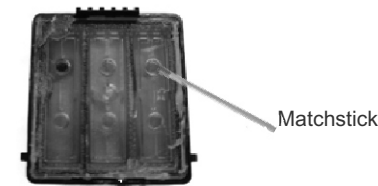

Identify which colour is under each refilling hole by using the end of a matchstick or toothpick as shown above. Insert the matchstick into the hole as far as possible, remove and check for colouring on stick.

3 Step Three


2 Step Two




Insert the refill needle into the hole containing the ink you wish to refill. Angle the needle toward the ink outlet hole at the bottom of the cartridge and push down as far as possible.

4 Step Four

5 Step Five

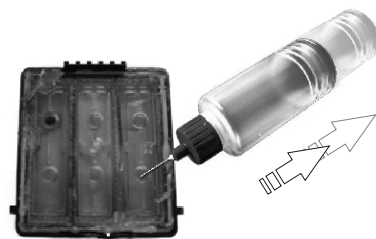

S-l-o-w-l-y and gently squeeze the ink refill bottle to force ink into the cartridge. This must be done with very little pressure, pulling the needle upward as you go. Each chamber takes approximately 5ml of ink.

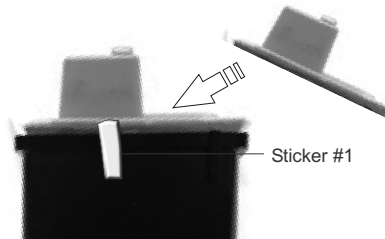

Replace the cap on top of the cartridge (see step 2) and secure with two of the stickers provided. Alternatively you can use super glue or a hot melt glue gun to stick the cap back on.

7 Step Seven

Q: Cartridge will not print?

A: If the cartridge does not print after refilling, rest the print nozzles on a wet tissue. This will draw ink through the nozzles. Leave for 10 minutes and try printing again.

Q: Prints with streaks through text or image?

A: This could mean that the print nozzles are blocked, therefore preventing ink to flow freely. To correct this problem use the printers cleaning routine. If this does not work, rest the print nozzles on a wet tissue. This will draw ink through the nozzles. Leave for 10 minutes and try printing again.


Q: Ink stains on hands and clothes?

A: To clean your hands, first wash thoroughly in soap and warm water. If the stains persist, try using bathroom cleaner. It may take several washes to remove the ink. There is no real solution to ink stained clothes. However if you are using a dy cleaner, you can tell them the ink is based upon water soluble dye with ethylene glycol added.

2

Trouble shooting

6 Step Six

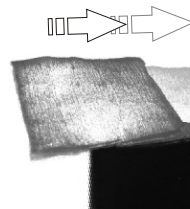

Repeat Steps 4-5 for each colour you wish to refill. Using the absorbent pad clean any foreign materials or excess ink from the top of the cartridge.

8 Step Eight



Install the cartridge into your printer and run the head cleaning utility (see printer manual). For best results wait 20 minutes before you resume printing.

Phone Support
1300 730 018

Printer Compatibility:

Lexmark PM-100, PM-3200, 5000, 5700, 7000, 7200, OPTRA COLOR 40, 40n, 45, 45n, 45n, SOLARIS, Z11, Z31

Cartridge Stats:

Colour: Tri-colour (Red, Blue, Yellow)
Ink Capacity: 5 ml per chamber
Weight when full: 68 grams

Number of refills per kit:

8 refills per kit

Easyrefills manufacturers all refill kits at it's Queensland headquarters. Importing the finest quality American made inks that are in most cases better than or equal to original manufacturers specifications. Each kit has a shelf life of two years and is covered by a 100% guarantee.

Copyright 2004 Easyrefills. All names and numbers used are registered trademarks of their respective owners.

www.easyrefills.com.au

General Information