



**nüvi™**  
*personal travel assistant*

*owner's manual*



© 2005 Garmin Ltd. or its subsidiaries

Garmin International, Inc.  
1200 East 151st Street,  
Olathe, Kansas 66062, U.S.A.  
Tel. 913/397.8200 or 800/800.1020  
Fax 913/397.8282

Garmin (Europe) Ltd.  
Unit 5, The Quadrangle,  
Abbey Park Industrial Estate,  
Romsey, SO51 9DL, U.K.  
Tel. 44/0870.8501241  
Fax 44/0870.8501251

Garmin Corporation  
No. 68, Jangshu 2nd Road,  
Shijr, Taipei County, Taiwan  
Tel. 886/2.2642.9199  
Fax 886/2.2642.9099

All rights reserved. Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded or stored in any storage medium, for any purpose without the express prior written consent of Garmin. Garmin hereby grants permission to download a single copy of this manual onto a hard drive or other electronic storage medium to be viewed and to print one copy of this manual or of any revision hereto, provided that such electronic or printed copy of this manual must contain the complete text of this copyright notice and provided further that any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

Information in this document is subject to change without notice. Garmin reserves the right to change or improve its products and to make changes in the content without obligation to notify any person or organization of such changes or improvements. Visit the Garmin Web site ([www.garmin.com](http://www.garmin.com)) for current updates and supplemental information concerning the use and operation of this and other Garmin products.

Garmin® and MapSource® are registered trademarks and nüvi™ is a trademark of Garmin Ltd. or its subsidiaries and may not be used without the express permission of Garmin.

SiRF, SiRFstar and the SiRF logo are registered trademarks of SiRF Technology, Inc. SiRFstarIII and SiRF Powered are trademarks of SiRF Technology, Inc.



Audible.com® and AudibleReady® are registered trademarks of Audible, Inc. © Audible, Inc. 1997–2005

Multilingual Wordbank © Oxford University Press 2001

Multilingual Phrasebank © Oxford University Press 2001

Pocket Oxford-Hachette French Dictionary © Oxford University Press and Hachette Livre 2005

Pocket Oxford-Duden German Dictionary © Oxford University Press and Bibliographisches Institut & F.A. Brockhaus 2003

Pocket Oxford Spanish Dictionary © Oxford University Press 2005

Pocket Oxford Italian Dictionary © Oxford University Press 2004

Oxford Portuguese Minidictionary © Oxford University Press 2002

September 2005

Part Number 190-00627-00 Rev. A

# PREFACE

Congratulations on purchasing the Garmin® nüvi™ Personal Travel Assistant.

## Serial Number

Record the serial number (8-digit number on the back of the unit) in case your nüvi needs service or you want to purchase additional maps.

Serial Number: \_\_\_\_\_

## Contact Garmin

Contact Garmin if you have any questions or if you should encounter any difficulty while using your nüvi.

In the U.S.A, contact Garmin Product Support by phone at 913/397.8200 or 800/800.1020, Monday–Friday, 8 AM–5 PM Central Time; or by e-mail at [support@garmin.com](mailto:support@garmin.com).

In Europe, contact Garmin (Europe) Ltd. at 44/0870.8501241.


## Quick Links

- Finding an address: [page 5](#)
- Viewing the Map page: [page 13](#)
- Listening to MP3 files: [page 25](#)
- Listening to an audible book: [page 26](#)
- Converting currency: [page 32](#)
- Transferring files to your nüvi: [pages 17–20](#) and [page 55](#)
- Adjusting the volume and backlight brightness: [page 3](#)
- Cleaning and storing your unit: [pages 52–53](#)
- Tips and Shortcuts: [page 3](#)

Tell us how you like this manual! Fill out the Product Documentation Survey. Go to <http://www.garmin.com/contactUs/> and click **Product Documentation Survey**.

**Preface** ..... **i**  
 Serial Number ..... i  
 Contact Garmin ..... i  
 Quick Links ..... i


**Find It and Go!** ..... **1**  
 Finding Your Destination ..... 1  
 Following Your Route ..... 2  
 Adjusting the Volume and Brightness ..... 3  
 Locking the Screen ..... 3  
 nüvi Tips and Shortcuts ..... 3

**Where To?**  ..... **4**  
 Finding a Place by Spelling the Name ..... 4  
 Go! Page Options ..... 4  
 Finding an Address ..... 5  
 Finding a Place Using the Map ..... 6  
 Expanding Your Search ..... 7  
 Adding a Stop to Your Route ..... 8

**My Locations**  ..... **9**  
 Saving Places You Find ..... 9  
 Finding Saved Places ..... 9

Saving Your Current Location ..... 9  
 Editing Saved Places ..... 10  
 Setting a Home Location ..... 11  
 Finding Recently Found Places ..... 12

**Viewing the Map and Other Pages** ..... **13**

Viewing the Map Page  ..... 13  
 Trip Information Page ..... 14  
 Current Route Page ..... 15  
 Next Turn Page ..... 15  
 Adding a Detour to a Route ..... 16  
 Stopping Your Route ..... 16

**Managing Files on Your nüvi** ..... **17**


Step 1: Insert an SD Card (Optional) ..... 17  
 Step 2: Connect the USB Cable ..... 17  
 Step 3: Transfer Files to Your nüvi ..... 18  
 Step 4: Eject and Unplug the USB Cable ..... 18  
 Information about Your nüvi Drives ..... 19  
 Additional Help ..... 19  
 Deleting Files from Your nüvi ..... 20  
 Supported File Types ..... 20

<b>Using the Travel Kit</b> 	<b>21</b>	Viewing Traffic Events .....	44
Using the Language Guide 	21	Avoiding Traffic.....	44
Using the Travel Guide 	24	Traffic Symbols.....	45
Listening to MP3 Files 	25	Color Code.....	45
Listening to Audible Books 	26	Adding a Subscription .....	46
Viewing Pictures 	30	<b>Appendix</b> .....	<b>47</b>
Using the World Clock 	31	Mounting Your nüvi .....	47
Converting Currency 	32	Resetting Your nüvi.....	50
Converting Measurements 	34	Clearing User Data.....	50
Using the Calculator 	35	Custom POIs (Points of Interest).....	51
<b>Customizing the nüvi</b> .....	<b>36</b>	Caring for Your nüvi .....	52
Restoring Settings .....	36	Updating the nüvi Software.....	53
Changing the Map Settings .....	37	Purchasing Additional MapSource Maps.....	54
Changing the System Settings.....	38	Loading MapSource Waypoints on Your nüvi ....	54
Changing the Time Settings .....	39	USB Interface Troubleshooting.....	55
Changing the Display Settings.....	40	nüvi Troubleshooting .....	56
Changing the Navigation Settings .....	41	Battery Information .....	57
Changing the Language Settings.....	42	About Satellite Signals .....	58
<b>FM TMC Traffic Information</b> .....	<b>43</b>	Technical Specifications .....	59
Connecting the FM TMC Traffic Receiver		Software License Agreement .....	60
to Your nüvi .....	43	<b>Index</b> .....	<b>61</b>


# FIND IT AND GO!

Flip up the antenna on the nüvi to get satellite signals. Then, use the Garmin nüvi to find your destination and go to it.


## Finding Your Destination

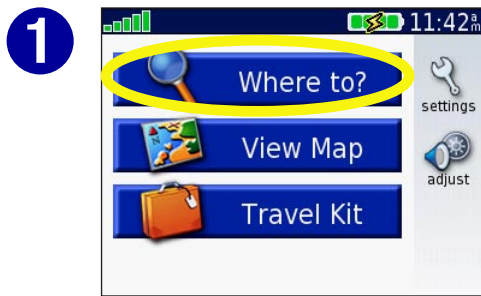


Touch  **Where to?**

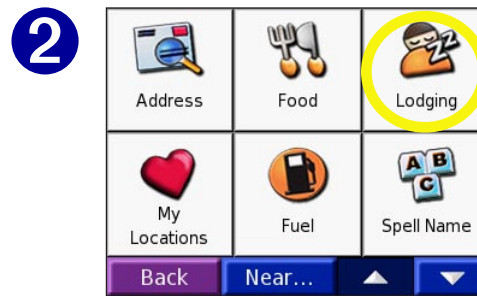


Select a category. Touch the arrows to see more categories.

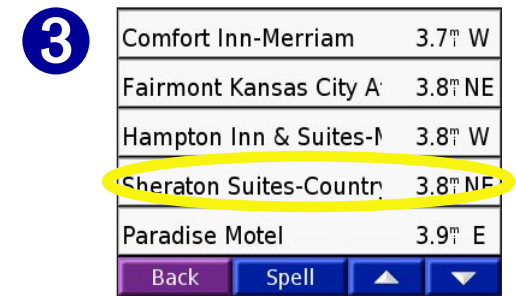

Select a destination.

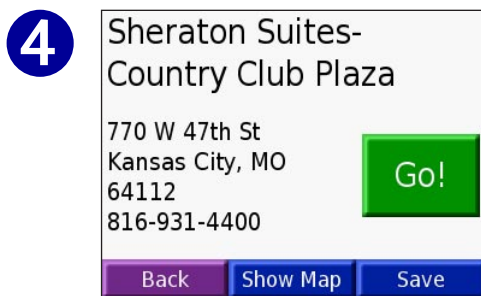


Touch .

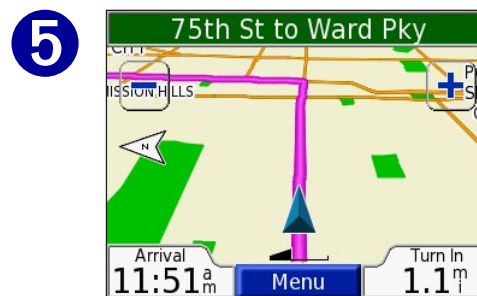

Enjoy the route!

## GPS Satellite Signals

The  bars in the upper left corner represent the satellite signals being received by your nüvi. When you see green bars, you have a strong signal. See [page 58](#) for more information


## Following Your Route

Follow the route to your destination using the Map page. As you travel, your nüvi guides you to your destination with vocal prompts, turn arrows on the map, and directions at the top of the Map page. If you depart from the original route, your nüvi recalculates the route and provides new route directions.

Read the driving instructions at the top of the page.



Your route is marked with a magenta line.

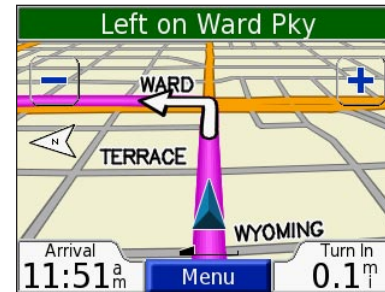

Follow the arrows as you make turns.




A checkered flag marks your destination.

For more information about using the Map page, see [pages 13–16](#).

## Adjusting the Volume and Brightness

Press and quickly release the **Power** button or touch  on the Menu page to access the Quick Settings. Move the sliders to adjust the volume and brightness. Touch **Mute** to turn the volume off.

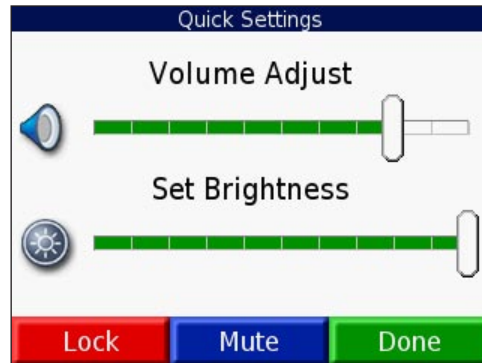

## Locking the Screen

To prevent accidental screen taps, touch **Lock**. To unlock the screen, press the **Power** button.

## nüvi Tips and Shortcuts

- To quickly return to the Menu page, press and hold **Back**.
- Touch **Help** to learn more about the nüvi's Travel Kit.
- When you are listening to music or an audible book, quickly press the **Power** button twice to jump from any page back to the player page. Press **Back** to return to the previous page you were viewing (such as the map).
- To extend the battery life, close the antenna when you do not need to receive GPS signals. If the antenna is closed, GPS is turned off.
- For more tips about the battery, see [page 57](#).




# WHERE TO?

To learn how to perform a simple search using the  Where To menu, see [page 1](#).


## Finding a Place by Spelling the Name


From the Menu page, touch  **Where to?** >  **Spell Name**.

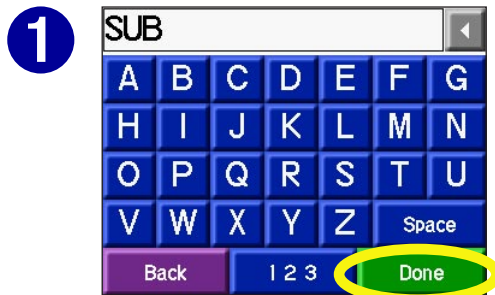


Using the on-screen keyboard, enter letters contained in the name. Then touch **Done**.




Select the place you want to visit. Touch .

Touch  to enter numbers. Touch  to delete the last character entered; touch and hold  to delete the entire entry.

 **TIP:** In any search results list, if you do not see the place you want visit or you want to narrow your search results list, touch **Spell** and enter the name or part of the name.

## Go! Page Options




Touch  to create a turn-by-turn route to this location.

Touch **Show Map** to view this location on the map.


Touch **Save** to save this location as one of your Favorites. See [pages 9 through 12](#) for more information.

# Finding an Address

To find an address, touch  **Where to?** from the Menu page. Touch  **Address**.

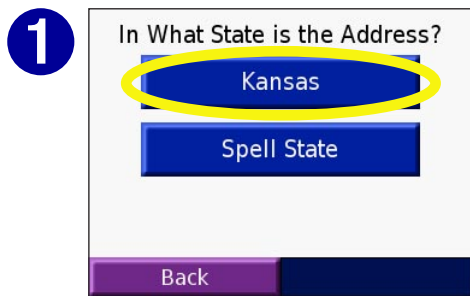

Select a state.

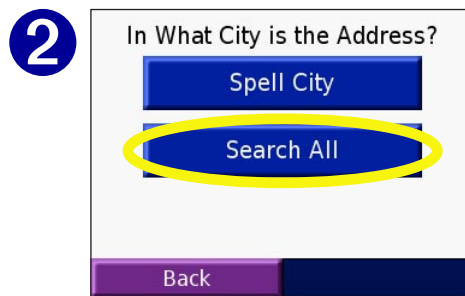

Touch **Search All**, or touch **Spell City** and spell the city.



Type the number of the address and touch **Done**.



Type the street name and touch **Done**.




Select the street.



Touch a city, if necessary.






Touch the address, if necessary. Touch .





Finding an intersection is very similar to finding an address. Touch **Intersection** and enter the two street names.

## Finding a Place Using the Map

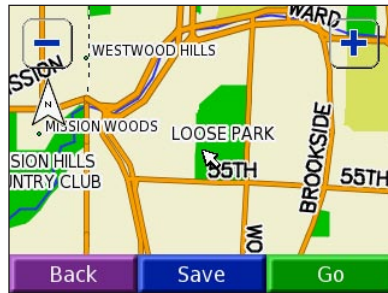Touch and drag anywhere on the Map page to browse the map and view different parts of the map. You can also touch  **Where to?** >  **Browse Map.**




### Tips for Browsing the Map


- Touch the map and drag to view different parts of the map.
- Use the  and  icons to zoom in and out.
- Touch any object on the map. An arrow appears pointing at the object you selected.
- Touch **Go** to navigate to the selected location.
- Touch **Save** to save this location to your **Favorites**.
- If the GPS is turned off, touch **Set Loc.** to set your location to the selected location.
- Touch **Back** to return to the previous screen.

## Viewing Places on the Map

You can view a place you have found on the Map page.

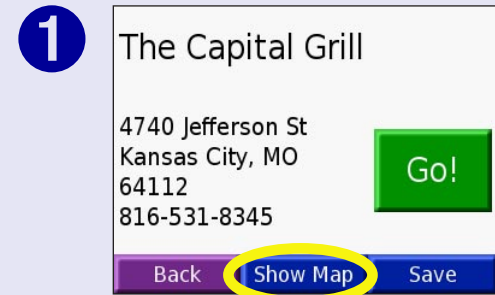


Touch **Show Map.**

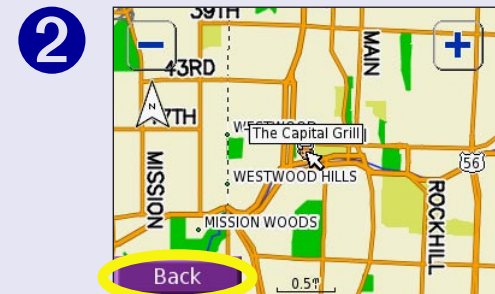

Drag the map and zoom in or out as necessary. Touch **Back** when you are done.

## Expanding Your Search

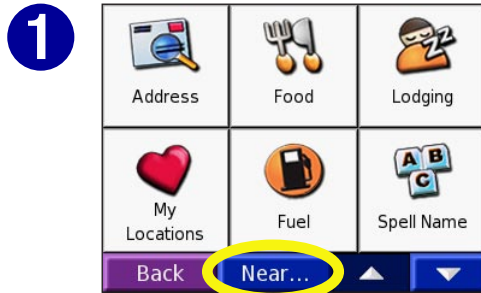

From the Menu page,  
touch **Where to?**  
Then touch **Near**.



Select an option.  
Touch **OK**.

**Where I Am Now**—searches for places near your current location.

**A Different City**—searches for places near the city you enter.

**My Current Route**—searches for places along the route you are currently navigating.


**My Destination**—searches for places near your route destination.



**NOTE:** Your *nüvi* automatically searches for places near your current location.

# Adding a Stop to Your Route

You can add a stop (via point) to your route. The nüvi gives you directions to the via point and then to your final destination.

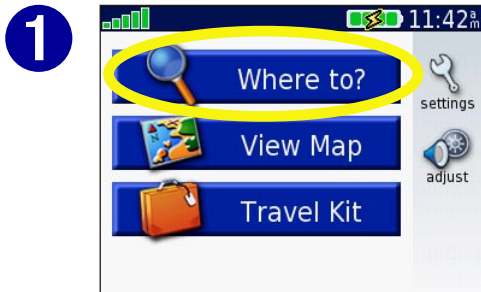

With a route active, touch **Menu** > **Where to?**



Search for the extra stop.



Touch .




Touch **Yes** to add this stop before your destination. Touch **No** to make this your new final destination

**NOTE:** You can add only one via point to your route.

# My LOCATIONS

## Saving Places You Find

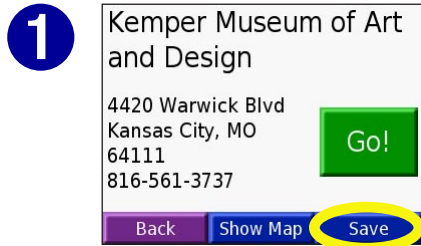

After you have found a place, touch **Save**.



Touch **OK**.

## Finding Saved Places

From the Menu page, touch  **Where to?** >  **My Locations**.



Touch **Favorites**.



Select the place you want to visit.



## Understanding My Locations

You can save all of your favorite places in My Locations. You can also save your home location in My Locations.

## Saving Your Current Location


Touch anywhere on the Map. An arrow points to your current location. Touch **Save**. Your current location is saved in your Favorites.

# Editing Saved Places


After you save a place, you can change the name of the place and its symbol on the map. From the Menu page, touch  **Where to?** >  **My Locations**.




Touch **Favorites**.

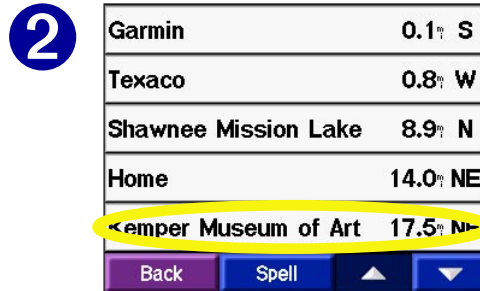

Select the place you want to edit.

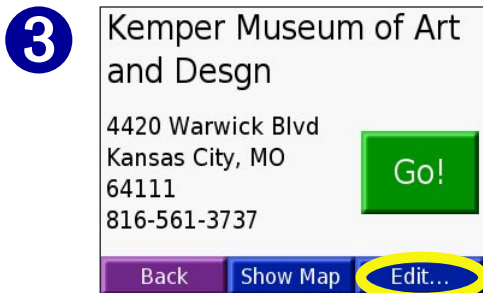

Touch the **Edit** button. The Edit window opens.

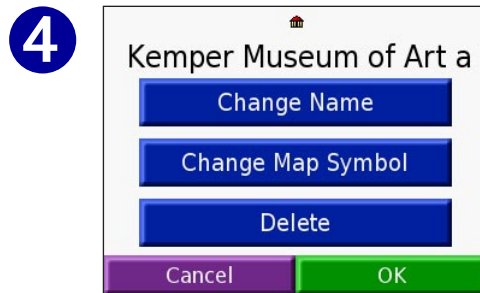

Touch a button to change the name or the map symbol, or to delete the item.

## Changing the Name

To change the name, touch **Change Name**. Enter the new name using the on-screen keyboard. Touch **Done**.

## Changing the Map Symbol


To change the symbol used on the map, touch **Change Map Symbol** and select a symbol from the list.

## Deleting Saved Places


To delete this saved place, touch **Delete**. Then touch **Yes**.

## Setting a Home Location

You can set a Home location for the place you return to most often. After you have set your Home, you can easily **Go Home**.

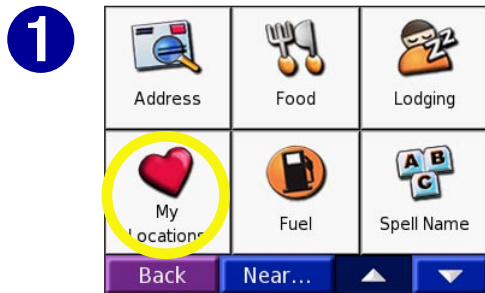

Touch **Where to?**  
> **My Locations**.

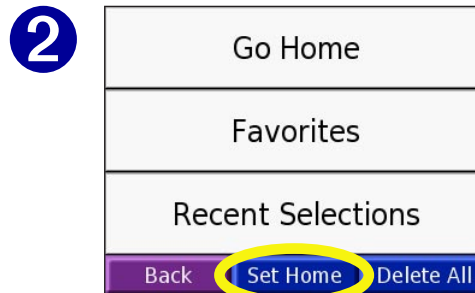

Touch **Set Home**.



Touch an option.

### Going Home



Once your Home location is set, you can route to it at any time by touching **My Locations** and then **Go Home**.


### Changing Your Home Location

Change your Home location by repeating the steps above.



## Finding Recently Found Places

Your nüvi stores the last 50 of your recent finds in Recent Selections. The most recently viewed places appear at the top of the list. From the Menu page, touch  **Where to?** >  **My Locations** to view your recently found items.

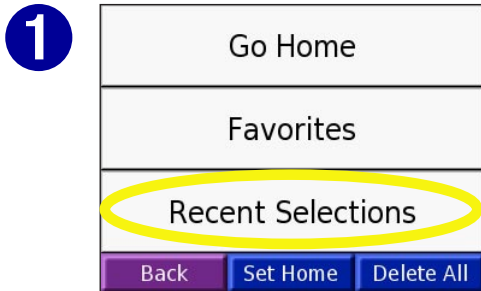


Touch **Recent Selections**.




Select an item from the list.

## Deleting Recently Found Places

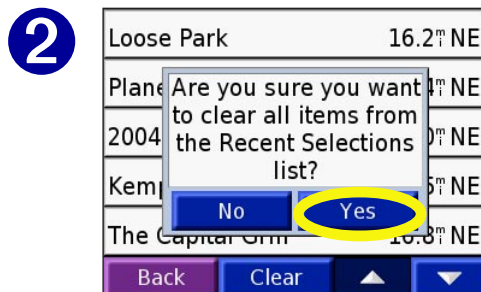

To remove all places from the Recent Selections list, touch **Clear**. Then touch **Yes**.



 **NOTE:** When you touch **Clear**, all items from the list are removed. It does not delete the actual place from your unit.

# VIEWING THE MAP AND OTHER PAGES

## Viewing the Map Page

From the Menu page, touch  **View map** to open the Map page. The position icon  shows your current location. Touch and drag the map to view other areas of the map. Touch areas of the page to see additional information, as described below.



### Map Page while Navigating a Route

When you are following a route, your **Arrival** time is displayed in the lower left corner. The distance to the next turn (**Turn In**) is shown in the lower right corner.

When you are simply driving while viewing the Map page (not following a route), your **Speed** is shown in the lower left corner. The direction you are heading (**Driving**) is shown in the lower right corner.

## Trip Information Page

The Trip Information page displays your current speed and provides helpful statistics about your trip. To view the Trip Information page, select **Speed** or **Arrival** on the Map page.



### Trip Information Page



## Resetting Trip Information

If you want accurate trip information, reset the trip information before beginning a trip. If you make frequent stops, leave the nüvi turned on so it can accurately measure elapsed time during the trip.

Select **Reset Trip** to reset the information on the Trip Information page. Select **Reset Max** to reset the Maximum Speed.

## Current Route Page

The Current Route page displays turn-by-turn instructions for your entire route. Touch the green text bar on the top of the Map page to open the Current Route page. This page displays all turns in the route and the distance between turns. Select a turn on the list to view the Next Turn page for that turn. Touch **Map** to view the entire route on the map.

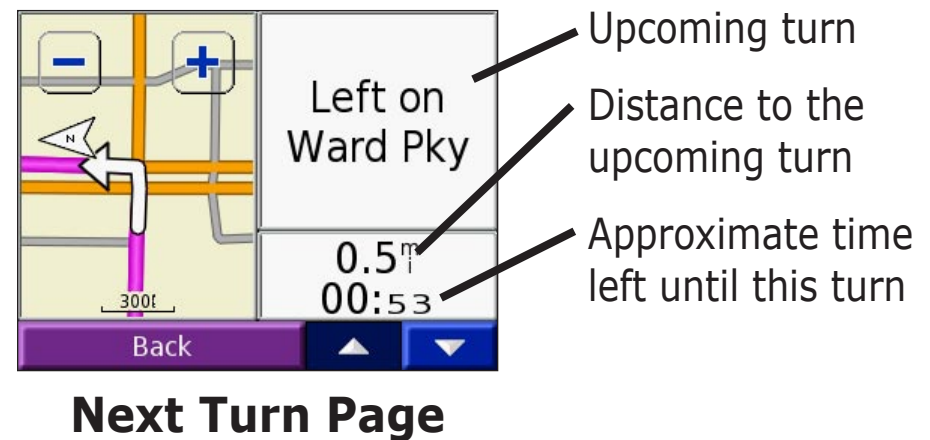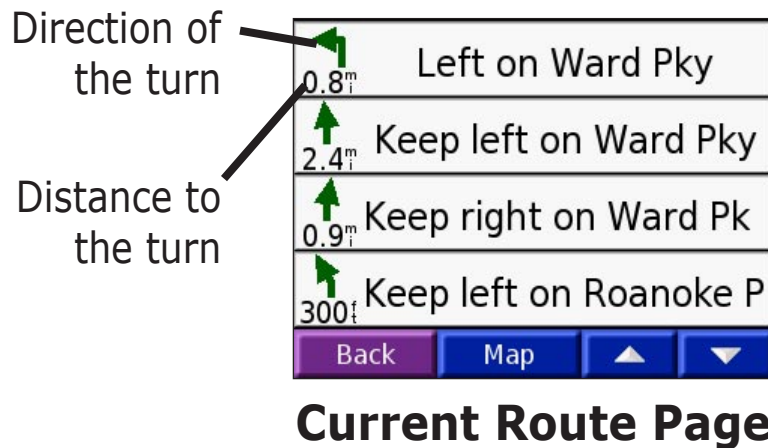

## Next Turn Page

The Next Turn page shows the turn on the map and the distance and time left before you reach the turn. To view an upcoming turn on the map, select **Turn In** on the Map page, or select any turn from the Current Route page.

Use the up and down arrows to view other turns in the route. When you are finished viewing the Next Turn page, select **Back**.

## Adding a Detour to a Route

If you need to take a detour from your current route, select **Detour** from the Menu page of the nüvi. The unit calculates a new route and provides you with new instructions. The nüvi attempts to get you back on your original route as soon as possible.

On some routes, the route you are currently taking might be the only reasonable option. In this case, you cannot take a detour.

## Stopping Your Route

If you want to stop your current route, return to the Menu page and select **Stop**.



Select **Menu** to return to the Menu page.



Select **Stop** to end navigation. Select **Detour** and your unit creates a new route if possible.

# MANAGING FILES ON YOUR nüVI

Your nüvi is able to store files, such as JPEG images and MP3 music files. You can store files in the nüvi's internal memory or on an optional SD Card.


After you connect your nüvi to your computer, you can copy and paste files to the memory or an optional SD Card. Follow the four steps described below and on the next page.

## Step 1: Insert an SD Card (Optional)


The SD card slot is located on the side of the nüvi. To insert or remove the card, press it in until it clicks.

## Step 2: Connect the USB Cable

1. Plug the small end of the USB cable into the connector located on the side of your nüvi.
2. Connect the larger end of the USB cable to an available USB port on your computer.

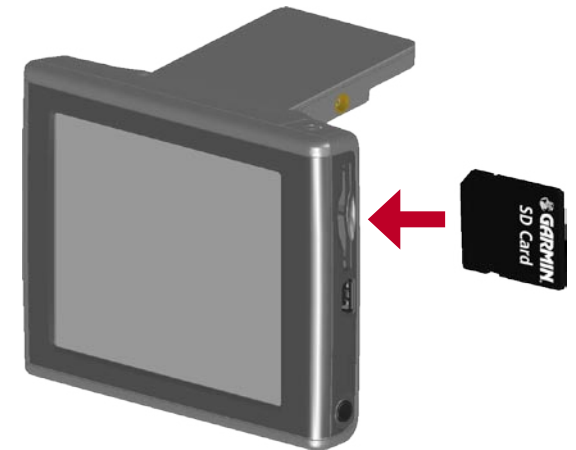


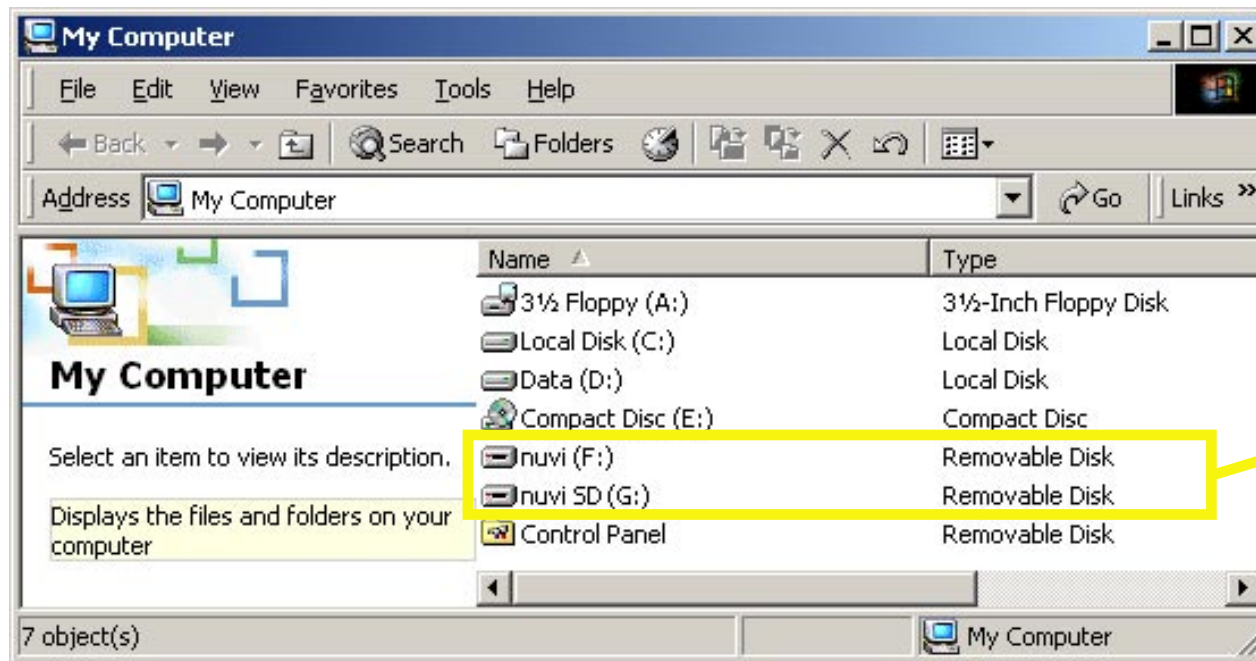
**Inserting an SD Card**

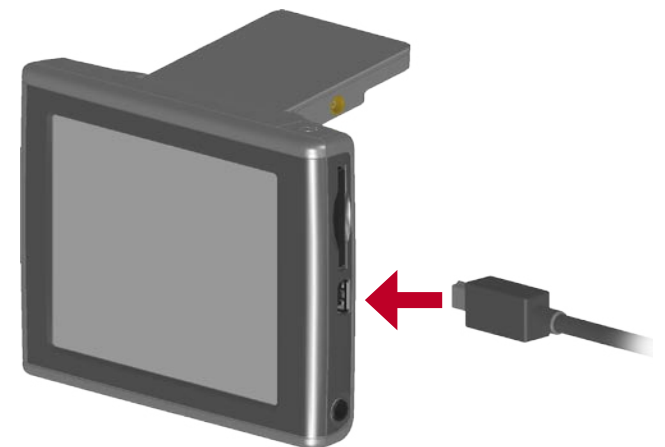

**Connecting the USB Cable**


## Step 3: Transfer Files to Your nüvi

1. Connect the nüvi to your computer as described on the [previous page](#).
2. Double-click the **My Computer** icon  on your computer's desktop.
3. Browse your computer for the file you want to copy.
4. Highlight the file and select **Edit > Copy**.
5. Open the "nüvi" or "nüvi sd" drive ([see the next page for information](#)).
6. Select **Edit > Paste**. The file then appears in the list of files on the nüvi memory or SD card.



**nüvi  
Removable  
Disk Drives**

## Step 4: Eject and Unplug the USB Cable

When you are finished transferring files, double-click the **Unplug or Eject**  icon in your system tray. Select "USB Mass Storage Device" and click **Stop**. Select the nüvi drives and click **OK**. You can disconnect your nüvi from your computer now.


## Information about Your nüvi Drives

After you connect your nüvi to your computer, one or two additional drives appear in your computer's list of drives: "nüvi" and possibly "nüvi sd."

"nüvi" is the available storage in the nüvi's internal memory. "nüvi sd" is the SD card inserted in your nüvi. If you do not have an SD card inserted in your nüvi, the "nüvi sd" drive does not appear in the list.

## Additional Help

For troubleshooting tips for using the nüvi with your computer to transfer files, see [page 55](#).

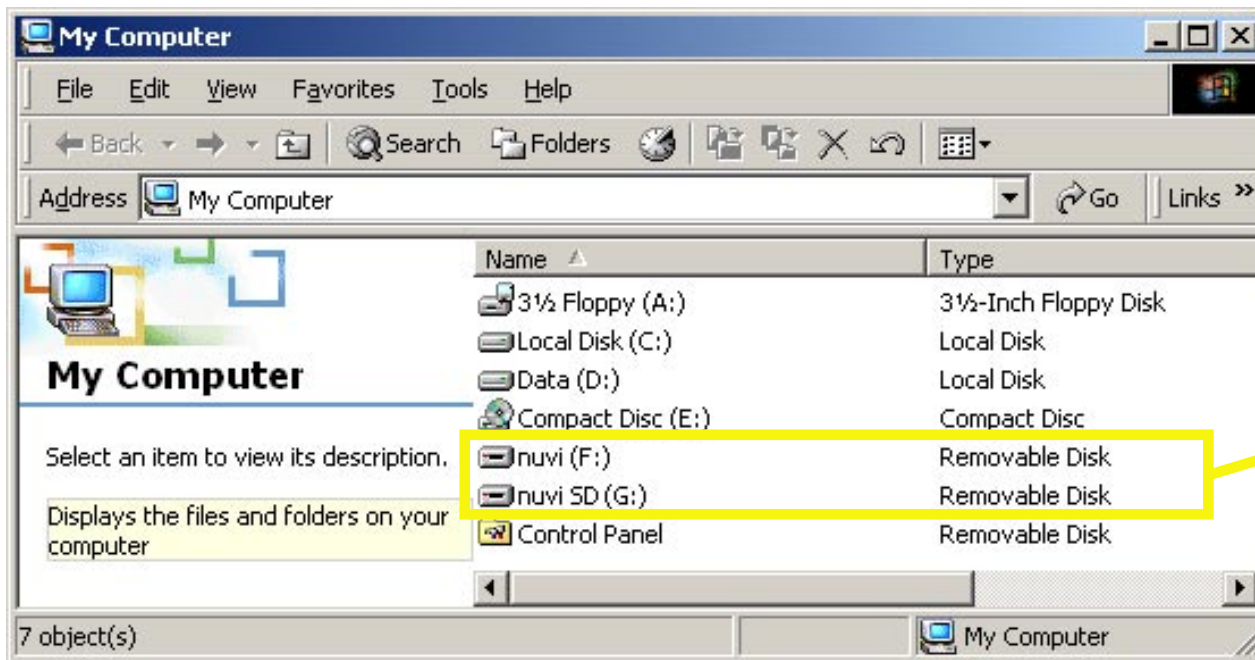

**nüvi  
Removable  
Disk Drives**



**NOTE:** On some Windows Operating Systems, the nüvi drives may not be named automatically. See your Windows help file or [page 56](#) of this manual to learn how to rename the drives.




## Deleting Files from Your nüvi

You can delete files from your nüvi just as you would delete files from your computer.

With the nüvi connected to your computer, open My Computer. Open your “nüvi” or “nüvi sd” drive. Highlight the file that you want to delete from your nüvi and press the **Delete** key on your computer’s keyboard.

## Supported File Types

- MP3 music files
- JPG image files
- AA audible book files
- GPI custom POI files from Garmin’s POI Loader (see [page 51](#))
- GPX waypoint files from MapSource (see [page 54](#))
- Maps from MapSource

 **NOTE:** The nüvi does not support iTunes M4A/M4P files.



**CAUTION:** If you are not sure about a file’s purpose, do **NOT** delete it. Your nüvi memory contains important map data files that should **NOT** be deleted. Be especially cautious of files located in folders entitled “Garmin.”

# USING THE TRAVEL KIT

The travel kit provides many features that are helpful when you are traveling across town or across the globe.


## Using the Language Guide


The Garmin Language Guide puts data from Oxford's multilingual resources and five bilingual dictionaries in the palm of your hand. A sample version of the Garmin Language Guide is provided. To purchase the Garmin Language Guide accessory, go to the Garmin Web site at <http://www.garmin.com/products/nuvi/> and click the **Accessories** link. You can also contact your Garmin dealer to purchase nüvi accessories.

 **NOTE:** Only nüvi 350 models can verbally translate words and phrases in the Language Guide.

## Loading the Language Guide

After you have received your Garmin Language Guide SD Card, you must load the data on your nüvi. Follow the directions on the package or in the nüvi help file to learn how to load the data into your unit.

 **TIP:** After you load the Garmin Language Guide onto your nüvi, you can use the SD card for other data, such as MP3s or Audible Books.

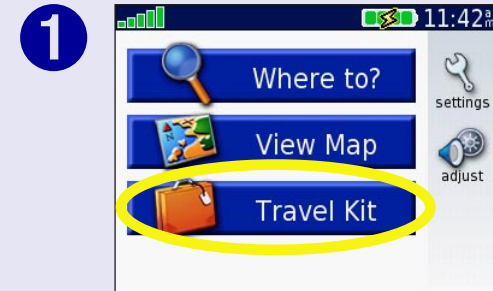

From the Menu page, touch  **Travel Kit.**




Touch the arrows to view all items in the Travel Kit. Touch the item you want to open.

All Dictionary, Word and Phrase content is © Oxford University Press. Voice files are © Scansoft.

## Translating Words and Phrases


From the Menu page, touch  **Travel Kit** >  **Language Guide**.

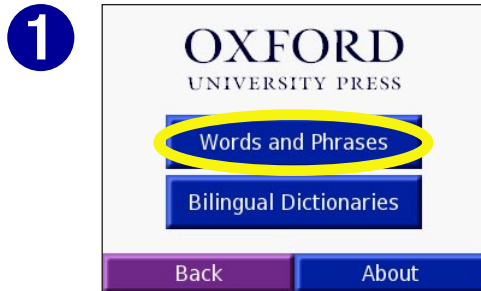

Touch **Words and Phrases**.




Touch **Language**.

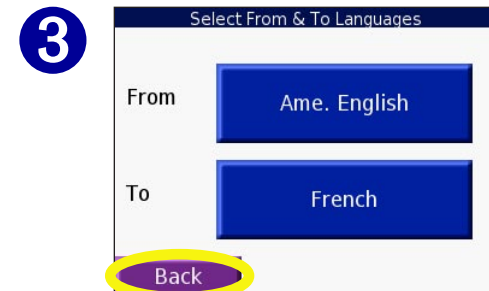

Select the **From** and **To** languages and touch **Back**.




Select a category.

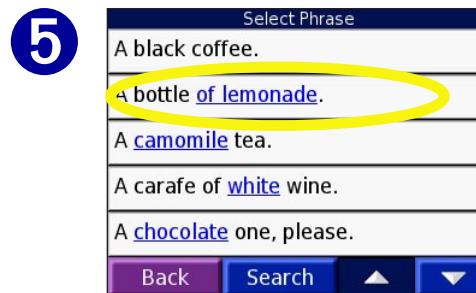

Search for a phrase and touch it.



Touch  to hear the translation.


### Words and Phrases Tips

- Use **Keywords in Phrases** to find all of the phrases that contain a specific word.
- Touch **Search** to spell the word.
- Touch an underlined word to replace the word.
- Touch **More Variations** to change words in the phrase or get a different translation.
- If you cannot find what you are looking for in **Words and Phrases**, look in the **Bilingual Dictionaries**.


## Using the Bilingual Dictionaries

The Garmin Language Guide provides five bilingual dictionaries. You can easily translate words and hear their pronunciation using the Bilingual Dictionaries.

From the Menu page, touch  **Travel Kit** >  **Language Guide**.

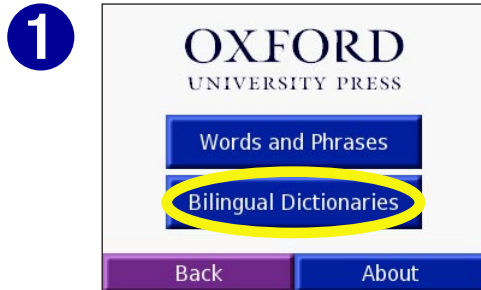

Touch **Bilingual Dictionaries**.

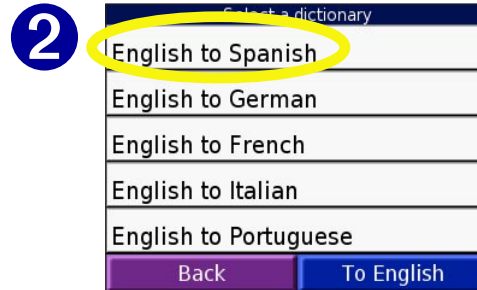

Touch a translation option. If necessary touch **To English**.



Search for the word and touch it.





Touch  to hear the word spoken.

### Bilingual Tips


- Touch **Search** to spell the word or the beginning of the word.
- Touch **Legend** to view the legend for the selected language. The Legend contains information on abbreviations, labels, and pronunciation symbols used in each dictionary.

# Using the Travel Guide

Much like a paper travel guide, the Garmin Travel Guide provides detailed information about places, such as restaurants and hotels. Your nüvi comes with a few sample travel guide points; to purchase the Travel Guide accessory, go to the Garmin Web site at <http://www.garmin.com/products/nuvi/> and click the **Accessories** link. You can also contact your Garmin dealer to purchase nüvi accessories. From the Menu page, touch  **Travel Kit** > Touch  **Travel Guide**.




Touch **Browse**.

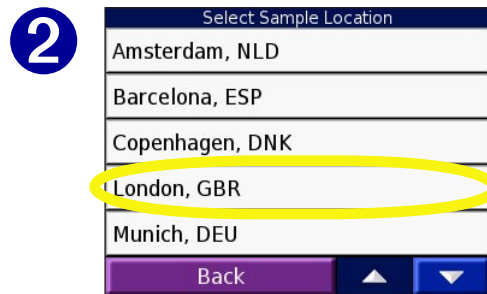

Touch a location.



Touch a category.  
Touch a sub-category, if necessary.

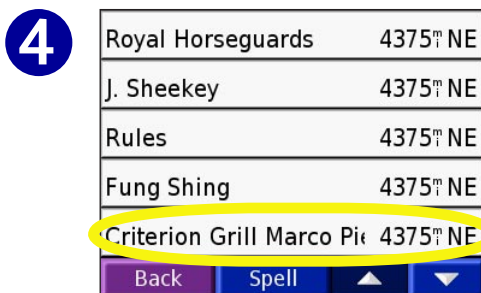

Touch an item.




Touch the arrows to view more information about the location.




Touch **Go** to go to the location.  
Touch **Map** to display this item on a map.

# Listening to MP3 Files

From the Menu page, touch  **Travel Kit** >  **MP3 Player**.

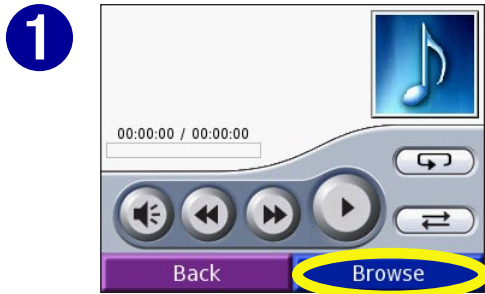

**1** Touch **Browse**.

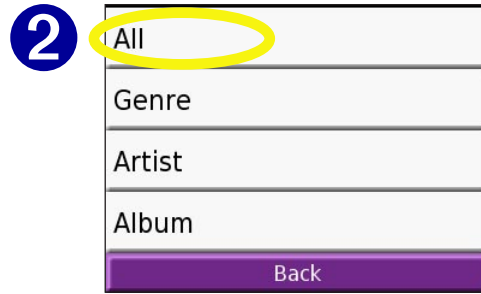

**2** Select a category.





**3** To play the songs from the top of the list, touch **Play All** or touch the song you want to start with.





**4** Touch **Back** to exit the MP3 page to view other pages, such as the map.

## Playing Music

Touch  to adjust the volume.


Tap  to go to the beginning of the song; touch and hold to skip back.


Tap  to skip to the end of the song; touch and hold to skip ahead.

Touch  to pause the song.

Touch  to repeat.

Touch  to shuffle.

 **NOTE:** The nüvi plays MP3 files only; it does not support iTunes M4A/M4P files.


 **SHORTCUT:** When you are listening to music, quickly press the **Power** button twice to jump from any page (such as the map) back to the MP3 player page. Press **Back** to return to the previous page you were viewing (for example, the map).

# Listening to Audible Books

Your nüvi provides several sample Audible books for you to listen to. These sample books are only portions of the book: to hear an entire book, purchase it from Audible.com. See [pages 27–29](#).




**1** From the Menu page, touch  **Travel Kit** >  **Audible Book Player**.

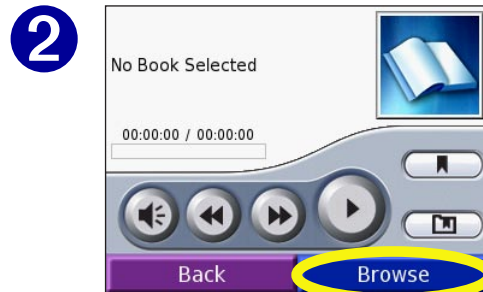

**2** Touch **Browse**.





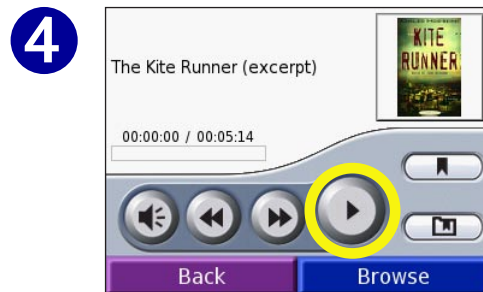

**3** Touch a book title



**4** Touch .




## Moving around the Book

  Touch  to skip a section and  to jump back.

Press and hold  and  to move forward or backward through the book.

Touch the book cover art to view information about the book.

## Using Bookmarks

To create a bookmark, touch  and then touch the **Bookmark** button. To view your bookmarks, touch  and then touch a bookmark. Touch  to listen to the book from the bookmark.



**SHORTCUT:** When you are playing an audible book, quickly press the **Power** button twice to jump from any page (such as the map) back to the audible book player page. Press **Back** to return to the previous page you were viewing (for example, the map).

## **Loading Audible Books to Your nüvi**

To purchase a book, go to <http://garmin.audible.com> and create an Audible.com account. After you create an account, download AudibleManager to your personal computer. Then you can purchase a book and download it to your nüvi.

Before you can listen to an audible book, you must activate your nüvi. The first time you open AudibleManager, you are led through the activation process. See [page 29](#) for more information.


After activating your nüvi, follow these three steps to load an audible book to your nüvi: connect your nüvi to your computer, download the book to your computer, and transfer the book to your nüvi.

### **Step 1: Connect your nüvi to the computer**

1. Connect the mini-USB connector to the side of the nüvi.
2. Connect the larger end of the cable to an available USB port on your computer.
3. If you want to load the book on your SD card, insert the SD card in the slot in your nüvi.

### **Step 2: Download the book to your computer**



Refer to AudibleManager's Help file for detailed instructions about downloading books to your computer and loading them on your nüvi.


1. From your computer's desktop, double-click the AudibleManager icon to open AudibleManager.
2. Click the **Go to My Library Online**  button on the top center of the window. Your Audible.com library opens, displaying the books you have purchased.
3. Click **Get it Now** to download the book to your computer.
4. Select a format and click **Download**.



### Step 3: Transfer the book to your nüvi

Refer to AudibleManager's Help file for detailed instructions about downloading books to your computer and loading them on your nüvi. You must first activate your nüvi before transferring books: see [page 29](#).


1. Open AudibleManager.
2. Select the Internal Drive or External Drive (SD card) in the lower portion of the window.
3. Select the book title. Click the **Add to Garmin - nüvi**  button in the top left corner.
4. Select how much of the book you want to load. You can load small sections at a time to save memory. Click **OK**. AudibleManager transfers the book to your nüvi.
5. When you are finished, double-click the **Unplug or Eject Hardware** icon . Click **Stop** and then **OK**.

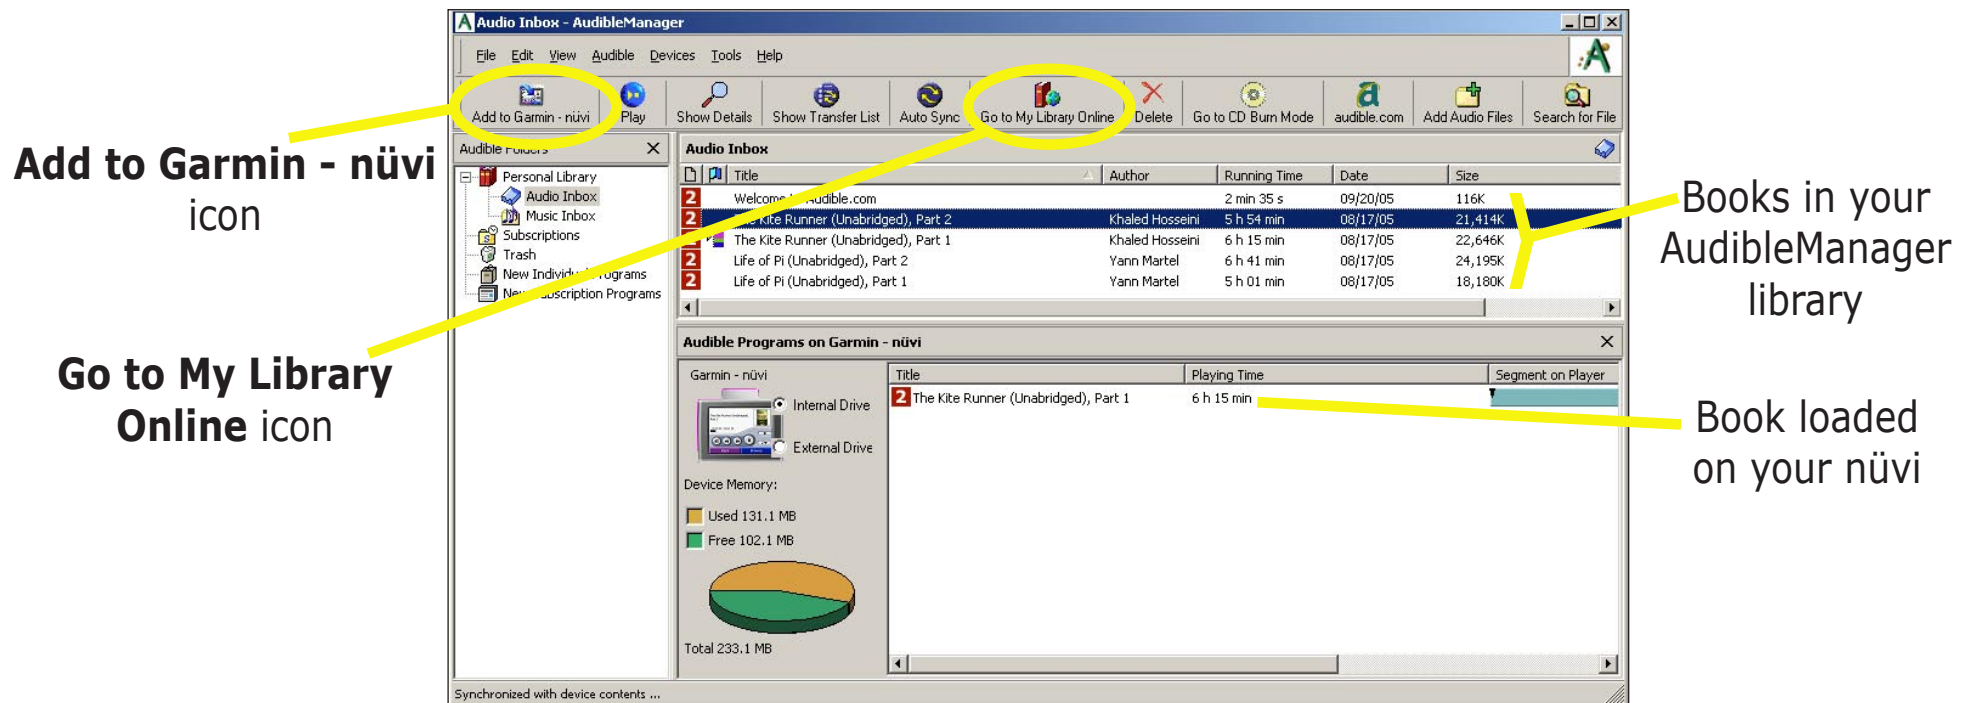

**AudibleManager Program**

## Activating Your nüvi with AudibleManager

Before you can listen to a book you have downloaded from Audible.com, you must activate your nüvi. This is a one time process.


1. Disconnect your nüvi from your computer: double-click the **Unplug or Eject**  icon in your system tray. Select "USB Mass Storage Device" and click **Stop**. Select the nüvi drives and click **OK**. Unplug the USB cable from your nüvi.
2. From your computer's desktop, double-click the AudibleManager icon to open AudibleManager.
3. In the "Choose your device" window, click the box next to "Garmin - nüvi" to place a check mark in the box. Click **Next**.
4. Enter your Audible user name and password. Click **Next**.
5. Connect your nüvi to your computer using the USB cable. Wait a few moments for AudibleManager to detect your nüvi.
6. Select **Activate my player(s)** and click **Next**.
7. Please wait while AudibleManager attempts to activate your nüvi. Upon completion, you will receive a message saying the process has been successful. Click **Finish**.



**NOTE:** *If you are unable to connect to the Internet or have any other problems activating your nüvi, refer to the Audible Manager Help File. Select **Help** from the menu and then click **Help**.*

# Viewing Pictures

You can view pictures that you have stored in your nüvi using the Picture Viewer.

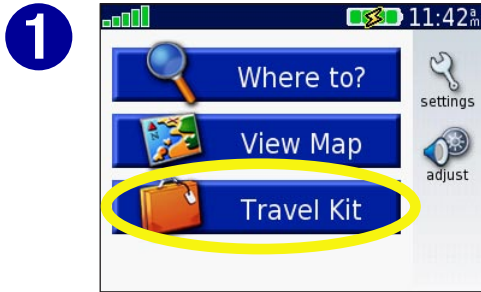

From the Menu page, touch  **Travel Kit**.





Touch  and then  **Picture Viewer**.



Touch a picture to view a larger image of it.




Touch  and  to scroll through the images.

**Viewing a Slide Show**  
 Touch **Slide Show** to start a slide show, which displays each image for a few moments and then displays the next image.  
 Touch anywhere on the screen to stop the slide show.

 **TIP:** Touch **Rotate** to rotate the image 90°.


# Using the World Clock

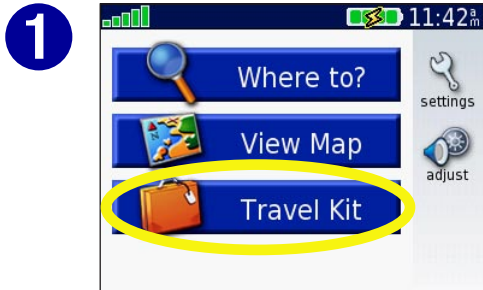

From the Menu page, touch  **Travel Kit**.



Touch  and then touch  **World Clock**.

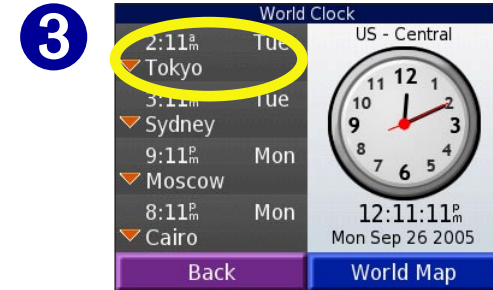

To change a city listed, touch the city.



Select a new time zone (or city). Touch **OK** when done.




Touch **World Map** to view a map.



Nighttime hours are shown in the shaded area. Touch **World Clock** to view the clocks again, or **Back** to exit.

# Converting Currency

From the Menu page, touch  **Travel Kit**. Touch  and then  **Currency Converter**.

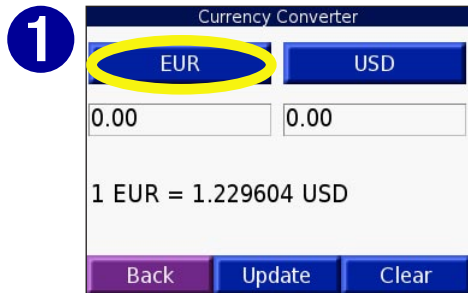

1 Touch to change the currency.




2 Select a currency and touch **OK**.



3 Touch to change the currency.




4 Select a currency and touch **OK**.

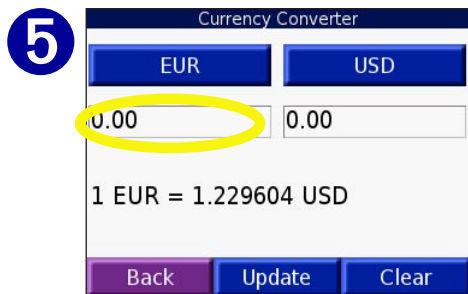

5 Touch the blank rectangle under the currency rate you want to convert.




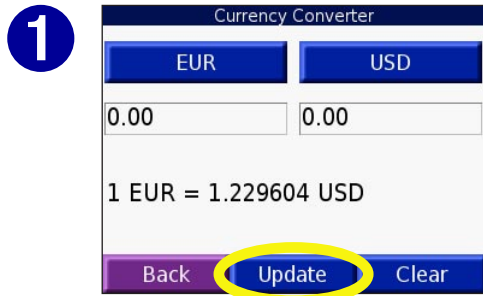
6 Enter the number. Touch **Done**.

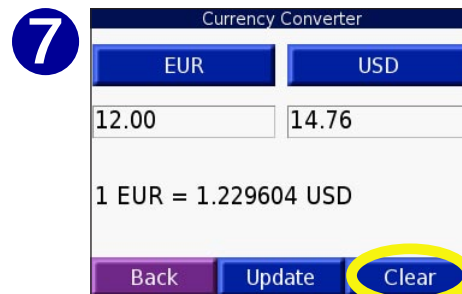

7 Touch **Clear** to convert a different value.

## Updating Conversion Rates

The nüvi allows you to update the currency rates manually so that you are always using the most current conversion rates. From the Menu page, touch **Travel Kit**. Touch  and then  **Currency Converter**.




Touch **Update**.



Touch the rate you want to update.



Touch  to erase the current rate. Enter a new rate and touch **Done**.




Touch **Save** to finish.




**TIP:** Touch **Restore** to use the original conversion rate.




**TIP:** Touch and hold  to erase the entire entry.

# Converting Measurements


From the Menu page, touch **Travel Kit**. Touch  and then  **Measurement Converter**.

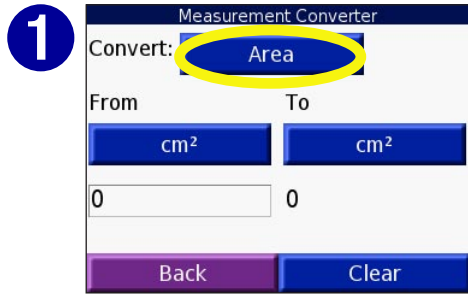


**1** Touch the button.

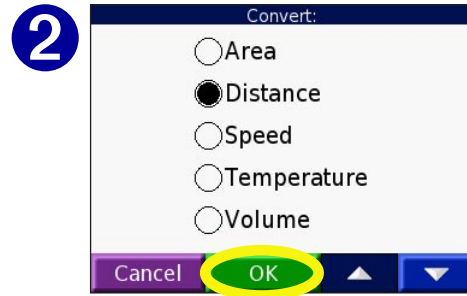


**2** Select a type of measurement and touch **OK**.

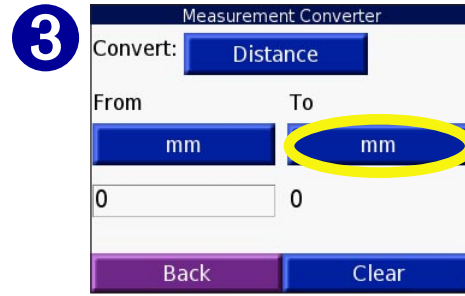


**3** Touch **From** or **To**.

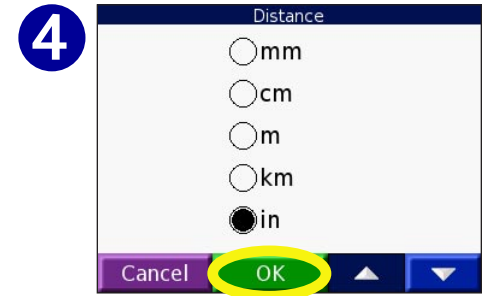


**4** Select a unit of measure and touch **OK**.

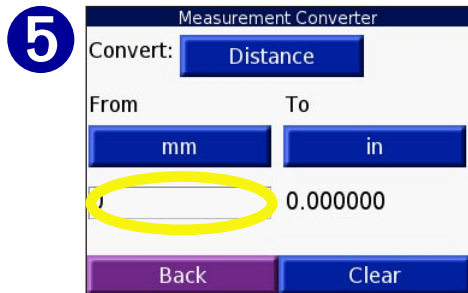

**5** Touch the blank rectangle to enter a value.

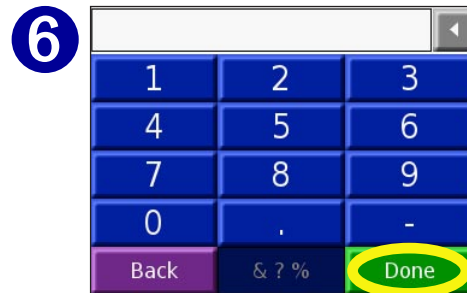


**6** Enter a value and touch **Done**.

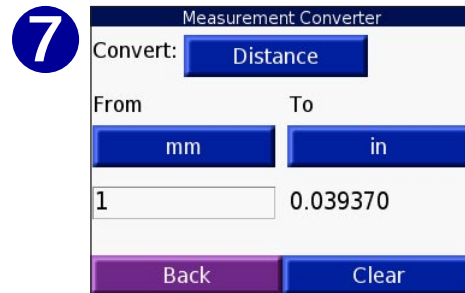

**7** Touch **Clear** to enter another measurement.

# Using the Calculator


From the Menu page, touch **Travel Kit**. Touch  twice and then  **Calculator**.

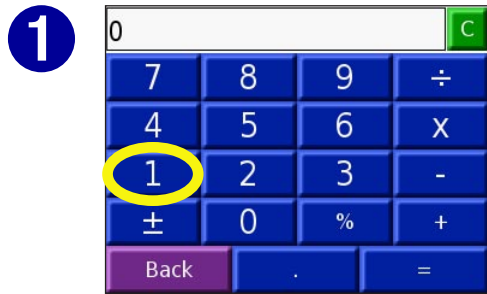


**1** Enter the first number of your calculation.



**2** Touch an operator ( $\div$ ,  $\times$ ,  $-$ , or  $+$ ).

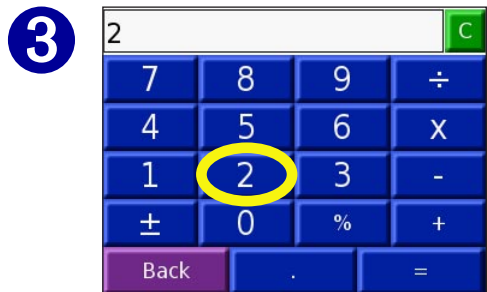


**3** Enter the second number of your calculation.

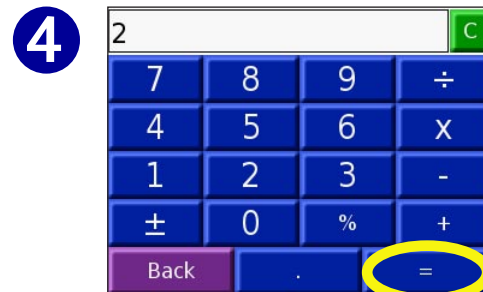

**4** Touch  $=$ .




**5** Touch  to make a new calculation.

Touch  $\cdot$  to add a decimal.

Touch  $\pm$  to make the number negative or positive.

Touch  $\%$  to make the number a percent (0.01).

Touch  to clear the entry.



# CUSTOMIZING THE nüVI

To change nüvi settings, touch  from the Menu page. See the following pages for more information.



Touch  to display the Settings page.



Select the setting you want to change.

## Restoring Settings

To restore all settings you have changed, press the **Restore Settings** button, as shown below.



To restore settings for an individual category, such as Map, touch the Restore Settings button on that particular page.

# Changing the Map Settings


**Map Detail**—adjust the amount of detail shown on the map. Displaying more detail causes the map to redraw slowly.

**Map View**—change the perspective of the Map page.

- **Track Up**—display the map in 2 dimensions (2D) with your direction of travel at the top.
- **North Up**—display the map in 2D with North at the top.
- **3D View**—display the map in 3 dimensions (3D), Track Up orientation. This is the default map view.

**Map Info**—view the maps loaded on your nüvi and their version.

**Restore**—restore the original map settings.

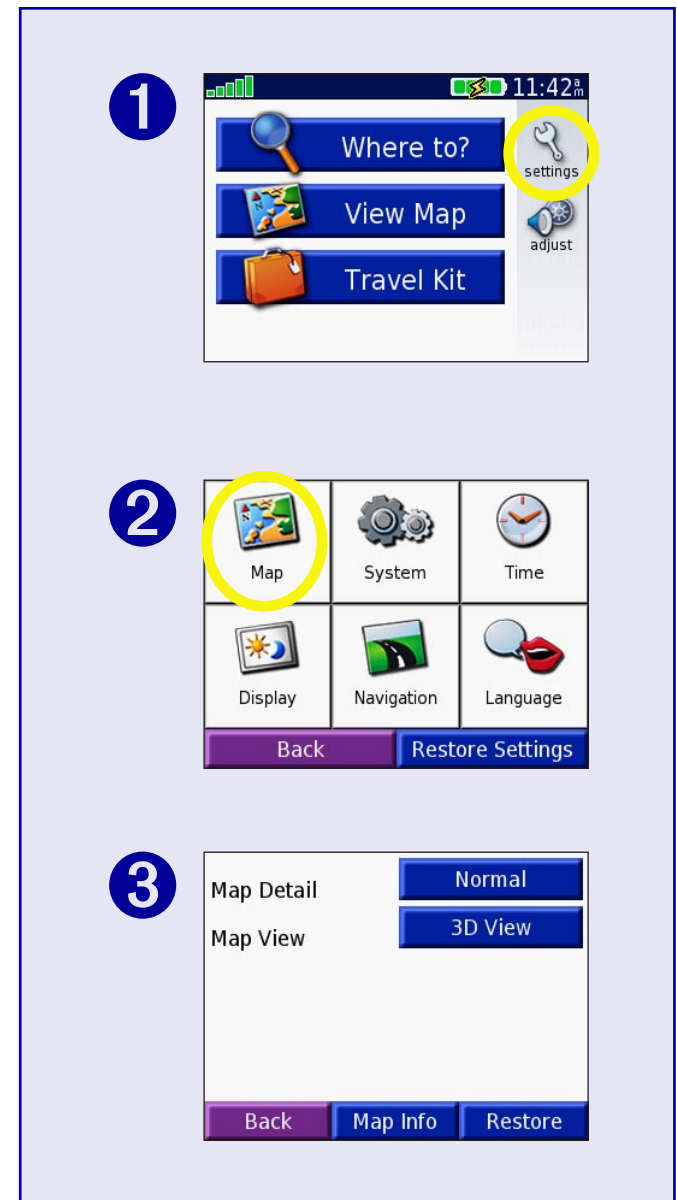

# Changing the System Settings

**WAAS/EGNOS**—enable and disable WAAS/EGNOS. For information about WAAS, go to <http://www.garmin.com/aboutGPS/waas.html>.

**Units**—change units of measure to kilometers (Metric) or miles (Statute).

**Safe Mode**—disable or enable the Safe Mode feature to improve driver safety. When your vehicle is moving, Safe Mode disables all unit functions that require significant operator attention and could become a distraction while driving.

**Touch Tones**—disable or enable the tone that sounds each time you touch the screen.

**Proximity Alarms**—disable or enable the alerts when you approach Custom POIs. This option is only visible if you have loaded Custom POIs. See [page 51](#) for more information about Custom POIs.

**About**—display your nüvi’s software version number, unit ID number, and audio version number. This information is needed when you update the system software (see [page 53](#)) or purchase additional map data (see [page 54](#)).

**Restore**—restore the original system settings.




# Changing the Time Settings

**Time Format**—choose a 12-hour, 24-hour, or UTC time format.

**Time Zone**—select a time zone or nearby city from the list.

**Daylight Saving**—set to On, Off , or Auto if it is available.

**Restore Settings**—restore the original time settings.

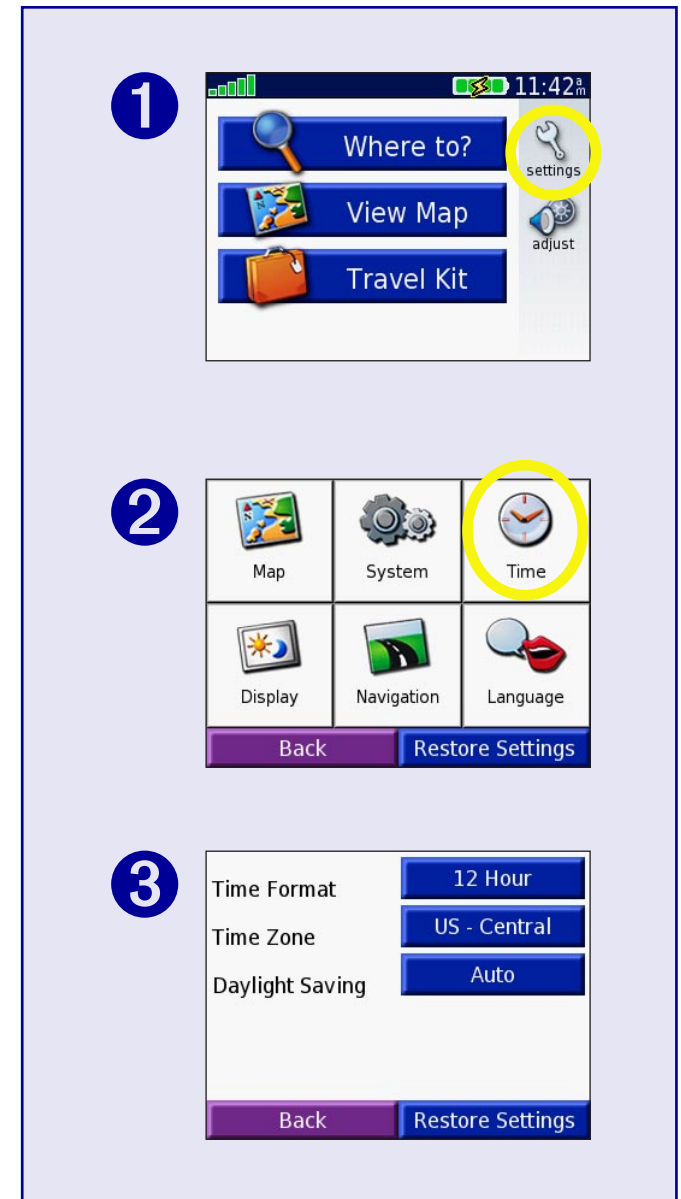

## Changing the Display Settings


**Color Mode**—select Daytime for a light background, Nighttime for a black background, or Auto to automatically switch between the two.

**Backlight Timeout**—select the length of time the backlight stays on after external power is removed. Reducing the time the backlight stays on increases your battery life.

**Touch Screen**—recalibrates (or realigns) the touch screen to respond properly. Touch **Recalibrate** and then follow the directions.

**PictureIt**—enables you to take a screen shot when you quickly press and release the **Power** button. The screen shots are saved in the “PictureIt” folder on your “nuvi” drive.

**i NOTE:** *When PictureIt is On, the Quick Settings screen does not open when you press the **Power** button.*

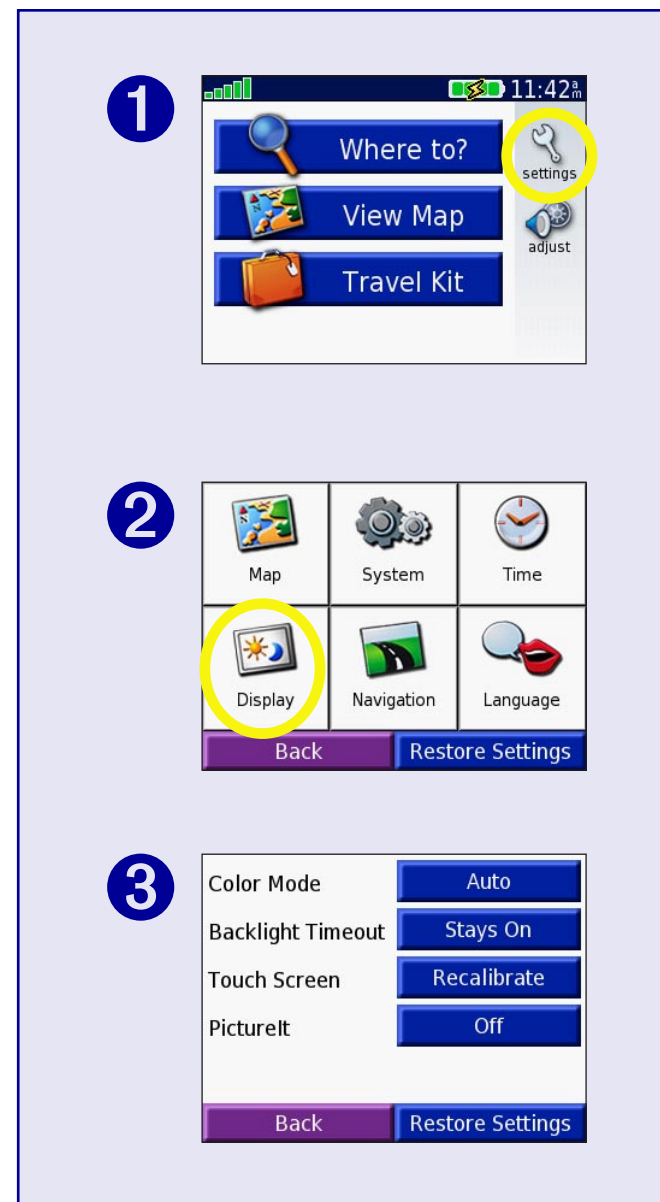

# Changing the Navigation Settings

**Route Preference**—select a preference for calculating your route. Select Faster Time to calculate routes that are faster to drive but can be longer in distance. Select Shorter Distance to calculate routes that are shorter in distance but can take more time to drive.

**Vehicle**—specify your vehicle type to optimize routes.


**Avoidances**—touch the Enabled button to access the road types. Select the road types you want to avoid on your routes. The nüvi uses these road types only if alternative routes take you too far out of your way or if no other roads are available. If you have an FM TMC Traffic Receiver, you can also avoid traffic incidents.



**Attention Tone**—turn on or off the attention tone.

**Voice Prompts**—select when you want to nüvi to announce route navigation and system status.

**Restore Settings**—restore the original navigation settings.

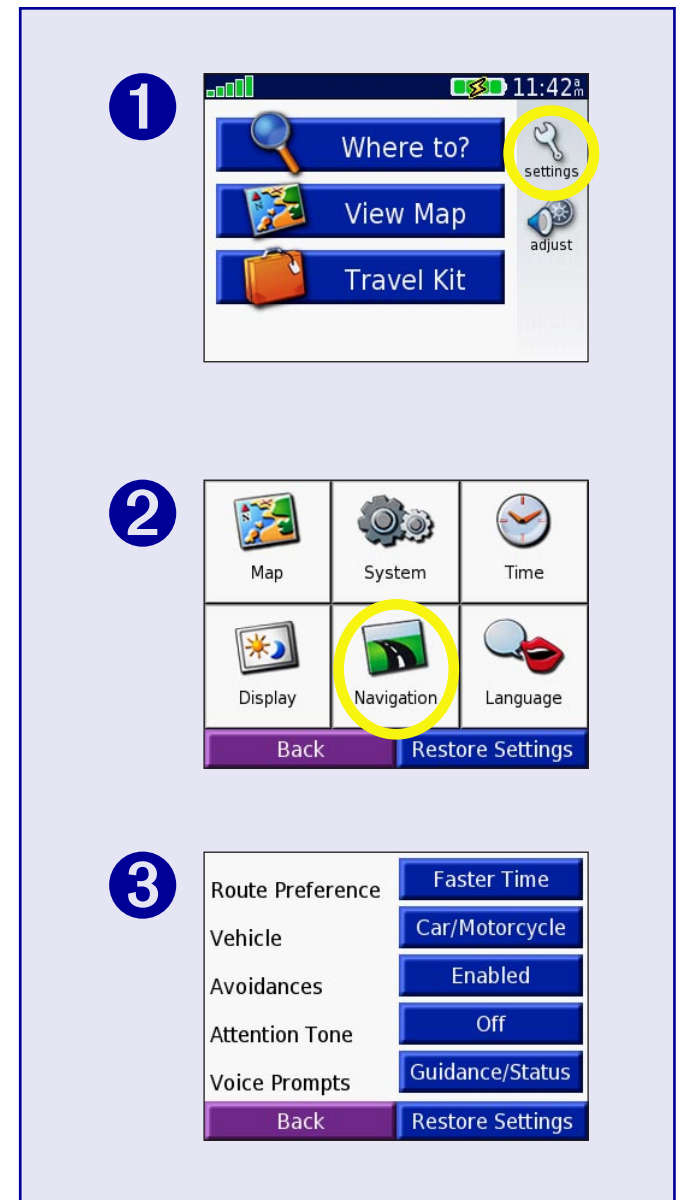

# Changing the Language Settings


**Text Language**—change all on-screen text to the selected language. Changing the Text Language does not change the language of map data, such as street names and places or user-entered data.

**Voice Language**—change the language for all voice prompts and messages. Your nüvi contains two different types of voice languages: text-to-speech and pre-recorded.

Languages noted with a person's name are text-to-speech (TTS) voices: for example, American English-Jill is a text-to-speech voice. The text-to-speech voices “read” and “speak” the same words that are displayed on the nüvi. The voices have an extensive vocabulary, and they pronounce the street names as you approach turns.

The pre-recorded voices have a limited vocabulary and do not speak names of locations or streets.

**Restore Settings**—restore the original language settings.

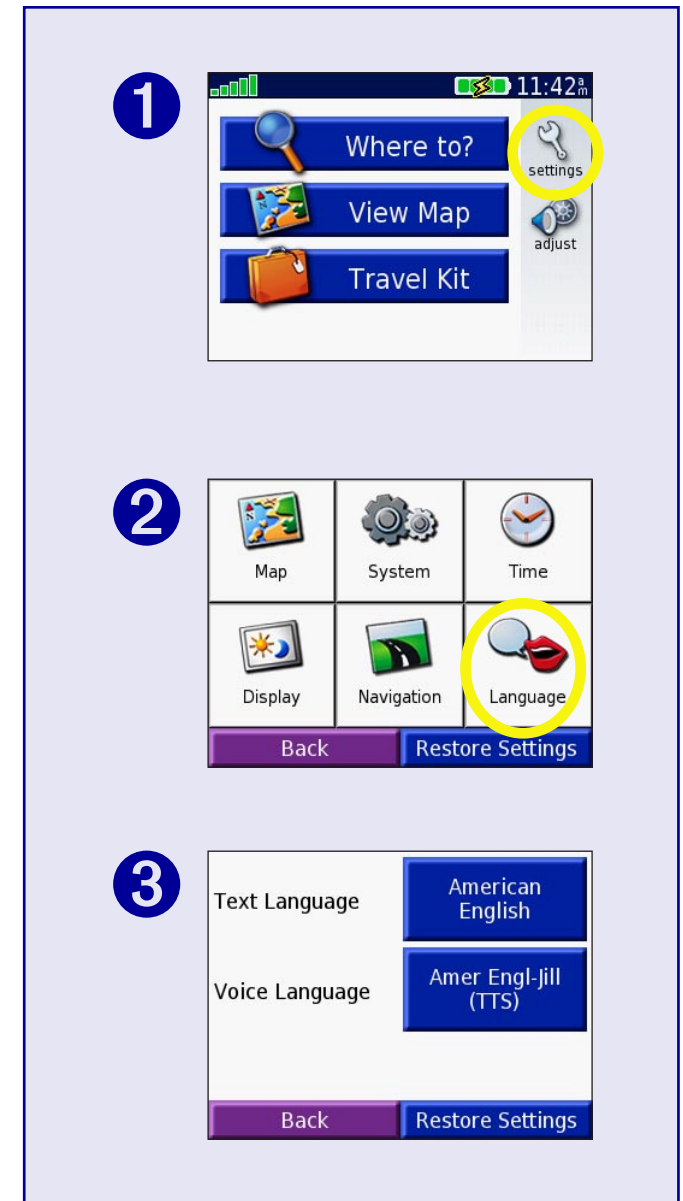

# FM TMC TRAFFIC INFORMATION


Using an optional Garmin FM TMC Traffic Receiver, your nüvi can receive and use traffic information broadcast over the FM Radio Data System (RDS). When a traffic message is received, your unit displays the event on the map and can change your route to avoid the traffic incident. For more information about the FM TMC Traffic Receiver, visit the Garmin Web site ([www.garmin.com](http://www.garmin.com)). For participating subscription providers, refer to the Garmin Web site at <http://www.garmin.com/fmtraffic>.

## Connecting the FM TMC Traffic Receiver to Your nüvi

Place your nüvi in the auto mount and plug into the 12-volt adapter. Plug the Traffic Receiver's mini-USB cable into the mini-USB connector located on the side of the nüvi.



**NOTE:** You can only access the traffic information and settings if the nüvi is connected to external power and an FM TMC Traffic Receiver, such as a GTM 10.

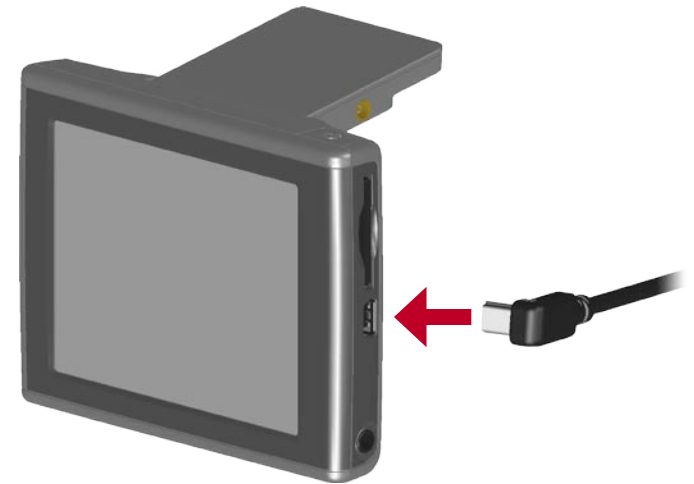


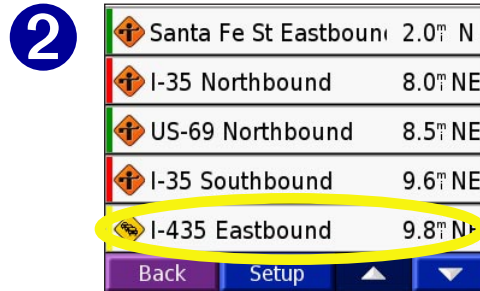
**Connecting the FM TMC Traffic Receiver to the nüvi**




# Viewing Traffic Events



From the Menu page, touch .



Select an item to view details.

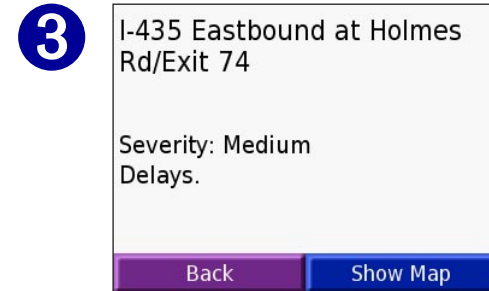


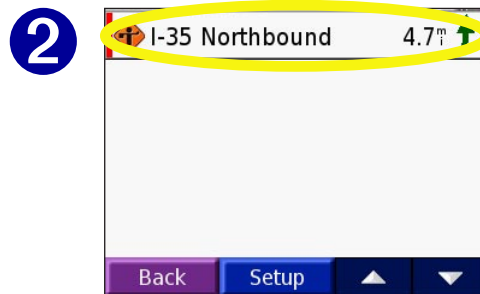
Select an option.

# Avoiding Traffic


The map page displays a  when there is a traffic event on your current route or on the road you are driving. When you are following a route, touch the  to avoid the traffic.



From the map page, touch .



Select an item to view details.

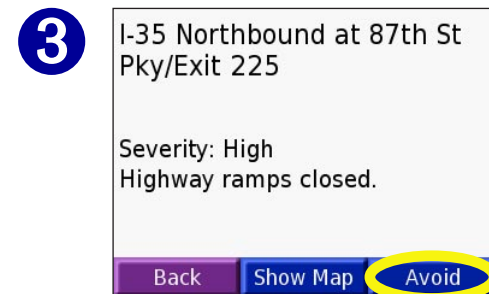

Touch **Avoid**.

# Traffic Symbols

## North American Symbols



Road Condition



Road Construction



Congestion



Accident



Incident






Information

## International Symbols













## Color Code

The bars to the left of the traffic symbols indicate the severity of the traffic incident:

-  = Low severity; traffic is still flowing.
-  = Medium severity; traffic is a bit congested.
-  = High severity; traffic is heavily congested or stopped.

Color code

Traffic Symbol


 	Santa Fe St Eastbound	2.0 <sup>m</sup> N
 	I-35 Northbound	8.0 <sup>m</sup> NE
 	US-69 Northbound	8.5 <sup>m</sup> NE
 	I-35 Southbound	9.6 <sup>m</sup> NE
 	I-435 Eastbound	9.8 <sup>m</sup> NE


Back Setup ▲ ▼


## Traffic Events List

# Adding a Subscription


Your FM TMC Traffic Receiver may have a trial subscription, or you may be in an area with free service. You can also add subscriptions to expand your service area. You will need your FM TMC Traffic Receiver's Unit ID; see below for directions. Go to <http://www.garmin.com/fmtraffic> to purchase a traffic subscription and obtain a 25-character traffic subscription code.

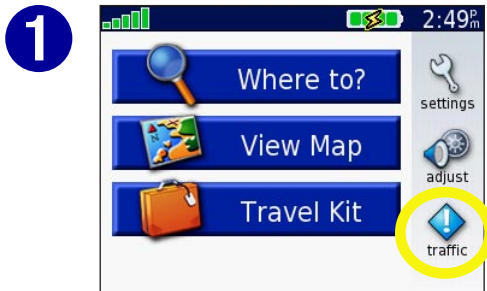


From the Menu page, touch .

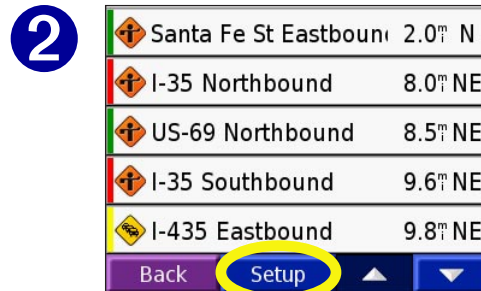

Touch **Setup**.

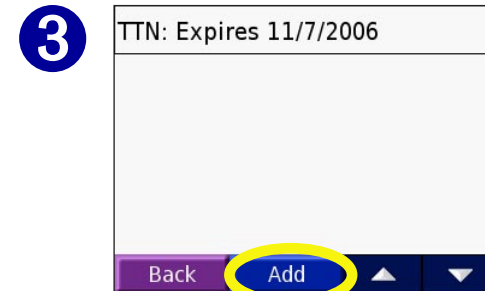

Touch **Add**.

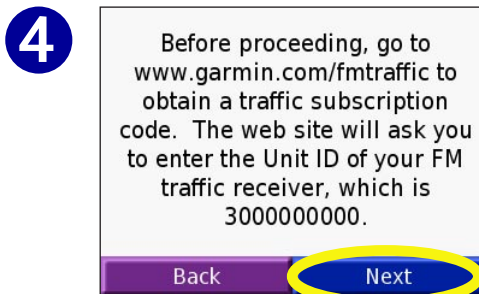

Touch **Next**.



Enter the code and touch **Done**.



Touch **Done**.

# APPENDIX

## Mounting Your nüvi


For a tight grip, clean and dry your windshield before mounting the suction cup.

### To mount the suction cup mount:


1. Place the suction cup on the windshield.
2. Flip the lever back, toward the windshield.
3. Open the antenna. Fit the bottom of your nüvi into the cradle.
4. Tilt your nüvi back until it snaps in place. If necessary, rotate the cradle.
5. Plug the small end of the cable into the back of the mount; plug the other end into a 12/24-Volt receptacle in your vehicle.



**Mount the Suction Cup Mount**

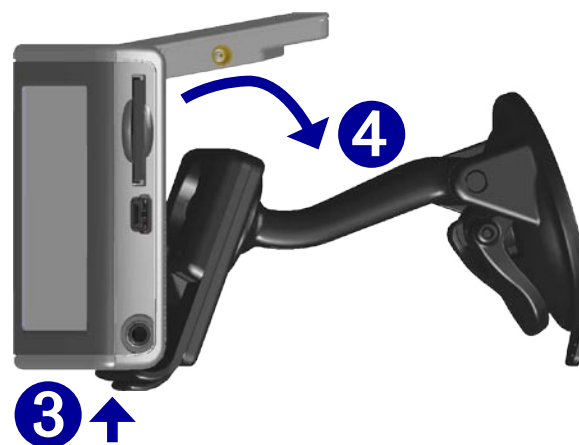

**Place the nüvi in the Mount**

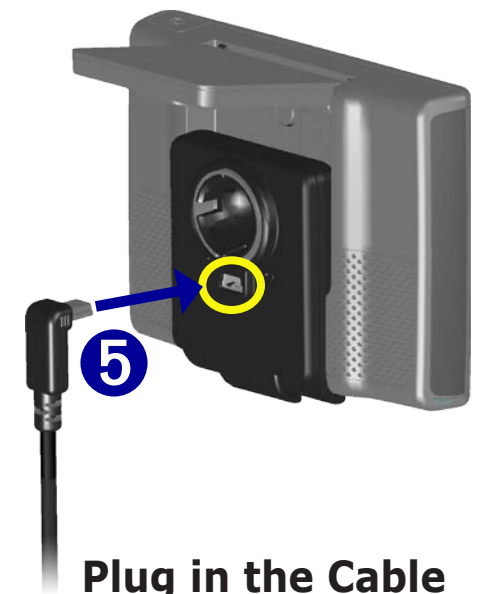

**Plug in the Cable**


## Mounting the nüvi on Your Dashboard

Use the enclosed mounting disk to mount your unit to the dashboard. California drivers, use the enclosed disk to comply with California regulations: see the *nüvi Product Information Sheet* that came in the box for more information.

**Important:** The **permanent** mounting adhesive is extremely difficult to remove after it is installed.


### To install the mounting disk:

1. Clean and dry the dashboard where you will place the disk.
2. Remove the backing from the permanent mounting adhesive on the bottom of the disk and place the disk on the dashboard.
3. Place the suction cup mount on top of the disk.
4. Flip the suction lever down to secure the suction cup mount to the disk.

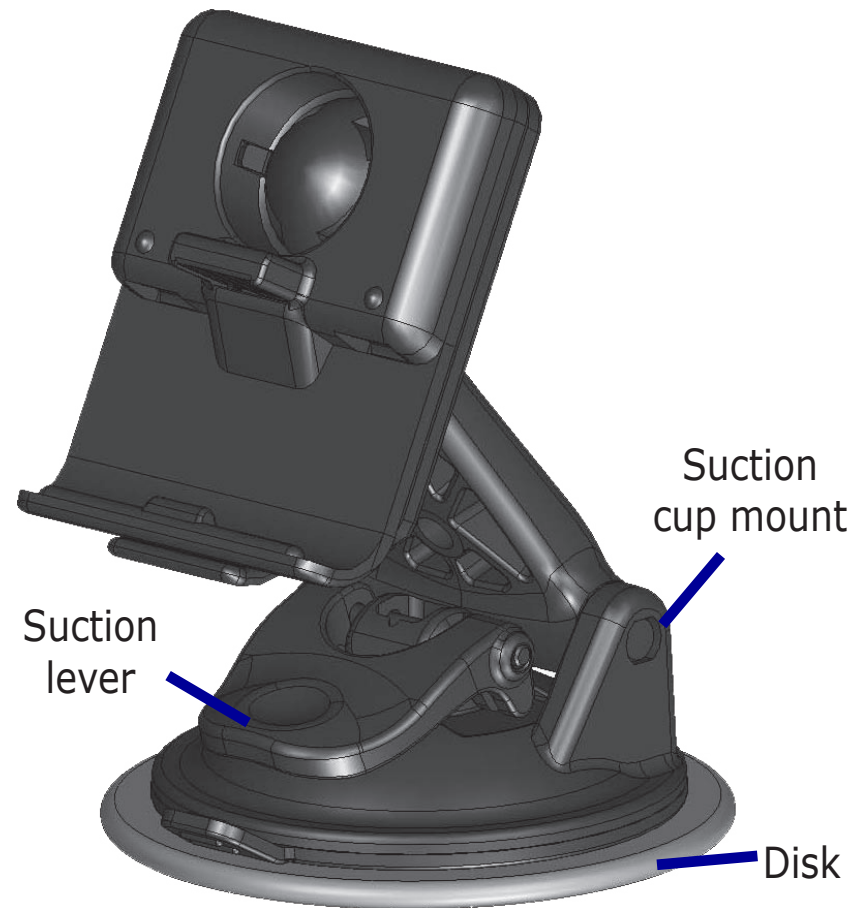

## **Removing the Unit and the Mount**


1. To remove the unit from the mount, press the tab on the bottom of the cradle up.
2. Lift the unit off of the mount.
3. To remove the suction cup from the windshield, flip the lever toward you.
4. Pull the tab on the suction cup toward you.

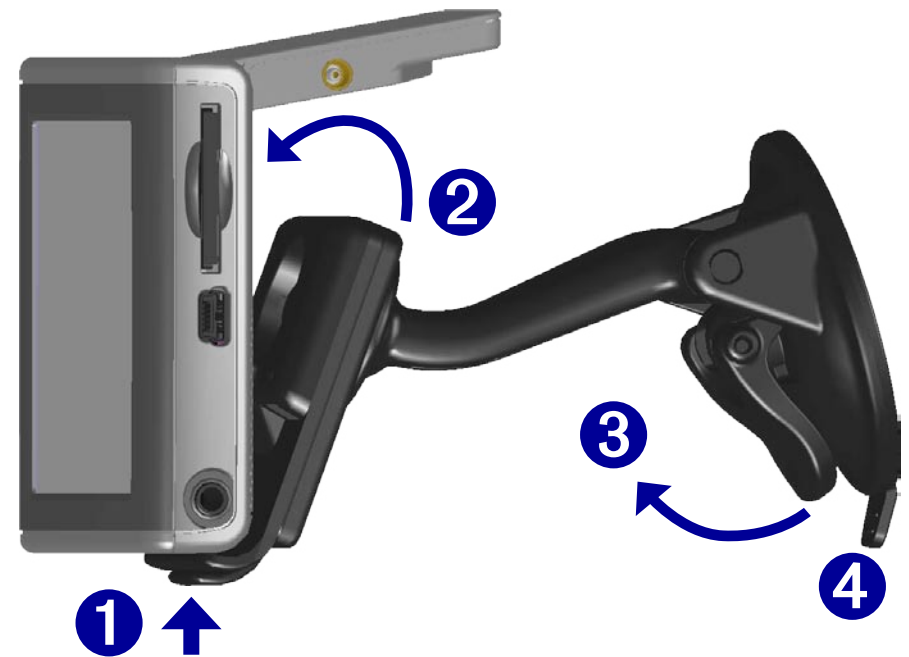

## **Removing the Cradle from the Mount**

To remove the cradle from the mount arm, turn the cradle to one side. The cradle will snap off the ball socket.

To replace the cradle, snap the cradle on the ball socket.

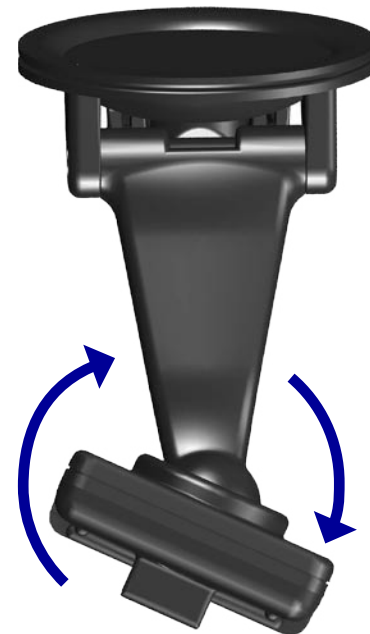


## Resetting Your nüvi

If your unit locks up (freezes up), press the **Power** button to turn off the unit, then press again to turn the unit back on. If this does not help, reset your nüvi.

### To reset the nüvi:

1. Raise the antenna.
2. Press the **Reset** button.

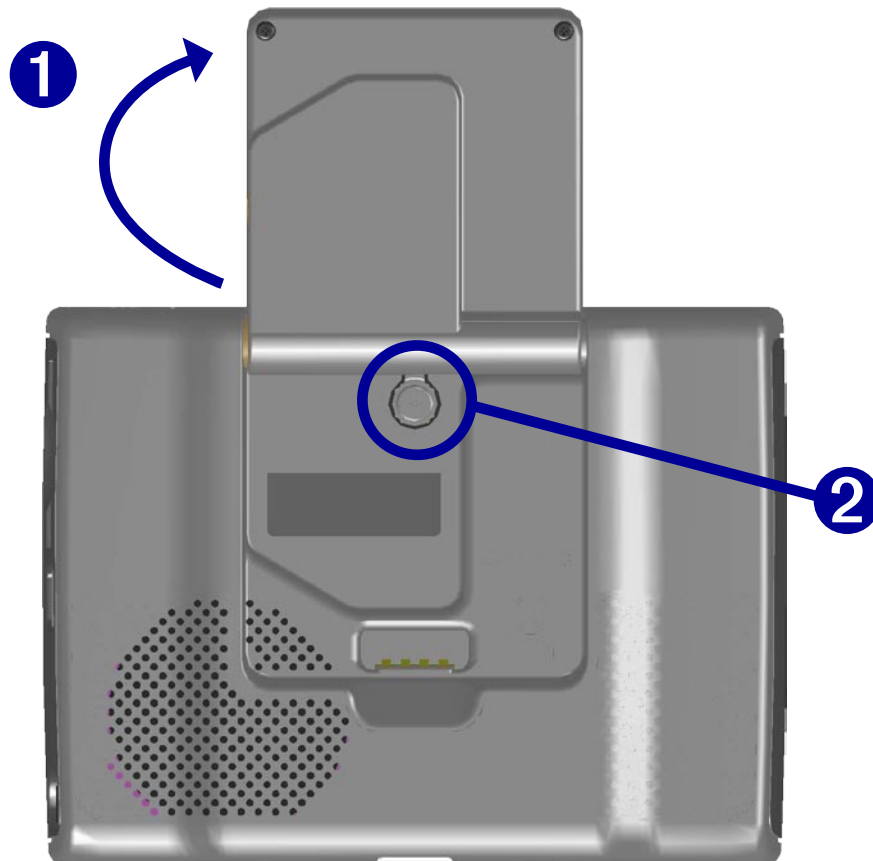

## Clearing User Data

Hold your finger on the upper right corner of the nüvi's screen while turning on the nüvi. Keep your finger pressed until the pop-up window appears. Touch **Yes** to clear all user data.

All original settings are restored. Your Recent Selections and audible bookmarks are also deleted.

## Custom POIs (Points of Interest)

Your nüvi accepts custom points of interest (POI) databases, available from various companies on the Internet. Some custom POI databases contain alert information for points such as safety cameras and school zones. Your nüvi can notify you with a proximity alarm when you approach one of these points.


After downloading your POI database, use the Garmin POI Loader to install the POIs into your unit. The POI Loader is available at <http://www.garmin.com/products/nuvi>. Select **Updates and Downloads**.


Using the POI Loader program, you can store the Custom POIs on your “nüvi” drive or your SD card. You can also customize the proximity alert settings for each POI using the POI Loader. Refer to the POI Loader Help File for more information; press F1 to open the Help File.

To view your Custom POIs, touch **My Locations** > **Custom POIs**.

To delete the Custom POIs from your nüvi, touch **Where To?** from the Menu page. Touch **My Locations** > **Delete All**. Touch **Yes** to delete all of your Favorites and your Custom POIs.

### Adjusting the Proximity Alarms

To turn on or off the proximity alarms, from the Menu page, touch  > **System** > **Proximity Alarms**.

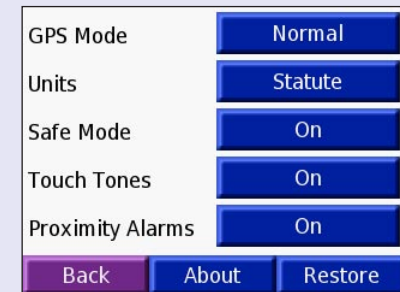

When the Proximity Alarms are on, your nüvi chimes when you approach a Custom POI.



**CAUTION:** *Garmin is not responsible for the consequences of using a custom POI database or the accuracy of the safety camera or other custom POI database.*



## **Caring for Your nüvi**

Your nüvi contains sensitive electronic components that can be permanently damaged if exposed to excessive shock or vibration. To minimize the risk of damage to your nüvi, avoid dropping your unit and operating it in high shock/vibration environments.

### ***Cleaning the Unit***

The nüvi is constructed of high quality materials and does not require user maintenance other than cleaning. Clean the unit's outer casing (not the touch screen) using a cloth dampened with a mild detergent solution and then wipe dry. Avoid chemical cleaners and solvents that can damage plastic components.

### ***Cleaning the Touch Screen***

Clean the touch screen with a soft, clean, lint-free cloth. Use water, isopropyl alcohol, or eyeglass cleaner, if needed. Apply the liquid to the cloth and then gently wipe the touch screen.

### ***Protecting Your nüvi***

Follow the cautions below to protect your nüvi from damage:

- Do not store the nüvi where prolonged exposure to extreme temperatures can occur (such as in the trunk of a car), as permanent damage may result.
- Do not expose the nüvi to water. Contact with water can cause this unit to malfunction.
- Do not leave your nüvi in plain sight when you leave your vehicle. Take your unit with you or remove it from view to avoid theft.
- Though a PDA stylus can also be used to operate the touch screen, never attempt this while operating a vehicle. Never use a hard or sharp object to operate the touch screen or damage may result.

## ***Using the nüvi Indoors***

Close the antenna to turn off GPS and use your nüvi indoors. Use this setting when you are practicing using the unit or using the Travel Kit features, such as using the MP3 player.

## ***Using a Remote Antenna***

You can use an optional external remote antenna (Garmin GA 27C). This is very helpful when operating the unit in a vehicle with a coated windshield or an in-screen (in the window) heating system, which can block GPS signals. Connect the antenna to the connector located on the back of the nüvi. To purchase, go to the Garmin Web site at <http://www.garmin.com/products/nuvi> and select the **Accessories** link.

## ***Changing the Fuse***

An AGC/3AG 2 Amp, high-breaking capacity, 1500 A-rated fuse is located at the tip of the vehicle adapter. Periodically, you may need to change the fuse. Unscrew the black, round end piece and replace the fuse.



## ***Charging the nüvi***

You can charge the nüvi using the USB cable (see [page 17](#)) or the 12/24-Volt car adapter connected to the suction mount.

## ***Updating the nüvi Software***

Garmin periodically updates its software and map data. If you register your unit, you will receive notification of software and map updates. To see if an update to the nüvi's system software is available, go to <http://www.garmin.com/products/nuvi> and select **Software Updates**. To see if an update for your map software is available, go to <http://www.garmin.com/unlock/update.jsp>.

## Purchasing Additional MapSource Maps

You can purchase additional MapSource map data from Garmin and load the maps on your nüvi's internal memory or on an optional SD card. Follow the instructions that came with the new map data to properly install the maps to your computer and nüvi. In order to enable additional maps, you need your unit ID (see [page 38](#)) and serial number (see [page i](#)). To load maps to your nüvi memory or SD card, select the name for your “nüvi” drive or SD card drive. Refer to the MapSource help file for more information about using MapSource and loading maps on your Garmin GPS.

## Loading MapSource Waypoints on Your nüvi

Using MapSource, you can save locations (also called waypoints) and transfer them to your nüvi. For more information about creating waypoints in MapSource, see the help file (press F1 to open the help file).

After you have created the waypoints, select **File > Save**. Select **GPS eXchange Format (\*.gpx)** for the **Save as Type**. Click the **Save** button.


With your nüvi connected to your computer, copy the \*.gpx file into in the **Garmin\Waypoints** folder in the “nüvi” drive. The waypoints you created in MapSource are now in **My Locations > Favorites**.

## Viewing Your Saved Locations in MapSource

You can also view the locations you have saved in your nüvi using the MapSource program.

In MapSource, select **File > Open**. Select **GPS eXchange Format (\*.gpx)** for **Files of Type**. Browse to find the **Garmin\Waypoints** folder on your “nüvi” drive. Select **Waypoints.gpx** and click **Open**.

# USB Interface Troubleshooting

Problem/Question	Solution/Answer
How do I know my nüvi is in USB Mass Storage Mode?	When your nüvi is in USB Mass Storage Mode, a picture of a nüvi connected to a computer is shown. Also, you should see a new Removable Disk Drive listed in My Computer.
My computer never senses that the nüvi is connected.	<ol style="list-style-type: none"> <li>1. Unplug the USB cable from your computer.</li> <li>2. Turn the nüvi off and then back on again.</li> <li>3. Plug the USB cable into your computer. The nüvi automatically turns on and goes into USB Mass Storage Mode.</li> </ol>
I cannot find any drives named "nüvi" in my list of drives.	Try the solution listed above.
	If you have several network drives mapped on your computer, Windows may have trouble assigning drive letters to your nüvi drives. Follow the steps on the <a href="#">following page</a> to assign your drive letters.
I keep getting a message saying "Unsafe Removal of Device" when I unplug the USB cable.	When you are ready to disconnect your nüvi from your computer, double-click the <b>Unplug or Eject</b>  icon in your system tray. Select "USB Mass Storage Device" and click <b>Stop</b> . Select the nüvi drives and click <b>OK</b> . You can disconnect your nüvi from your computer now.
How can I rename my nüvi drives?	<ol style="list-style-type: none"> <li>1. Open My Computer.</li> <li>2. Select the drive you want to rename.</li> <li>3. Right-click your mouse and select <b>Rename</b>.</li> <li>4. Type the new name and press the <b>Return</b> key.</li> </ol>

<p>How do I map my nüvi drives in Windows?</p>	<ol style="list-style-type: none"> <li>1. Turn off your nüvi.</li> <li>2. Plug in the USB cable to the nüvi and your computer. Your nüvi will automatically turn on.</li> <li>3. Click <b>Start &gt; Settings &gt; Control Panel &gt; Administrative Tools &gt; Computer Management &gt; Storage &gt; Disk Management</b>.</li> <li>4. Click a nüvi removable disk drive (either the internal memory or your SD Card drive). Right-click your mouse and select <b>Change Drive Letter and Path...</b></li> <li>5. Select <b>Edit...</b>, select a drive letter from the drop-down list, and click <b>OK</b>.</li> </ol>
--	---

## nüvi Troubleshooting

<b>Problem/Question</b>	<b>Solution/Answer</b>
<p>My battery gauge does not seem accurate.</p>	<p>Allow the unit to fully discharge and then fully charge it (without interrupting the charge cycle). See <a href="#">page 57</a>.</p>
<p>The touch screen is not responding to my taps properly.</p>	<p>Calibrate the screen. From the Menu page, touch <b>Settings &gt; Display</b>. Touch the <b>Recalibrate</b> button and follow the on-screen instructions.</p>

## Battery Information






Your unit contains an internal (non-removable) lithium-ion battery. Contact your local waste disposal department for information on properly disposing of the unit.

### Battery Tips

- Your nüvi's battery should last 4 to 8 hours depending on usage. The battery gauge indicates the status of the battery.
- To extend the battery life, reduce the time the backlight stays on. From the Menu page, select **Settings** > **Display** > **Backlight Timeout** to change the setting. See [page 40](#).
- To extend the battery life, close the antenna when you do not need to receive GPS signals.
- To increase the accuracy of the battery gauge, fully discharge the battery and then fully charge it. You should not need to do this very often. See "Battery Gauge" in the side bar for more information.
- To maximize the life of the lithium-ion battery, do not leave your nüvi direct sunlight and avoid prolonged exposure to excessive heat.

## Battery Gauge

The battery icon in the upper right corner of the Menu page indicates the status of the internal battery.

 -  Battery charging or connected to external power
-  Full battery
-  Battery 3/4 full
-  Battery 1/2 full
-  Battery 1/4 full


Periodically, you might notice that the battery gauge is not completely accurate. To increase the accuracy of the battery gauge, fully discharge the battery and then fully charge it without interrupting the charging. For best results, do not unplug the nüvi until it is totally charged.

## About Satellite Signals

Your nüvi must acquire satellite signals to operate. If you are indoors, near tall buildings or trees, or in a parking garage, the nüvi cannot acquire satellites. Go outside to an area free from tall obstructions to use your nüvi, or close the antenna to turn off GPS and use it indoors.

When the nüvi has acquired satellite signals, the signal strength bars on the Menu page are green . When it loses satellite signals, the bars turn red or disappear .

Touch the signals strength bars in the upper left corner of the Menu page to view GPS information. Touch anywhere on the screen to return to the Menu page.

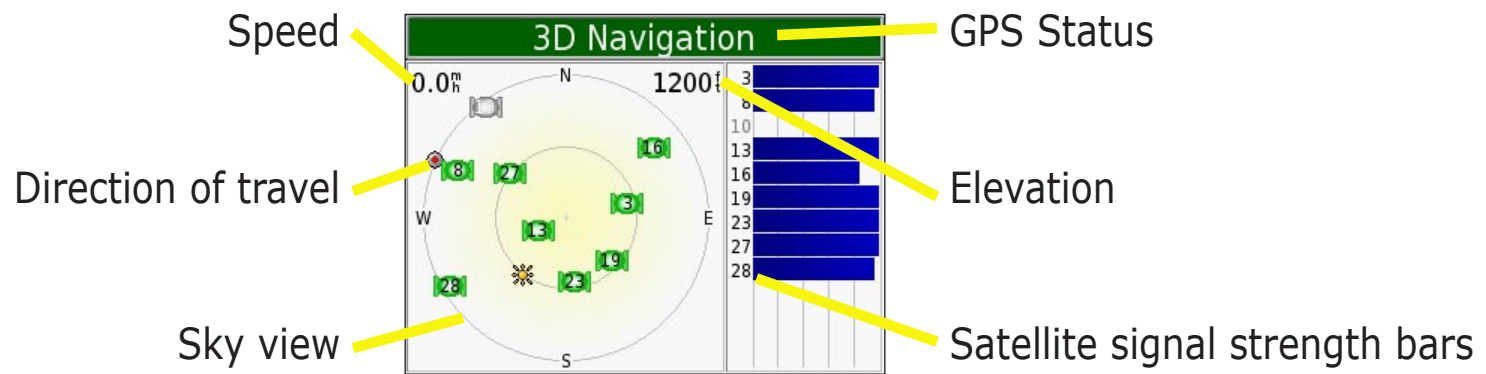

The sky view shows the satellites you are receiving. The satellite signal strength bars indicate the strength of each satellite you are receiving.

For more information about GPS, visit the Garmin Web site at <http://www.garmin.com/aboutGPS>.

# Technical Specifications

**Size:** 3.87" W x 2.91" H x 0.87" D (98.3 x 73.9 x 22.1 cm)

**Weight:** 5.1 oz. (144.6 g)

**Display:** 3.5" (8.89 cm), 2.8" W x 2.1" H (7.2 cm x 5.4 cm); 320 x 240 pixels; QVGA TFT landscape display with white backlight and anti-glare touch screen

**Case:** Not waterproof or IPXO

**Temperature range:** 32°F to 140°F (0°C to 60°C)

**Data storage:** Internal memory and optional Removable SD card. Data stored indefinitely

**PC interface:** USB mass storage, plug-and-play

**Power Input:** 12/24 VDC

**Usage:** 15 W max. @ 13.8 VDC

**Battery life:** 4 to 8 hours depending on usage

**Headphone jack:** Standard 3.5 mm

For a complete list of specifications, visit the Garmin Web site at <http://www.garmin.com/products/nuvi/spec.html>.

## ***GPS Performance Specifications***

**Receiver:** WAAS enabled

**Acquisition times\*:**

Warm: <1 sec

Cold: <38 sec

Factory Reset: <45 sec

\*On average for a stationary receiver with an open sky view

**Update rate:** 1/sec, continuous

**GPS Accuracy:**

Position: <10 meters, typical

Velocity: 0.5 meter/sec RMS

**GPS (WAAS) Accuracy:**

Position: <5 meters, typical

Velocity: 0.5 meter/sec RMS



# Software License Agreement

BY USING THE nüvi, YOU AGREE TO BE BOUND BY THE TERMS AND CONDITIONS OF THE FOLLOWING SOFTWARE LICENSE AGREEMENT. PLEASE READ THIS AGREEMENT CAREFULLY.

Garmin grants you a limited license to use the software embedded in this device (the “Software”) in binary executable form in the normal operation of the product. Title, ownership rights, and intellectual property rights in and to the Software remain in Garmin.

You acknowledge that the Software is the property of Garmin and is protected under the United States of America copyright laws and international copyright treaties. You further acknowledge that the structure, organization, and code of the Software are valuable trade secrets of Garmin and that the Software in source code form remains a valuable trade secret of Garmin. You agree not to decompile, disassemble, modify, reverse assemble, reverse engineer, or reduce to human readable form the Software or any part thereof or create any derivative works based on the Software. You agree not to export or re-export the Software to any country in violation of the export control laws of the United States of America.



**NOTE:** *The Garmin nüvi has no user-serviceable parts. Should you ever encounter a problem with your unit, take it to an authorized Garmin dealer for repairs.*



**NOTE:** *The nüvi is fastened shut with screws. Any attempt to open the case to change or modify the unit in any way voids your warranty and may result in permanent damage to the equipment.*

# INDEX

## Symbols

- 2 Dimensional 37
- 3 Dimensional 37

## A

- About Button 38
- Adding a Stop to Your Route 8
- Attention Tone 41
- Audible Books 26
  - bookmarks 26
  - playing 26
  - transferring 28
- Audio version 38
- Avoiding road types 41
- Avoiding Traffic 41, 44

## B

- Backlight Timeout 40
- Battery 57
- Bilingual Dictionaries 23
- Bookmarks 26
- Brightness 3
- Browse the Map 6

## C

- Calculator 35
- Caring for your nüvi 52
- Changing the settings 36
- Clearing User Data 50

- Color Mode 40
- Computer connection 17
- Connecting the USB Cable 17
- Contact Garmin i
- Converting Currency 32
  - updating conversion rates 33
- Converting Measurements 34
- Currency 32
- Current Location, saving 9
- Current Route Page 15
- Customizing your nüvi 36
  - color mode 40
  - language 42
  - map 37
  - navigation 41
  - system setup 38
  - time 39
- Custom POIs (Points of Interest) 51

## D

- Daylight Saving 39
- Delete
  - character 4
  - custom POIs 51
  - files from the nüvi 20
  - recent finds list 12
  - saved places 10
  - user data 50
- Detour, adding 16
- Disconnecting your nüvi 18, 55

- Disk Drives 18, 19
- Driving directions 15

## E

- Editing saved places (My Locations) 10
- EGNOS 38
- Eject USB 18
- Expanding your search 7

## F

- Favorites 9, 10
- Files
  - deleting 20
  - managing 17
  - supported types 20
  - transferring 18
- Finding places
  - address 5
  - by name 4
  - intersection 5
  - item on the map 6
  - recent selection 12
  - saved item 9
- Find a place near another place 7
- FM TMC Traffic Receiver 43–46
- Following your route 2
- Fuse, changing 53

## G

- Go! 4
- Go Home 11
- GPS 1, 3, 57
  - information 58
- Green bars 1

## H

- Help 3
- Home Location 11

## K

- Keyboard 4

## L

- Language Guide 21, 22, 23
- Language settings 42
- Legend, Bilingual Dictionary 23
- License Agreement 60
- Listening to music 25
- Locking the Screen 3

## M

- M4A/M4P 25
- Map 6, 13
  - browse 6
  - customize 37
  - zoom 6, 13
- MapSource 54
- Map Info Button 37

Map software  
 update 53  
 version 37  
 Map symbol 10  
 Map view 37  
 Measurements 34  
 Metric units 38  
 Mounting your nüvi 48  
 MP3 25  
 Mute 3  
 My Locations 9, 10, 11, 12  
 Favorites 9  
 Go Home 11  
 Recent Selections 12

**N**  
 “nüvi” drive 18, 19  
 “nüvi sd” 18, 19  
 Narrow your results list  
 spell the name 4  
 Navigation settings 41  
 Near Button 7  
 Next Turn Page 15  
 North Up 37

**O**  
 On-screen keyboard 4

**P**  
 PictureIt 40  
 Pictures 30  
 Playing Music 25

POI 51  
 Position icon 13  
 Present Location, saving 9  
 Proximity Alarms 38, 51

**Q**  
 Quick Settings 3

**R**  
 Recalibrate touch screen 40  
 Recently-Found places  
 delete 12  
 find 12  
 Removable Disk Drives 18, 19  
 Resetting your nüvi 50  
 Reset Max Speed 14  
 Reset Trip 14  
 Restoring Settings 36  
 Routing preferences 41

**S**  
 Safety camera database 51  
 Safe Mode 38  
 Satellite Signals 1, 58  
 Save  
 current location 9  
 places you find 4, 9  
 Saved Places  
 delete 10  
 edit 10  
 School zone database 51  
 Screen shots 40

SD Card 17, 59  
 disk drive 18, 19  
 Serial Number i  
 Set your Location 6  
 Shortcuts 3, 25, 26  
 Show Map 4, 6  
 Software License Agreement 60  
 Software version 38  
 Spell the name of a place 4  
 Stop navigation 16  
 Stop USB 18  
 Storing your nüvi 52  
 Supported File Types 20  
 System Setup 38

**T**  
 Taking screen shots 40  
 Text Language 42  
 Time 39  
 Touch screen  
 cleaning 52  
 recalibrating 40  
 Touch tones 38  
 Track Up 37  
 Traffic 43  
 avoid 41, 44  
 events 44  
 subscription 46  
 symbols 45  
 Transferring Files 18  
 Translating Words and

Phrases 22  
 Travel Kit 21–35  
 Trip Information Page 14  
 Troubleshooting 56  
 USB 55  
 Turn-by-turn directions 15  
 Turn off the beeping 38

**U**  
 Units 38  
 Unit ID 38  
 USB 18  
 troubleshooting 55  
 User Data, deleting 50  
 Using the nüvi Indoors 53

**V**  
 Vehicle Type 41  
 Viewing Places on the Map 6  
 Viewing the Map 13  
 Voice Language 42  
 Voice Prompts 41  
 Volume 3

**W**  
 WAAS 38–42  
 Words and phrases 22, 23  
 World Clock 31

**Z**  
 Zoom 6, 13

**For the latest free software updates (excluding map data) throughout the life of your Garmin products, visit the Garmin Web site at [www.garmin.com](http://www.garmin.com).**



© Copyright 2005 Garmin Ltd. or its subsidiaries

Garmin International, Inc.

1200 East 151<sup>st</sup> Street, Olathe, Kansas 66062, U.S.A.

Garmin (Europe) Ltd.

Unit 5, The Quadrangle, Abbey Park Industrial Estate, Romsey, SO51 9DL, U.K.

Garmin Corporation

No. 68, Jangshu 2<sup>nd</sup> Road, Shijr, Taipei County, Taiwan

[www.garmin.com](http://www.garmin.com)

Part Number 190-00627-00 Rev. A