

## 7625573 FLARE NUT TXV REPLACEMENT (Z200)

## **Installation Instructions**

- 1. Disconnect power from reach-in.
- 2. Recover refrigerant.
- 3. Remove armaflex insulation from existing expansion valve.
- 4. To remove expansion valve, loosen flare nuts from expansion valve.
- 5. Unsweat flare nuts' extensions at solder joints.
- 6. NOTE: WRAP NEW TXV WITH WET CLOTH TO PREVENT OVERHEATING VALVE. Slip copper extensions into TXV and swaged ends onto existing lines and sweat into place.
- 7. When TXV is cool, slip rubber boot over TXV and glue seam together.
- 8. Evacuate and weigh in proper charge.